



JOHN DEERE
Parts Catalog

**NO. 45 REPAIR CATALOG FOR TRACTORS AND
ENGINES**

CAT45R

INDEX

For Models A, AN, AW, AR, AO, and AI Tractors

SUBJECT	Page	SUBJECT	Page
Air Cleaner.....	28	Hardware List.....	33
Brakes, Differential.....	19	Hood.....	11
Brakes, Emergency.....	18	Illustrations of Repair Parts.....	42
Brakes, Rear Wheel.....	19	Lighting Equipment.....	31-32
Breather, Crank Case.....	8	Lubricating System and Oil Pump... 9	
Cam Followers.....	6	Magneto.....	24
Cam Shaft.....	6	Magneto Parts.....	25
Carburetor.....	27	Manifold.....	6
Casting Numbers.....	40	Muffler and Exhaust Pipe.....	7
Clutch Fork Bearing and Pulley		Oil Filter and Indicator.....	9
Brake.....	13	Oil Pipes and Fittings.....	10
Clutch Parts.....	13	Overdrive Gear and Shaft and First	
Connecting Rods.....	5	Reduction Gear.....	14
Controls.....	8	Overdrive Idler Gear.....	15
Cooling System.....	11	Pedestal.....	21
Countershaft.....	15	Pistons, Connecting Rods and Crank-	
Crank Case Ventilator.....	8	shaft.....	5
Crankshaft.....	5	Platform.....	23
Cylinder.....	6	Power Lift Parts.....	29
Cylinder Head, Manifold and Valves.. 6		Power Shaft Parts.....	28
Differential.....	15	Pulley.....	12
Drawbar.....	23	Radiator Guard and Curtain.....	11
Engine.....	5	Seat.....	23
Fan.....	12	Sliding Gear Shaft.....	14
Fenders.....	24	Steering Parts.....	22
Final Drive.....	16	Tappets.....	6
Front Axle and Front End Support... 20		Tool Box and Tools.....	28
Front Wheels and Front Wheel		Transmission Case.....	5
Equipment.....	20	Valves.....	6
Fuel System.....	10	Wheels and Equipment, Rear.....	16-17
Gears, Overdrive and First Reduction 14		Wheel Scrapers.....	18
Gear Shift.....	13		
Gear Shift, Overdrive.....	14		
Generator.....	32		
Governor.....	7		

Instructions for Ordering Parts

First. Always give serial number of tractor, engine or power lift when ordering repairs.

Second. Give number and name of each part ordered. If in doubt as to correct name and number, send dimensioned sketch or return broken parts, charges prepaid.

Third. Orders for parts should be written separately from correspondence.

Fourth. State whether shipments are to be forwarded by Freight, Express, or Parcel Post. Telegraph orders will be shipped Express or Parcel Post unless otherwise instructed.

NUMERICAL TELEGRAPHIC CODE

The following code may be used to transmit numerals in telegrams.

Each numeral is designated by a letter as follows:


1	2	3	4	5	6	7	8	9	0
Q	U	I	C	K	T	R	A	D	E

Use the letter X to separate prefix or suffix letters from the code letters.


Example: Express 10 AD-315, 20 X-429

Telegram will read: Express ten ADXIQK twenty XXCUD


The telegraph companies count a group of five letters or less as one word, and six to ten letters as two words. When a straight message can be transmitted in ten words or less, do not use code. It should rarely be necessary to use code words in a day letter or night letter, although this is permissible.

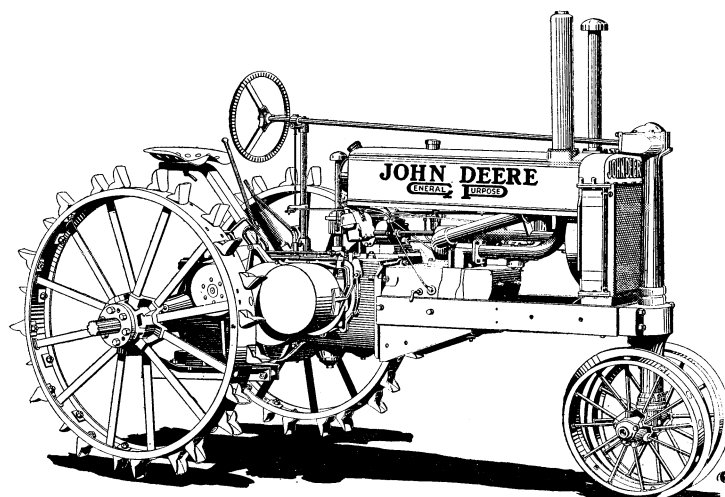


Model "A"

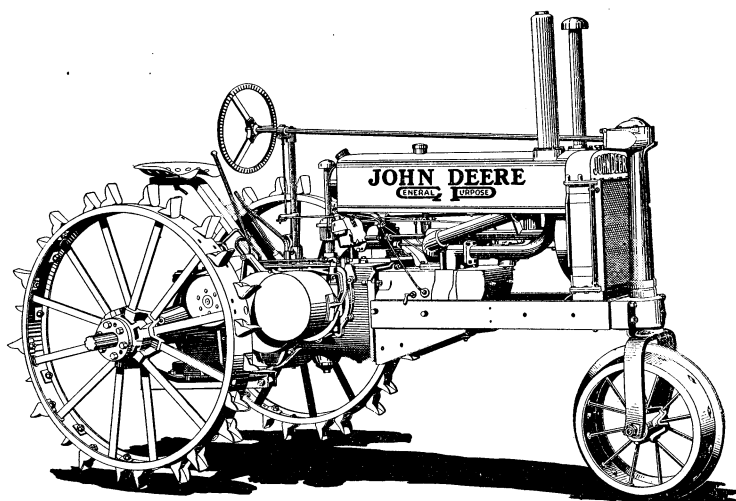


Model "AN"

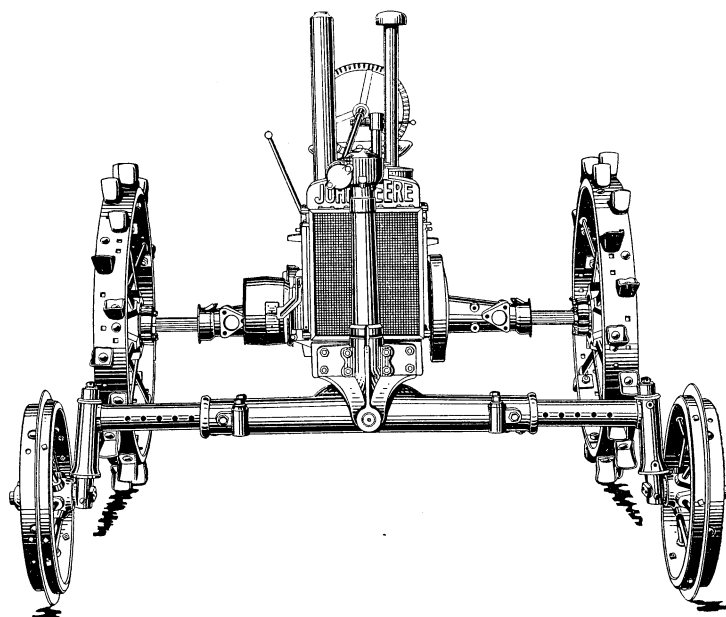


Model "AW"

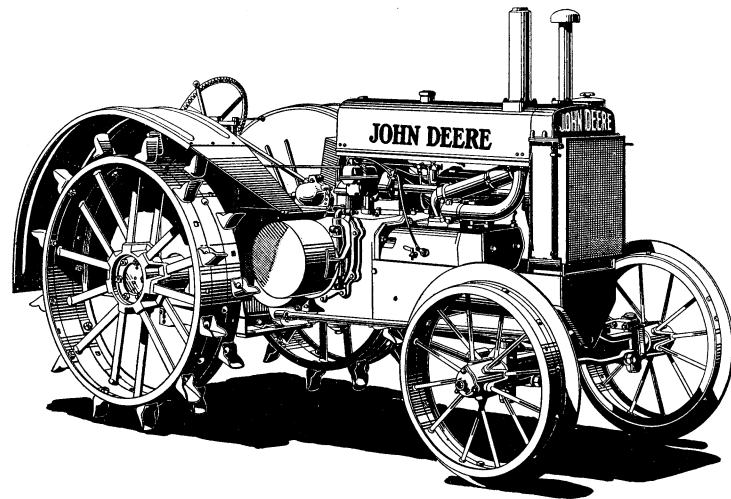

Model "AR"

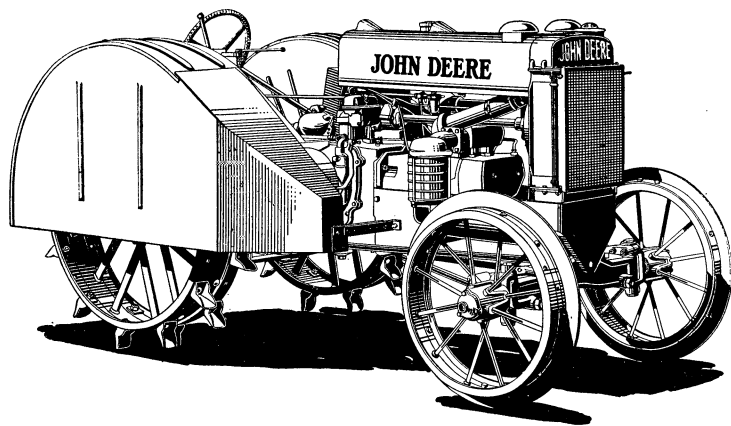

Model "AO"

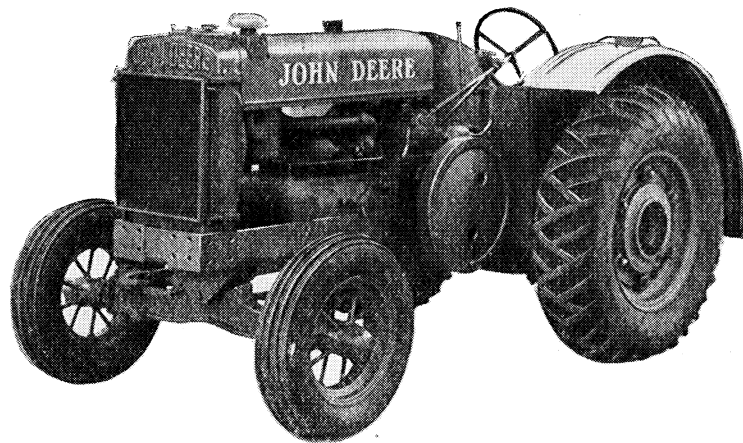

Model "AI"

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
TRANSMISSION CASE				
A284	Stud, L. H., Main Bearing to Case.....	410000-	250000-	1
A399	Gasket, Transmission Case Cover.....	410000-	250000-	1
AA286	Cover, Transmission A72R with A560R Gear Shift Interlock.....	410000-413398		1
AA320	Case, A560R, Transmission, Main.....	410000-424024		
AA508	Cover, Transmission Case with Gear Shift Interlock...	413399-		1
AA618	Case, A920R, Transmission, Main.....		250000-251485	
AA741	Cover, Transmission Case, No. A1123R, with Gear Shift Interlock (Underdrive) AO and AR only.....		251486-	1
AA823	Cover, Transmission, with Gear Shift Interlock.....		250000-	1
AA843	Case, A1141R, Transmission, Main.....		251486-	
AA1017	Case, A1140R, Transmission, Main.....	424025-		
C719	Stud Cylinder to Case.....	410000-	250000-	1
D463	Welsh Plug, Transmission Case Cover.....		250000-	1
D625	Pipe Plug, Transmission Oil Filler.....	410000-413278		1
E1976	Pipe Plug, Transmission Case Oil Level.....	410000-413278		1
E2142	Pipe Plug, Transmission Case Drain.....	410000-	250000-	1
E2142	Pipe Plug, Crank Case Drain.....	410000-	250000-	1
JD7759	Alemite Zerk Fitting, No. 1610 Steering Shaft Lower Bushing.....		250000-	25
K3083	Stud, Gear Cover to Case.....	410000-	250000-	1
294R	Stud, Steering Housing to Case, 1/2"x1-11/16"		250000-	1
1452R	Pipe Plug, Power Shaft Shifter Hole.....	410000-	250000-	1
ENGINE				
A28R	Cover, L. H., Main Bearing.....	410000-	250000-	1
A191	Bolt, R. H., Main Bearing.....	410000-	250000-	1
A256	Bolt, L. H., Main Bearing.....	410000-	250000-	1
A302	Shim, Main Bearing, Laminated.....	410000-	250000-	1
A401	Gasket, Crank Case Cover.....	410000-		1
A423	Gasket, L. H. Main Bearing Housing.....	410000-424024	250000-251485	1
A424	Gasket, L. H. Main Bearing Cove r.....	410000-	250000-	1
A524R	Cover, Crank Case.....	410000-		1
A902	Cover, Crank Case.....		250000-	1
A903	Gasket, Crank Case Cover.....		250000-	1
A1147	Gasket, L. H., Main Bearing Housing to Case.....	424025-	251486-	1
AA239	Main Bearing Housing, A22R, with Cap, R. H.....	410000-	250000-	1
AA242	Main Bearing Housing, A23R, with Cap, L. H.....	410000-424024	250000-251485	1
AA244	Spacer, Flywheel with D2124 Cork Washer.....	410000-	250000-	1
AA246	Flywheel, A29R, with Bolts and Driving Pin.....	410000-	250000-	1
AA397	Bushing, Main Bearing (2 Halves).....	410000-	250000-	1
AA804	Main Bearing Housing, A1146R, with Cap, L. H.....	424025-	251486-	1
D1080	Flywheel Locating Screw.....	410000-	250000-	1
D2009	Pin, Flywheel Spacer Driving.....	410000-	250000-	1
D2124	Cork Washer, Flywheel Spacer.....	410000-	250000-	1
E2142	Pipe Plug, Left Main Bearing.....	410000-	250000-	1
E2142	Pipe Plug, Crank Case Oil Drain.....	410000-	250000-	1
PISTONS, CONNECTING RODS, CRANKSHAFT				
A103	Gear, Crankshaft.....	410000-	250000-	1
A155	Pin, Piston.....	410000-	250000-	1
A188	Piston Ring, 5 used per Piston.....	410000-	250000-	1
A303	Shim, Connecting Rod, Laminated.....	410000-	250000-	1
A319	Lock Screw, Piston Pin (Set Screw).....	410000-	250000-	1
A727	Bushing, Piston Pin.....	410000-	250000-	1
A1110	Piston Ring, 5 used per Piston (.030" Oversize).....	410000-	250000-	1
AA237	Crankshaft, A102, with Gear and Inner Race.....	410000-	250000-	1
AA382	Bolt, with Nut and Cotter, Connecting Rod.....	410000-	250000-	1
AA463	Connecting Rod, A107, Complete.....	410000-	250000-	1
"Exchange" Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange" Rods that are not accompanied with old Rod will be filled with new rods and billed at full price.				
AA737	Piston with Rings (.030" Oversize).....	410000-	250000-	1
AA840	Piston with Ring (Standard).....	410000-	250000-	1
D342	Woodruff Key, in Crankshaft Gear.....	410000-	250000-	1

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
CYLINDER				
A426	Gasket, Cylinder to Case	410000-	250000-	2
AA436	Cylinder, A732R, including Upper Water Pipe and Fan Support Assembly	410000-410189		
AA437	Cylinder, A732R, with Studs	410190-	250000-	2
AA534	Cylinder and Upper Water Pipe Assembly, with Pistons and Gaskets	410000-410189		
AA535	Cylinder Block with Pistons and Gaskets	410190-	250000-	
C719	Stud, Cylinder to Case	410000-	250000-	
C1479	Stud, Front End Support to Cylinder	410000-		2
C1823	Stud, Cylinder Head	410000-	250000-	2
D1865	Cock, Compression Relief	410000-	250000-	2
CYLINDER HEAD, MANIFOLD, VALVES				
A35R	Guide, Valve	410000-	250000-	2
A36R	Manifold	410000-		2
A125	Stud, Manifold, Medium, 7/16" x 5-5/8"	410000-	250000-	2
A126	Stud, Manifold, Short, 7/16" x 4-3/8"	410000-		2
A130	Lock Washer (Half) Valve Stem	410000-	250000-	2
A245	Cap, Valve Spring	410000-	250000-	2
A356	Spring, Valve	410000-	250000-	2
A384	Pipe, Cylinder Head Water Inlet	410000-		2
A404	Gasket, Cylinder Head	410000-	250000-	2
A405	Gasket, Manifold	410000-	250000-	2
A454	Valve, Inlet	410000-	250000-	2
A588	Valve, Exhaust	410000-	250000-	2
A617	Sleeve, Push Rod	410000-	250000-	2
A933	Pipe, Cylinder Head Water Inlet		250000-	2
A1003R	Manifold		250000-	2
A1004	Stud, Manifold, Left, 7/16" x 6-1/2"		250000-	2
AA464	Cylinder Head, A587R, with Valve Guides	410000-	250000-	2
AA465	Cylinder Head, A587R, with Valves and Springs	410000-	250000-	
B359	Stud, Manifold, Right, 7/16" x 4-3/4"		250000-	2
B504	Stud, Manifold, Long, 7/16" x 5-7/8"	410000-	250000-	2
E2142	Plug, Cylinder Head Drain	410000-	250000-	2
K2080	Lead Washer, Cylinder Head Stud (9 used)	410000-	250000-	2
321R	Gasket, Carburetor to Manifold	410000-	250000-	2
CAM SHAFT				
A104	Cam Shaft	410000-424024	250000-251485	2
A119	Stud, Cam Shaft Gear to Cam Shaft	435595-	252710-	2
A253	Plate, Cam Shaft Gear Locking	410000-	250000-	2
A355	Spring, Cam Shaft Thrust	410000-	250000-	2
A425	Gasket, Cam Shaft Bearing Housing	410000-	250000-	2
A487	Cap Screw, Cam Shaft Gear Lock Plate	410000-	250000-	2
A1142	Cam Shaft	424025-	251486-	2
AA227	Housing, A31R, with Bearing Cup, Cam Shaft, L. H.	410000-	250000-	2
AA1047	Gear, Cam Shaft with Stud and Nut	410000-	250000-	2
JD7250	Cup, Cam Shaft Bearing	410000-	250000-	2
JD7358	Cone, Cam Shaft Bearing	410000-	250000-	2
CAM FOLLOWERS				
A178	Support, Cam Follower Guide	410000-	250000-	2
A616R	Guide, Cam Follower	410000-424024	250000-251485	2
A1143R	Guide, Cam Follower	424025-	251486-	2
AA377	Cam Follower	410000-435282	250000-252684	2
AA958	Cam Follower	435283-	252685-	2
TAPPETS				
A105	Lever, Tappet	410000-	250000-	2
A129	Rod, Tappet	410000-435282	250000-252684	2
A131	Adjusting Screw, Tappet Lever	410000-435282	250000-252684	2
A139	End, Tappet Rod	410000-435282	250000-252684	2
A172	Nut, Tappet Oiler Pipe Packing	410000-	250000-	2
A173	Nut, Tappet Lever Stud	410000-	250000-	2
A176	Stud, Tappet Lever Bracket	410000-	250000-	2
A234	Spacer, Tappet Lever Shaft	410000-	250000-	2
A260	Washer, Tappet Lever Shaft	410000-	250000-	2
A274	Trough, Tappet Lever Oiler	410000-	250000-	2
A386	Pipe, Tappet Lever Oiler	410000-424024		2

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
TAPPETS—Continued				
A403	Gasket, Tappet Lever Cover.....	410000—	250000—	2
A437	Washer, Tappet Lever Bracket Stud.....	410000—	250000—	2
A439	Packing Washer, Tappet Oil Pipe (12 used).....	410000—	250000—	2
A601	Shaft, Tappet Lever.....	410000—	250000—	2
A602	Snap Ring, Tappet Lever Shaft.....	410000—	250000—	2
A772	Nut, Tappet Lever Cover (Acorn).....	410000—	250000—	2
A1010	Pipe, Tappet Lever Oiler.....	250000—251485	2
A1186	Pipe, Tappet Lever Oiler.....	424025—	2
A1193	Pipe, Tappet Lever Oiler.....	251486—	2
A1290	Rod, Tappet.....	435283—	252685—	2
A1291	Adjusting Screw, Tappet Lever.....	435283—	252685—	2
AA229	Cover, A68R, Tappet Lever with Oil Trough.....	410000—	250000—	2
D376	Spring, Tappet Lever Spacer.....	410000—	250000—	2
MUFFLER AND EXHAUST PIPE				
A464	Gasket, Exhaust Pipe.....	410000—	3
AA299	Exhaust Pipe with Flange.....	410000—	3
AA300	Muffler.....	410000—	3
AA472	Muffler, Complete (15" High).....	410000—	250000—	3
AA587	Exhaust Pipe with Flange.....	250000—	3
AA702	Elbow, Muffler Inlet with Studs.....	250000—	3
AA888	Cover, Exhaust Opening (used on AI and AO Tractors).....	250000—	3
AA1050	Muffler, Complete.....	250000—	3
C2000R	Flange Casting, Muffler.....	250000—	3
D1922	Cap, Muffler.....	250000—	3
D1923	Finned Section, Muffler.....	250000—	3
D1924R	Collar, Spacing Muffler.....	250000—	3
D1925	Stud, 1/2" x 9-1/8", Muffler.....	250000—	3
629R	Washer, Exhaust Opening Cover Screws.....	250000—	3
GOVERNOR				
A41R	Housing, Left, Governor Bearing.....	410000—	250000—	3
A42R	Arm, Governor.....	410000—415708	3
A43	Flange, Magneto Drive.....	410000—424024	250000—251485	3
A45R	Case, Governor.....	410000—424024	250000—251485	3
A73R	Gear, Governor Drive.....	410000—	250000—	3
A74R	Gear, Fan Drive, Bevel.....	410000—424024	250000—251485	3
A136	Shaft, Governor Lever.....	410000—415708	3
A184	Shaft, Governor.....	410000—424024	250000—251485	3
A235	Lever, Inside Governor.....	410000—424024	250000—251485	3
A244	Clamp, Speed Change Spring.....	410000—415708	3
A369	Snap Ring, Governor Shaft.....	410000—	250000—	3
A428	Gasket, Left Governor Bearing Housing (Thick).....	410000—	250000—	3
A429	Gasket, Governor Case.....	410000—424024	250000—251485	3
A499	Nut, Governor Shaft End (Special Grip).....	410000—424024	250000—251485	3
A584	Spring, Governor Bearing.....	410000—	250000—	3
A1035	Shaft, Governor Lever.....	415709—424024	250000—251485	3
A1036R	Arm, Governor.....	415709—424024	250000—251485	3
A1171	Gasket, L. H. Governor Bearing Housing (Thin).....	424025—	251486—	3
A1172	Shaft, Governor.....	424025—	251486—	3
A1174R	Gear, Fan Drive, Bevel.....	424025—	251486—	3
A1175	Shaft, Governor Lever.....	424025—	251486—	3
A1183	Gasket, Governor Case.....	424025—	251486—	3
A1241R	Arm, Governor.....	424025—	251486—	3
AA255	Sleeve, Governor Shaft.....	410000—424024	250000—251485	3
AA813	Case, Governor, A1170R, with Lever Shaft Bushing.....	424025—	251486—	3
AA814	Sleeve, Governor Shaft.....	424025—	251486—	3
AC667	Weight, Governor.....	410000—	250000—	3
B271	Lever, Inside Governor.....	424025—	251486—	3
B276	Snap Ring, Governor Bearing.....	424025—	251486—	3
B280	Washer, Governor Bearing Spring.....	424025—	251486—	3
B281	Flange, Magneto Drive.....	424025—	251486—	3
B432	Bushing, Governor Lever Shaft (Upper).....	424025—	251486—	3
C902	Pin, Governor Weight.....	410000—	250000—	3
C998	Bearing, Governor Thrust.....	410000—	250000—	3
D342	Woodruff Key, in Governor Drive Gear and Magneto Flange.....	410000—	250000—	3
D342	Woodruff Key, Fan Drive Bevel Gear.....	410000—	250000—	3
JD7655	Cup, Governor Shaft Bearings, L. H. and R. H.....	410000—	250000—	3

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
GOVERNOR—Continued				
JD7656	Cone, Governor Shaft Bearings, L. H. and R. H.	410000—	250000—	3
JD7657	Balls and Retainer, Governor Shaft Bearings, L. H. and R. H.	410000—	250000—	3
629R	Washer, Governor Shaft.	410000—424024	250000—251485	3
629R	Washer, Magneto to Governor Case.	410000—	250000—	3
1450R	Pipe Plug, in Governor Case Oil Hole.	410000—424024	250000—251485	3
CONTROLS				
A58R	Bracket, Speed Control Shaft.	410000—413398		4
A80R	Lever, Speed Control Hand.	410000—		4
A118	Rod, Carburetor Throttle.	410000—424024		4
A128	Shaft, Speed Control.	410000—413398		4
A181	Rod, Speed Control.	410000—415708		4
A183	Rod, Clutch Operating.	410000—		4
A241	Washer, Speed Control Shaft, Upper.	410000—	250000—	4
A244	Clamp, Speed Change Spring.	410000—415708		3
A357	Spring, Speed Change (Flat).	410000—415708		3
A586	Washer, Speed Control Shaft, Lower.	410000—	250000—	4
A908	Rod, Clutch Operating.		250000—	4
A942R	Bracket, Clutch Lever.		250000—	4
A944R	Bracket, Speed Control Shaft.		250000—	4
A945	Shaft, Speed Control.		250000—	4
A947R	Lever, Speed Control, Hand.		250000—	4
A948	Rod, Carburetor Throttle.		250000—251485	4
A949	Rod, Speed Control.		250000—251485	4
A958	End, Speed Control Rod.		250000—	4
A1034	Spring, Speed Change (Flat).	415709—424024	250000—251485	3
A1037	Rod, Speed Control.	415709—424024		4
A1184	Rod, Carburetor Throttle Control.	424025—		4
A1185	Rod, Speed Control.	424025—		4
A1188	Rod, Carburetor Throttle.		251486—	4
A1189	Rod, Speed Control.		251486—	4
A1197	Bushing, Clutch Lever Pivot.	424169—	250000—	4
AA794	Lever, Clutch Operating with Pivot Bushing.	410000—	250000—	4
B273	Spring, Speed Change (Flat).	424025—	251486—	3
B274	Clamp, Speed Change Spring.	415709—	250000—	3
B390R	Bracket, Speed Control Shaft.	413399—		4
B391	Shaft, Speed Control.	413399—		4
C1438	Spring, Speed Control Shaft.	410000—	250000—	4
D157	End, Throttle Rod.	410000—	250000—	4
D157	End, Speed Control Rod.	410000—		4
D393R	Yoke, Clutch Operating Rod.	410000—	250000—	4
D1994	Pin, Clutch Operating Rod Yoke.	410000—	250000—	4
D1994	Pin, Clutch Operating Hand Lever to Rod.	410000—	250000—	4
D2031	Bolt, Clutch Operating Hand Lever Pivot.	410000—	250000—	4
E2057	Washer on Speed Control Rod.	410000—	250000—	4
E2057	Washer on Throttle Rod.	410000—	250000—	4
JD7759	Alemite Zerk Fitting, No. 1610.	410000—	250000—	4
K3151	Washer, Speed Control Rod.		250000—	4
CRANK CASE BREATHER				
AA359	Breather Stack, Complete.	410000—		4
AA360	Breather Body Assembly.	410000—		4
AA551	Breather Stack, Complete.		250000—	4
D1950	Spring, Clamp.	410000—		4
D1951	Gasket, Filter Core.	410000—	250000—	4
D1952	Core, Breather Filter.	410000—	250000—	4
D1957	Gasket, Stack.	410000—		4
D2120	Clamp, Breather Cover.	410000—		4
K3151	Washer, Breather Cover Clamp.	410000—		4
CRANK CASE VENTILATOR				
A534	Pipe, Ventilator.	410000—424024		4
A535	Packing, Ventilator Pipe (2 used).	410000—	250000—	4
A904	Pipe, Ventilator.		250000—251485	4
A1187	Pipe, Ventilator.	424025—		4
A1190	Pipe, Ventilator.		251486—	4
C1705	Packing Nut, Ventilator Pipe (2 used).	410000—	250000—	4

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
LUBRICATING SYSTEM—OIL PUMP				
A25R	Body, Oil Pump.....	410000-424024	250000-251485	5
A27R	Cover, Oil Pump.....	410000-424024	250000-251485	5
A46R	Elbow, Oil Pump Strainer.....	410000-424024	250000-251485	5
A140	Valve, Oil Relief.....	410000-424024	250000-251485	5
A156	Gear, Oil Pump Idler and Shaft.....	410000-424024	250000-251485	5
A177	Nut, Oil Relief Valve.....	410000-424024	250000-251485	5
A354	Spring, Oil Pump Relief Valve, Pressure Regulating (Coil).....	410000-424024	250000-251485	5
A388	Pipe, Oil Pump Strainer.....	410000-424024	250000-251485	5
A408	Gasket, Oil Pump Cover.....	410000-424024	250000-251485	5
A422	Gasket, Oil Pump Body.....	410000-424024	250000-251485	5
A495R	Gear, Oil Pump Drive.....	410000-424024	250000-251485	5
A496	Gear, Oil Pump Drive and Shaft.....	410000-424024	250000-251485	5
A1144	Shaft, Oil Pump Drive.....	425025-	251486-	5
AB284	Strainer, Screen, Complete, Oil Pump.....	424025-	251486-	5
AC445	Strainer, Complete, Oil Pump.....	410000-424024	250000-251485	5
B241R	Body, Oil Pump.....	424025-	251486-	5
B243	Gear, Oil Pump Drive, Bottom.....	424025-	251486-	5
B244	Shaft, Oil Pump Idler Gear.....	424025-	251486-	5
B245	Gear, Oil Pump Idler.....	424025-	251486-	5
B246	Gasket, Oil Pump Cover.....	424025-	251486-	5
B247	Cover, Oil Pump.....	424025-	251486-	5
B250	Coupling, Oil Pump Drive Shaft.....	424025-	251486-	5
B251	Gasket, Oil Pump Body to Case.....	424025-	251486-	5
B252	Gear, Oil Pump Drive, Top.....	424025-	251486-	5
B253R	Bearing, Oil Pump Top Drive Gear.....	424025-	251486-	5
C1490	Gasket, Oil Pump Strainer Body.....	410000-424024	250000-251485	5
D403	Key, Oil Pump Drive Gear.....	410000-424024	250000-251485	5
D453	Washer, Oil Pump Relief Valve.....	410000-424024	250000-251485	5
D465	Gasket, Oil Pump Relief Valve Cap (Copper).....	410000-424024	250000-251485	5
E2207	Key, Oil Pump Drive Shaft (Woodruff).....	424025-	251486-	5
OIL FILTER AND INDICATOR				
A174	Ball, in Filter By-Pass.....	410000-424024	250000-251485	5
A179	Cap, Oil Filter Relief Valve.....	410000-416504	251486-251820	5
A354	Spring, Filter Head Pressure Regulating Valve (Coil).....	424025-426561	251486-251820	5
A515	Body, Oil Filter.....	410000-424024	250000-251485	5
A516	Gasket, Oil Filter Head.....	410000-424024	250000-251485	5
A518	Stud, Oil Filter.....	410000-	250000-	5
A519	Gasket, Oil Filter Bottom (Rubber Oil Treated).....	410000-	250000-	5
A520	Nut, Oil Filter Bottom.....	410000-	250000-	5
A521	Gasket, Oil Filter Bottom Nut (Copper).....	410000-	250000-	5
A522	Bottom, Oil Filter.....	410000-	250000-	5
A523	Spring, Oil Filter Bottom.....	410000-	250000-	5
A1044R	Head, Oil Filter.....	416505-424024	250000-251485	5
A1148R	Head, Oil Filter.....	424025-426561	251486-251820	5
A1149	Gasket, Oil Filter Head to Filter Body.....	424025-	251486-	5
A1150R	Cover, Oil Filter Head.....	424025-426561	251486-251820	5
A1151	Gasket, Oil Filter Head Cover.....	424025-	251486-	5
A1152	Body, Oil Filter.....	424025-	251486-	5
A1196	Clip, Oil Pressure Regulating Valve, Leaf Spring.....	424025-	251486-	5
A1278	Bushing, Filter Head Cover, Oil Pressure Regulating Valve.....	426562-	251821-	5
A1279R	Head, Oil Filter.....	426562-	251821-	5
A1280	Spring, Oil Pressure Regulating Valve (Coil).....	426562-	251821-	5
AA283	Piston and Rod, Oil Indicator.....	410000-424024	250000-251485	5
AA357	Element, Oil Filter.....	410000-	250000-	5
AA670	Head, Oil Filter with Cap and Gasket.....	410000-416504	250000-	5
AA824	Leaf Spring with Centering Button, Oil Pressure Regu- lating Valve.....	424025-	251486-	5
AA934	Cover with Bushing, Oil Filter Head.....	426562-	251821-	5
AB292	Gauge, Complete, Oil Indicator.....	424025-	251486-	5
AB326	Leaf Spring with Centering Button, Oil Filter By-Pass.....	424025-	251486-	5
B430	Button, Oil Filter By-Pass, Valve Leaf Spring.....	424025-	251486-	5
B438	Clip, Oil Filter Leaf Spring, By-Pass Valve.....	424025-	251486-	5
B439	Spring, Oil Filter By-Pass Valve (Coil).....	424025-	251486-	5
D380	Spring, Oil Indicator.....	410000-424024	250000-251485	5
D465	Gasket, Oil Filter By-Pass Valve Cap.....	410000-424024	250000-251485	5
D793	Body, Crank Case Oil Level Cock.....	410000-	250000-	5
D794	Plug, Crank Case Oil Level Cock.....	410000-	250000-	5

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
OIL FILTER AND INDICATOR—Continued				
D2001	Spring, Filter Head By-Pass Valve (Coil).....	410000-424024		5
D2427	Screw, Pressure Regulating.....	424025-	251486-	5
D2428	Cap, Oil Filter By-Pass Valve.....	416505-424024	250000-251485	5
K2573	Washer, Oil Filter Bottom Nut.....	410000-	250000-	5
OIL PIPES AND FITTINGS				
A259	Reducer, Bushing, Indicator Oil Line to Governor.....	410000-424024	250000-251485	5
A374	Nut, Solder Bushing, Governor Oil Line.....	424025-	251486-	5
A374	Nut, Solder Bushing, Discharge Oil Line.....	410000-424024	250000-251485	5
A465	Body, Solder Bushing, Oil Pump Discharge Line to Filter Head.....	410000-424024	250000-251485	5
A465	Body, Solder Bushing, Oil Pump Discharge Line to Case.....	410000-411365		5
A465	Body, Solder Bushing, Oil Gauge Line to Filter Head..	424025-	251486-	5
A782	Body, Solder Bushing, Oil Pump Discharge Line to Case	411366-424024	250000-251485	5
A1252	Body, Solder Bushing, Oil Gauge Line to Governor Case	424025-	251486-	5
AA280	Oil Line, Main Bearing, R. H.....	410000-	250000-	5
AA281	Oil Line, Main Bearing, L. H.....	410000-	250000-	5
AA282	Oil Line to Indicator.....	410000-424024	250000-251485	5
AA456	Oil Line, Pump Discharge.....	411366-424024	250000-251485	5
AA475	Oil Line, Pump Discharge.....	410000-411365		5
AA802	Oil Line, Pump Discharge.....	424025-	251486-	5
AA819	Oil Line, Oil Filter to Governor and Oil Gauge.....	424025-	251486-	5
B258	Nut, Solder Bushing, (1/2") Oil Pump Discharge Line..	424025-	251486-	5
B259	Gland, Solder Bushing, (1/2") Oil Pump Discharge Line	424025-	251486-	5
D392	Body, Solder Bushing, Main Bearing Oil Lines.....	410000-	250000-	5
D392	Body, Solder Bushing, Oil Indicator Line to Filter Head	410000-424024	250000-251485	5
D458	Nut, Packing, Oil Pump Discharge Oil Line.....	411366-424024	250000-251485	5
D1935	Gland, Solder Bushing, Oil Pump Discharge Oil Line...	410000-424024	250000-251485	5
D1935	Gland, Solder Bushing, Governor and Oil Gauge Oil Line	424025-	251486-	5
D2081	Packing Washer, Oil Pump Discharge Line (3 used)....	411366-424024	250000-251485	5
D2440	Body, Solder Bushing, Oil Pump Discharge Line.....	424025-	251486-	5
E2149	Nut, Solder Bushing, Main Bearing Oil Lines.....	410000-	250000-	5
E2149	Nut, Solder Bushing, Indicator Oil Line.....	410000-424024	250000-251485	5
E2150	Gland, Solder Bushing, Main Bearing Oil Lines.....	410000-	250000-	5
E2150	Gland, Solder Bushing, Indicator Oil Line.....	410000-424024	250000-251485	5
FUEL SYSTEM				
A307	Tee, Fuel Line.....	410000-410858		6
A442	Cushion, Fuel Tank Front Support.....	410000-		6
A443	Cushion, Fuel Tank Rear Support.....	410000-		6
A1013	Cushion, Fuel Tank Front Support.....		250000-	6
A1014	Cushion, Fuel Tank Rear Support.....		250000-	6
AA204	Valve, Gasoline Shut-Off Needle.....	410000-410858		6
AA266	Gasoline Line.....	410000-410858		6
AA267	Fuel Line.....	410000-410858		6
AA270	Strap, Fuel Tank.....	410000-	250000-	7
AA271	Support, Fuel Tank Front with Cushion.....	410000-		6
AA272	Support, Fuel Tank Rear with Cushion.....	410000-		6
AA335	Clamp, Fuel Filter Bowl.....	410000-413854		6
AA376	Tank, Fuel, with Caps.....	410000-		6
AA454	Gasoline Strainer, Complete.....	410859-	250000-	6
AA461	Fuel Line.....	410859-		6
AA462	Gasoline Line.....	410859-		6
AA499	Filter, Fuel.....	410000-	250000-	6
AA517	Bail, Fuel Filter Bowl.....	413855-	250000-	6
AA518	Nut with Washer, Fuel Filter Adjusting.....	413855-	250000-	6
AA519	Screen, Fuel Filter.....	410000-	250000-	6
AA577	Fuel Tank with Caps.....	413879-		6
AA599	Tank, Fuel, with Caps.....		250000-	6
AA603	Support with Cushion, Fuel Tank Front.....		250000-	6
AA604	Support with Cushion, Fuel Tank Rear.....		250000-	6
AA623	Gasoline Line.....		250000-	6
AA624	Fuel Line.....		250000-	6
AB609	Three-Way Cock.....		250000-	6
AC1079	Body, Fuel Filter with Valve.....	410000-	250000-	6
AC1080	Valve, Fuel Filter.....	413855-	250000-	6
AD680	Three-Way Cock.....	410859-		6
AD709	Cap, Easy on Filler.....	410000-	250000-	6

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
FUEL SYSTEM—Continued				
C1777	Bowl, Fuel Filter, Glass.....	410000—	250000—	6
C1778	Gasket, Fuel Filter, Cork.....	410000—	250000—	6
C2378	Body, Fuel Filter.....	413855—	250000—	6
D392	Body, Solder Bushing, Fuel Line.....	410000—	250000—	6
D2122	Packing Washer, Three-Way Cock.....	410859—	250000—	6
E2149	Nut, Solder Bushing, on Gasoline Pipe.....	410000—	250000—	6
E2149	Nut, Solder Bushing, on Fuel Pipe.....	410000—	250000—	6
E2150	Gland, Solder Bushing, on Fuel Pipe.....	410000—	250000—	6
E2150	Gland, Solder Bushing, on Gasoline Pipe.....	410000—	250000—	6
HOOD				
A230	Bracket, Hood Clip, R. H.....	410000—	250000—	7
A532	Bracket, Hood Clip, L. H.....	410000—	250000—	7
AA363	Hood, Complete.....	410000—413878		7
AA526	Hood, Complete.....	413879—		7
AA601	Hood, Complete (AR and AI only).....		250000—	7
AA886	Hood, Complete with Shields (AO only).....		250000—	7
C1573	Clip, Hood.....	410000—	250000—	7
COOLING SYSTEM				
A51R	Tank, Radiator Bottom.....	410000—	250000—	8
A52R	Sides, Radiator.....	410000—	250000—	8
A55R	Inlet, Radiator Water.....	410000—		8
A192	Strap, Radiator.....	410000—	250000—	8
A384	Pipe, Radiator Bottom Outlet.....	410000—		8
A384	Pipe, Cylinder Head Inlet.....	410000—		8
A391	Pipe, Lower Water.....	410000—		8
A432	Gasket, Radiator Core, Top and Bottom.....	410000—	250000—	8
A433	Gasket, Cylinder Water Pipe Outlet.....	410000—	250000—	8
A434	Gasket, Radiator Water Inlet.....	410000—	250000—	8
A445	Hose, Lower Water Pipe.....	410000—		8
A446	Hose, Upper Water Pipe.....	410000—	250000—	8
A448	Clamp, Lower Water Pipe Hose.....	410000—	250000—	8
A448	Clamp, Upper Water Pipe Hose.....	410000—	250000—	8
A531R	Tank, Radiator Top.....	410000—	250000—	8
A931R	Inlet, Radiator Water.....		250000—	8
A932	Hose, Lower Water Pipe.....		250000—	8
A933	Pipe, Radiator Bottom Outlet.....		250000—	8
A933	Pipe, Cylinder Head Inlet.....		250000—	8
A1247	Bracket, Heat Indicator.....	424851—	251673—	8
A1248	Bushing, Heat Indicator Tube.....	410000—	250000—	8
A1284	Bracket, Heat Indicator.....	410000—424850	250000—251672	8
AA253	Pipe, A53R, Upper Water and Fan Support.....	410000—410189		8
AA396	Core, Radiator.....	410000—	250000—	8
AA435	Pipe, A733R, Upper Water and Fan Support.....	410190—414808		8
AA525	Pipe, Upper Water, A845R, Complete.....	414809—		8
AA565	Pipe, Upper Water, A845R, Complete.....		250000—	8
AA795	Radiator Cap, Complete.....	410000—	250000—	8
AA796	Head with Stud, Radiator Filler.....	410000—	250000—	8
AA883	Heat Indicator, Complete.....	424851—	251673—	8
AA952	Heat Indicator, Complete.....	410000—424865	250000—251672	8
AD922	Radiator Cap (for Motometer).....	410000—	250000—	8
D126	Baffle, Radiator Cap.....	410000—	250000—	8
D319R	Cap, Radiator Filler.....	410000—	250000—	8
D362	Clamp Bar, Radiator Filler Cap.....	410000—	250000—	8
D473	Gasket, Radiator Filler Cap.....	410000—	250000—	8
D1138	Nut, on Heat Indicator Stud.....	410000—	250000—	8
D2101	Baffle, Radiator Cap (for Motometer).....	410000—	250000—	8
D2102	Nut, Radiator Cap (for Motometer).....	410000—	250000—	8
D2388	Clamp, Radiator Cap (for Motometer).....	410000—	250000—	8
1452R	Pipe Plug, Upper Water Pipe (AA505 and AA525).....	414809—	250000—	8
RADIATOR GUARD AND CURTAIN				
A182	Roller, Radiator Curtain.....	410000—	250000—	9
A189	Clip, Radiator Curtain.....	410000—	250000—	9
AA325	Curtain, Radiator.....	410000—	250000—	9
AA431	Guard, Radiator.....	410000—	250000—	9
D1856	Spacer, Guard to Radiator.....	410000—	250000—	9

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
	RADIATOR GUARD AND CURTAIN—Continued			
D1887	Pin, Radiator Curtain Roller	410000-	250000-	9
D2001	Spring, Radiator Curtain Roller	410000-	250000-	9
372R	Spring, Radiator Curtain	410000-	250000-	9
629R	Washer, Roller on Radiator Curtain	410000-	250000-	9
	FAN			
A74R	Gear, Fan Drive Bevel	410000-424024	250000-251485	3
A144	Shaft, Fan	410000-414808		9
A170	Pinion, Fan Drive Bevel	410000-424024	250000-251485	9
A285	Retainer, Fan Shaft Rear Bearing Packing	410000-414808		9
A286	Retainer, Front Fan Bearing Packing, (Rear)	410000-	250000-	9
A369	Snap Ring, Fan Shaft Rear End	410000-	250000-	9
A393	Packing, Rear of Front Fan Bearing	410000-	250000-	9
A393	Packing, Fan Shaft Rear Bearing	410000-414808		9
A395	Packing, Front of Front Fan Bearing	410000-414808		9
A407	Gasket, Rear Fan Bearing Housing	410000-424024	250000-251485	9
A579R	Housing, Fan Shaft Rear Bearing	410000-414808		9
A841	Shaft, Fan	414809-424024		9
A842R	Housing, Fan Shaft Rear Bearing	414809-424024	250000-251485	9
A844	Support, Fan Shaft, Front (Order A1233 for Tractors with K. W. Lighting Outfit)	414809-		9
A846	Spring, Fan Bearing Take-Up	414809-	250000-	9
A925	Shaft, Fan		250000-251485	9
A927	Support, Fan Shaft		250000-	9
A1176	Shaft, Fan	424025-		9
A1177	Pinion, Fan Drive, Bevel	424025-	251486-	9
A1178	Shaft, Fan		251486-	9
A1180	Housing, Fan Shaft Rear Bearing	424025-	251486-	9
A1181	Gasket, Fan Shaft Rear Bearing Housing (Thick)	424025-	251486-	9
A1182	Gasket, Fan Shaft Rear Bearing Housing (Thin)	424025-	251486-	9
A1233	Support, Fan Shaft, Front (For use on Tractors equipped with K. W. Lighting Outfit)	414809-		40
AA205	Washer, Fan Shaft Support (7-1/2" Outside Diameter, 17/32" Inside Diameter)		326053-	9
AA268	Fan Blades with Hub, Complete	410000-414808		9
AA523	Shroud, Fan	410000-	250000-	8
AA524	Fan Blades with Hub, Complete	414809-	250000-	9
AA564	Housing, Fan Bearing, with Support Tube	414809-424024		9
AA817	Housing, Front Fan Bearing, with Support Tube		250000-251485	9
AA818	Housing, Fan Bearing, with Support Tube	424025-		9
AB518	Housing, Front Fan Bearing, with Support Tube		251486-	9
B292	Felt Washer, Front Fan Bearing	414809-	250000-	9
B293	Retainer, Fan Shaft Support Tube Packing	414809-424024	250000-251485	9
B294	Packing Ring, Rear of Fan Shaft Tube (Rubber)	414809-	250000-	9
B296	Washer, Grease Retainer, Front Fan Bearing (Rear)	410000-	250000-	9
B298	Washer, Front Fan Bearing Felt Retainer	414809-	250000-	9
D342	Retainer, Front Fan Bearing Felt Washer	414809-	250000-	9
D403	Woodruff Key, Fan Drive Bevel Gear	410000-	250000-	9
D1720	Key, Fan Drive, Bevel Pinion	410000-	250000-	9
D1866	Lock Washer, (Half) Fan Lock on Fan Shaft	410000-	250000-	9
D1868	Cover, Fan Bearing, Front	410000-414808		9
D1938	Retainer Washer, Front Fan Bearing Packing	410000-414808		9
D1939	Snap Ring, Front Fan Bearing Packing	410000-414808		9
JD7655	Spring, Fan Bearing Take-Up	410000-414808		9
JD7656	Cup, Front and Rear Bearing, Fan Shaft	410000-	250000-	9
JD7657	Cone, Front and Rear Bearing, Fan Shaft	410000-	250000-	9
1450R	Balls and Retainer, Front and Rear Bearing, Fan Shaft	410000-	250000-	9
	Pipe Plug in Fan Bearing Housing	410000-	250000-	9
	PULLEY			
A101	Gear, Belt Pulley	410000-	250000-	10
A261	Washer, Belt Pulley, Felt Retainer	410000-	250000-	10
A262	Retainer, Belt Pulley, Felt	410000-	250000-	10
A370	Snap Ring, Belt Pulley Gear	410000-	250000-	10
A371	Snap Ring, Belt Pulley Bearing	410000-	250000-	10
A382	Felt Washer, Belt Pulley	410000-	250000-	10
A726	Bushing, Belt Pulley (Bronze)	410000-	250000-	10
AA231	Belt Pulley, A117R, with Sleeve Gear and Bushing	410000-	250000-	10
AA329	Dust Shield, Pulley, with Cap Screws	410000-	250000-	10

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
PULLEY—Continued				
D279	Key, Belt Pulley Gear.....	410000—	250000—	10
JD7489	Outer Race, Pulley Bearing.....	410000—	250000—	10
JD7539	Roller Assembly, Pulley Bearing.....	410000—	250000—	10
JD7559	Inner Race, Pulley Bearing.....	410000—	250000—	10
CLUTCH PARTS				
A18R	Sleeve, Clutch Operating.....	410000—	250000—	10
A20R	Disk, Clutch Adjusting.....	410000—	250000—	10
A135	Bolt, Clutch Operating.....	410000—	250000—	10
A141	Toggle, Clutch Dog.....	410000—	250000—	10
A198	Washer, Clutch Driving Disk.....	410000—	250000—	10
A272	Cover, Clutch, Dust.....	410000—	250000—	10
A351	Spring, Clutch Dust Cover.....	410000—	250000—	10
A352	Spring, Clutch Release.....	410000—	250000—	10
A908	Rod, Clutch Operating.....		250000—	4
A942R	Bracket, Clutch Lever.....		250000—	4
A1197	Bushing, Clutch Lever Pivot.....	424169—	251508—	4
AA232	Disk, A19R, Clutch Driving with Rivet.....	410000—	250000—	10
AA794	Lever, Clutch Operating with Pivot Bushing.....	410000—	250000—	4
C74R	Dog, Clutch.....	410000—	250000—	10
C404	Drive Pin, Clutch Operating Sleeve.....	410000—	250000—	10
C614	Facing, Clutch.....	410000—	250000—	10
D355	Pin, Clutch Dog.....	410000—	250000—	10
D393R	Yoke, Clutch Operating Rod.....	410000—	250000—	4
CLUTCH FORK BEARING AND PULLEY BRAKE				
A21R	Bearing, Clutch Fork.....	410000—	250000—	10
A78R	Fork, Clutch.....	410000—	250000—	10
A82R	Collar, Clutch (Bronze).....	410000—	250000—	10
A353	Spring, Clutch Fork.....	410000—	250000—	10
A420	Gasket, Clutch Fork Bearing.....	410000—	250000—	10
A602	Snap Ring, Clutch Fork Shaft.....	410000—	250000—	10
A603	Shaft, Clutch Fork.....	410000—	250000—	10
AA235	Brake, C79R, with Lining, Pulley.....	410000—	250000—	10
C732	Welsh Plug, in Clutch Fork Bearing.....	410000—	250000—	10
D178	Pivot, Clutch Fork (2 used).....	410000—	250000—	10
D1086	Set Screw, Pulley Brake Adjusting.....	410000—	250000—	10
D1932	Lining, Pulley Brake.....	410000—	250000—	10
GEAR SHIFT				
A239	Interlock, Gear Shift.....	410000—		10
A350	Spring, Gear Shift Lever.....	410000—		10
A369	Snap Ring, Gear Shift Lever.....	410000—		10
A418	Gasket, Fulcrum Ball Socket.....	410000—413398		10
A497	Shaft, Shifter.....	418088—		10
A596	Yoke, Gear Shifter.....	410000—	250000—	10
A597	Spring, Gear Shifter Pawl.....	410000—	250000—	10
A598	Pawl, Gear Shifter.....	410000—	250000—	10
A604	Lever, Gear Shift.....	410000—		10
A605	Ball, Fulcrum.....	410000—413398		10
A606R	Socket, Fulcrum Ball.....	410000—413398		10
A607	Cover, Fulcrum Ball Socket.....	410000—		10
A608	Washer, Gear Shift Spring Retainer.....	410000—		10
A825	Ball, Fulcrum.....	413399—		10
A913	Interlock, Gear Shift.....		250000—	10
A916	Lever, Gear Shift.....		250000—	10
A917	Arm, Gear Shifter.....		250000—	10
A918	Shaft, Shifter.....		250550—	10
A1416	Shaft, Shifter (Underdrive) (AO and AR only).....		250000—	10
AA371	Gear Shift Fork, A549R, Complete with Yoke.....	410000—		10
AA553	Gear Shifter, Low and Reverse, A910R, with Yoke.....		250000—	10
AA588	Gear Shifter, Second Speed, A1015R, with Yoke.....		250000—	10
AA757	Shifter, Overdrive, A595R, with Yoke and Shifter Shaft.....	410000—418087		10
AA758	Shaft, Shifter with Overdrive Shifter, A911R, with Yoke.....		250000—250549	10
AA1123	Gear Shifter, Second Speed, A1417R, with Yoke (Underdrive) (AO and AR only).....		250000—	10
D678	Screw, Gear Shift Adjusting.....	410000—	250000—	10

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
SLIDING GEAR SHAFT				
A94	Pinion, First Speed Sliding (18 Teeth)	410000-	250000-	11
A113	Pinion, Second Speed Sliding	410000-		11
A365	Snap Ring, Sliding Gear Shaft, L. H. Bearing, Outer Race	410000-	250000-	11
A378	Snap Ring, Sliding Gear Shaft, L. H. Bearing, Inner Race	410000-	250000-	11
A540	Shaft, Sliding Gear	410000-	250000-	11
A549	Gasket, Sliding Gear Shaft and Countershaft, L. H. Bearing Cover	410000-	250000-	11
A550	Cover, Sliding Gear Shaft Left Bearing	410000-	250000-	11
A600	Pinion, Sliding Gear Shaft Drive (20 Teeth)	410000-	250000-	11
A837	Pinion, Drive, Sliding Gear Shaft (17 Teeth) (Overdrive)	410000-	250000-	11
A906	Pinion, Second Speed Sliding (23 Teeth)		250000-	11
A1405	Pinion, Sliding Gear Shaft Drive (20 and 26 Teeth) (Underdrive) (AO and AR only)		250000-	11
A1406	Pinion, High Speed (28 Teeth) (Underdrive) (AO and AR only)		250000-	11
JD7665	Bearing, Sliding Gear Shaft, L. H.	410000-	250000-	11
JD7673	Bearing, Sliding Gear Shaft, R. H.	410000-	250000-	11
OVERDRIVE GEAR SHIFT				
A115R	Lever, Overdrive Shifter	410000-	250000-	11
A142	Handle, Overdrive Shifter	410000-		11
A147	Key Washer, Overdrive Shifter	410000-	250000-	11
A369	Snap Ring, Overdrive Shifter Handle	410000-	250000-	11
A596	Yoke, Overdrive Shifter	410000-	250000-	11
A599	Pin, Reverse Lock Out	410000-	250000-	11
A1418	Yoke, Underdrive Shifter (AO and AR only)		250000-	11
AA556	Handle, Overdrive Shifter with Shaft		250000-	11
AA757	Shifter, Overdrive, A595R, with Yoke, Lock Out Pin and Shifter Shaft	410000-418087		10
AA758	Shifter, Overdrive, A911R, with Yoke, Lock Out Pin and Shifter Shaft		250000-250549	10
AA792	Overdrive Shifter, A595R, with Yoke and Lock Out Pin	418088-		11
AA793	Shifter, Overdrive, A911R, with Yoke and Lock Out Pin		250550-	11
AA1124	Shifter, (Underdrive), A911R, with Yoke (AO and AR only)		250000-	11
OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR				
A69R	Cover, Overdrive, R. H. Bearing	410000-	250000-	11
A119	Stud, Overdrive, R. H. Bearing Cover (2 used)	410000-	250000-	11
A120	Dowel Pin, First Reduction Gear Cover (2 used)	410000-	250000-	11
A159	Spacer, First Reduction Gear	410000-	250000-	11
A438	Gasket, Overdrive, R. H. Bearing Cover	410000-	250000-	11
A547	Gasket, Overdrive Gear and Shaft, L. H. Bearing Cover	410000-	250000-	11
A548R	Cover, Overdrive Gear and Shaft, L. H. Bearing	410000-	250000-	11
A556R	Cover, First Reduction Gear	410000-		11
A557	Gasket, First Reduction Gear Cover	410000-	250000-	11
A909R	Cover, First Reduction Gear		250000-	11
A1401	Snap Ring, in First Reduction Gear Cover (Underdrive) (AO and AR only)		250000-	11
A1402	Snap Ring, on Overdrive Gear and Shaft, L. H. Bearing (Underdrive) (AO and AR only)		250000-	11
A1403	Spacer, First Reduction Gear (Underdrive) (AO and AR only)		250000-	11
A1404	Overdrive Gear and Shaft (20 Teeth) (Underdrive) (AO and AR only)		250000-	11
AA217	First Reduction Gear with Spider, Riveted	410000-	250000-	11
AA797	Overdrive Gear and Shaft with R. H. Bearing Cover	410000-	250000-	11
AA798	Gear, Drive, Sliding Gear Shaft with R. H. Bearing Cover (28 Outside Teeth, 17 Inside Teeth) (Overdrive)	410000-		11
C535	Nut, Overdrive Gear and Shaft End	410000-	250000-	11
JD7649	Bearing, Overdrive Gear and Shaft, L. H. End (Underdrive) (AO and AR only)		250000-	11
JD7664	Bearing, Overdrive Gear and Shaft, R. H. End	410000-	250000-	11
JD7672	Bearing, Overdrive Gear and Shaft, L. H. End	410000-	250000-	11
K3083	Stud, First Reduction Gear Cover to Transmission Case	410000-	250000-	11

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
OVERDRIVE IDLER GEAR				
A114	Gear, Overdrive Idler, 17 and 25 Teeth.....	410000-	250000-	12
A166	Washer, Bearing Locating.....	410000-	250000-	12
A539	Spacer, Overdrive Idler Gear Bearing.....	410000-	250000-	12
A543	Washer, Idler Gear Thrust.....	410000-424024	250000-251485	12
A544	Washer, Idler Gear Locating, (Notched).....	410000-412799		12
A812	Spacer, Idler Gear Locating.....	412800-	250000-	12
A836	Gear, Idler, Countershaft, 17 and 28 Teeth (Overdrive)	410000-		12
A1154	Washer, Idler Gear Thrust.....	424025-	251486-	12
A1408	Gear, Overdrive Idler (19 and 25 Teeth) (Underdrive) (AO and AR only).....		250000-	12
A1409	Spacer, Overdrive Idler Gear Bearing (Underdrive) (AO and AR only).....		250000-	12
A1410	Washer, Idler Gear Thrust (Underdrive) (AO and AR only).....		250000-	12
JD7501	Roller Assembly, Overdrive Idler, R. H.....	410000-	250000-	12
JD7539	Roller Assembly, Overdrive Idler, L. H.....	410000-	250000-	12
JD7551	Inner Race, Overdrive Idler, R. H.....	410000-	250000-	12
JD7559	Inner Race, Overdrive Idler, L. H.....	410000-	250000-	12
JD7904	Bearing, Countershaft Idler Gear (2 used) (Underdrive) (AO and AR only).....		250000-	12
COUNTERSHAFT				
A124	Stud, Countershaft, R. H. Bearing Cover.....	410000-	250000-	12
A242	Washer, Countershaft, R. H. Bearing.....	410000-424024	250000-251485	12
A415	Gasket, Countershaft, Right Bearing Housing.....	410000-424024	250000-251485	12
A542	Snap Ring, Countershaft, L. H. Bearing.....	410000-424024	250000-251485	12
A545	Spacer, Countershaft, L. H. Bearing.....	410000-424024	250000-251485	12
A546R	Housing, Countershaft, R. H. Bearing.....	410000-424024	250000-251485	12
A580	Gear, Second Speed, Countershaft.....	410000-		12
A581	Pinion, Differential Driving (17 Teeth).....	410000-	250000-	12
A582	Gear, First Speed Countershaft (27 Teeth).....	410000-	250000-	12
A583	Spacer, Countershaft Gear.....	410000-	250000-	12
A811	Countershaft.....	412800-424024	250000-251485	12
A907	Gear, Second Speed Countershaft (22 Teeth).....		250000-	12
A1153	Countershaft.....	424025-	251486-	12
A1155R	Housing, Countershaft, R. H. Bearing.....	424025-	251486-	12
A1156	Gasket, Countershaft, R. H. Bearing Housing (Thin).....	424025-	251486-	12
A1157	Gasket, Countershaft, R. H. Bearing Housing (Thick).....	424025-	251486-	12
A1158	Shim, Countershaft, R. H. Bearing Housing (Steel, Thin).....	424025-	251486-	12
A1159	Shim, Countershaft, R. H. Bearing Housing (Steel, Thick).....	424025-	251486-	12
A1160	Snap Ring, Countershaft, L. H. Bearing.....	424025-	251486-	12
A1411	Pinion, Differential Driving (Underdrive) (17 Teeth) (AO and AR only).....		250000-	12
A1412	Washer, Countershaft, L. H. Bearing Retaining (Underdrive) (AO and AR only).....		250000-	12
A1413R	Housing, Countershaft, R. H. Bearing (Underdrive) (AO and AR only).....		250000-	12
AA503	Countershaft, with Idler Gear Locating Spacer.....	410000-412799		12
AA1121	Countershaft with Dowel Pin (Underdrive) (AO and AR only).....		250000-	12
C535	Nut, R. H. and L. H. End of Countershaft.....	410000-424024	250000-251485	12
C2321	Washer, Countershaft L. H. Bearing.....	410000-424024	250000-251485	12
E2072	Dowel Pin, in Countershaft (Underdrive) (AO and AR only).....		250000-	12
JD7367	Cone, with Rollers, Countershaft R. H. Bearing.....	424025-	251486-	12
JD7379	Cone, with Rollers, Countershaft L. H. Bearing.....	424025-	251486-	12
JD7405	Cup, Countershaft R. H. Bearing.....	424025-	251486-	12
JD7411	Cup, Countershaft L. H. Bearing.....	424025-	251486-	12
JD7502	Outer Race and Rollers, Countershaft R. H. Bearing.....	410000-424024	250000-251485	12
JD7552	Inner Race, Countershaft R. H. Bearing.....	410000-424024	250000-251485	12
JD7680	Bearing, Countershaft, L. H.....	410000-424024	250000-251485	12
DIFFERENTIAL				
A11R	Quill, Differential Bearing.....	410000-	250000-	12
A150	Shaft, Differential Bevel Pinion.....	410000-	250000-	12
A169	Pinion, Differential Bevel.....	410000-	250000-	12
A202	Washer, Differential Thrust.....	410000-	250000-	12
A263	Cover, Differential Shaft, R. H. Bearing.....	410000-	250000-	12

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
DIFFERENTIAL—Continued				
A363	Snap Ring, Differential Shaft, R. H. Bearing	410000-	250000-	12
A406	Gasket, Differential Quill, (Thin)	410000-	250000-	12
A486	Pinion, Differential Bevel Gear and Spur	410000-	250000-	12
A610	Shim, Differential Bearing Quill, Steel, (Thick)	410000-	250000-	12
A611	Shim, Differential Bearing Quill, Steel, (Thin)	410000-	250000-	12
A612	Gasket, Differential Bearing Quill (Thick)	410000-	250000-	12
AA331	Differential Gear with Shaft	410000-	250000-	12
AA345	Differential, Complete	410000-	250000-	12
AA559	Differential, Complete (For AR and AI only)		250000-	
AA661	Differential Gear with Shaft (For AR and AI only)		250000-	
JD7275	Cup, Differential Bearing, R. H. and L. H.	410000-	250000-	12
JD7361	Cone, Differential Bearing, R. H. and L. H.	410000-	250000-	12
FINAL DRIVE				
A5R	Spacer, Rear Axle Bearing	410000-	250000-	13
A76R	Nut, Rear Axle Shaft	410000-	250000-	13
A187	Shaft, Rear Axle	410000-424024		13
A264	Retainer, Rear Axle Felt	410000-		13
A411	Gasket, Rear Axle Housing to Case	410000-	250000-	13
A412	Gasket, Rear Axle Housing to Cover	410000-	250000-	13
A609	Gear, Final Drive	410000-	250000-	13
A810	Washer, Rear Axle Oil Seal	411593-413647		13
A813R	Retainer, Oil Seal and Felt, Rear Axle (Repairs for AA500 Oil Seal only)	410000-411592		13
A815R	Spacer, Rear Axle Bearing (Repairs for AA500 Oil Seal only)	410000-411592		13
A829	Washer, Rear Axle Oil Seal	413648-	250000-	13
A922	Shaft, Rear Axle, R. H.		250000-	14
A923	Shaft, Rear Axle, L. H.		250000-	14
A1091	Axle, Rear (For 84" Maximum Tread)	423401-		13
A1281	Retainer, Rear Axle Felt		250000-	14
A1309	Shaft, Rear Axle, R. H. (AI only)		250000-	14
A1310	Shaft, Rear Axle, L. H. (AI only)		250000-	14
A1311	Retainer, Rear Axle Felt (AI only)		250000-	14
A1313	Rear Axle Bearing Spacer (AI only)		250000-	14
AA504	Cover, Rear Axle Housing with Filler Plug	410000-	250000-	13
AA505	Oil Seal, Rear Axle (Repairs for AA500)	410000-411592		13
AA506	Oil Seal, Rear Axle Inner Bearing	411593-413647		13
AA509	Rear Axle Housing, A828R, with Bearing Cups and Oil Seals	410000-		13
AA520	Oil Seal, Rear Axle Inner Bearing	413648-	250000-	13
AA616	Rear Axle Housing, with Bearing Cups and Oil Seals		250000-	14
AA665	Felt Washer, Rear Axle	410000-	250000-	13
AA666	Felt Washer, Rear Axle (Repairs for AA500 Oil Seal Assembly)	410000-411592		13
AA1067	Washer, Felt, Rear Axle (AI only)		250000-	14
AA1075	Housing, Rear Axle, with Bearing Cups and Oil Seals (AI only)		250000-	14
C1533	Dowel Pin, Rear Axle Housing to Transmission Case	410000-	250000-	13
D625	Pipe Plug, Rear Axle Housing Drain	410000-	250000-	13
E2244	Pipe Plug, Rear Axle Housing Oil Filler	413279-	250000-	13
JD7245	Cone with Rollers, Rear Axle Bearing	410000-	250000-	13
JD7296	Cup, Rear Axle Bearing	410000-	250000-	13
JD7381	Cone with Rollers, Rear Axle Outer Bearing (AI only)		250000-	14
JD7412	Cup, Rear Axle Outer Bearing (AI only)		250000-	14
JD7759	Alemite Zerk Fitting, No. 1610, Rear Axle Shaft	410000-	250000-	13
REAR WHEELS				
A77	Sleeve, Drive Wheel	410000-		15
A473	Cap Screw, Drive Wheel Sleeve to Wheel	410000-		15
A1283	Side Ring, Demountable Rim. For A1282R Drive Wheel and 9.00x36 Low Pressure Rubber Tires (Specify Firestone or Goodyear Rim)	410000-		19
A1293	Side Ring, Demountable Rim. For A1282R Drive Wheel and 10.00x36 or 11.25x36 Low Pressure Rubber Tires (Specify Firestone or Goodyear Rim)	410000-		19
A1325	Bolt, Rear Wheel (AI only)		250000-	20

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
REAR WHEELS—Continued				
AA385	Drive Wheel, Spoke Type, for 9.00x36 Low Pressure Rubber Tires.....	410000—		18
AA917	Rim, Demountable, for A1272R or A1324R Cast Wheel and 11.25x24 or 12.75x24 Low Pressure Rubber Tires.....		250000—	19
AA933	Drive Wheel, Cast, A1272R, with Demountable Rim. For 11.25x24 and 12.75x24 Low Pressure Rubber Tires (AR and AO only).....		250000—	18
AA945	Rim, Demountable with Side Ring, for A1282R Cast Wheels and 9.00x36 Low Pressure Rubber Tires.....	410000—		19
AA1002	Rim, Demountable, with Side Ring, for A1282R Cast Wheel and 10.00x36 or 11.25x36 Low Pressure Rubber Tires.....	410000—		19
AA1051	Drive Wheel, A1378R, with Studs and Nuts. For 8.25x24 or 9.00x24 High Pressure Rubber Tires (AI only).....		250000—	20
AA1052	Drive Wheel, Dual, A1381R, with Studs and Nuts. For 9.00x24 High Pressure Rubber Tires (AI only).....		250000—	20
AA1056	Rim, Demountable, with Side Ring and Lock Ring. For Single and Dual Drive Wheels A1378R or A1381R, and 8.25x24 or 9.00x24 High Pressure Rubber Tires (AI only).....		250000—	20
AA1058	Side Ring and Lock Ring. For Single and Dual Drive Wheels A1378R or A1381R, and 8.25x24 or 9.00x24 High Pressure Rubber Tires (AI only).....		250000—	20
AA1078	Drive Wheel, Cast, A1324R, with Studs and Nuts. For 11.25x24 and 12.75x24 Low Pressure Rubber Tires (AI only).....		250000—	19
AA1087	Drive Wheel, Cast, A1272R. For 11.25x24 and 12.75x24 Low Pressure Rubber Tires (AR and AO only).....		251858—	19
AA1088	Drive Wheel, Cast, A1282R, with Studs and Nuts. For 9.00x36, 10.00x36, and 11.25x36 Low Pressure Rubber Tires.....	410000—		19
B634R	Rim Clamp, for A1282R, Cast Wheel.....	410000—		20
C719	Stud, Rim Clamp to Drive Wheel (5/8"x2-5/8").....		250000—	20
C1479	Stud, Rim Clamp to Drive Wheel (5/8"x2-1/4").....	410000—	250000—	20
C1716	Bolt without Nut, Rear Wheel.....		250000—	17
D409	Stud, Rim Clamp to Drive Wheel (3/4"x3-1/2").....		250000—	20
D2110	Ring, Dual Drive Wheel Spacer. For A1381R Cast Wheel (AI only).....		250000—	20
D2383	Ring, Dual Drive Wheel Wedge. For A1381R Cast Wheel (AI only).....		250000—	20
D2526R	Rim Clamp (AI only).....		250000—	20
JD1214	Drive Wheel (50"x6") Flat Tire.....	410000—		15
JD1217	Drive Wheel (42-3/4"x10") Flat Tire.....		250000—	17
JD1225	Drive Wheel, Skeleton Type.....	410000—		16
REAR WHEEL EQUIPMENT				
A684R	Lug, Cast, Skeleton Drive Wheel.....	410000—		16
A685	Spacer, Skeleton Drive Wheel Cast Lug.....	410000—		16
A686	Bolt, Skeleton Drive Wheel Cast Lug.....	410000—		16
A687	Lock Washer, Skeleton Drive Wheel Cast Lug (Special).....	410000—		16
A808	Support, for AA483 Road Band.....	410000—		16
A840	Extension Rim, Drive Wheel (6").....	410000—		15
A1062	Support, Drive Wheel to Road Band Support.....		250000—	17
AA483	Road Band with Supports.....	410000—		16
AA899	Mud Guard, Drive Wheel.....		251858—	17
AC335	Road Band with Supports (Half).....		250000—	17
AC649	Lug, Cast Cone.....	410000—	250000—	15
AC918	Road Band with Supports.....		250000—	18
C744	Washer, Drive Wheel Support to Road Band Support Bolt.....	410000—	250000—	20
C744	Washer, Hook Bolt, for D2184 Bolt.....	410000—		20
C1027	Extension Rim, Drive Wheel (6").....		250000—	17
C1030	Clip, Drive Wheel Extension Rim.....	410000—	250000—	15
C1294	Grouser, Meadow (Channel) R. H.....		250000—	17
C1295	Grouser, Meadow (Channel) L. H.....		250000—	17
C1517	Bolt with Nut, Sand Lug.....		250000—	17
C1646R	Lug, Button.....	410000—	250000—	15
C2147	Support, for AC918 Road Band.....		250000—	17

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
REAR WHEEL EQUIPMENT—Continued				
C2148	Support, Drive Wheel to Road Band Support.....	410000—		16
C2199R	Lug, Sand.....		250000—	17
D233	Lug, Spade, 4" High.....	410000—	250000—	15
D411	Bolt, Spade Lug.....	410000—	250000—	15
D411	Bolt, Road Band Support to Drive Wheel Support.....	410000—	250000—	15
D411	Bolt, Drive Wheel Support to Drive Wheel (Road Band)	410000—	250000—	15
D530	Grouser (2-1/4"x2-1/4"x5/16"x22") R. H.		250000—	17
D531	Grouser (2-1/4"x2-1/4"x5/16"x22") L. H.		250000—	17
D574	Grouser (2-1/4"x2-1/4"x5/16"x16") R. H.	410000—	250000—	17
D575	Grouser (2-1/4"x2-1/4"x5/16"x16") L. H.	410000—	250000—	17
D938	Washer, Spade Lug.....	410000—	250000—	15
D1078	Lug, Spade (5" High).....	410000—	250000—	15
D1283	Lug, Spade, "A" Shape (5" High).....	410000—	250000—	17
D2121	Lug, Spade, Heavy Duty (5" High).....	410000—	250000—	15
D2184	Hook Bolt, with Nut, for Inner Rear Wheel Weight...	410000—		20
D2186	Washer, Hook Bolt (2" Outside Diameter, 25/32" Inside Diameter).....	410000—		20
D2447	Lug, Spade, Heavy Duty (4" High).....	410000—	250000—	15
D2629	Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter).....	410000—	250000—	20
WHEEL SCRAPERS				
A652	Blade, Front Wheel Scraper.....	410000—		21
A1084R	Bracket, Scraper, Rear Wheel, R. H.....	410130—		21
A1085R	Bracket, Scraper, Rear Wheel, L. H.....	410130—		21
A1090R	Spacer, Scraper Bracket, Rear Wheel.....	410130—		21
A1265	Scraper Bar, Rear Wheel, R. H. and L. H.....		252199—252691	21
A1266	Scraper Blade, Rear Wheel.....		252199—	21
A1267	Scraper Bar, Extension, Rear Wheel.....		252199—	21
A1357	Scraper Bar, Rear Wheel, R. H.....		252692—	21
A1358	Scraper Bar, Rear Wheel, L. H.....		252692—	21
AA399	Scraper, Front Wheel, Complete.....	410000—		21
AA700	Holder, Scraper Blade, Rear Wheel.....	410130—		21
AA701	Blade, Complete, Scraper, Rear Wheel.....	410130—		21
C264R	Holder, Scraper Blade.....		252199—	21
E2229	Stud, Scraper Bracket, Rear Wheel.....	410130—		21
1705R	Washer, Front Wheel Scraper.....	410000—		21
EMERGENCY BRAKE				
A133	Washer, on Differential Shaft.....		250000—	21
A241	Spacer, Brake Dust Guard (AI only).....		250000—	21
A348	Spring, Brake Lever.....		250000—	21
A406	Gasket, Differential Quill (Thin).....		250000—	21
A413	Gasket, Brake Housing to Case.....		250000—	21
A610	Shim, Differential Bearing Quill, Steel (Thick).....		250000—	21
A611	Shim, Differential Bearing Quill, Steel (Thin).....		250000—	21
A612	Gasket, Differential Bearing Quill (Thick).....		250000—	21
A975	Retainer, Brake Housing Felt.....		250000—	21
A976R	Drum, Brake.....		250000—	21
A981	End, Brake Band, Adjusting.....		250000—	21
A982	Lining, Brake Band.....		250000—	21
A983	Nut, Brake Band Adjusting.....		250000—	21
A985	Latch, Brake.....		250000—	21
A986	Pin, Brake Pedal.....		250000—	21
A987	Rod, Brake Operating.....		250000—	21
A988R	Lever, Brake.....		250000—	21
A989	Cover, Brake Housing Opening.....		250000—	21
A1319	Pin, Brake Pedal Pivot (AI only).....		250000—	21
A1321	Lining, Brake Band (AI only).....		250000—	21
A1322R	Pedal, Brake (AI only).....		250000—	21
A1323	Pin, Brake Pedal (AI only).....		250000—	21
AA582	Housing, Brake, with Lever Shaft.....		250000—	21
AA583	Lever, Brake Band.....		250000—	21
AA584	Brake Band with Lining.....		250000—	21
AA586	Pedal with Latch, Brake.....		250000—	21
AA610	Support, Brake Lever.....		250000—	21
AA664	Washer, Felt, Brake Housing.....		250000—	21

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
EMERGENCY BRAKE—Continued				
AA976	Housing, Brake, with Pedal Pivot and Bearing Cup (AI only)		250000—	21
AA977	Band, Brake, with Lining (AI only)		250000—	21
B639R	Latch, Brake (AI only)		250000—	21
C284R	Yoke, Brake Operating Rod		250000—	21
C1067	Pin, Brake Rod Yoke		250000—	21
C1224	Spring, Brake Pedal (AI only)		250000—	21
D1950	Spring, Brake Band Adjusting End		250000—	21
JD7759	Alemite Zerk Fitting No. 1610, in Brake Housing		250000—	21
DIFFERENTIAL BRAKES				
A88R	Brake Pedal, Right	410000—		22
A89R	Brake Pedal, Left	410000—		22
A133	Washer, Brake Shaft Pinion	410000-424024	250000-251485	22
A134	Pin, Brake Adjusting	410000—	250000—	22
A149	Roller, Brake Shoe	410000—	250000—	22
A151	Screw, Brake Adjusting	410000—	250000—	22
A152	Shaft, Brake Lever	410000—	250000—	22
A321	Cam, Brake	410000—	250000—	22
A345	Pin, Break Shoe Roller	410000—	250000—	22
A348	Spring, Brake Shoe	410000—	250000—	22
A348	Spring, Brake Lever		250000—	22
A413	Gasket, Brake Housing to Transmission Case	410000—	250000—	22
A441	Lining, Brake Shoe	410000—	250000—	22
A509	Bushing, Brake Shaft	410000-424024	250000-251485	22
A510	Guard, Brake Shaft, Dust (Outer)	410000—	250000—	22
A514	Pinion, Brake Shaft	410000-424024	250000-251485	22
A985	Latch, Brake Pedal		250000—	22
A986	Pin, Brake Pedal (Drilled)		250000—	22
A988R	Lever, Brake		250000—	22
A1055	Arm, Brake Lever Shaft		250000—	22
A1056	Rod, Brake Operating		250000—	22
A1162	Pinion, Brake Shaft	424025—	251486—	22
A1163	Bushing, Brake Shaft (Outer)	424025—	251486—	22
A1168	Washer, Brake Shaft Pinion	424025—	251486—	22
A1169	Bushing, Brake Shaft (Inner)	424025—	251486—	22
AA314	Brake Shoe with Lining	410000—	250000—	22
AA319	Support, Brake Latch	410000—		22
AA352	Brake Housing, A508R, with Bushing	410000-424024	250000-251485	22
AA353	Shaft and Drum, Brake	410000-424024	250000-251485	22
AA586	Pedal, Brake with Latch, R. H. and L. H.		250000—	22
AA807	Shaft and Drum, Brake	424025—	251486—	22
AA811	Oil Cup, Outer Brake Shaft Bearing	424025—	251486—	22
AA1079	Brake Housing, A1161R, with Bushing and Oiler	424025—	251486—	22
C284R	Yoke, Brake Operating Rod		250000—	22
C1067	Pin, Brake Rod Yoke		250000—	22
C2182	Latch, Brake	410000—		22
D136	Washer, Brake Shaft	424025—	251486—	22
D1821	Washer, Brake Shaft Pinion	410000-424024	250000-251485	22
JD7760	Alemite Zerk Fitting No. 1612, Brake Housing, 67-1/2 Degrees	410000-424024	250000-251485	22
K2525	Pipe Plug, in Brake Housing		250000—	22
27R	Washer, Pivot on Brake Latch	410000—		22
WHEEL BRAKES—"AI" ONLY				
A348	Spring, Brake Shoe		250000—	22
A676	Key, Woodruff, in Brake Cross Shaft (1/4"x1")		250000—	22
A1363R	Carrier, Brake Shoe		250000—	22
A1364	Screw, Brake Adjusting		250000—	22
A1365	Shaft, Brake Cam		250000—	22
A1366	Pin, Brake Adjusting		250000—	22
A1368	Facing, Brake		250000—	22
A1369R	Bracket, Brake Shaft, R. H.		250000—	22
A1371R	Lever, Brake Cross Shaft		250000—	22
A1372	Shaft, Brake Cross		250000—	22
A1373R	Lever, Brake, Hand		250000—	22
A1374	Rod, Hand Lever Pawl		250000—	22
A1375	Latch Plate, Brake		250000—	22

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
WHEEL BRAKES—AI ONLY—Continued				
A1376	Lever, Brake Cam.....		250000—	22
A1377	Link, Brake Control.....		250000—	22
AA1043	Brake Shoe with Facing.....		250000—	22
AA1046	Bracket, Left Brake Shaft with Latch Plate.....		250000—	22
B178	Pin, Brake Control Link.....		250000—	22
D2594	Roller, Brake Shoe.....		250000—	22
D2595	Pin, Brake Shoe Roller.....		250000—	22
D2596	Cam, Brake.....		250000—	22
D2606	Pawl, Hand Lever.....		250000—	22
D2608	Spring, Hand Lever Pawl Rod.....		250000—	22
D2609	Button, Hand Lever Pawl Rod.....		250000—	22
FRONT AXLE AND FRONT END SUPPORT				
A81R	Nut, Front Wheel Knuckle (A, AI, AO, AR).....	410000—	250000—	25
A876	Bushing, Front Axle Pivot Pin (AW only).....	410000—		23
A877	Bushing, Knuckle Pin (4 used) (AW only).....	410000—		23
A880	Pin, Front Axle Pivot, Front (AW only).....	410000—		23
A881	Pin, Front Axle Pivot, Rear (AW only).....	410000—		23
A882	Bushing, Front Axle Pivot Pin, Rear (AW only).....	410000—		23
A887	U-Bolt, Front Axle (5/8") (AW only).....	410000—		23
A890	Washer, Front Wheel Knuckle Thrust (AW only).....	410000—		23
A950R	Support, Front End (AR and AO only).....		250000—	24
A952R	Axle, Front.....		250000—	23
A955	Pin, Front Axle Pivot.....		250000—	23
A1101	Bolt, Front Axle Lock (1"x7-1/8") (AW only).....	410000—		23
A1297R	Eyebolt, Front End Support (AR and AO only).....		252644—	24
A1300R	Support, Front End (AI only).....		250000—	24
AA296	Support, Front End (A only).....	410000—		24
AA569	Radius Rods with Pivot (AR and AO only).....		250000—	23
AA612	Knuckle with Bushings and Studs.....		250000—	23
AA631	Support, Front End (AN and AW).....	410000—		24
AA633	Pivot Bracket with Bushing, Front Axle (AW only).....	410000—		23
AA648	Knuckle with Spindle (AW only).....	410000—		23
AA729	Housing with Pivot Pin, Front Axle (AW only).....	410000—		23
AA730	Knee with Bushing and Pin, Front Axle (AW only).....	410000—		23
AA970	Radius Rods with Pivot (AI only).....		250000—	23
AB411	Axle with Bearing Spacer, Front (AN only).....	410000—		23
B112	Nut, Front Axle Knuckle Spindle (AW only).....	410000—		23
B547	Spacer, Front Wheel Bearing (AN only).....	410000—		23
B548	Nut, Front Axle Bearing Adjusting (AN only).....	410000—		23
B549	Lock Plate, Front Axle Nut (AN only).....	410000—		23
B550	Cap Screw, Front Axle Lock Plate, Special Dog Point (3/8"x1-1/2") (AN only).....	410000—		23
B551	Nut, Front Axle (AN only).....	410000—		23
B817	Pin, Front Axle Pivot Pin to Front End Support (Drilled).....		252250—	23
D186	Pin, Thrust Washer, Anchor (AW only).....	410000—		23
D486R	Bushing, Radius Rod Pivot.....		250000—	23
D843	Stud, Radius Rod Pivot (7/8"x5-1/8").....		250000—	23
D844	Washer, Radius Rod Pivot.....		250000—	23
D1250	Washer, Knuckle Thrust (4 used).....		250000—	23
D1701	Pin, Spindle.....		250000—	23
D1881	Cap, Knuckle Dust (4 used).....		250000—	23
D1888	Bushing, Front Wheel Knuckle (4 used).....		250000—	23
D1969	Pin, Front Axle Pivot Pin to Front End Support.....		250000—252249	23
JD7759	Alemite Zerk Fitting No. 1610, in Front Axle and Knuckles (5 used).....		250000—	23
JD7760	Alemite Zerk Fitting No. 1612, in Radius Rod Pivot.....		250000—	23
FRONT WHEELS AND FRONT WHEEL EQUIPMENT				
A215	Band, Front Wheel Guide (1-1/2" High) (A and AW only).....	410000—		26
A777	Band, Front Wheel Guide (2" High) (A and AW only).....	410000—		26
A1132	Band, Front Wheel Guide (Half) (1-1/2" High) (2 used per Wheel) (AN only).....	410000—		26
A1235R	Hub, Front Wheel (Part of AA847) (AN only).....	420660—		25
A1236R	Flange, Front Wheel (Part of AA847) (AN only).....	420660—		25
AA663	Felt Washer, Front Wheel (A, AW, AR, AO and AI)...	410000—	250000—	25

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
	FRONT WHEELS AND FRONT WHEEL EQUIPMENT—Continued			
AA787	Wheel, Front, with Bearing Cups (AN only).....	410000—	25
AA847	Wheel, Front, with Bearing Cups, for 7.50x10 or 9.00x10 Low Pressure Rubber Tires (AN only).....	410000—	25
AB474	Washer, Front Wheel, Felt (AN only).....	410000—	25
AC119	Hub Cap with Zerk Fitting.....	410000—	250000—	25
AC513	Hub, C391R, with Bearing Races (A only).....	410000—	25
AC847	Front Wheel, C334R, with Bolts (A only).....	410000—	25
AC885	Wheel, Front, with Bearing Cups, less Hub Cap (A and AW only).....	410000—	25
AC1062	Wheel, Front, with Bearing Cups and Hub Cap, for 6.00x16 High Pressure Rubber Tires and Low Pressure Rubber Tires.....	250000—	25
AC1088	Wheel, Front, with Bearing Cups, for 5.50x16 or 5.25x16 Low Pressure Rubber Tires (A and AW only).....	410000—	25
AD900	Front Wheel with Hub Cap and Bearing Cups.....	250000—	25
B89	Retainer, Front Wheel Felt (AN only).....	410000—	25
C677	Gasket, Front Wheel Hub Cap (A, AW, AR, AO and AI).....	410000—	250000—	25
C1732	Band, Front Wheel Guide (2-1/2" High) (A and AW only).....	410000—	26
D582	Rim, Front Wheel Extension (5" Wide).....	250000—	26
D583	Clamp, Front Wheel Extension Rim to Wheel.....	250000—	26
D584R	Washer, Front Wheel Extension Rim Clamp.....	250000—	26
D635	Felt Retainer, Front Wheel (A, AW, AR, AO and AI).....	410000—	250000—	25
D849	Band, Front Wheel Guide, (Half) for Listed Corn (2 used per Wheel).....	250000—	26
D1050	Band, Front Wheel Guide, (Half) (3-1/2" High) for Listed Corn (2 used per Wheel).....	250000—	26
D1524	Guide Band, Front Wheel, 2-1/2" High.....	250000—	26
D1551	Clamp, Front Wheel Weight.....	250000—	26
D2184	Hook Bolt without Nut, Front Wheel Weight (3/4") (A and AW).....	410000—	26
D2186	Washer, Hook Bolt (2" Outside Diameter, 25/32" Inside Diameter).....	410000—	26
JD7216	Cone with Rollers, Front Wheel Outside Bearing.....	410000—	250000—	25
JD7222	Cone with Rollers, Front Wheel R. H. and L. H. Bearings (AN only).....	410000—	25
JD7224	Cone with Rollers, Front Wheel Inside Bearing.....	410000—	250000—	25
JD7266	Cup, Front Wheel R. H. and L. H. Bearings (AN).....	410000—	25
JD7266	Cup, Front Wheel Outside Bearing.....	410000—	250000—	25
JD7270	Cup, Front Wheel Inside Bearing.....	410000—	250000—	25
JD7759	Alemite Zerk Fitting No. 1610, Front Wheels.....	410000—	250000—	25
	PEDESTAL			
A56R	Quill, Steering Worm (A and AN only).....	410000—	27
A257	Cover, Steering Gear Housing.....	410000—	27
A275	Retainer, Steering Shaft Cork.....	410000—	27
A283	Washer, Spindle, Lower (Steel).....	410000—	27
A288	Gasket, Steering Worm Quill, Thick.....	410000—	27
A289	Gasket, Steering Worm Quill, Thin.....	410000—	27
A360	Spring, Steering Shaft Oil Seal.....	410000—	27
A377	Snap Ring, Steering Worm Quill.....	410000—	27
A394	Cork Washer, Steering Shaft Worm Seal.....	410000—	27
A396	Packing, Spindle Adjusting Bushing.....	410000—	27
A435	Gasket, Steering Gear Housing Cover.....	410000—	27
A490	Shim, Steering Spindle, Upper.....	410000—	27
A491R	Bushing, Steering Spindle Eccentric.....	410000—	27
A776	Stop Pin, Steering Sector.....	411583—	27
A875	Stop, Steering Sector (AW only).....	410000—	27
A877	Bushing, Pedestal Lower (1 used) (AW only).....	410000—	27
A1051R	Quill, Steering Worm (AW only).....	410000—	27
A1052	Gasket, Steering Worm Quill.....	410000—	27
A1129	Washer, Spindle, Lower (Steel) (AN only).....	410000—	27
A1130	Retainer, Spindle Lower Cork (AN only).....	410000—	27
A1131	Washer, Spindle Lower (Cork) (AN only).....	410000—	27
AA381	Pedestal, A489R, with Stud and Stop Pin.....	410000—	27
AA632	Pedestal, A1047R, with Bushing, Stop Pin, and Bearing Cups (AW only).....	410000—	27
AA755	Yoke and Spindle, Front Wheel (AN only).....	410000—	28

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
PEDESTAL—Continued				
AA756	Pedestal, A1128R, with Stop Pin (AN only).....	410000—		27
B32	Packing, Steering Shaft.....	410000—		27
B33	Nut, Steering Shaft Packing.....	410000—		27
C2271	Stud, Pedestal Support.....	410000—		27
C2325	Washer, Spindle Lower (Cork).....	410000—		27
C2326	Cap, Spindle (Lower).....	410000—		27
C2327	Gasket, Spindle Lower Cap.....	410000—		27
JD7663	Bearing, Steering Spindle Lower.....	410000—		27
JD7679	Bearing, Steering Spindle Lower (AN only).....	410000—		27
JD7759	Zerk Fitting, No. 1610, Upper and Lower Pedestal Bear-	410000—		27
K2525	ings Pipe Plug, Steering Housing Drain.....	410000—		27
STEERING PARTS				
A59R	Bracket, Steering Shaft Bearing.....	410000—413398		4
A110	Sector, Steering.....	410000—		28
A133	Washer, Steering Gear Arm (AW only).....	410000—		28
A133	Washer, Steering Sector.....	410000—		28
A301	Bushing, Steering Shaft Rear Bearing.....	410000—		4
A389	Support, Steering Shaft, Rear.....	410000—413398		4
A891	Arm, Steering (2 used) (AW only).....	410000—		28
A892	Rod, Drag Link (AW only).....	410000—		28
A893	Clamp Half, Drag Link (8 used) (AW only).....	410000—		28
A934	Tube, Vertical Steering Shaft.....		250000—	28
A936	Bushing, Vertical Steering Shaft, Lower.....		250000—	28
A937R	Housing, Steering Gear.....		250000—	28
A938	Shaft, Steering Gear, Vertical.....		250000—	28
A939	Gear, Steering Worm.....		250000—	28
A940	Arm, Steering Gear.....		250000—	28
A943	Support, Steering Shaft.....		250000—	4
A946R	Bracket, Steering Shaft Bearing.....		250000—	4
A956	Tie Rod.....		250000—	28
A1048	Steering Spindle (AW only).....	410000—		28
A1049	Arm, Steering Gear, Pedestal (AW only).....	410000—		28
AA248	Steering Shaft and Worm.....	410000—		28
AA249	Bearing, A57R, with Bushing, Steering Shaft, Rear.....	410000—		4
AA295	Double Knuckle with Spindle.....	410000—		28
AA380	Wheel, Steering.....	410000—	250000—	28
AA567	Steering Shaft and Worm.....		250000—	28
AA568	Drag Link, Complete.....		250000—	28
AA971	Drag Link, Complete (AI only).....		250000—	28
AB214	Bearing, B36R, with Bushing, Steering Shaft, Upper.....		250000—	4
AC352	Cover, Drag Link, Dust (AW only).....	410000—		28
B37	Bushing, Steering Shaft, Upper Bearing.....		250000—	4
B111	Washer, Steering Arm (BW only).....	410000—		28
B389	Support, Steering Shaft, Rear.....	413399—		4
B392R	Bracket, Steering Shaft Bearing.....	413399—		4
C838	Ball Stud Bearings, Drag Link and Tie Rod.....		250000—	28
C840	Screw Plug, Drag Link and Tie Rod.....		250000—	28
C977	Screw, Steering Gear Vertical Shaft, Adjusting.....		250000—	28
C1109	End, Tie Rod.....		250000—	28
C1220	Dowel Pin, Steering Gear Housing.....		250000—	28
C1231	Gasket, Steering Worm Housing (Thick).....		250000—	28
C1242	Gasket, Steering Worm Housing (Thin).....		250000—	28
D156	Bolt, Taper, Steering Knuckle Pivot Pin.....		250000—	23
D342	Key (Woodruff) in Steering Shaft to Steering Wheel.....	410000—	250000—	28
D467	Washer, Steering Arm Shim (AW only).....	410000—		28
D1673R	Arm, Steering, R. H.....		250000—	28
D1674R	Arm, Steering, L. H.....		250000—	28
D1766R	Nut, Steering Worm, Adjusting.....		250000—	28
D1768	Washer, Steering Worm Adjusting Nut, Oil Seal (Cork) (2 used).....		250000—	28
D1769R	Housing, Steering Worm.....		250000—	28
D1771	Nut, Steering Wheel to Shaft.....	410000—	250000—	28
D1898	Stud, Steering Arm (4 used).....		250000—	23
JD7205	Retainer with Rollers, Steering Shaft Worm.....	410000—	250000—	28
JD7253	Cup, Bearing, Steering Shaft Worm.....	410000—	250000—	28
JD7759	Alemite Zerk Fitting, No. 1610, Steering Worm Housing and Vertical Steering Shaft Lower Bushing.....		250000—	28

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
STEERING PARTS—Continued				
JD7759	Alemite Zerk Fitting No. 1610, in Drag Link and Tie Rod (4 used).....		250000—	28
294R	Stud, Steering Housing to Transmission Case (1/2"x 1-11/16") (2 used).....		250000—	28
DRAWBAR				
A9R	Roller, Drawbar.....	410000—414564		29
A211	Swivel, Drawbar.....	410000—		29
A212	Support, Drawbar Rear.....	410000—	250000—	29
A216	Support, Drawbar, R. H.....	410000—		29
A217	Support, Drawbar, L. H.....	410000—		29
A334	Nut, Drawbar Clevis (Special).....	410000—	250000—	29
A505	Support, Drawbar.....	410000—414564		29
A506	End, Drawbar.....	410000—		29
A507	Pin, Drawbar Roller.....	410000—	250000—	29
A850R	Roller, Drawbar.....	414565—	250000—	29
A1020	End, Drawbar.....		250000—	29
A1286	Swivel, Drawbar.....	432497—		29
A1307R	Clevis, Drawbar (AI only).....		250000—	29
AA354	Swinging Drawbar Assembly.....	410000—432496		29
AA605	Swinging Drawbar Assembly.....		250000—	29
AA607	Support, Drawbar, with Brake Lever Pivot.....		250000—	29
AA610	Brake Lever, Support with Pivot.....		250000—	29
AA956	Swinging Drawbar Assembly.....	432497—		29
AA973	Support, Drawbar (AI only).....		250000—	29
D349	Spacer, Drawbar Support.....	410000—	250000—	29
D2545	Pin, Drawbar Clevis (1"x4" Drilled) (AI only).....		250000—	29
SEAT				
A60R	Body, Seat Support.....	410000—		29
A222	Channel, Seat Support.....	410000—		29
A329	Bolt, Seat Spring (8" Long).....	410000—412100		29
A333	Nut, Seat Spring Bolt (Special).....	410000—	250000—	29
A618	Spring, Seat.....	412100—	250000—	29
A619	Bolt, Seat Spring (9" Long).....	412100—	250000—	29
A928	Channel, Seat Support.....		250000—	29
A929R	Body, Seat Support.....		250000—	29
A1316	Spacer, Seat Bolt (AI only).....		250000—	30
AA379	Spring with Bolt, Seat.....	410000—412100		29
AA974	Support, Seat, Complete (AI only).....		250000—	30
AD1298	Frame, Seat, Trailer Patrol (AI only).....		250000—	30
AD1299	Cushion, Seat, Trailer Patrol (AI only).....		250000—	30
C1980	Pin, Channel Seat Support.....	410000—	250000—	29
C1982R	Washer, Seat Spring.....	410000—	250000—	29
C1985	Spacer, Seat Clamp.....	410000—	250000—	29
D1796	Seat.....	410000—	250000—	29
D1797	Nut, Seat Clamp.....	410000—	250000—	29
K2019	Stud, Seat Support Body to Rear Axle Housing.....	410000—		29
PLATFORM				
A999	Platform.....		250000—252691	31
A1000	Support, Platform, R. H.....		250000—252198	31
A1001	Support, Platform, L. H.....		250000—252198	31
A1002	Cross Angle, Platform (65" Long).....		250000—252198	31
A1258	Support, Platform, R. H.....		252199—252691	31
A1259	Support, Platform, L. H.....		252199—252691	31
A1260	Cross Angle, Platform (63-3/4" Long).....		252199—252691	31
A1326	Platform (AI only).....		250000—	30
A1327	Brace, Platform, Rear (AI only).....		250000—	30
A1341	Platform (AR and AO only).....		252692—	31
A1342	Cross Angle, Platform (63-3/4" Long).....		252692—	30
A1343	Support, Platform, R. H.....		252692—	30
A1344	Support, Platform, L. H.....		252692—	30
AA318	Platform with Brake Latch Supports.....	410000—		31
AA319	Support, Brake Latch.....	410000—		31
AA598	Platform with Supports and Cross Angles.....		250000—252198	31
AA905	Platform with Supports and Cross Angles.....		252199—252691	31
AA1025	Platform with Supports and Cross Angles.....		252692—	31
AA1032	Platform with Supports and Cross Angles (AI only).....		250000—	30
C2182	Latch, Brake.....	410000—		22

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
FENDERS				
A792R	Pedestal, Fender, R. H. and L. H.	410130-		32
A963	Dust Shield, L. H.		250000-252691	33
A968	Dust Shield Extension, R. H.		250000-	33
A969	Dust Guard, Brake, L. H.		250000-	33
A996	Brace, Fender, Front, R. H.		250000-	32
A997	Brace, Fender, Front, L. H.		250000-	32
A1057	Dust Shield Extension, Brake, L. H.		250000-	33
A1078	Support, R. H. Citrus Fender, Front		250000-	33
A1079	Plate, R. H. Citrus Fender, Front Support		250000-	33
A1080	Extension, R. H. Citrus Fender, Front Support		250000-	33
A1081	Support, L. H. Citrus Fender, Front		250000-	33
A1359	Dust Shield, L. H.		252692-	33
AA467	Fender, Complete, R. H.	410130-		32
AA468	Fender, Complete, L. H.	410130-		32
AA591	Fender, R. H.		250000-252198	32
AA592	Fender, L. H.		250000-252198	32
AA595	Dust Shield and Fender Reinforcement, R. H.		250000-	33
AA596	Guard, Pulley		250000-	33
AA692	Fender, Citrus Grove, Complete, R. H.		250000-252198	33
AA693	Fender, Citrus Grove, Complete, L. H.		250000-252198	33
AA901	Fender, R. H.		252199-252691	32
AA902	Fender, L. H.		252199-252691	32
AA907	Fender, Citrus Grove, Complete, R. H.		252199-252691	33
AA908	Fender, Citrus Grove, Complete, L. H.		252199-252691	33
AA987	Dust Guard, Brake, with Flange (AI only)		250000-	33
AA1021	Fender, R. H.		252692-	32
AA1022	Fender, L. H.		252692-	32
AA1027	Fender, Citrus Grove, Complete, R. H.		252692-	33
AA1028	Fender, Citrus Grove, Complete, L. H.		252692-	33
AA1034	Fender, R. H. (AI only)		250000-	32
AA1035	Fender, L. H. (AI only)		250000-	32
MAGNETO				
A43	Flange, Magneto Drive	410000-424024	250000-251485	3
A470	Clamp, Spark Plug Cable	410000-	250000-	34
A471	Clip, Spark Plug Cable	410000-	250000-	34
A500	Gasket, Magneto to Governor Case	410000-	250000-	34
A1134	Insulator, Spark Plug and Wire Terminal (Rubber)	410000-		34
AA201	Magneto	410000-424024	250000-251485	34
AA477	Cable, Spark Plug, Complete, R. H.	410000-424024	250000-251485	34
AA478	Cable, Spark Plug, Complete, L. H.	410000-	250000-	34
AA858	Cable, Spark Plug, Complete, R. H.	424025-	251486-	34
AA1084	Insulator, Spark Plug, Porcelain (For AC600, No. 2 Plug only)			
AA1129	Shield, Spark Plug	414810-438176		
AA1130	Shield and Cable Conduit, Spark Plug	438177-		34
AB336	Conduit, Spark Plug Cable	424025-	251486-	34
AB706	Magneto	424025-	251486-	34
AC600	Spark Plug, No. 2	410000-	250000-	34
B281	Flange, Magneto Drive	424025-	251486-	3
B465R	Clamp, Spark Plug Cable Conduit	424025-	251486-	34
C1300	Safety Nipple, Spark Plug Wire (Rubber)	410000-	250000-	34
C2331	Insulator, Spark Plug, Porcelain (For AC600, C4 and 3X Plugs only)			34
D465	Gasket, Spark Plug	410000-	250000-	34
629R	Washer, Magneto to Governor Case	410000-	250000-	34

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
MAGNETO PARTS (For AA201 Magneto for Tractors 410000-424024) 250000-251485)			
A692	Insulating Strip, Distributor Bearing.....	509-	35
A693	Cover, Frame Top.....	509-	35
A694	Gasket, Frame Top Cover.....	509-	35
A695	Gasket, Brush Holder.....	509-	35
A698	Nut, Primary Lead Wire, Cadmium Plated.....	509-	35
A698	Nut, Stationary Contact Screw.....	509-	35
A699	Screw, Breaker Bar Clip.....	509-726	35
A700	Snap Ring, Distributor Shaft.....	509-	35
A701	Screw, Bridge Clamp, Cadmium Plated.....	509-	35
A702	Cork Washer, Distributor Bearing Oil Seal.....	509-	35
A702	Cork Washer, Rotor Shaft Bearing.....	509-	35
A703	Retainer, Distributor Bearing Oil Seal Washer.....	509-	35
A704	Washer, Flat, Distributor Bearing.....	509-	35
A705	Screw, Breaker Bar Clip.....	727-	35
A705	Screw, Distributor Rotor.....	509-	35
A706	Snap Ring, Distributor Cup.....	509-	35
A707	Spacer, Distributor Bearing Cup.....	509-	35
A708	Lock Nut, Stationary Contact Screw and Point.....	509-	35
A709	Screw, Stationary Contact Support.....	509-	35
A710	Support, Stationary Contact.....	509-	35
A711	Rivet, Stationary Contact Support.....	509-3481	35
A712	Insulator, Stationary Contact Support.....	509-	35
A713	Insulator, Stationary Contact Support Rivet.....	509-3481	35
A714	Insulator, Stationary Contact Support Screw.....	509-3481	35
A715	Pin, Breaker Bar Fulcrum.....	509-	35
A716	Insulating Strip, Rotor Bearing.....	509-	35
A717	Insulating Washer, Rotor Bearing.....	509-	35
A718	Terminal, Lead Wire.....	509-	35
A719	Shell, Impulse Coupling.....	509-	35
A720	Screw, Condenser, Cadmium Plated.....	509-	35
A721	Retainer, Rotor Shaft Bearing, Cork Washer.....	509-	35
A722	Gear, Rotor.....	509-	35
A723	Key, Woodruff, Rotor Gear Drive.....	509-725	35
A724	Oil Seal, Frame, Cork.....	509-	35
A765	Lock Washer, Breaker Bar Clip Screw.....	509-726	35
A766	Lock Washer, Breaker Bar Clip Screw.....	509-	35
A766	Lock Washer, Stationary Contact Support Screw.....	509-	35
A766	Lock Washer, Primary Lead Nut.....	509-	35
A766	Lock Washer, Distributor Rotor Screw, No. 8.....	509-	35
A766	Lock Washer, Cadmium Plated, Condenser Screw.....	509-	35
A767	Lock Washer, Cadmium Plated, Frame Screws.....	509-	35
A767	Lock Washer, Cadmium Plated, Brush Holder Screws.....	509-	35
A768	Lock Washer, Cadmium Plated, Bridge Clamp Screw.....	509-	35
A768	Lock Washer, Cadmium Plated, End Cap Screw.....	509-	35
A769	Screw, End Cap, Cadmium Plated.....	509-	35
A770	Gasket, End Cap.....	509-	35
A894	Pin, Rotor Gear Drive.....	726-	35
A1046	Rivet, Impulse Pawl.....	509-	35
A1102	Rivet, Stationary Contact Support.....	3482-	35
A1103	Insulator, Stationary Contact Support Rivet.....	3482-	35
A1104	Insulator, Stationary Contact Support Screw.....	3482-	35
AA414	Brush Holder with Screws (less Brush).....	509-	35
AA415	Distributor Brush with Spring.....	509-	35
AA415	Collector Brush with Spring.....	509-	35
AA416	Bridge Clamp with Rivet.....	509-	35
AA417	Coil, Complete.....	509-	35
AA418	Breaker Bar Assembly with Contact Point.....	509-	35
AA419	Bearing, Distributor.....	509-	35
AA419	Bearing, Rotor Shaft.....	509-	35
AA421	Distributor Rotor, Complete.....	509-	35
AA422	Distributor Shaft with Gear.....	509-	35
AA423	Screw, Stationary Contact with Point and Nut.....	509-	35
AA424	End Cap Assembly.....	509-	35
AA425	Condenser, with Lead Wire.....	509-	35
AA426	Rotor with Gear, less Bearings.....	509-	35

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
MAGNETO PARTS—Continued (For AA201 Magneto)			
AA427	Frame, Complete, with Lead Wire.....	509—	35
AA428	Primary Lead Wire with Terminals.....	509—	35
AA429	Impulse Drive Members with Pawls.....	509—	35
B507	Screw, Frame Cover.....	509—	35
B510	Screw, Brush Holder, No. 10—24, NC-2x1/2".....	509—	35
B518	Holder, Oil Wick.....	5991—	35
B519	Wick, Oil.....	5991—	35
B520	Lock Washer, Cam Wick Holder.....	5991—	35
C1330	Lock Wire, Impulse Nut.....	509—	35
C1331	Nut, Impulse Coupling.....	509—	35
C1333	Spring, Impulse Coupling.....	509—	35
C1334	Pawl, Impulse Coupling.....	509—	35
C1335	Woodruff Key, Impulse Coupling.....	509—	35
C1336	Screw, Impulse Stop.....	509—	35
(For AB706 Magneto for Tractors 424025— 251486—)			
A692	Insulating Strip, Distributor Bearing.....	56577—	35
A695	Gasket, Cork, Brush Holder.....	56577—	35
A698	Nut, Hex., Primary Lead, Cadmium Plated.....	56577—	35
A698	Nut, Hex., Stationary Contact Screw.....	56577—	35
A700	Snap Ring, Distributor Shaft.....	56577—	35
A701	Screw, Bridge Clamp.....	56577—	35
A702	Cork Washer, Distributor Bearing Oil Seal.....	56577—	35
A702	Cork Washer, Rotor Shaft.....	56577—	35
A703	Retainer, Distributor Bearing Oil Seal Washer.....	56577—	35
A704	Washer, Flat, Distributor Bearing.....	56577—	35
A705	Screw, Distributor Rotor.....	56577—	35
A705	Screw, Breaker Bar Clip.....	56577—	35
A706	Snap Ring, Distributor Cup.....	56577—	35
A707	Spacer, Distributor Bearing Cup.....	56577—	35
A708	Lock Nut, Stationary Contact Screw and Point.....	56577—	35
A709	Screw, Stationary Contact Support.....	56577—	35
A710	Support, Stationary Contact.....	56577—	35
A712	Insulator, Stationary Contact Support.....	56577—	35
A715	Pin, Breaker Bar Fulcrum.....	56577—	35
A716	Insulating Strip, Rotor Bearing.....	56577—	35
A717	Insulating Washer, Rotor Bearing.....	56577—	35
A718	Terminal Connection, Primary Lead Wire.....	56577—	35
A721	Retainer, Rotor Shaft Bearing Cork Washer.....	56577—	35
A722	Gear, Rotor.....	56577—	35
A723	Key, Woodruff, Distributor Shaft.....	56577—	35
A766	Lock Washer, Stationary Contact Support Screw, Cadmium Plated.....	56577—	35
A766	Lock Washer, Cadmium Plated, Breaker Bar Clip Screw.....	56577—	35
A766	Lock Washer, Cadmium Plated, Lead Wire Nut.....	56577—	35
A766	Lock Washer, Cadmium Plated, Distributor Rotor Screws.....	56577—	35
A766	Lock Washer, Cadmium Plated, Condenser Screws.....	56577—	35
A767	Lock Washer, Cadmium Plated, Frame Cover Screws.....	56577—	35
A767	Lock Washer, Cadmium Plated, Brush Holder Screws.....	56577—	35
A768	Lock Washer, Cadmium Plated, Bridge Clamp Screw.....	56577—	35
A768	Lock Washer, Cadmium Plated, End Cap Screw.....	56577—	35
A769	Screw, End Cap.....	56577—	35
A770	Gasket, End Cap.....	56577—	35
A894	Pin, Rotor Gear.....	56577—	35
A1102	Rivet, Stationary Contact Support.....	56577—	35
A1103	Insulator, Stationary Contact Support Rivet.....	56577—	35
A1104	Insulator, Stationary Contact Support Screw.....	56577—	35
AA414	Brush Holder with Screws (less Brush).....	56577—	35
AA415	Brush, Distributor, with Spring.....	56577—	35
AA416	Bridge Clamp with Rivet.....	56577—	35
AA417	Coil, Complete.....	56577—	35
AA418	Breaker Bar with Contact Point.....	56577—	35
AA419	Bearing, Distributor.....	56577—	35
AA419	Bearing, Rotor Shaft.....	56577—	35
AA422	Distributor Shaft with Gear.....	56577—	35
AA423	Screw, Stationary Contact, with Point and Nut.....	56577—	35
AA424	End Cap Assembly.....	56577—	35
AA425	Condenser, with Lead Wire.....	56577—	35

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
MAGNETO PARTS—Continued (For AB706 Magneto)			
AA428	Lead Wire, Primary, with Terminals.....	56577—	35
AB379	Brush, Collector, with Spring.....	56577—	35
AB380	Distributor Rotor, Complete.....	56577—	35
AB383	Rotor with Gear (less Bearings).....	56577—	35
AB384	Frame, with Lead Wire.....	56577—	35
AB386	Shell, Impulse Coupling with Spring Clip.....	56577—	35
AB707	Impulse Drive Member with Pawls.....	56577—	35
B507	Screw, Frame Cover.....	56577—	35
B508	Cover, Frame Top.....	56577—	35
B509	Gasket, Frame Top Cover.....	56577—	35
B510	Screw, Brush Holder.....	56577—	35
B514	Screw, Condenser.....	56577—	35
B515	Oil Seal, Frame (Cork).....	56577—	35
B516	Nut, Impulse Coupling.....	56577—	35
B517	Spring, Impulse Coupling.....	56577—	35
B518	Holder, Oil Wick.....	56577—	35
B519	Oil Wick.....	56577—	35
B520	Lock Washer, Cam Wick Holder.....	56577—	35
B521	Spring Clip, Impulse Coupling.....	56577—	35
B522	Rivet, Impulse Coupling Spring Clip.....	56577—	35
B523	Shim, Copper, Rotor Bearing (.002", Thin).....	56577—	35
B524	Shim, Copper, Rotor Bearing (.004", Medium).....	56577—	35
B525	Shim, Copper, Rotor Bearing (.006", Thick).....	56577—	35
B594	Screw, Impulse Stop.....	56577—	35
B595	Rivet, Impulse Pawl.....	56577—	35
C1330	Lock Wire, Armature Shaft Nut.....	56577—	35
C1334	Pawl, Impulse Drive Member.....	56577—	35
C1335	Woodruff Key, Impulse Coupling.....	56577—	35

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
CARBURETOR				
A832	Idle Plug	410000—	250000—	36
AA200	Carburetor, Complete	410000—		36
AA219	Body, Carburetor	410000—425850		36
AA578	Throttle Lever Assembly		250000—	36
AA580	Carburetor, Complete		250000—	36
AA581	Body, Carburetor		250000—252405	36
AA743	Body and Bushing Assembly	425851—		36
AA744	Body, Carburetor, with Bushing		252406—	36
B449	Bowl, Casting	425851—	252406—	36
B450	Nut, Bowl Retaining	425851—	252406—	36
B457	Gasket, Bowl Retaining Nut	425851—	252406—	36
C2501	Float Valve and Seat Assembly	410000—	250000—	36
C2502	Shaft, Throttle	410000—	250000—	36
C2504	Bushing, Throttle Shaft, Upper	410000—	250000—	36
C2505	Bushing, Throttle Shaft, Lower	410000—425850	250000—252405	36
C2506	Throttle Lever Assembly	410000—		36
D392	Body, Solder Bushing, Fuel Line	410000—	250000—	36
D2530	Bushing, Throttle Shaft, Lower	425851—	252406—	36
18-O	Spring, Throttle Stop	410000—	250000—	36
P348	Choker Disk, Air Valve	410000—	250000—	36
S1121	Drain Cock	410000—	250000—	36
SI-18	Screws, Choker Disk	410000—	250000—	36
X2458	Load Needle	410000—	250000—	36
X2460	Choker Lever and Shaft Assembly	410000—	250000—	36
X2461	Idle Needle	410000—	250000—	36
X2462	Strainer, Complete	410000—	250000—	36
4W	Screw and Washer, Float	410000—	250000—	36
10W	Clamp Screw, Throttle Lever Adjusting Screw	410000—	250000—	36
17W	Screw, Throttle Lever	410000—	250000—	36
41W	Friction Ball, Needle Valve	410000—	250000—	36

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
CARBURETOR—Continued				
45W	Plug Screw for Drilled Holes.....	410000—	250000—	36
46W	Nut, Bowl Retaining	410000—425850	250000—252405	36
57W	Spring, Friction Ball.....	410000—	250000—	36
63W	Lock Washer, Choker Disk Screw.....	410000—	250000—	36
64W	Gasket, Bowl Nut.....	410000—425850	250000—252405	36
65W	Spring, Nozzle Retaining	410000—	250000—	36
67W	Stop Pin, Throttle Lever.....	410000—	250000—	36
68W	Spring, Choke Lever Friction.....	410000—	250000—	36
69W	Cork, Float.....	410000—	250000—	36
70W	Screws, Throttle Disk.....	410000—	250000—	36
71W	Adjusting Screw, Throttle Lever.....	410000—	250000—	36
72W	Washer, Choke Lever Friction Spring.....	410000—	250000—	36
73W	Gasket, Float Valve Seat.....	410000—	250000—	36
74W	Washer, Choke Friction.....	410000—	250000—	36
75W	Lever, Float.....	410000—	250000—	36
76W	Disk, Throttle.....	410000—	250000—	36
77W	Gasket, Strainer.....	410000—	250000—	36
78W	Gasket, Bowl.....	410000—	250000—	36
79W	Pipe Plug, Hex. Head.....	410000—	250000—	36
80W	Pipe Plug, Headless.....	410000—	250000—	36
81W	Lock Washer, Throttle Disk Screws.....	410000—	250000—	36
83W	Drilled Plug (7/32"-32).....	410000—	250000—	36
85W	Drilled Plug (1/4"-28).....	410000—	250000—	36
90W	Pin, Float Pivot.....	410000—	250000—	36
91W	Screw, Float Bearing.....	410000—	250000—	36
94W	Screw, Choke Friction Spring.....	410000—	250000—	36
95W	Nozzle.....	410000—	250000—	36
97W	Bowl, Casting.....	410000—425850	250000—252405	36
321R	Gasket, Carburetor to Manifold.....	410000—	250000—	36
AIR CLEANER				
A444	Hose, Air Cleaner Elbow to Carburetor.....	410000—	250000—	34
A447	Clamp, Air Cleaner to Carburetor Elbow Hose.....	410000—	250000—	34
A525R	Elbow, Carburetor Air Intake.....	410000—	250000—	34
A526R	Bracket, Vortex Cleaner.....	410000—	250000—	34
A527	Gasket, Vortex Cleaner.....	410000—	250000—	34
A688	Spring, Disk Retaining	410000—	250000—	34
A690	Washer, Cup Retaining Rod.....	410000—	250000—	34
A970	Plug, Air Cleaner Bracket.....	410000—	250000—	34
A971	Hose, Air Cleaner Elbow to Carburetor.....	410000—	250000—	34
AA361	Air Cleaner, Complete, Vortex.....	410000—	250000—	34
AA362	Stack, Air Cleaner Intake.....	410000—	250000—	34
AA392	Body, Assembly, Vortex Air Cleaner.....	410000—422553	250000—251377	34
AA393	Cup with Bottom Strap, Vortex Air Cleaner.....	410000—422553	250000—251377	34
AA394	Disk with Handle, Air Cleaner Cup.....	410000—	250000—	34
AA395	Retaining Rod with Washer and Nut.....	410000—422553	250000—251377	34
AA474	Stack, Air Cleaner Intake (15" High).....	410000—	250000—	34
AA579	Pipe and Elbow Inlet, Carburetor.....	410000—	250000—	34
AA789	Body Assembly, Vortex Air Cleaner.....	422554—	251378—	34
AA790	Retaining Rod with Washer and Nut.....	422554—	251378—	34
AA791	Cup with Bottom Strap, Vortex Air Cleaner.....	422554—	251378—	34
AA887	Stack, Air Cleaner Intake (Low).....	410000—	250000—	34
C1572	Wing Nut, Cup Retaining Bolt.....	410000—	250000—	34
D1084	Gasket, Elbow to Carburetor.....	410000—	250000—	34
629R	Washer, Air Stack to Air Cleaner Bracket Screws.....	410000—	250000—	34
TOOL BOX AND TOOLS				
A577	Socket Wrench for Spade Lug and Flywheel Bolt Nuts.....	410000—	250000—	37
AA348	Tool Box.....	410000—412517	250000—	37
AA459	Tool Box.....	412518—	250000—	37
AB689	Tool Box.....	410000—	250000—	37
C1591	Socket for Cylinder Head Nuts.....	410000—	250000—	37
D1083	Socket Wrench for Connecting Rod Bolt Nuts.....	410000—	250000—	37
JD7751	Grease Gun No. 6556.....	410000—	250000—	37
POWER SHAFT PARTS				
A175	Shaft, Power Shaft Sliding Gear Shifter.....	410000—	250000—	37
A551	Shifter, Power Shaft Sliding Gear.....	410000—	250000—	37
A552	Arm, Power Shaft Shifter.....	410000—	250000—	37

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
POWER SHAFT PARTS—Continued				
A554	Gear, Power Shaft Bevel (17 Teeth).....	410000—	250000—	37
A558	Bushing, Power Shaft Bevel Gear, Bronze.....	410000—	250000—	37
A559	Washer, Power Shaft Bevel Gear Thrust.....	410000—	250000—	37
A561	Washer, Power Shaft Bevel Gear Retaining.....	410000—	250000—	37
A562	Snap Ring, Power Shaft Bevel Gear.....	410000—	250000—	37
A564	Bushing, Power Shaft Drive Shaft.....	410000—	250000—	37
A565R	Cover, Power Shaft Bearing, R. H.....	410000—	250000—	37
A567	Gasket, Power Shaft Right Bearing Cover (Thin).....	410000—	250000—	37
A568	Gasket, Power Shaft Right Bearing Cover (Thick).....	410000—	250000—	37
A569	Lever, Power Shaft Shifter, Hand.....	410000—		37
A571	Shaft, Power.....	410000—	250000—	37
A572	Snap Ring, Power Shaft Rear End.....	410000—	250000—	37
A574	Gasket, Power Shaft Stuffing Box.....	410000—	250000—	37
A575	Packing, Power Shaft Rear End (3 used).....	410000—	250000—	37
A774R	Stuffing Box, Power Shaft, Rear End.....	410929—	250000—	37
A775R	Gland, Power Shaft Rear End Packing.....	410929—	250000—	37
A919	Lever, Power Shaft Shifter Hand.....		250000—	37
A1031	Gear, Power Shaft Sliding (21 Teeth).....	415082—	250000—	37
A1032	Pinion, Power Shaft Bevel Drive (17 Teeth).....	415082—	250000—	37
A1033	Shaft, Power Shaft Drive.....	415082—	250000—	37
A1112	Gear, Power Shaft Bevel (19 Teeth) (Underdrive) (AO and AR only).....		250000—	37
A1113	Shaft, Power Shaft Drive (Underdrive) (AO and AR only).....		250000—	37
A1114	Pinion, Power Shaft Bevel Drive (16 Teeth) (Under- drive) (AO and AR only).....		250000—	37
A1116	Shifter, Power Shaft (Underdrive) (AO and AR only).....		250000—	37
A1242	Guard, Power Shaft End.....	410000—	250000—	37
A1414	Shaft, Power Shaft Shifter (Underdrive) (AR and AO only).....		250000—	37
A1415	Gear, Power Shaft Sliding (13 Teeth) (Underdrive) (AO and AR only).....		250000—	37
AA452	Stuffing Box with Packing Gland, Power Shaft Rear End.....	410000—410928		37
AA625	Power Shaft Drive Shaft with Gear and Pinion.....	410000—415081		37
D377	Spring, Power Shaft Shifter Hand Lever.....	410000—	250000—	37
D993	Spring, Power Shaft Shifter Yoke.....	410000—	250000—	37
D1164	Woodruff Key, Power Shaft Drive Shaft Pinion.....	415082—	250000—	37
D1164	Key, Woodruff, Power Shaft Bevel Drive Pinion (Under- drive) (AO and AR only).....		250000—	37
JD7664	Bearing, Power Shaft, Rear.....	410000—	250000—	37
JD7664	Bearing, Power Shaft Drive Shaft R. H. Bearing.....	410000—	250000—	37
K2052	Lead Washer, on Cap Screws, Power Shaft Drive Shaft R. H. Bearing Cover.....	410000—	250000—	37
405R	Ball, Power Shaft Shifter.....	410000—	250000—	37

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
POWER LIFT PARTS			
A140	Valve, Relief.....	P.L. 100-	38
A147	Key Washer, in Power Lift Pedals.....	P.L. 1325-	38
A354	Spring, Cam Trip Lever.....	P.L. 30000-	38
A521	Gasket, Relief Valve Spring Nut (Copper).....	P.L. 30000-	38
A608	Washer, on Control Shaft.....	P.L. 30000-	38
A621	Bearing, Pump Shaft Oil Seal.....	P.L. 100-	38
A622R	Cylinder.....	P.L. 100-	39
A623	Gasket, Cylinder.....	P.L. 100-	39
A625R	Piston.....	P.L. 100-	39
A626	Cup, Piston (Leather).....	P.L. 100-	39
A627R	Retainer, Piston Cup.....	P.L. 100-	39
A628	Lock Plate, Piston Cup Retainer.....	P.L. 100-	39
A630	Pin, Piston.....	P.L. 100-	39
A631	Snap Ring, Piston Pin.....	P.L. 100-	39
A632	Shaft, Rock, L. H.....	P.L. 100-	38
A633	Crank Arm.....	P.L. 100-	38

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
POWER LIFT PARTS—Continued			
A635	Pin, Crank	P.L. 100-	39.
A637	Guide, Valve	P.L. 100-29999	38
A638	Valve, Check	P.L. 100-29999	38
A639	Spring, Valve	P.L. 100-29999	38
A640	Gasket, Check Valve Spring Plug (Copper Asbestos)	P.L. 100-	38
A641	Plug, Check Valve Spring	P.L. 100-29999	38
A642	Valve, By-Pass	P.L. 100-	38
A643	Shaft, Power Lift Control	P.L. 100-29999	38
A644	Washer, on Control Shaft	P.L. 100-29999	38
A645	Packing, Control Shaft	P.L. 100-29999	38
A646R	Lever, Control	P.L. 100-29999	38
A647	Pawl, Control Lever	P.L. 100-29999	38
A647	Pawl, Trip Lever	P.L. 100-29999	38
A648	Pin, Trip Lever Pawl	P.L. 100-29999	38
A648	Pin, Control Lever Pawl	P.L. 100-	38
A649R	Cam	P.L. 100-29999	38
A650	Lever, Trip	P.L. 100-29999	38
A653	Ratchet	P.L. 100-29999	38
A654	Spring, Trip Lever Pawl	P.L. 100-29999	38
A655	Spring, Trip Lever	P.L. 100-29999	38
A659	Spring, Relief Valve	P.L. 100-	38
A660R	Retainer, Relief Valve Spring	P.L. 100-29999	38
A661	Gasket, Valve Housing	P.L. 100-29999	38
A662R	Pedal, Power Lift	P.L. 100-1324	38
A663	Pin, Pedal	P.L. 100-1324	38
A664	Rod, Control	P.L. 100-	38
A665	Pin, Pump Follower Gear	P.L. 100-	39
A667	Cup, Oil Seal, Pump Shaft	P.L. 100-	38
A668	Packing, Pump Shaft Oil Seal	P.L. 100-	38
A669	Washer, Pump Shaft Oil Seal	P.L. 100-	38
A670	Spring, Pump Shaft Oil Seal	P.L. 100-	38
A671	Gear, Pump Drive	P.L. 1576-	39
A672	Gasket, Pump Body	P.L. 100-1575	39
A674	Stud, Pump Body to Housing	P.L. 100-	39
A676	Key (Woodruff) in Pump Drive Gear	P.L. 100-	39
A679	Spring, Control Lever, Pawl	P.L. 100-	38
A680	Key Washer, Control Lever	P.L. 100-	38
A731	Bushing, Pump Follower Gear	P.L. 100-	39
A800	Shaft, Pump Drive	P.L. 457-	38
A805	Bushing, Pump Drive Shaft	P.L. 457-	38
A816R	Body, Pump	P.L. 1576-	39
A817R	Cover, Pump	P.L. 1576-	39
A818	Dowel Pin, Pump Body (Upper)	P.L. 1576-	39
A819	Dowel Pin, Pump Body (Lower)	L.P. 1576-	39
A1427R	Pedal (Right)	P.L. 30000-	38
A1428R	Pedal (Left)	P.L. 30000-	38
A1429R	Cam	P.L. 30000-	38
A1431	Guide, Valve	P.L. 30000-	38
A1432	Trip Lever, Cam	P.L. 30000-	38
A1433	Roller, Cam Follower	P.L. 30000-	38
A1434	Pin, Cam Follower Roller	P.L. 30000-	38
A1435	Shaft, Trip Lever and Cam Follower	P.L. 30000-	38
A1436	Pawl, Control Lever	P.L. 30000-	38
A1437	Packing, Control Shaft (Cork)	P.L. 30000-	38
A1438	Shaft, Control	P.L. 30000-	38
A1439	Screw, Relief Valve Spring	P.L. 30000-	38
A1440	Valve, Check	P.L. 30000-	38
A1441	Plug, Check Valve Spring	P.L. 30000-	38
A1444	Spring, Rock Shaft Return	P.L. 30000-	38
A1445R	Bearing, Rock Shaft	P.L. 30000-	38
A1446	Valve, Throttle	P.L. 30000-	38
A1447	Gasket, Valve Housing	P.L. 30000-	38
A1449	Screw, Throttle Valve, Adjusting	P.L. 30000-	38
A1450	Spring, Pedal Return	P.L. 30000-	38
A1452	Stud, Valve Housing to Power Lift Housing	P.L. 30000-	39
A1453	Shield, Rock Shaft Return Spring	P.L. 30000-	38
AA401	Housing, A830R, with Oil Seal Bearing and A800 and AA480 Shafts	P.L. 100-456	38
AA402	Connecting Rod	P.L. 100-	39
AA404	Housing, Valve A636R, with Guide and Plug	P.L. 100-29999	38
AA408	Vent Plug	P.L. 100-29999	38

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
POWER LIFT PARTS—Continued			
AA432	Gear, Pump Follower with Bushing.....	P.L. 1576—	39
AA452	Stuffing Box with Packing Gland, Power Shaft Rear End.....	P.L. 100—	38
AA480	Shaft with Coupling, Power Lift Drive.....	P.L. 457—	38
AA488	Housing, A830, with Oil Seal Bearing and Bushing.....	P.L. 457-29999	38
AA498	Pump Body with Gears and Cover.....	P.L. 100-1575	39
AA1103	Housing, A1430R, Valve with Guide.....	P.L. 30000—	38
AA1104	Cam Follower Assembly.....	P.L. 30000—	38
AA1105	Lever, Control.....	P.L. 30000—	38
AA1108	Rock Shaft with Dowel Pin, R. H.....	P.L. 30000—	38
AA1111	Housing, Power Lift with Pump Shaft Bushing, Oil Seal Bearing, and Pump Follower Gear Pin.....	P.L. 30000—	38
B170	Spring, Control Shaft.....	P.L. 30000—	38
B268	Spring, Check Valve.....	P.L. 30000—	38
B268	Spring, Throttle Valve.....	P.L. 30000—	38
B365	Spring, Cam Follower.....	P.L. 30000—	38
B425	Washer, Throttle Valve Adjusting Screw (Copper) (2 used).....	P.L. 30000—	38
B427	Cap Nut, Throttle Valve Adjusting Screw.....	P.L. 30000—	38
B489	Shaft Pedal.....	P.L. 1325—	38
B490R	Pedal, R. H.....	P.L. 1325-29999	38
B491R	Pedal, L. H.....	P.L. 1325-29999	38
C1220	Dowel Pin, R. H. Rock Shaft.....	P.L. 30000—	38
C1224	Spring, Pedal.....	P.L. 100-29999	38
C1335	Key, Woodruff, Ratchet and Cam.....	P.L. 100-29999	38
D469	Welsh Plug, Valve Housing.....	P.L. 100-29999	38
D1969	Pin, Cam Trip.....	P.L. 30000—	38
E2142	Pipe Plug, Oil Level Test.....	P.L. 30000—	38
E2244	Pipe Plug, Oil Filler in Valve Housing.....	P.L. 30000—	38
E2244	Pipe Plug, Power Lift Housing Transmission Filler and Level.....	P.L. 1325-29999	38
E2272	Spring, Control Shaft.....	P.L. 100-29999	38
JD7759	Alemite Zerk Fitting No. 1610, on Rock Shaft Bearings.....	P.L. 100—	38
1450R	Pipe Plug, Oil Level.....	P.L. 100-29999	38
1452R	Drain Plug in Power Lift Housing.....	P.L. 100—	38

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
K. W. LIGHTING OUTFITS AA637, AA640 and AA642				
A1105	Bracket, Lamp, Front.....		250000—	39
A1219	Bracket, Lamp, Front.....	410000—		39
A1219	Bracket, Lamp, Rear.....		250000—	39
A1220	Bracket, Lamp, Rear.....	410000—		39
A1225	Cable Clip.....	410000—	250000—	39
A1226	Support, Strap, Ignition Wire.....	410000—414808		39
AA832	Lamp, Complete.....	410000—	250000—	39
AA833	Cable, Complete with Contacts.....	410000—414808		39
AA834	Plug, Single Contact.....	410000—	250000—	39
AA835	Plug, Double Contact.....	410000—	250000—	39
AA836	Cable, Complete with Contacts.....		250000—	39
AA837	Cable, Complete with Contacts.....	414809—		39
C1592	Nut, Lamp Supporting Bolt.....	410000—	250000—	39
D1108	Bulb, 27 Candle Power, Direct Current, 9 Volts.....	410000—	250000—	39
D2141	Moulding or Lens Retainer.....	410000—	250000—	39
D2142	Reflector, Complete.....	410000—	250000—	39
D2143	Wiring for Lamp, Complete.....	410000—	250000—	39
D2144	Lamp Body, Complete.....	410000—	250000—	39
D2145	Clip, Lens Holder.....	410000—	250000—	39
D2146	Gasket, Lens (Cork).....	410000—	250000—	39
D2147	Lens.....	410000—	250000—	39
D2148	Spring, Lens, Retaining.....	410000—	250000—	39
D2149	Screw, Moulding, or Lens Retainer.....	410000—	250000—	39
D2569	Washer, Lamp Support Bolt Bearing.....	410000—	250000—	39

REPAIRS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO, AI	
GENERATOR				
A767	Lock Washer, Cadmium Plated, Generator Cover Screws	410000-	250000-	40
A1200	Pin, Rotor Shaft (Taper)	410000-	250000-	40
A1201	Spring, Contact Plug Socket	410000-	250000-	40
A1202	Cover, Generator	410000-	250000-	40
A1203	Screws, Generator Cover, Fillister Head Steel Machine, Cadmium Plated	410000-	250000-	40
A1204	Spacer, Rotor	410000-	250000-	40
A1205	Housing, Bearing, Brass	410000-	250000-	40
A1206	Washer, Bearing Housing, 5/8" Inside Diameter	410000-	250000-	40
A1207	Felt Washer, Bearing Dust Cap, Pulley End, 3/32" Thick	410000-	250000-	40
A1208	Dust Cap, Bearing, Pulley End	410000-	250000-	40
A1209	Dust Cap, Bearing	410000-	250000-	40
A1210	Screws, Bearing Housing, Fillister Head Machine, Cadmium Plated, 1/4"-32x7/16"	410000-	250000-	40
A1211	Lock Washer on Bearing Housing Oiler, 1/4", Cadmium Plated	410000-	250000-	40
A1211	Lock Washer on Bearing Housing Screws, 1/4", Cadmium Plated	410000-	250000-	40
A1212	Bottom, Generator Body, Sheet Brass	410000-	250000-	40
A1213	Nut, Winding Side Spacer, 3/8", Brass	410000-	250000-	40
A1214	Oiler, Bearing Housing, 1/4", Hinged Lid	410000-	250000-	40
A1215	Packing, Cover, Short	410000-	250000-	40
A1216	Packing, Cover, Long	410000-	250000-	40
A1217	Screw, Generator Body to Bottom	410000-	250000-	40
A1218	Pulley, Generator	410000-414808		40
A1221	Bracket, Generator	410000-414808		40
A1222	Generator Base	410000-414808		40
A1223	Pivot, Generator Base (3/8"x3-11/16")	410000-414808		40
A1227	Brackets, Generator	414809-	250000-	40
A1228	Pulley, Generator	414809-	250000-	40
A1230	Belt, Generator (Vee Type)	414809-	250000-	40
A1231	Heat Shield, Generator	414809-	250000-	40
A1232	Strap, Generator Bracket Clamp	414809-		40
A1233	Support, Fan Shaft	414809-		40
A1234	Lock Washer, Drive Pulley Screw (5/16" Special)	410000-414809		40
AA825	Generator, less Pulley	410000-	250000-	40
AA826	Body, Generator, Complete	410000-	250000-	40
AA827	Rotor Shaft, Complete	410000-	250000-	40
AA828	Winding, Complete	410000-	250000-	40
AA829	Socket, Contact Plug with Wire	410000-	250000-	39
AA830	Wire, Contact Plug Socket	410000-	250000-	40
AA831	Magnet with Keeper	410000-	250000-	40
AA838	Belt, Complete, Fasteners and Pin	410000-414808		40
AA839	Fan Shaft Drive Pulley, Complete	414809-	250000-	40
AA862	Drive Pulley, Complete	410000-414808		40
C1570	Spring, Belt Tension	410000-414808		40
D1124	Bearing, Rotor Shaft	410000-	250000-	40
D1158	Key, Rotor Shaft, S.A.E. Woodruff	410000-	250000-	40
K3151	Washer, Spring Bolt (3/4" Outside Diameter, 21/64" Inside Diameter)	410000-414808		40
2364R	Rawhide Pin	410000-414808		40

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS					
1684R	A11R	Differential Bearing Quill to Case.....	1/2"x1-1/2"	3
1674R	A21R	Clutch Fork Bearing to Gear Cover.....	3/8"x1-3/4"	4
1674R	A27R	Oil Pump Cover to Oil Pump Body.....	3/8"x1-3/4"	4
A309	A28R	Left Main Bearing Cover to Left Main Bearing Housing.....	5/16"x1-3/4"	3
1667R	A28R	Left Main Bearing Cover to Left Main Bearing Hous- ing.....	5/16"x1"	2
1670R	A41R	In Left Governor Bearing Housing to Case.....	3/8"x1"	5
1683R	A45R	Governor Case to Case.....	1/2"x1-1/4"	5
1684R	A45R	Governor Case to Case.....	1/2"x1-1/2"	2
1671R	A46R	Oil Pump Strainer Elbow to Body.....	3/8"x1-1/4"	1
A313	A51R	Radiator Bottom Tank to Front End.....	5/8"x1-3/4"	2
D942	A51R	Radiator to Front End Support.....	5/8"x2-1/4"	2
1683R	A55R	Water Elbow to Radiator.....	1/2"x1-1/4"	2
1684R	A56R	Steering Worm Quill to Pedestal.....	1/2"x1-1/2"	4
A871	A58R	Throttle Lever Stop.....	5/16"x1-3/4"	2
A473	A77	Drive Wheel Sleeve to Wheel.....	7/8"x2-3/4"	6
D508	A216	Drawbar Supports to Rear Axle Housing.....	3/4"x1-1/2"	4
D508	A217	Drawbar Supports to Rear Axle Housing.....	3/4"x1-1/2"	4
1671R	A497	In Gear Shifter Shaft.....	3/8"x1-1/4"	1
C806	A515	Oil Filter Body to Head.....	5/16"x9/16"	3
1670R	A524R	Crank Case Cover to Case.....	3/8"x1"	8
1670R	A525R	Carburetor Intake Elbow to Carburetor.....	3/8"x1"	2
1683R	A526R	Air Cleaner Bracket to Radiator Top.....	1/2"x1-1/4"	4
A310	A548R	Sliding Gear Shaft Right Bearing Cover to Case (Drilled).....	7/16"x1-1/4"	2
1669R	A550	Sliding Gear Shaft and Countershaft Bearing Cover to Case.....	3/8"x3/4"	6
1676R	A556R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7
A311	A556R	First Reduction Gear Cover to Case.....	7/16"x4-1/2"	2
D459	A565	Power Shaft Right Bearing Cover to Case (Drilled)	3/8"x1"	2
1670R	A579R	Fan Shaft Rear Bearing to Governor Case.....	3/8"x1"	3
1670R	A584	Spring to Governor Arm.....	3/8"x1"	1
D474	A616R	In Cam Follower Guide Support.....	1/2"x1-3/4"	2
A624	A622	Power Lift Cylinder to Housing (Drilled).....	5/8"x1-3/4"	4
1667R	A627R	Piston Cup Retainer to Piston.....	5/16"x1"	2
A634	A633	In Power Lift Crank Arm (Drilled).....	7/16"x2"	2
1666R	A660R	Spring Retainer to Valve Housing.....	5/16"x3/4"	2
1670R	A774R	Power Shaft Stuffing Box to Cover.....	3/8"x1"	3
E2027	A792R	Fender to Pedestal.....	5/8"x3-1/4"	6
K2119	A816R	Hex. Head Cap Screw, Power Lift Pump Body to Housing.....	7/16"x2-1/2"	7
1670R	A842R	Fan Shaft Rear Bearing to Governor Case.....	3/8"x1"	3
1670R	A902R	Crank Case Cover to Case.....	3/8"x1"	7
1676R	A909R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7
A311	A909R	First Reduction Gear Cover to Case.....	7/16"x4-1/2"	2
1683R	A927	Fan Shaft Support to Front End.....	1/2"x1-1/4"	2
1683R	A931	Water Elbow to Radiator.....	1/2"x1-1/4"	2
A871	A944R	Speed Control Stop.....	5/16"x1-1/4"	2
B568	A950R	Front End Support to Cylinder Block.....	5/8"x3-3/4"	2
A951	A950R	Front End to Case.....	5/8"x2"	4
1682R	A963	Left Dust Shield to Transmission Case.....	1/2"x1"	2
D466	A989	Brake Housing Opening Cover to Case.....	1/2"x3/4"	4
1668R	A1050R	Oil Filter Cover to Head.....	5/16"x1-1/2"	3
E2027	A1084R	In Scraper Brackets.....	5/8"x3-3/4"	4
E2027	A1085R	In Scraper Brackets.....	5/8"x3-3/4"	4
1671R	A1150R	In Oil Pressure Adjusting Screw Clamp.....	3/8"x1-1/4"	1
C806	A1152	Oil Filter Body to Head.....	5/16"x9/16"	3
D474	A1220	Rear Lamp Bracket to Tractor.....	1/2"x1-3/4"	2
A951	A1236R	In Front Wheel (AA847).....	5/8"x2"	4
B568	A1300R	Front End Support to Cylinder Block (AI).....	5/8"x3-3/4"	2
A951	A1363R	Brake Shoe Carrier to Rear Axle Housing.....	5/8"x2"	12
A1419	A1412	Retainer Washer to Countershaft (Underdrive).....	7/8"x1-3/4"	1
1676R	A1445R	Hex. Head Cap Screw, Power Lift Rock Shaft Bear- ing to Housing.....	7/16"x1-1/4"	3
1670R	AA200	Carburetor to Manifold.....	3/8"x1"	1
1671R	AA201	Magneto to Governor Case.....	3/8"x1-1/4"	2
1670R	AA227	Camshaft Bearing Housing to Case, L. H.....	3/8"x1"	2
D475	AA232	Clutch Driving Disk Washer to Crankshaft.....	5/8"x1-1/2"	1

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS—Continued					
A312	AA239	Right Main Bearing to Case (Drilled).....	5/8"x1-1/2"	4
D475	AA242	Left Main Bearing to Case.....	5/8"x1-1/2"	5
1670R	AA286	Transmission Case Cover to Case.....	3/8"x1"	6
D475	AA296	Front End to Case Screws.....	5/8"x1-1/2"	4
D475	AA296	Front End to Cylinder.....	5/8"x1-1/2"	2
1669R	AA300	Muffler to Radiator Top Tank.....	3/8"x3/4"	4
D466	AA318	Platform to Rear Axle Housing.....	1/2"x3/4"	2
1682R	AA318	Platform to Rear Axle Housing.....	1/2"x1"	2
A316	AA329	Dust Shield to Cover.....	5/16"x5/8"	4
C834	AA329	Dust Shield to Cover (Drilled).....	5/16"x9/16"	4
A313	AA332	Rear Axle Housing to Case.....	5/8"x1-3/4"	12
C1871	AA352	Brake Housing to Case.....	1/2"x1-7/8"	4
D474	AA352	Brake Housing to Case.....	1/2"x1-3/4"	4
C1539	AA361	Air Cleaner to Bracket.....	3/8"x3-1/2"	1
1670R	AA361	Air Cleaner to Bracket.....	3/8"x1"	3
1669R	AA362	Air Stack to Air Cleaner Bracket.....	3/8"x3/4"	4
A675	AA401	Power Lift Housing to Rear Axle Housing.....	7/16"x5-1/4"	2
E2025	AA404	Power Lift Valve Housing to Power Lift Housing.....	1/2"x3"	3
C529	AA404	Power Lift Valve Housing to Power Lift Housing.....	1/2"x3-1/2"	4
1683R	AA435	Cylinder Water Outlet to Cylinder.....	1/2"x1-1/4"	4
1669R	AA472	Muffler to Radiator Top Tank.....	3/8"x3/4"	4
1669R	AA474	Air Stack to Bracket.....	3/8"x3/4"	4
K2119	AA498	Power Lift Pump Body to Housing.....	7/16"x2-1/2"	7
1676R	AA504	Rear Axle Housing Cover to Housing.....	7/16"x1-1/4"	16
1683R	AA565	Cylinder Water Outlet to Cylinder.....	1/2"x1-1/4"	4
1670R	AA579	Carburetor to Inlet Elbow.....	3/8"x1"	2
1670R	AA580	Carburetor to Manifold.....	3/8"x1"	2
D474	AA582	Brake Housing to Case (Emergency).....	1/2"x1-3/4"	3
D475	AA598	Platform to Rear Axle Housing.....	5/8"x1-1/2"	4
1682R	AA595	R. H. Dust Shield and Fender Reinforcement to First Reduction Gear Cover.....	1/2"x1"	2
D508	AA607	Drawbar to Transmission Case.....	3/4"x1-1/2"	4
A313	AA616	Rear Axle Housing to Case.....	5/8"x1-3/4"	12
1683R	AA813	Governor Case to Transmission Case.....	1/2"x1-1/4"	5
1684R	AA813	Governor Case to Case.....	1/2"x1-1/2"	2
1669R	AA818	Front Fan Bearing Housing to Support.....	3/8"x3/4"	2
1670R	AA823	Transmission Case Cover to Case.....	3/8"x1"	6
1670R	AA825	Generator Assembly to Front End.....	3/8"x1"	3
1668R	AA934	Oil Filter Cover to Head.....	5/16"x1-1/2"	1
A871	AA934	Oil Filter Cover to Head.....	5/16"x1-1/4"	2
1684R	AA1046	Brake Shaft Bracket to Rear Axle Housing.....	1/2"x1-1/2"	4
C1871	AA1079	Brake Housing to Case.....	1/2"x1-7/8"	4
A1448	AA1103	Hex. Head Cap Screw, Valve Housing to Power Lift Housing.....	1/2"x5-1/2"	6
A675	AA1111	Hex. Head Cap Screw, Power Lift Housing to Rear Axle Housing.....	7/16"x5-1/4"	1
A1451	AA1111	Hex. Head Cap Screw, Power Lift Housing to Rear Axle Housing.....	7/16"x5-1/2"	1
1672R	AB706	Magneto to Governor Case.....	3/8"x1-1/2"	2
1671R	AC119	Front Wheel Hub Cap to Front Wheel.....	3/8"x1-1/4"	6
1683R	B241R	Oil Pump to Case.....	1/2"x1-1/4"	3
1670R	B247	Oil Pump Cover to Body.....	3/8"x1"	4
D916	B253R	Oil Pump Drive Gear Bearing to Cam Follower Support (Drilled).....	3/8"x3/4"	2
1666R	B292R	Support Tube, Packing Retainer to Rear Fan Bearing Housing.....	5/16"x3/4"	3
A871	B390R	Speed Control Stop.....	5/16"x1-1/4"	2
1685R	B639R	Brake Latch to Brake Housing.....	1/2"x2"	1
1669R	C2326	Spindle Cap to Pedestal (Lower).....	3/8"x3/4"	4
1683R	D1769R	On Steering Worm Housing.....	1/2"x1-1/4"	4
1669R	D1866	Fan Bearing Cover to Housing.....	3/8"x3/4"	2
CAP SCREWS—FILLISTERED HEAD					
A492	A491R	Steering Spindle Adjusting Bushing Lock Screw....	3/8"x3/4"	1

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
SET SCREWS—SQUARE HEAD— CUP POINT					
1776R	A42R	In Governor Arm.....	3/8"x1-1/4"	1
A318	A497	For Gear Shifter Shaft.....	1/2"x3-1/4"	1
1791R	A1266	Scraper Blade to Holder.....	5/8"x2"	1
1791R	AA701	In Scraper Blade Holder.....	5/8"x2"	2
SET SCREWS—SQUARE HEAD— DOG POINT					
A320	A58R	In Speed Control Bracket.....	5/16"x3/4"	1
A320	A80R	In Speed Control Lever.....	5/16"x3/4"	1
A320	A944R	Speed Control Bracket.....	5/16"x3/4"	1
A320	A947R	Speed Control Lever.....	5/16"x3/4"	1
SET SCREWS—CONICAL POINT					
B275	A1036R	In Governor Arm.....	3/8"x1-3/8"	1
A1253	A1241R	In Governor Arm.....	3/8"x1"	1
MACHINE SCREWS—ROUND HEAD					
E2063	A606R	Fulcrum Ball Socket to Cover.....	1/4"-20x3/4"	4
E2064	A235	Inside Governor Lever to Shaft.....	1/4"-20x1/2"	2
E2064	AD1225	By-Pass Valve, Leaf Spring to Filter Head.....	1/4"-20x1/2"	2
DRIVE SCREWS—FLAT HEAD					
D454	A182	In Radiator Curtain (Parker).....	No. 7x3/8"	4
DRIVE SCREWS—ROUND HEAD					
A1217	AA826	Generator Bottom to Body.....	No. 2 (.098)x1/4"	6
CARRIAGE BOLTS WITH HEX. NUTS					
A1229	A1227	Generator Bracket to Support.....	7/16"x1"	2
C1647	A1327	Platform Brace to Platform.....	3/8"x1-1/4"	4
C1647	AA363	Hood to Hood Clip Bracket.....	3/8"x1-1/4"	2
C980	AA363	Hood to Fuel Tank Rear Support.....	3/8"x1-1/2"	2
C1647	AA526	Hood to Hood Clip Bracket.....	3/8"x1-1/4"	2
C980	AA526	Hood to Fuel Tank Rear Support.....	3/8"x1-1/2"	2
C1647	AA601	Hood Clip to Hood Clip Bracket.....	3/8"x1-1/4"	4
C980	AA604	Hood Clip to Hood Clip Bracket.....	3/8"x1-1/4"	4
C1647	AA886	Fuel Tank, Rear Support.....	3/8"x1-1/2"	2
A1317	AA974	Seat to Support.....	1/2"x1-1/4"	2
D1550	AD623	Wheel Weight to Clamp (Front).....	5/8"x3"	6
D1550	AD624	Wheel Weight to Clamp (Front).....	5/8"x3"	6
C1578	C2308	Extension Rim to Wheel.....	1/4"x1-3/4"	6
CARRIAGE BOLTS WITHOUT NUTS					
D585	D583	Rim Clamp to Front Wheel.....	1/2"x3"	4
D585	D584R	Rim Clamp to Front Wheel.....	1/2"x3"	4
A317	D1796	Seat to Channel Support.....	5/8"x2-1/2"	1
MACHINE BOLTS WITH SQUARE NUTS					
1611R	A52R	In Radiator Sides.....	5/16"x1-1/8"	14
1622R	A60R	Seat Support Body to Platform.....	1/2"x1-1/2"	2
1615R	A115	In Overdrive Shifter Lever.....	3/8"x1-3/4"	1
D597	A115R	In Overdrive Shifter Lever.....	3/8"x1-3/4"	1
A595	A192	In Radiator Straps.....	5/16"x7/8"	18
1637R	A211	Drawbar End and Support to Drawbar.....	5/8"x2-1/4"	2
1634R	A212	Rear Support to R. H. and L. H. Supports (Drawbar).....	5/8"x1-3/4"	4
D544	A215	Front Wheel Guide Band to Wheel.....	1/2"x1"	16
A585	A470	Spark Plug Cable Conduit to Fan Shaft Support Tube.....	1/4"x1-1/2"	1
A585	A470	Spark Plug Cable Clamp to Housing.....	1/4"x1-1/2"	1
1634R	A506	In Drawbar End.....	5/8"x1-3/4"	2
1621R	A844	Fan Bearing Support to Front End.....	1/2"x1-1/4"	2
1640R	A893	In Drag Link Clamp Half.....	5/8"x3"	4
1615R	A917	In Gear Shifter Arm.....	3/8"x1-3/4"	1
1935R	A942R	Clutch Lever Bracket to Rear Steering Shaft Sup- port Bracket.....	1/2"x3-1/2"	1
1614R	A1002	R. H. and L. H. Fender Crown Sheets to Platform Cross Angles.....	3/8"x1"	6
1634R	A1020	Drawbar End to Drawbar.....	5/8"x1-3/4"	2

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
MACHINE BOLTS WITH SQUARE NUTS—Continued					
1613R	A1078	R. H. Fender Support to Citrus Fender.....	3/8"x1-1/4"	3
1622R	A1078	Citrus Fender Front Support to Front End Support.....	1/2"x1-1/2"	2
1620R	A1080	R. H. Front Support to Citrus Fender.....	3/8"x1-1/2"	1
1613R	A1081	Left Fender Support to Citrus Fender.....	3/8"x1-1/4"	2
1622R	A1081	Citrus Fender Front Support to Front End Support.....	1/2"x1-1/2"	2
C983	A1105	Lamp Brackets to Tractor.....	5/16"x1-1/2"	4
B11	A1132	Guide Band to Front Wheel.....	7/16"x1"	8
C983	A1219	Lamp Brackets to Tractor (Rear, AR and AO).....	5/16"x1-1/2"	4
C983	A1219	Front Lamp Bracket to Tractor.....	5/16"x1-1/2"	2
A1224	A1223	Spring Bolt, Generator Base.....	5/16"x3-1/2"	1
1611R	A1227	Bracket to Generator.....	5/16"x1-1/8"	4
1640R	A1307R	Drawbar Clevis to Drawbar R. H. Support.....	5/8"x3"	2
1625R	A1371R	Brake Cross Lever (Special Length Thread).....	1/2"x2-1/2"	1
1625R	A1373R	In Brake Hand Lever (Special Length Thread).....	1/2"x2-1/2"	1
M21	AA268	Fan Shroud to Radiator Sides.....	3/8"x3/4"	6
1622R	AA272	On Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	2
1614R	AA299	Exhaust Pipe Flange to Manifold.....	3/8"x1"	4
1614R	AA348	Tool Box to Front End.....	3/8"x1"	2
D595	AA348	Tool Box to Front End Bolts.....	5/16"x7/8"	2
1613R	AA376	In Fuel Tank Strap.....	3/8"x1-1/4"	2
1623R	AA399	Front Wheel Scraper to Double Knuckle.....	1/2"x1-3/4"	2
1623R	AA467	R. H. Fender to Pedestal.....	1/2"x1-3/4"	4
1623R	AA468	L. H. Fender to Pedestal.....	1/2"x1-3/4"	4
1622R	AA587	Manifold to Exhaust Pipe.....	1/2"x1-1/2"	2
1614R	AA591	Platform Support to Fender Braces, R. H.....	3/8"x1"	2
1614R	AA592	Platform Support to Fender Braces, L. H.....	3/8"x1"	2
1613R	AA599	In Fuel Tank Strap.....	3/8"x1-1/4"	2
1636R	AA633	Front Axle Bracket to Front End.....	5/8"x2"	4
1615R	AA755	In Front Wheel Yoke.....	3/8"x3-1/2"	2
1614R	AA901	Fender Braces to Platform Support, R. H.....	3/8"x1"	2
1621R	AA901	R. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	7
1614R	AA902	Fender Braces to Platform Support, L. H.....	3/8"x1"	2
1621R	AA902	L. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	7
1614R	AA1021	Fender Braces to Platform Support, R. H.....	3/8"x1"	2
1614R	AA1022	Fender Braces to Platform Support, L. H.....	3/8"x1"	2
1621R	AA1022	L. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	5
1614R	AA1034	Fender Braces to Platform Support, R. H.....	3/8"x1"	2
1621R	AA1034	R. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	5
1614R	AA1035	Fender Braces to Platform Support, L. H.....	3/8"x1"	2
1621R	AA1035	L. H. Fender to Platform Supports and Cross Angles.....	1/2"x1-1/4"	5
1620R	B490R	In Power Lift Pedals.....	3/8"x1-1/2"	2
1620R	B491R	In Power Lift Pedals.....	3/8"x1-1/2"	2
A324	D349	Through Drawbar Spacer and Support.....	3/4"x4"	1
D544	D1524	Front Wheel Guide Band to Wheel.....	1/2"x1"	16
MACHINE BOLTS WITH HEX. NUTS					
1930R	A389	Steering Shaft Rear Support to Cover.....	1/2"x2-1/4"	1
1929R	A646R	Power Lift Control Lever.....	5/16"x1-1/4"	1
1935R	A943	Steering Shaft Rear Support to Clutch Lever Bracket.....	1/2"x3-1/2"	1
1620R	A1427R	In Power Lift Pedals.....	3/8"x1-1/2"	2
1939R	AA249	Steering Shaft Bearing to Support.....	1/2"x5"	1
A821	AA299	Exhaust Pipe Flange to Manifold.....	1/2"x1-1/4"	4
A1108	AA724	Wheel Weight to Wheel.....	3/4"x3-3/4"	2
1893R	AA1105	On Power Lift Control Lever.....	5/16"x1-1/2"	1
1938R	AB214	Steering Shaft Bearing to Steering Shaft Bearing Bracket.....	1/2"x4-1/2"	1
1932R	B389	Steering Shaft Rear Support to Cover.....	1/2"x2-3/4"	2
1930R	C264R	Scraper Blade Holder to Bracket.....	1/2"x2-1/4"	4
1932R	C264R	In Power Lift Pedals.....	3/8"x1-1/2"	2
D1767	D1766R	In Scraper Blade Holder, Rear Wheel Extension Scraper.....	1/2"x2-3/4"	4
1620R	1428R	Steering Worm Clamp.....	1/2"x3"	1

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
MACHINE BOLTS WITHOUT NUTS					
A734	A52R	Sides and Rear Strap to Radiator Top Tank.....	5/16"x7/8"	12
D595	A192	In Radiator Straps.....	5/16"x7/8"	18
A326	A211	In Drawbar Swivel to Clevis.....	3/4"x2-1/4"	1
A329	A618	Seat Spring.....	5/8"x8"	1
C981	AA246	In Flywheel.....	3/4"x5"	2
A327	AA381	Pedestal to Front End.....	3/4"x4-3/4"	4
D616	AA605	Drawbar to Drawbar Front Support.....	3/4"x2-3/4"	1
D888	AA632	Front End to Pedestal (AW only).....	3/4"x5-1/2"	4
A1133	AA756	Front End to Pedestal.....	3/4"x6-3/4"	4
1971R	AD984	Wheel Weight to Wheel.....	3/4"x6"	2
A327	AD1470	Wheel Weight to Wheel.....	3/4"x4-3/4"	2
STOVE BOLTS—ROUND HEAD— SQUARE NUTS					
A330	A257	In Steering Gear Housing Cover.....	5/16"x1/2"	6
2394R	A470	Spark Plug Cable Clamp to Conduit Shield.....	1/4"x20x1-1/4"	1
A1053	A963	In L. H. Fender Side Sheet to L. H. Dust Shield.....	5/16"x3/4"	4
2392R	A969	Brake Dust Guard to Left Dust Shield.....	1/4"x5/8"	2
2392R	A969	Brake Dust Guard to Left Fender Side Sheet.....	1/4"x5/8"	1
A1053	A996	R. H. Fender Brace to R. H. Fender Crown Sheet.....	5/16"x3/4"	3
A1053	A997	In L. H. Fender Side Sheet to L. H. Fender Brace.....	5/16"x3/4"	1
A1053	A997	L. H. Fender Brace to L. H. Fender Crown Sheet.....	5/16"x3/4"	3
A1053	A1359	L. H. Fender Side Sheet to L. H. Dust Shield.....	5/16"x3/4"	4
2334R	AA431	Radiator Curtain Guard to Radiator Side.....	5/16"x1"	2
A1053	AA591	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	5
A1053	AA592	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	5
A1053	AA595	R. H. Dust Shield to R. H. Dust Shield Extension.....	5/16"x3/4"	2
A1053	AA596	Pulley Guard to R. H. Front Dust Shield.....	5/16"x3/4"	1
2334R	AA595	R. H. Fender Side Sheet to R. H. Dust Shield.....	5/16"x1"	5
A1053	AA901	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	1
A1053	AA902	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	1
2392R	AA987	Brake Dust Guard to L. H. Dust Shield.....	1/4"x5/8"	2
A1053	AA1021	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	3
A1053	AA1022	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	3
A1053	AA1034	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	2
A1053	AA1035	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	2
2568R	AB336	Spark Plug Cable Clamp to Conduit.....	5/16"x1-1/2"	2
D2392R	AB689	Tool Box Assembly to L. H. Fender Side Sheet.....	1/4"x5/8"	3
2392R	AB689	Tool Box to L. H. Dust Shield.....	1/4"x5/8"	2
B497	B465R	Spark Plug Cable Conduit Clamp.....	5/16"x1-3/4"	1
2326R	C1400	In Dust Cover.....	No. 10-24x5/8"	2
2326R	C1401	In Dust Cover.....	No. 10-24x5/8"	2
HEXAGON NUTS					
1494R	A36R	Manifold.....	7/16"	4
1493R	A42R	Governor Arm, Set Screw.....	3/8"	1
1492R	A58R	Throttle Lever Stop.....	5/16"	2
1506R	A60R	On Seat Support Body.....	1/2"	4
1493R	A69R	Overdrive Right Bearing Cover.....	3/8"	2
1512R	A88R	Brake Lever Pedals.....	5/8"	2
1512R	A89R	Brake Lever Pedals.....	5/8"	2
1514R	A183	Clutch Operating Rod.....	9/16"	1
1494R	A546R	Countershaft Right Bearing Housing to Case.....	7/16"	4
1494R	A556R	First Reduction Gear Cover.....	7/16"	1
1494R	A674	Pump Body to Housing Studs.....	7/16"	3
1513R	A684R	On Cast Lug Bolt.....	3/4"	1
1515R	A842	On Radius Rod Pivot Stud.....	7/8"	1
1492R	A871	On Throttle Lever Stop Screw.....	5/16"	2
1512R	A887	On Front Axle U-Bolt.....	5/8"	4
1514R	A908	On Clutch Operating Rod.....	9/16"	1
1494R	A909R	First Reduction Gear Cover Stud.....	7/16"	1
1513R	A929R	On Seat Support Body Stud.....	3/4"	2
1512R	A942R	On Clutch Lever Bracket Stud.....	5/8"	3
1506R	A937R	On Steering Gear Housing Stud.....	1/2"	2
1512R	A951	On Front Wheel Bolts.....	5/8"	4
1512R	A951	On Front Wheel Bolt (AA847).....	5/8"	4
1494R	A1003R	On Manifold Studs.....	7/16"	4
1493R	A1036R	On Governor Arm Set Screw.....	3/8"	1
1512R	A1055R	On Brake Lever Shaft (Left).....	5/8"	1

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
HEXAGON NUTS—Continued					
1512R	A1055R	On Brake Lever Shaft (Right).....	5/8"	1
1493R	A1056	On Brake Operating Rod.....	3/8"	1
1512R	A1084R	On Cap Screw, in Scraper Bracket.....	5/8"	2
1512R	A1085R	On Cap Screw, in Scraper Bracket.....	5/8"	2
1516R	A1101	On Front Axle Lock Bolt.....	1"	2
1492R	A1189	On Speed Control Rod to End.....	5/16"	1
1493R	A1225	Cable Clip to Hood Bolt.....	3/8"	3
D1133	A1228	On Generator Shaft.....	5/16"	1
1512R	A1266	Scraper Blade Holder Set Screw.....	5/8"	2
1512R	A1363R	On Brake Shoe Carrier to Rear Axle Housing Screws	5/8"	12
1506R	A1452	Power Lift Valve Housing to Power Lift Stud.....	1/2"	1
1506R	AA229	Tappet Lever Cover.....	1/2"	2
1506R	AA235	Pulley Brake Adjusting Set Screw Nut.....	1/2"	1
1512R	AA242	Left Main Bearing to Case.....	5/8"	1
1513R	AA246	Flywheel Bolts.....	3/4"	2
1512R	AA296	Front End to Cylinder.....	5/8"	4
1513R	AA381	Pedestal Front End Bolts.....	3/4"	4
1513R	AA381	Pedestal to Front End Stud.....	3/4"	1
1512R	AA436	Cylinder Flange to Case.....	5/8"	6
1512R	AA437	Cylinder Flange to Case.....	5/8"	6
1507R	AA464	On Cylinder Head Stud.....	5/8"	9
1513R	AA483	On Drive Wheel Support to Road Band Support...	3/4"	6
1494R	AA498	Power Lift Pump Body.....	7/16"	9
1516R	AA569	On Radius Rod Ends.....	1"	2
1512R	AA701	On Set Screw, in Scraper Blade Holder.....	5/8"	2
1512R	AA794	On Clutch Lever Pivot Bolt.....	5/8"	1
1512R	AA804	On Left Main Bearing Stud.....	5/8"	1
1492R	AA827	Rotor Shaft.....	5/16"	2
1513R	AA916	On Rim Clamp Stud.....	3/4"	6
1493R	AA1047	On Cam Shaft Gear Stud.....	3/8"	1
1506R	AA1050	On Muffler and Spark Arrester Stud.....	1/2"	4
1512R	AA1054	On Rim Clamp Stud.....	5/8"	6
1512R	AA1062	On Dual Wheel Rim Clamp Stud.....	5/8"	6
1512R	AA1088	On Rim Clamp Stud.....	5/8"	8
1513R	AC918	On Road Band Support to Drive Wheel Bolts.....	3/4"	6
1512R	B634R	On Demountable Rim Clamp Stud.....	5/8"	8
1492R	D156	On Tapered Spindle Pin Lock Bolt.....	5/16"	2
1513R	D233	Spade Lug.....	3/4"	1
1518R	D1673R	On Steering Arm Stud.....	5/8"	2
1518R	D1674R	On Steering Arm Stud.....	5/8"	2
1494R	D2606	On Brake Pawl to Hand Lever Screw.....	7/16"	1
1512R	JD1217	On Drive Wheel Bolts.....	5/8"	12
HEXAGON NUTS—CASTELLATED					
A335	A135	On Clutch Operating Bolts.....	1/2"	3
A336	A191	Main Bearing Bolts.....	5/8"	4
A336	A256	Main Bearing Bolts.....	5/8"	4
C1104	A938	On Vertical Steering Shaft.....	7/8"	1
C535	A976R	Brake Drum to Differential Shaft.....	1"	1
C535	A1048	On Steering Spindle, Upper End (AW).....	1"	1
B112	A1048	On Spindle Knuckle (AW).....	3/4"x41/64"	2
C535	AA295	On Steering Spindle, Upper End.....	1"	1
C535	AA353	Brake Shaft.....	1"	1
C535	AA503	Countershaft, R. H. and L. H. Ends.....	1"	2
C535	AA755	On Steering Spindle.....	1"	1
C535	AA797	On Overdrive Gear and Shaft.....	1"	1
C535	AA807	On Brake Shaft.....	1"	1
C535	AB411	On Front Axle.....	1"	1
HEX. JAM NUTS					
A337	A105	Tappet Lever Adjusting Screw.....	3/8"	4
D528	A118	On Throttle Rod to End.....	1/4"-20	1
1520R	A155	Piston Pin Lock Screw.....	1/2"	2
D528	A181	On Speed Control Rod to End.....	1/4"-20	1
1520R	A497	Gear Shifter Shaft Set Screw.....	1/2"	1
1520R	A601	On Tappet Lever Stud.....	1/2"	2
C985	A892	On Drag Link Rod.....	7/8"	4

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
HEX. JAM NUTS—Continued					
1521R	A937R	Steering Gear Shaft Adjusting Set Screw.....	5/8"	1
C985	A956	On Tie Rod.....	7/8"	2
D528	A1188	On Throttle Rod to End.....	1/4"-20	1
1517R	A1449	On Power Lift Throttle Valve Adjusting Screw.....	3/8"	1
1520R	B639R	Brake Latch to Brake Housing Screw.....	1/2"	1
RIVETS—R. I. HEAD					
A343	A150	In Differential Bevel Pinion Shaft.....	5/16"x2-1/2"	3
D432	A230	Hood Clip Bracket to Fan Shroud.....	1/4"x1/2"	2
D436	A239	Gear Shift Interlock to Transmission Case Cover...	3/8"x1"	2
D432	A351	Clutch Dust Cover Spring to Pulley.....	1/4"x1/2"	3
D432	A532	Hood Clip Bracket to Fan Shroud.....	1/4"x1/2"	2
D437	A596	Yoke to Shifter, Second Speed (Underdrive).....	3/8"x1-1/2"	2
D882	A808	Support to Road Band.....	1/2"x1-1/2"	12
D436	A913	Gear Shift Interlock to Transmission Cover.....	3/8"x1-1/8"	2
D430	A981	In Emergency Brake Band End.....	3/16"x5/8"	3
D479	A985	In Brake Latch to Pedal.....	1/4"x3/4"	2
A986	A985	In Brake Pedal (Drilled).....	3/8"x1-3/4"	2
B372	A999	Platform to Support and Cross Angles.....	5/16"x1"	14
B372	A1000	Platform Support to Platform (R. H.).....	5/16"x1"	4
B372	A1001	Platform Support to Platform (L. H.).....	5/16"x1"	4
B372	A1002	Cross Angle to Platform.....	5/16"x1"	6
B372	A1079	Plate to Citrus Fender Front Support.....	5/16"x1"	3
B372	A1258	Platform Support to Platform (R. H.).....	5/16"x1"	4
B372	A1259	Support to Platform (L. H.).....	5/16"x1"	4
B372	A1260	Fender Cross Angle to Platform.....	5/16"x1"	6
B372	A1326	Platform to Supports and Cross Angles.....	5/16"x1"	14
B372	A1341	Platform to Supports and Cross Angles.....	5/16"x1"	14
B372	A1342	Cross Angle to Platform.....	5/16"x1"	6
B372	A1343	Platform Support to Platform (R. H.).....	5/16"x1"	4
B372	A1344	Platform Support to Platform (L. H.).....	5/16"x1"	4
D437	A1418	Yoke to Underdrive Shifter.....	3/8"x1-1/2"	2
D479	AA232	In Clutch Driving Disk.....	1/4"x3/4"	1
D479	AA319	Brake Latch Support to Platform.....	1/4"x3/4"	4
D443	AA354	Clevis to Drawbar Channel.....	1/2"x1-7/8"	2
D443	AA605	Clevis to Drawbar.....	1/2"x1-7/8"	4
A1025	AA610	Brake Lever Support to Drawbar Support.....	1/2"x1-1/2"	2
D479	AA824	Oil Relief Spring to Filter Cover.....	1/4"x3/4"	1
D443	AA956	In Tongue to Drawbar.....	1/2"x1-7/8"	2
D432	AA977	In Brake Band.....	1/4"x1/2"	3
D478	C1573	Hood Clips to Hood.....	3/16"x3/8"	8
D882	C2147	In Road Band to Support.....	1/2"x1-1/2"	12
D430	D2101	Baffle to Radiator Cap.....	3/16"x5/8"	2
RIVETS—BRASS					
D2309	A441	Facing to Brake Shoe.....	3/16"x5/16"	8
D1520	A442	Cushion to Fuel Tank Front Support.....	9/64"x5/16"	4
D1592	A443	Cushion to Fuel Tank Rear Support.....	9/64"x5/16"	3
D1520	A982	Lining to Brake Band.....	9/64"x5/16"	10
D1520	A1013	Cushion to Fuel Tank Front Support.....	9/64"x5/16"	4
D1592	A1014	Cushion to Fuel Tank Rear Support.....	9/64"x5/16"	4
D2593	A1368	Facing to Brake Shoe.....	3/16"x5/8"	16
D1592	D1932	Pulley Brake Lining to Brake.....	9/64"x7/16"	6
RIVETS—TINNERS'					
A488	A274	Tappet Lever Oil Trough to Tappet Lever Cover...	8 lbs.	4
RIVETS—C. S. HEAD					
D1416	A1375	Latch Plate to Brake Shaft Bracket.....	3/8"x1-1/4"	2

HARDWARE LIST FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS**LOCK WASHERS**

Size	No.
3/64"	C1320
3/16"	D603
1/4"	1729R
5/16"	1721R
3/8"	1722R
7/16"	1723R
1/2"	1724R
5/8"	1726R
3/4"	1728R
7/8"	1881R
1"	1882R

COTTER KEYS



Length	Diameter				
	3/32"	1/8"	3/16"	1/4"	3/8"
1/2"	1730R				
5/8"		1732R			
3/4"		1733R	D339		
1"	1731R	1735R	1741R		
1-1/4"			1742R		
1-1/2"		1737R	1743R	1745R	
2"		1738R	2215R	1748R	
3-1/2"					

CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A10R	Differential, Complete	AA345	16
A10R	Differential, Complete	AA559	16
A10R	Differential Gear with Shaft	AA331	16	12
A10R	Differential Gear with Shaft	AA661	16	12
A12R	Gear with Spider, First Reduction	AA217	14	11
A17R	Belt Pulley with Sleeve Gear and Bushing	AA231	12	10
A19R	Disk, Clutch Driving, with Rivet	AA232	13	10
A22R	Housing, R. H. Main Bearing with Cap	AA239	5	1
A23R	Housing, L. H. Main Bearing with Cap	AA242	5	1
A29R	Flywheel with Bolts and Driving Pin	AA246	5	1
A30R	Gear, Cam Shaft with Stud and Nut	AA1047	6	2
A31R	Housing with Cup, L. H. Cam Shaft Bearing	AA227	6	2
A53R	Upper Water Pipe and Fan Support	AA253	11	8
A54R	Cylinder with Upper Water Pipe and Fan Support	AA436	6
A57R	Bearing, Steering Shaft, Rear	AA249	22	4
A68R	Cover with Oil Trough, Tappet Lever	AA229	7	2
A72R	Cover, Transmission	AA286	5	1
A79R	Brake with Lining, Pulley	AA235	13	10
A85R	Spacer, Flywheel with Cork Washer	AA244	5	1
A102	Crankshaft with Gear and Inner Race	AA237	5	1
A107	Connecting Rod, Complete	AA463	5	1
A489R	Pedestal with Stud and Stop Pin	AA381	13	27
A508R	Housing with Bushing, Brake	AA352	19	22
A570R	Cover, Rear Axle Housing with Filler Plug	AA504	16	13
A587R	Cylinder Head with Valve Guides	AA464	6	2
A587R	Cylinder Head with Valves	AA465	6
A594R	Gear, Shift Fork	AA371	13	10
A595R	Shifter, Overdrive, with Yoke	AA792	14	11
A595R	Shifter, Overdrive, with Shaft and Yoke	AA757	13	10
A636R	Valve Housing with Guide and Plug	AA404	30	38
A732R	Cylinder with Studs	AA437	6	2
A732R	Cylinder with Pistons and Gaskets	AA535	6
A733R	Upper Water Pipe and Fan Support	AA435	11	8
A824R	Cover, Transmission Case	AA508	5	1
A828R	Rear Axle Housing with Studs	AA509	16	13
A830R	Power Lift Housing with Oil Seal Bearing, P.L. 100-456	AA401	30	38
	P.L. 457	AA488	31	38
A845R	Pipe, Upper Water, Complete	AA525	11	8
A845R	Upper Water Pipe	AA565	11	8
A910R	Gear Shifter, Low and Reverse	AA553	13	10
A911R	Shifter, Overdrive, with Yoke	AA793	14	11
A911R	Shifter, Overdrive, with Yoke and Shifter Shaft	AA758	13-14	10
A911R	Shifter, Underdrive, with Yoke	AA1124	14	11
A912R	Cover, Transmission Case with Gear Shift Interlock	AA823	5	1
A920R	Case, Transmission, Main	AA618	5
A921R	Housing with Cups and Oil Seal, Rear Axle	AA616	16	14



**CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS A, AN,
AW, AR, AO, AND AI TRACTORS (Continued)**

Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A959R	Pipe and Elbow Inlet, Carburetor	AA579	28	34
A972R	Housing, Brake, with Lever Shaft	AA582	18	21
A984R	Pedal with Latch, Brake	AA586	18-19	21
A1006R	Exhaust Pipe with Flange	AA587	7	3
A1047R	Pedestal, with Bushing Stop Pin and Bearing Cups	AA632	21	27
A1050R	Pivot Bracket, Front Axle with Bushing	AA633	20	23
A1066R	Elbow with Studs, Muffler Inlet	AA702	7	3
A1100R	Housing, Front Axle with Pivot Pin	AA729	20	23
A1123R	Cover, Transmission Case with Gear Shift Interlock	AA741	5	1
A1128R	Pedestal with Stop Pin	AA756	22	27
A1141R	Case, Transmission, Main	AA843	5	...
A1146R	Housing, L. H. Main Bearing with Cap	AA804	5	1
A1161R	Brake Housing with Bushing and Oiler	AA1079	19	22
A1170R	Case, Governor, with Lever Shaft Bushing	AA813	7	3
A1198	Head with Stud, Radiator Filler Cap	AA796	11	8
A1198	Radiator Cap, Complete	AA795	11	8
A1272R	Wheel, Solid Cast, Rear, Low Pressure Rubber Tires	AA1087	17	19
A1272R	Wheel, Solid Cast, Rear with Demountable Rim, Low Pressure Rubber Tires	AA933	17	18
A1277R	Cover with Bushing, Oil Filter Head	AA934	9	5
A1282R	Drive Wheel with Studs and Nuts	AA1088	17	19
A1289R	Knee, Front Axle, Complete	AA730	20	23
A1308R	Housing, Rear Axle with Bearing Cups and Oil Seals	AA1075	16	14
A1318R	Housing, Brake, with Pedal Pivot and Bearing Cup	AA976	19	21
A1324R	Drive Wheel with Studs and Nuts	AA1078	17	19
A1367R	Brake Shoe with Facing	AA1043	20	22
A1370R	Bracket, Left Brake Shaft, with Latch Plate	AA1046	20	22
A1378R	Drive Wheel with Studs and Nuts	AA1051	17	20
A1381R	Dual Drive Wheel with Studs and Nuts	AA1052	17	20
A1386R	Muffler, Complete	AA1050	7	3
A1387R	Muffler, Complete	AA1050	7	3
A1417R	Shifter, Second Speed Gear with Yoke (Underdrive)	AA1123	13	10
A1425R	Power Lift Control Lever	AA1105	31	38
A1426R	Power Lift Cam Follower Assembly	AA1104	31	38
A1430R	Valve Housing with Guide, Power Lift	AA1103	31	38
A1442R	Housing, Power Lift, with Pump Shaft Bushing, Oil Seal Bearing and Pump Follower Gear Pin	AA1111	31	38
B36R	Bearing with Bushing, Steering Shaft, Upper	AB214	22	4
B290R	Housing, Front Fan Bearing with Support Tube	AA564	12	9
B290R	Housing, Front Fan Bearing with Support Tube	AA818	12	9
B290R	Housing, Fan Bearing, with Support Tube	AA524	12	9
B290R	Housing, Fan Bearing, with Support Tube	AA817	12	9
C167R	Hub Cap with Oil Fitting, Front Wheel	AC119	21	25
C334R	Front Wheel with Bolts (Disk Type)	AC847	21	25
C391R	Front Wheel Hub with Races (Disk Type)	AC513	21	25
D1879	Front Wheel Knuckle with Bushing and Studs	AA612	20	23

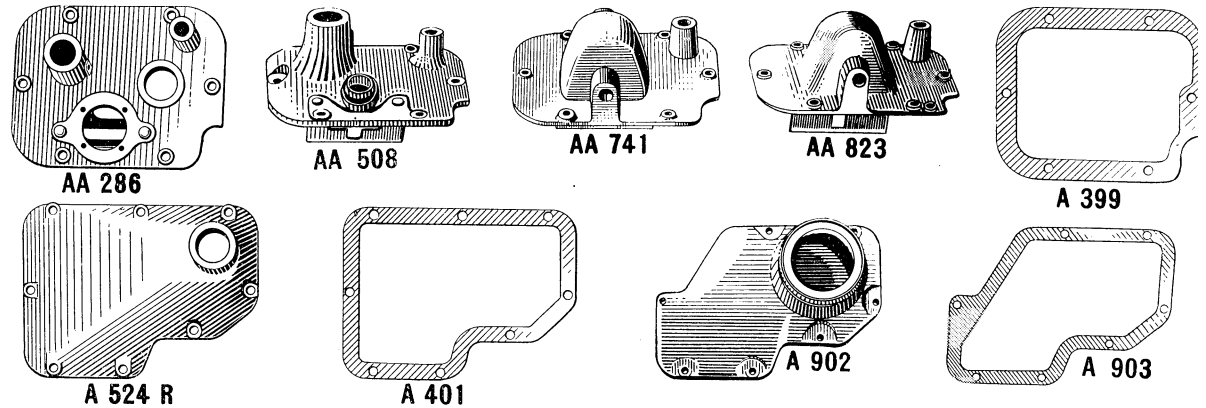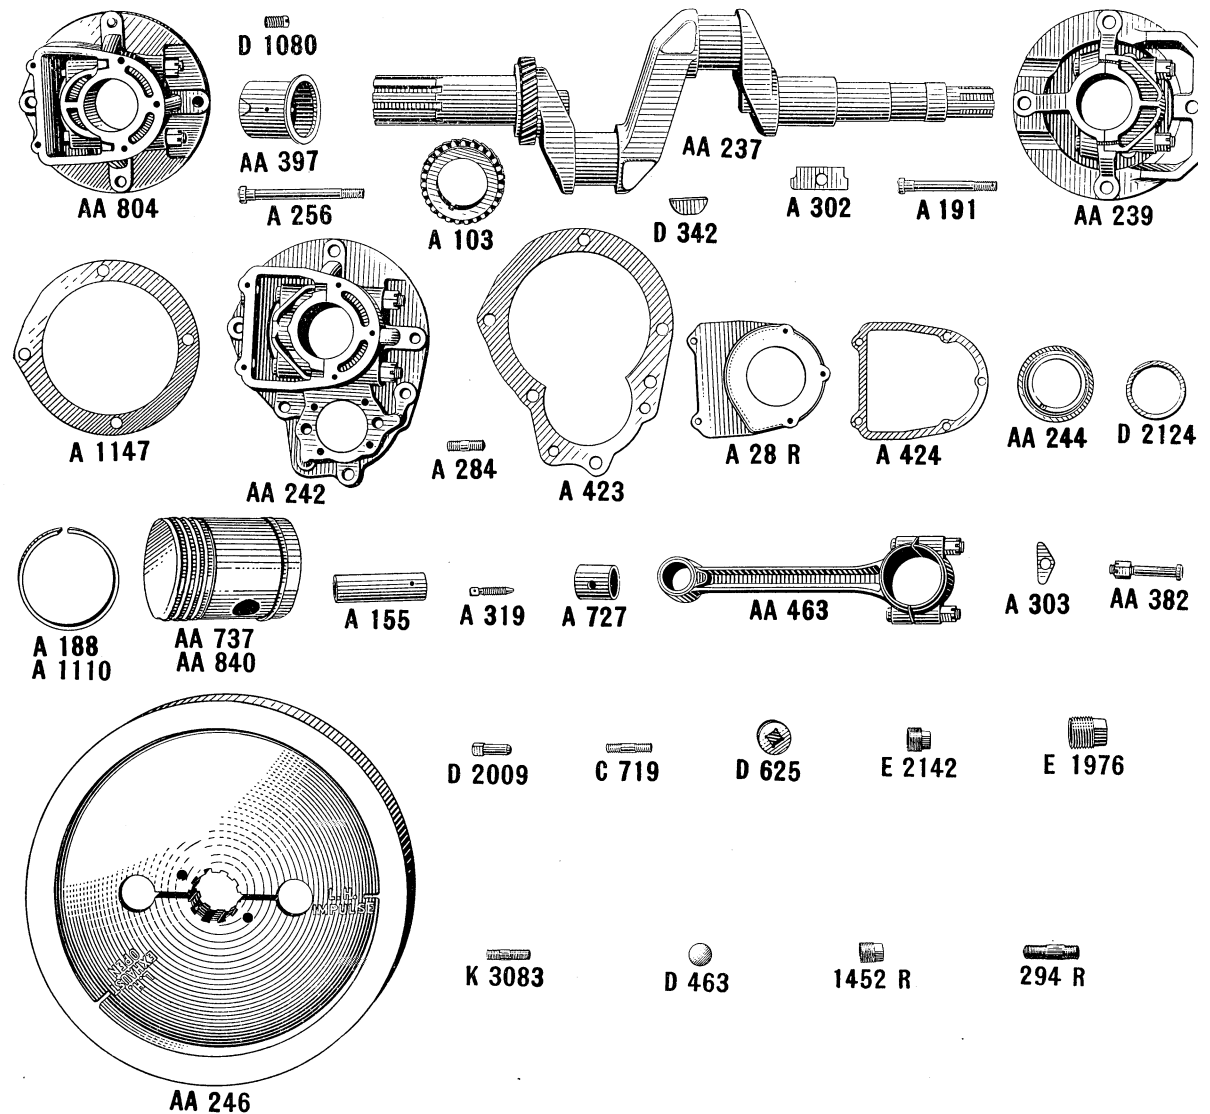
REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS**TRANSMISSION CASE****ENGINE, PISTON, CONNECTING RODS, CRANKSHAFT**

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS


CYLINDER HEAD, VALVES AND MANIFOLD

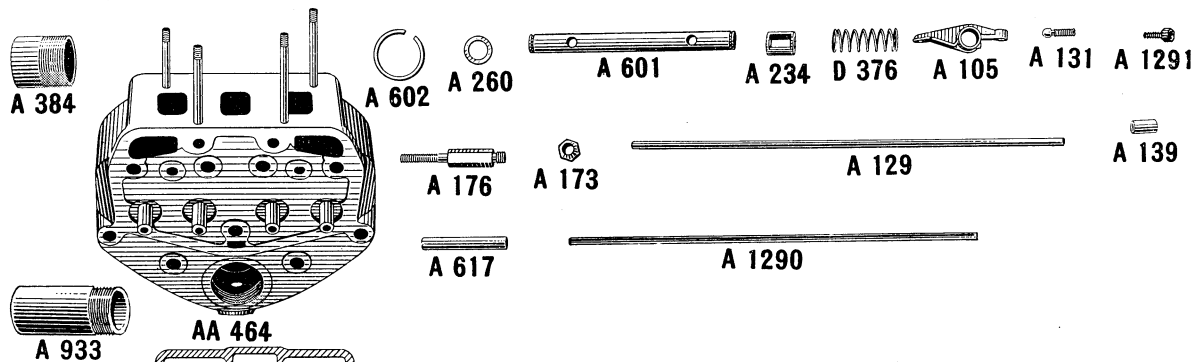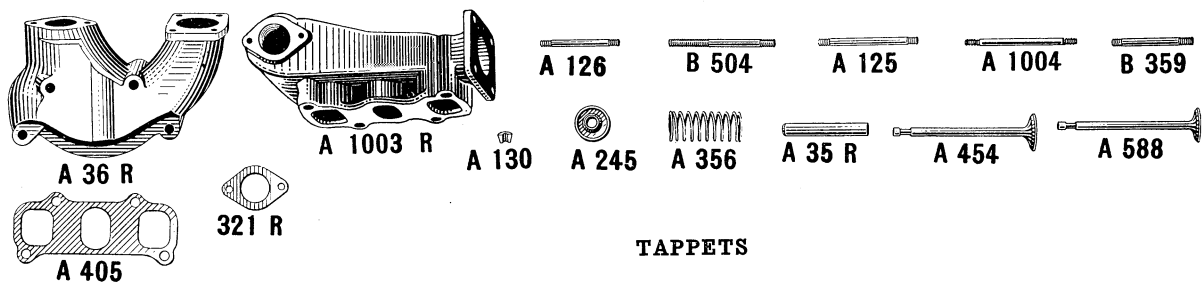


CAM FOLLOWERS

 

CAM SHAFT

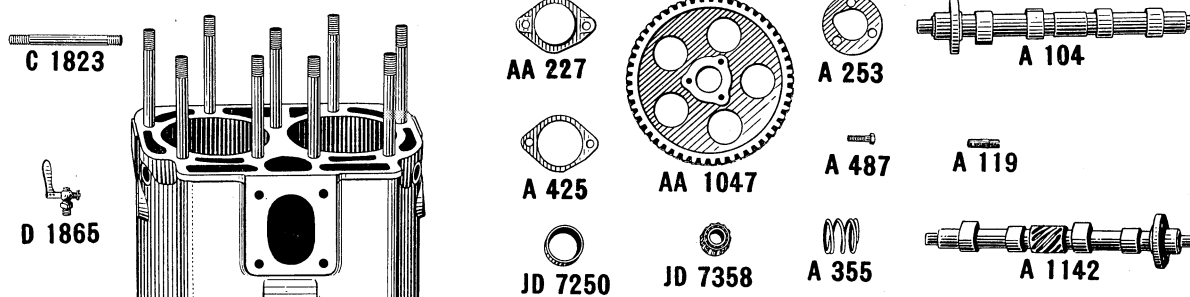


TAPPET OILER

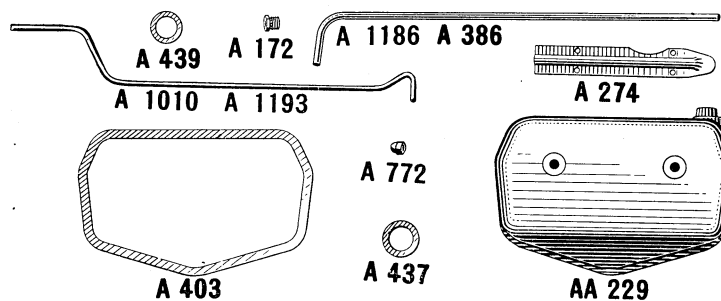

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

MUFFLER AND SPARK ARRESTER

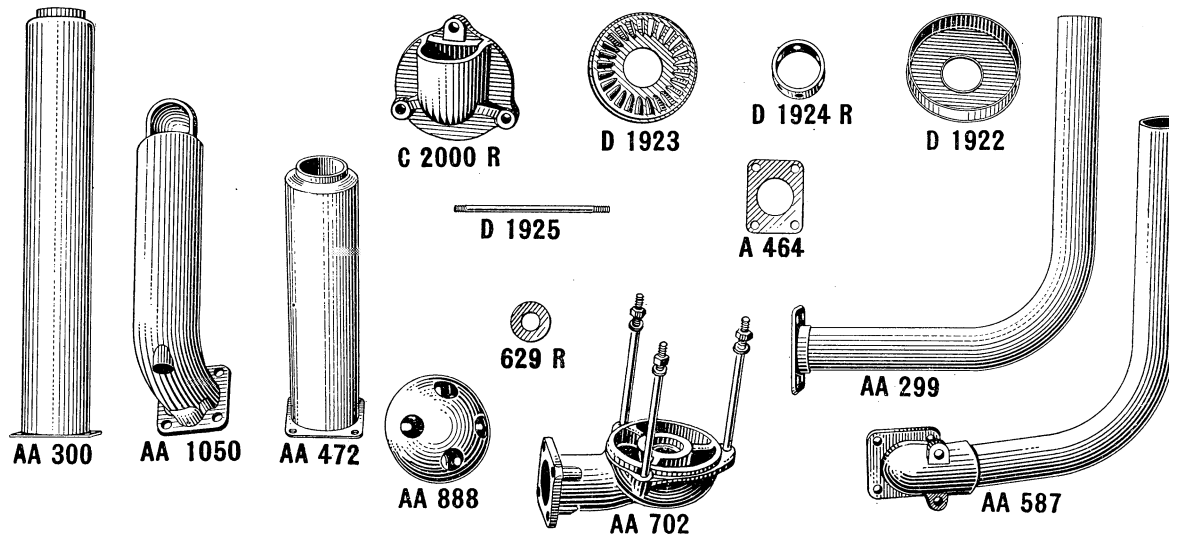

GOVERNOR


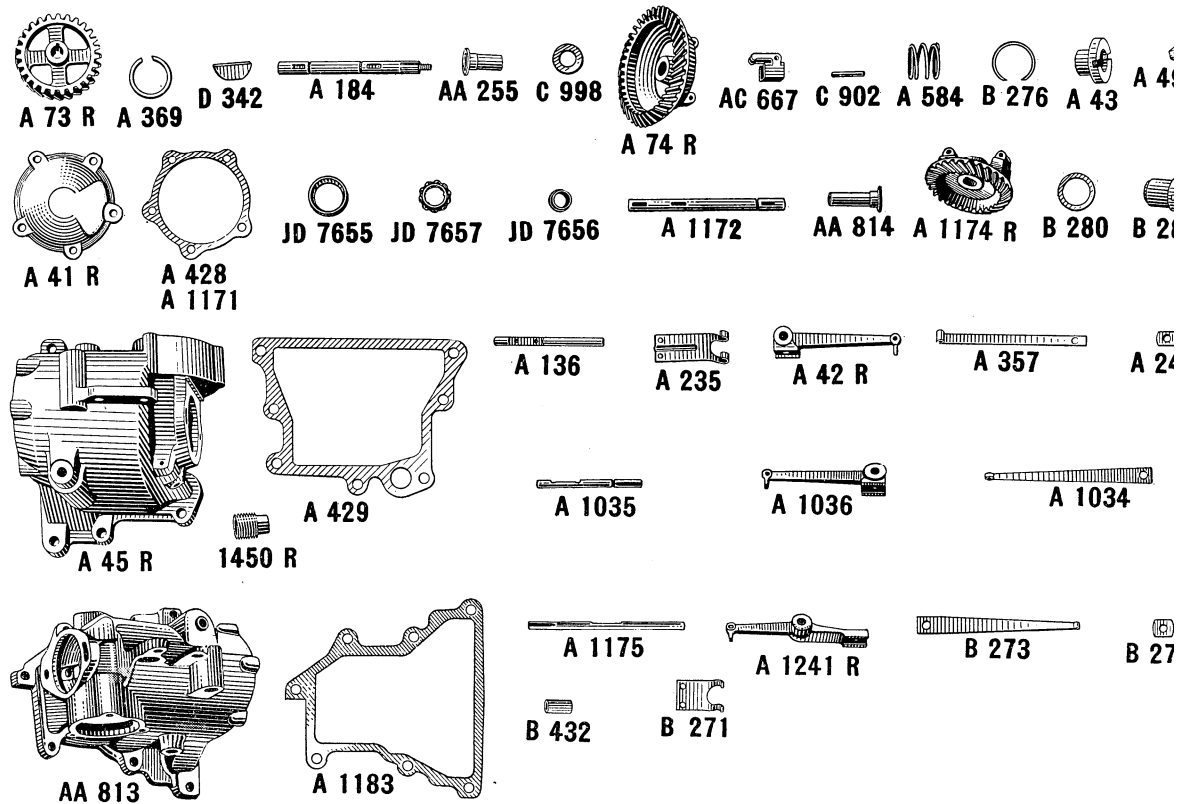



Plate No. 3

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS


CONTROLS

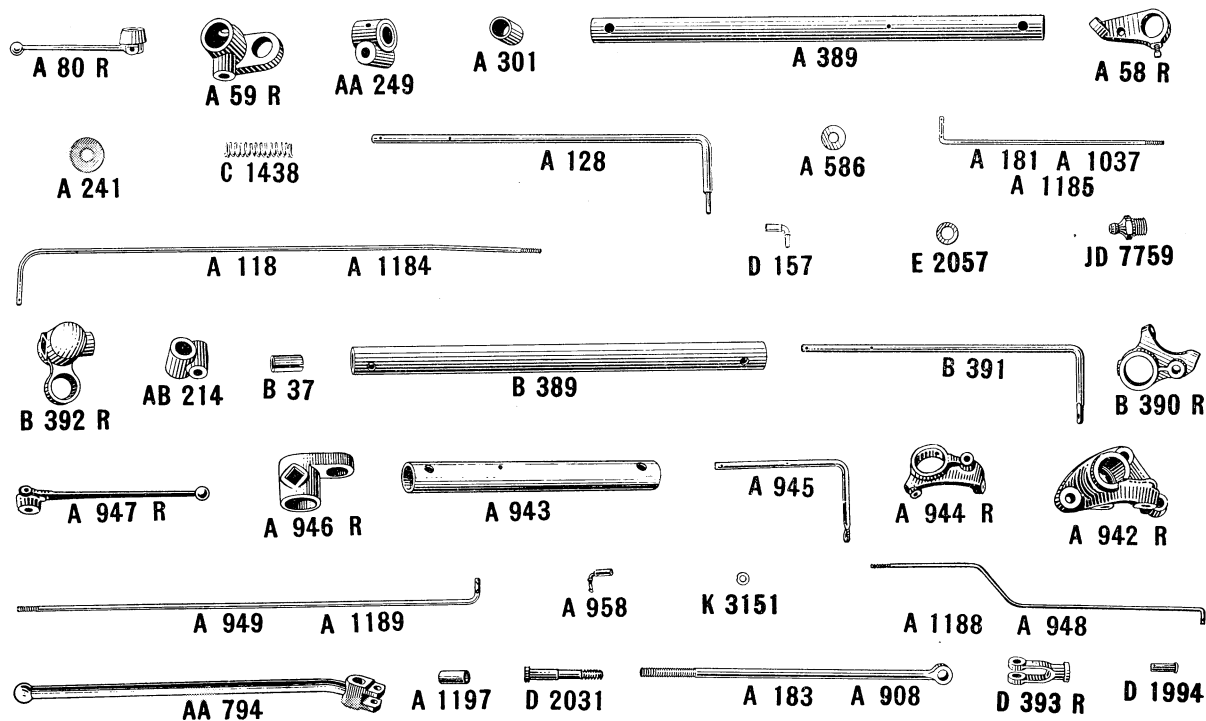

CRANK CASE VENTILATOR

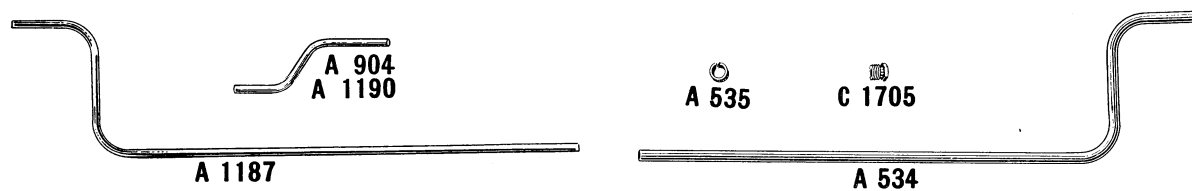


CRANK CASE BREATHER

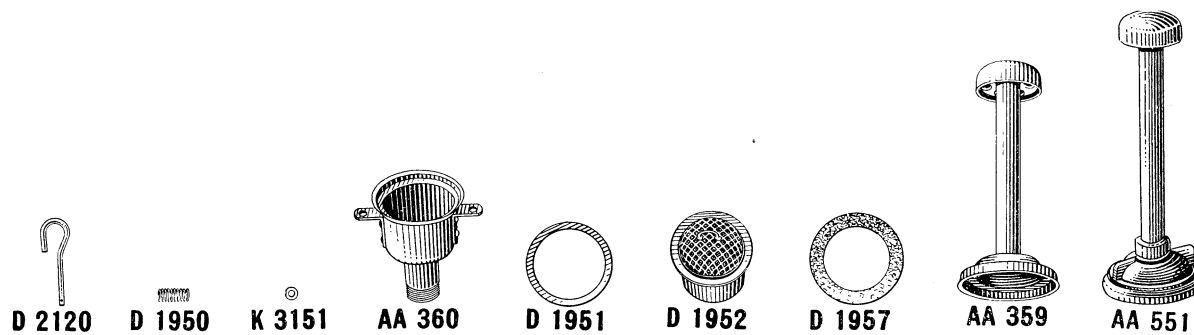


REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS


LUBRICATING SYSTEM AND OIL PUMP

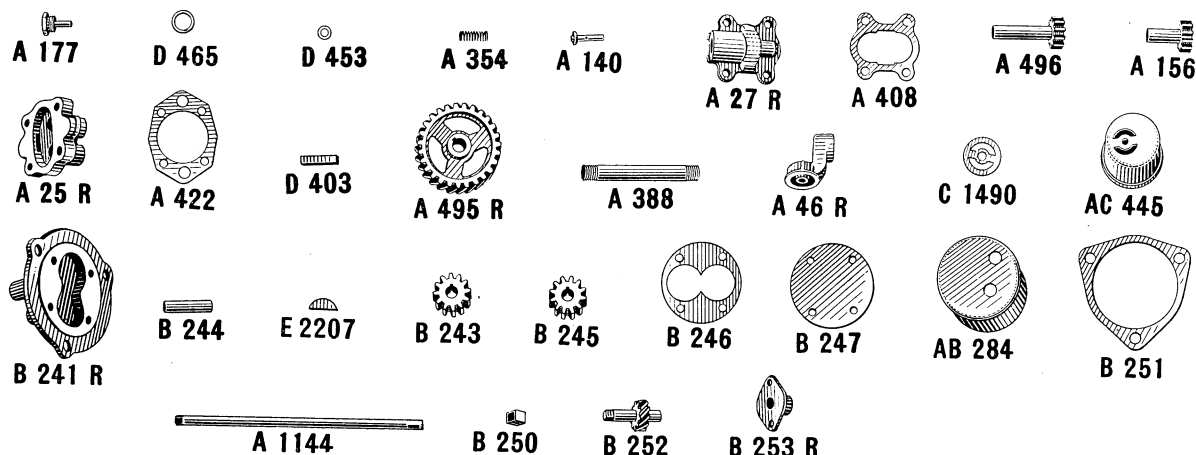

OIL FILTER AND INDICATOR

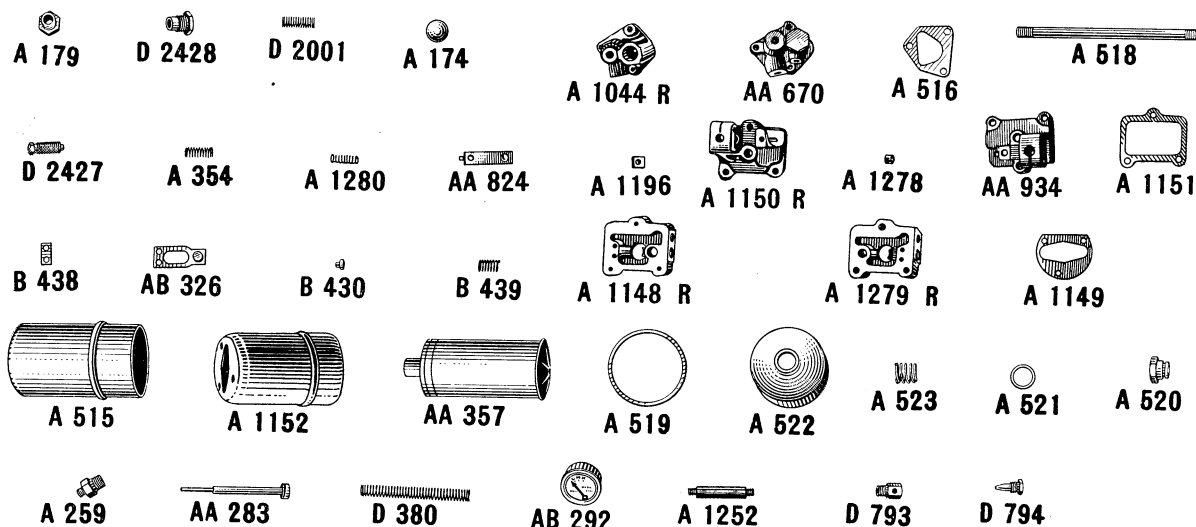

OIL PIPES AND FITTINGS

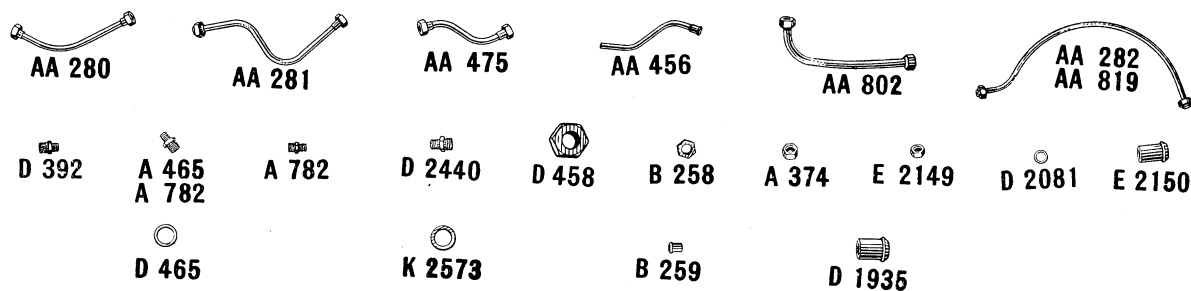

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

FUEL SYSTEM

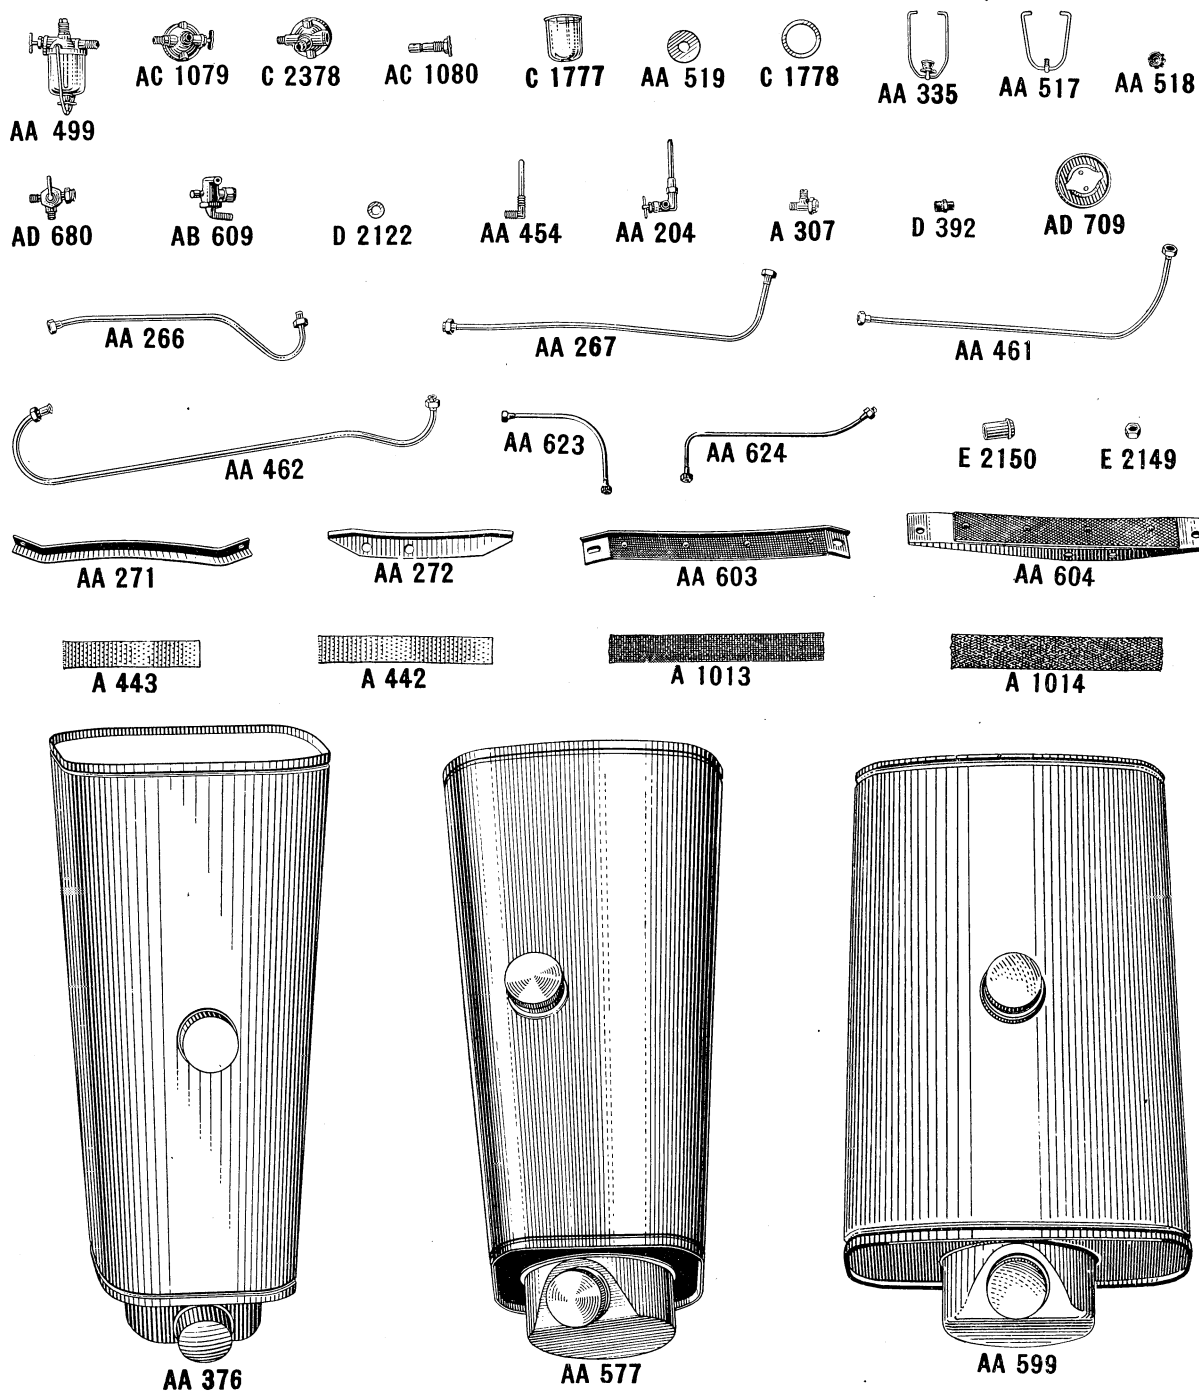
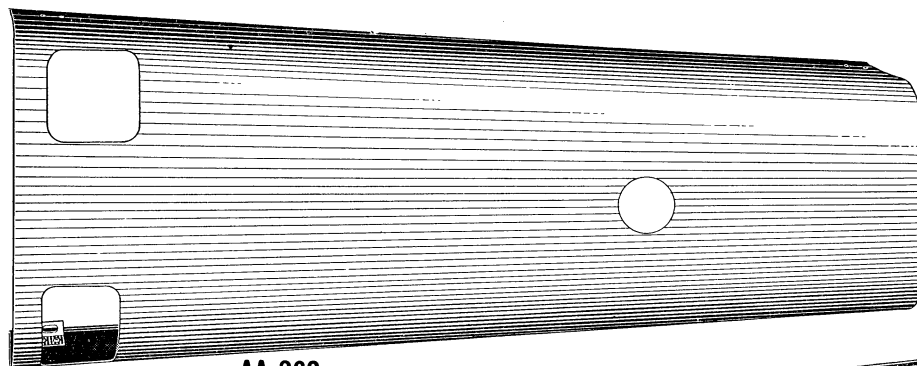
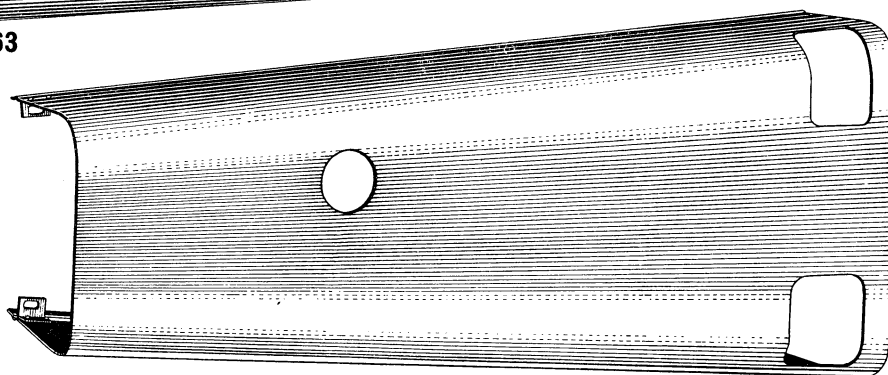
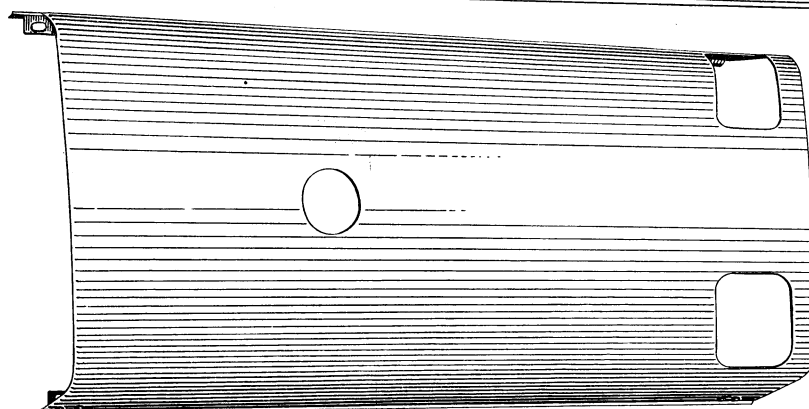
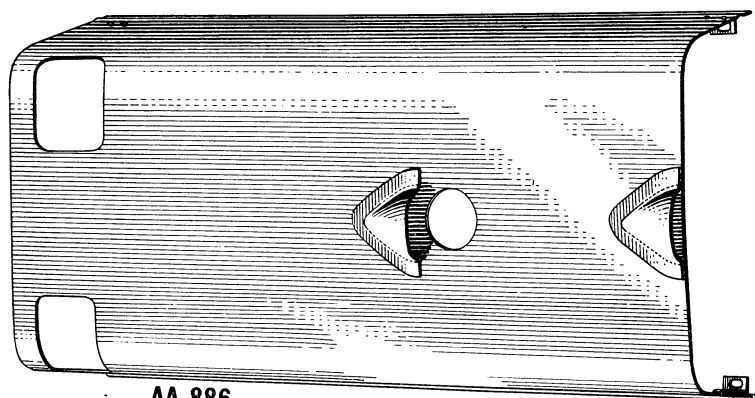


Plate No. 6

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
HOOD

**AA 363****A 230****A 532****AA 526****AA 601****C 1573****AA 270****AA 886****Plate No. 7**

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

COOLING SYSTEM

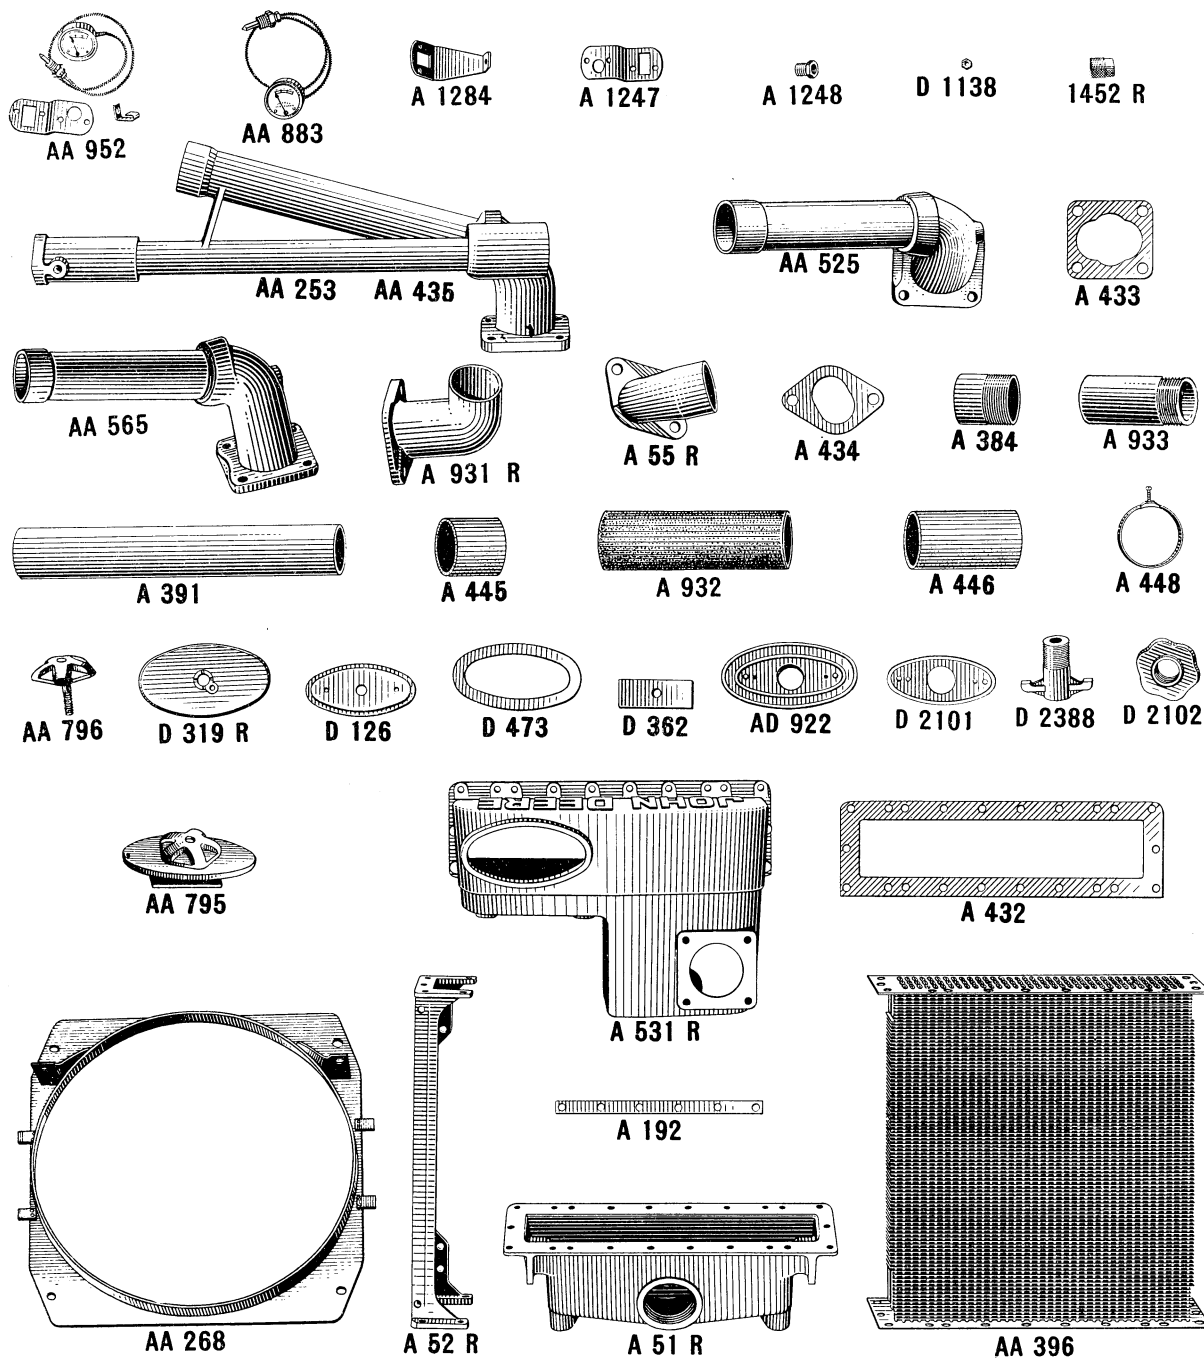


Plate No. 8

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

RADIATOR GUARD AND CURTAIN


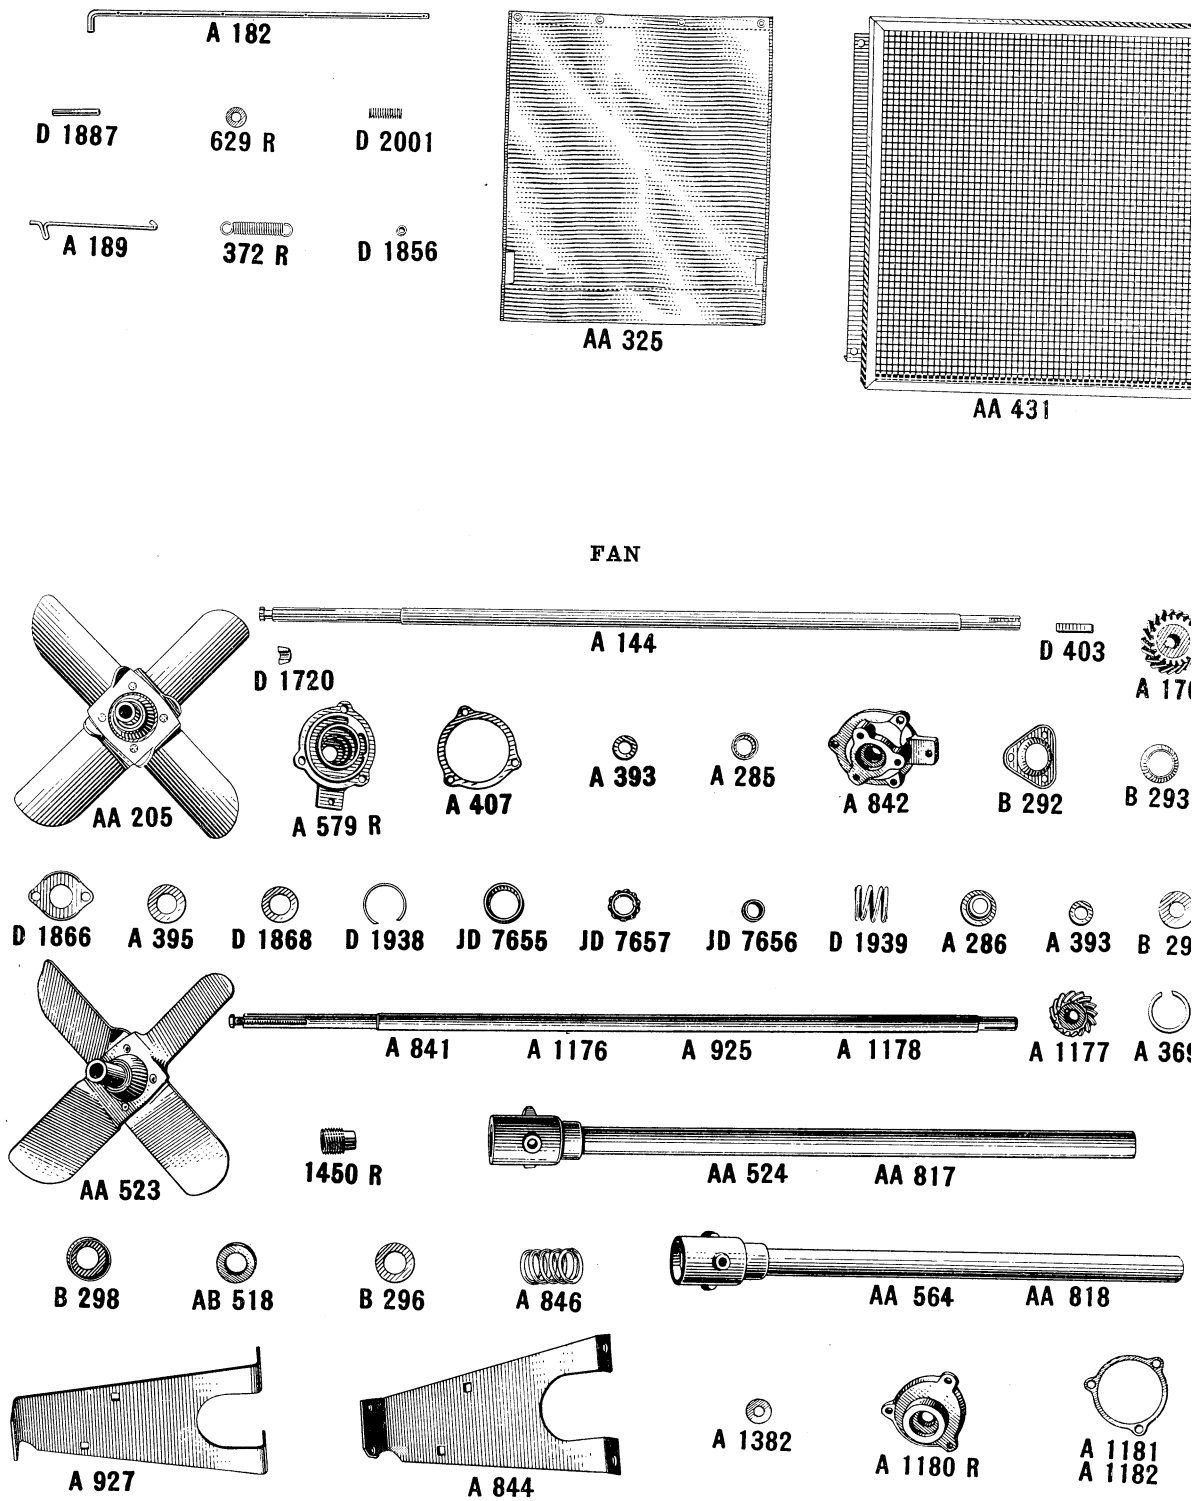



Plate No. 9

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS


PULLEY

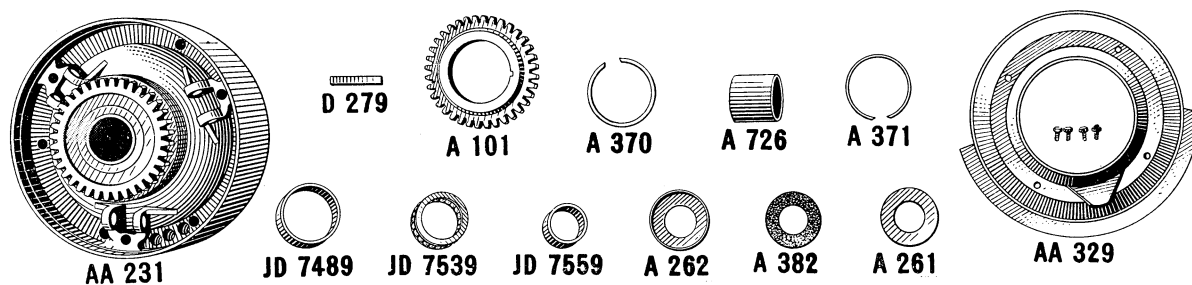


CLUTCH PARTS

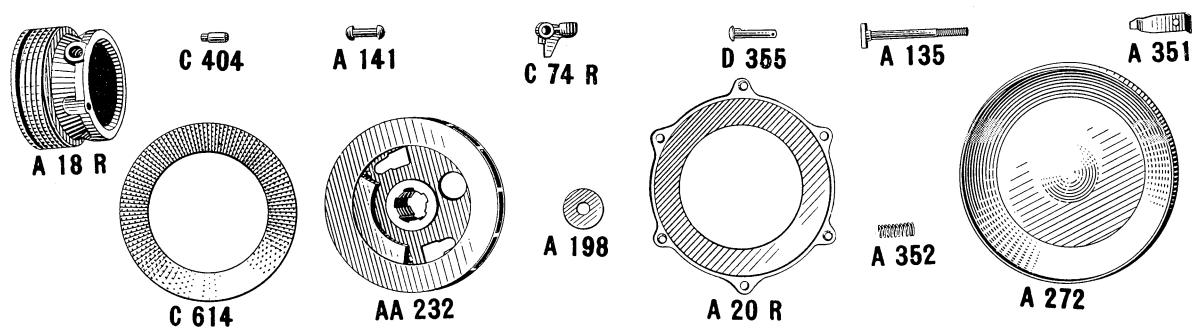

CLUTCH FORK BEARING AND PULLEY BRAKE

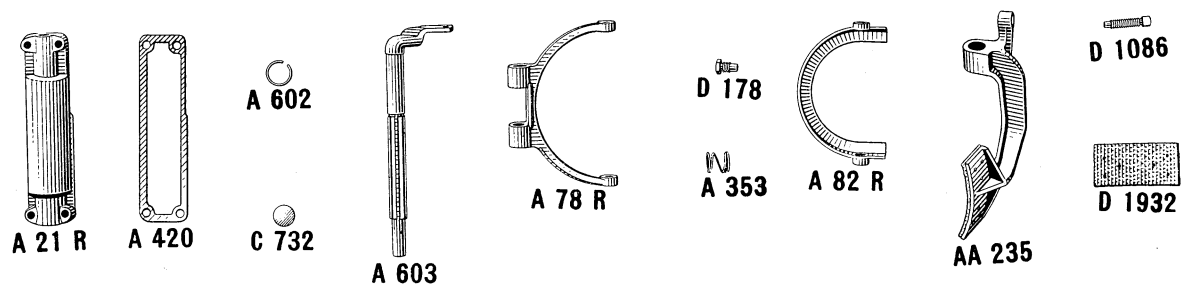


GEAR SHIFT

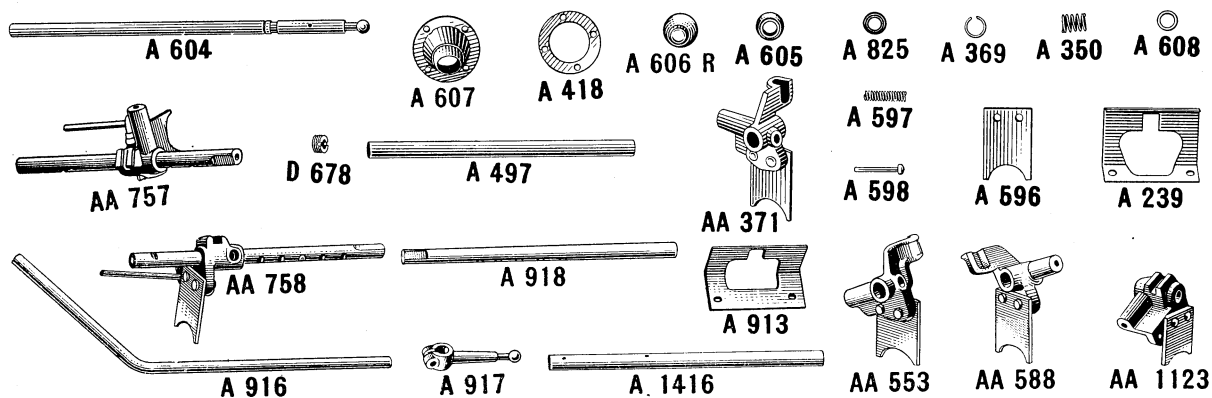


REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS


SLIDING GEAR SHAFT

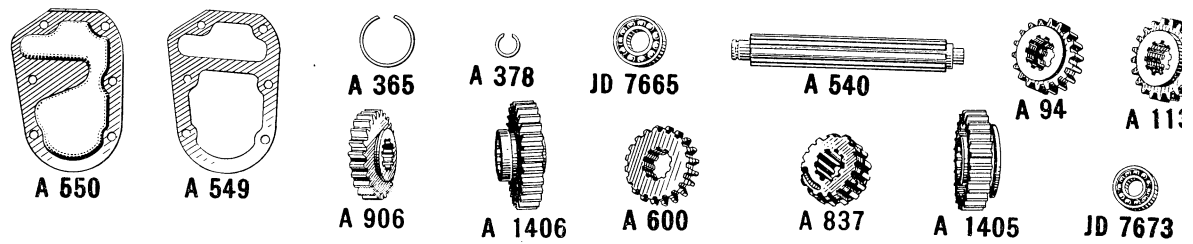

OVERDRIVE GEAR SHIFT

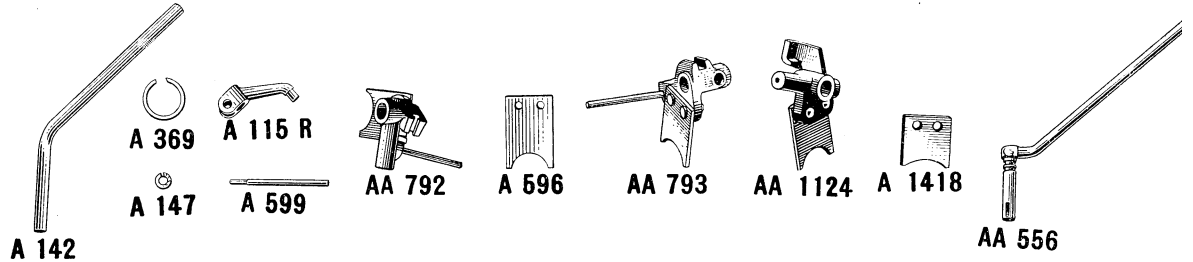


OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR

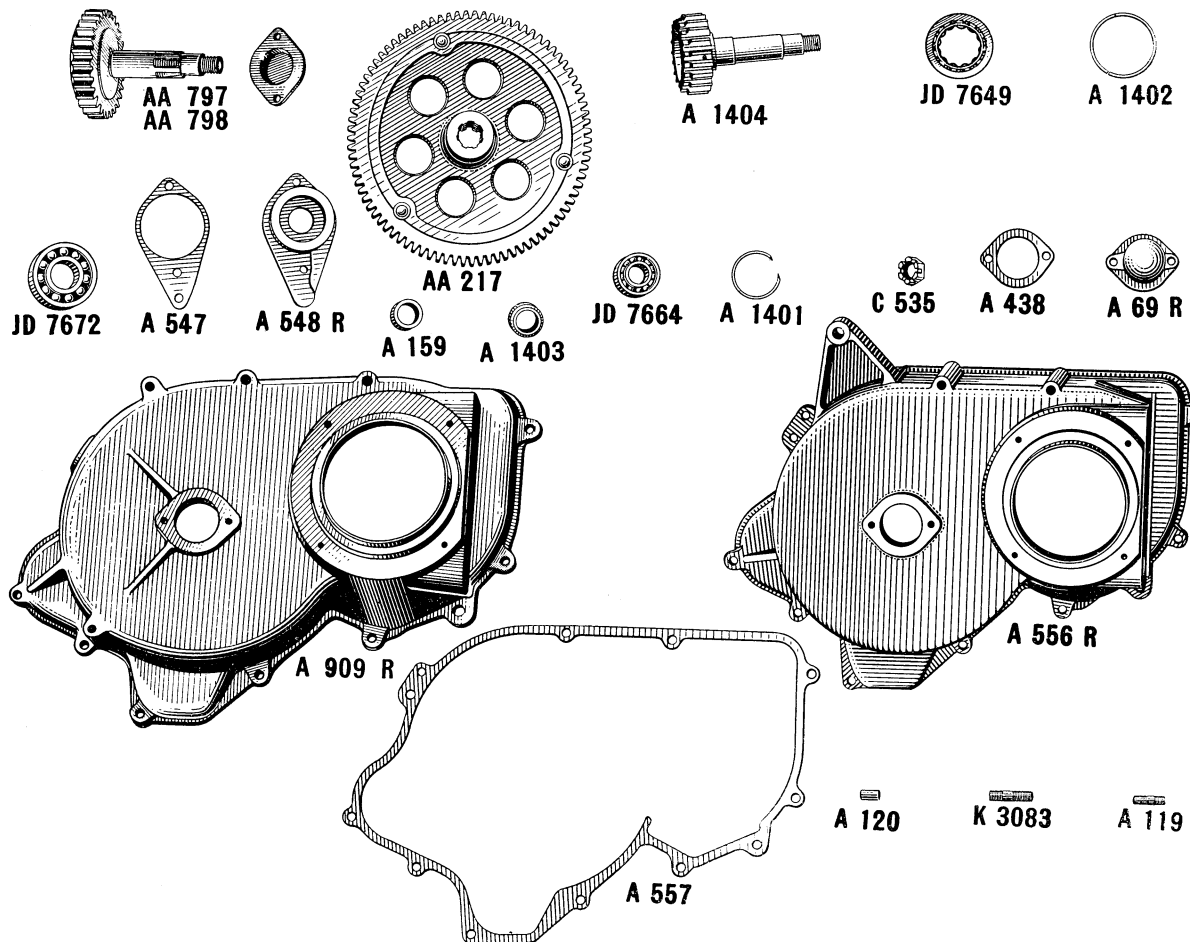


REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

OVERDRIVE IDLER GEAR AND COUNTERSHAFT

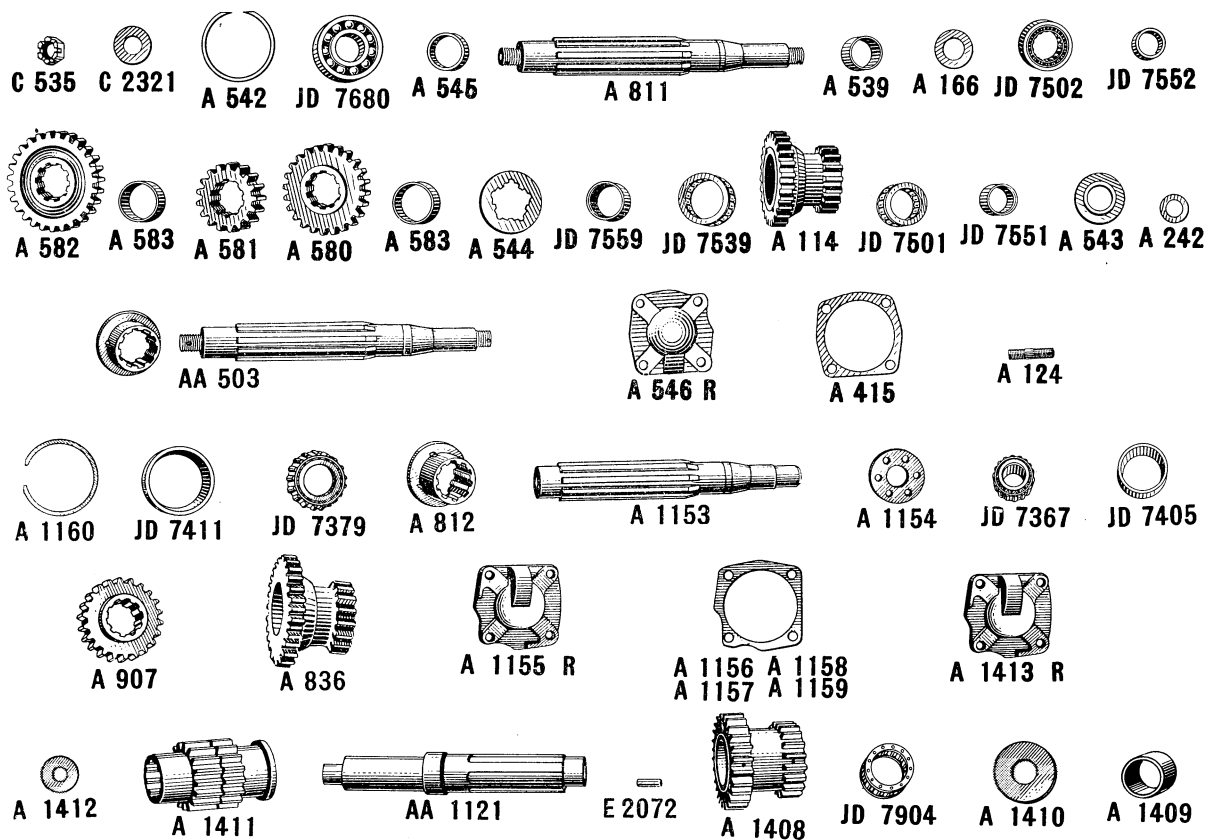

DIFFERENTIAL

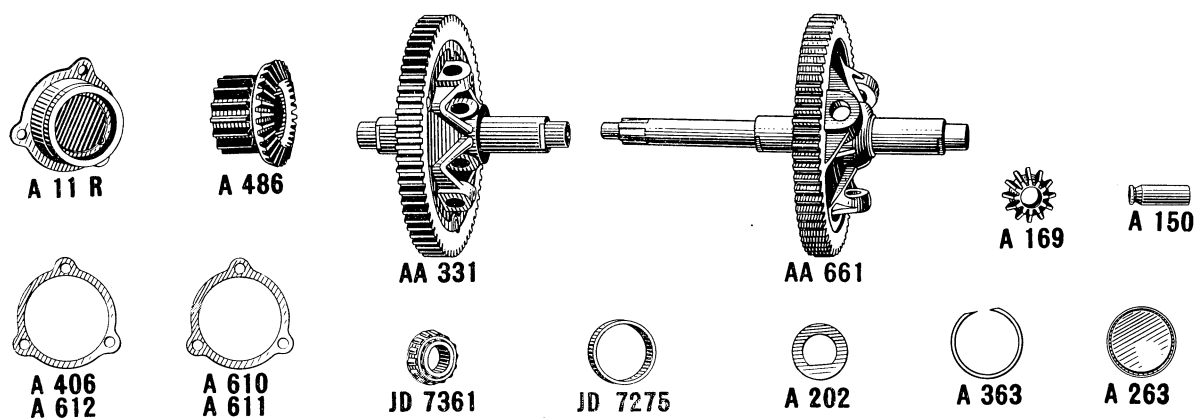

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

FINAL DRIVE

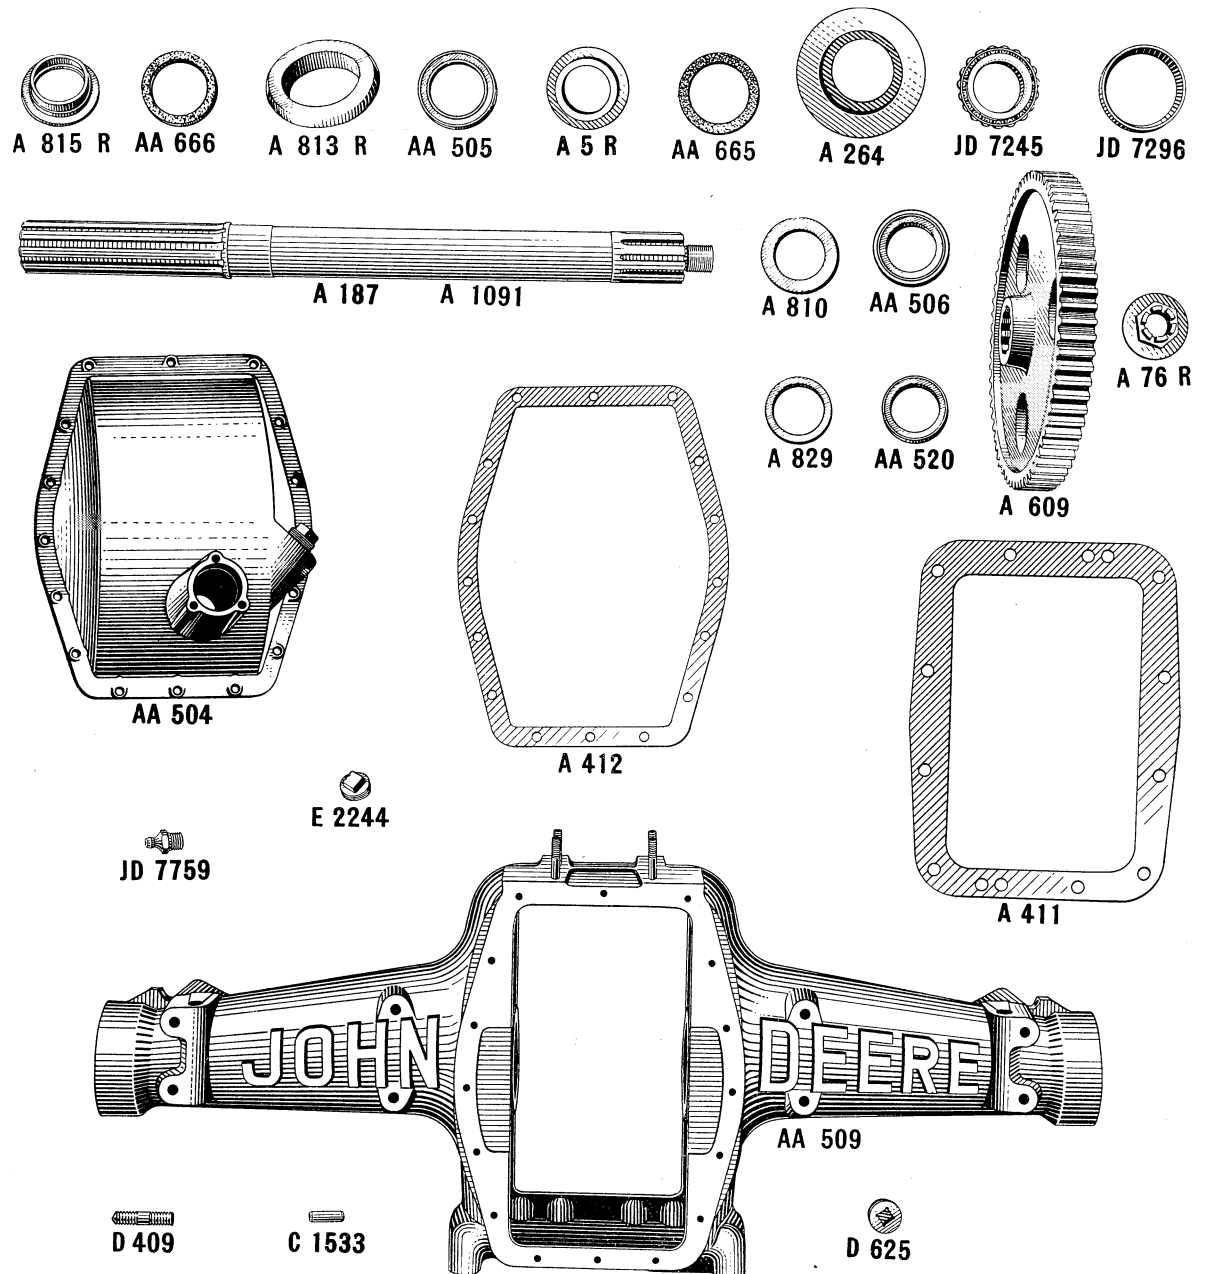


Plate No. 13

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
FINAL DRIVE—Continued









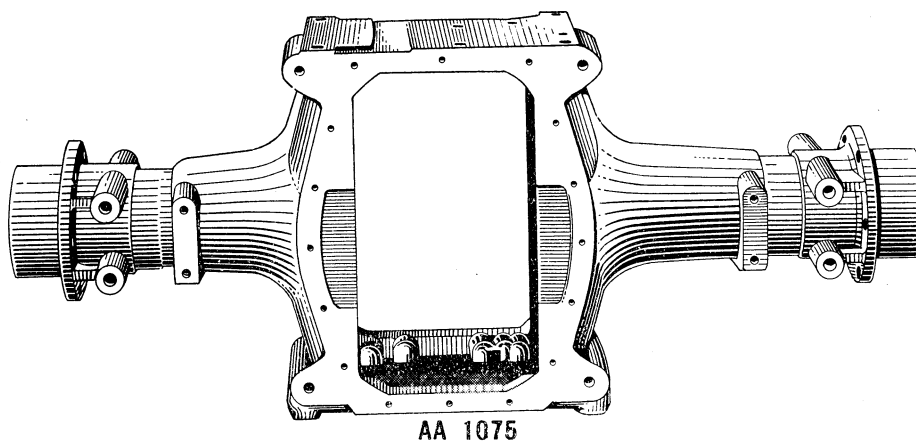


Plate No. 14


REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
REAR WHEELS AND WHEEL EQUIPMENT

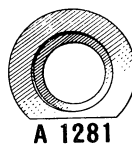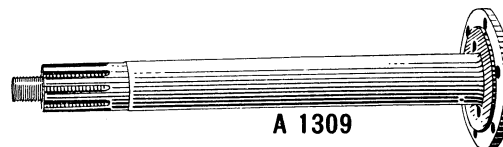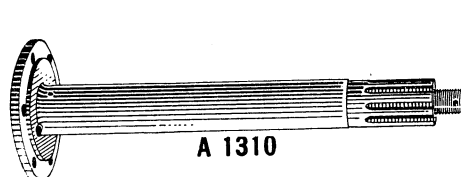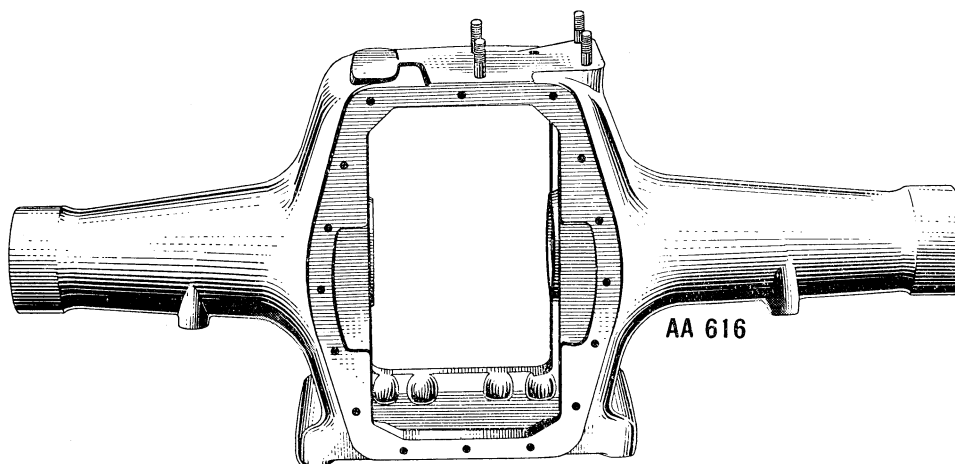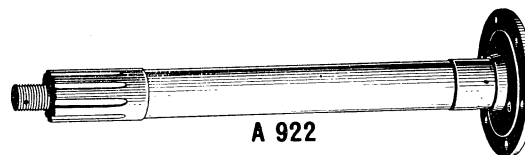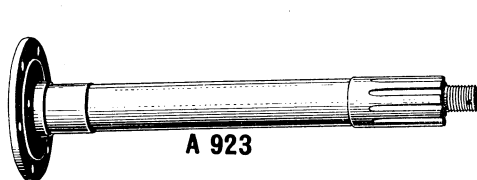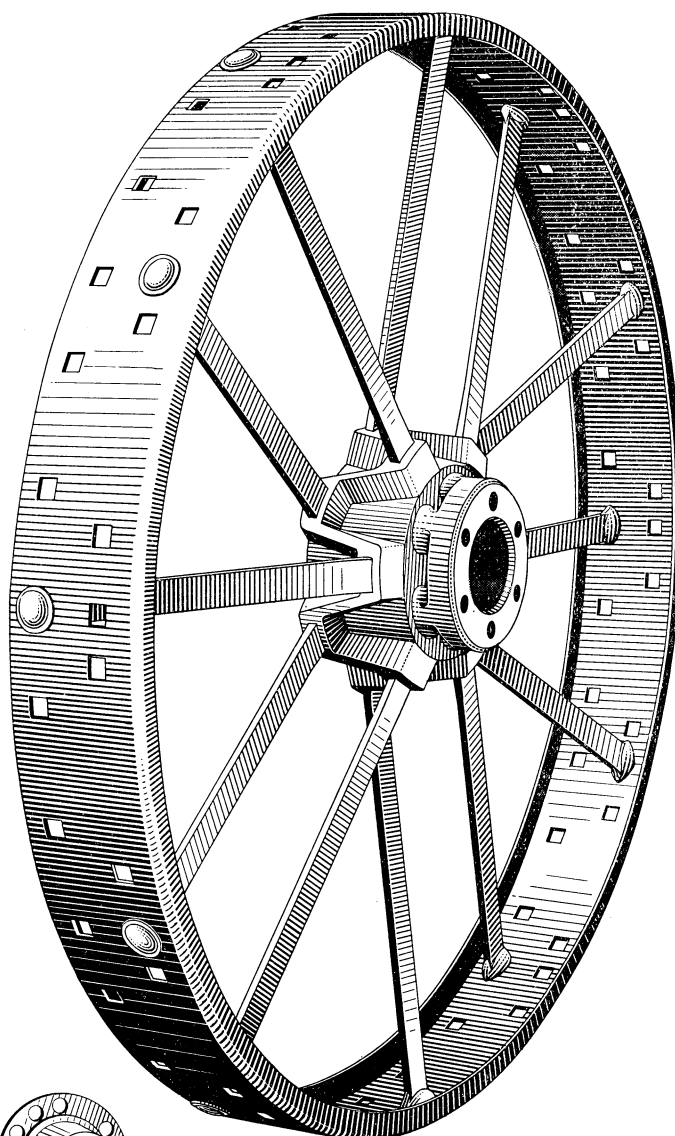

JD 1214

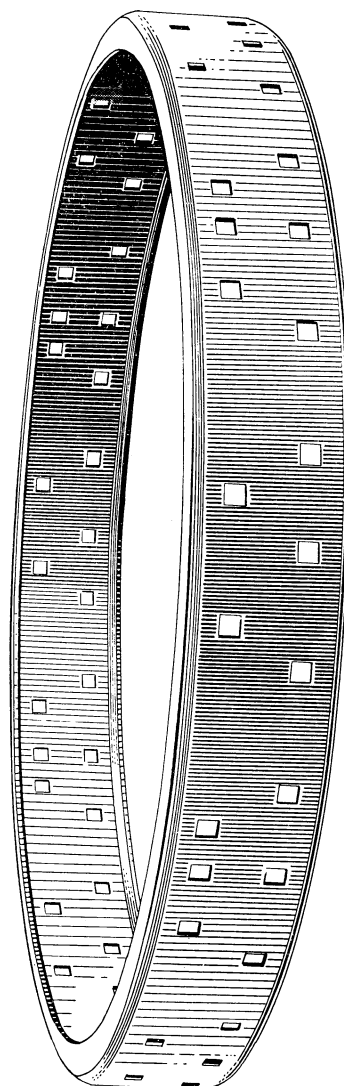

A 840

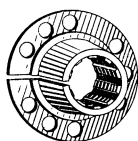

A 77



A 473



C 1030



D 233

D 1078
D 2121

D 2447



D 938



D 411



C 1646 R



AC 649

Plate No. 15

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
REAR WHEELS AND WHEEL EQUIPMENT—Continued



Plate No. 16

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
REAR WHEELS AND WHEEL EQUIPMENT—Continued



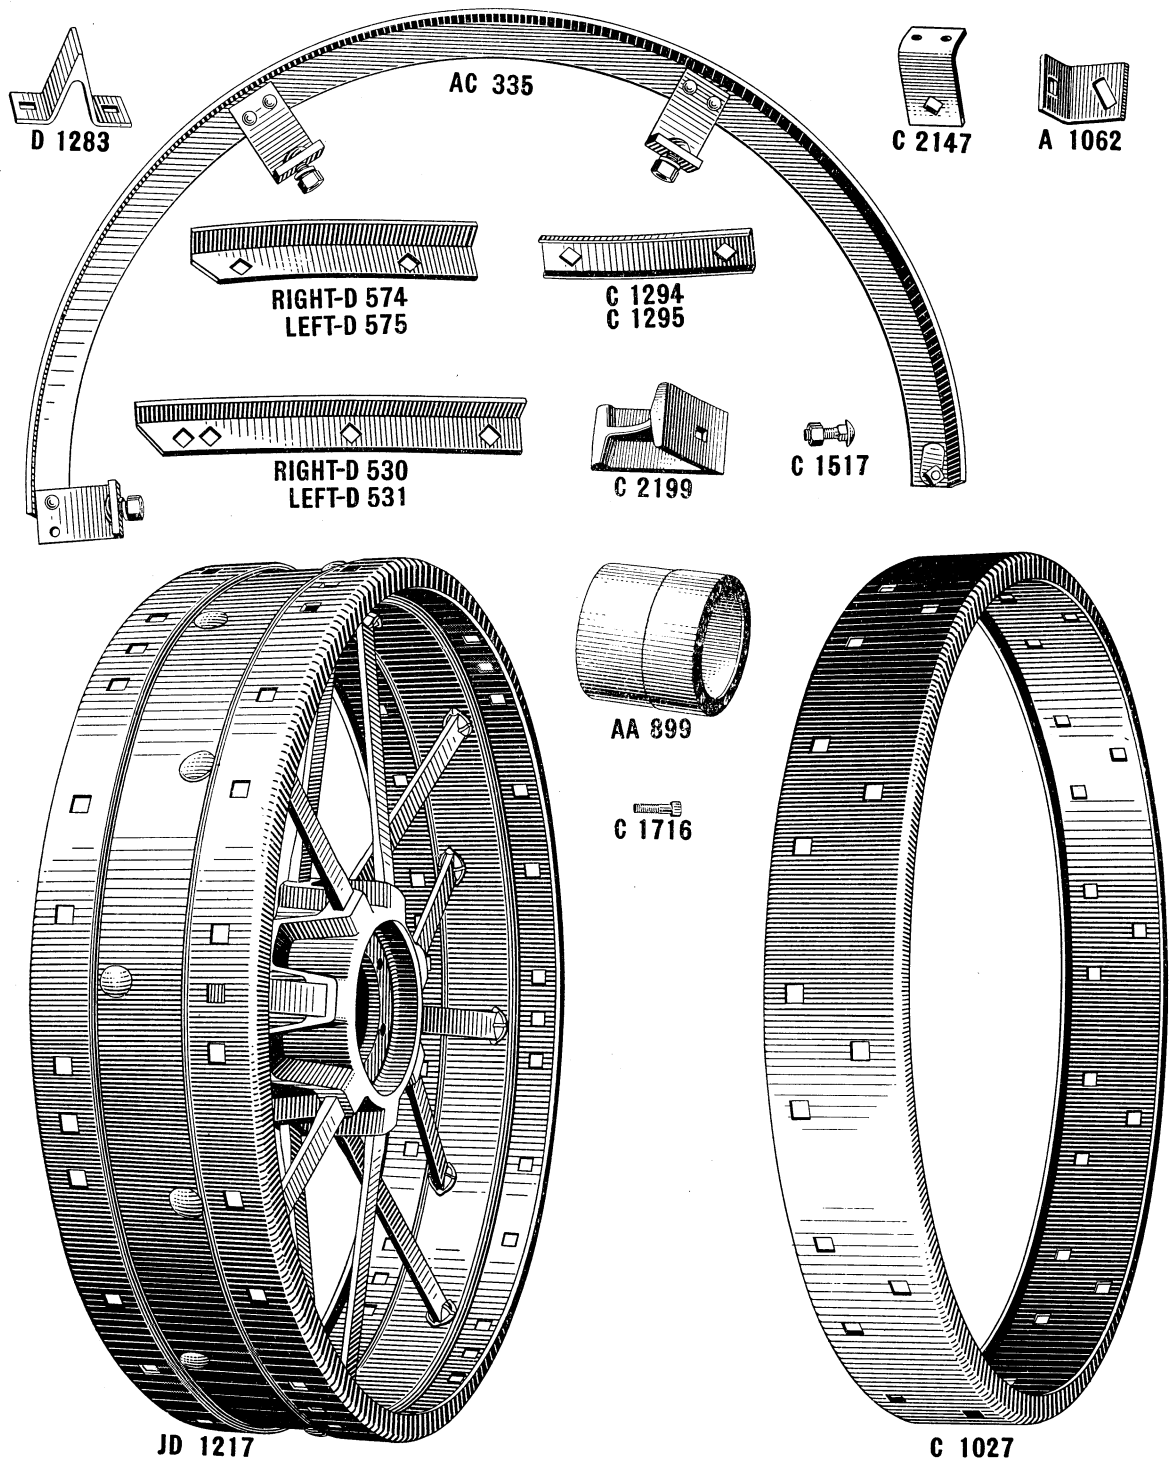


Plate No. 17


REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
REAR WHEELS AND WHEEL EQUIPMENT—Continued

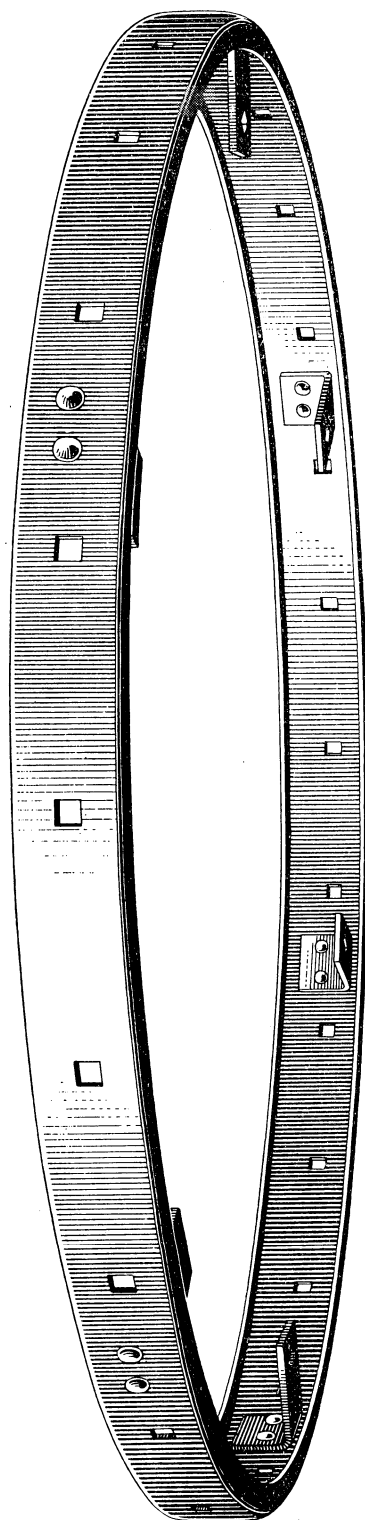







AC 918

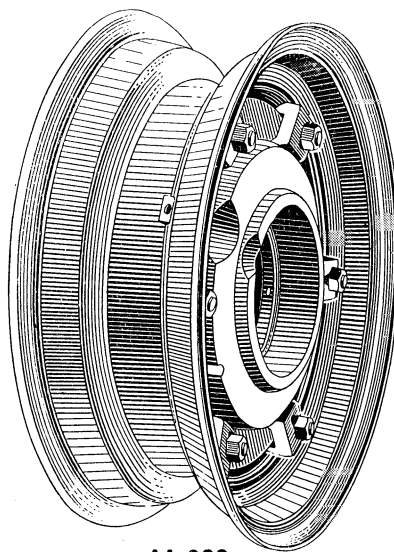

AA 933

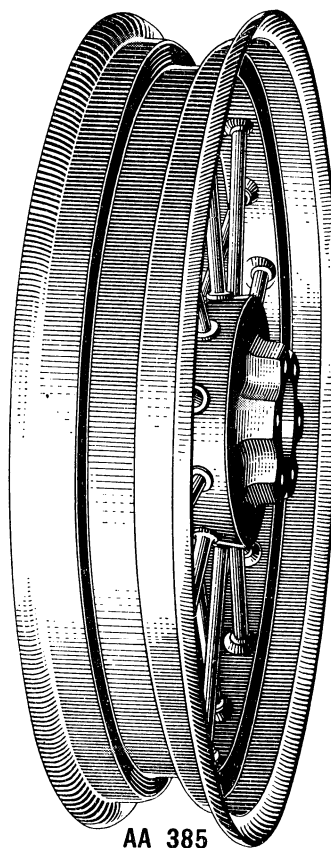


AA 385

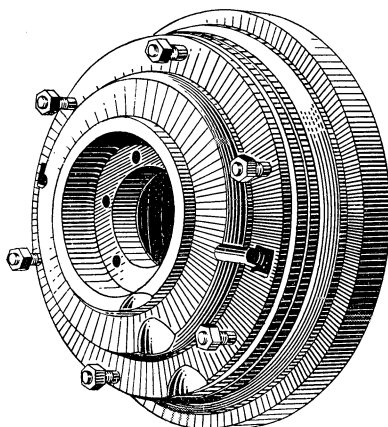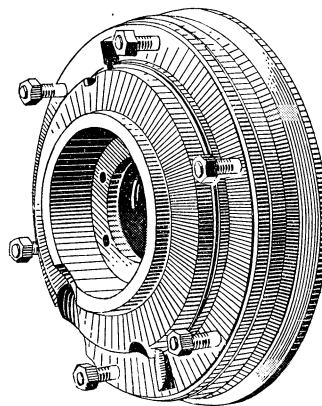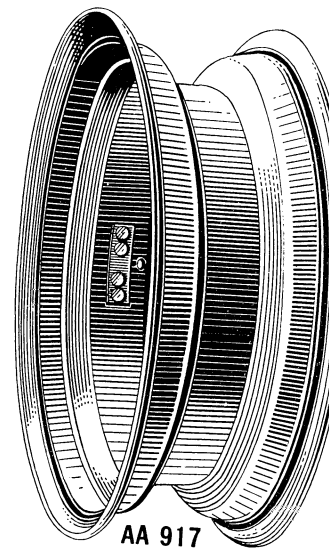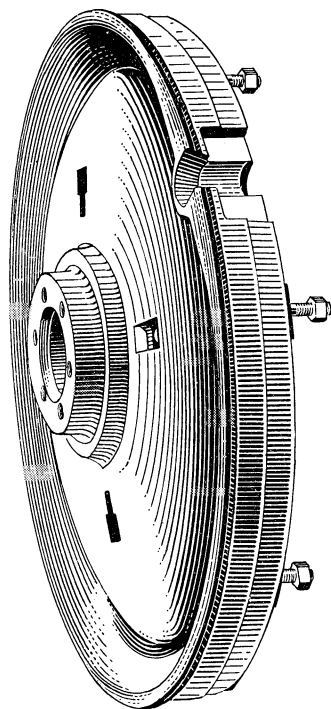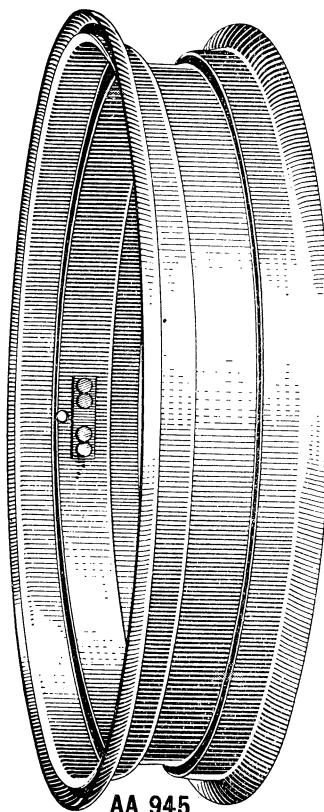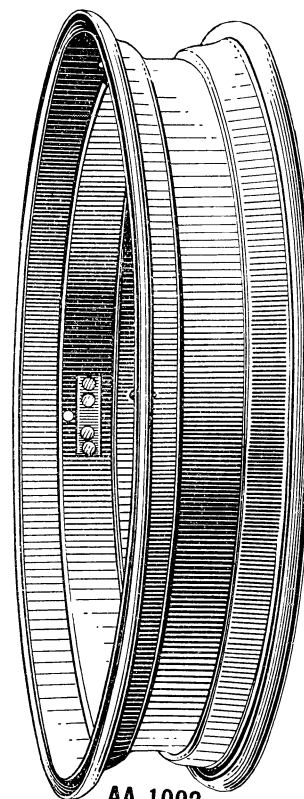
REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS**REAR WHEELS AND WHEEL EQUIPMENT—Continued****AA 1078****AA 1087****AA 917****AA 1088****AA 945****AA 1002****A 1283
A 1293**

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS


REAR WHEELS AND WHEEL EQUIPMENT—Continued

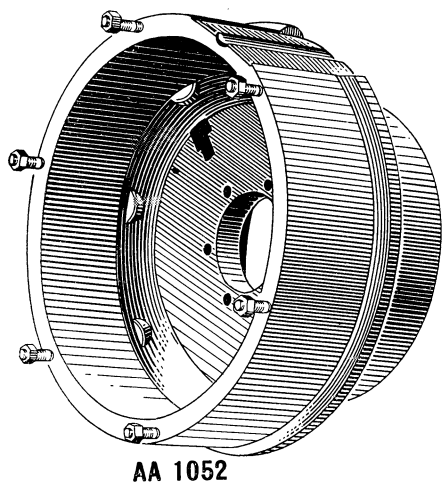

AA 1052

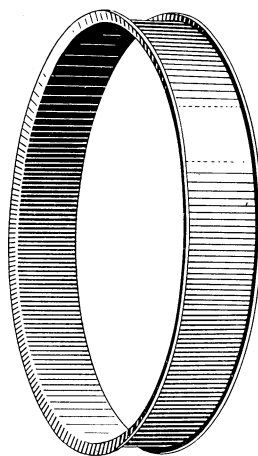

D 2110

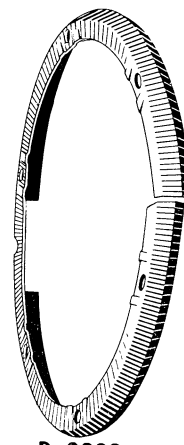

D 2383



C 719



C 1479



D 409



D 2526 R



B 634 R



A 1325



C 744




D 2186




D 2629



D 2184

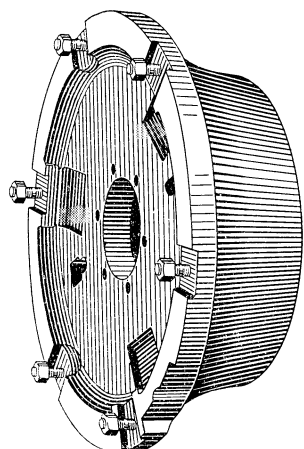

AA 1051

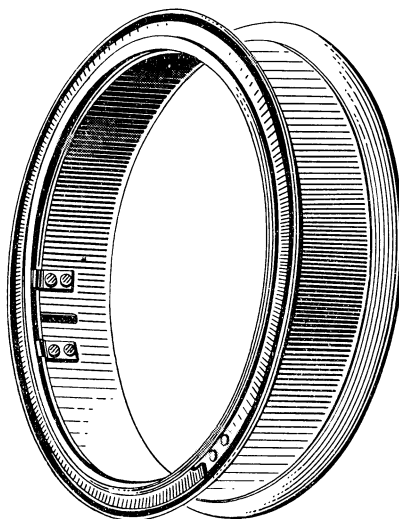

AA 1056




AA 1058


Plate No. 20

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

WHEEL SCRAPERS

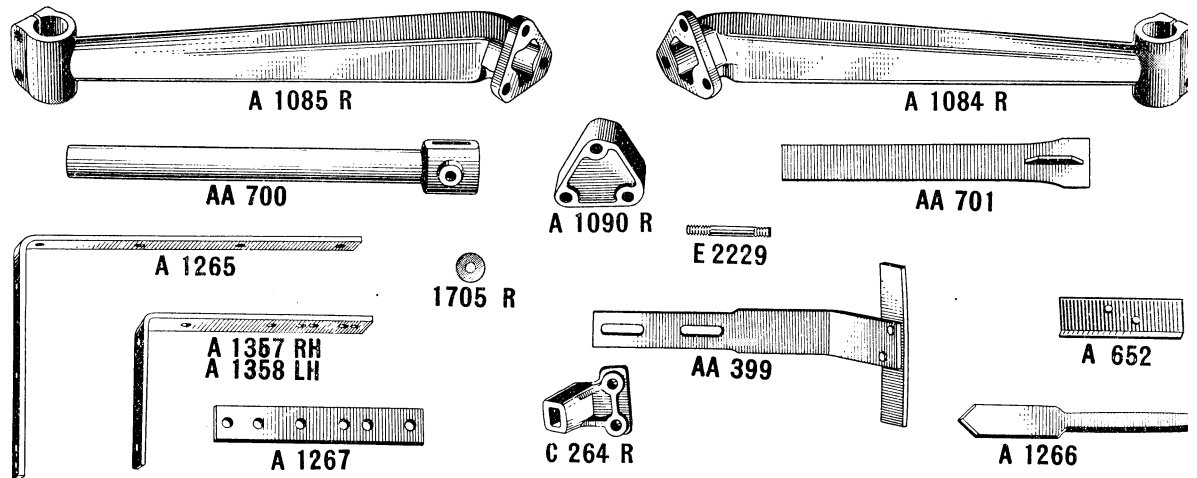


EMERGENCY BRAKE

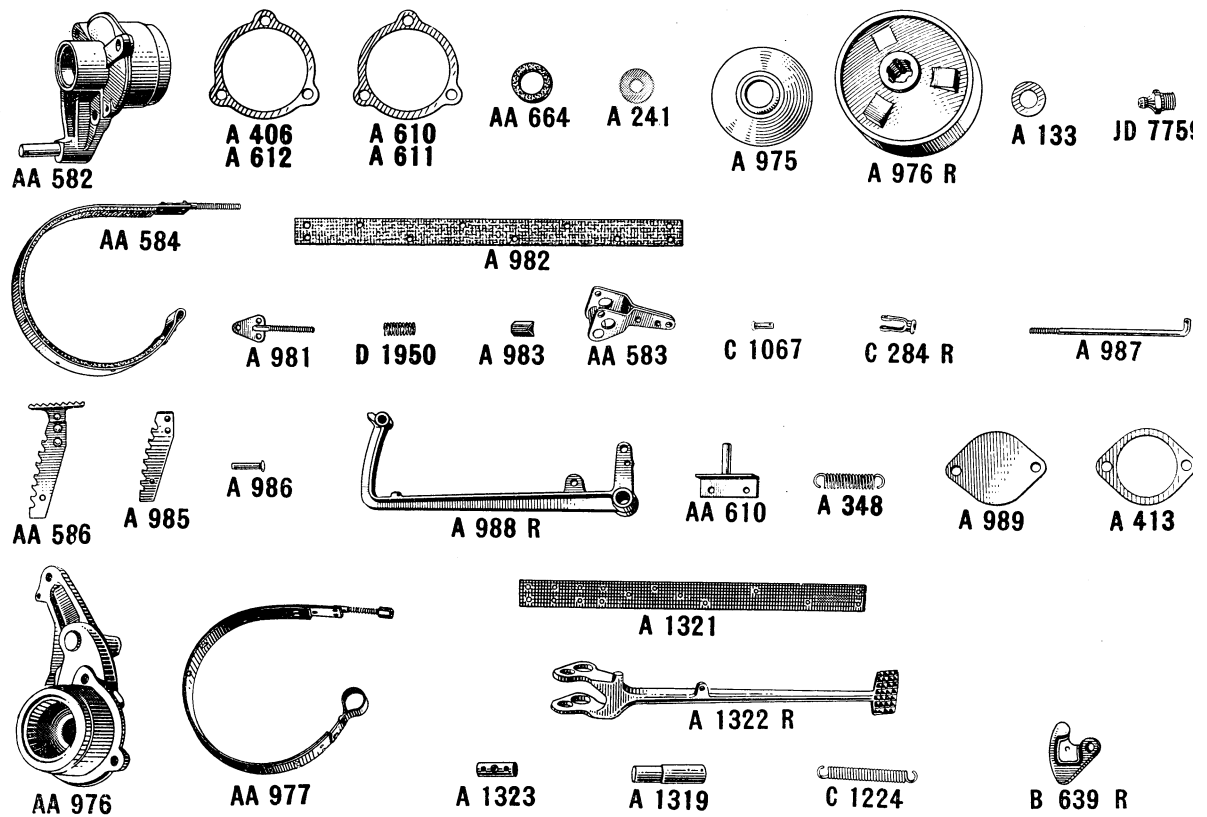

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

DIFFERENTIAL BRAKES

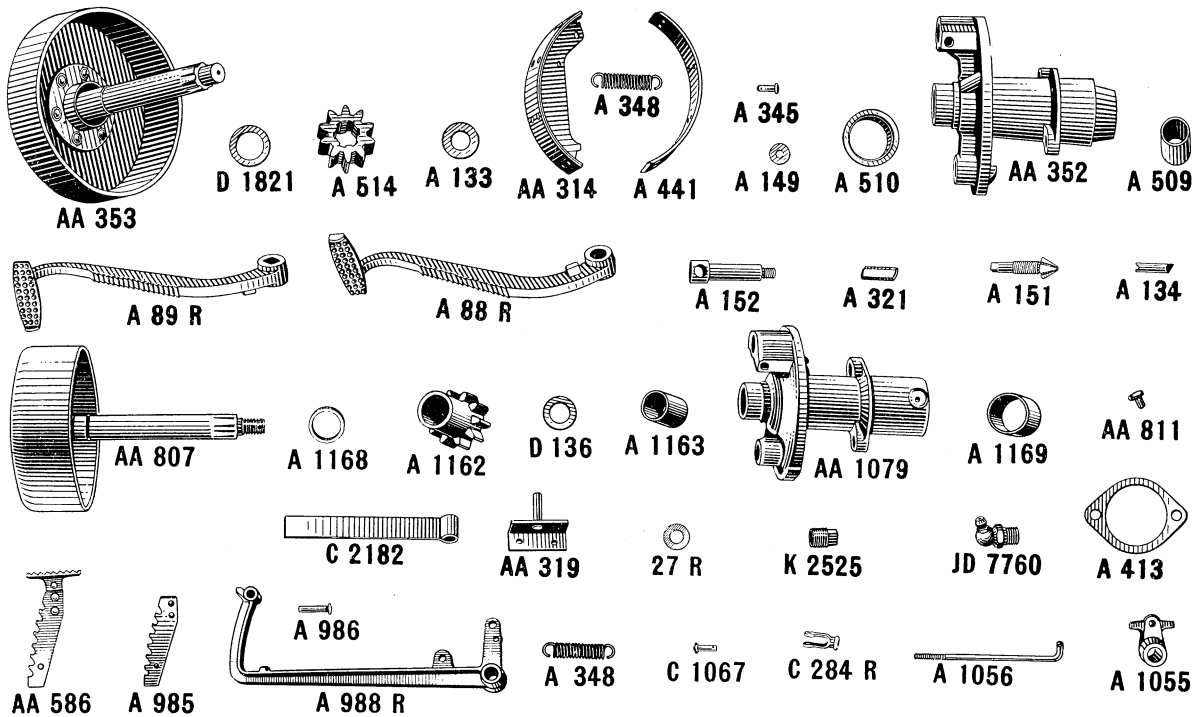

WHEEL BRAKES

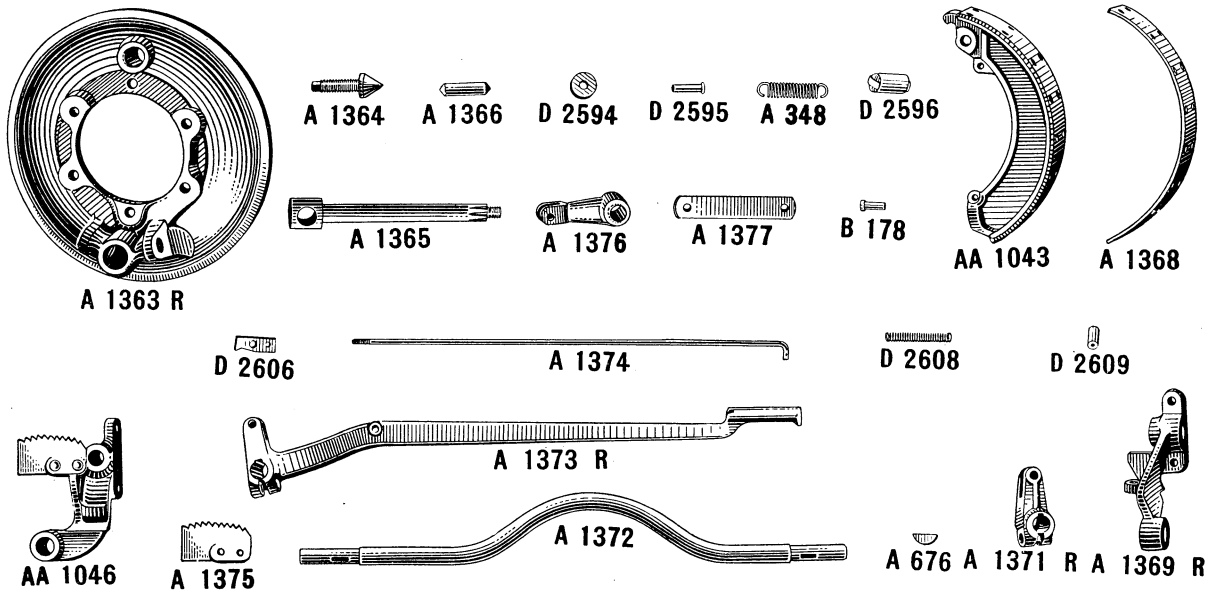


Plate No. 22

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

FRONT AXLE AND FRONT END SUPPORT





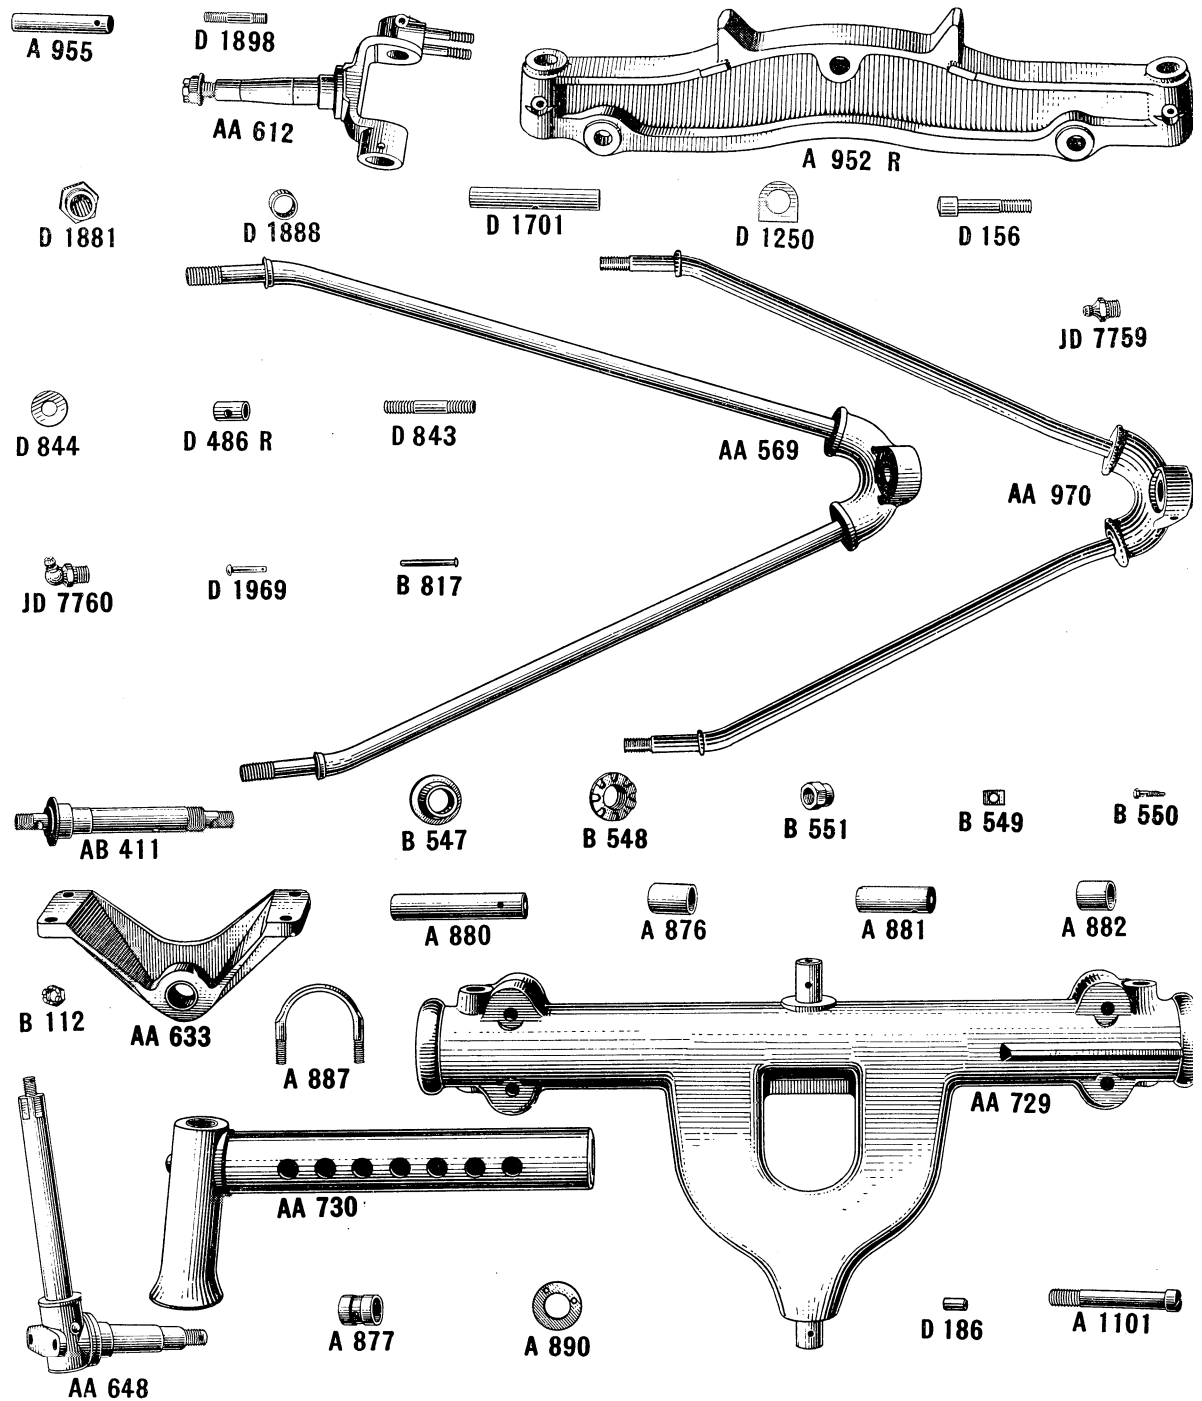


Plate No. 23

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
FRONT AXLE AND FRONT END SUPPORT—Continued

**AA 296****AA 631****A 1297 R****A 950 R****A 1300 R**

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
FRONT WHEELS AND FRONT WHEEL EQUIPMENT

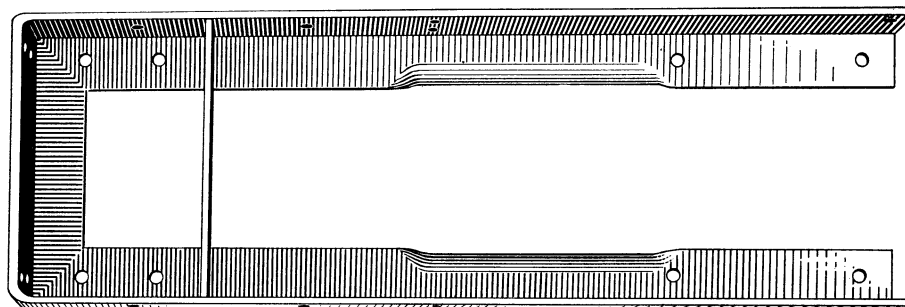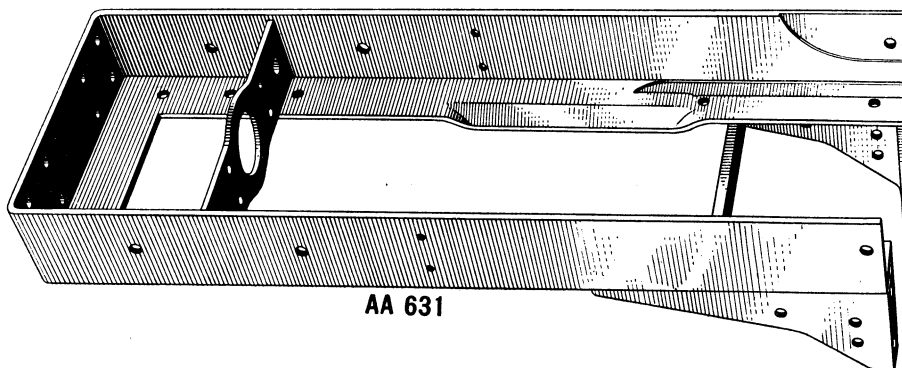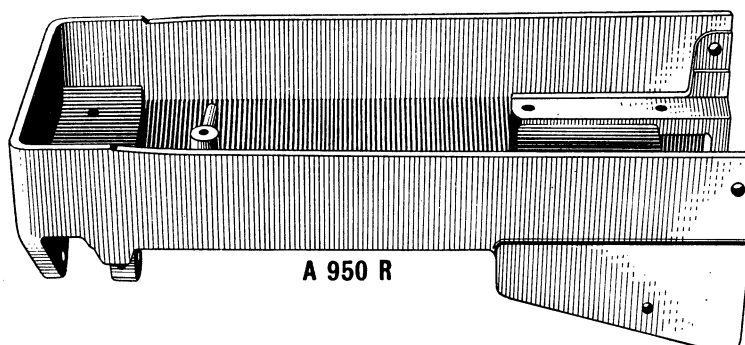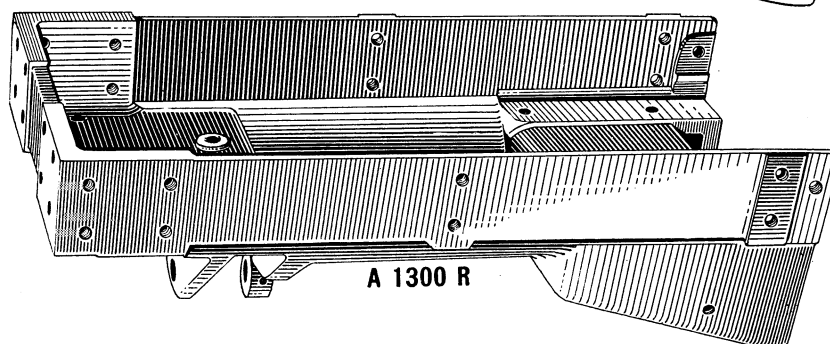

AC 119



C 677



A 81 R



JD 7216



JD 7266



JD 7270



JD 7224



D 635



AA 663



JD 7222



JD 7266




B 89




AB 474




JD 7759

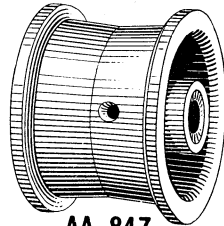


AA 847

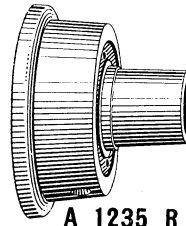


A 1235 R

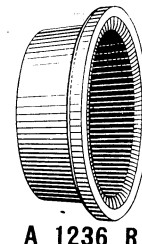


A 1236 R

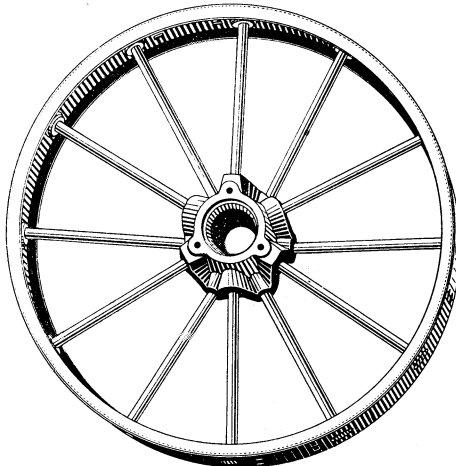


AC 885

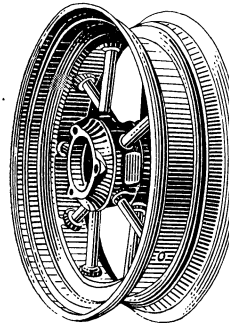


AC 1088

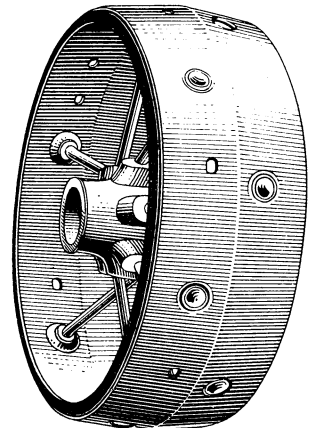


AA 787

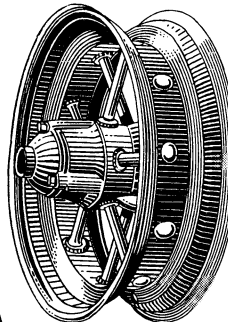


AC 1062

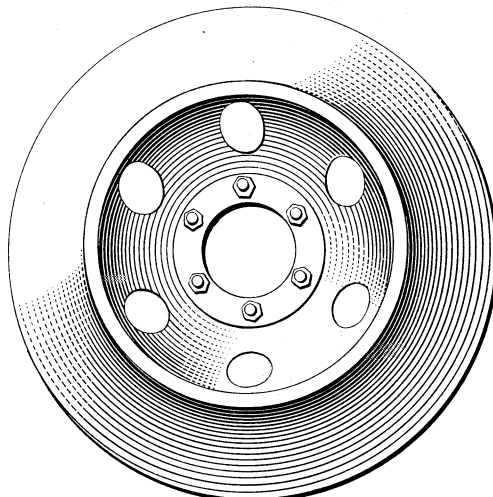

AC 847

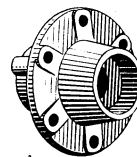

AC 513

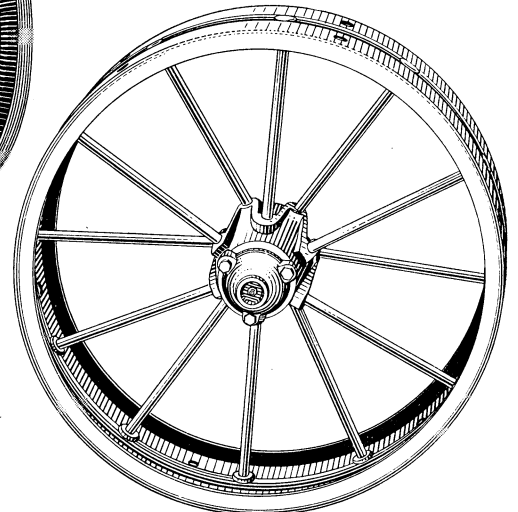

AD 900

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
FRONT WHEELS AND FRONT WHEEL EQUIPMENT—Continued






 
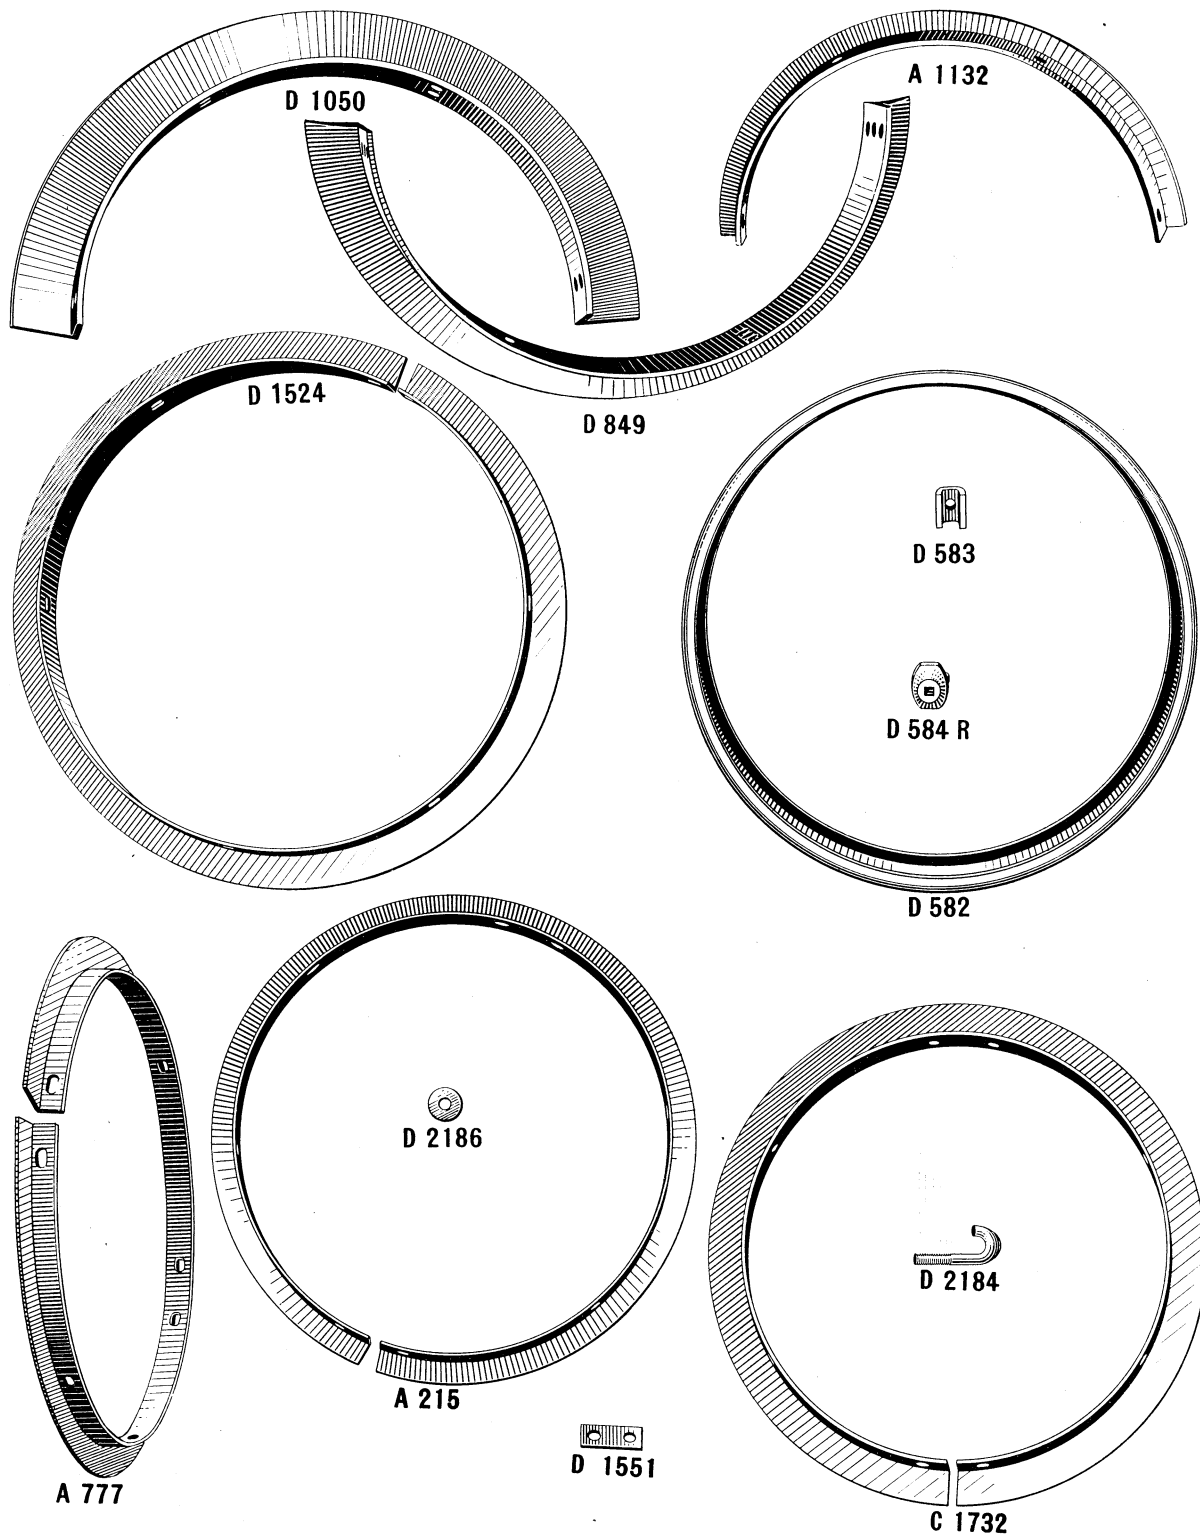


Plate No. 26


REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

PEDESTAL

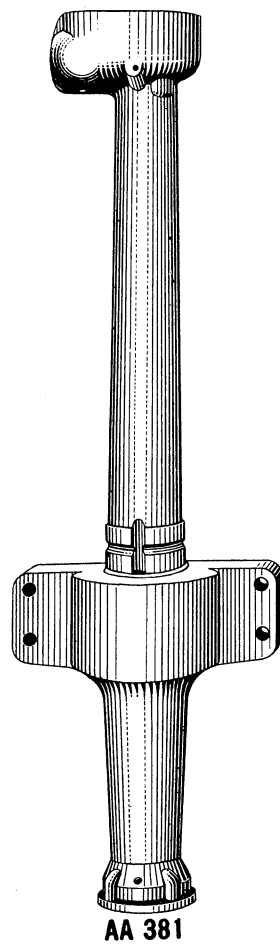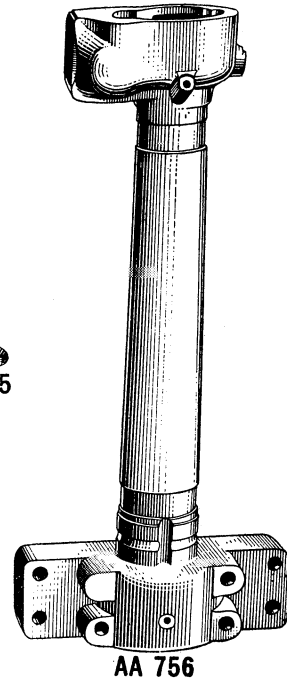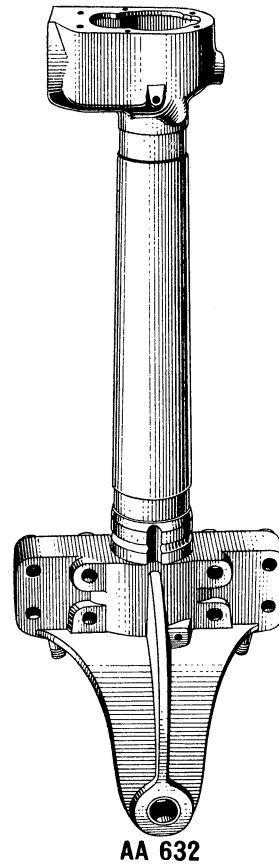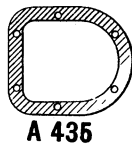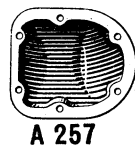

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

STEERING PARTS

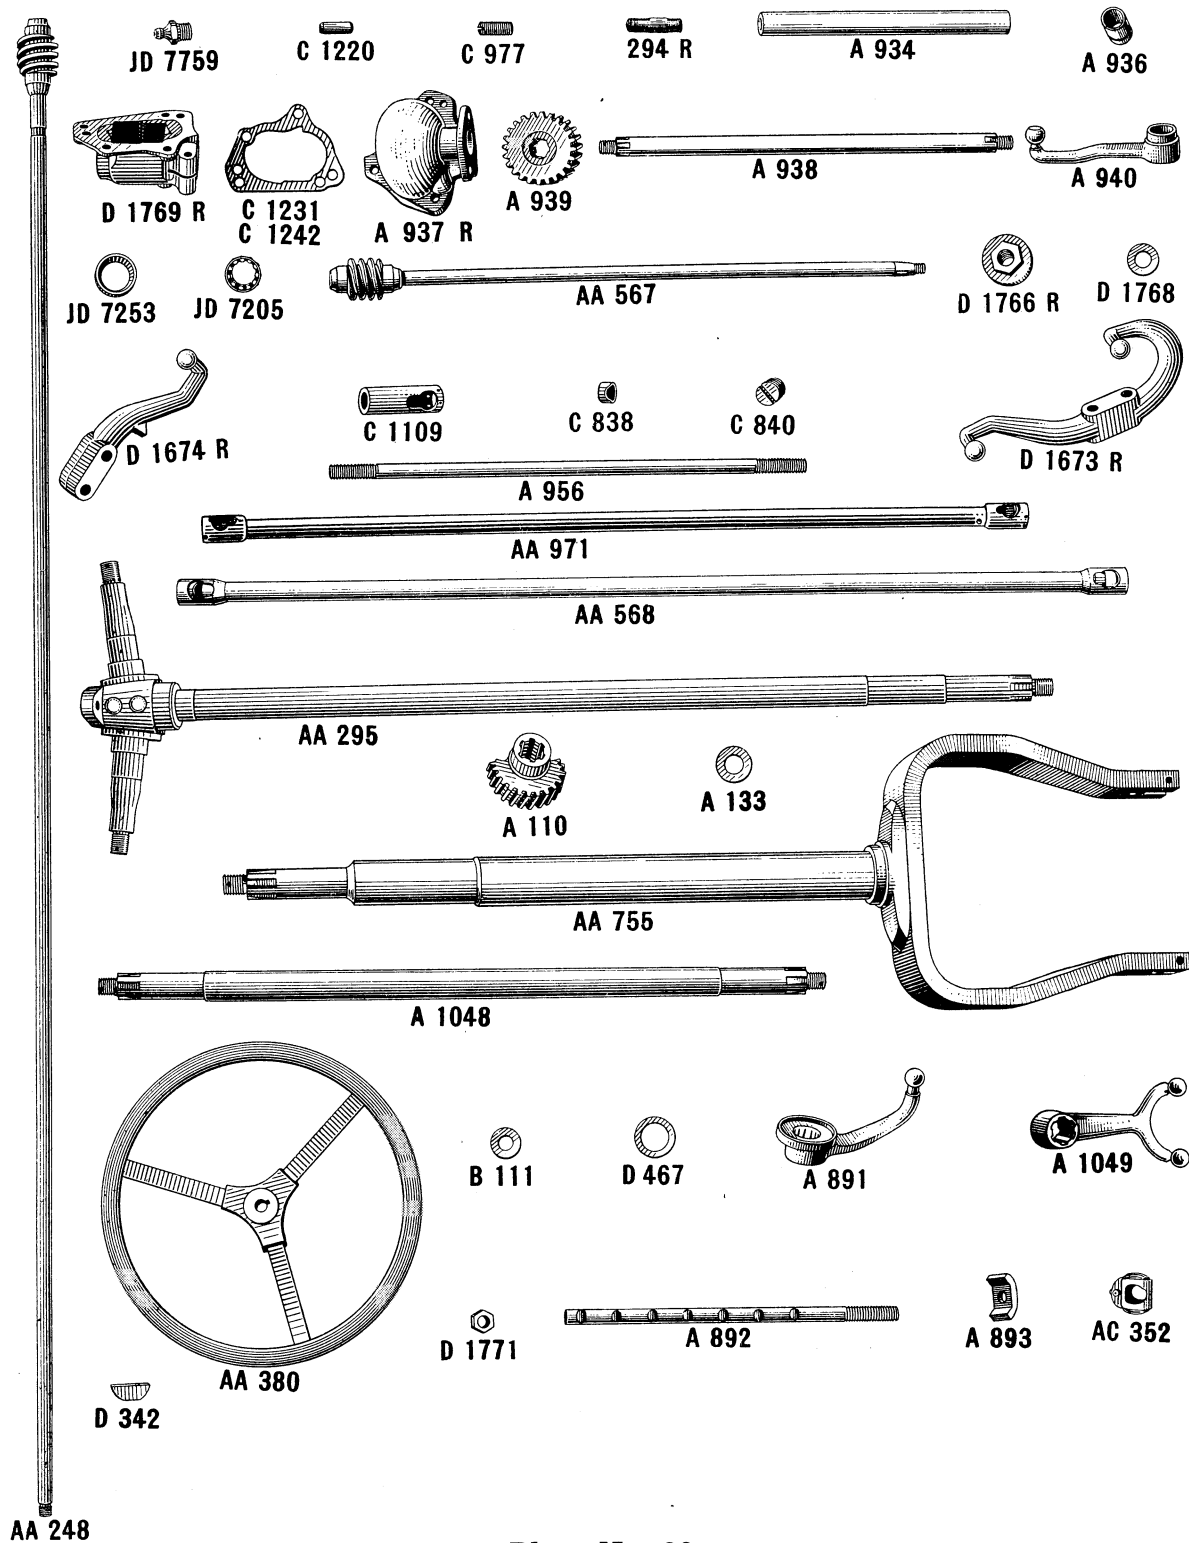

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

DRAWBAR AND SEAT



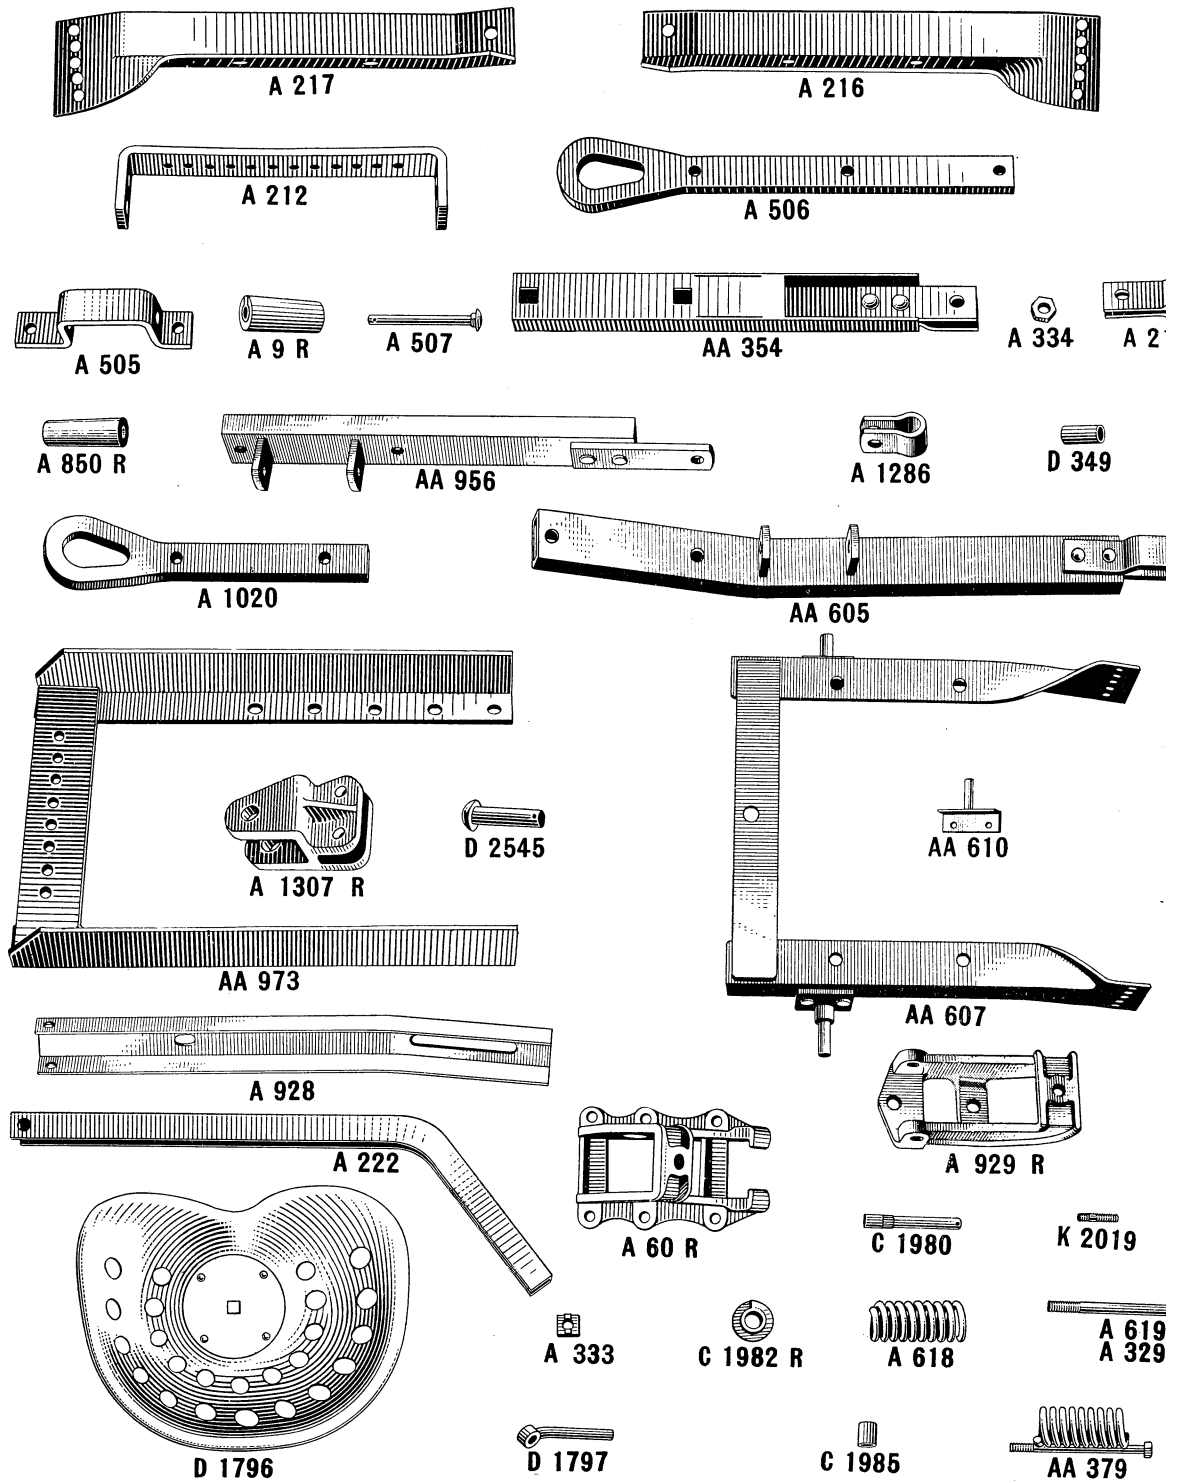



Plate No. 29

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS
SEAT AND PLATFORM

AD 1298

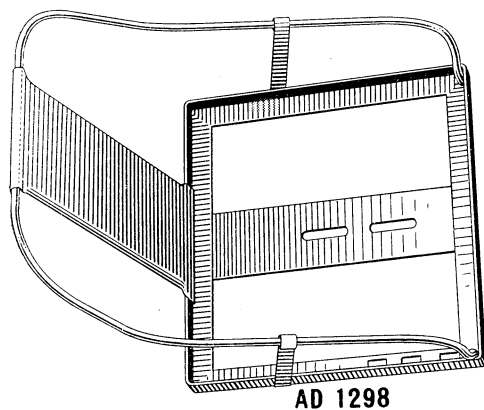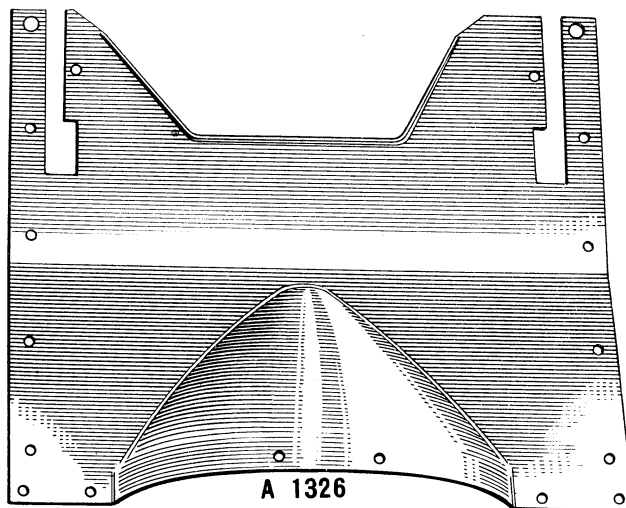


A 1326

 


AA 974



 
A 1316



A 1343

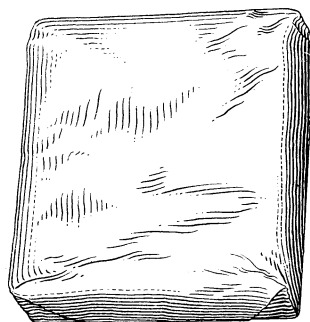


AD 1299

 


A 1327



A 1344

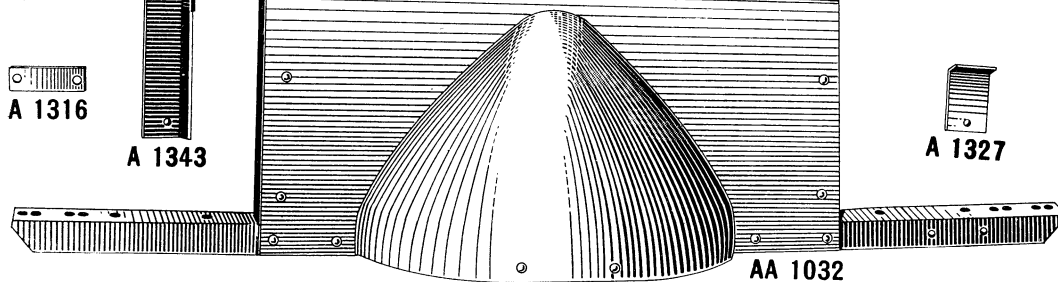

AA 1032

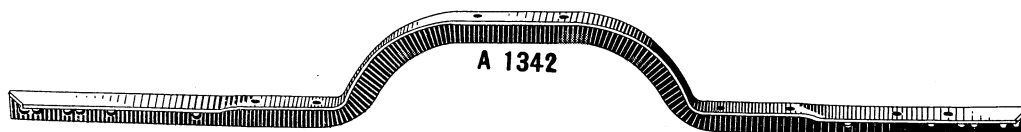

A 1342

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

PLATFORM—Continued

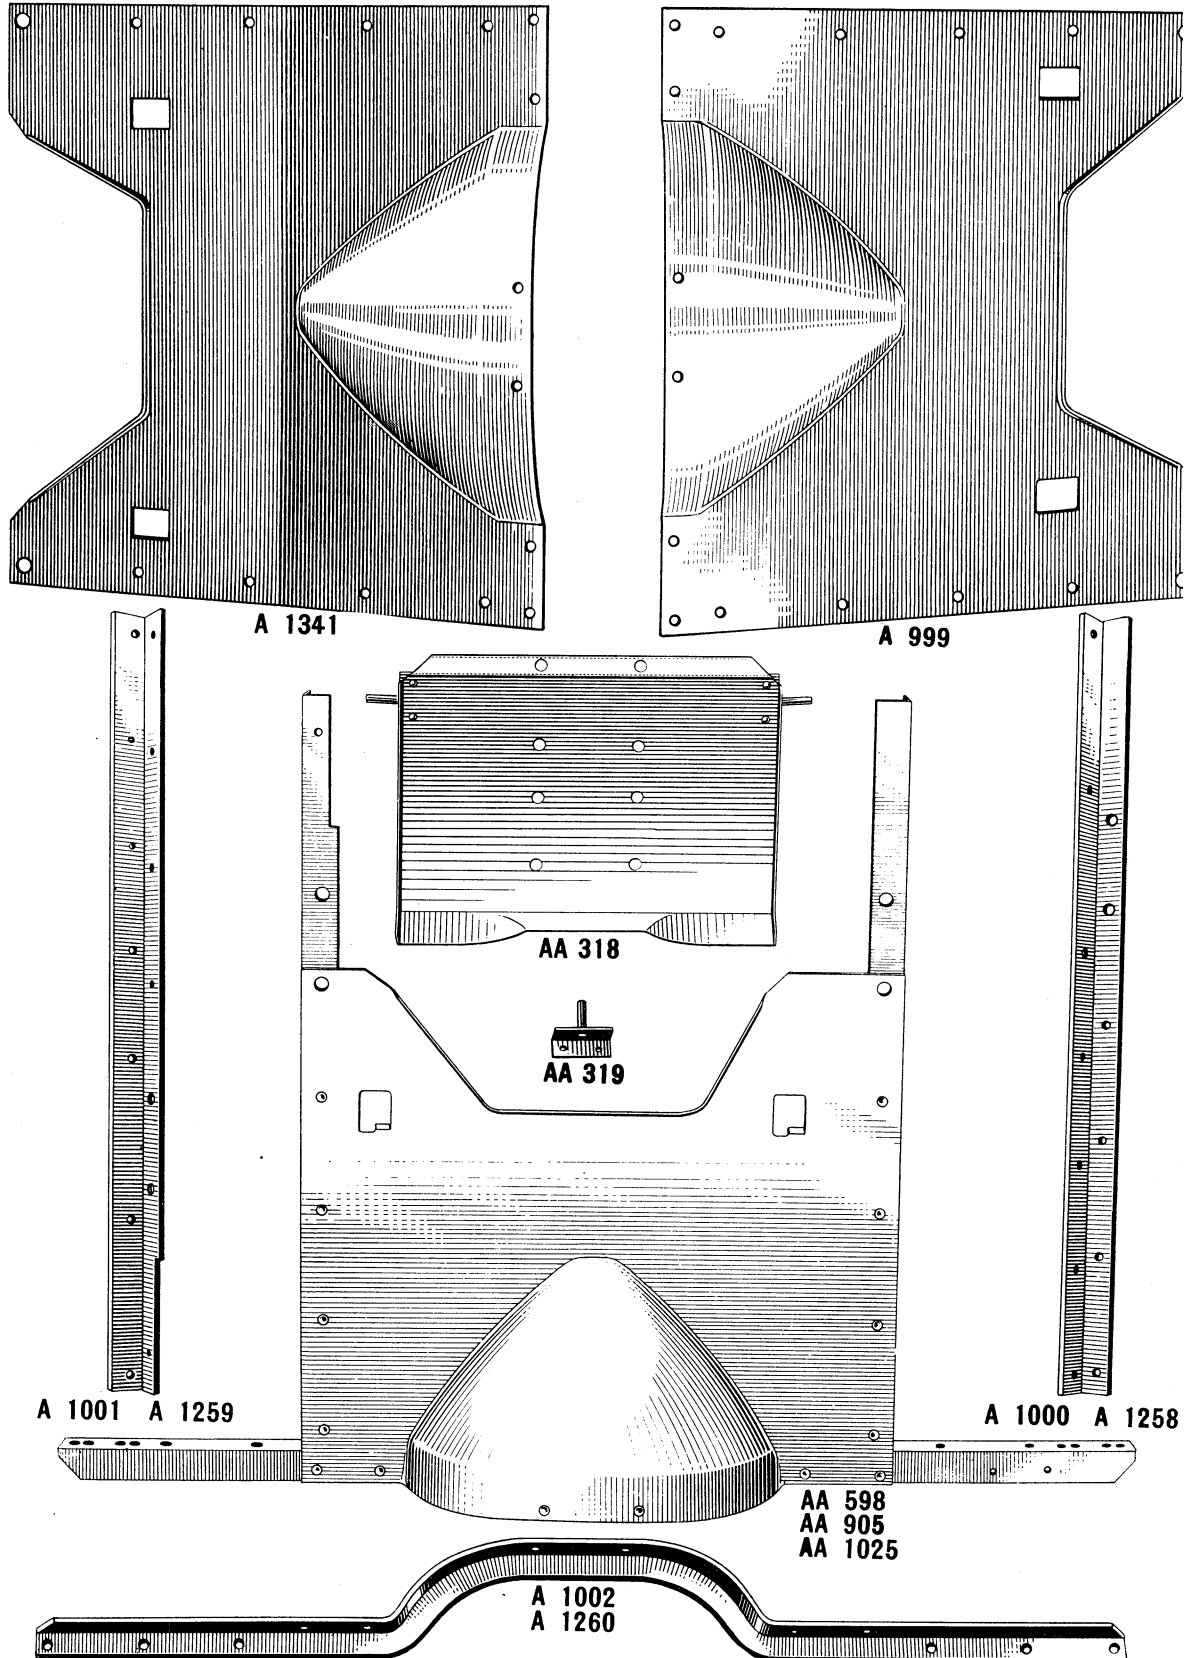


Plate No. 31

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

FENDERS

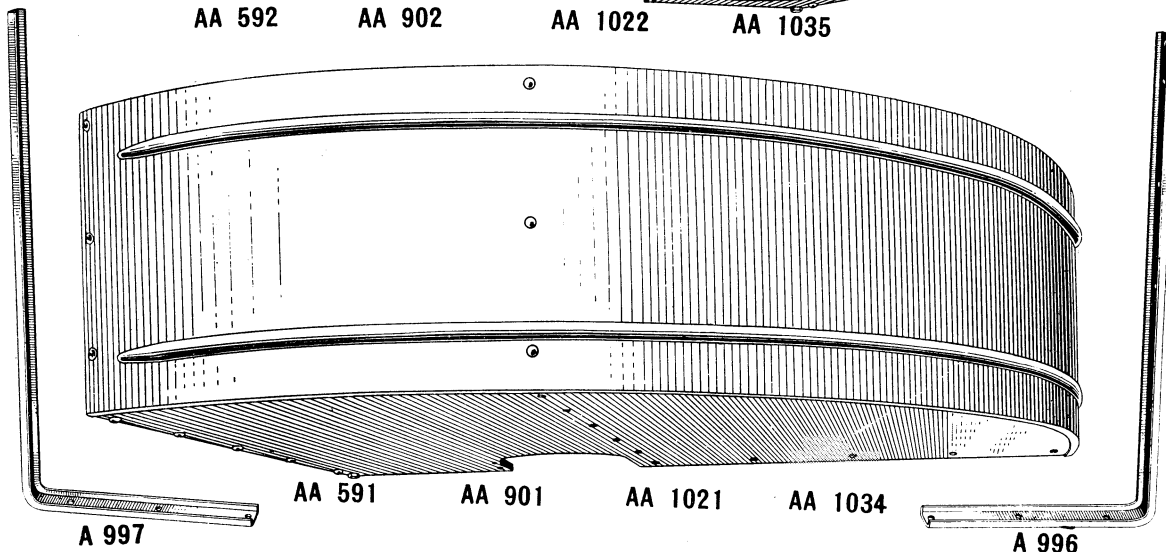
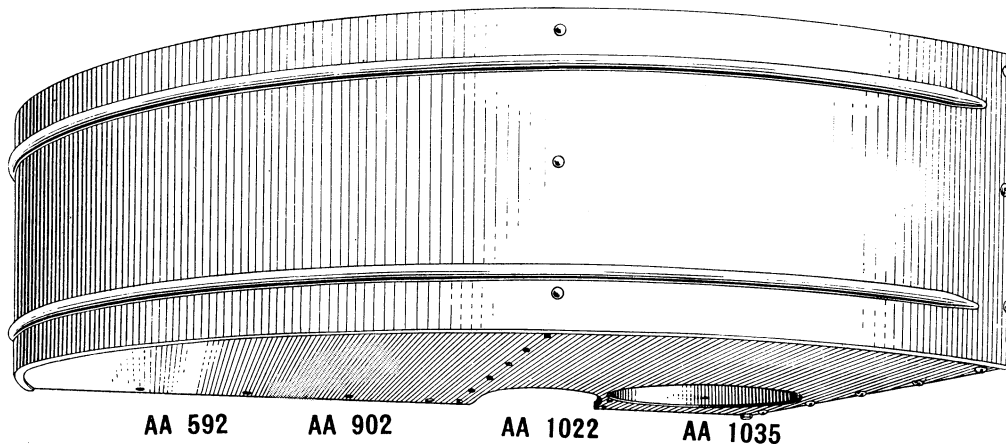
 
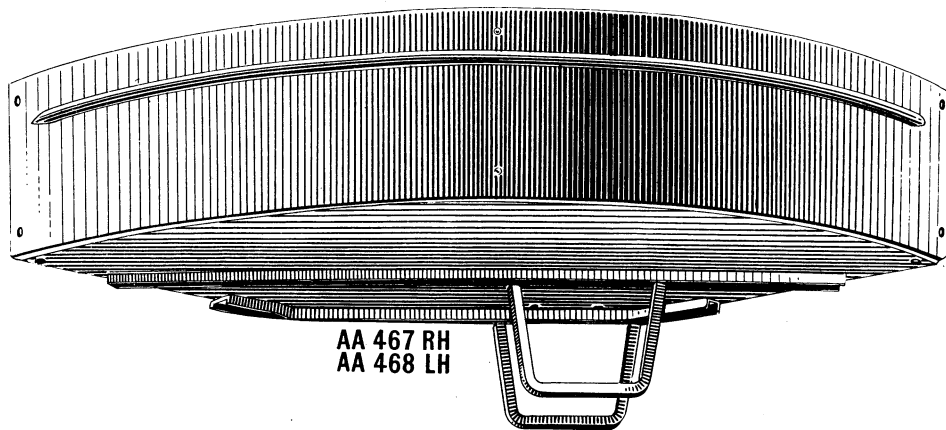


Plate No. 32

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

FENDERS—Continued


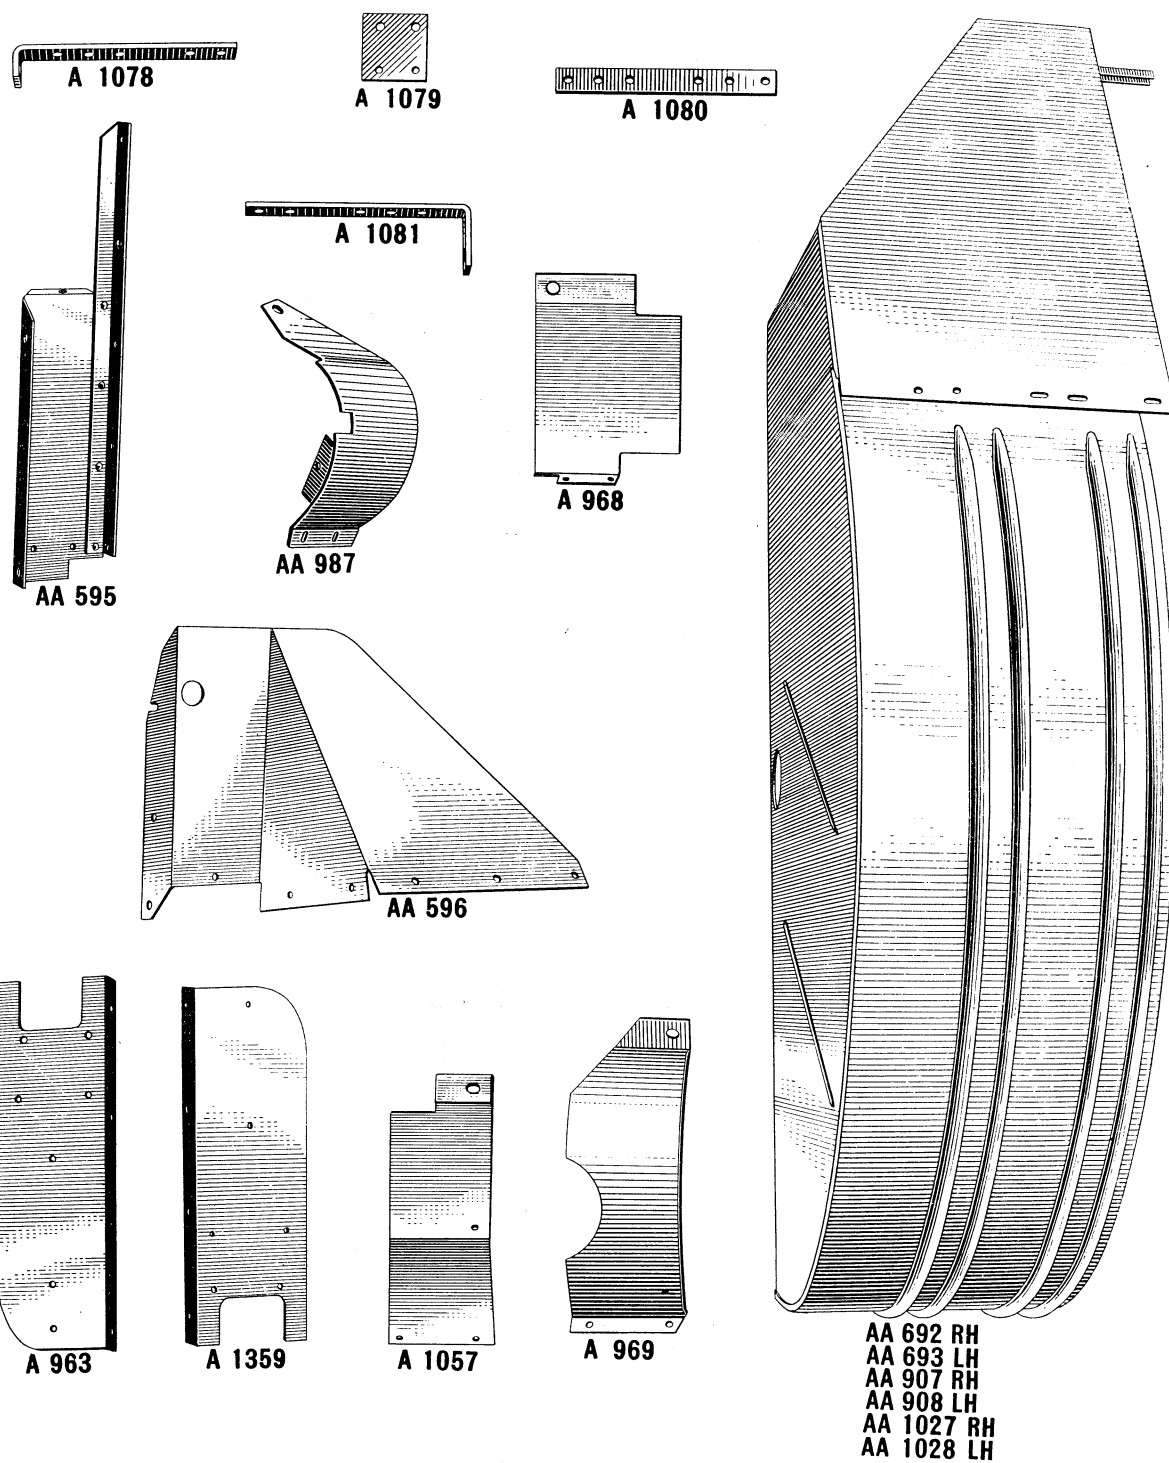


Plate No. 33

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

AIR CLEANER

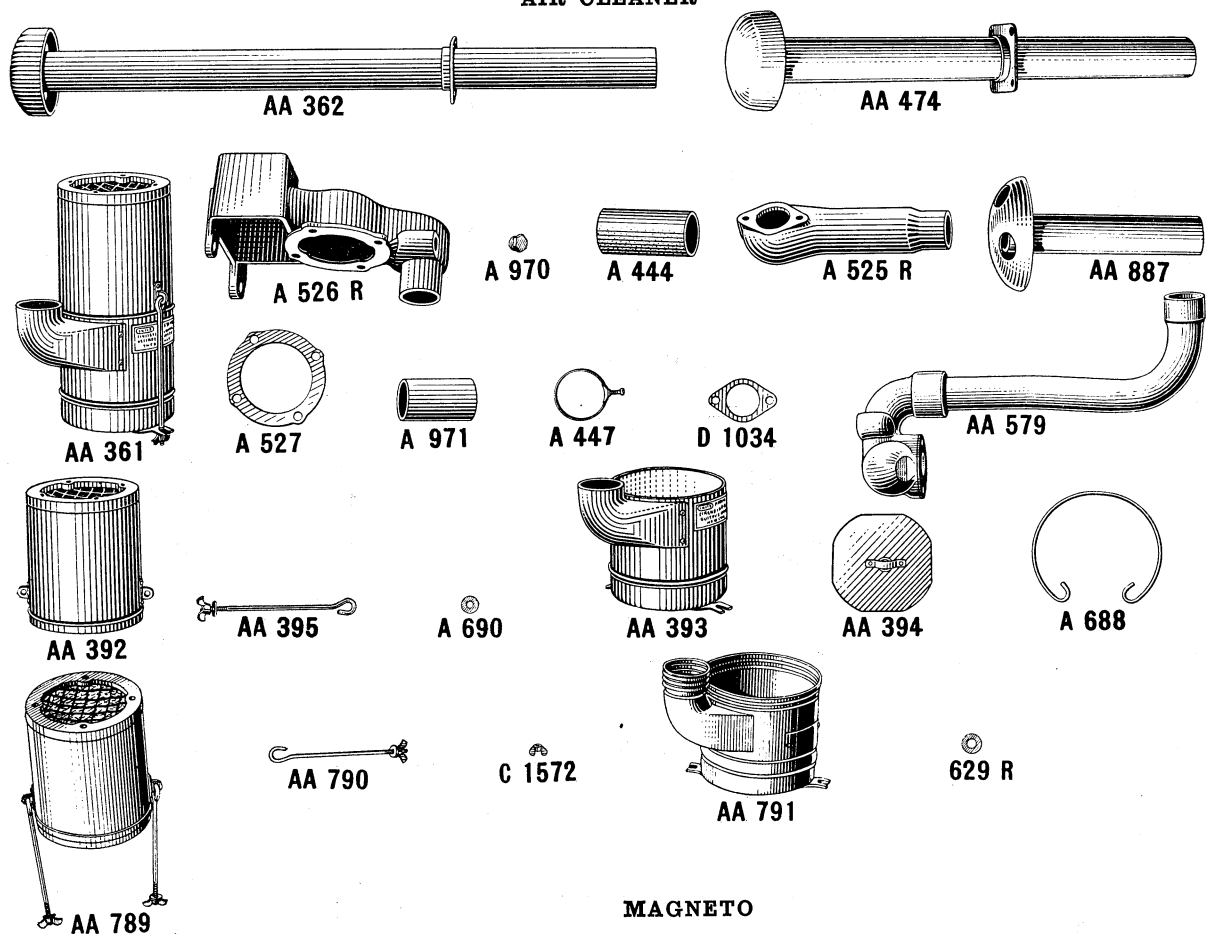

MAGNETO

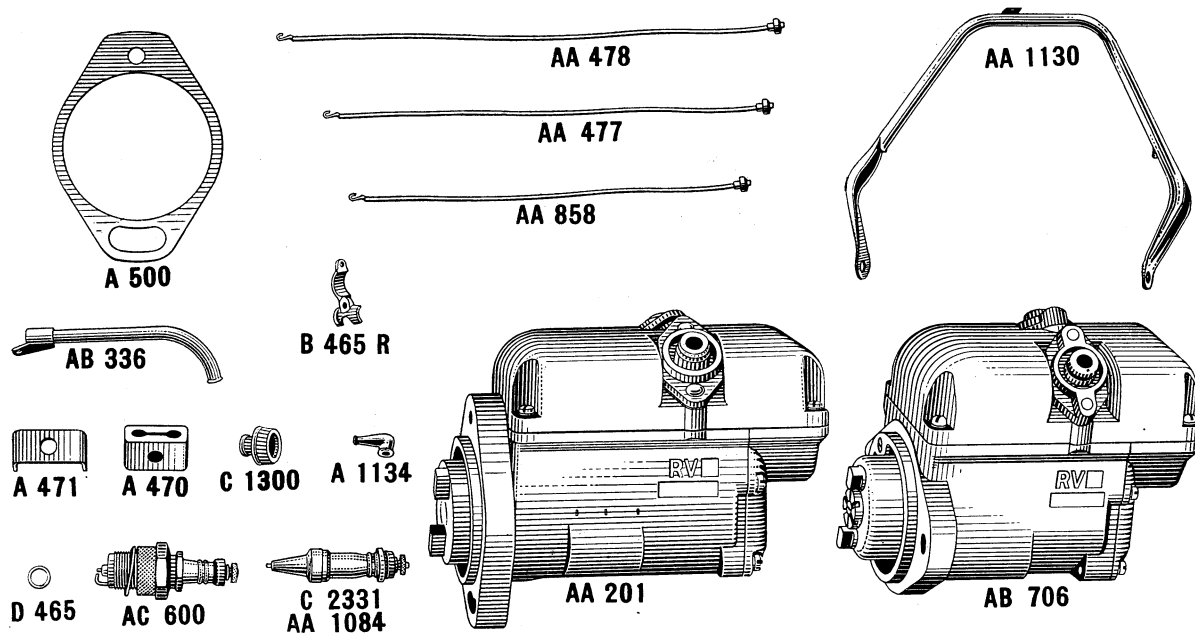


Plate No. 34

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

MAGNETO PARTS


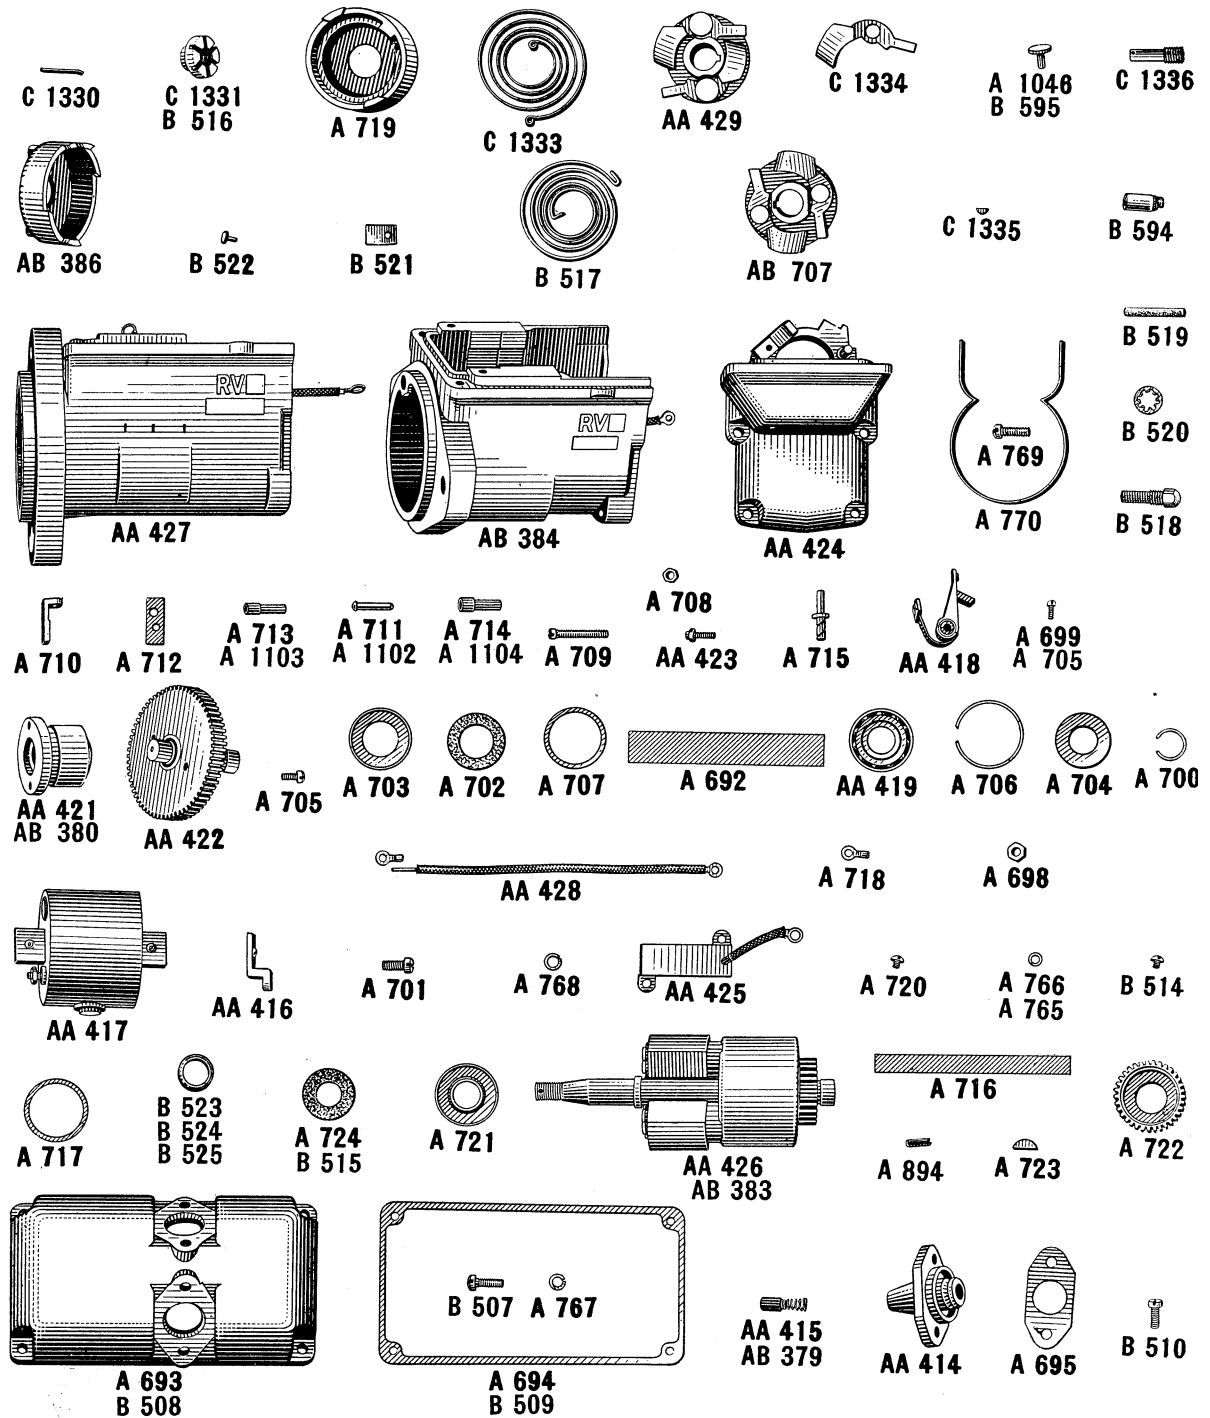


Plate No. 35

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

TOOL BOX AND TOOLS

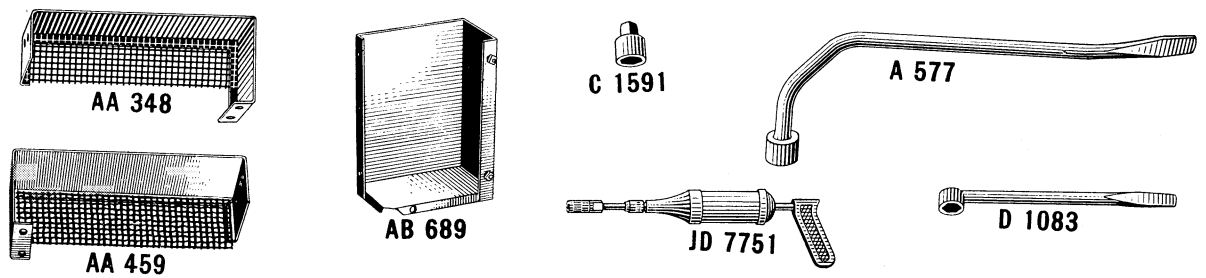

POWER SHAFT PARTS

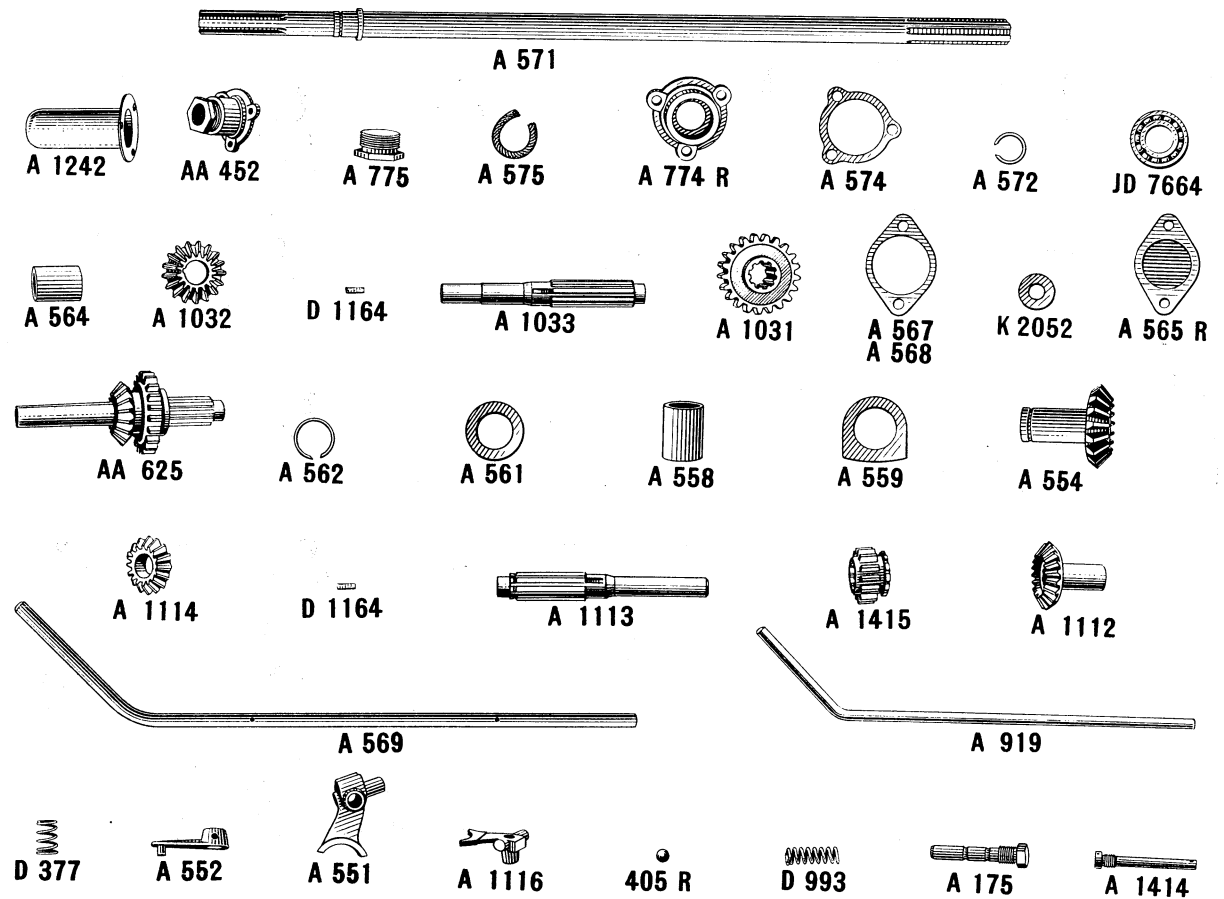



Plate No. 37

POWER LIFT



REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

POWER LIFT—Continued

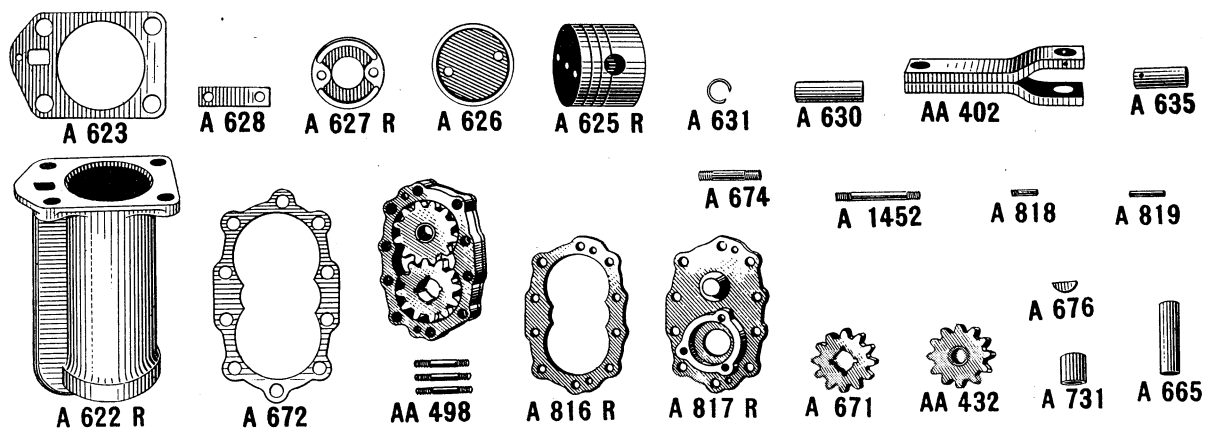

LIGHTING EQUIPMENT


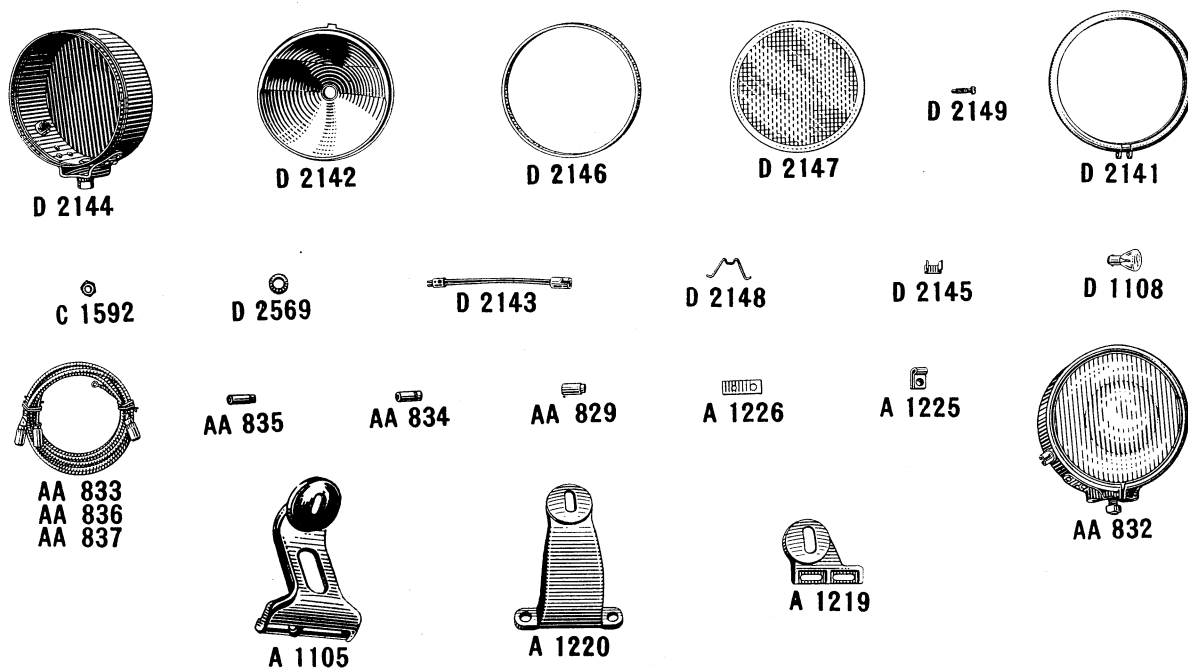



Plate No. 39

REPAIR PARTS FOR MODELS A, AN, AW, AR, AO, AND AI TRACTORS

 
LIGHTING EQUIPMENT—Continued




AA 826

 

AA 828

 

AA 827

 


AA 831



A 1216



A 1202

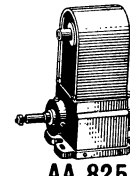

AA 825



A 1205



A 1206



A 1207



A 1212



A 1231



D 1124



A 1208



A 1209



AA 829



A 1201



AA 830



A 1200



A 1210



A 1215



A 1203



A 1211



A 1204



K 3151



A 767



A 1213



A 1214



D 1158



AA 862



A 1218



AA 838

2364 R




AA 839



A 1228



 
A 1230




A 1222



A 1223

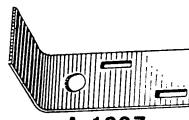


A 1227

 

A 1221



C 1570

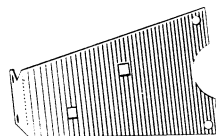

A 1233



A 1232



A 1234


Plate No. 40

INDEX


For Models B, BN, BW, BR, BO, and BI Tractors

SUBJECT	Page	SUBJECT	Page
Air Cleaner.....	105	Hardware List.....	110
Brakes, Differential.....	96	Hood.....	90
Brake, Emergency.....	96	Illustrations of Parts.....	118
Brakes, Rear Wheel.....	97	Lighting Equipment.....	108-109
Breather, Crank Case.....	88	Lubricating System and Oil Pump.....	88
Cam Followers.....	86	Magneto.....	102
Cam Shaft.....	86	Magneto Parts.....	102
Carburetor.....	105	Manifold.....	86
Casting Numbers.....	116	Muffler and Exhaust Pipe.....	86
Clutch Fork Bearing and Pulley		Oil Filter and Indicator.....	88
Brake.....	92	Oil Pipes and Fittings.....	88
Clutch Parts.....	91	Oil Pressure Regulating Valve.....	89
Connecting Rods.....	85	Overdrive Gear and Shaft and First	
Controls.....	87	Reduction Gear.....	93
Cooling System.....	90	Overdrive Idler Gear.....	93
Countershaft.....	93	Pedestal.....	99
Crank Case Ventilator.....	88	Pistons, Connecting Rods and Crank-	
Crankshaft.....	85	shaft.....	85
Cylinder.....	86	Platform.....	101
Cylinder Head, Manifold and Valves.....	86	Power Lift Parts.....	107
Differential.....	93	Power Shaft Parts.....	106
Drawbar.....	100	Pulley.....	91
Engine.....	85	Radiator Guard and Curtain.....	90
Fan.....	90	Seat.....	101
Fenders.....	101	Sliding Gear Shaft.....	92
Final Drive.....	94	Steering Parts.....	99
Front Axle and Front End Support.....	97	Tappets.....	86
Front Wheels and Front Wheel		Tool Box and Tools.....	106
Equipment.....	98	Transmission Case.....	85
Fuel System.....	89	Valves.....	86
Gears, Overdrive and First Reduction.....	93	Wheels and Equipment, Rear.....	94-95
Gear Shift.....	92	Wheel Scrapers.....	95
Gear Shift, Overdrive.....	92		
Generator.....	109		
Governor.....	87		


B, BN, BW, BR, BO,
and BI Tractors

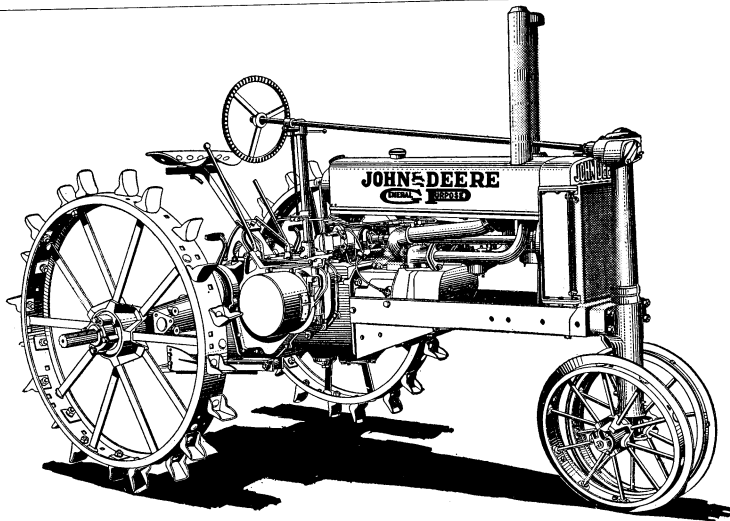


Model "B"

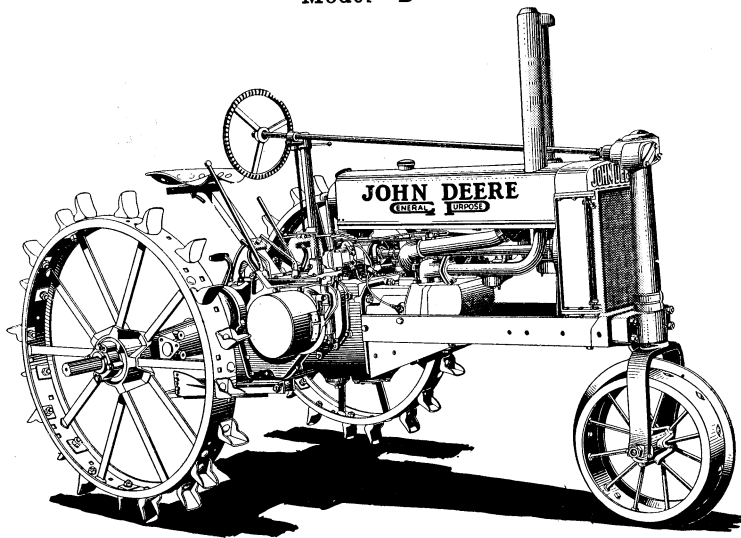


Model "BN"

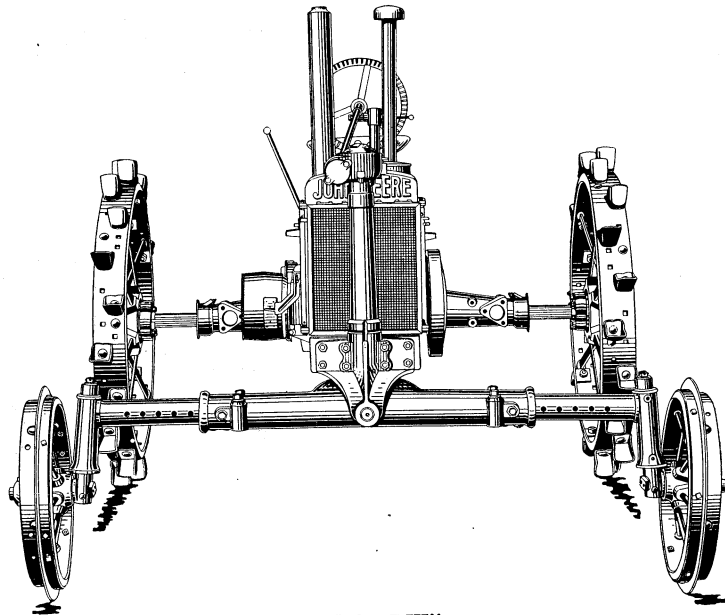


Model "BW"

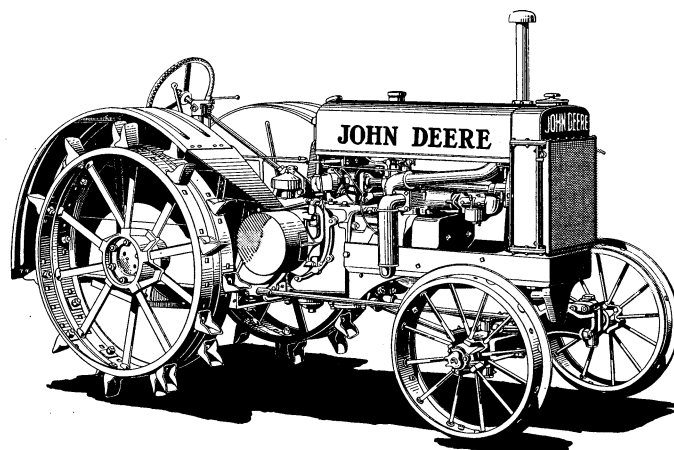

Model "BR"

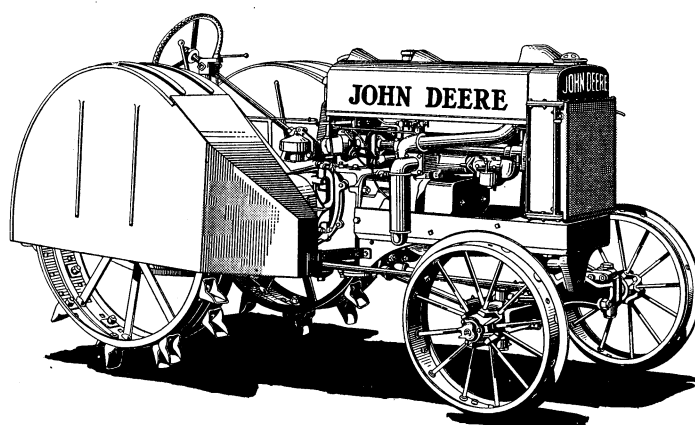

Model "BO"

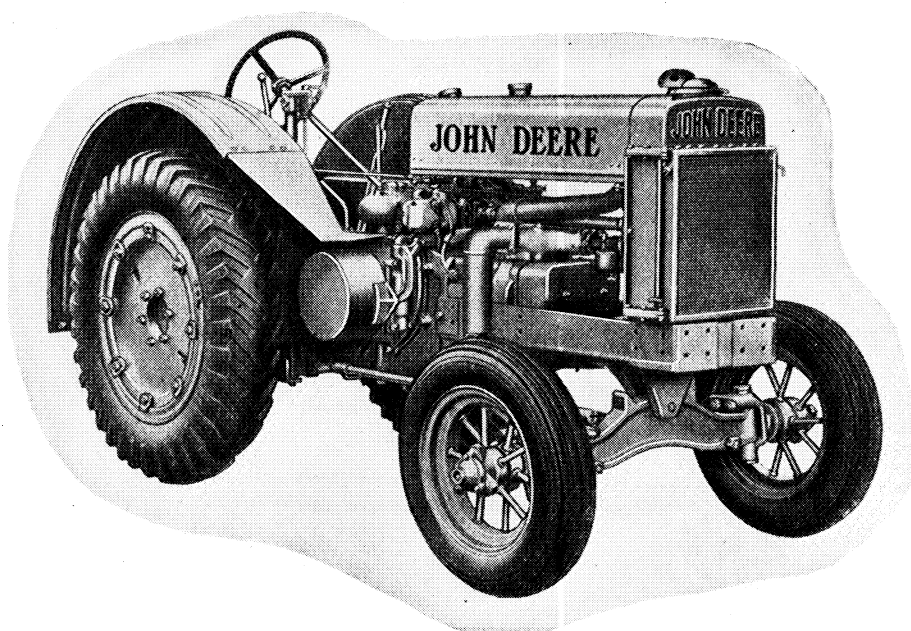

Model "BI"

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
TRANSMISSION CASE				
AB520	Cover, Transmission Case with Gear Shift Interlock	B10527-		41
AB614	Cover, Transmission Case with Gear Shift Interlock		325000-	41
AB639	Case, B753R Transmission, Main	B1000-	325000-	
B359	Stud, First Reduction Gear Cover to Case		325000-	48
B381R	Cover, Transmission	B1000-10526		41
B393	Gasket, Transmission Case Cover	B1000-	325000-	41
C719	Stud, Cylinder to Case	B1000-	325000-	41
D463	Welsh Plug, in Transmission Case Cover		325000-	41
E2142	Pipe Plug, Transmission Case Drain	B1000-	325000-	41
E2142	Pipe Plug, Crank Case Drain	B1000-	325000-	41
E2244	Pipe Plug, Transmission Oil Filler	B1000-	325000-	41
JD7759	Alemite Zerk Fitting, No. 1610, Steering Shaft, Lower Bushing		325000-	
K2525	Pipe Plug, in Transmission Case, 1/8" Square Head, over Brake Openings		325000-	41
K3083	Stud, First Reduction Gear Cover to Case	B1000-		
1452R	Pipe Plug, in Power Shaft Shifter Hole	B1000-	325000-	41
ENGINE				
AB250	Main Bearing Housing, B124R, with Cap, L. H.	B1000-	325000-	41
AB251	Spacer, Flywheel, with B130 Cork Washer	B1000-	325000-	41
AB253	Flywheel, B133R, with Bolts and Driving Pin	B1000-14037	325000-325600	41
AB319	Bushing, Main Bearing (2 Halves) R. H.	B1000-	325000-	41
AB320	Bushing, Main Bearing (2 Halves) L. H.	B1000-	325000-	41
AB511	Main Bearing Housing, B597R, with Cap, R. H., and Oil Line Assembly	B1000-10168		41
AB514	Main Bearing Housing, B597R, with Cap, R. H.	B10169-	325000-	41
AB705	Flywheel, B660R, with Bolts and Driving Pin	B14038-	325601-	41
B52R	Cover, Crank Case	B1000-10168		41
B53	Gasket, Crank Case Cover	B1000-10168		41
B118	Bolt, R. H. Main Bearing	B1000-	325000-	41
B119	Nut, Main Bearing Bolts	B1000-	325000-	41
B120	Shim, Main Bearing, Laminated	B1000-	325000-	41
B122	Dowel Pin, R. H. Main Bearing	B1000-	325000-	41
B123	Cap Screw, Main Bearing, R. H. to Case (Drilled)	B1000-	325000-	41
B126	Bolt, L. H. Main Bearing	B1000-	325000-	41
B128	Gasket, L. H. Main Bearing Housing	B1000-	325000-	41
B130	Cork Washer, Flywheel Spacer	B1000-	325000-	41
B131R	Cover, L. H. Main Bearing	B1000-	325000-	41
B132	Gasket, L. H. Main Bearing Cover	B1000-	325000-	41
B700R	Cover, Crank Case	B10169-	325000-	41
B701	Gasket, Crank Case Cover	B10169-	325000-	41
D1080	Screw, Flywheel Locating	B1000-	325000-	41
D2009	Pin, Flywheel Spacer Driving	B1000-	325000-	41
E2142	Pipe Plug in L. H. Main Bearing (2 used)	B1000-	325000-	41
E2142	Pipe Plug, Crank Case Oil Drain	B1000-	325000-	41
PISTONS, CONNECTING RODS, CRANKSHAFT				
AB246	Crankshaft, B114, with Gear and Pulley Bearing Race	B1000-		41
AB355	Connecting Rod, B5, Complete	B1000-	325000-	41
AB355	"Exchange" Connecting Rod, Complete. Old Con- necting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders re- ceived for "Exchange" Rods that are not accom- panied with old rod will be filled with New Rods and billed at full price.			
AB356	Connecting Rod Bolt with Nut and Cotter	B1000-	325000-	41
AB517	Piston, with Rings, 4-1/4", .030" Oversize	B1000-	325000-	41
AB543	Piston, with Rings, 4-1/4", Standard	B1000-	325000-	41
AB592	Crankshaft, B767, with Gear and Pulley Bearing Race		325000-	41
B2	Pin, Piston	B1000-	325000-	41
B3	Snap Ring, Piston Pin (4 used)	B1000-	325000-	41
B4	Ring, Piston, 4 per Piston, 4-1/4" (Standard)	B1000-	325000-	41
B7	Shim, Connecting Rod, Laminated	B1000-	325000-	41
B115	Gear, Crankshaft	B1000-	325000-	41
B413	Bushing, Piston Pin	B1000-	325000-	41
B601	Ring, Piston, 4 per Piston, 4-1/4", .030" Oversize	B1000-	325000-	41
D342	Key in Crankshaft Gear	B1000-	325000-	41

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
CYLINDER				
AB468	Cylinder Block with Pistons and Gaskets	B1000-	325000-	
AB476	Cylinder, B354R, with Studs	B1000-	325000-	41
B355	Stud, Cylinder Head (9 used)	B1000-	325000-	42
B356	Gasket, Cylinder to Case	B1000-	325000-	41
C719	Stud, Cylinder to Case	B1000-	325000-	41
C1031	Stud, Front End Support to Cylinder	B1000-3043		41
CYLINDER HEAD, MANIFOLD, VALVES				
A126	Stud, Manifold, Short, 7/16"x4-3/8" (2 used)	B1000-	325000-	42
AB310	Cylinder Head, B357R, with Valves and Springs	B1000-	325000-	
AB311	Cylinder Head, B357R, with Valve Guides	B1000-	325000-	42
B73R	Manifold	B1000-		42
B74	Gasket, Manifold	B1000-	325000-	42
B358R	Guide, Valve	B1000-	325000-	42
B359	Stud, Manifold, Long, 7/16"x4-3/4" (2 used)	B1000-	325000-	42
B362	Valve, Intake	B1000-	325000-	42
B363	Valve, Exhaust	B1000-	325000-	42
B364	Washer, Valve Spring, Centering	B1000-	325000-	42
B365	Spring, Valve	B1000-	325000-	42
B366	Cap, Valve Spring	B1000-	325000-	42
B367	Lock Washer (Half) Valve Stem	B1000-	325000-	42
B368	Gasket, Cylinder Head	B1000-	325000-	42
B369	Lead Washer, Cylinder Head Stud (9 used)	B1000-	325000-	42
B415	Sleeve, Push Rod, in Cylinder Head	B1000-	325000-	42
B772R	Manifold	B1000-	325000-	42
C251	Pipe, Cylinder Head, Water Inlet	B1000-	325000-	42
E2142	Plug, Cylinder Head Drain	B1000-	325000-	42
321R	Gasket, Carburetor to Manifold	B1000-	325000-	42
CAM SHAFT				
A119	Stud, Cam Shaft Bearing, L. H. (2 used)	B1000-	325000-	42
A487	Cap Screw, Cam Shaft Gear (3 used)	B1000-	325000-	42
B195R	Gear, Cam Shaft	B1000-	325000-	42
B196	Plate, Cam Shaft Gear, Locking	B1000-	325000-	42
B198R	Bearing, Cam Shaft, R. H.	B1000-	325000-	42
B199R	Bearing, Cam Shaft, L. H.	B1000-	325000-	42
B200	Gasket, Cam Shaft, L. H. Bearing (Thick)	B1000-	325000-	42
B217	Cam Shaft	B1000-	325000-	42
B567	Gasket, Cam Shaft, L. H. Bearing (Thin)	B1000-	325000-	42
D459	Cap Screw, Cam Shaft Bearing, R. H. to Case (Drilled) (2 used)	B1000-	325000-	42
CAM FOLLOWERS				
A178	Support, Cam Follower Guide	B1000-	325000-	42
AB271	Cam Follower	B1000-	325000-	42
B201R	Guide, Cam Follower	B1000-	325000-	42
TAPPETS				
A172	Nut, Tappet Oiler Pipe Packing (2 used)	B1000-	325000-	42
AB273	Cover, B211R, Tappet Lever with Oil Trough	B1000-	325000-	42
B204	Rod, Tappet	B1000-	325000-	42
B205	Lever, Tappet	B1000-	325000-	42
B206	Shaft, Tappet Lever	B1000-	325000-	42
B207	Spring, Tappet Lever Spacer	B1000-	325000-	42
B208	Adjusting Screw, Tappet Lever	B1000-	325000-	42
B209R	Bracket, Tappet Lever Shaft	B1000-	325000-	42
B210	Snap Ring, Tappet Lever Shaft (2 used)	B1000-13467	325000-	42
B212	Gasket, Tappet Lever Cover	B1000-	325000-	42
B213	Trough, Tappet Lever Oil	B1000-	325000-	42
B214	Washer, Tappet Lever Cover Stud (Copper)	B1000-	325000-	42
B215	Pipe, Tappet Lever Oiler	B1000-	325000-	42
B216	Packing Washer, Tappet Oiler Pipe (2 used)	B1000-	325000-	42
B495	Washer, Tappet Lever Shaft	B1000-	325000-	42
B504	Stud, Tappet Lever Shaft Bracket	B1000-	325000-	42
B505	Nut, Acorn, Tappet Lever Cover Stud	B1000-	325000-	42
MUFFLER AND EXHAUST PIPE				
AB209	Muffler	B1000-		41
AB322	Exhaust Pipe with Flange	B1000-		41

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
MUFFLER AND EXHAUST PIPE—Continued				
AB484	Muffler (Low).....	B1000—		41
AB599	Muffler.....		325000—	41
GOVERNOR				
A369	Snap Ring, Governor Shaft (2 used).....	B1000—	325000—	42
A584	Spring, Governor Bearing.....	B1000—	325000—	42
AB294	Sleeve, Governor Shaft.....	B1000—	325000—	42
AB295	Weight, Governor.....	B1000—	325000—	42
AB325	Case, Governor, B269R, with Governor Lever Shaft Bushing.....			
B270	Shaft, Governor Lever.....	B1000—	325000—	42
B271	Lever, Inside Governor.....	B1000—	325000—	42
B272R	Arm, Governor.....	B1000—	325000—	42
B276	Snap Ring, Governor Bearing.....	B1000—	325000—	42
B277	Shaft, Governor.....	B1000—	325000—	42
B279R	Gear, Fan Drive Bevel.....	B1000—	325000—	42
B280	Washer, Governor Bearing Spring.....	B1000—	325000—	42
B281	Flange, Magneto Drive.....	B1000—	325000—	42
B282R	Gear, Governor Drive.....	B1000—	325000—	42
B283R	Housing, L. H. Governor Bearing.....	B1000—	325000—	42
B284	Gasket, L. H. Governor Bearing Housing, Thick.....	B1000—	325000—	42
B301	Gasket, Governor Case.....	B1000—	325000—	42
B432	Bushing, Governor Lever Shaft.....	B1000—	325000—	42
B569	Gasket, L. H. Governor Bearing Housing, Thin.....	B1000—	325000—	42
C902	Pin, Governor Weight.....	B1000—	325000—	42
C998	Bearing, Governor Thrust.....	B1000—	325000—	42
C2175	Stud, Magneto Flange to Governor Case (1 used).....	B1000—	325000—	42
D342	Key, in Governor Drive Gear.....	B1000—	325000—	42
D342	Key, Fan Drive Bevel Gear.....	B1000—	325000—	42
D342	Key, Magneto Drive Flange.....	B1000—	325000—	42
JD7655	Cup, Governor Shaft Bearing.....	B1000—	325000—	42
JD7656	Cone, Governor Shaft Bearing.....	B1000—	325000—	42
JD7657	Balls and Retainer, Governor Shaft Bearing.....	B1000—	325000—	42
629R	Washer, Magneto to Governor Case Screws.....	B1000—	325000—	42
CONTROLS				
A80R	Lever, Speed Control, Hand.....	B1000—	325000—	43
A241	Washer, Speed Control Shaft, Upper.....	B1000—	325000—	43
A586	Washer, Speed Control Shaft, Lower.....	B1000—	325000—	43
A942R	Bracket, Clutch Lever.....		325000—	43
A944R	Bracket, Speed Control Shaft.....		325000—	43
A958	End, Speed Control Rod.....		325000—	43
A1197	Bushing, Clutch Lever Pivot.....		325000—	43
AA794	Lever, with Bushing, Clutch Operating, Hand.....		325000—	43
AB264	Lever, with Bushing, Clutch Operating, Hand.....	B1000—		43
B38	Rod, Speed Control.....	B1000—		43
B174	Rod, Clutch Operating.....	B1000—		43
B175R	Yoke, Clutch Operating Rod.....	B1000—		43
B177	Bushing, Clutch Lever Pivot.....	B1000—		43
B178	Pin, Clutch Operating Rod Yoke.....	B1000—		43
B178	Pin, Clutch Operating, Hand Lever to Rod.....	B1000—		43
B180	Bolt, Clutch Operating Hand Lever Pivot.....	B1000—		43
B273	Spring, Speed Change, Flat.....	B1000—	325000—	42
B274	Clamp, Speed Change Spring.....	B1000—	325000—	42
B302	Rod, Carburetor Throttle.....	B1000—	325000—	43
B390R	Bracket, Speed Control Shaft.....	B1000—		43
B391	Shaft, Speed Control.....	B1000—		43
B752	Rod, Clutch Operating.....		325000—	43
B790	Shaft, Speed Control.....		325000—	43
B791	Rod, Speed Control.....		325000—	43
B843R	Yoke, Clutch Operating Rod.....		325000—	43
B844	Pin, Clutch Operating Rod Yoke.....		325000—	43
C719	Stud, Clutch Lever Bracket to Rear Axle Housing.....		325000—	43
C1438	Spring, Speed Control Shaft.....	B1000—	325000—	43
D157	End, Throttle Rod.....	B1000—		43
D157	End, Speed Control Rod.....	B1000—		43
D1994	Pin, Clutch Operating, Hand Lever to Rod.....		325000—	43
D2031	Bolt, Clutch Lever Pivot.....		325000—	43
E2057	Washer on Speed Control Rod.....	B1000—	325000—	43

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
CONTROLS—Continued				
E2057	Washer on Throttle Rod.....	B1000—	325000—	43
K3151	Washer on Speed Control Rod.....		325000—	43
CRANK CASE BREATHER				
AB232	Breather Cover, B55R, with Stack, Complete.....	B1000—	325000—	43
AB233	Core, Breather Filter.....	B1000—	325000—	43
B54	Gasket, Filter Core.....	B1000—	325000—	43
CRANK CASE VENTILATOR				
B59	Pipe, Ventilator.....	B1000—		43
B60	Packing, Ventilator Pipe (2 used).....	B1000—	325000—	43
B761	Pipe, Ventilator.....		325000—	43
C1705	Packing Nut, Ventilator Pipe.....	B1000—	325000—	43
LUBRICATING SYSTEM AND OIL PUMP				
AB284	Strainer, Complete, Oil Pump.....	B1000—	325000—	44
B241R	Body, Oil Pump.....	B1000—	325000—	44
B242	Shaft, Oil Pump Drive.....	B1000—	325000—	44
B243	Gear, Oil Pump Drive, Bottom.....	B1000—	325000—	44
B244	Shaft, Oil Pump Idler Gear.....	B1000—	325000—	44
B245	Gear, Oil Pump Idler.....	B1000—	325000—	44
B246	Gasket, Oil Pump Cover.....	B1000—	325000—	44
B247	Cover, Oil Pump.....	B1000—	325000—	44
B250	Coupling, Oil Pump Drive Shaft.....	B1000—	325000—	44
B251	Gasket, Oil Pump Body to Case.....	B1000—	325000—	44
B252	Gear, Oil Pump Drive, Top.....	B1000—	325000—	44
B253R	Bearing, Oil Pump Top Drive Gear.....	B1000—	325000—	44
E2207	Key, Oil Pump Drive Shaft.....	B1000—	325000—	44
OIL FILTER AND INDICATOR				
A519	Gasket, Oil Filter, Bottom.....	B1000—	325000—	44
A520	Nut, Oil Filter, Bottom.....	B1000—	325000—	44
A521	Gasket, Oil Filter, Bottom Nut.....	B1000—	325000—	44
A522	Bottom, Oil Filter.....	B1000—	325000—	44
A523	Spring, Oil Filter Bottom.....	B1000—	325000—	44
AA357	Oil Filter Element.....	B1000—	325000—	44
AB292	Gauge, Complete, Oil Indicator.....	B1000—	325000—	44
AB326	Leaf Spring with Centering Button, Oil Filter.....	B1000—	325000—	44
B254	Gasket, Oil Filter Head.....	B1000—	325000—	44
B255R	Head, Oil Filter.....	B1000—	325000—	44
B430	Button, Oil Filter Leaf Spring.....	B1000—	325000—	44
B433	Body, Oil Filter.....	B1000—	325000—	44
B434	Stud, Oil Filter.....	B1000—	325000—	44
B435R	Cover, Oil Filter Head.....	B1000—	325000—	44
B436	Gasket, Oil Filter Head Cover.....	B1000—	325000—	44
B438	Clip, Oil Filter Leaf Spring.....	B1000—	325000—	44
B439	Spring, Oil Filter Coil.....	B1000—	325000—	44
D186	Dowel Pin, Oil Filter Body.....	B1000—	325000—	44
D793	Body, Crank Case Oil Level Cock.....	B1000—	325000—	44
D794	Plug, Crank Case Oil Level Cock.....	B1000—	325000—	44
K2573	Washer, Oil Filter Bottom Nut.....	B1000—	325000—	44
OIL PIPES AND FITTINGS				
AB286	Oil Line, Pump Discharge.....	B1000—	325000—	44
AB287	Oil Line, R. H. Main Bearing.....	B1000—10168		44
AB288	Oil Line, Left Main Bearing.....	B1000—	325000—	44
AB289	Oil Line, to Indicator and Cam Shaft Bearings.....	B1000—	325000—	44
AB290	Oil Line, Cam Shaft Bearing.....	B1000—	325000—	44
AB291	Oil Line Indicator Gauge.....	B1000—	325000—	44
AB515	Oil Line, Right Main Bearing.....	B1000—	325000—	44
B258	Nut, Solder Bushing, Indicator and Cam Shaft Bear- ing, Oil Line.....	B10169—	325000—	44
B258	Nut, Solder Bushing, Oil Pump Discharge Line.....	B1000—	325000—	44
B259	Gland, Solder Bushing, Oil Pump Discharge Line.....	B1000—	325000—	44
B259	Gland, Solder Bushing, 1/2" Oil Indicator and Cam Shaft Bearing Oil Line.....	B1000—	325000—	44
B264	Elbow, Side Outlet, Oil Indicator and Cam Shaft Oil Line.....	B1000—	325000—	44
B462	Body, Solder Bushing Indicator Oil Line to Governor Case.....	B1000—	325000—	44

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
OIL PIPES AND FITTINGS—Continued				
D392	Body, Solder Bushing, R. H. and L. H. Main Bearing Oil Lines to Filter Head.....	B1000—	325000—	44
D392	Body, Solder Bushing, L. H. Main Bearing Oil Line to Main Bearing.....	B1000—	325000—	44
D392	Body, Solder Bushing, R. H. Main Bearing Oil Line to R. H. Main Bearing Housing.....	B10169—	325000—	44
D417	Elbow, R. H. Main Bearing Oil Line to Case.....	B1000-10168		44
D2440	Body, Solder Bushing, Oil Pump Discharge Line.....	B1000—	325000—	44
D2440	Body, Solder Bushing, Oil Indicator and Cam Shaft Oil Line to Filter Head.....	B1000—	325000—	44
E1994	Body, Solder Bushing, Cam Shaft Oil Line.....	B1000—	325000—	44
E2149	Nut, Solder Bushing, Main Bearing Oil Line, R. H. and L. H.....	B1000—	325000—	44
E2149	Nut, Solder Bushing, R. H. and L. H. Main Bearing Oil Line to Oil Filter Head.....	B1000—	325000—	44
E2150	Gland, Solder Bushing, 5/16", Main Bearing Oil Lines.....	B1000—	325000—	44
E2157	Nut, Solder Bushing, 1/4", Cam Shaft Bearing Oil Line.....	B1000—	325000—	44
E2158	Gland, Solder Bushing, 1/4", Cam Shaft Bearing Oil Line.....	B1000—	325000—	44
OIL PRESSURE REGULATING VALVE				
AB323	Regulating Valve, Complete, Oil Pressure.....	B1000—	325000—	44
AB324	Valve Spring with Centering Button, Oil Pressure Regulating Valve.....	B1000—	325000—	44
B421	Shield, Oil Pressure Regulating Valve.....	B1000—	325000—	44
B422	Gasket, Oil Pressure Regulating Valve Bracket.....	B1000—	325000—	44
B423	Spring, Oil Pressure Adjusting (Coil).....	B1000—	325000—	44
B424	Screw, Oil Pressure Adjusting.....	B1000—	325000—	44
B425	Washer, Oil Pressure Adjusting Lock Nut and Cap Nut (Copper) (2 used).....	B1000—	325000—	44
B427	Cap Nut, Oil Pressure Adjusting Screw.....	B1000—	325000—	44
B428R	Bracket, Oil Pressure Regulating Valve.....	B1000—	325000—	44
B430	Button, Oil Pressure Regulating Valve Leaf Spring.....	B1000—	325000—	44
B431	Clip, Oil Pressure Regulating Valve Spring.....	B1000—	325000—	44
C528	Cap Screw (Drilled Head) Oil Pressure Regulating Valve Bracket to Governor Case, Long.....	B1000—	325000—	44
D459	Cap Screw (Drilled Head) Oil Pressure Regulating Valve Bracket to Governor Case, Short.....	B1000—	325000—	44
FUEL SYSTEM				
A442	Cushion, Fuel Tank Front Support.....	B1000—	325000—	45
A442	Cushion, Fuel Tank Rear Support.....		325000—	45
AA270	Strap, Fuel Tank.....	B1000—	325000—	45
AA454	Gasoline Strainer, Complete.....	B1000—	325000—	44
AA499	Filter, Fuel.....	B1000—	325000—	44
AA517	Bowl Clamp, Fuel Filter.....	B1944—	325000—	44
AA518	Nut with Washer, Fuel Filter Bowl Clamp.....	B1944—	325000—	44
AA519	Screen, Fuel Filter.....	B1000—	325000—	44
AA335	Clamp, Fuel Filter, Adjusting.....	B1000-1943		44
AB225	Support, Fuel Tank Front, with Cushion.....	B1000—		45
AB226	Support, Fuel Tank Rear, with Cushion.....	B1000—		45
AB227	Gasoline Line.....	B1000-11621		44
AB228	Fuel Line.....	B1000-11621		44
AB357	Tank, Fuel, with Caps.....	B1000-1509		45
AB419	Fuel Tank.....	B1510—		45
AB606	Tank, Fuel, with Caps.....		325000—	45
AB609	Three-Way Cock.....	B11622—	325000—	44
AB611	Support, Fuel Tank, Front, with Cushion.....		325000—	45
AB612	Support, Fuel Tank, Rear, with Cushion.....		325000—	45
AB613	Gasoline Line.....	B11622—	325000—	44
AB643	Fuel Line.....	B11622—	325000—	44
AC1079	Body and Shut-Off Valve, Fuel Filter.....	B1000—	325000—	44
AC1080	Valve, Fuel Filter.....	B1000—	325000—	44
AD680	Three-Way Fuel Cock.....	B1000-11621		44
AD709	Cap, Easy-On Filler.....	B1000—	325000—	44
B44	Cushion, Fuel Tank Rear Support.....	B1000—		45
B797	Plate, Fuel Tank Rear Support.....		325000—	45
C1777	Bowl, Fuel Filter, Glass.....	B1000—	325000—	44
C1778	Gasket, Fuel Filter, Cork.....	B1000—	325000—	44

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
FUEL SYSTEM—Continued				
C2378	Body, Fuel Filter.....	B1000—	325000—	44
D2122	Packing Washer, for AB609 Three-Way Cock.....	B11622—	325000—	44
E2149	Nut, Solder Bushing, on Gasoline and Fuel Lines.....	B1000—	325000—	44
E2150	Gland, Solder Bushing, on Gasoline and Fuel Lines.....	B1000—	325000—	44
HOOD				
A230	Bracket, Hood Clip, R. H.....	B1000—	325000—	45
A532	Bracket, Hood Clip, L. H.....	B1000—	325000—	45
AB230	Hood, Complete.....	B1000—1509		45
AB403	Hood, Complete.....	B1510—		45
AB544	Hood, Complete (Used on BO).....		325000—	45
AB610	Hood, Complete (Used on BR).....		325000—	45
C1573	Clip, Hood.....	B1000—	325000—	45
COOLING SYSTEM				
A1247	Bracket, Heat Indicator.....	B12743—	325366—	46
A1248	Bushing, Heat Indicator Tube.....	B12743—	325366—	46
A1284	Bracket, Heat Indicator.....	B1000—12742	325000—325365	46
AA795	Radiator Cap, Complete.....	B1000—	325000—	46
AA796	Head with Stud, Radiator Filler Cap.....	B1000—	325000—	46
AA883	Heat Indicator, Complete.....	B12743—	325366—	46
AA952	Heat Indicator.....	B1000—12742	325000—325365	46
AB318	Pipe, B403R, Water Outlet with Upper Pipe.....	B1000—		46
AB354	Core, Radiator.....	B1000—	325000—	46
AB590	Pipe, B403R, Water Outlet with Upper Pipe.....		325000—	46
B394R	Tank, Radiator Top.....	B1000—		46
B395R	Tank, Radiator Bottom.....	B1000—	325000—	46
B396R	Side, Radiator.....	B1000—	325000—	46
B397	Gasket, Radiator Core Top and Bottom.....	B1000—	325000—	46
B398	Strap, Radiator (4 used).....	B1000—	325000—	46
B400	Inlet, Radiator Water.....	B1000—		46
B401	Pipe, Lower Water.....	B1000—		46
B402	Hose, Lower Water Pipe.....	B1000—	325000—	46
B404	Gasket, Cylinder Water Pipe Outlet.....	B1000—	325000—	46
B406	Hose, Upper Water Pipe.....	B1000—	325000—	46
B758R	Tank, Radiator Top.....		325000—	46
B760	Pipe, Lower Water.....		325000—	46
C251R	Pipe, Radiator Bottom Outlet.....	B1000—		46
C251R	Pipe, Radiator Bottom Outlet and Inlet.....	B1000—	325000—	46
C251R	Pipe, Cylinder Head Inlet.....	B1000—	325000—	46
D126	Baffle, Radiator Cap.....	B1000—	325000—	46
D319R	Cap, Radiator Filler.....	B1000—	325000—	46
D362	Clamp Bar, Radiator Filler Cap.....	B1000—	325000—	46
D473	Gasket, Radiator Filler Cap.....	B1000—	325000—	46
D488	Stud, Air Cleaner Bracket to Radiator Top Tank.....	B1000—	325000—	46
D1138	Nut, Heat Indicator Stud.....	B1000—	325000—	46
D2304	Clamp, Lower Water Pipe Hose.....	B1000—	325000—	46
D2304	Clamp, Upper Water Pipe Hose.....	B1000—	325000—	46
1452R	Pipe Plug, Upper Water Pipe.....	B1000—	325000—	46
RADIATOR GUARD AND CURTAIN				
AB221	Curtain, Radiator.....	B1000—	325000—	46
AB417	Guard, Radiator.....	B1000—	325000—	46
B40	Clip, Radiator Curtain.....	B1000—	325000—	46
B41	Roller, Radiator Curtain.....	B1000—	325000—	46
B423	Spring, Radiator Curtain Roller.....	B1000—	325000—	46
D1856	Spacer, Guard to Radiator.....	B1000—	325000—	46
372R	Spring, Radiator Curtain.....	B1000—	325000—	46
629R	Washer, Radiator Curtain Roller.....	B1000—	325000—	46
FAN				
A286	Retainer, Front Fan Bearing Packing, Rear.....	B1000—	325000—	43
A369	Snap Ring, Fan Shaft, Rear End.....	B1000—	325000—	43
A393	Packing Washer, Rear of Front Fan Bearing (Cork).....	B1000—	325000—	43
A1382	Washer, Fan Shaft Support (1-1/2" Outside Diameter, 17/32" Inside Diameter).....	B19070—	326053—	43
AB229	Shroud, Fan.....	B1000—	325000—	46
AB296	Housing with Fan Shaft Support Tube, Front Fan Bearing.....	B1000—21230		43
AB297	Fan Blades with Hub, Complete.....	B1000—	325000—	43

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
FAN—Continued				
AB518	Felt Washer, Front Fan Bearing.....	B1000-	325000-	43
AB573	Housing, Front Fan Bearing with Fan Shaft Support Tube.....		325000-326194	43
AB748	Housing, Front Fan Bearing with Support Tube.....	B21231-		43
AB750	Housing, with Fan Shaft Support Tube, Front Fan Bearing.....		326195-	43
B279R	Gear, Fan Drive Bevel.....	B1000-	325000-	42
B286	Shaft, Fan.....	B1000-		43
B287R	Housing, Fan Shaft Rear Bearing.....	B1000-21230	325000-326194	43
B289	Pinion, Fan Drive Bevel.....	B1000-	325000-	43
B292	Clamp, Fan Shaft Tube Packing, Rear.....	B1000-21230	325000-326194	43
B293	Packing Ring, Rear of Fan Shaft Tube, Rubber.....	B1000-	325000-	43
B294	Retainer Washer, Front Fan Bearing Grease, Rear.....	B1000-	325000-	43
B295	Spring, Fan Bearing Take-Up.....	B1000-	325000-	43
B296	Retainer Washer for Fan Bearing Felt Washer.....	B1000-	325000-	43
B298	Retainer, Front Fan Bearing Felt Washer.....	B1000-	325000-	43
B300	Support, Fan Shaft, Front.....	B1000-3043		43
B571	Gasket, Rear Fan Bearing Housing.....	B1000-		43
B650	Support, Fan Shaft.....	B3043-	325000-	43
B724	Shaft, Fan.....		325000-	43
B870R	Housing, Fan Shaft Rear Bearing.....	B21231-	326195-	43
D342	Key, Fan Drive Bevel Gear.....	B1000-	325000-	42
D403	Key, Fan Drive Bevel Pinion.....	B1000-	325000-	43
D1720	Lock Washer (Half) Fan Shaft.....	B1000-	325000-	43
JD7655	Cup, Front and Rear Bearing.....	B1000-	325000-	43
JD7656	Cone, Front and Rear Bearing.....	B1000-	325000-	43
JD7657	Ball Assembly, Front and Rear Bearing.....	B1000-	325000-	43
1450R	Pipe Plug, in Fan Bearing Housing.....	B1000-	325000-	43
PULLEY				
AB256	Belt Pulley, B136R, with Bushing, Gear and Sleeve.....	B1000-		47
AB259	Dust Shield, Pulley.....	B1000-		47
AB583	Belt Pulley, B734R, with Bushing, Gear and Sleeve.....		325000-	47
B139	Snap Ring, Belt Pulley Gear.....	B1000-	325000-	47
B140	Gear, Belt Pulley.....	B1000-	325000-	47
B142	Washer, Belt Pulley Bearing.....	B1000-	325000-	47
B143	Retainer, Belt Pulley Bearing.....	B1000-	325000-	47
B412	Bushing, Belt Pulley.....	B1000-	325000-	47
B749	Shield, Pulley, Dust.....	B1000-	325000-	47
D403	Key, Belt Pulley Gear.....	B1000-	325000-	47
JD7502	Roller Assembly and Outer Race, Pulley Bearing.....	B1000-	325000-	47
JD7552	Inner Race, Pulley Bearing.....	B1000-	325000-	47
CLUTCH PARTS				
AA794	Lever, Clutch with Bushing.....	B1000-	325000-	43
AB260	Disk, B159R, with Rivet, Clutch Driving.....	B1000-		47
AB594	Disk, B768R, with Rivet, Clutch Driving.....		325000-	47
B137R	Sleeve, Clutch Operating.....	B1000-		47
B141	Spring, Clutch Dust Cover.....	B1000-	325000-	47
B144	Toggle, Clutch Dog.....	B1000-		47
B145R	Dog, Clutch.....	B1000-		47
B146	Pin, Clutch Dog.....	B1000-		47
B147	Bolt, Clutch Operating.....	B1000-		47
B158	Facing, Clutch.....	B1000-	325000-	47
B160	Washer, Clutch Driving Disk.....	B1000-	325000-	47
B161	Spring, Clutch Release.....	B1000-		47
B162R	Disk, Clutch Adjusting.....	B1000-	325000-	47
B164	Cover, Clutch, Dust.....	B1000-	325000-	47
B423	Spring, Clutch Release.....		325000-	47
B426	Drive Pin, Clutch Operating Sleeve.....	B1000-		47
B735R	Sleeve, Clutch Operating.....		325000-	47
B736	Drive Pin, Clutch Operating Sleeve.....		325000-	47
B737	Bolt, Clutch Operating.....		325000-	47
B738	Pin, Clutch Operating Bolt.....		325000-	47
B739	Pin, Clutch Operating Link.....		325000-	47
B740R	Cam, Clutch Operating.....		325000-	47
B741	Washer, Clutch Operating Cam.....		325000-	47
B752	Rod, Clutch Operating.....		325000-	43
D2031	Bolt, Clutch Lever Pivot.....		325000-	43

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
CLUTCH FORK BEARING AND PULLEY BRAKE				
AB262	Brake, B165R, with Lining, Pulley.....	B1000-		47
AB585	Brake, B757R, with Lining.....		325000-	47
B166	Lining, Pulley Brake.....	B1000-	325000-	47
B167R	Bearing, Clutch Fork.....	B1000-	325000-	47
B168	Shaft, Clutch Fork.....	B1000-	325000-	47
B169	Snap Ring, Clutch Fork Shaft.....	B1000-	325000-	47
B170	Spring, Clutch Fork.....	B1000-	325000-	47
B171R	Fork, Clutch.....	B1000-	325000-	47
B172R	Collar, Clutch (Bronze).....	B1000-		47
B173	Gasket, Clutch Fork Bearing.....	B1000-	325000-	47
B744R	Fork, Clutch.....		325000-	47
B746R	Collar, Clutch (Bronze).....		325000-	47
D178	Pivot, Clutch Fork (2 used).....	B1000-	325000-	47
GEAR SHIFT				
A350	Spring, Gear Shift Lever.....	B1000-		47
A369	Snap Ring, Gear Shift Lever.....	B1000-		47
A605	Ball, Fulcrum.....	B1000-10526		47
A607	Cover, Fulcrum Ball Socket.....	B1000-		47
A608	Washer, Gear Shift Lever Spring Retainer.....	B1000-		47
A825	Ball, Fulcrum.....	B10527-		47
AB312	Gear Shift Fork, B370R, Complete with Yoke.....	B1000-		47
AB565	Shifter, B713R, Low and Reverse Gear, with Yoke.....		325000-	47
AB566	Shifter, B714R, Second Gear, with Yoke.....		325000-	47
B371	Yoke, Gear Shifter.....	B1000-	325000-	47
B374	Spring, Gear Shifter Pawl.....	B1000-	325000-	47
B375	Pawl, Gear Shifter.....	B1000-	325000-	47
B378	Shaft, Shifter.....	B1000-	325000-	47
B380	Screw, Gear Shift, Adjusting.....	B1000-	325000-	47
B382R	Socket, Fulcrum Ball.....	B1000-10526		47
B383	Gasket, Fulcrum Ball Socket.....	B1000-10526		47
B384	Interlock, Gear Shift.....	B1000-		47
B385	Lever, Gear Shift.....	B1000-		47
B408	Bolt (Drilled) Interlock Plate and Fulcrum Ball Socket to Cover.....	B1000-10526		47
B708	Interlock, Gear Shift.....		325000-	47
B710	Lever, Gear Shift.....		325000-	47
B711	Arm, Gear Shift.....		325000-	47
2338R	Pin, Gear Shift Lever Oil Control (Rivet).....		325000-	
SLIDING GEAR SHAFT				
AB338	Gear, Countershaft, Second Speed and Second Speed Sliding Pinion.....	B1000-2035		48
B330	Gasket, Sliding Gear and Countershaft L. H. Bearing Cover.....	B1000-	325000-	48
B331R	Cover, Sliding Gear Shaft L. H. Bearing.....	B1000-	325000-	48
B334	Snap Ring, Sliding Gear Shaft L. H. Bearing (2 used).....	B1000-	325000-	48
B338	Shaft, Sliding Gear.....	B1000-	325000-	48
B341	Pinion, First Speed Sliding.....	B1000-	325000-	48
B343	Pinion, Sliding Gear Shaft Drive.....	B1000-	325000-	48
B532	Pinion, Second Speed Sliding.....	B2036-		48
B706	Pinion, Second Speed Sliding.....		325000-	48
C535	Nut, Sliding Gear Shaft, L. H. End.....	B1000-	325000-	48
JD7664	Bearing, Sliding Gear Shaft, L. H.....	B1000-	325000-	48
JD7678	Bearing, Sliding Gear Shaft, R. H.....	B1000-	325000-	48
OVERDRIVE GEAR SHIFT				
A147	Key Washer, Overdrive Shifter.....	B1000-	325000-	48
AB313	Shifter, Overdrive, B376R, with Yoke and Reverse Lockout Pin.....	B1000-	325000-	48
B371	Yoke, Overdrive Shifter.....	B1000-	325000-	48
B374	Spring, Overdrive Shifter Pawl.....	B1000-	325000-	48
B375	Pawl, Overdrive Gear Shifter.....	B1000-	325000-	48
B377	Pin, Reverse Lockout.....	B1000-	325000-	48
B386	Handle, Overdrive Shifter.....	B1000-		48
B387	Snap Ring, Overdrive Shifter Handle.....	B1000-	325000-	48
B388R	Lever, Overdrive Shifter.....	B1000-	325000-	48
B709	Handle, Overdrive Shifter.....		325000-	48

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR				
A310	Cap Screw, Overdrive Gear and Shaft Bearing, L. H. Cover to Case (Drilled).....		325000-	48
AB546	Cover, Overdrive Gear and Shaft, L. H. Bearing	B1000-	325000-	48
AB690	Overdrive Gear and Shaft with Oil Drive Collar and R. H. Bearing Cover.....	B1000-	325000-	48
B148R	Cover, First Reduction Gear.....	B1000-		48
B152	Snap Ring, First Reduction Gear (2 used).....	B1000-	325000-	48
B153	Dowel Pin, First Reduction Gear Cover (2 used).....	B1000-	325000-	48
B154	Gasket, First Reduction Gear Cover.....	B1000-	325000-	48
B156	Gasket, Overdrive, R. H. Bearing Cover	B1000-	325000-	48
B157	Cover, Overdrive, R. H. Bearing	B1000-	325000-	48
B240	Gear, First Reduction.....	B1000-	325000-	48
B334	Snap Ring, Overdrive Gear and Shaft, Inside Bearing..	B1000-	325000-	48
B335	Gasket, Overdrive Gear and Shaft, L. H. Bearing Cover	B1000-	325000-	48
B344	Spacer, First Reduction Gear.....	B1000-	325000-	48
B359	Stud, First Reduction Gear Cover to Case (1 used)....		325000-	48
B611	Collar, Sliding Gear Shaft Drive Gear.....	B1000-	325000-	48
B620	Retainer, Overdrive Gear and Shaft, L. H. Bearing Cover.....	B1000-	325000-	48
B748R	Cover, First Reduction Gear.....		325000-	48
C2072	Nut, Overdrive, Gear Shaft, R. H. End.....	B1000-	325000-	48
JD7538	Bearing, Overdrive Gear and Shaft, L. H. End	B1000-	325000-	48
JD7677	Bearing, Overdrive Gear and Shaft, R. H. End	B1000-	325000-	48
K3083	Stud, First Reduction Gear Cover to Case (1 used)....	B1000-	325000-	48
2226R	Washer, Overdrive Gear and Shaft End.....	B1000-	325000-	48
OVERDRIVE IDLER GEAR				
B322	Gear, Countershaft Idler.....	B1000-	325000-	48
B323	Washer, Idler Gear Thrust, R. H.....	B1000-	325000-	48
B324	Washer, Idler Gear Thrust, L. H.....	B1000-	325000-	48
JD7527	Roller Assembly, Overdrive Idler, L. H. Bearing	B1000-	325000-	48
JD7528	Roller Assembly, Overdrive Idler, R. H. Bearing	B1000-	325000-	48
COUNTERSHAFT				
A310	Cap Screw, Countershaft, R. H. Bearing Housing to Case (Drilled).....	B1000-	325000-	48
A365	Snap Ring, Countershaft, L. H. Bearing	B1000-	325000-	48
AB338	Gear, Countershaft Second Speed and Second Speed Sliding Pinion.....	B1000-2035		48
B239	Pinion, Differential Driving.....	B1000-	325000-	48
B321	Countershaft.....	B1000-	325000-	48
B322	Gear, Countershaft Idler.....	B1000-	325000-	48
B325	Spacer, Second Speed Gear.....	B1000-	325000-	48
B327	Spacer, Differential Drive Pinion.....	B1000-	325000-	48
B328	Spacer, First Speed Gear.....	B1000-	325000-	48
B329	Gear, First Speed Countershaft.....	B1000-	325000-	48
B331R	Cover, L. H. Countershaft Bearing	B1000-	325000-	48
B332	Gasket, Countershaft, R. H. Bearing Housing, Thin...	B1000-	325000-	48
B333R	Housing, Countershaft, R. H. Bearing	B1000-	325000-	48
B339	Gasket, Countershaft, R. H. Bearing Housing, Thick ..	B1000-	325000-	48
B340	Shim, Countershaft, R. H. Bearing Housing (Steel)....	B1000-	325000-	48
B531	Gear, Second Speed Countershaft.....	B2036-		48
B705	Gear, Second Speed Countershaft.....		325000-	48
JD7356	Cone with Rollers, Countershaft, R. H. Bearing	B1000-	325000-	48
JD7367	Cone with Rollers, Countershaft, L. H. Bearing	B1000-	325000-	48
JD7404	Cup, Countershaft, R. H. Bearing	B1000-	325000-	48
JD7405	Cup, Countershaft, L. H. Bearing	B1000-	325000-	48
DIFFERENTIAL				
AB265	Differential, Complete (Used on Tractors with Differ- ential Brakes).....	B1000-	325000-	...
AB360	Differential Gear with Shaft (Used on Tractors with Differential Brakes).....	B1000-	325000-	49
AB560	Differential, Complete (BR and BI only).....		325000-	...
AB636	Differential Gear with Shaft (BR and BI only).....		325000-	49
B160	Washer, on Differential Shaft (BR and BI only).....		325000-	49
B184	Pinion, Differential Bevel.....	B1000-	325000-	49
B185	Shaft, Differential Bevel Pinion.....	B1000-	325000-	49

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
DIFFERENTIAL—Continued				
B187	Pinion, Differential Bevel Gear and Spur	B1000—	325000—	49
B188	Washer, Differential Thrust	B1000—	325000—	49
B189	Cover, Differential Shaft, R. H. Bearing	B1000—	325000—	49
B190	Snap Ring, Differential Shaft, R. H. Bearing	B1000—	325000—	49
B191R	Quill, Differential Bearing (Used on Tractors with Differential Brakes)	B1000—	325000—	49
B192	Gasket, Differential Bearing Quill (Thin)	B1000—	325000—	49
B193	Gasket, Differential Bearing Quill (Thick)	B1000—	325000—	49
B194	Shim, Differential Bearing Quill (Steel)	B1000—	325000—	49
D488	Stud, Differential Bearing Quill to Case	B1000—	325000—	49
JD7246	Cone, Differential Bearing	B1000—	325000—	49
JD7408	Cup, Differential Bearing	B1000—	325000—	49
56R	Key, Emergency Brake Drum to Differential Shaft (BR and BI only)		325000—	49
FINAL DRIVE				
AA666	Felt Washer, Rear Axle Oil Seal (BI only)		325000—	50
AB361	Rear Axle Housing, B345, with Bearing Cups	B1000—		49
AB475	Felt Washer, Rear Axle (B, BN, BW, BR and BO only)		325000—	49
AB635	Rear Axle Housing, B729R, with Bearing Cups (BR and BO only)		325000—	50
AB718	Oil Seal, Rear Axle, Inner Bearing	B1000—	325000—	49
AB806	Housing, Rear Axle (BI only)		325000—	50
B179	Gear, Final Drive	B1000—	325000—	49
B306R	Cover, Rear Axle Housing, Rear	B1000—		49
B308	Gasket, Rear Axle Cover to Housing	B1000—	325000—	49
B346	Shaft, Rear Axle	B1000—11505		49
B347R	Spacer, Rear Axle Bearing (BR and BO only)		325000—	49
B349	Retainer, Rear Axle Felt	B1000—		49
B350R	Nut, Rear Axle Shaft	B1000—	325000—	49
B351	Gasket, Rear Axle Housing to Case	B1000—	325000—	49
B409	Washer, Rear Axle Oil Seal (Steel)	B1000—	325000—	49
B593	Axle, Rear	B11506—		49
B670	Shaft, Rear Axle, R. H. (BI only)		325000—	50
B671	Shaft, Rear Axle, L. H. (BI only)		325000—	50
B672	Retainer, Rear Axle Felt (BI only)		325000—	50
B674R	Spacer, Rear Axle Bearing (BI only)		325000—	50
B730	Shaft, Rear Axle, R. H. (BR and BO only)		325000—	50
B731	Shaft, Rear Axle, L. H. (BR and BO only)		325000—	50
B733	Retainer, Rear Axle Felt (BR and BO only)		325000—	50
B769R	Cover, Rear Axle Housing, Rear (BR and BO only)		325000—	49
C719	Stud, Clutch Lever Bracket to Rear Axle Housing		325000—	50
C1220	Dowel Pin, Rear Axle Housing to Transmission Case (2 used)	B1000—	325000—	49
D488	Stud, Rear Axle Housing to Main Case (2 used)	B1000—	325000—	49
D625	Pipe Plug, Rear Axle Housing Drain	B1000—	325000—	49
E2244	Pipe Plug, Rear Axle Housing Cover Oil Filler	B1000—	325000—	49
JD7242	Cone with Rollers, Rear Axle Bearing, Outer (BI only)		325000—	50
JD7272	Cup, Rear Axle Bearing, Inner and Outer (BI, Inner)	B1000—	325000—	49
JD7292	Cup, Rear Axle Bearing, Outer (BI only)		325000—	50
JD7365	Cone with Rollers, Rear Axle Bearing, Inner	B1000—	325000—	49
JD7366	Cone with Rollers, Rear Axle Bearing, Outer (B, BN, BW, BR and BO)	B1000—	325000—	49
JD7759	Alemite Zerk Fitting No. 1610	B1000—	325000—	49
REAR WHEELS				
A1325	Bolt, Rear Wheel (BI only)		325000—	55
AA917	Rim, Demountable Drop Center. For 11.25x24, Low Pressure Rubber Tires	B1000—	325000—	54
AA1051	Drive Wheel, A1378R, Solid Cast with Studs and Nuts. For 8.25 and 9.00x24, High Pressure Rubber Tires (BI only)		325000—	55
AA1056	Rim, Demountable with Side Ring and Lock Ring. For A1378R Wheel, 8.25 and 9.00x24, High Pressure Rubber Tires (BI only)		325000—	55
AA1058	Side Ring and Lock Ring. For 8.25 and 9.00x24, High Pressure Rubber Tires (BI only)		325000—	55

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
REAR WHEELS—Continued				
AB375	Drive Wheel with Rim Strip. (For Tires Size 7.50x36 or 9.00x36)	B1000-		53
AB667	Rim, Demountable Drop Center. For B633R and B679R Wheels, 9.00x28 Low Pressure Rubber Tires		325000-	54
AB823	Drive Wheel, B694R, Solid Cast with Studs and Nuts. For 11.25x24, Low Pressure Rubber Tires (BR and BO only)		325000-	54
AB834	Drive Wheel, B694R, with Demountable Rim. For 11.25x24, Low Pressure Rubber Tires (BR and BO only)		325000-	54
AC1070	Drive Wheel with Rim Strip. For 11.25x24, Low Pressure Rubber Tires (BR and BO only)		325000-	53
B25R	Clamp, Drive Wheel Hub	B1000-		51
B633R	Drive Wheel, Solid Cast. For 9.00x28, Low Pressure Rubber Tires (BR and BO only)		325000-	54
B634R	Clamp, Drive Wheel Rim. For B679R and B633R Wheels		325000-	54
B635	Bolt, Rim Clamp to Rim. For B679R and B633R Wheels		325000-	54
B679R	Drive Wheel, Solid Cast Drive. For 9.00x28, Low Pressure Rubber Tires (BI only)		325000-	54
C1479	Stud, Rim Clamp to Drive Wheel (5/8"x2-1/4") (BI only)		325000-	55
C1716	Bolt, Rear Wheel (BR and BO only)		325000-	54
D409	Stud, Rim Clamp to Drive Wheel (3/4"x3-1/2")		325000-	54
D2106	Rim Clamp. For A1378R Cast Wheel (BI only)		325000-	55
D2526R	Rim Clamp. For B694R Cast Wheel		325000-	54
JD1215	Drive Wheel, 48"x5-1/4", Flat Tire	B1000-		51
JD1221	Drive Wheel, 48"x5-1/4", Flat Tire		325000-	53
JD1224	Wheel, Skeleton, Rear	B1000-		52
REAR WHEEL EQUIPMENT				
A685	Spacer, Skeleton Wheel Cast Lug	B1000-		52
A686	Bolt, Skeleton Wheel Cast Lug	B1000-		52
A687	Lock Washer, Skeleton Wheel Cast Lug (Special)	B1000-		52
A1298	Spud Lug	B1000-	325000-	51
AB473	Road Band with Supports	B1000-		52
AC649	Cone Lug	B1000-	325000-	51
B496R	Cast Lug Skeleton Rear Wheel	B1000-		52
B500	Extension Rim, Rear Wheel, 5-1/4"	B1000-		51
B578	Support, Road Band (For AB473)	B1000-		52
B658	Extension Rim, 7-1/2" Wide, Rear Wheels		325000-	53
C744	Washer, on Drive Wheel Support to Road Band Support	B1000-		52
C1030	Clip, Rear Wheel Extension Rim	B1000-	325000-	51
C1517	Bolt, Sand Lug	B1000-	325000-	51
C1646R	Button Lug	B1000-	325000-	51
C2148	Support, Drive Wheel (For Road Band)	B1000-		52
C2199R	Sand Lug	B1000-	325000-	51
D233	Lug, Spade, 4" High	B1000-	325000-	51
D411	Bolt, Spade Lug	B1000-	325000-	51
D827	Washer, on Wheel Weight Hook Bolt, 1-17/32" Outside Diameter x11/16" Inside Diameter	B1000-	325000-	53
D938	Washer, Spade Lug	B1000-	325000-	51
D1078	Spade Lug, 5" High	B1000-	325000-	51
D1283	Lug, "A" Shaped, 2-Bolt, 5" High	B1000-	325000-	51
D2121	Spade Lug, Heavy Duty, 5" High	B1000-	325000-	51
D2184	Hook Bolt, Wheel Weight to Wheel	B1000-	325000-	53
D2186	Washer, Wheel Weight Hook Bolt (2" O.D.x25/32" I.D.)	B1000-	325000-	53
D2447	Spade Lug, Heavy Duty, 4" High	B1000-	325000-	51
D2629	Washer, Wheel Weight Bolt (1-7/16" O.D. x25/32" I.D.)	B1000-	325000-	53
WHEEL SCRAPERS				
A1084R	Bracket, R. H. Drive Wheel Scraper	B1000-		56
A1085R	Bracket, L. H. Drive Wheel Scraper	B1000-		56
A1090R	Spacer, Drive Wheel Scraper Brackets	B1000-		56
AA700	Holder, Drive Wheel Scraper Blade	B1000-		56
AA701	Scraper Blade Assembly (Rear Wheel)	B1000-		56

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
WHEEL SCRAPERS—Continued				
AB549	Scraper, Front Wheel (B only).....	B1000—		56
B657	Blade, Front Wheel Scraper (B only).....	B1000—		56
B866	Bar, Drive Wheel Scraper.....		326009—	56
B867	Blade, Drive Wheel Scraper.....		326009—	56
B868	Bar, Drive Wheel Extension Rim Scraper.....		326009—	56
C264R	Holder, Drive Wheel Scraper Blade.....		326009—	56
E2229	Stud, Drive Wheel Scraper Bracket.....	B1000—		56
1705R	Washer, Front Wheel Scraper to Knuckle.....	B1000—		56
EMERGENCY BRAKE				
A348	Spring Brake Lever (BR only).....		325000—	56
A981	End, Brake Band Adjusting.....		325000—	56
A983	Nut, Brake Band Adjusting.....		325000—	56
A985	Latch, Brake (BR only).....		325000—	56
A986	Pin, Brake Pedal (BR only).....		325000—	56
A988R	Lever, Brake.....		325000—	56
A1319	Pin, Brake Pedal Pivot (BI only).....		325000—	56
A1323	Pin, Brake Pedal (BI only).....		325000—	56
AA586	Pedal with Latch, Brake (BR only).....		325000—	56
AB567	Housing, with Lever Shaft, Brake (BR only).....		325000—	56
AB568	Brake Band with Lining (BR only).....		325000—	56
AB570	Lever, Brake Band.....		325000—	56
AB632	Felt Washer, Brake Housing.....		325000—	56
AB777	Housing, with Pedal Pivot and Differential Bearing Cup (BI only).....		325000—	56
AB778	Band with Lining, Brake (BI only).....		325000—	56
B192	Gasket, Differential Bearing Quill (Thin).....		325000—	56
B193	Gasket, Differential Bearing Quill (Thick).....		325000—	56
B194	Shim, Differential Bearing Quill (Steel).....		325000—	56
B238	Gasket, Brake Housing Opening Cover.....		325000—	56
B639R	Latch, Brake (BI only).....		325000—	56
B678R	Pedal, Brake (BI only).....		325000—	56
B715	Cover, Brake Housing Opening.....		325000—	56
B717	Shaft, Brake Band Anchor Lever.....		325000—	56
B718	Retainer, Brake Housing, Felt.....		325000—	56
B719R	Drum, Brake.....		325000—	56
B721	Lining, Brake Band.....		325000—	56
B723	Rod, Brake Operating.....		325000—	56
B764	Pin, Brake Lever Pivot (BR only).....		325000—	56
C284R	Yoke, Brake Operating.....		325000—	56
C1067	Pin, Brake Rod Yoke.....		325000—	56
C1224	Spring, Brake Pedal (BI only).....		325000—	56
D960	Spacer, Brake Lever Pivot.....		325000—	56
D1950	Spring, Brake Band Adjusting End.....		325000—	56
JD7759	Alemite Zerk Fitting, No. 1610.....		325000—	56
DIFFERENTIAL BRAKES				
A151	Screw, Brake Adjusting.....	B1000—	325000—	57
A321	Cam, Brake.....	B1000—	325000—	57
AB277	Brake Housing, B218R, with Bushing.....	B1000—		57
AB279	Brake Shoe with Lining.....	B1000—	325000—	57
AB282	Shaft and Drum, Brake.....	B1000—		57
AB330	Support, Brake Latch.....	B1000—	325000—	57
AB676	Brake Housing, B636R, with Bushing, R. H.....		325000—	57
AB677	Brake Housing, B637R, with Bushing, L. H.....		325000—	57
AB678	Shaft and Drum, Brake, R. H.....		325000—	57
AB679	Shaft and Drum, Brake, L. H.....		325000—	57
B219	Bushing, Brake Shaft (Inner).....	B1000—	325000—	57
B220	Guard, Brake Shaft Dust (Outer).....	B1000—	325000—	57
B223	Lining, Brake Shoe.....	B1000—	325000—	57
B224	Roller, Brake Shoe.....	B1000—	325000—	57
B225	Pin, Brake Shoe Roller.....	B1000—	325000—	57
B226	Shaft, Brake Lever.....	B1000—	325000—	57
B227	Pin, Brake Adjusting.....	B1000—	325000—	57
B228	Spring, Brake Shoe.....	B1000—	325000—	57
B231	Guard, Brake Shaft Dust (Inner).....	B1000—	325000—	57
B233	Washer, Brake Shaft Pinion.....	B1000—	325000—	57
B234	Pinion, Brake Shaft.....	B1000—	325000—	57
B235	Nut, Brake Shaft End.....	B1000—	325000—	57

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
DIFFERENTIAL BRAKES—Continued				
B236R	Brake Pedal, R. H.	B1000—		57
B237R	Brake Pedal, L. H.	B1000—		57
B238	Gasket, Brake Housing to Transmission Case, L. H. (B, BN, BW)	B1000—		57
B238	Gasket, Brake Housing to Transmission Case, R. H.	B1000—	325000—	57
B305	Latch, Brake	B1000—		57
B638	Bushing, Brake Shaft (Outer)		325000—	57
B639R	Latch, Brake		325000—	57
B642R	Brake Pedal, R. H.		325000—	57
B643R	Brake Pedal, L. H.		325000—	57
B651	Gasket, Brake Housing to Transmission Case, L. H. (BO)		325000—	57
D488	Stud, Brake Housing to Case	B1000—	325000—	57
JD7759	Alemite Zerk Fitting No. 1610	B1000—		57
K2525	Pipe Plug in Brake Housing, 1/8" Square Head		325000—	57
27R	Washer, Brake Latch and Brake Lever Shaft	B1000—	325000—	57
REAR WHEEL BRAKES—BI ONLY				
A348	Spring, Brake Shoe		325000—	57
A676	Key, Woodruff, in Brake Cross Shaft (1/4"x1")		325000—	57
A1363R	Carrier, Brake Shoe		325000—	57
A1364	Screw, Brake Adjusting		325000—	57
A1366	Pin, Brake Adjusting		325000—	57
A1368	Facing, Brake Shoe		325000—	57
A1371R	Lever, Brake Cross Shaft		325000—	57
A1373R	Lever, Brake Hand		325000—	57
A1374	Rod, Hand Lever Pawl		325000—	57
A1375	Latch Plate		325000—	57
A1376	Lever, Brake Cam		325000—	57
AA1043	Brake Shoe with Facing		325000—	57
AB805	Bracket, Brake Shaft with Latch Plate, L. H.		325000—	57
B178	Pin, Brake Control Link		325000—	57
B686	Cam Shaft, Rear Wheel Brake		325000—	57
B687R	Bracket, Brake Shaft, R. H.		325000—	57
B689	Cross Shaft		325000—	57
B690	Link, Control		325000—	57
D2594	Roller, Brake Shoe		325000—	57
D2595	Pin, Brake Shoe Roller		325000—	57
D2596	Cam, Brake		325000—	57
D2606	Pawl, Hand Lever		325000—	57
D2608	Spring, Hand Lever Pawl Rod		325000—	57
D2609	Button, Hand Lever Pawl Rod		325000—	57
FRONT AXLE AND FRONT END SUPPORT				
A876	Bushing, Front Axle Pivot Pin (Front) (BW only)	B1000—		58
A877	Bushing, Knuckle Pin (4 used) (BW only)	B1000—		58
A880	Pin, Front Axle Pivot (Front) (BW only)	B1000—		58
A881	Pin, Front Axle Pivot (Rear) (BW only)	B1000—		58
A882	Bushing, Front Axle Pivot Pin (Rear) (BW only)	B1000—		58
A886	Lock Screw, Tapered (BW only)	B1000-8974		58
A887	U-Bolt, Front Axle (BW only)	B1000—		58
A890	Washer, Front Wheel Knuckle Thrust (BW only)	B1000—		58
A1101	Bolt, Front Axle Lock (BW only)	B1000—		58
A1297R	Eyebolt, Front End Support		326225—	59
AA648	Knuckle with Spindle (BW only)	B1000—		58
AA649	Housing, Front Axle, with Pivot Pins (BW only)	B1000-8973		58
AA650	Axle, Front, with Bushings (BW only)	B1000-8973		58
AA729	Housing, Front Axle, with Pivot Pins (BW only)	B8974—		58
AA730	Knee, with Bushing and Pin, Front Axle (BW only)	B8974—		58
AB244	Support, Complete, Front End (B only)	B1000-3042		59
AB411	Axle, Front, with Bearing Spacer (BN only)	B1804—		58
AB429	Axle, Front, with Bearing Spacer (BN only)	B1000-1803		58
AB437	Support, Front End, with Studs	B3043—		59
AB452	Bracket, Front Axle Pivot with Bushing (BW only)	B1000—		58
AB618	Radius Rod, with Pivot (BR and BO only)		325000—	58
AB641	Front Wheel Knuckle with Bushings and Studs		325000—	58
AB771	Radius Rod with Pivot (BI only)		325000—	58
B112	Nut, Front Axle Knuckle Spindle (BW only)	B1000—		58
B547	Spacer, Front Axle Bearing (BN only)	B1804—		58

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
FRONT AXLE AND FRONT END SUPPORT—Continued				
B548R	Nut, Front Axle Bearing, Adjusting (BN only)	B1804—		58
B549	Lock Plate, Front Axle Nut (BN only)	B1000—		58
B550	Screw, Front Axle Lock Plate (BN only)	B1000—		58
B551	Nut, Front Axle (BN only)	B1000—		58
B565	Stud, Pedestal to Front End (4 used)	B1000—		58
B661R	Support, Front End (BI only)	B3043—		59
B809	Spindle Pin		325000—	59
B810	Washer, Spindle Pin		325000—	58
B811R	Front Axle		325000—	58
B813R	Support, Front End (BR and BO only)		325000—	58
B814	Stud, Radius Rod Pivot		325000—	59
B815	Bushing, Radius Rod Pivot		325000—	58
B816	Pin, Front Axle Pivot		325000—	58
B817	Pin, Front Axle Pivot Pin (Drilled)		325000—	58
B818	Taper Bolt, Spindle Pin		325000—	58
B842	Bushing, Front Wheel Knuckle (4 used)		325000—	58
C535	Nut, Hex., Castellated, on Front Axle (BN only)	B1000—		58
D186	Pin, Thrust Washer Anchor (BW only)	B8974—		58
D1881	Dust Cap, Knuckle		325000—	58
E2189	Washer, Radius Rod Pivot		325000—	58
JD7759	Alemite Zerk Fitting, No. 1610, Front Axle and Knuckles (5 used)		325000—	58
JD7759	Alemite Zerk Fitting, No. 1610, in Front Axle Pivot Pin (BW only)	B1000—		58
JD7759	Alemite Zerk Fitting, No. 1610, in Front Axle Knee (BW only)	B1000—		58
JD7760	Alemite Zerk Fitting, No. 1612, Radius Rod Pivot		325000—	58
K2198	Stud, Pedestal to Front End (4 used)	B3043—		59
FRONT WHEELS AND FRONT WHEEL EQUIPMENT				
A81R	Nut, Front Wheel Knuckle (BW only)	B1000—		60
A215	Guide Band, Front Wheel, 1-1/2" High (BW, BO and BR only)	B1000—	325000—	61
A777	Guide Band, Front Wheel, 2" High (BW only)	B1000—		61
A1235R	Hub, Front Wheel (Part of AA847) (BN only)	B13820—		60
A1236R	Flange, Front Wheel (Part of AA847) (BN only)	B13820—		60
AA663	Washer, Front Wheel, Felt (BW only)	B1000—		60
AA847	Wheel, Front, with Bearing Cups (Tire Sizes, 7.50x10 and 9.00x10) (BN only)	B1000—		60
AB241	Hub Cap, B88R, with Oil Fitting, Front Wheel (B and BN)	B1000—		60
AB358	Front Wheel, with Bearing Cups, less Hub Cap (B only)	B1000—		60
AB378	Wheel, Front, with Bearing Cups and Rim Strip (Tire Size, 5.00x15) (B only)	B1000—		60
AB415	Wheel, Front, Disk Type with Bearing Cups (B only)	B1000—		60
AB427	Front Wheel with Races (BN only)	B1000—		60
AB474	Felt Washer, Front Wheel	B1000—	325000—	60
AB642	Front Wheel with Bearing Cups		325000—	60
AB688	Wheel, Front, with Bearing Cups and Rim Strip. For 5.25 and 5.50x16 Low Pressure Rubber Tires (BI only)		325000—	60
AC119	Hub Cap with Zerk Fitting (BW, BR, BO and BI only)	B1000—		60
AC885	Wheel, Front, with Bearing Races (BW only)	B1000—		60
AC1088	Wheel, Front, with Bearing Races and Rim Strip (5.25x16 or 5.50x16) (BW only)	B1000—		60
B10	Band, Front Wheel Guide (B only)	B1000—		61
B89	Felt Retainer, Front Wheel	B1000—	325000—	60
B102	Gasket, Front Wheel Hub Cap (B and BN only)	B1000—		60
B103R	Nut, Front Wheel Bearing (B, BN, BI, BO, BR only)	B1000—	325000—	60
B552	Guide Band, 1-1/2" High (BN only)	B1000—		61
B557	Guide Band, 2" High (B only)	B1000—		61
B559	Hook Bolt, for Attaching Front Wheel Weights in Assembly AB426 (B only)	B1000—		61
B575R	Extension Rim (B only)	B1000—		61
B605	Guide Band (2-1/2" High) (B only)	B1000—		61
C677	Gasket, Front Wheel Hub Cap (BW, BI, BO and BR only)	B1000—	325000—	60

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No. 1
		B, BN, BW	BR, BO, BI	
FRONT WHEELS AND FRONT WHEEL EQUIPMENT—Continued				
C722	Extension Rim, 5" Wide		325000—	61
C1732	Guide Band, 2-1/2" High (BW only)	B1000—		61
C2309	Clip, Front Wheel Extension Rim	B1000—		61
D635	Retainer, Front Wheel, Felt (BW only)	B1000—		60
D2184	Hook Bolt, without Nut, for Front Wheel Weights (BW only)	B1000—		61
D2186	Washer, Plain, Hook Bolt (BW only)	B1000—		61
JD7216	Cone with Rollers, Front Wheel, Outside Bearing (BW only)	B1000—		60
JD7222	Cone with Rollers, Front Wheel, Inside Bearing (B, BI, BO and BR)	B1000—	325000—	60
JD7222	Cone with Rollers, Front Wheel, R. H. and L. H. Bearings (BN)	B1000—		60
JD7224	Cone with Rollers, Front Wheel, Inside Bearing (BW only)	B1000—		60
JD7266	Cup, Front Wheel, Inside Bearing (B, BI, BO and BR)	B1000—	325000—	60
JD7266	Cup, Front Wheel, R. H. and L. H. Bearings (BN)	B1000—		60
JD7266	Cup, Front Wheel, Outside Bearing (BW)	B1000—		60
JD7270	Cup, Front Wheel, Inside Bearing (BW only)	B1000—		60
JD7356	Cone with Rollers, Front Wheel, Outside Bearing (B, BI, BO and BR only)	B1000—	325000—	60
JD7402	Cup, Front Wheel, Outside Bearing (B, BI, BO and BR only)	B1000—	325000—	60
JD7759	Alemite Zerk Fitting, No. 1610, Front Wheel Hub Cap (B, BW, BI, BO and BR only)	B1000—	325000—	60
JD7759	Alemite Zerk Fitting, No. 1610 (BN only)	B1000—		60
PEDESTAL				
A776	Stop Pin, Steering Sector (B and BN)	B1000—		62
A875	Stop Pin, Steering Sector (BW only)	B1000—		62
A877	Bushing, Pedestal, Lower (1 used) (BW only)	B1000—		62
AB213	Housing, Steering Worm, Front, with Bearing Cup	B1000—		62
AB410	Pedestal, with Bushing and Stop Pin (BN only)	B1804—		62
AB428	Pedestal, with Bolts (BN only)	B1000—1803		
AB451	Pedestal, with Bushing, Stop Pin, and Bearing Cups (BW only)	B1000—		62
AB496	Pedestal, B100R, with Stud and Stop Pin (B only)	B1000—		62
B29	Gasket, Steering Worm Housing, (Thin)	B1000—		62
B30	Gasket, Steering Worm Housing, (Medium)	B1000—		62
B31	Gasket, Steering Worm Housing, (Thick)	B1000—		62
B32	Packing, Steering Shaft, (3 used)	B1000—		62
B33	Nut, Steering Shaft Packing	B1000—		62
B34	Gasket, Steering Gear Housing Cover	B1000—		62
B35	Cover, Steering Gear Housing	B1000—		62
B101	Bushing, Pedestal, Lower (B only)	B1000—		62
B106	Packing, Spindle Eccentric Bushing	B1000—		62
B107	Shim, Steel Steering Spindle, Eccentric Bushing	B1000—		62
B108R	Eccentric Bushing, Steering Spindle	B1000—		62
B545	Bushing, Pedestal, Lower (BN only)	B1000—		62
B565	Stud, Pedestal to Front End	B3043—		59
C1479	Stud, Pedestal Support	B1000—3043		62
JD7759	Alemite Zerk Fitting, Upper and Lower Pedestal Bear- ings, No. 1610	B1000—		62
K2198	Stud, Pedestal to Front End	B3043—		59
K2525	Pipe Plug, Steering Gear Housing Drain	B1000—		62
STEERING PARTS				
A891	Arm, Steering (BW only)	B1000—		63
A892	Rod, Drag Link (BW only)	B1000—		63
A893	Clamp Half, Drag Link (8 used) (BW only)	B1000—		63
A946R	Bracket, Steering Shaft Bearing		325000—	43
AA567	Steering Shaft with Worm		325000—	63
AB214	Bearing with Bushing, Steering Shaft (Upper)	B1000—	325000—	43
AB212	Steering Shaft and Worm	B1000—		63
AB218	Steering Wheel	B1000—	325000—	63
AB243	Double Knuckle with Spindle (B only)	B1000—8000		63
AB408	Yoke and Spindle, Front Wheel (BN only)	B1000—		63

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
STEERING PARTS—Continued				
AB486	Double Knuckle with Spindle (B only)	B8001—		63
AB644	Drag Link, Complete (BR and BO only)		325000—	63
AB770	Drag Link, Complete (BI only)		325000—	63
AC352	Cover, Drag Link, Dust (BW only)	B1000—		63
B37	Bushing, Steering Shaft, Upper Bearing	B1000—	325000—	43
B104	Pivot Plate, Double Knuckle, Lower (B and BN only)	B1000—		62
B105	Washer, Steering Spindle, Lower Thrust (B and BN only)	B1000—		62
B110	Sector, Steering	B1000—		63
B111	Washer, Steering Sector	B1000—		63
B111	Washer, Steering Arm (BW only)	B1000—		63
B389	Support, Steering Shaft, Rear	B1000—		43
B392R	Bracket, Steering Shaft Bearing	B1000—		43
B573	Spindle, Steering (BW only)	B1000—		63
B754	Tube, Vertical Steering Shaft		325000—	63
B780	Shaft, Steering Gear, Vertical		325000—	63
B781	Wheel, Steering Worm		325000—	63
B782R	Housing, Steering Gear		325000—	63
B786	Ball Stud Bearings, Drag Link and Tie Rod		325000—	63
B787	Screw Plug, Drag Link and Tie Rod		325000—	63
B788	Arm, Steering Gear		325000—	63
B789	Support, Steering Shaft, Rear		325000—	43
B803	Steering Arm, R. H.		325000—	63
B804	Steering Arm, L. H.		325000—	63
B805	Stud, Steering Arm to Knuckle (4 used)		325000—	58
B807	Tie Rod		325000—	63
B808	End, Tie Rod		325000—	63
B812	Bushing, Steering Gear Shaft, Vertical (Lower)		325000—	63
B829R	Arm, Steering Gear (BW only)	B1000—		63
C838	Bearing, Ball Stud (BW only)	B1000—		63
C840	Screw, Drag Link End Plug (BW only)	B1000—		63
C977	Adjusting Screw, Steering Gear Shaft		325000—	63
C1109	End, Drag Link Rod (BW only)	B1000—		63
C1220	Dowel Pin, Steering Housing		325000—	63
C1231	Gasket, Steering Worm Housing (Thick)		325000—	63
C1242	Gasket, Steering Worm Housing (Thin)		325000—	63
D342	Key, Steering Wheel	B1000—	325000—	63
D467	Washer, Steering Arm Shim (BW only)	B1000—		63
D1766R	Adjusting Nut, Steering Worm		325000—	63
D1768	Washer, Oil Seal and Steering Worm Adjusting Nut		325000—	63
D1769R	Housing, Steering Worm		325000—	63
D1771	Nut, Steering Wheel to Shaft		325000—	63
D1771	Nut, on Tie Rod Ends		325000—	63
JD7205	Roller Assembly, Steering Worm		325000—	63
JD7253	Cup, Steering Worm Bearing		325000—	63
JD7264	Cup, Steering Shaft Worm Bearing	B1000—		63
JD7364	Cone, with Rollers, Steering Shaft Worm	B1000—		63
JD7759	Oil Fitting Alemite Hydraulic, No. 1610, Steering Worm Housing		325000—	63
JD7759	Alemite Zerk Fitting, No. 1610, Drag Link and Tie Rod		325000—	63
JD7759	Alemite Zerk Fitting, No. 1610, in Drag Link Rod End	B1000—		63
JD7759	Alemite Zerk Fitting, No. 1610, Steering Shaft Lower Bushing		325000—	63
294R	Stud, Steering Housing to Case, 1/2"x1-11/16"		325000—	63
DRAWBAR				
A333	Nut, Drawbar Clevis, (Special)	B1000—		64
A334	Nut, Drawbar to Front Support Bolt, Grip (BR and BO only)		325000—	64
A506	End, Drawbar	B1000—		64
A507	Pin, Drawbar Roller (BR and BO only)		325000—	64
A850R	Roller, Drawbar (BR and BO only)		325000—	64
A1020	End, Drawbar (BR and BO only)		325000—	64
A1307R	Clevis, Drawbar (BI only)		325000—	64
AB235	Swinging Drawbar	B1000—		64
AB579	Swinging Drawbar (BR and BO only)		325000—	64
AB580	Drawbar Support with Brake Lever Pivots (BR and BO only)		325000—	64

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
DRAWBAR—Continued				
AB774	Drawbar Assembly (BI only)		325000—	64
B66R	Roller, Drawbar	B1000—	325000—	64
B67	Pin, Drawbar Roller	B1000—		64
B68	Clevis, Drawbar	B1000—		64
B70	Support, Drawbar, R. H.	B1000—		64
B71	Support, Drawbar, L. H.	B1000—		64
B72	Support, Drawbar, Rear (B, BN, BW, BR and BO)	B1000—		64
B765	Support, Drawbar, Front (BR and BO only)		325000—	64
D349	Spacer, Drawbar Support (B, BN, BW, BR and BO)	B1000—	325000—	64
D2545	Pin, Drawbar Clevis (Drilled) (BI only)		325000—	64
SEAT				
A60R	Body, Seat Support	B1000—		64
A222	Channel, Seat Support	B1000—		64
A317	Bolt, Seat to Channel Support (B, BN, BW, BR, BO)	B1000—	325000—	
A333	Nut, Seat Spring Bolt, Special (B, BN, BW, BR, BO)	B1000—	325000—	64
A618	Spring, Seat (B, BN, BW, BR and BO)	B1000—	325000—	64
A619	Bolt, Seat Spring, 9" Long (B, BN, BW, BR and BO)	B1000—	325000—	64
A1316	Spacer, Seat Bolt (BI only)		325000—	64
AA974	Support, Seat (BI only)		325000—	64
AD1298	Frame, Trailer Patrol Seat (BI only)		325000—	64
AD1299	Cushion, Trailer Patrol Seat (BI only)		325000—	64
B841	Channel, Seat Support (BR and BO only)		325000—	64
B845	Strap, Seat Channel Stop (BR and BO only)		325000—	64
B847	Strap, Seat Spring Bolt (BR and BO only)		325000—	64
C1980	Pin, Channel Seat Support (BR and BO only)		325000—	64
C1982R	Washer, Seat Spring (B, BN, BW, BR and BO)	B1000—	325000—	64
C1985	Spacer, Seat Clamp (B, BN, BW, BR and BO)	B1000—	325000—	64
D1796	Seat (B, BN, BW, BR and BO)	B1000—	325000—	64
D1797	Nut, Seat Clamp (B, BN, BW, BR and BO)	B1000—	325000—	64
D2266	Stud, Seat Support to Rear Axle Housing (BI only)		325000—	64
K2019	Stud, Seat Support Body	B1000—		64
PLATFORM				
AB299	Platform, with Brake Latch Supports	B1000—		65
AB330	Support, Brake Latch	B1000—		65
AB552	Platform, with Support and Cross Angle (BR and BO only)		325000—326008	65
AB740	Platform, with Support and Cross Angle (BR and BO only)		326009—	65
AB782	Platform, with Supports and Cross Angles (BI only)		325000—	66
B680	Platform (BI only)		325000—	66
B683	Platform Brace (Flat) (BI only)		325000—	66
B819	Platform (BR and BO only)		325000—	65
B820	Support, Platform, R. H. (BR and BO only)		325000—326008	65
B821	Support, Platform, L. H. (BR and BO only)		325000—326008	65
B822	Cross Angle, Platform, 53-5/8" Long (BR and BO only)		325000—326008	65
B860	Cross Angle, Platform, 52-1/4" Long		326009—	66
B861	Support, Platform, R. H.		326009—	66
B862	Support, Platform, L. H.		326009—	66
FENDERS				
A792R	Bracket, Fender, R. H. and L. H.	B1000—		67
AA467	Fender, Complete, R. H.	B1000—		67
AA468	Fender, Complete, L. H.	B1000—		67
AB624	Fender, R. H. (BR and BO only)		325000—326008	67
AB625	Fender, L. H. (BR and BO only)		325000—326008	67
AB628	Guard, Pulley		325000—	68
AB655	Citrus Fender, R. H.		325000—326008	68
AB656	Citrus Fender, L. H.		325000—326008	68
AB659	Support, Citrus Fender, R. H., Front		325000—	68
AB736	Fender, R. H. (BR and BO only)		326009—	67
AB737	Fender, L. H. (BR and BO only)		326009—	67
AB742	Citrus Fender, R. H.		326009—	68
AB743	Citrus Fender, L. H.		326009—	68
AB784	Fender, R. H. (BI only)		325000—	67
AB785	Fender, L. H. (BI only)		325000—	67
AB788	Dust Guard, Brake (BI only)		325000—	68
B732	Dust Guard, Brake (BR and BO only)		325704—	68

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
FENDERS—Continued				
B630	Support, Citrus Fender, L. H., Front.....		325000—	68
B644	Dust Shield Extension, L. H. (BO only).....		325000—	68
B835	Dust Shield, R. H.....		325000—	68
B836	Dust Shield, L. H.....		325000—	68
B837	Dust Shield Extension, R. H.....		325000—	68
B838	Dust Guard, Brake (BR and BO only).....		325000—325703	68
B839	Brace, Fender, R. H., Front.....		325000—	67
B840	Brace, Fender, L. H., Front.....		325000—	67
MAGNETO				
A470	Clamp, Spark Plug Cable, Rubber.....	B1000—	325000—	69
A471	Clip, Spark Plug Cable.....	B1000—	325000—	69
A500	Gasket, Magneto to Governor Case.....	B1000—	325000—	69
A1134	Insulator, Spark Plug, Rubber.....	B1000—		69
AA1084	Porcelain, for AC600, No. 2 Spark Plug only.....			69
AB210	Magneto.....	B1000—14037	325000—325600	69
AB336	Conduit, Spark Plug Cable.....	B1000—	325000—	69
AB706	Magneto.....	B14038—	325601—	69
AB819	Cable, Spark Plug, Complete, R. H.....	B1000—	325000—	69
AB820	Cable, Spark Plug, Complete, L. H.....	B1000—	325000—	69
AB827	Shield, Spark Plug.....	B1000—23576		
AB828	Shield and Cable Conduit Tube, Spark Plug.....			69
AC600	Spark Plug, No. 2.....	B1000—	325000—	69
B281	Flange, Magneto Drive.....	B1000—	325000—	42
B465R	Clamp, Spark Plug Cable Conduit.....	B1000—	325000—	69
C1300	Nipple, Spark Plug Cable, Rubber.....	B1000—	325000—	69
C2175	Stud, Magneto to Governor Case (One used).....	B1000—	325000—	42
C2331	Porcelain for AC600 Spark Plug, C4 and 3X only.....	B1000—	325000—	69
D465	Gasket, Spark Plug.....	B1000—	325000—	69
629R	Washer, Magneto to Governor Case Screws.....	B1000—	325000—	42

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
	MAGNETO PARTS (For AB210 Magnetos for Tractors B1000-14037 325000-325600)		
A692	Insulating Strip, Distributor.....	5124—	70
A695	Gasket, Brush Holder, Cork.....	5124—	70
A698	Nut, Brass, Primary Lead Wire.....	5124—	70
A698	Nut, Brass, Stationary Contact Screw.....	5124—	70
A700	Snap Ring, Distributor Shaft.....	5124—	70
A701	Screw, Bridge Clamp, Cadmium Plated, Fillister Head Machine.....	5124—	70
A702	Washer, Cork, Distributor Bearing Oil Seal.....	5124—	70
A702	Washer, Cork, Rotor Shaft.....	5124—	70
A703	Retainer, Distributor Bearing Oil Seal Washer.....	5124—	70
A704	Washer, Flat, Distributor Bearing.....	5124—	70
A705	Screw, Distributor Rotor, Cadmium Plated, Fillister Head Machine.....	5124—	70
A705	Screw, Breaker Bar Clip, Cadmium Plated, Fillister Head Machine.....	5124—	70
A706	Snap Ring, Distributor Bearing Cup.....	5124—	70
A707	Spacer, Distributor Bearing Cup.....	5124—	70
A708	Lock Nut, Stationary Contact Point Screw.....	5124—	70
A709	Screw, Stationary Contact Support.....	5124—	70
A710	Support, Stationary Contact.....	5124—	70
A712	Insulator, Stationary Contact Support.....	5124—	70
A715	Pin, Breaker Bar Fulcrum.....	5124—	70
A716	Insulating Strip, Rotor Bearing.....	5124—	70
A717	Insulating Washer, Rotor Bearing.....	5124—	70
A718	Terminal, Primary Lead Wire.....	5124—	70
A721	Retainer, Cork Washer, Rotor Shaft Bearing.....	5124—	70
A722	Rotor Gear.....	5124—	70
A723	Key, Woodruff, Distributor Shaft.....	5124—	70
A766	Lock Washer, Stationary Contact Support Screw, Cadmium Plated.....	5124—	70
A766	Lock Washer, Breaker Bar Clip Screw, Cadmium Plated.....	5124—	70
A766	Lock Washer, Primary Lead Nut, Cadmium Plated.....	5124—	70
A766	Lock Washer, Distributor Rotor Screws, Cadmium Plated.....	5124—	70

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
MAGNETO PARTS—Continued (For AB210 Magneto for Tractors B1000-14037) 325000-325600)			
A766	Lock Washer, Condenser Screws, Cadmium Plated.....	5124-	70
A767	Lock Washer, Frame Cover Screws, Cadmium Plated.....	5124-	70
A767	Lock Washer, Brush Holder Screws, Cadmium Plated.....	5124-	70
A768	Lock Washer, Bridge Clamp Screw, Cadmium Plated.....	5124-	70
A768	Lock Washer, End Cap Screw, Cadmium Plated.....	5124-	70
A769	Screw, End Cap, Cadmium Plated, Fillister Head Machine.....	5124-	70
A770	Gasket, End Cap.....	5124-	70
A894	Pin, Rotor Gear.....	5124-	70
A1102	Rivet, Stationary Contact Support.....	5124-	70
A1103	Insulator, Stationary Contact Support Rivet.....	5124-	70
A1104	Insulator, Stationary Contact Support Screw.....	5124-	70
AA414	Brush Holder with Screws.....	5124-	70
AA415	Distributor Brush with Spring.....	5124-	70
AA416	Bridge Clamp with Rivet.....	5124-	70
AA417	Coil, Complete.....	5124-	70
AA418	Breaker Bar with Contact Point.....	5124-	70
AA419	Bearing, Distributor.....	5124-	70
AA419	Bearing, Rotor Shaft.....	5124-	70
AA422	Distributor Shaft with Gear.....	5124-	70
AA423	Screw, with Point and Nut, Stationary Contact.....	5124-	70
AA424	End Cap Assembly.....	5124-	70
AA425	Condenser with Lead Wire.....	5124-	70
AA428	Primary Lead Wire with Terminals.....	5124-	70
AB379	Collector Brush with Spring.....	5124-	70
AB380	Distributor, Complete.....	5124-	70
AB383	Rotor with Gear without Bearing.....	5124-	70
AB384	Frame with Lead Wire.....	5124-	70
AB385	Impulse Drive Member with Pawls.....	5124-	70
AB386	Shell, Impulse Coupling with Spring Clip.....	5124-	70
B507	Screw, Frame Cover.....	5124-	70
B508	Cover, Frame Top.....	5124-	70
B509	Gasket, Frame Top Cover (Cork).....	5124-	70
B510	Screw, Brush Holder, Cadmium Plated.....	5124-	70
B514	Screw, Condenser, Cadmium Plated, Round Head Machine.....	5124-	70
B515	Oil Seal, Frame (Cork).....	5124-	70
B516	Nut, Impulse Coupling.....	5124-	70
B517	Spring, Impulse Coupling.....	5124-	70
B518	Holder, Oil Wick.....	5124-	70
B519	Oil Wick.....	5124-	70
B520	Lock Washer, Cam Wick Holder.....	5124-	70
B521	Clip, Impulse Coupling Spring.....	5124-	70
B522	Rivet, Impulse Coupling.....	5124-	70
B523	Shim, Copper, Rotor Bearing (.002", Thin).....	5124-	70
B524	Shim, Copper, Rotor Bearing (.004", Medium).....	5124-	70
B525	Shim, Copper, Rotor Bearing (.006", Thick).....	5124-	70
B594	Screw, Impulse Stop.....	5124-	70
B595	Rivet, Impulse Stop.....	5124-	70
C1330	Lock Wire, Armature Shaft Nut.....	5124-	70
C1334	Pawl, Impulse Drive Member.....	5124-	70
C1335	Key, Woodruff, Impulse Coupling.....	5124-	70
(For AB706 Magneto for Tractors B14038-) 325601-)			
A692	Insulating Strip, Distributor Bearing.....	56577-	70
A695	Gasket, Cork, Brush Holder.....	56577-	70
A698	Nut, Hex., Primary Lead, Cadmium Plated.....	56577-	70
A698	Nut, Hex., Stationary Contact Screw.....	56577-	70
A700	Snap Ring, Distributor Shaft.....	56577-	70
A701	Screw, Bridge Clamp, Cadmium Plated, Fillister Head Machine.....	56577-	70
A702	Cork Washer, Distributor Bearing Oil Seal.....	56577-	70
A702	Cork Washer, Rotor Shaft.....	56577-	70
A703	Retainer, Distributor Bearing Oil Seal Washer.....	56577-	70
A704	Washer, Flat, Distributor Bearing.....	56577-	70
A705	Screw, Distributor Rotor, Cadmium Plated, Fillister Head Machine.....	56577-	70
A705	Screw, Breaker Bar Clip, Cadmium Plated, Fillister Head Machine.....	56577-	70
A706	Snap Ring, Distributor Bearing Cup.....	56577-	70

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
MAGNETO PARTS—Continued (For AB706 Magneto for Tractors B14038-) 325601-)			
A707	Spacer, Distributor Bearing Cup	56577-	70
A708	Lock Nut, Stationary Contact Screw and Point	56577-	70
A709	Screw, Stationary Contact Support	56577-	70
A710	Support, Stationary Contact	56577-	70
A712	Insulator, Stationary Contact Support	56577-	70
A715	Pin, Breaker Bar Fulcrum	56577-	70
A716	Insulating Strip, Rotor Bearing	56577-	70
A717	Insulating Washer, Rotor Bearing	56577-	70
A718	Terminal Connection, Primary Lead Wire	56577-	70
A721	Retainer, Rotor Shaft Bearing Cork Washer	56577-	70
A722	Gear, Rotor	56577-	70
A723	Key, Woodruff, Distributor Shaft	56577-	70
A766	Lock Washer, Stationary Contact Support Screw, Cadmium Plated	56577-	70
A766	Lock Washer, Breaker Bar Clip Screw, Cadmium Plated	56577-	70
A766	Lock Washer, Lead Wire Nut, Cadmium Plated	56577-	70
A766	Lock Washer, Distributor Rotor Screws, Cadmium Plated	56577-	70
A766	Lock Washer, Condenser Screws, Cadmium Plated	56577-	70
A767	Lock Washer, Frame Cover Screws, Cadmium Plated	56577-	70
A767	Lock Washer, Brush Holder Screws, Cadmium Plated	56577-	70
A768	Lock Washer, Bridge Clamp Screws, Cadmium Plated	56577-	70
A768	Lock Washer, End Cap Screw, Cadmium Plated	56577-	70
A769	Screw, End Cap, Cadmium Plated, Fillister Head Machine	56577-	70
A770	Gasket, End Cap	56577-	70
A894	Pin, Rotor Gear	56577-	70
A1102	Rivet, Stationary Contact Support	56577-	70
A1103	Insulator, Stationary Contact Support Rivet	56577-	70
A1104	Insulator, Stationary Contact Support Screw	56577-	70
AA414	Brush Holder with Screws (less Brush)	56577-	70
AA415	Distributor Brush with Spring	56577-	70
AA416	Bridge Clamp with Rivet	56577-	70
AA417	Coil, Complete	56577-	70
AA418	Breaker Bar Assembly with Contact Point	56577-	70
AA419	Bearing, Distributor	56577-	70
AA419	Bearing, Rotor Shaft	56577-	70
AA422	Distributor Shaft with Gear	56577-	70
AA423	Screw, Stationary Contact, with Point and Nut	56577-	70
AA424	End Cap Assembly	56577-	70
AA425	Condenser with Lead Wire	56577-	70
AA428	Lead Wire, Primary, with Terminals	56577-	70
AB379	Collector Brush with Spring	56577-	70
AB380	Distributor Rotor (Complete)	56577-	70
AB383	Rotor Assembly with Gear (less Bearings)	56577-	70
AB384	Frame with Lead Wire	56577-	70
AB386	Impulse Coupling Shell with Spring Clip	56577-	70
AB707	Impulse Drive Member with Pawls	56577-	70
B507	Screw, Frame Cover	56577-	70
B508	Cover, Frame Top	56577-	70
B509	Gasket, Frame Top Cover	56577-	70
B510	Screw, Brush Holder	56577-	70
B514	Screw, Condenser	56577-	70
B515	Oil Seal, Frame (Cork)	56577-	70
B516	Nut, Impulse Coupling	56577-	70
B517	Spring, Impulse Coupling	56577-	70
B518	Holder, Oil Wick	56577-	70
B519	Oil Wick	56577-	70
B520	Lock Washer, Cam Wick Holder	56577-	70
B521	Spring Clip, Impulse Coupling	56577-	70
B522	Rivet, Impulse Coupling Spring Clip	56577-	70
B523	Shim, Copper, Rotor Bearing (.002", Thin)	56577-	70
B524	Shim, Copper, Rotor Bearing (.004", Medium)	56577-	70
B525	Shim, Copper, Rotor Bearing (.006", Thick)	56577-	70
B594	Screw, Impulse Stop	56577-	70
B595	Rivet, Impulse Pawl	56577-	70
C1330	Lock Wire, Armature Shaft Nut	56577-	70
C1334	Pawl, Impulse Drive Member	56577-	70
C1335	Woodruff Key, Impulse Coupling	56577-	70

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
CARBURETOR				
AB237	Carburetor, Complete.....	B1000-	325000-	71
AB331	Body, Carburetor.....	B1000-	325000-	71
AB332	Throttle Lever Assembly.....	B1000-	325000-	71
B449	Bowl Casting.....	B1000-	325000-	71
B450	Nut, Bowl Retaining.....	B1000-	325000-	71
B451	Plug, Economizer.....	B1000-15984	325000-325560	71
B452	Disk, Throttle.....	B1000-	325000-	71
B453	Choker Disk, Air Valve.....	B1000-	325000-	71
B456	Nozzle.....	B1000-	325000-	71
B457	Gasket, Bowl Nut.....	B1000-	325000-	71
B459	Bushing, Throttle Shaft, Upper.....	B1000-	325000-	71
B460	Bushing, Throttle Shaft, Lower.....	B1000-	325000-	71
B855	Plug, Economizer.....	B15985-	325561-	71
C2501	Float Valve and Seat Assembly.....	B1000-	325000-	71
C2502	Shaft, Throttle.....	B1000-	325000-	71
D392	Bushing, Fuel Line.....	B1000-	325000-	71
S1121	Drain Cock.....	B1000-	325000-	71
SI-18	Screws, Choker Disk.....	B1000-	325000-	71
X2458	Load Needle.....	B1000-	325000-	71
X2460	Choker Lever and Shaft Assembly.....	B1000-	325000-	71
X2461	Idle Needle.....	B1000-	325000-	71
X2462	Strainer, Complete.....	B1000-	325000-	71
18-O	Spring, Throttle Stop.....	B1000-	325000-	71
4W	Screw and Washer, Float.....	B1000-	325000-	71
10W	Clamp Screw, Throttle Lever Adjusting Screw.....	B1000-	325000-	71
17W	Screw, Throttle Lever.....	B1000-	325000-	71
41W	Friction Ball, Needle Valve.....	B1000-	325000-	71
45W	Plug Screw for Drilled Holes.....	B1000-	325000-	71
57W	Spring, Friction Ball.....	B1000-	325000-	71
63W	Lock Washers, Choker Disk Screw.....	B1000-	325000-	71
65W	Spring, Nozzle Retaining.....	B1000-	325000-	71
67W	Stop Pin, Throttle Lever.....	B1000-	325000-	71
68W	Spring, Choke Lever Friction.....	B1000-	325000-	71
69W	Cork, Float.....	B1000-	325000-	71
70W	Screws, Throttle Disk.....	B1000-	325000-	71
71W	Adjusting Screw, Throttle Lever.....	B1000-	325000-	71
72W	Washer, Choke Lever Friction Spring.....	B1000-	325000-	71
73W	Gasket, Float Valve Seat.....	B1000-	325000-	71
74W	Washer, Choke Friction.....	B1000-	325000-	71
75W	Lever, Float.....	B1000-	325000-	71
77W	Gasket, Strainer.....	B1000-	325000-	71
78W	Gasket, Bowl.....	B1000-	325000-	71
79W	Pipe Plug, Hex. Head.....	B1000-	325000-	71
80W	Pipe Plug, Headless.....	B1000-	325000-	71
81W	Lock Washer, Throttle Disk Screws.....	B1000-	325000-	71
83W	Drill Plug (7/32"-32).....	B1000-	325000-	71
85W	Drill Plug (1/4"-28).....	B1000-	325000-	71
90W	Pin, Float Pivot.....	B1000-	325000-	71
91W	Screw, Float Bearing.....	B1000-	325000-	71
94W	Screw, Choker Friction Spring.....	B1000-	325000-	71
321R	Gasket, Carburetor to Manifold.....	B1000-	325000-	71
AIR CLEANER				
AB238	Air Cleaner, Complete.....	B1000-	325000-	69
AB239	Stack, Air Cleaner Intake.....	B1000-	69
AB327	Bracket with Fin, Air Cleaner.....	B1000-	69
AB388	Body, Air Cleaner.....	B1000-	325000-	69
AB389	Cup, Air Cleaner with Bottom Strap and Retaining Bolts.....	B1000-	325000-	69
AB390	Bolt, Cup Retaining with Nut and Washer.....	B1000-21887	325000-326217	69
AB545	Stack, Air Cleaner Intake (BR and BO only).....	325000-	69
AB616	Bracket with Fin, Air Cleaner.....	325000-	69
AB649	Stack, Air Cleaner Intake (Low).....	B1000-	69
AB649	Stack, Air Cleaner Intake (used on BR).....	325000-	69
AB775	Stack, Air Cleaner Intake (BI only).....	325000-	69
AB822	Bolt with Nut, Cup Retaining.....	B21888-	326218-	69
B76R	Elbow, Carburetor Air Intake.....	B1000-	69
B77	Hose, Air Cleaner Elbow to Carburetor.....	B1000-	325000-	69
B78	Clamp, Air Cleaner Elbow Hose.....	B1000-	325000-	69

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
AIR CLEANER—Continued				
B80	Gasket, Air Cleaner to Bracket.....	B1000—	325000—	69
B778R	Elbow, Carburetor Air Intake.....		325000—	69
C1572	Wing Nut, Cup Retaining Bolt.....	B1000—	325000—	69
D488	Stud, Air Cleaner Bracket to Radiator Top Tank.....		325000—	69
D1034	Gasket, Elbow to Carburetor.....	B1000—	325000—	69
K3151	Washer, Cup Retaining Bolt.....	B1000—	325000—	69
TOOL BOX AND TOOLS				
AA459	Tool Box.....	B1000—3042		69
AB689	Tool Box.....		325000—	69
B353	Socket Wrench for Spade Lug and Flywheel Bolt Nuts.....	B1000—	325000—	69
B563	Tool Box.....	3043—		69
B596	Socket Wrench for Connecting Rod Bolt and Cylinder Head Nuts.....	B1000—	325000—	69
JD7751	Grease Gun, No. 6556.....	B1000—	325000—	69
K3151	Washer, Tool Box Bolts.....	B1000—		69
POWER SHAFT PARTS				
A552	Arm, Power Shaft Shifter.....	B1000—	325000—	73
A558	Bushing, Power Shaft Bevel Gear (Bronze).....	B1000—	325000—	73
A559	Washer, Power Shaft Bevel Gear Thrust.....	B1000—	325000—	73
A572	Snap Ring, Power Shaft Rear End.....	B1000—	325000—	73
A574	Gasket, Power Shaft Stuffing Box.....	B1000—	325000—	73
A575	Packing, Power Shaft Rear End (3 used).....	B1000—	325000—	73
A774R	Stuffing Box, Power Shaft Rear End.....	B1000—	325000—	73
A775R	Gland, Power Shaft Rear End Packing.....	B1000—	325000—	73
A1242	Guard, Power Shaft End.....	B1000—	325000—	73
AB519	Power Shaft Drive Shaft with Gear and Pinion.....	B1000—9095		73
B307	Shaft, Power.....	B1000—	325000—	73
B310	Gear, Power Shaft, Sliding.....	B1000—9095		73
B313	Bushing, Power Shaft Drive Shaft.....	B1000—	325000—	73
B314R	Cover, Power Shaft, R. H. Bearing.....	B1000—	325000—	73
B315	Gasket, Power Shaft, R. H. Bearing Cover (Thin).....	B1000—	325000—	73
B316	Gasket, Power Shaft, R. H. Bearing Cover (Medium).....	B1000—	325000—	73
B317	Gasket, Power Shaft, R. H. Bearing Cover (Thick).....	B1000—	325000—	73
B320	Lever, Power Shaft Shifter Hand.....	B1000—	325000—	73
B419	Shaft, Power Shaft Shifter.....	B1000—	325000—	73
B420R	Shifter, Power Shaft Gear.....	B1000—	325000—	73
B586	Bevel Gear on Power Shaft.....	B9096—	325000—	73
B587	Pinion, Power Shaft Bevel Drive.....	B9096—	325000—	73
B588	Shaft, Power Shaft Drive.....	B9096—	325000—	73
B599	Gear, Power Shaft, Sliding.....	B9096—	325000—	73
D377	Spring, Power Shaft Shifter, Hand Lever.....	B1000—	325000—	73
D459	Cap Screw, Power Shaft Drive Shaft, R. H. Bearing Cover to Case (Drilled).....	B1000—	325000—	73
D993	Spring, Power Shaft Shifter Yoke.....	B1000—	325000—	73
JD7664	Bearing, Power Shaft, Rear.....	B1000—	325000—	73
JD7678	Bearing, Power Shaft Drive Shaft, R. H.....	B1000—	325000—	73
K2052	Lead Washer, Power Shaft Drive Shaft, R. H. Bearing Cover Cap Screw (2 used).....	B1000—	325000—	73
107R	Key, Woodruff, Power Shaft Drive Shaft to Bevel Pinion.....	B1000—	325000—	73
405R	Ball, Power Shaft Shifter.....	B1000—	325000—	73
1452R	Pipe Plug, in Power Shaft Shifter Hole.....	B1000—	325000—	73

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
		B, BN, BW	
POWER LIFT PARTS			
A140	Valve, Relief.....	P.L. B100-	72
A147	Key Washer, Foot Trip Pedals to Shaft.....	P.L. B100-	72
A354	Spring, Cam Trip Lever.....	P.L. B30000-	72
A521	Gasket, Relief Valve Spring Nut (Copper).....	P.L. B30000-	72
A608	Washer, Control Shaft (Steel).....	P.L. B30000-	72
A621	Bearing, Oil Seal, Pump Shaft.....	P.L. B100-	72
A632	Shaft, Rock, L. H.....	P.L. B30000-	72
A637	Guide, Valve.....	P.L. B100-29999	72
A638	Valve, Check.....	P.L. B100-29999	72
A639	Spring, Check Valve.....	P.L. B100-29999	72
A640	Gasket, Check Valve Spring Plug (Copper Asbestos).....	P.L. B30000-	72
A641	Plug, Check Valve Spring.....	P.L. B100-29999	72
A642	Valve, By-Pass.....	P.L. B100-	72
A643	Shaft, Control.....	P.L. B100-29999	72
A644	Washer, on Control Shaft.....	P.L. B100-29999	72
A645	Packing, Control Shaft.....	P.L. B100-29999	72
A646	Lever, Control.....	P.L. B100-29999	72
A647	Pawl, Trip Lever.....	P.L. B100-29999	72
A647	Pawl, Control Lever.....	P.L. B100-29999	72
A648	Pin, Trip Lever Pawl.....	P.L. B100-29999	72
A648	Pin, Control Lever Pawl.....	P.L. B30000-	72
A649R	Cam.....	P.L. B100-29999	72
A650	Lever, Trip.....	P.L. B100-29999	72
A653	Ratchet.....	P.L. B100-29999	72
A654	Spring, Trip Lever Pawl.....	P.L. B100-29999	72
A655	Spring, Trip Lever.....	P.L. B100-29999	72
A659	Spring, Relief Valve.....	P.L. B100-	72
A660R	Retainer, Relief Valve Spring.....	P.L. B100-29999	72
A661	Gasket, Valve Housing.....	P.L. B100-29999	72
A667	Cap, Oil Seal, Pump Shaft.....	P.L. B100-	72
A668	Packing, Pump Shaft, Oil Seal (2 used).....	P.L. B100-	72
A669	Washer, Pump Shaft, Oil Seal (Steel).....	P.L. B100-	72
A670	Spring, Pump Shaft, Oil Seal.....	P.L. B100-	72
A679	Spring, Control Lever Pawl.....	P.L. B100-	72
A680	Key Washer, Control Lever.....	P.L. B100-	72
A805	Bushing, Pump Drive Shaft.....	P.L. B100-	72
A817R	Cover, Pump Body.....	P.L. B100-	73
A1427R	Pedal, Foot Trip, R. H.....	P.L. B30000-	72
A1428R	Pedal, Foot Trip, L. H.....	P.L. B30000-	72
A1429R	Cam.....	P.L. B30000-	72
A1431	Guide, Valve.....	P.L. B30000-	72
A1432	Lever, Cam Trip.....	P.L. B30000-	72
A1433	Roller, Cam Follower.....	P.L. B30000-	72
A1434	Pin, Cam Follower Roller.....	P.L. B30000-	72
A1435	Shaft, Cam Follower and Trip Lever.....	P.L. B30000-	72
A1436	Pawl, Control Lever.....	P.L. B30000-	72
A1437	Packing, Control Shaft (Cork).....	P.L. B30000-	72
A1438	Shaft, Control.....	P.L. B30000-	72
A1439	Screw, Relief Valve Spring.....	P.L. B30000-	72
A1440	Valve, Check.....	P.L. B30000-	72
A1441	Plug, Check Valve Spring.....	P.L. B30000-	72
A1444	Spring, Rock Shaft Return.....	P.L. B30000-	72
A1445R	Bearing, Rock Shaft.....	P.L. B30000-	72
A1446	Valve, Throttle.....	P.L. B30000-	72
A1447	Gasket, Valve Housing.....	P.L. B30000-	72
A1449	Screw, Throttle Valve Adjusting.....	P.L. B30000-	72
A1450	Spring, Pedal Return.....	P.L. B30000-	72
A1452	Stud, Valve Housing to Power Lift Housing.....	P.L. B30000-	72
A1453	Shield, Rock Shaft Return Spring.....	P.L. B30000-	72
AA404	Housing, Valve, A636R, with Guide and Plug.....	P.L. B100-29999	72
AA408	Vent Plug.....	P.L. B100-29999	72
AA1103	Housing, A1430R, Valve with Guide.....	P.L. B30000-	72
AA1104	Cam Follower Assembly.....	P.L. B30000-	72
AA1105	Lever, Control.....	P.L. B30000-	72
AA1108	Shaft, Rock, with Dowel Pin (R. H.).....	P.L. B30000-	72
AB339	Housing, B463R, with Oil Seal Bearing.....	P.L. B100-29999	72
AB344	Connecting Rod.....	P.L. B100-	73
AB345	Gear with Bushing, Pump Follower.....	P.L. B100-	73
AB347	Shaft with Coupling, Power Lift Drive.....	P.L. B100-	72

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
		B, BN, BW	
POWER LIFT PARTS—Continued			
AB846	Housing with Pump Shaft Bushing, Oil Seal Bearing, and Pump Follower Gear Pin.....	P.L. B30000—	72
B153	Dowel Pin, Pump Body to Cover (1" Long).....	P.L. B100—	73
B170	Spring, Control Shaft.....	P.L. B30000—	72
B268	Spring, Check Valve.....	P.L. B30000—	72
B268	Spring, Throttle Valve.....	P.L. B30000—	72
B365	Spring, Cam Follower.....	P.L. B30000—	72
B425	Washer, Throttle Valve Adjusting Screw (Copper).....	P.L. B30000—	72
B427	Cap Nut, Throttle Valve Adjusting Screw.....	P.L. B30000—	72
B464R	Cylinder.....	P.L. B100—	73
B466	Stud, Pedal Spring.....	P.L. B100—29999	72
B467	Gasket, Cylinder.....	P.L. B100—	73
B468R	Piston.....	P.L. B100—	73
B469	Cup, Piston (Leather).....	P.L. B100—	73
B470R	Retainer, Piston Cup.....	P.L. B100—	73
B471	Lock Plate, Piston Cup Retainer.....	P.L. B100—	73
B473	Pin, Piston.....	P.L. B100—	73
B474	Snap Ring, Piston Pin.....	P.L. B100—29999	73
B475	Shaft, Rock.....	P.L. B100—29999	72
B476	Arm, Crank.....	P.L. B100—29999	72
B477	Pin, Crank.....	P.L. B100—	73
B479	Pin, Pump Follower Gear.....	P.L. B100—	73
B482	Gear, Pump Drive.....	P.L. B100—	73
B483R	Body, Pump.....	P.L. B100—	73
B484	Dowel Pin, Pump Body to Cover (1-3/4" Long).....	P.L. B100—	73
B485	Stud, Pump Body to Housing.....	P.L. B100—	73
B487	Shaft, Pump Drive.....	P.L. B100—	72
B489	Shaft, Pedal.....	P.L. B100—	72
B490R	Pedal, Foot Trip, R. H.....	P.L. B100—29999	72
B491R	Pedal, Foot Trip, L. H.....	P.L. B100—29999	72
B492	Rod, Control.....	P.L. B100—	72
B494	Bushing, Pump Follower Gear.....	P.L. B100—	73
B876	Arm, Crank.....	P.L. B30000—	72
C1220	Dowel Pin, R. H., Rock Shaft.....	P.L. B30000—	72
C1224	Spring, Pedal.....	P.L. B100—29999	72
C1335	Key (Woodruff) Ratchet and Cam.....	P.L. B100—29999	72
C2239	Stud, Housing to Rear Axle Housing.....	P.L. B100—29999	72
D469	Welsh Plug, Valve Housing.....	P.L. B100—29999	72
D1969	Pin, Cam Trip.....	P.L. B30000—	72
E2142	Pipe Plug, Oil Level Test.....	P.L. B30000—	72
E2244	Pipe Plug, Oil Filler in Valve Housing.....	P.L. B30000—	72
E2244	Pipe Plug, Transmission Filler and Level in Power Lift Housing.....	P.L. B100—	72
E2272	Spring, Control Shaft.....	P.L. B100—29999	72
JD7759	Alemite Zerk Fitting, No. 1610, in Rock Shaft Bearings.....	P.L. B100—	72
107R	Key (Woodruff) Pump Drive Gear.....	P.L. B100—	73
1450R	Pipe Plug, Oil Level Test.....	P.L. B100—29999	72
1452R	Pipe Plug, Drain, Power Lift Housing.....	P.L. B30000—	72

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
	AA642 K. W. LIGHTING OUTFIT Lamp			
A1105	Front Lamp Bracket.....		325000-	74
A1219	Rear Lamp Bracket (BI, BO and BR only)		325000-	74
A1219	Bracket, Lamp (Front) (B, BN and BW only) ..	B1000-		74
A1220	Bracket, Lamp (Rear).....	B1000-		74
A1225	Clip, Cable	B1000-	325000-	74
AA832	Lamp, Complete	B1000-	325000-	74
AA834	Plug, Single Contact	B1000-	325000-	74
AA835	Plug, Double Contact	B1000-	325000-	74
AA836	Cable, Complete with Contacts.....		325000-	74
AA837	Cable, Complete	B1000-		74
AA839	Drive Pulley, Fan Shaft, Complete	B1000-		74
B300	Support, Fan Shaft	B1000-3042		74

REPAIRS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		B, BN, BW	BR, BO, BI	
AA642 K. W. LIGHTING OUTFIT —Continued				
C1592	Nut, Lamp Supporting Bolt	B1000—	325000—	74
D1108	Bulb, 27 Candle Power, Direct Current, 9 Volts	B1000—	325000—	74
D1114	Screw, Fan Shaft Drive Pulley, Fillister Head, Machine Screw (5/16"x1-1/4")	B1000—	325000—	74
D2141	Moulding or Lens Retainer	B1000—	325000—	74
D2142	Reflector, Complete	B1000—	325000—	74
D2143	Wiring for Lamp, Complete	B1000—	325000—	74
D2144	Body, Lamp	B1000—	325000—	74
D2145	Clip, Lens Holder	B1000—	325000—	74
D2146	Gasket, Lens (Cork)	B1000—	325000—	74
D2147	Lens	B1000—	325000—	74
D2148	Spring, Lens Retainer	B1000—	325000—	74
D2149	Screw, Moulding or Lens Retainer	B1000—	325000—	74
D2569	Washer, Lamp Supporting Bolt Bearing	B1000—	325000—	74
Generator				
A767	Lock Washer, Cadmium Plated, on Generator Cover Screws	B1000—	325000—	74
A1200	Pin, Rotor Shaft (Tapered)	B1000—	325000—	74
A1201	Spring, Contact Plug Socket	B1000—	325000—	74
A1202	Cover, Generator	B1000—	325000—	74
A1203	Screw, Generator Cover, Fillister Head Machine, Cad- mium Plated	B1000—	325000—	74
A1204	Spacer, Rotor	B1000—	325000—	74
A1205	Housing, Bearing (Brass)	B1000—	325000—	74
A1206	Washer, Bearing Housing (Brass)	B1000—	325000—	74
A1207	Washer, Felt, Bearing Dust Cap, Pulley End	B1000—	325000—	74
A1208	Dust Cap, Bearing, Pulley End	B1000—	325000—	74
A1209	Dust Cap, Bearing	B1000—	325000—	74
A1210	Screw, Bearing Housing, Fillister Head Machine, Cad- mium Plated	B1000—	325000—	74
A1211	Lock Washer, on Bearing Housing Oiler, Cadmium Plated	B1000—	325000—	74
A1211	Lock Washer, on Bearing Housing Screws, Cadmium Plated	B1000—	325000—	74
A1212	Bottom, Generator Body (Brass)	B1000—	325000—	74
A1213	Nut, Winding Side Spacer (Brass)	B1000—	325000—	74
A1214	Oiler, Bearing Housing, 1/4"	B1000—	325000—	74
A1215	Packing Cover (Short)	B1000—	325000—	74
A1216	Packing Cover (Long)	B1000—	325000—	74
A1217	Screws, Generator Body, Bottom	B1000—	325000—	74
A1227	Bracket, Generator	B1000—	325000—	74
A1228	Pulley, Generator	B1000—	325000—	74
A1230	Belt, Generator, "Vee"	B1000—	325000—	74
A1231	Heat Shield, Generator (Sheet Steel)	B1000—	325000—	74
AA825	Generator, less Pulley	B1000—	325000—	74
AA826	Body, Generator	B1000—	325000—	74
AA827	Rotor Shaft, Complete	B1000—	325000—	74
AA828	Winding, Complete	B1000—	325000—	74
AA829	Socket, Contact Plug with Wire	B1000—	325000—	74
AA830	Wire, Contact Plug Socket	B1000—	325000—	74
AA831	Magnet, with Keeper	B1000—	325000—	74
AA839	Drive Pulley, Fan Shaft (Complete)	B1000—	325000—	74
D1124	Bearing, Rotor Shaft	B1000—	325000—	74
D1158	Key, Rotor Shaft (Woodruff)	B1000—	325000—	74
1492R	Nut, Rotor Shaft	B1000—	325000—	74

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS					
1666R	A660R	Spring Retainer to Valve Housing.....	5/16"x3/4"	2
1670R	A774R	Power Shaft Stuffing Box to Rear Axle Housing Cover.....	3/8"x1"	3
E2027	A792R	Fender Bracket to Rear Axle Housing.....	5/8"x3-1/4"	3
A871	A944R	Speed Control Lever Stop Bracket (full length Thread).....	5/16"x1-1/4"	2
A951	A1236R	In Front Wheel.....	5/8"x2"	4
1676R	A1445R	Rock Shaft Bearing to Housing.....	7/16"x1-1/4"	3
E2025	AA404	Power Lift Valve Housing to Power Lift Housing...	1/2"x3"	3
C529	AA404	Power Lift Valve Housing to Power Lift Housing...	1/2"x3-1/2"	4
A1448	AA1103	Valve Housing to Power Lift Housing.....	1/2"x5-1/2"	6
1671R	AB209	Muffler to Radiator Top Tank.....	3/8"x1-1/2"	3
1672R	AB210	Magneto to Governor Case.....	3/8"x1-1/2"	1
1677R	AB213	Steering Worm Housing to Pedestal.....	7/16"x1-1/4"	2
1670R	AB237	Carburetor to Manifold.....	3/8"x1"	2
D2317	AB238	Air Cleaner to Bracket.....	3/8"x3-1/4"	3
B440	AB238	Air Cleaner to Bracket.....	3/8"x3-3/4"	3
1669R	AB239	Air Stack to Air Cleaner Bracket.....	3/8"x3/4"	3
1666R	AB241	Front Wheel Hub Cap to Front Wheel.....	5/16"x3/4"	3
D475	AB244	Front End to Cylinder.....	5/8"x1-1/2"	4
D475	AB244	Front End to Case.....	5/8"x1-1/2"	4
A313	AB244	Front End Support to Cylinder (Rear).....	5/8"x1-3/4"	2
A313	AB244	Front End Support to Cylinder.....	5/8"x1-3/4"	2
A313	AB244	Front End to Transmission Case.....	5/8"x1-3/4"	4
B135	AB250	L. H. Main Bearing to Case.....	9/16"x1-1/4"	4
C806	AB259	Dust Shield to Cover.....	5/16"x9/16"	4
1674R	AB262	Pulley Brake Adjusting Screw (full length Thread)	3/8"x1-3/4"	1
1684R	AB277	Brake Housing to Case.....	1/2"x1-1/2"	2
1670R	AB296	Front Fan Bearing Housing and Tube to Front Support.....	3/8"x1"	2
1683R	AB318	Upper Water Pipe Assembly to Cylinder.....	1/2"x1-1/4"	4
1676R	AB325	Governor Case to Transmission Case.....	7/16"x1-1/4"	5
1684R	AB327	Air Cleaner Bracket to Radiator Top Tank.....	1/2"x1-1/2"	2
1670R	AB339	Power Lift Housing to Rear Axle Housing.....	3/8"x1"	14
1684R	AB361	Rear Axle Housing to Case.....	1/2"x1-1/2"	12
1688R	AB452	Front Axle Pivot Bracket to Front End Support...	3/4"x1-3/4"	2
B562	AB476	Cylinder Block to Front End Support.....	5/8"x2-3/4"	2
B123	AB511	R. H. Main Bearing to Case (Drilled).....	9/16"x1-1/4"	4
A310	AB546	Overdrive and Shaft, L. H. Bearing Cover to Case (Drilled).....	7/16"x1-1/4"	2
D475	AB552	Platform to Rear Axle Housing.....	5/8"x1-1/2"	4
1684R	AB567	Brake Housing to Transmission Case (Emergency)...	1/2"x1-1/2"	2
1670R	AB573	Front Fan Bearing Housing and Support Tube to Support.....	3/8"x1"	2
D475	AB580	Drawbar to Rear Axle Housing.....	5/8"x1-1/2"	4
1674R	AB585	Pulley Brake Adjusting Screw (full length Thread)	3/8"x1-3/4"	1
1683R	AB590	Upper Water Pipe to Cylinder Block.....	1/2"x1-1/4"	4
D2317	AB614	Transmission Case Cover to Case.....	3/8"x3-1/4"	1
1670R	AB614	Transmission Case Cover to Case.....	3/8"x1"	6
1684R	AB635	Rear Axle Housing to Transmission Case.....	1/2"x1-1/2"	12
1669R	AB649	Air Stack to Air Cleaner Bracket.....	3/8"x3/4"	3
1684R	AB676	Brake Housing to Transmission Case, R. H.....	1/2"x1-1/2"	2
1684R	AB677	Brake Housing to Transmission Case, L. H.....	1/2"x1-1/2"	3
1672R	AB706	Magneto to Governor Case.....	3/8"x1-1/2"	1
1670R	AB748	Front Fan Bearing Housing and Support Tube to Fan Shaft Support.....	3/8"x1"	2
1670R	AB750	Front Fan Bearing Housing and Support Tube to Support.....	3/8"x1"	2
1684R	AB777	Emergency Brake Housing to Transmission Case	1/2"x1-1/2"	1
1671R	AC119	Front Wheel Hub Cap to Wheel (BR, BO, BI, BW)	3/8"x1-1/4"	6
B568	B25	Drive Wheel Clamp to Wheel.....	5/8"x3-3/4"	4
1670R	B52R	Crank Case Cover to Case.....	3/8"x1"	6
D475	B70	Drawbar Supports to Rear Axle Housing.....	5/8"x1-1/2"	2
D475	B71	Drawbar Supports to Rear Axle Housing.....	5/8"x1-1/2"	2
1670R	B76R	Carburetor Intake Elbow to Carburetor.....	3/8"x1"	3
A309	B119	L. H. Main Bearing Cover to L. H. Main Bearing Housing.....	5/16"x1-3/4"	3
1667R	B119	L. H. Main Bearing Cover to L. H. Main Bearing Housing.....	5/16"x1"	2

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS—Continued					
A309	B131R	L. H. Main Bearing Cover to L. H. Main Bearing Housing.....	5/16"x1-3/4"	3
1676R	B148R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7
B155	B148R	First Reduction Gear Cover to Case.....	7/16"x4-1/4"	2
C806	B157	Overdrive Gear and Shaft, R. H. Bearing Cover to First Reduction Gear Cover.....	5/16"x9/16"	2
1674R	B167R	Clutch Fork Bearing to Gear Cover (full length Thread).....	3/8"x1-3/4"	4
1684R	B191R	Differential Bearing Quill to Transmission Case, L. H.....	1/2"x1-1/2"	2
D459	B198R	Cam Shaft, R. H. Bearing Housing to Case (Drilled)	3/8"x1"	2
D474	B201R	Cam Follower Guide Support.....	1/2"x1-3/4"	3
1683R	B241R	Oil Pump Body to Transmission Case.....	1/2"x1-1/4"	3
1670R	B247	Oil Pump Cover to Body.....	3/8"x1"	4
D916	B253R	Oil Pump Drive Gear Bearing to Cam Follower Support (Drilled).....	3/8"x3/4"	2
1670R	B283R	Governor L. H. Bearing Housing to Governor Case.	3/8"x1"	4
1670R	B287R	Fan Shaft Rear Bearing Housing to Governor Case	3/8"x1"	3
1666R	B292R	Fan Shaft Support Tube Packing Retainer to Rear Fan Bearing Housing.....	5/16"x3/4"	3
1670R	B306R	Rear Axle Housing Cover to Housing.....	3/8"x1"	14
D459	B314R	Power Shaft Bearing Cover to Case (Drilled).....	3/8"x1"	2
1671R	B331R	Sliding Gear Shaft and Countershaft, L. H. Bearing Cover to Case.....	3/8"x1-1/4"	4
A310	B333R	Countershaft R. H. Bearing Housing to Case (Drilled).....	7/16"x1-1/4"	2
1667R	B378	In Gear Shifter Shaft End and Adjusting Screw....	5/16"x1"	1
1670R	B381R	Transmission Case Cover to Case.....	3/8"x1"	6
1667R	B384	Interlock Plate to Cover.....	5/16"x1"	1
A309	B390R	Throttle Lever Stop.....	5/16"x1-3/4"	2
A871	B390R	Throttle Lever Stop Screw.....	5/16"x1-1/4"	2
D475	B395R	Radiator Bottom Tank to Front End.....	5/8"x1-1/2"	2
A313	B395R	Radiator to Front End Support.....	5/8"x1-3/4"	2
A309	B433	Oil Filter Body to Oil Filter Head.....	5/16"x1-3/4"	1
D2067	B433	Oil Filter Body to Head.....	5/16"x2-1/4"	2
C1096	B464R	Cylinder to Power Lift Housing (Drilled).....	1/2"x1-1/4"	4
1667R	B470R	Piston Cup Retainer to Piston.....	5/16"x1"	2
1679R	B483R	Power Lift Pump Body to Housing.....	7/16"x2"	6
1685R	B639R	Brake Latch to Housing, R. H. and L. H.....	1/2"x2"	2
1683R	B650	Fan Shaft Support to Front End Support.....	1/2"x1-1/4"	2
A313	B661R	Rear of Front End Support to Cylinder Block.....	5/8"x1-3/4"	2
A313	B661R	Side of Front End Support to Cylinder Block.....	5/8"x1-3/4"	2
A313	B661R	Front End Support to Transmission Case.....	5/8"x1-3/4"	2
1684R	B687R	R. H. Wheel Brake Shaft Bracket to Rear Axle Housing.....	1/2"x1-1/2"	2
1684R	B688R	L. H. Wheel Brake Shaft Bracket to Rear Axle Housing.....	1/2"x1-1/2"	2
1670R	B700R	Crank Case Cover to Case.....	3/8"x1"	6
1676R	B748R	First Reduction Gear Cover to Transmission Case..	7/16"x1-1/4"	7
B155	B748R	First Reduction Gear Cover to Case.....	7/16"x4-1/4"	2
1670R	B769R	Rear Axle Housing Cover to Rear Axle Housing....	3/8"x1"	14
1670R	B778R	Carburetor Air Intake Elbow to Carburetor.....	3/8"x1"	1
A313	B813R	Front End Support to Transmission Case.....	5/8"x1-3/4"	2
A313	B813R	Rear of Front End Support to Cylinder Block.....	5/8"x1-3/4"	2
A313	B813R	Side of Front End Support to Cylinder Block.....	5/8"x1-3/4"	2
1683R	B835	Dust Shield, R. H. to Transmission Case.....	1/2"x1-1/4"	1
1682R	B836	Dust Shield, L. H. to Transmission Case.....	1/2"x1"	1
A634	B876	In Crank Arm (Drilled).....	7/16"x2"	2
1683R	D1769R	Steering Worm Housing to Steering Gear Housing..	1/2"x1-1/4"	4
CAP SCREWS—FILLISTERED HEAD					
B109	B108R	Steering Spindle Adjustng Bushing Lock Screw....	5/16"x1/2"	1
SET SCREWS—SQUARE HEAD—CUP POINT					
1791R	AA700	In Scraper Blade Holder.....	5/8"x2"	2
B379	B378	For Gear Shifter Shaft.....	7/16"x3-3/4"	1
1791R	C264R	In Scraper Blade Holder (Drive Wheel).....	5/8"x2"	2

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
SET SCREWS—SQUARE HEAD—CONICAL POINT					
B275	B272R	Governor Arm to Governor Lever Shaft.....	3/8"x1-3/8"	1
SET SCREWS—SQUARE HEAD—DOG POINT					
A320	A80R	In Speed Control Lever.....	5/16"x3/4"	1
A320	A944R	In Speed Control Bracket.....	5/16"x3/4"	1
A320	B390R	In Speed Control Bracket.....	5/16"x3/4"	1
MACHINE SCREWS—ROUND HEAD					
E2064	A1247	Head Indicator Bracket to Governor Case.....	1/4"-20x1/2"	2
E2064	AB326	Oil Filter By-Pass Valve Leaf Spring to Filter Body.....	1/4"-20x1/2"	2
E2064	B271	Inside Governor Lever to Control Shaft.....	1/4"-20x1/2"	2
DRIVE SCREWS					
D454	B41	In Radiator Curtain.....	No. 7x3/8"	4
CARRIAGE BOLTS WITH HEX. NUTS					
A1229	AA825	Generator Assembly to Fan Support.....	7/16"x1"	2
C980	AB230	Hood to Fuel Tank, Rear Support.....	3/8"x1-1/2"	2
C1647	AB230	Hood to Hood Clip Bracket.....	3/8"x1-1/4"	4
C1647	AB403	Hood Clip to Fuel Tank Rear Support.....	3/8"x1-1/4"	2
C1647	AB544	Hood Clip to Fuel Tank Rear Support.....	3/8"x1-1/4"	4
A1317	AD1298	Seat, to Support.....	1/2"x1-1/4"	2
B576	B575R	Front Wheel Extension Rim to Clip and Clip to Wheel.....	7/16"x2"	24
C1647	B683	Platform Brace to Platform.....	3/8"x1-1/4"	2
CARRIAGE BOLTS WITH SQUARE NUTS					
1588R	C1573	Hood Clip to Hood Support Bracket on Fan Shroud.....	3/8"x2-1/2"	2
MACHINE BOLTS WITH SQUARE NUTS					
1622R	A60R	Seat Support Body to Platform.....	1/2"x1-1/2"	2
D544	A215	Guide Bands to Front Wheels.....	1/2"x1"	16
1636R	A506	Drawbar End and Support to Drawbar.....	5/8"x2"	2
1623R	A792R	Fender Bracket to Fender.....	1/2"x1-3/4"	4
1640R	A893	In Drag Link Clamp Half (BW).....	5/8"x3"	4
1634R	A1020	Drawbar End to Drawbar.....	5/8"x1-3/4"	2
1640R	A1307R	Clevis to Drawbar Rear Support.....	5/8"x3"	2
D595	AA459	Tool Box to Front End Bolts.....	5/16"x7/8"	2
1622R	AB226	On Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	2
M21	AB229	Fan Shroud to Radiator Side.....	3/8"x3/4"	4
1619R	AB408	In Front Wheel Yoke.....	3/8"x3-1/2"	2
1623R	AB549	Front Wheel Scraper to Knuckle.....	1/2"x1-3/4"	2
D544	AB612	Fuel Tank Rear Support Plate to Rear Support.....	1/2"x1"	2
1622R	AB612	Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	2
1614R	AB624	R. H. Fender Braces to Platform Support.....	3/8"x1"	2
1614R	AB624	R. H. Fender Crown Sheet to Platform Cross Angle.....	3/8"x1"	4
1614R	AB625	R. H. Fender Braces to Platform Support.....	3/8"x1"	2
1614R	AB625	L. H. Fender Crown Sheet to Platform Cross Angle.....	3/8"x1"	4
1613R	AB659	Front Support to R. H. Citrus Fender.....	3/8"x1-1/4"	4
1622R	AB659	R. H. Citrus Fender Front Support to Front End Support.....	1/2"x1-1/2"	1
D544	AB736	R. H. Fender to Platform Support and Cross Angle.....	1/2"x1"	7
1614R	AB736	R. H. Fender Braces to Platform Support.....	3/8"x1"	2
D544	AB737	L. H. Fender to Platform Support and Cross Angle.....	1/2"x1"	7
1614R	AB737	L. H. Fender Braces to Platform Support.....	3/8"x1"	2
D544	AB784	R. H. Fender to Platform Support and Cross Angle.....	1/2"x1"	7
1614R	AB784	R. H. Fender Braces to Platform Support.....	3/8"x1"	2
D544	AB785	L. H. Fender to Platform Support and Cross Angle.....	1/2"x1"	7
1614R	AB785	L. H. Fender Braces to Platform Support.....	3/8"x1"	2
B11	B10	Front Wheel Guide Band to Wheel.....	7/16"x1"	8
1636R	B68	Clevis to Drawbar End.....	5/8"x2"	1
1622R	B72	Drawbar Rear Support to R. H. and L. H. Supports.....	1/2"x1-1/2"	4
1621R	B300	Fan Shaft Front Support to Front End.....	1/2"x1-1/4"	2
1620R	B388R	In Overdrive Shifter Lever.....	3/8"x1-1/2"	1
1611R	B396R	Radiator Sides to Top and Bottom Tanks.....	5/16"x1-1/8"	16
D595	B398	Radiator Straps to Top and Bottom Tanks.....	5/16"x7/8"	16
1620R	B490R	Foot Trip Pedal to Pin.....	3/8"x1-1/2"	1
1620R	B491R	Foot Trip Pedal to Pin.....	3/8"x1-1/2"	1

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
MACHINE BOLTS WITH SQUARE NUTS					
—Continued					
1622R	B630	L. H. Citrus Fender Front Support to Front End Support.....	1/2"x1-1/2"	1
1613R	B630	Front Support to L. H. Citrus Fender.....	3/8"x1-1/4"	4
1620R	B710	In Gear Shift Lever.....	3/8"x1-1/2"	1
B846	B845	Seat Channel Stop Strap to Rear Axle Housing Cover.....	5/8"x4-3/4"	1
B848	B847	Seat Spring Bolt Strap to Rear Axle Housing Cover.....	5/8"x3-1/4"	1
1622R	C1646R	Button Lug to Drive Wheel.....	1/2"x1-1/2"	1
A324	D349	Through Drawbar Spacer and Support.....	3/4"x4"	1
MACHINE BOLTS WITH HEX. NUTS					
1892R	A646R	Power Lift Control Lever.....	5/16"x1-1/4"	1
1939R	AB214	Steering Shaft Bearing to Steering Shaft Bearing Bracket.....	1/2"x4-1/4"	1
1928R	AB322	Exhaust Pipe to Manifold.....	1/2"x1-3/4"	2
B777	AB599	Exhaust Muffler to Manifold.....	3/8"x1-1/4"	4
1971R	AD984	Wheel Weights to Wheel.....	3/4"x6"	2
1931R	B389	Steering Shaft Rear Support to Cover.....	1/2"x2-1/2"	1
1922R	B389	Steering Shaft Rear Support to Cover.....	1/2"x2-3/4"	1
B584	B583	Front Wheel Pilot Half to Half.....	3/4"x6-1/4"	4
1935R	B789	Steering Shaft Rear Support to Clutch Lever Bracket.....	1/2"x3-1/2"	1
1930R	C264R	Scraper Blade Holder to Scraper Bar.....	1/2"x2-1/4"	4
1932R	C264R	Scraper Blade Holder to Extension Scraper Bar.....	1/2"x2-3/4"	4
D1767	D1769R	Steering Worm Adjusting Nut Clamp Bolt.....	1/2"x3"	1
MACHINE BOLTS WITHOUT NUTS					
B113	AB253	Flywheel to Crankshaft.....	5/8"x4"	2
B553	AB410	Front End to Pedestal.....	5/8"x5-3/4"	4
B113	AB496	Pedestal to Front End.....	5/8"x4"	4
D616	AB579	Drawbar to Front Support.....	3/4"x2-3/4"	1
A327	AD1470	Wheel Weight to Wheel.....	3/4"x4-3/4"	2
A734	B396R	Radiator Straps to Top and Bottom Tank.....	5/16"x7/8"	14
STOVE BOLTS—ROUND HEAD— SQUARE NUT					
2394R	AB336	Spark Plug Cable Clamp to Conduit Shield.....	1/4"-20x1-1/4"	1
2334R	AB417	Radiator Guard to Radiator Side.....	5/16"x1"	4
A1053	AB624	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	10
A1053	AB625	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	10
2392R	AB689	Tool Box to L. H. Fender Front Dust Shield and Fender Side Sheet.....	1/4"-20x5/8"	5
A1053	AB736	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	7
A1053	AB737	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	7
A1053	AB784	R. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	7
A1053	AB785	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	7
A1053	AB788	Brake Dust Guard to L. H. Dust Shield and Fenders.....	5/16"x3/4"	2
A330	B35	In Steering Gear Housing Cover to Pedestal.....	5/16"x1/2"	4
B497	B465R	Spark Plug Cable Conduit Clamp to Fan Shaft Tube.....	5/16"x1-3/4"	1
2568R	B465R	Spark Plug Cable Conduit Clamp to Conduit.....	5/16"x1-1/2"	1
2324	B563	Tool Box to Front End Support.....	5/16"x1"	2
2334R	B683	Platform Brace to Platform Support.....	5/16"x1"	2
D466	B715	Brake Housing Opening Cover to Case (Full Length Thread).....	1/2"x3/4"	6
A1053	B732	Brake Dust Guard to L. H. Dust Shield and Fender.....	5/16"x3/4"	3
A1053	B835	R. H. Dust Shield to Pulley Guard and Dust Shield Extension.....	5/16"x3/4"	3
A1053	B838	Brake Dust Guard to L. H. Dust Shield and Fender.....	5/16"x3/4"	3
A1053	B839	R. H. Fender Front Brace to Fender Crown Sheet.....	5/16"x3/4"	4
A1053	B840	L. H. Fender Front Brace to Fender Crown Sheet.....	5/16"x3/4"	4
2326R	1400R	In Dust Cover.....	No. 10-24x5/8"	4
HEXAGON NUTS					
1506R	A60R	On Seat Support Body.....	1/2"	4
1493R	A119	On Cam Shaft Left Bearing Housing Stud.....	3/8"	2
1513R	A327	On Wheel Weight Bolt.....	3/4"	2
1513R	A686	On Cast Lug Bolt.....	3/4"	40
1492R	A871	On Throttle Lever Stop Screw.....	5/16"	2

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
HEXAGON NUTS—Continued					
1512R	A887	On Front Axle U-Bolt (BW)	5/8"	4
1512R	A942R	On Clutch Lever Bracket to Rear Axle Housing Studs	5/8"	3
1512R	A951	On Wheel Bolt	5/8"	4
1516R	A1101	On Front Axle Lock Bolt (BW)	1"	2
1513R	A1298	On Spud Lug (for Golf Course)	3/4"	1
1512R	A1363R	Rear Wheel Brake Shoe Carrier to Rear Axle Housing Screw	5/8"	8
D1771	AB218	Steering Wheel to Shaft	3/4"	1
1512R	AB244	Front End to Cylinder	5/8"	4
1512R	AB253	On Flywheel Bolts	5/8"	2
1493R	AB262	Pulley Brake Adjusting Set Screw Nut	3/8"	1
1514R	AB264	On Clutch Lever Pivot Bolt	9/16"	1
1514R	AB311	On Cylinder Head Stud	9/16"	9
1512R	C1479	Pedestal, Front End Bolts	5/8"	1
1512R	AB476	On Cylinder Flange Studs	5/8"	6
1512R	AB496	Pedestal, Front End Bolts	5/8"	4
1506R	AB616	On Air Cleaner Bracket to Radiator Top Tank Stud	1/2"	2
1515R	AB618	On Radius Rod Ends	7/8"	2
1515R	AB771	On Radius Rod Ends	7/8"	2
1513R	AC649	On Cast Cone Lug	3/4"	1
1494R	B73R	Manifold Studs	7/16"	4
1494R	B148R	First Reduction Gear Cover Studs	7/16"	1
1506R	B174	Clutch, Operating Rod	1/2"	1
1512R	B180	On Clutch Lever Pivot Bolt	5/8"	1
1506R	B236R	Brake Lever Pedal to Brake Shaft	1/2"	1
1506R	B237R	Brake Lever Pedal to Brake Shaft	1/2"	1
1493R	B272R	On Governor Arm Set Screw	3/8"	1
1494R	B379	On Gear Shifter Shaft Set Screw	7/16"	1
1492R	B390R	Throttle Lever Stop	5/16"	2
1517R	B424	Lock Nut on Oil Pressure Regulating Screw	3/8"	1
1494R	B485	On Pump Body to Housing Stud	7/16"	4
1494R	B504	On Tappet Lever Shaft Bracket Stud	7/16"	2
1512R	B559	On Front Wheel Weight Hook Bolts	5/8"	6
1506R	B642R	On R. H. Brake Pedal Shaft	1/2"	1
1506R	B643R	On L. H. Brake Pedal Shaft	1/2"	1
1493R	B723	On Brake Operating Rod	3/8"	1
1494R	B748R	First Reduction Gear Cover to Case Stud	7/16"	2
1506R	B752	On Clutch Operating Rod	1/2"	1
1494R	B772	On Manifold Studs	7/16"	4
1506R	B782R	On Steering Gear Housing to Case Stud	1/2"	2
1492R	B791	On Speed Control Rod	5/16"	1
1511R	B803	On Steering Arm to Knuckle Stud, R. H.	9/16"	2
1511R	B804	On Steering Arm to Knuckle Stud, L. H.	9/16"	2
D1771	B807	Tie Rod to Ends	3/4"	2
1508R	B814	On Radius Rod Pivot Stud	3/4"	1
1492R	B818	On Spindle Taper Lock Bolts	5/16"	2
1512R	C264R	On Scraper Blade Holder Set Screws	5/8"	2
1513R	C1517	On Sand Lug Bolt	3/4"	1
1493R	C2175	On Magneto to Governor Case Stud	3/8"	1
1506R	C2239	On Power Lift Housing to Rear Axle Housing Stud	1/2"	1
1513R	D411	On Spade Lug Bolt	3/4"	1
1513R	D411	On Road Band Support to Drive Wheel Support Bolts	3/4"	5
1506R	D488	On Differential Bearing Quill to Case Stud	1/2"	1
1506R	D488	On Brake Housing to Case	1/2"	1
1506R	D488	On Rear Axle Housing to Case Stud	1/2"	2
1512R	D2106	On Rim Clamp Studs	5/8"	6
1513R	D2526R	On Drive Wheel Rim Clamp Studs	3/4"	12
1512R	JD1221	On Drive Wheel Bolts (L. H., 6; R. H., 6)	5/8"	12
1493R	1674R	On Pulley Brake Adjusting Screw	3/8"	1
HEXAGON NUTS—CASTELLATED					
B112	AB243	On Steering Spindle, Upper End	3/4"	1
C1104	AB260	Clutch Drive Disk to Crankshaft	7/8"	1
B235	AB282	Brake Pinion to Shaft (Differential Brakes)	3/4"	2
B9	AB356	Connecting Rod Bolt Nut	1/2"	4
C1104	AB560	Differential Shaft, L. H. End (BR and BI)	7/8"	1
C1104	AB594	Clutch Driving Disk to Crankshaft	7/8"	1

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
HEXAGON NUTS—CASTELLATED					
—Continued					
C2072	AB690	Overdrive Gear and Shaft, R. H. End.....	5/8"	1
B163	B147	Clutch Operating Bolts	7/16"	3
B163	B162R	On Clutch Operating Bolt	7/16"	3
B112	B788	Steering Gear Vertical Shaft, Lower End	3/4"	1
B112	B829	On Steering Spindle, Lower End	3/4"	1
HEX. JAM NUTS					
1215R	A886	On (BW) Lock Screw	3/4"	2
C985	A892	On Drag Link Rod (BW)	7/8"	4
1215R	A1364	On Wheel Brake Adjusting Screw	3/4"	2
D528	B38	Speed Control Rod	1/4"-20	1
A337	B208	Tappet Lever Adjusting Screw	3/8"	4
D528	B302	On Throttle Rod	1/4"-20	1
1517R	B424	On Oil Pressure Regulating Valve Adjusting Screw	3/8"	1
1520R	B639R	Brake Latch to Brake Housing	1/2"	2
1520R	B639R	On Brake Latch Cap Screw	1/2"	2
1215R	B686	On Cam Shaft, Wheel Brakes	3/4"	2
1521R	C977	On Steering Gear Shaft Adjusting Set Screw	5/8"	1
RIVETS—R. I. HEAD					
D432	A230	Hood Clip Bracket to Fan Shroud	1/4"x1/2"	2
D432	A532	Hood Clip Bracket to Fan Shroud	1/4"x1/2"	2
D430	A981	Brake Band End to Brake Band	3/16"x5/8"	3
D479	A985	Brake Latch to Pedal	1/4"x3/4"	2
D443	AB235	Tongue to Drawbar Channel	1/2"x1-7/8"	2
D434	AB324	Oil Pressure Regulating Valve Spring to Bracket	1/4"x1"	2
D479	AB330	Brake Latch Support to Platform	1/4"x3/4"	2
D432	AB568	In Brake Band Loop End	1/4"x1/2"	3
D431	AB570	In Brake Band Lever Assembly	3/16"x3/4"	2
B372	AB659	Citrus Fender Front Support Plate to Support	5/16"x1"	3
D432	B141	Clutch Dust Cover Spring to Pulley	1/4"x1/2"	3
D430	B159R	In Clutch Driving Disk	3/16"x5/8"	1
C544	B185	Differential Bevel Pinion Shaft	1/4"x2-1/2"	2
B232	B231	Inner Brake Dust Guard to Brake Shaft and Hub	5/16"x1-1/8"	6
B372	B371	Overdrive Shifter Yoke to Overdrive Shifter	5/16"x1"	2
B373	B371	Gear Shifter Yoke to Shifter	5/16"x1-1/4"	4
A341	B384	Transmission Cover to Gear Shift Interlock	5/16"x1-1/2"	2
C542	B421	Oil Pressure Regulating Valve Shield to Bracket	1/4"x1-1/4"	2
D882	B578	In Support to Road Band	1/2"x1-1/2"	10
D436	B708	Gear Shifter Interlock to Transmission Cover	3/8"x1-1/8"	2
D443	B765	Drawbar Front Support to Support Angles	1/2"x1-7/8"	4
D430	B768R	In Clutch Driving Disk Hub	3/16"x5/8"	1
B372	B819	Platform to Supports and Cross Angles	5/16"x1"	14
B372	B820	Platform Support to Platform, R. H.	5/16"x1"	4
B372	B821	Platform Support to Platform, L. H.	5/16"x1"	4
B372	B822	Platform Cross Angle to Platform	5/16"x1"	6
B372	B860	Platform Cross Angle to Platform	5/16"x1"	6
B372	B861	Platform Support to Platform, R. H.	5/16"x1"	6
B372	B862	Platform Support to Platform, L. H.	5/16"x1"	6
D478	C1573	Hood Clip to Hood	3/16"x3/8"	8
RIVETS—BRASS					
D1520	A442	Cushion to Fuel Tank Front Support (B, BN, BW)	9/64"x5/16"	3
D1520	A442	Cushions, Fuel Tank, Front and Rear Supports (BI, BO, BR)	9/64"x5/16"	6
D2593	A1368	Facing to Brake Shoe	3/16"x5/8"	16
D1520	B44	Cushion to Fuel Tank Rear Support (B, BN, BW)	9/64"x5/16"	3
D1592	B166	Pulley Brake Lining to Brake	9/64"x7/16"	6
D2309	B223	Facing to Brake Shoe	3/16"x5/16"	8
D1520	B721	In Brake Band Lining	9/64"x5/16"	14
RIVETS—TINNERS'					
A488	B213	Tappet Oiler Trough to Cover (Flat Head)	8 lbs.	2
RIVETS—C. S. HEAD					
D1416	A1375	Latch Plate to Brake Shaft Bracket	3/8"x1-1/4"	2
D1416	AB805	Brake Latch Plate to Bracket, L. H.	3/8"x1-1/4"	2

HARDWARE LIST FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**LOCK WASHERS**

Size	No.
3/64"	C1320
3/16"	D603
1/4"	1729R
5/16"	1721R
3/8"	1722R
7/16"	1723R
1/2"	1724R
9/16"	1725R
5/8"	1726R
3/4"	1728R
7/8"	1881R
1"	1882R

COTTER KEYS

Length	Diameter				
	3/32"	1/8"	3/16"	1/4"	3/8"
1/2"	1730R				
5/8"		1732R			
3/4"		1733R	D339		
1"	1731R	1735R	1741R		
1-1/4"			1742R		
1-1/2"		1737R	1743R	1745R	
2"		1738R	2215R	1748R	
3-1/2"					M23

CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A636R	Valve Housing with Guide and Plug	AA404	107	72
A879R	Housing with Pivot Pins, Front Axle	AA649	97	58
A984R	Pedal with Latch, Brake	AA586	96	56
A1100R	Housing with Pivot Pins, Front Axle	AA729	97	58
A1198R	Head with Stud, Radiator Filler	AA796	90	46
A1289R	Knee with Pin and Bushing, Front Axle	AA730	97	58
A1378R	Drive Wheel with Studs and Nuts, Solid	AA1051	94	55
B5R	Connecting Rod, Complete	AB355	85	41
B17R	Muffler, Complete	AB484	87	41
B36R	Bearing with Bushing, Steering Shaft, Upper	AB214	99	43
B55R	Breather Cover with Stack	AB232	88	43
B88R	Front Wheel Hub Cap with Oil Fitting	AB241	98	60
B100R	Pedestal with Stud and Stop Pin	AB496	99	62
B114	Crankshaft with Gear	AB246	85	41
B124R	Housing, with Cap, L. H. Main Bearing	AB250	85	41
B129R	Spacer, Flywheel with Cork Washer	AB251	85	41
B133R	Flywheel with Bolts and Driving Pin	AB253	85	41
B136R	Belt Pulley with Bushing, Cone, and Gear	AB256	91	47
B159R	Clutch Driving Disk	AB260	91	47
B165R	Pulley Brake with Lining	AB262	92	47
B211R	Cover with Oil Trough, Tappet Lever	AB273	86	42
B218R	Brake Housing with Bushing	AB277	96	57
B269R	Case, Governor, with Governor Lever Shaft Bushing	AB325	87	42
B290R	Housing Front Fan Bearing with Fan Shaft Support Tube (See page 91, for Serial Numbers)	AB573	91	43
B290R	Housing, Front Fan Bearing with Support Tube (See page 91, for Serial Numbers)	AB750	91	43
B290R	Housing, Front Fan Bearing with Support Tube	AB296	90	43
B290R	Housing with Support Tube, Front Fan Bearing	AB748	91	43
B345R	Rear Axle Housing with Studs	AB361	94	49
B354R	Cylinder with Studs	AB476	86	41
B357R	Cylinder Head with Valve Guides	AB311	86	42
B357R	Cylinder Head with Guides and Valves	AB310	86	42
B370R	Gear Shift Fork with Yoke	AB312	92	47
B376R	Shifter, Overdrive with Yoke and Reverse Lockout Pin	AB313	92	48
B403R	Water Outlet Pipe with Upper Pipe	AB318	90	46
B403R	Pipe, Water Outlet with Upper Pipe	AB590	90	46
B463R	Power Lift Housing with Oil Seal Bearing	AB339	107	72
B533R	Disk Type Front Wheel with Races	AB415	98	60
B543R	Pedestal with Bushing and Stop Pin	AB410	99	62
B572R	Pedestal with Bushing, Stop Pin and Cup	AB451	99	62
B574R	Bracket with Bushing, Front Axle Pivot	AB452	97	58
B597R	Housing with Cap, R. H. Main Bearing	AB514	85	41
B603R	Cover with Gear Shift Interlock, Transmission Case	AB520	85	41
B610R	Support with Studs, Front End	AB437	97	59
B619R	Cover, Overdrive Gear and Shaft, L. H. Bearing	AB546	93	48

**CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS B, BN,
BW, BR, BO, AND BI TRACTORS**


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
B636R	Housing with Bushing, R. H. Brake.....	AB676	96	57
B637R	Housing with Bushing, L. H. Brake.....	AB677	96	57
B660R	Flywheel with Bolts and Driving Pin.....	AB705	85	41
B669R	Housing with Bearing Cups, Rear Axle.....	AB806	94	50
B676R	Housing, Brake with Pedal Pivot and Differential Bearing Cup.....	AB777	96	56
B688R	Bracket, Brake Shaft with Latch Plate.....	AB805	97	57
B694R	Drive Wheel, Solid Cast.....	AB823	95	54
B707R	Cover, Transmission with Gear Shift Interlock.....	AB614	85	41
B713R	Shifter, Low and Reverse Gear, with Yoke.....	AB565	92	47
B714R	Shifter, Second Gear, with Yoke.....	AB566	92	47
B716R	Housing with Lever Shaft, Brake.....	AB567	96	56
B729R	Housing with Bearing Cups, Rear Axle.....	AB635	94	50
B734R	Belt Pulley with Bushing, Gear and Sleeve.....	AB583	91	47
B753R	Case, Transmission, Main.....	AB639	85	...
B757R	Brake with Lining, Pulley.....	AB585	92	47
B767R	Crankshaft with Gear and Bearing Race.....	AB592	85	41
B768R	Disk with Rivet, Clutch Driving.....	AB594	91	47
B773R	Muffler, Complete.....	AB599	87	41
B776R	Muffler, Complete.....	AB599	87	41
B798R	Bracket with Fin, Air Cleaner.....	AB616	105	69
B801	Knuckle with Bushings and Studs, Front Wheel.....	AB641	97	58
C167R	Hub Cap, Front Wheel.....	AC119	98	60

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


TRANSMISSION CASE

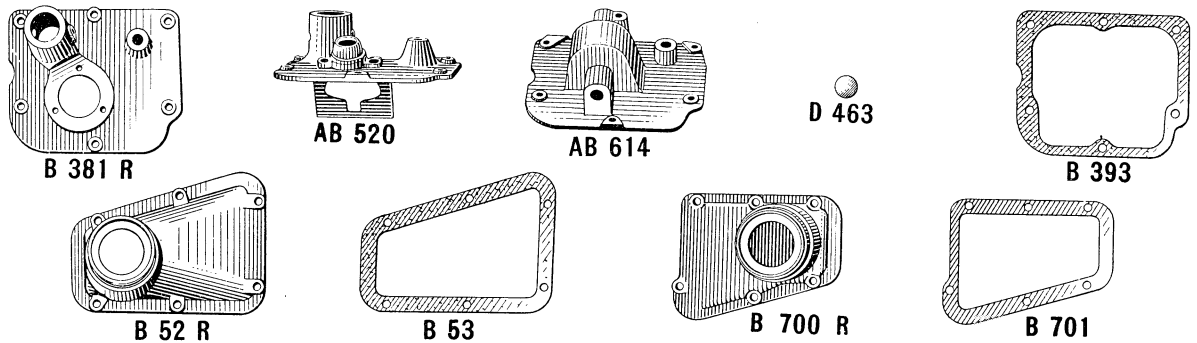


ENGINE, PISTON, CONNECTING RODS, CRANKSHAFT

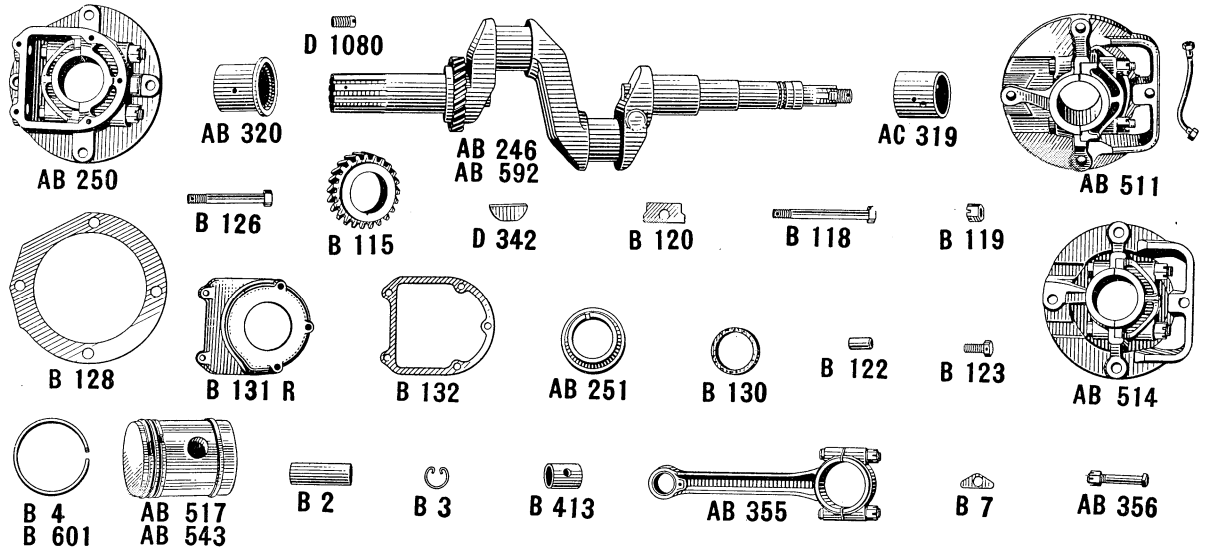

CYLINDER

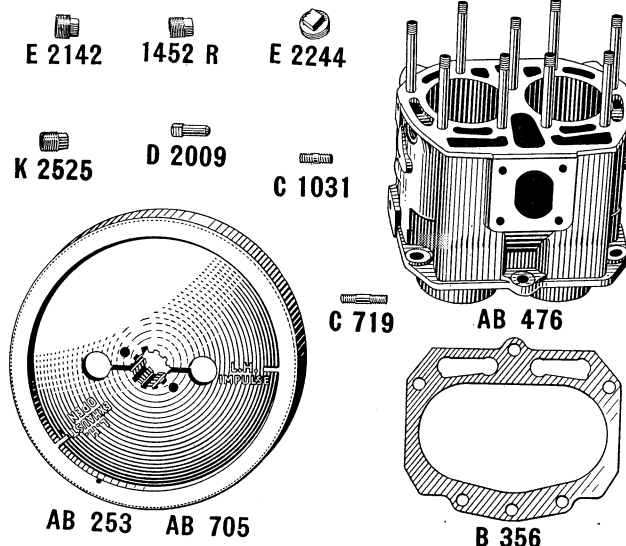


MUFFLER AND SPARK ARRESTER

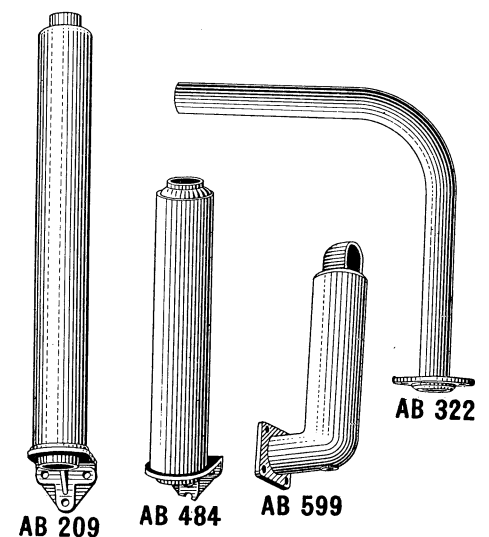


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


CYLINDER HEAD, VALVES AND MANIFOLD

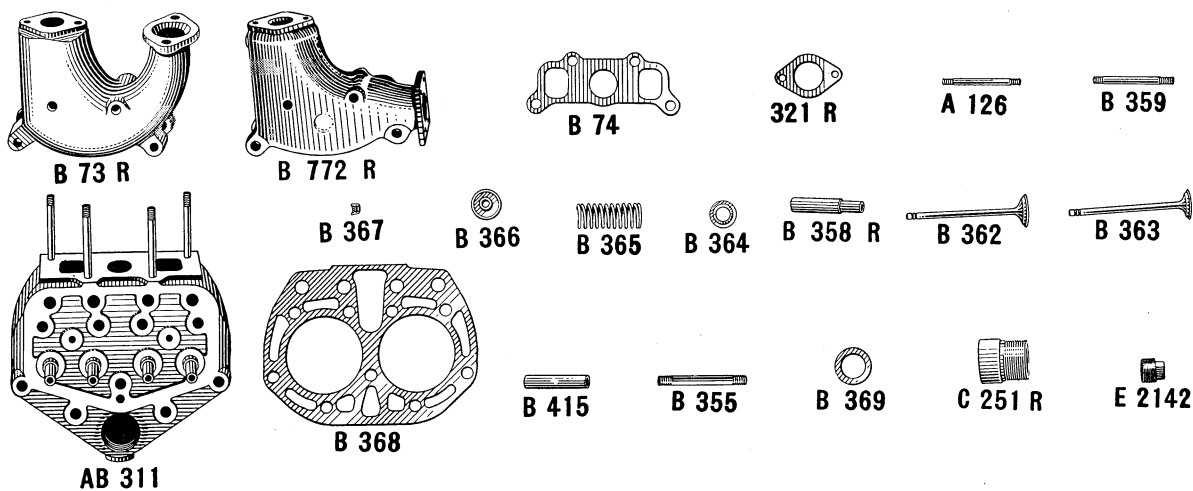


CAM SHAFT AND CAM FOLLOWERS

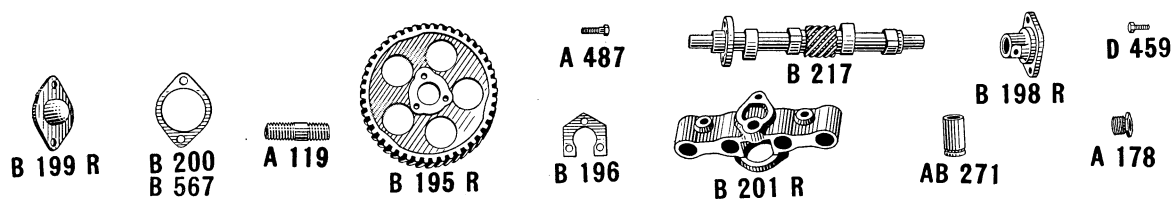

TAPPETS AND TAPPET OILER

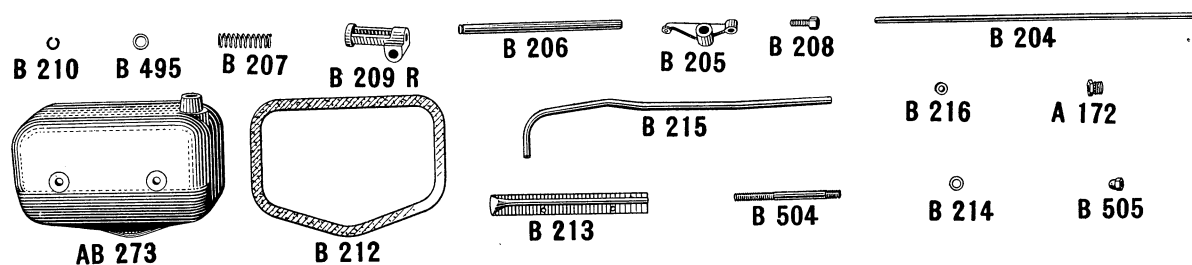


GOVERNOR

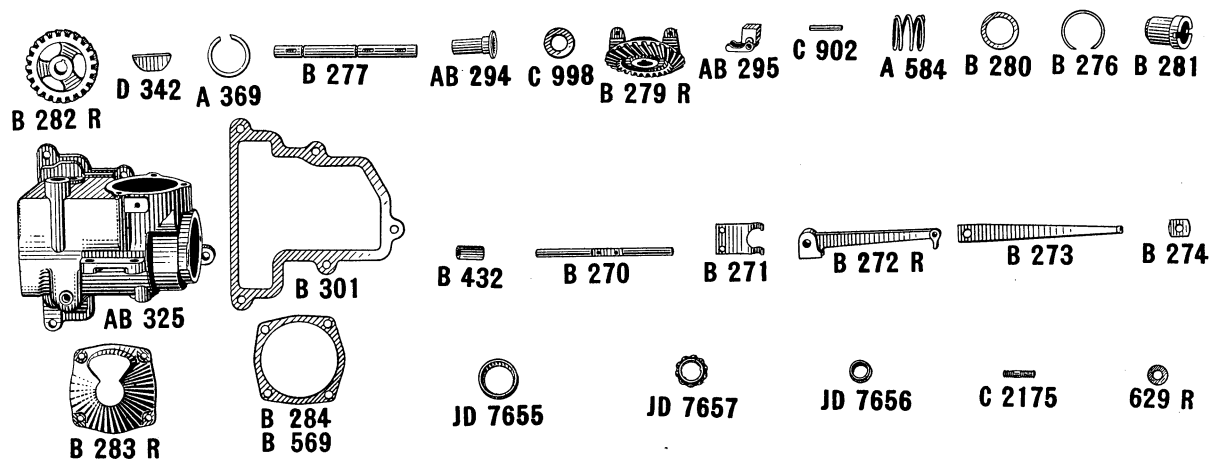


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

CONTROLS

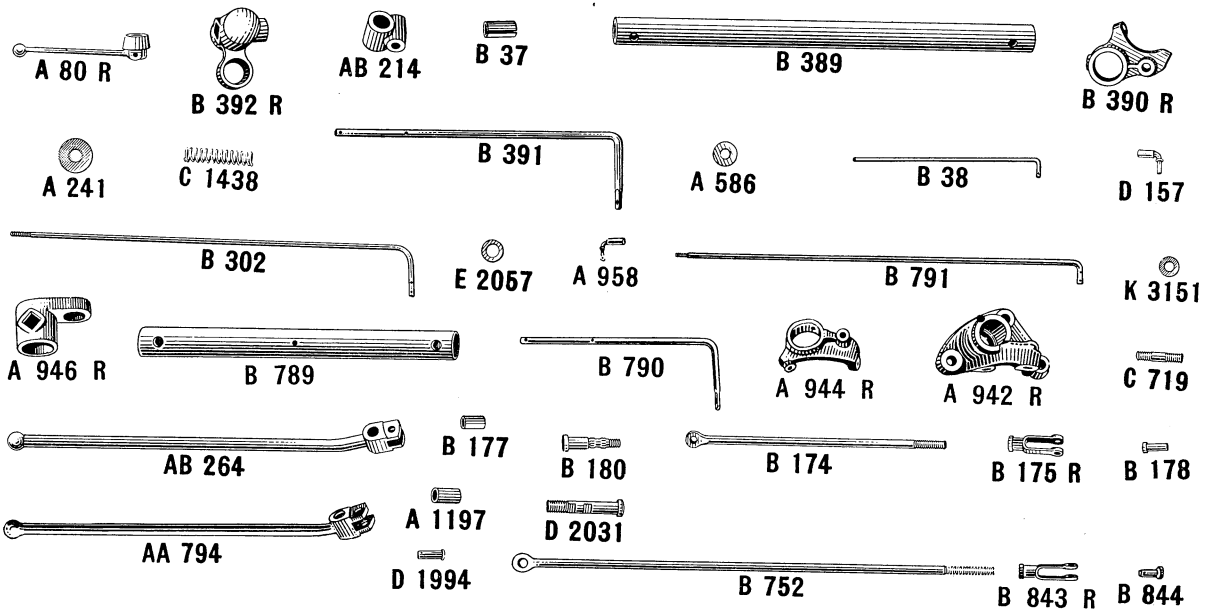


CRANK CASE BREATHER

CRANK CASE VENTILATOR

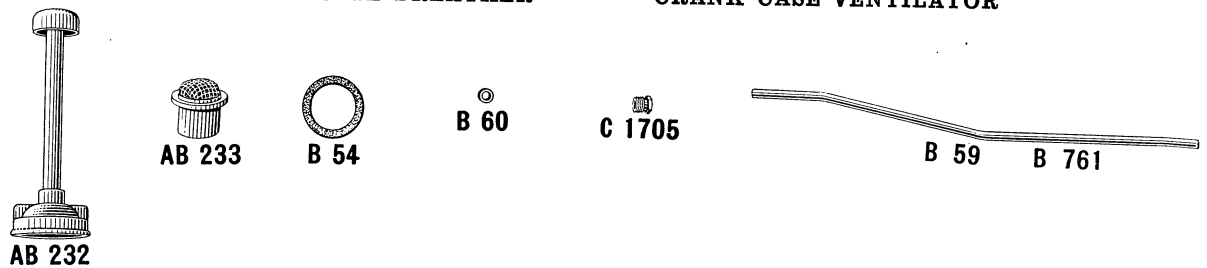


FAN

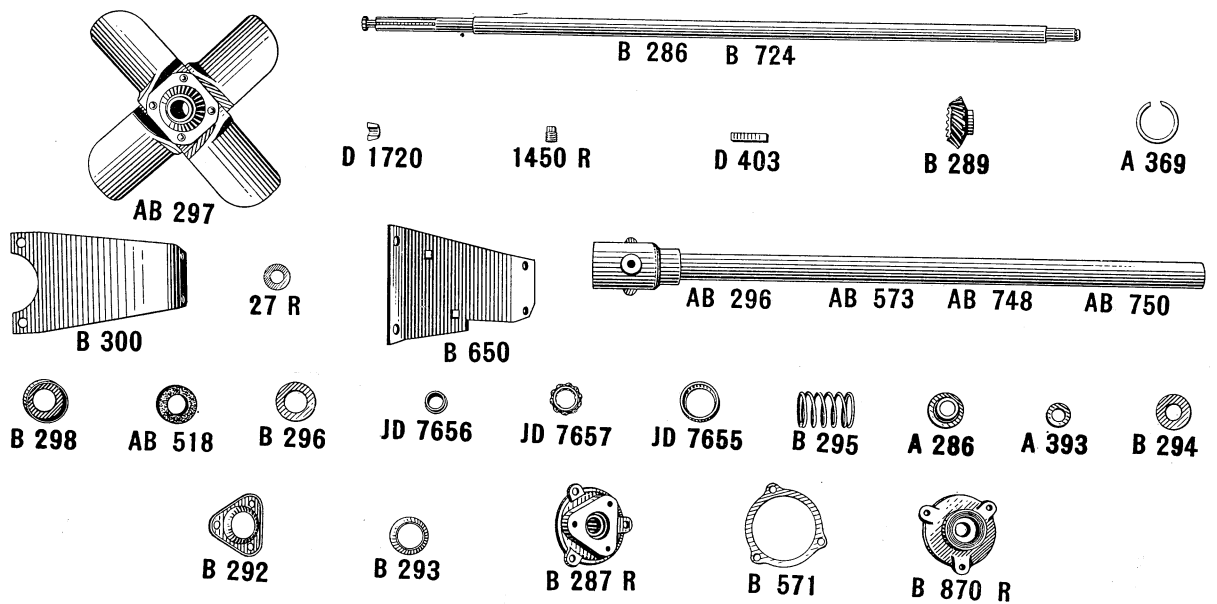


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


LUBRICATING SYSTEM AND OIL PUMP

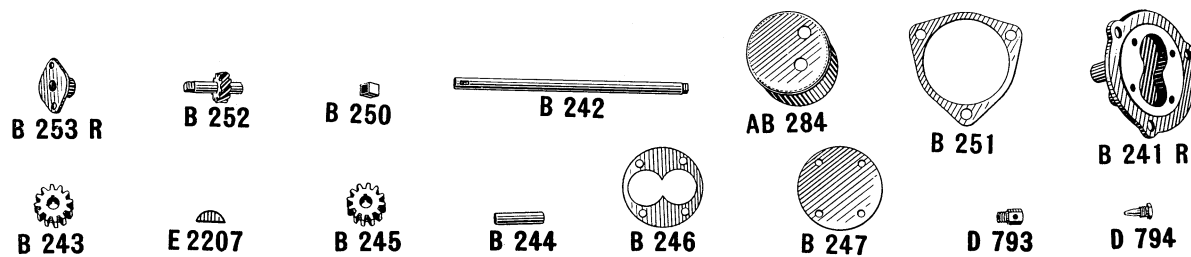


OIL FILTER AND INDICATOR

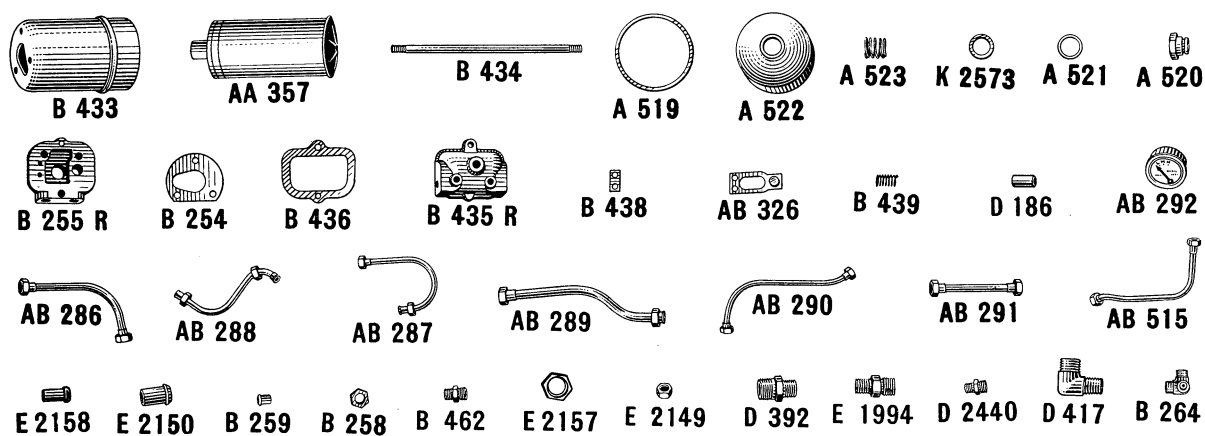

OIL PRESSURE REGULATING VALVE

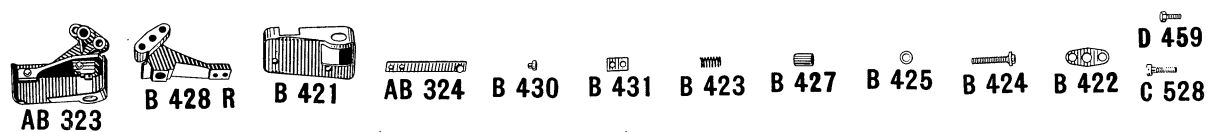


FUEL SYSTEM

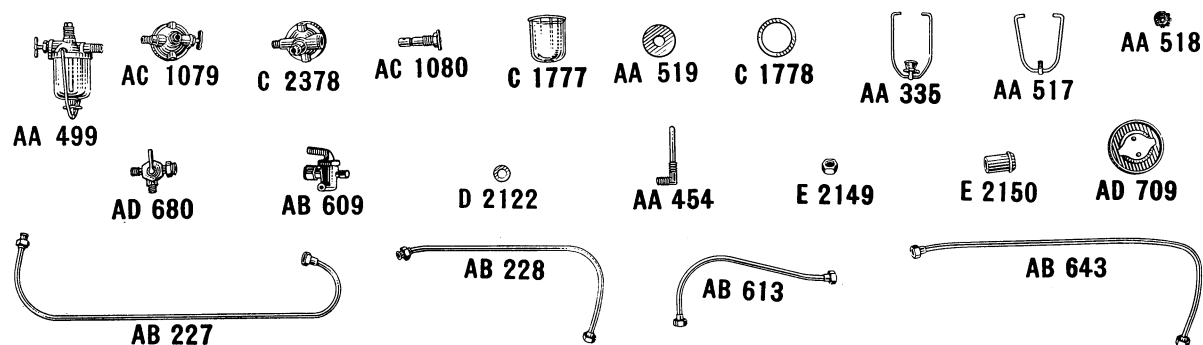


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

HOOD

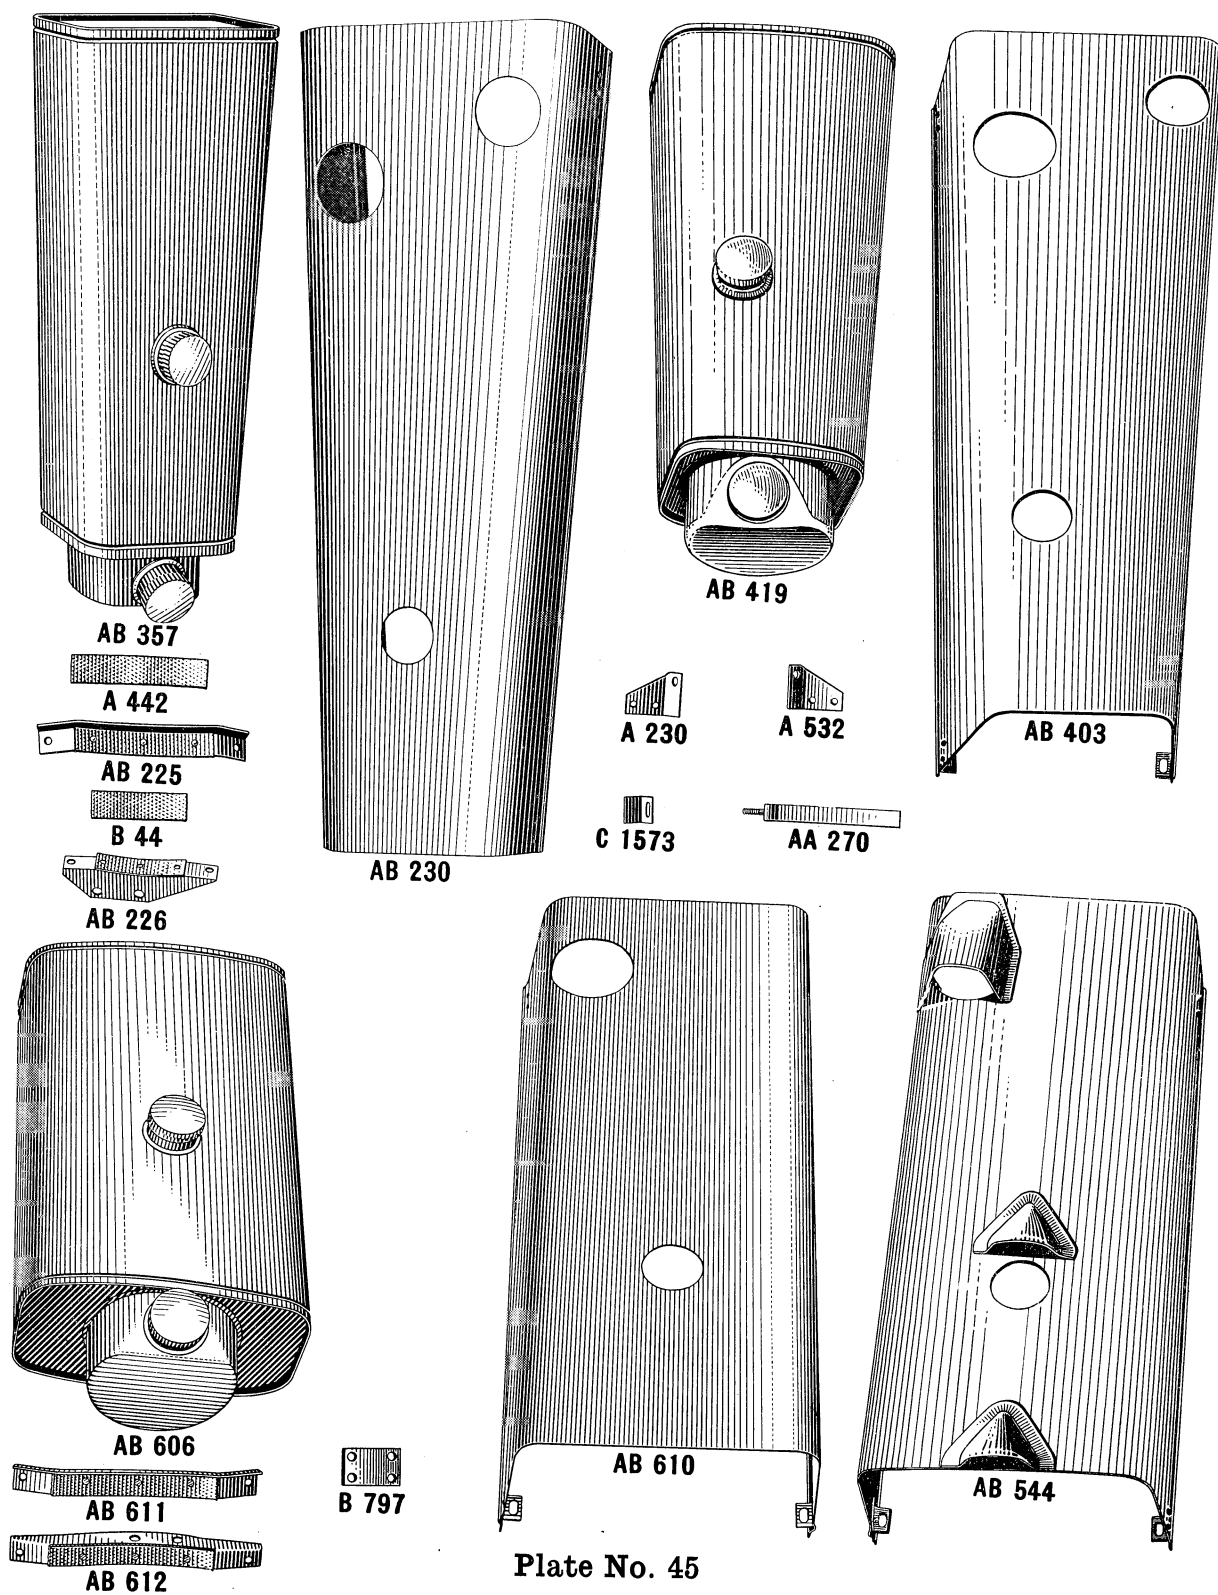


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

RADIATOR GUARD AND CURTAIN

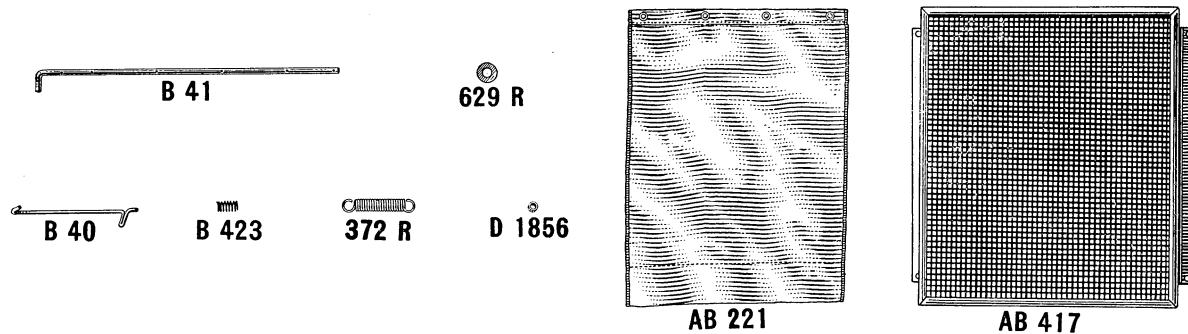


COOLING SYSTEM

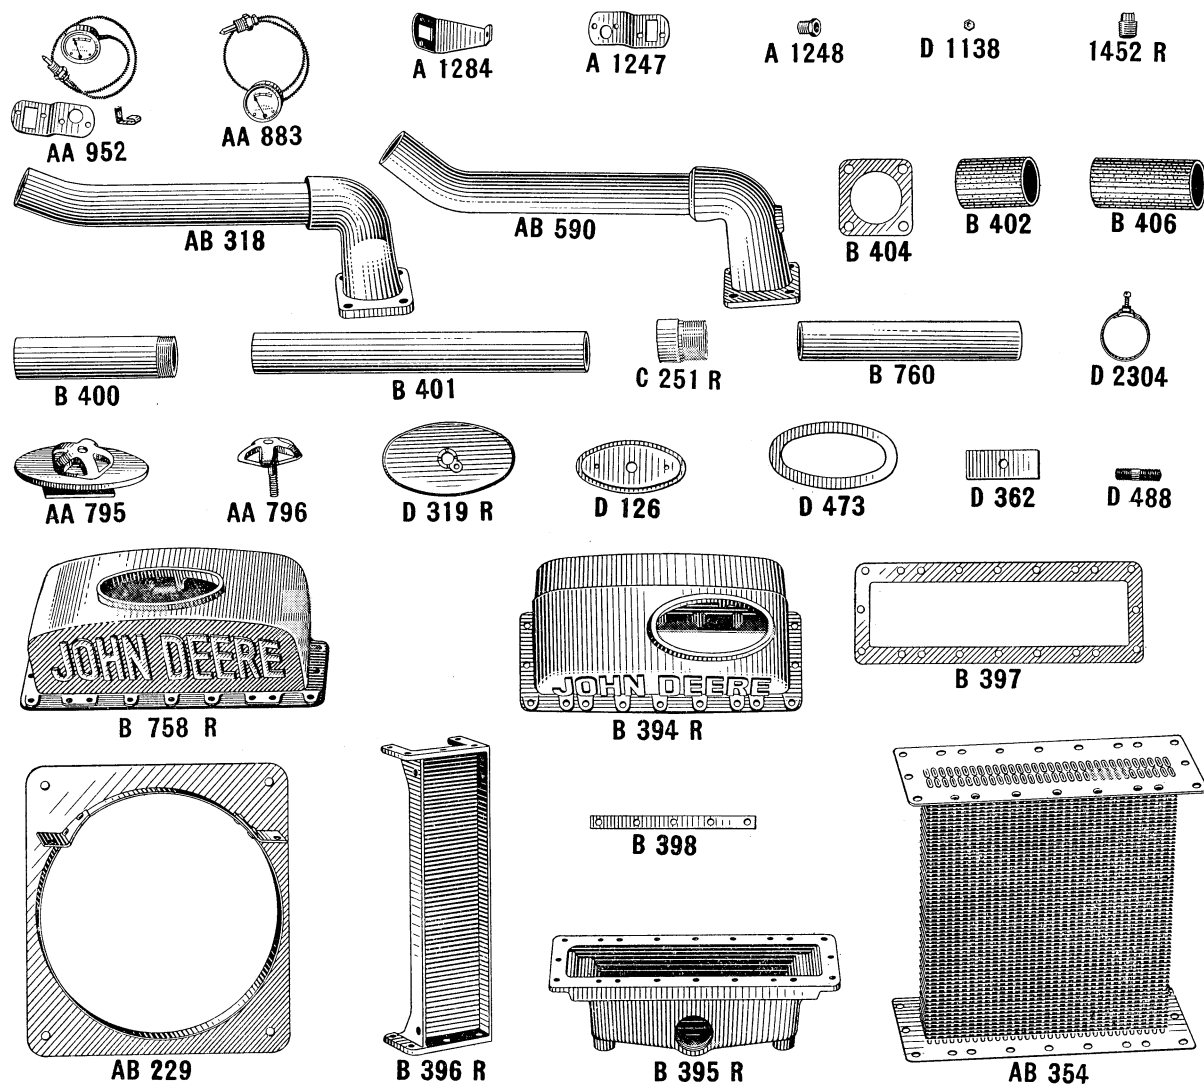


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


PULLEY

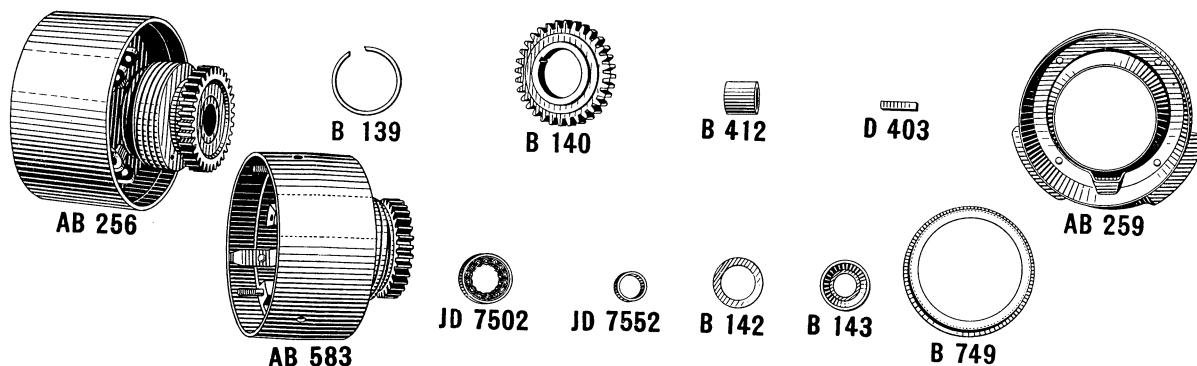


CLUTCH PARTS

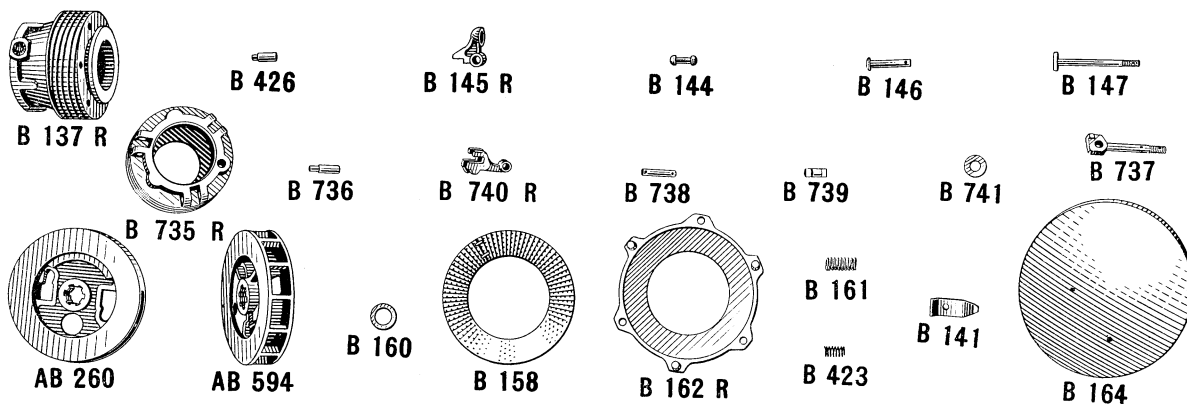

CLUTCH FORK BEARING AND PULLEY BRAKE

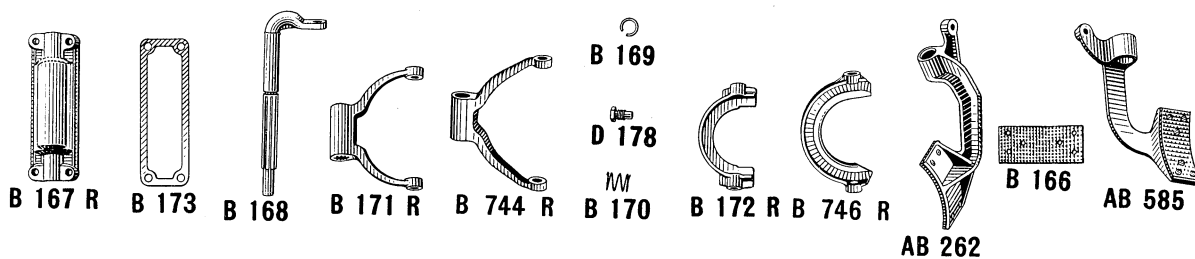


GEAR SHIFT

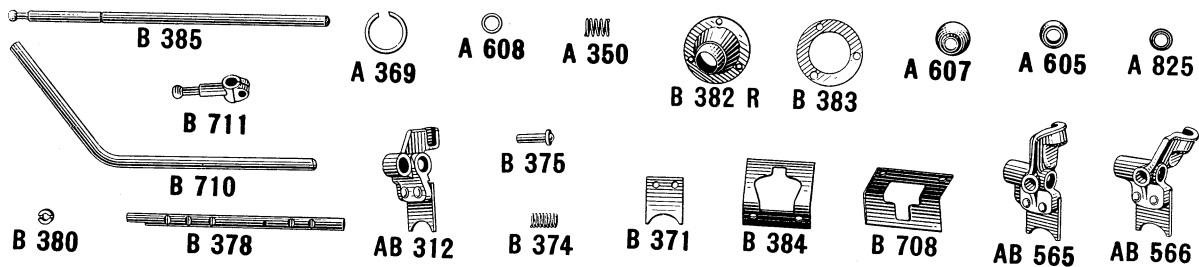


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


SLIDING GEAR SHAFT

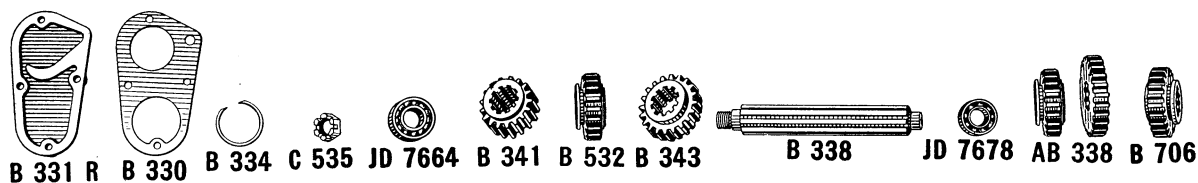


OVERDRIVE GEAR SHIFT

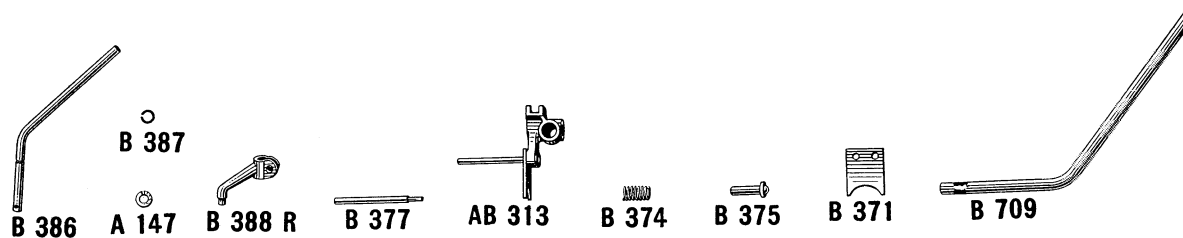


OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR

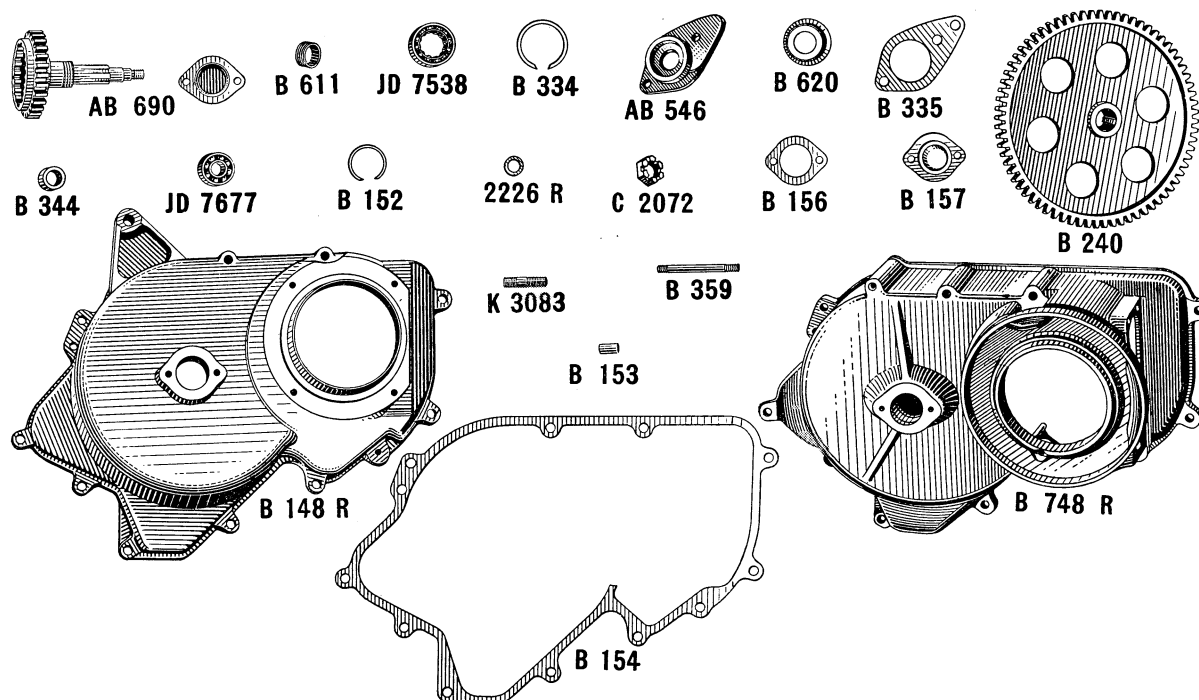

OVERDRIVE IDLER GEAR

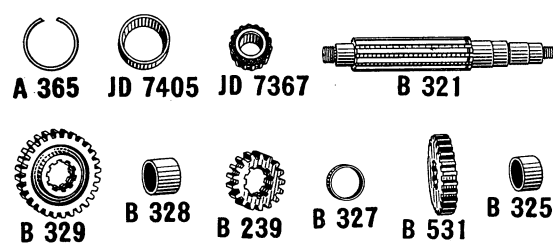

COUNTERSHAFT

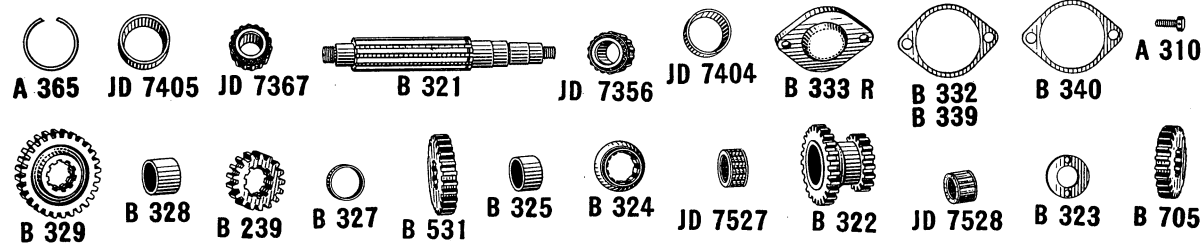

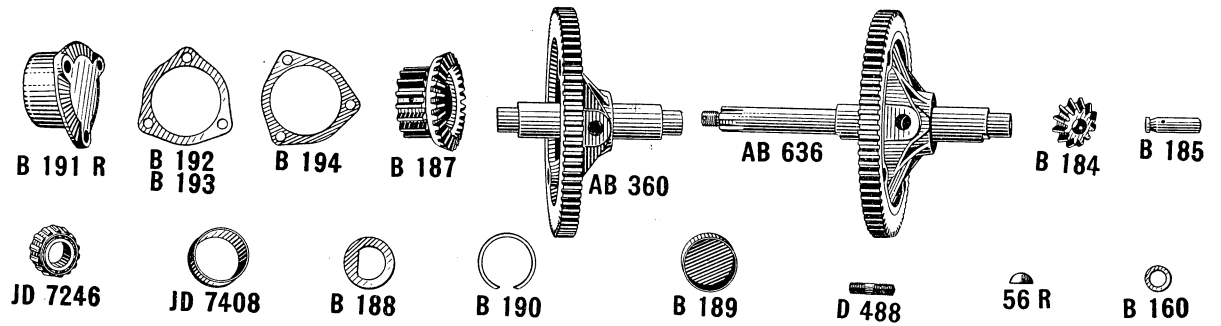
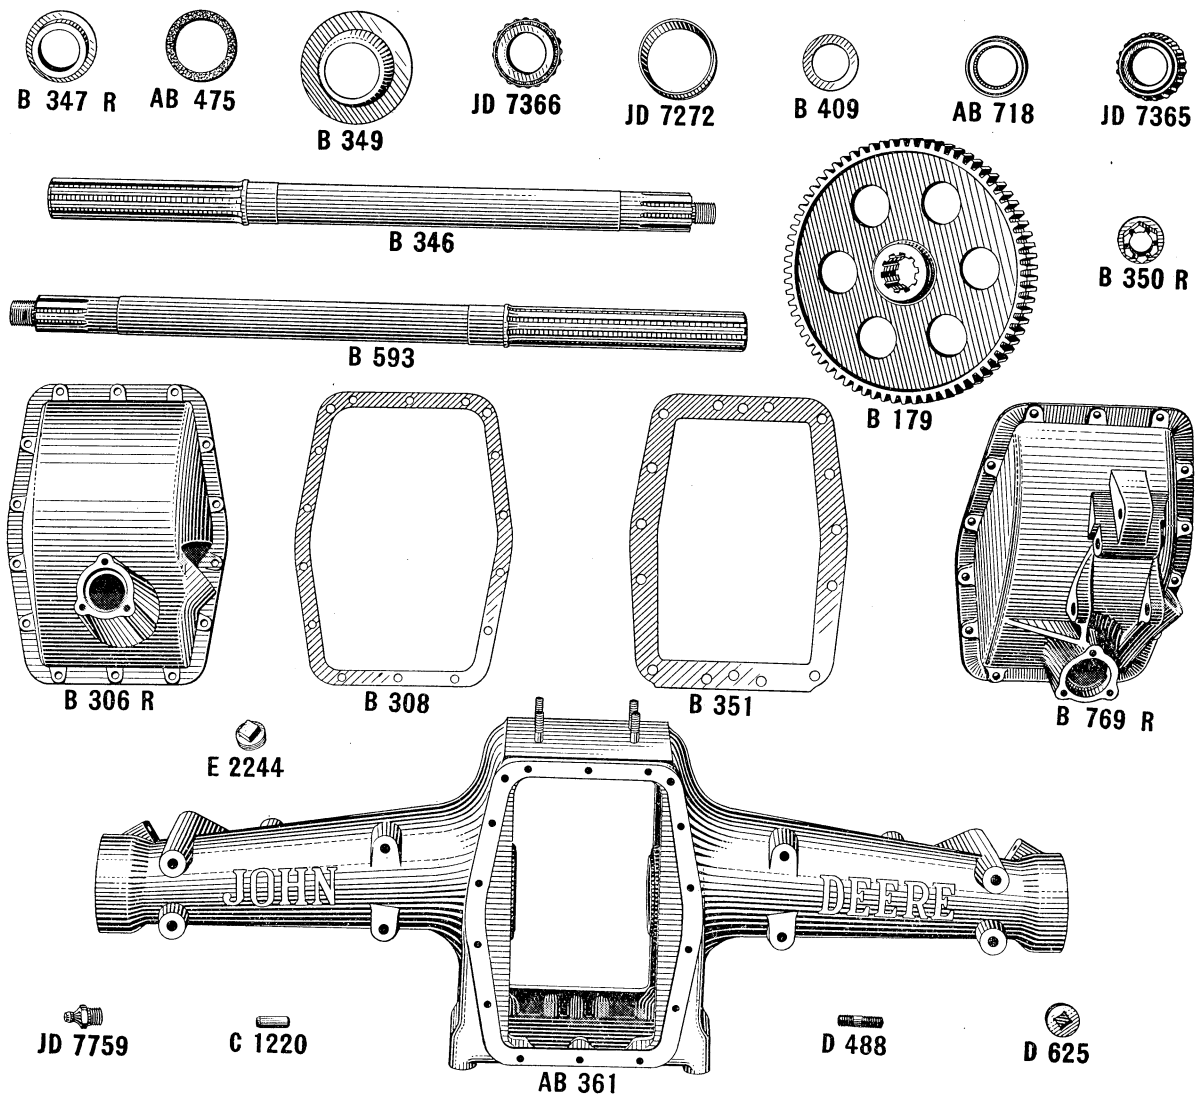
REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**DIFFERENTIAL****FINAL DRIVE**

Plate No. 49

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND B1 TRACTORS

FINAL DRIVE—Continued


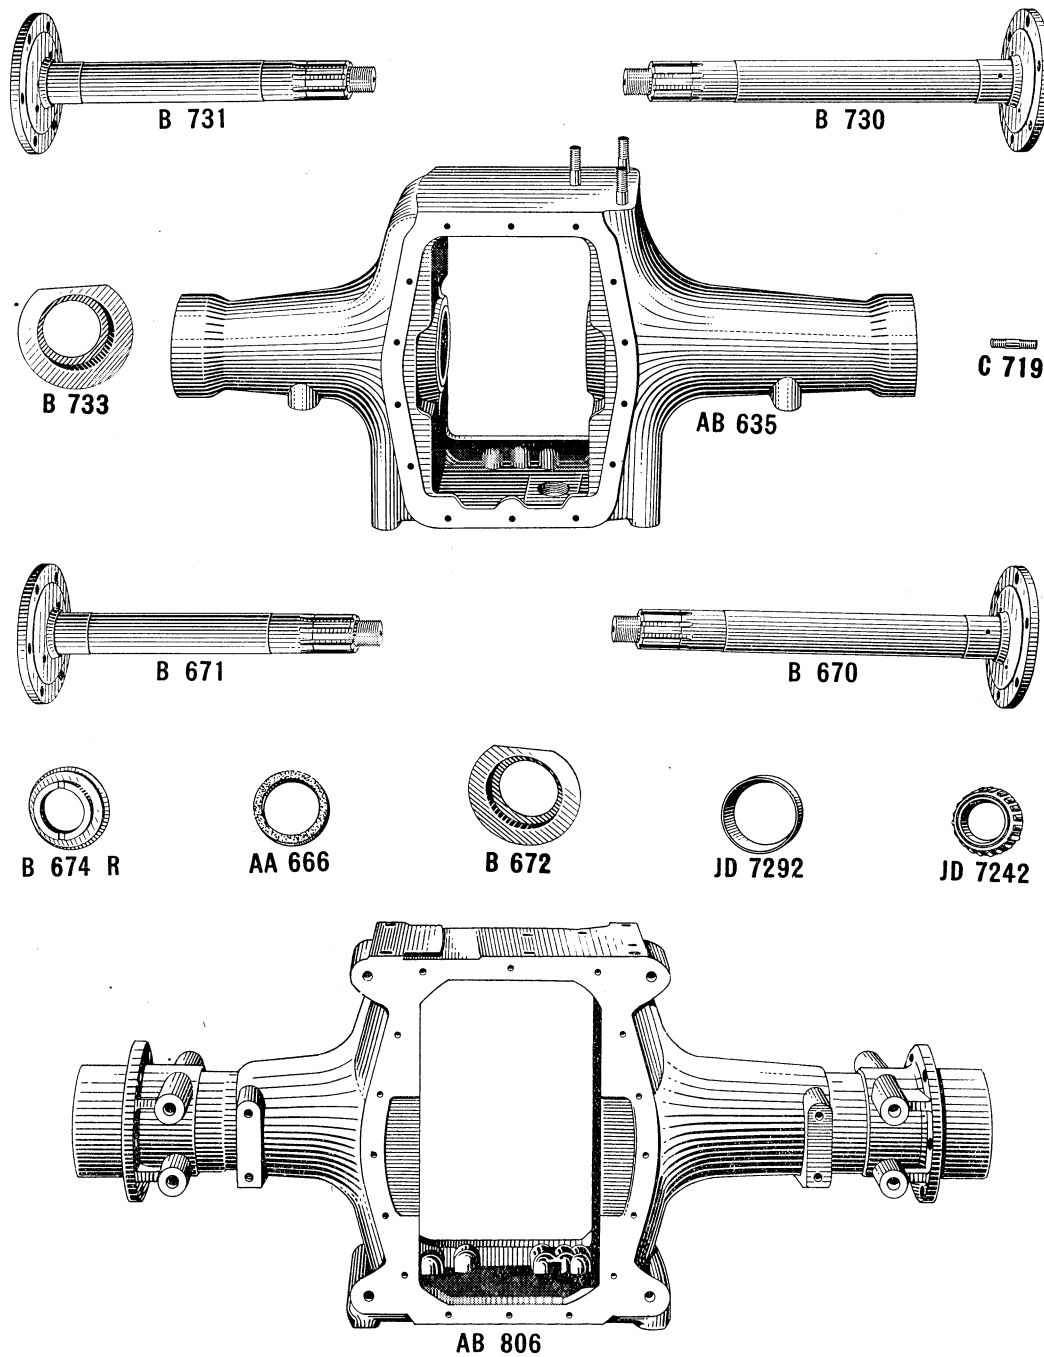



Plate No. 50

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

REAR WHEELS AND WHEEL EQUIPMENT

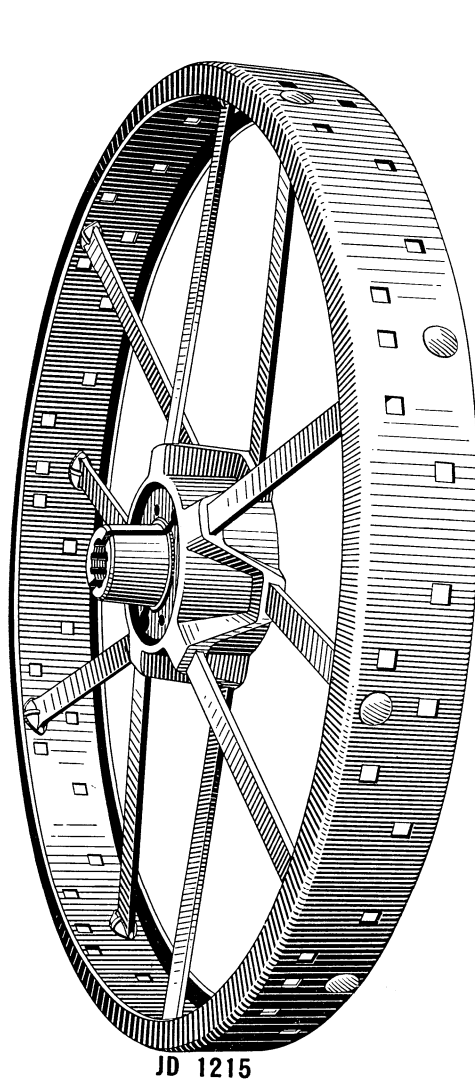

JD 1215

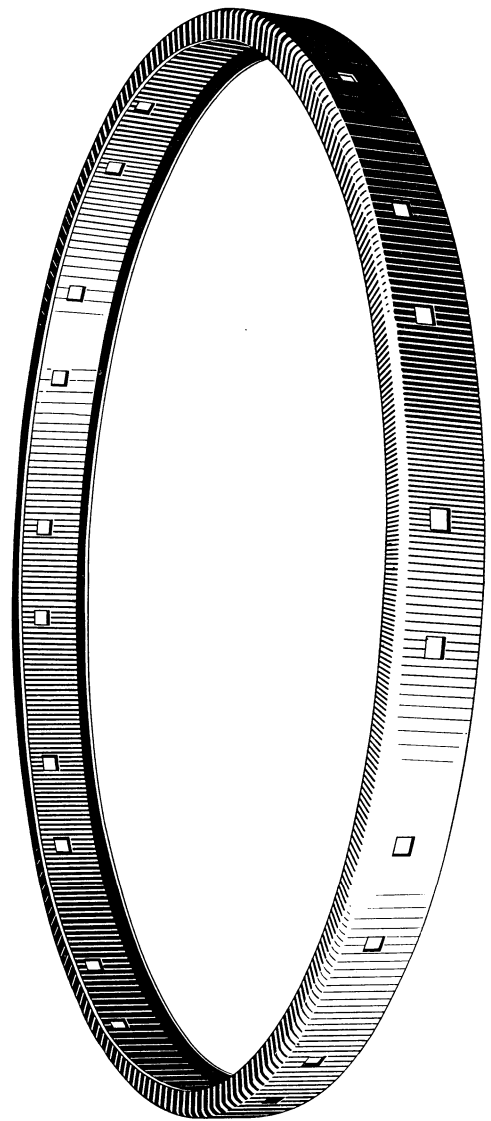

B 500



B 25 R



 
D 938



D 411



C 1517



C 1030

D 233
D 2447D 1078
D 2121


C 1646 R




AC 649



 A 1298



C 2199 R

 

D 1283

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS
REAR WHEELS AND WHEEL EQUIPMENT—Continued

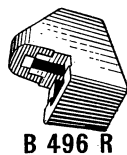
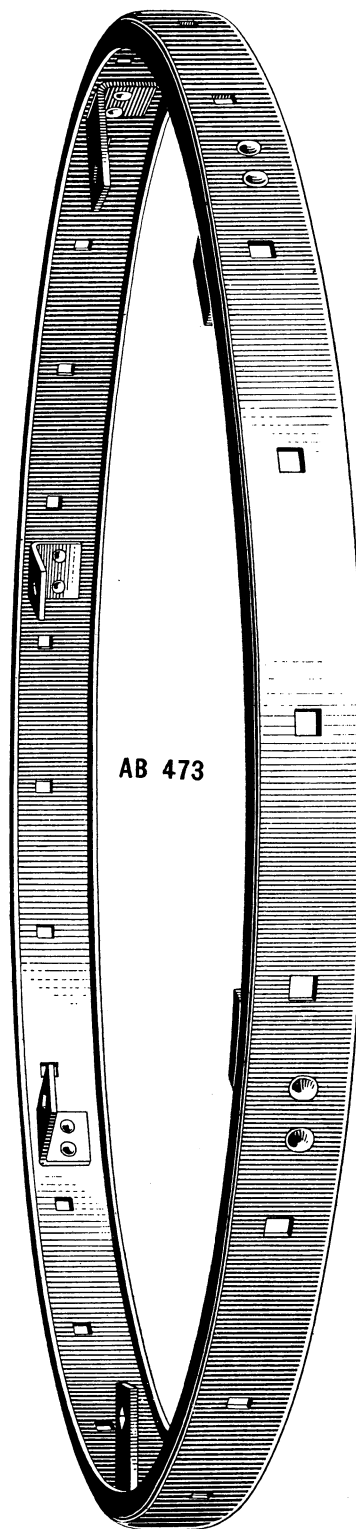
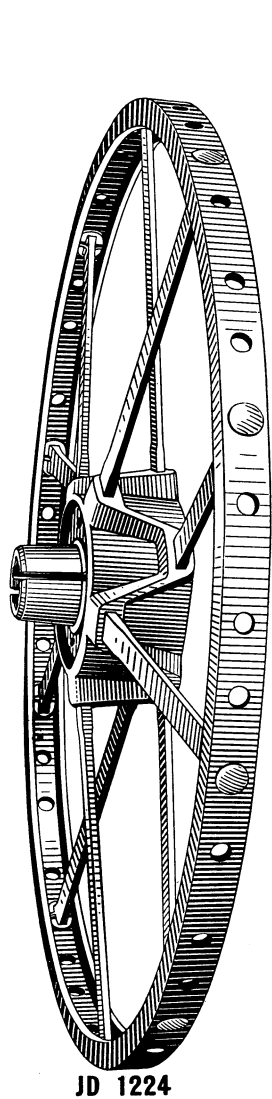
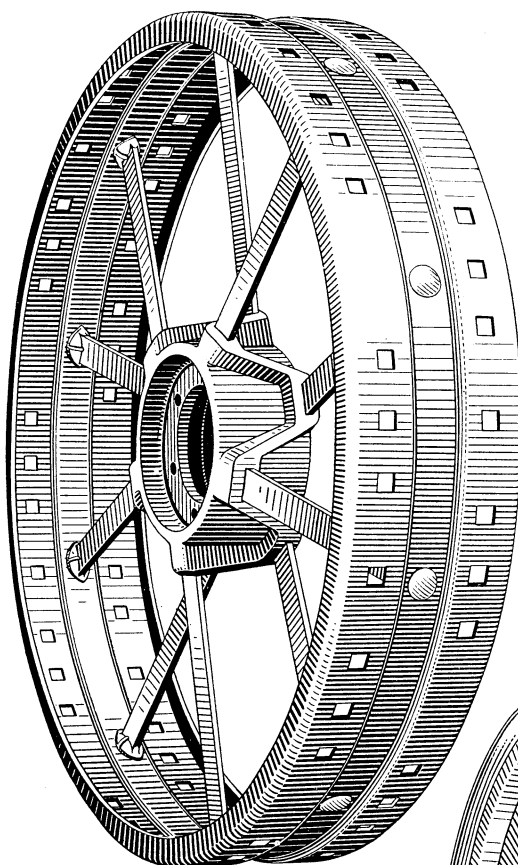
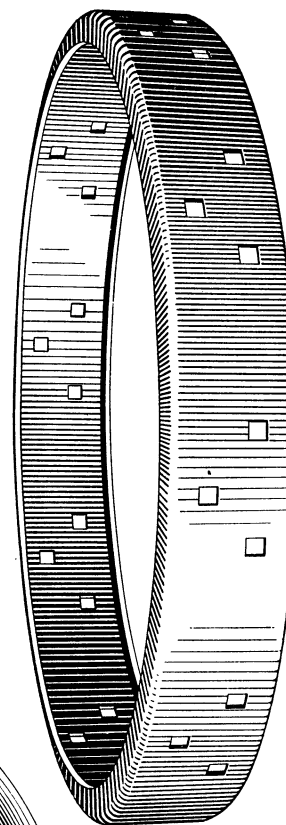
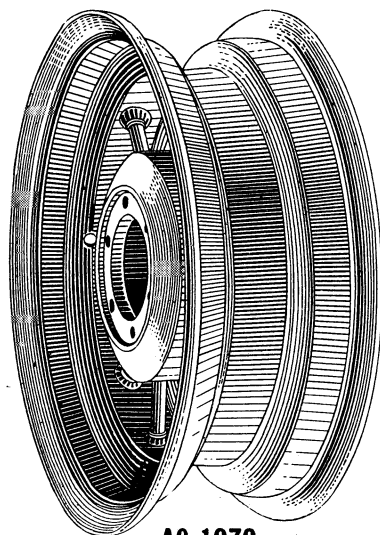
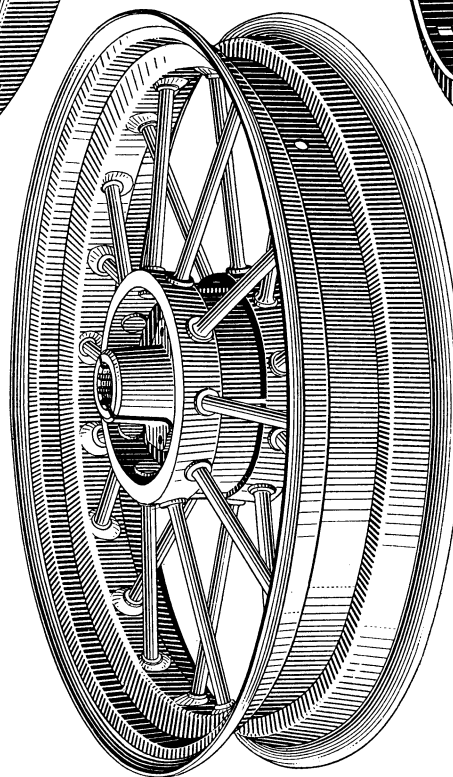
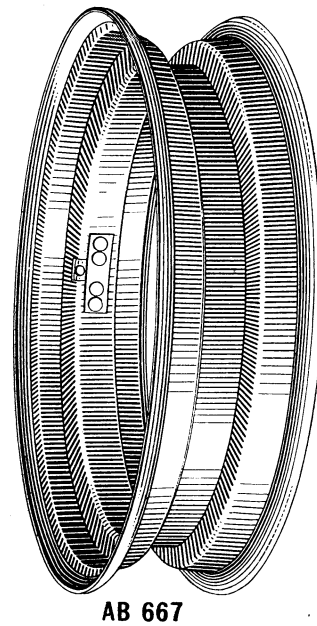
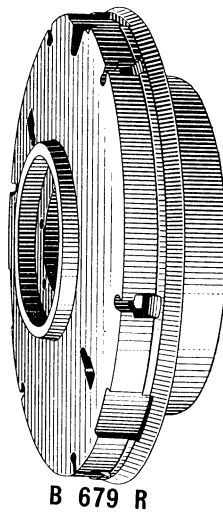
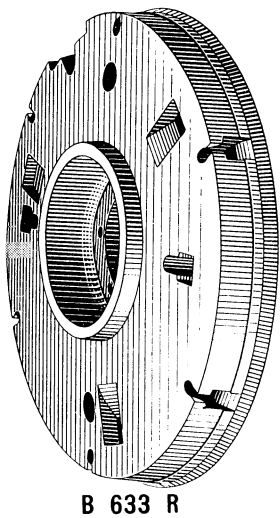
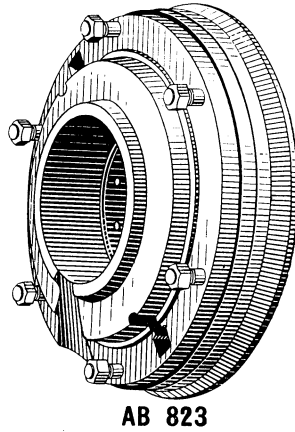
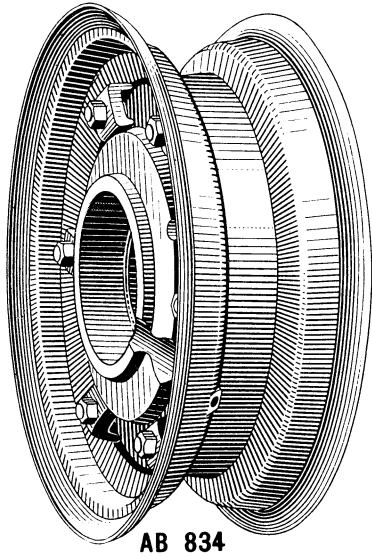
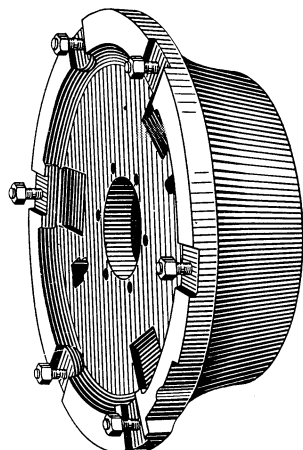
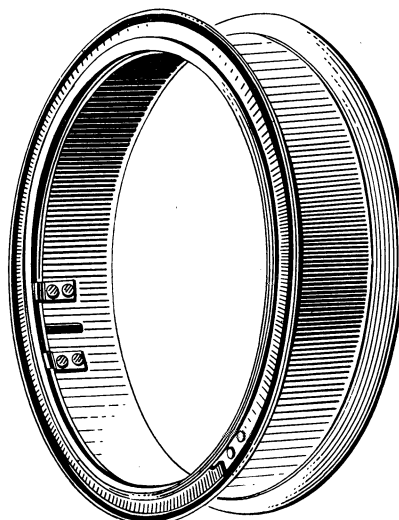
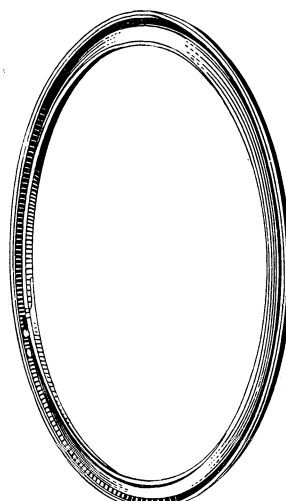
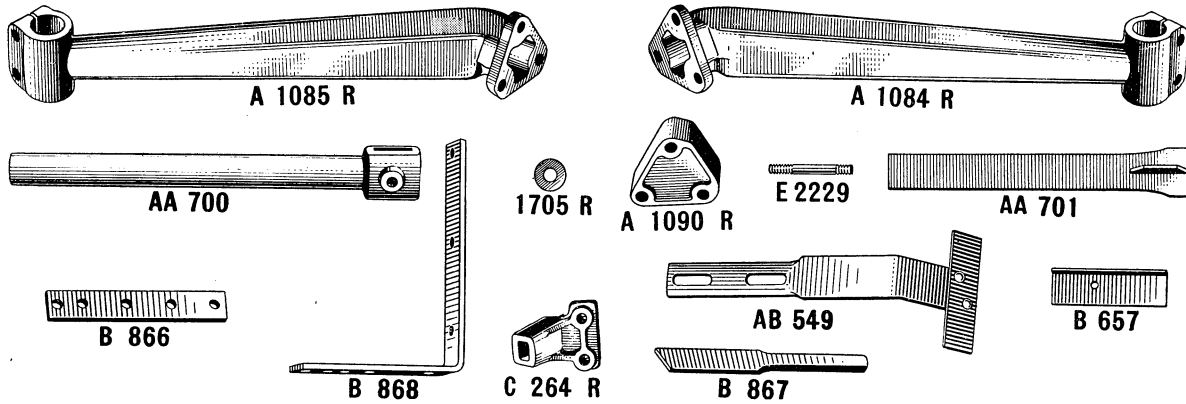
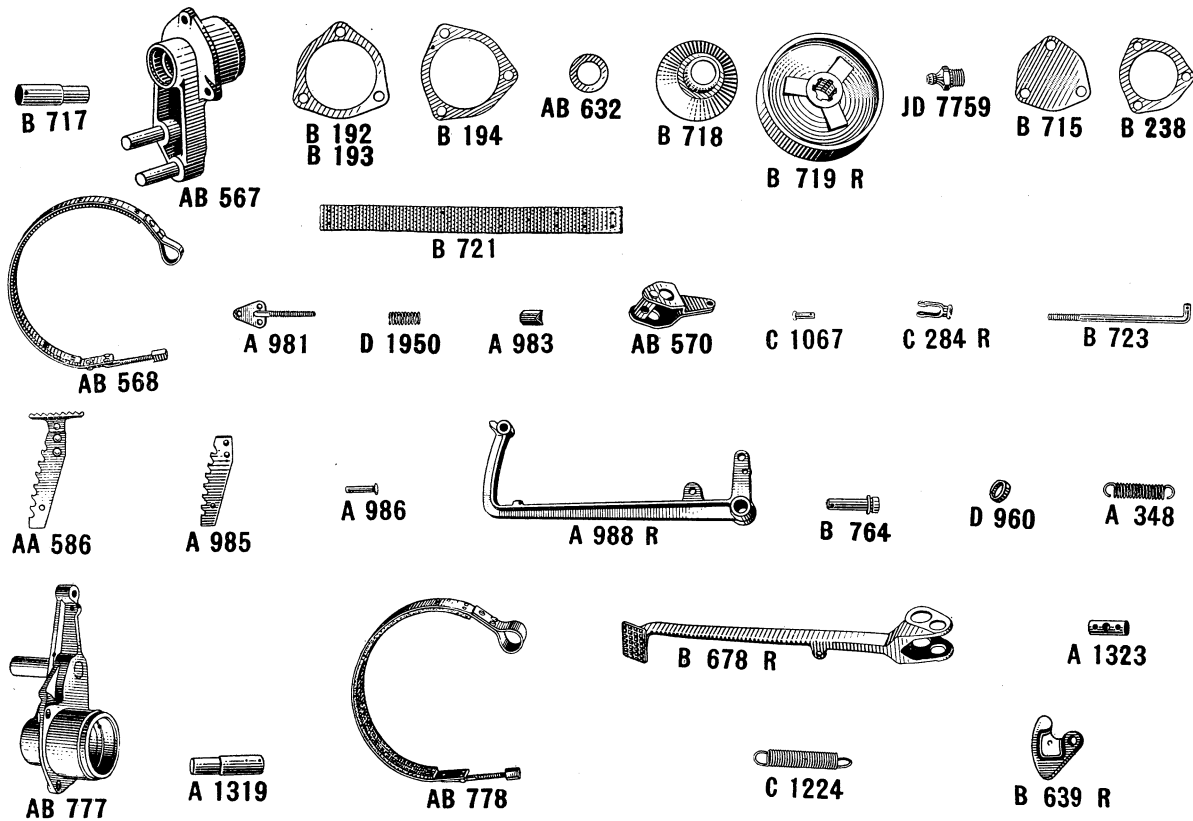


Plate No. 52

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**REAR WHEELS AND WHEEL EQUIPMENT—Continued****JD 1221****B 658****AC 1070****AB 375****D 2629****D 2186****D 827****D 2184**


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**REAR WHEELS AND WHEEL EQUIPMENT—Continued**

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**REAR WHEELS AND WHEEL EQUIPMENT—Continued****AA 1051****AA 1056****AA 1058****A 1325****C 1479****D 2106****Plate No. 55**


REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**WHEEL SCRAPERS****EMERGENCY BRAKE**

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

DIFFERENTIAL BRAKES

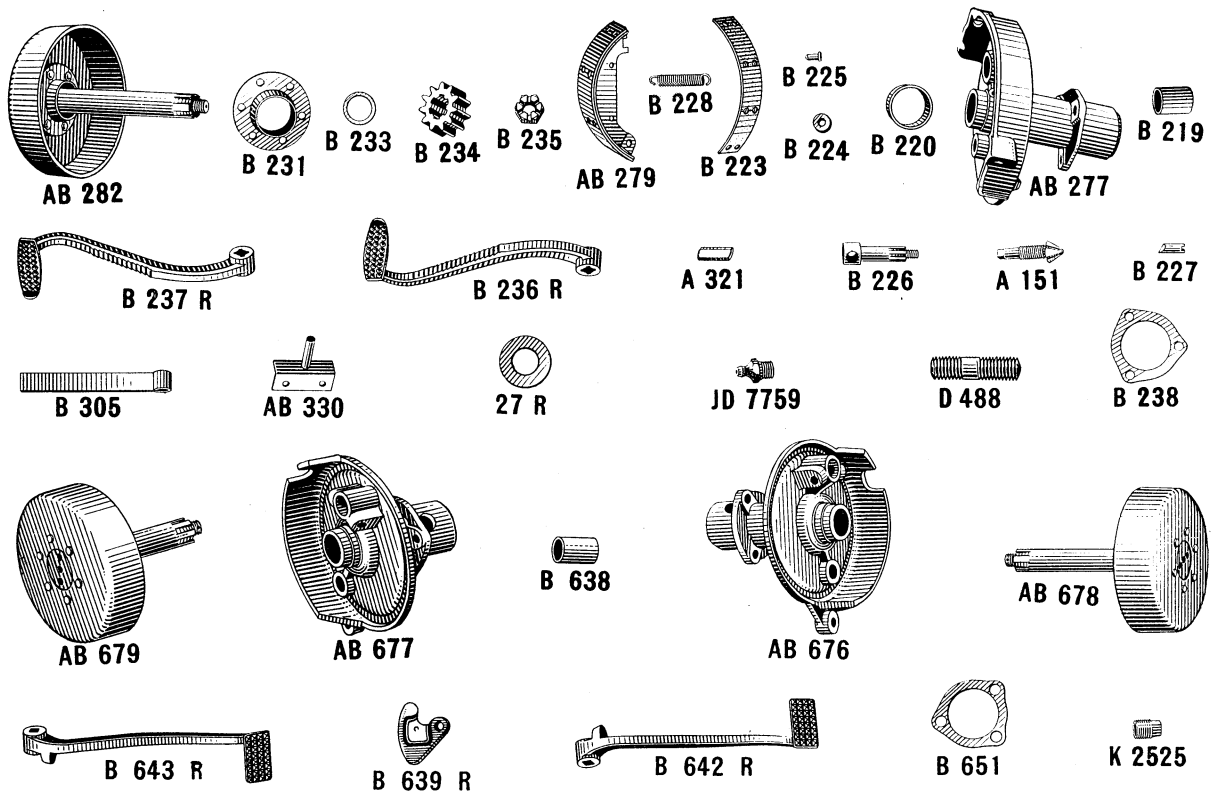

REAR WHEEL BRAKES

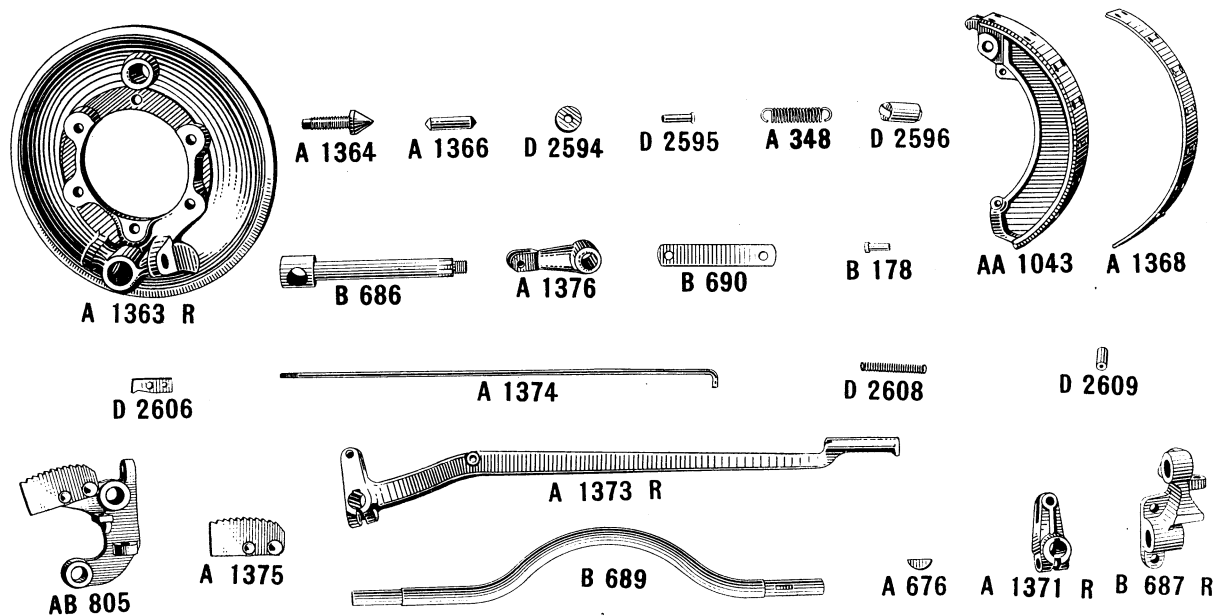

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

FRONT AXLE AND FRONT END SUPPORT





 












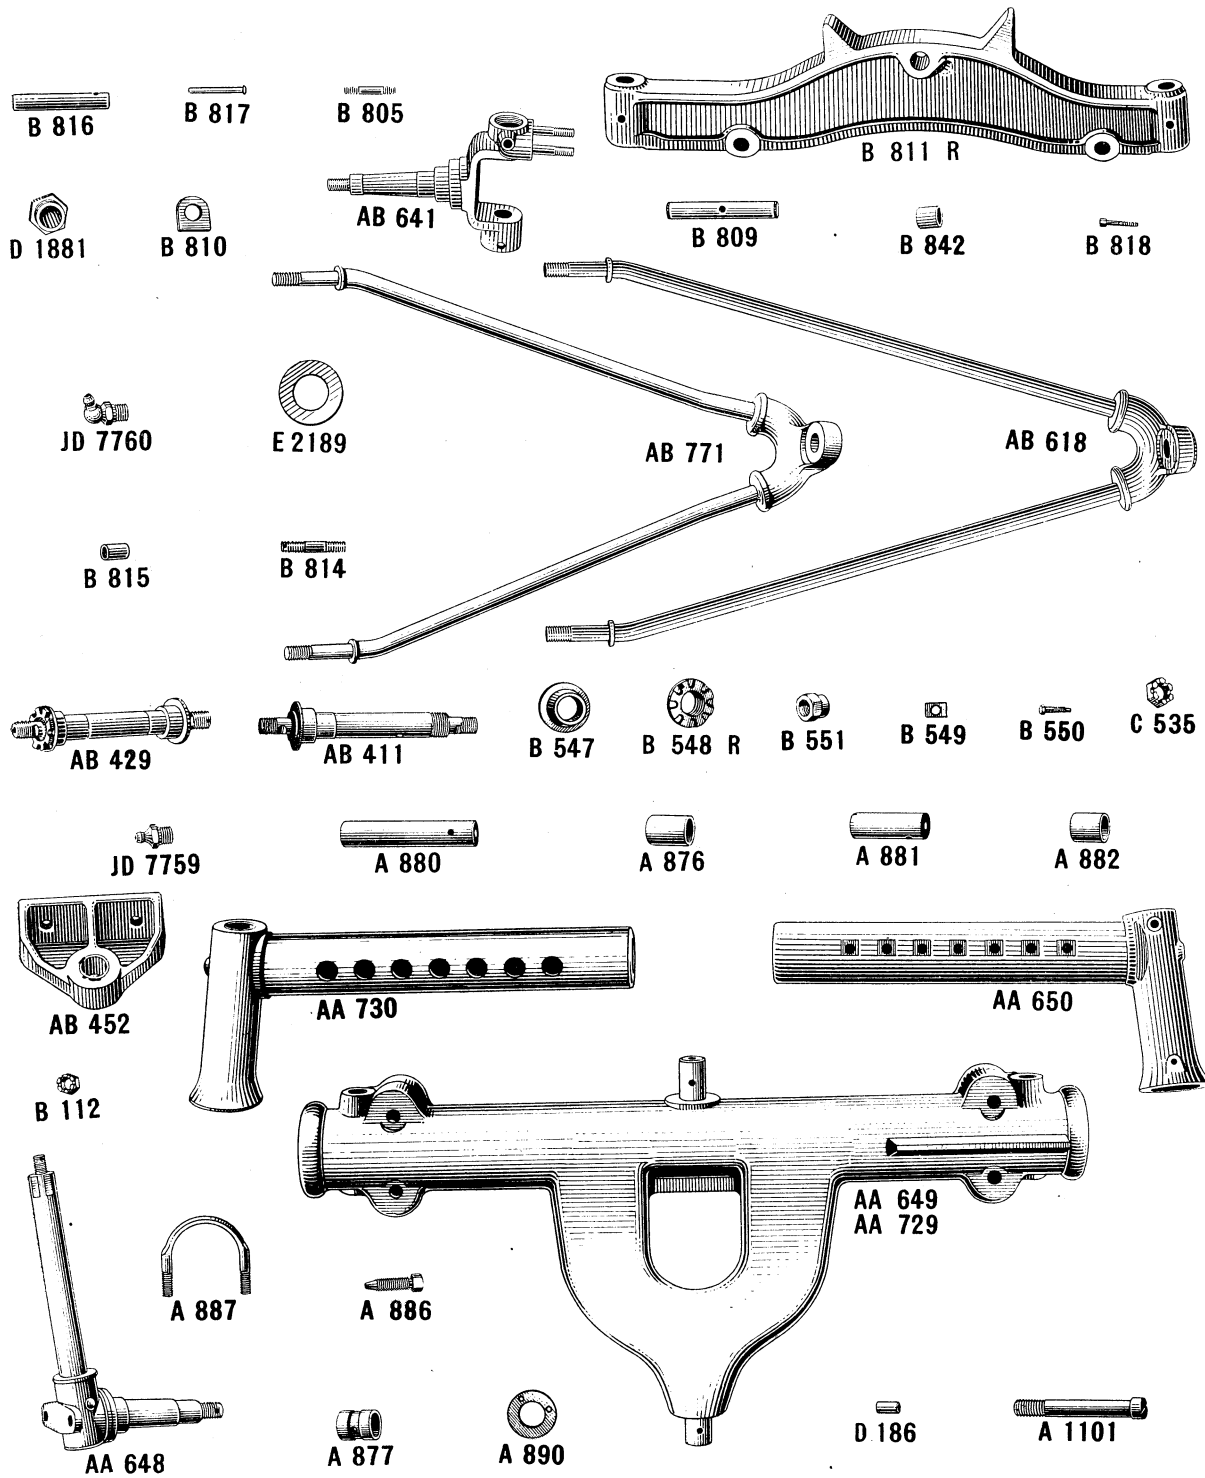


Plate No. 58










REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**FRONT AXLE AND FRONT END SUPPORT—Continued****AB 244****B 565****AB 437****K 2198****B 813 R****A 1297 R****B 661 R**

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

 FRONT WHEELS AND FRONT WHEEL EQUIPMENT

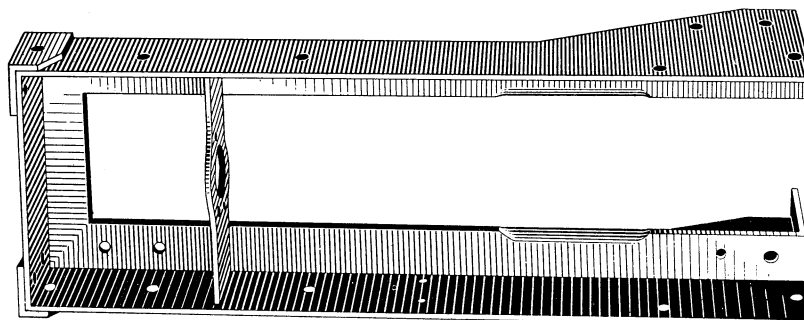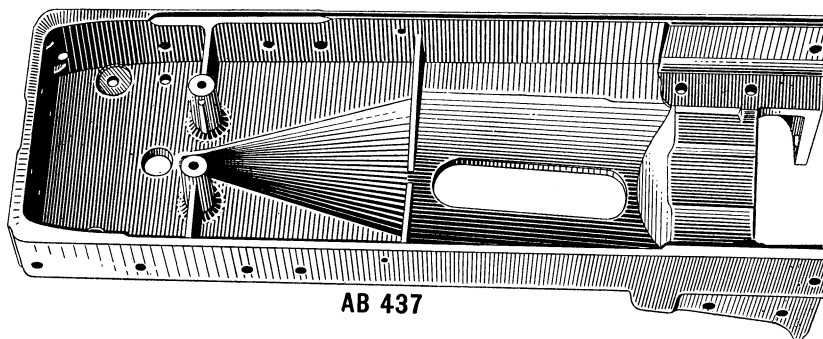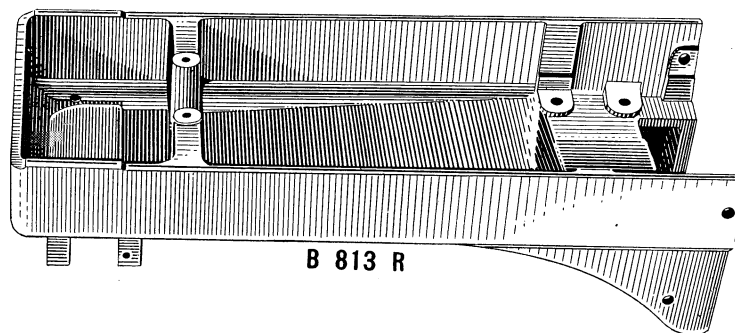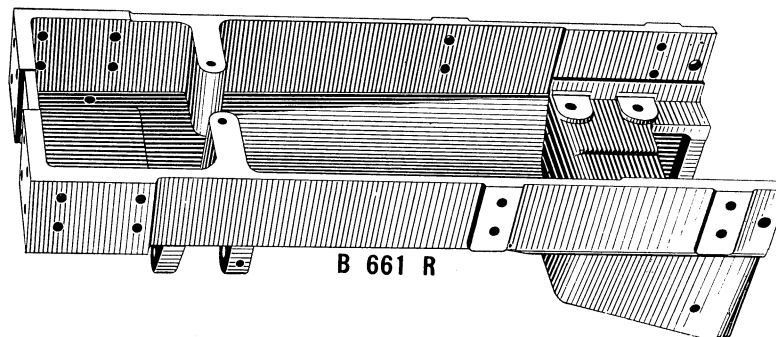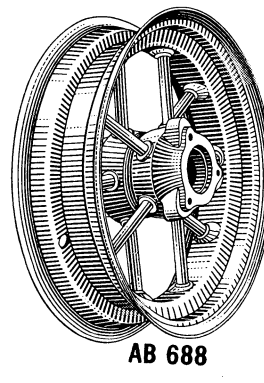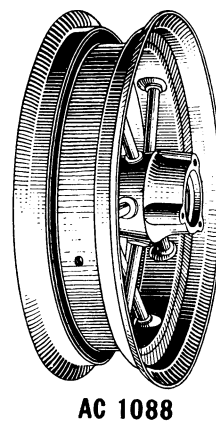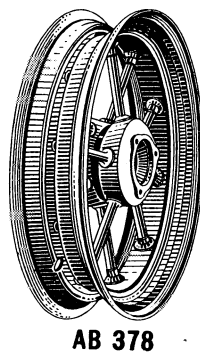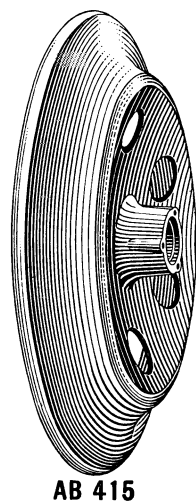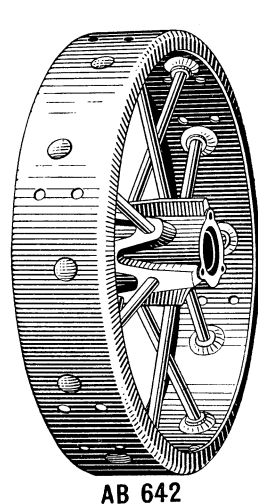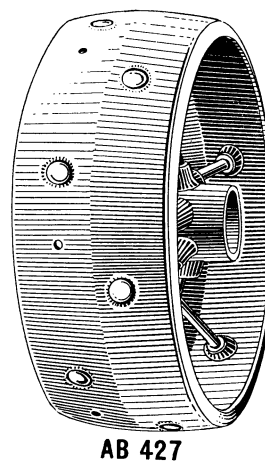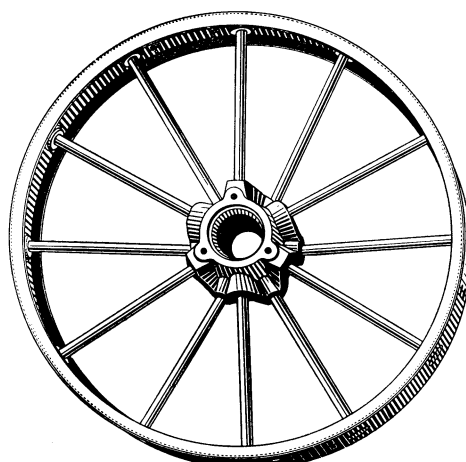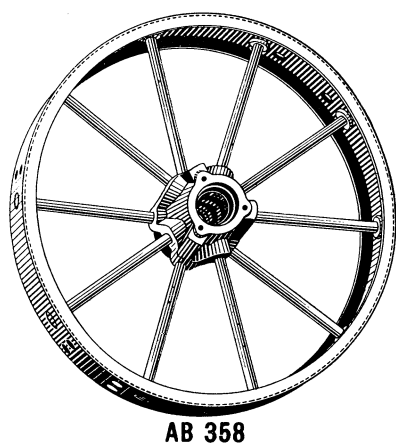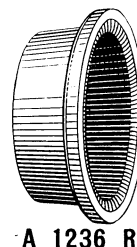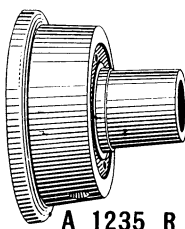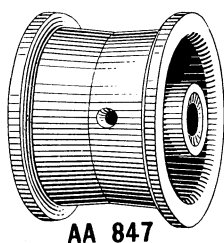

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS
FRONT WHEELS AND FRONT WHEEL EQUIPMENT—Continued

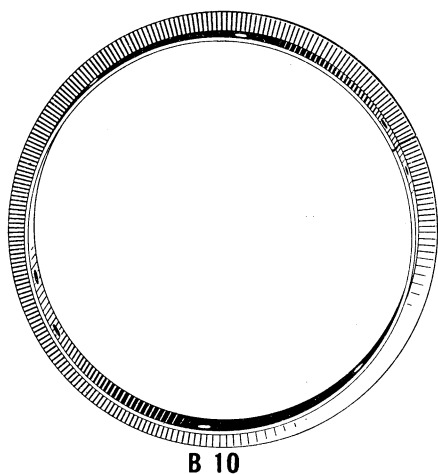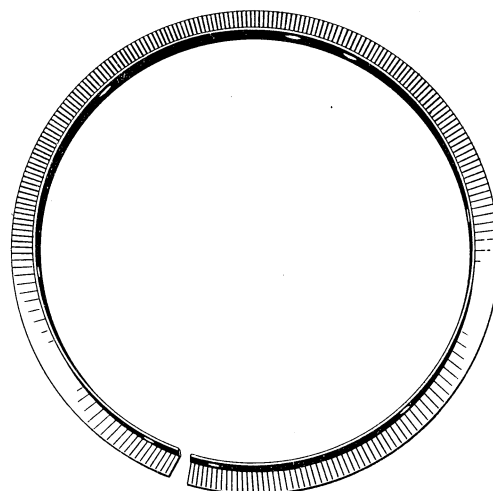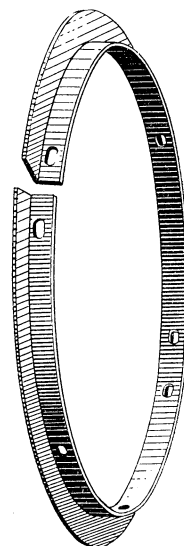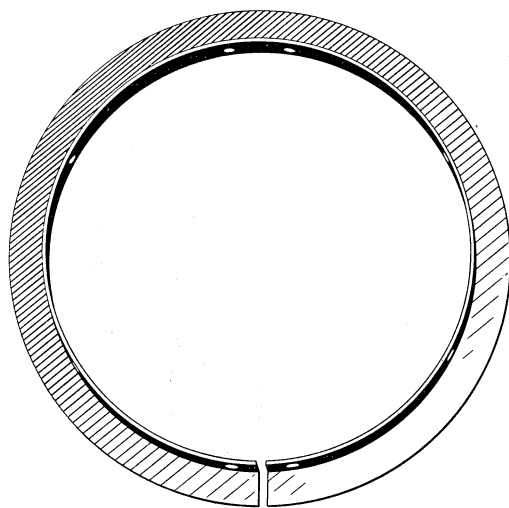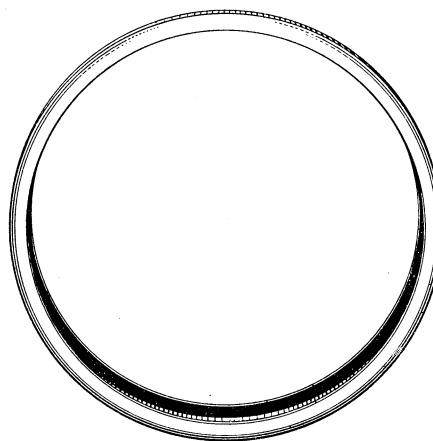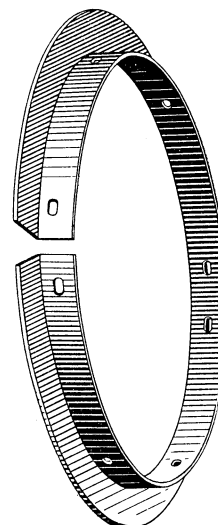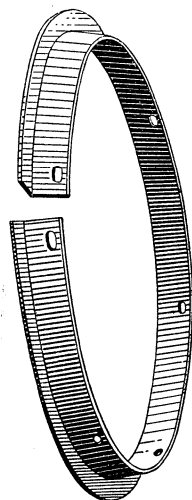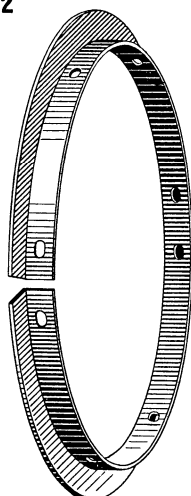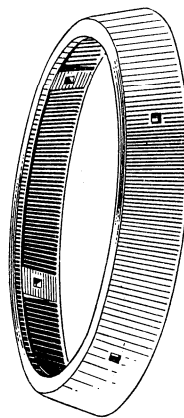
**B 10****A 215****A 777****C 1732****C 722****B 605****B 552****A 557****B 575 R****B 559****D 2184****D 2186****C 2309**

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

PEDESTAL



 B 35



B 34



B 108 R



B 107



B 106



JD 7759



AB 213

B 29
B 30
B 31


B 33



B 32




K 2525

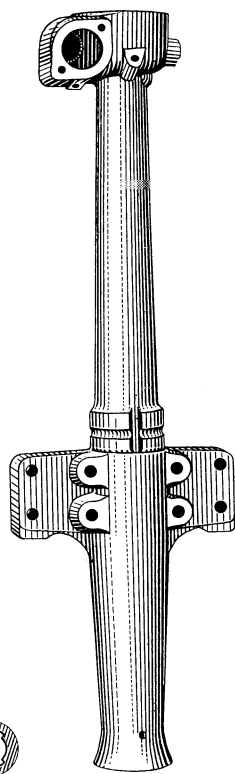

AB 496




A 776

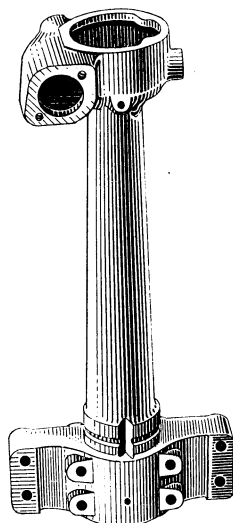

AB 410



A 875

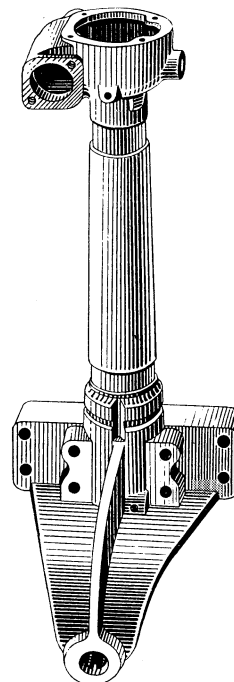

AB 451



B 105



C 1479



B 545



B 104



B 101



A 877

Plate No. 62

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

STEERING PARTS

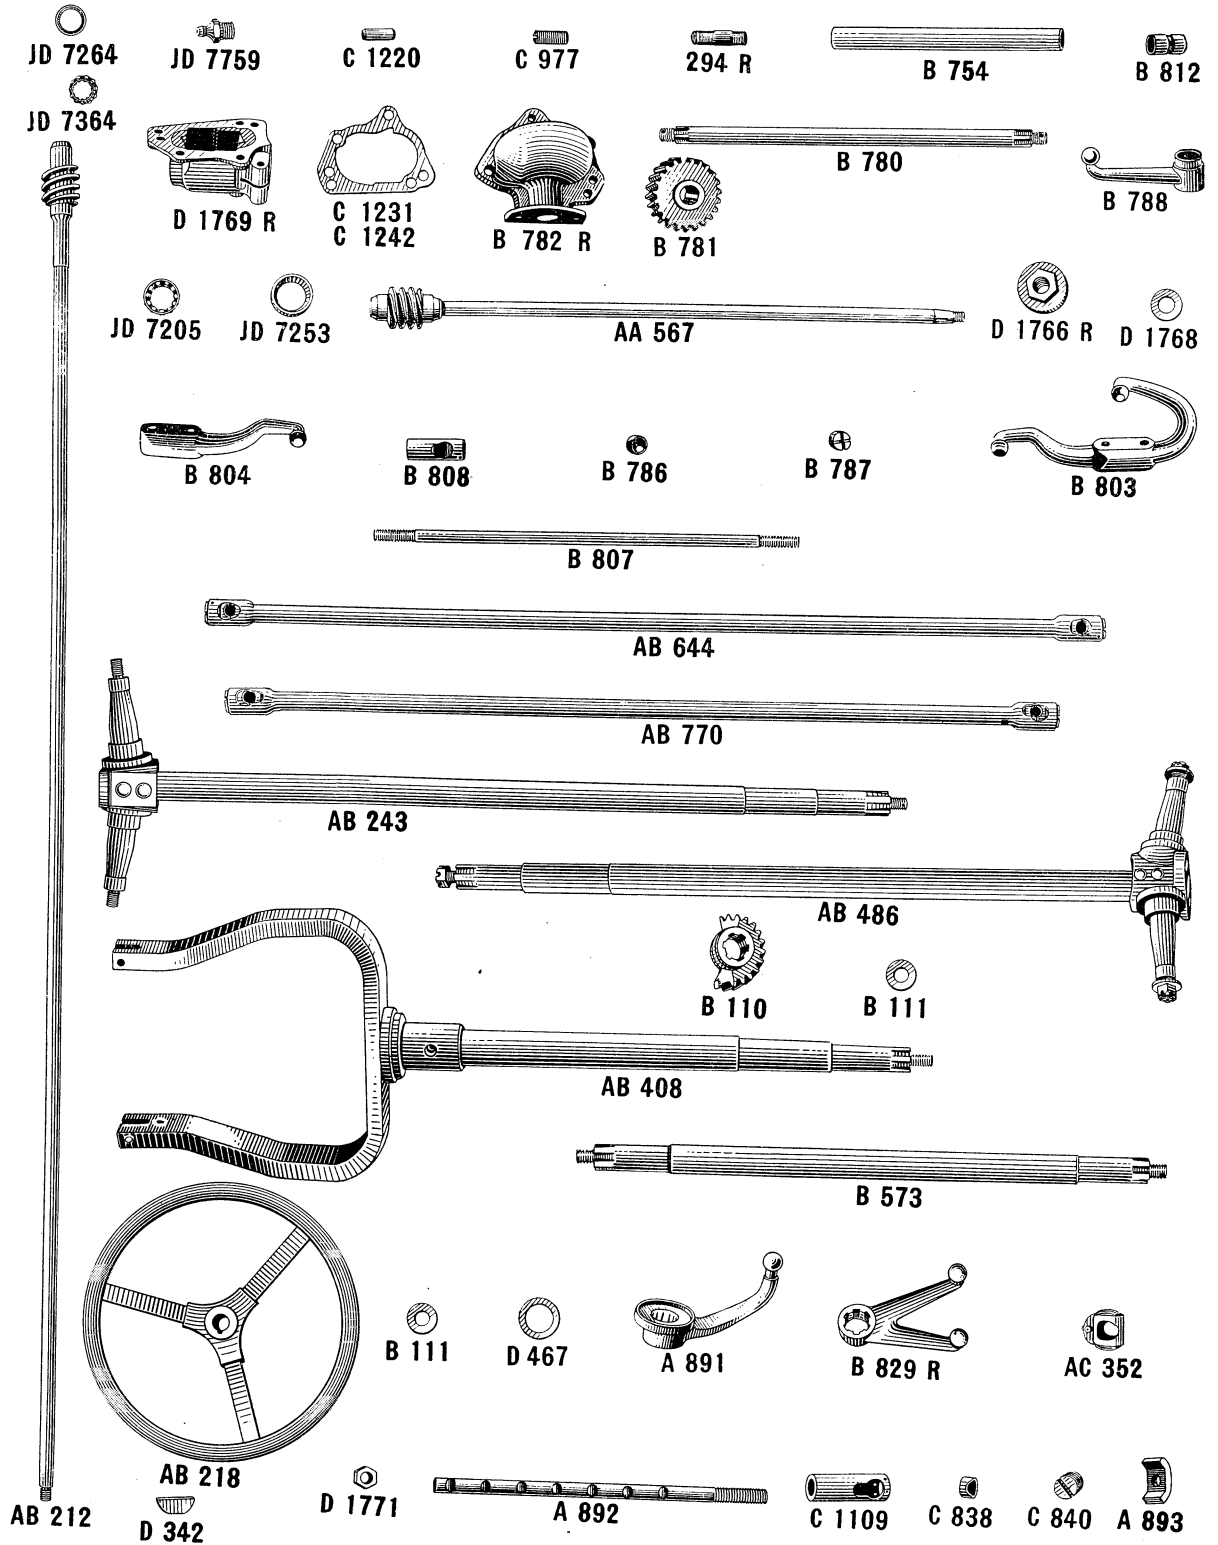


Plate No. 63

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

DRAWBAR AND SEAT



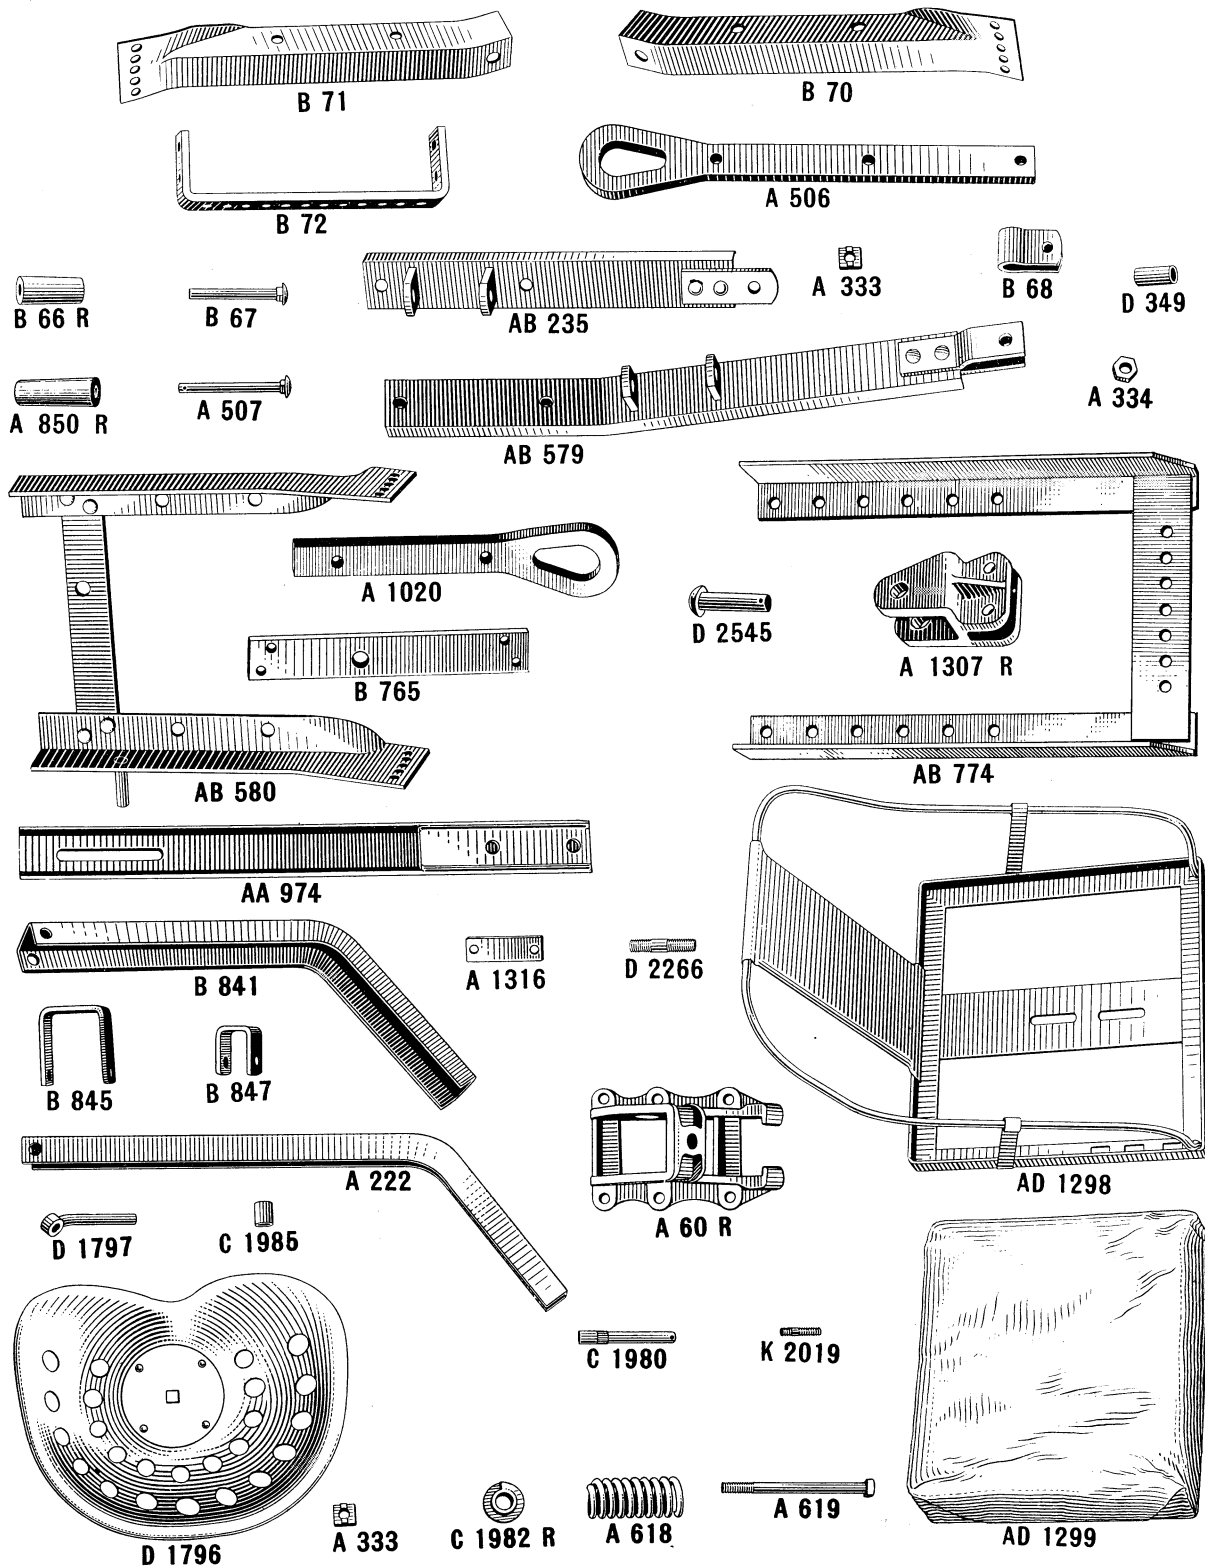



Plate No. 64

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**PLATFORM****Plate No. 65**

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

PLATFORM—Continued

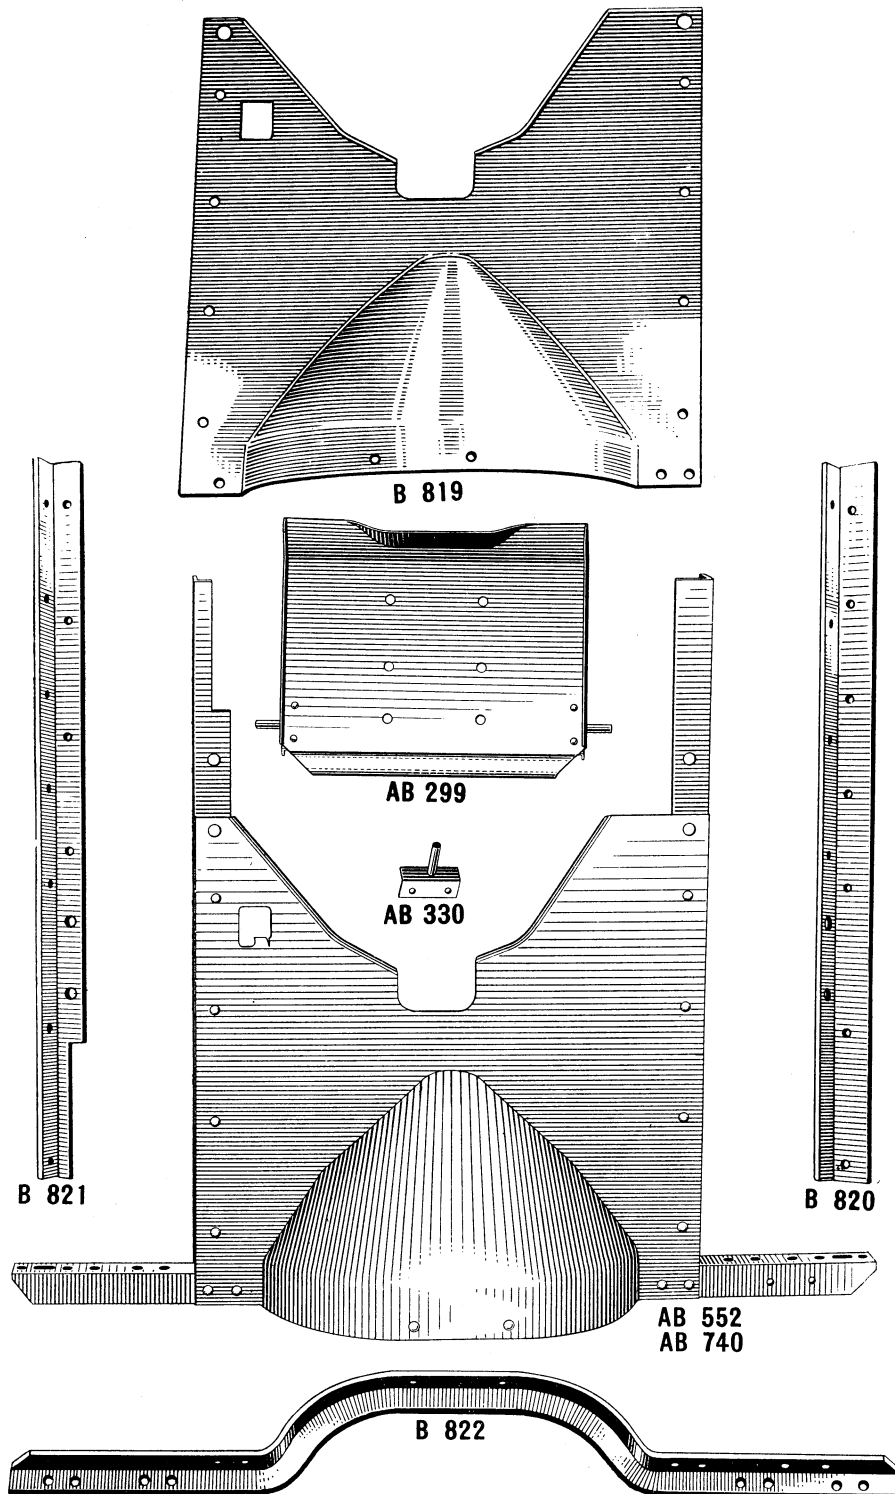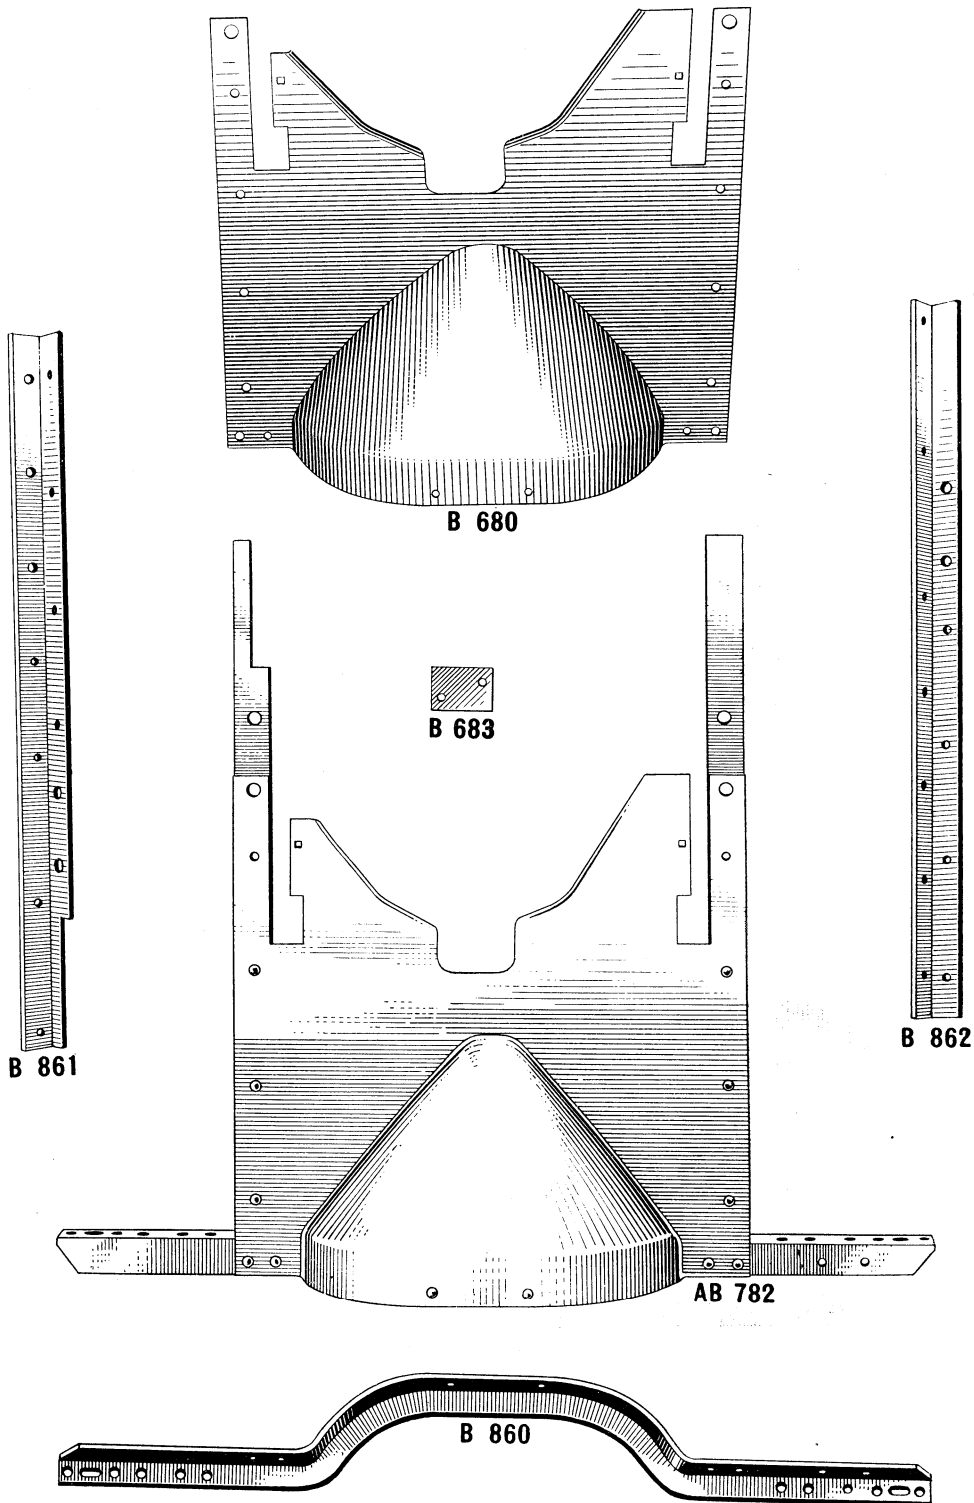

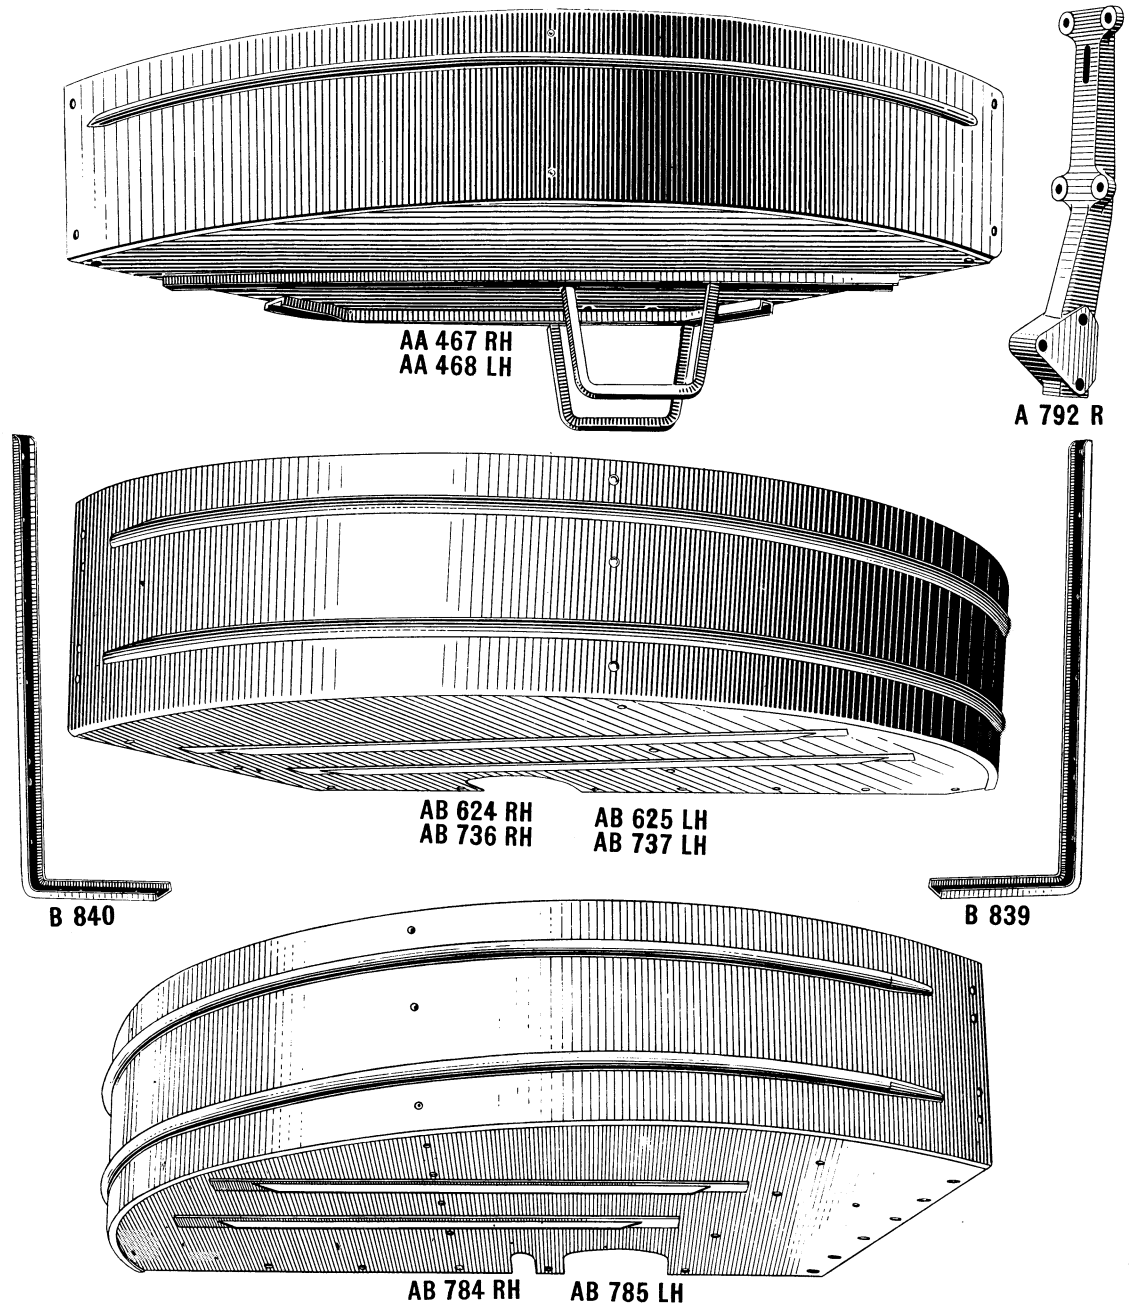REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS**FENDERS****Plate No. 67**

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

FENDERS—Continued


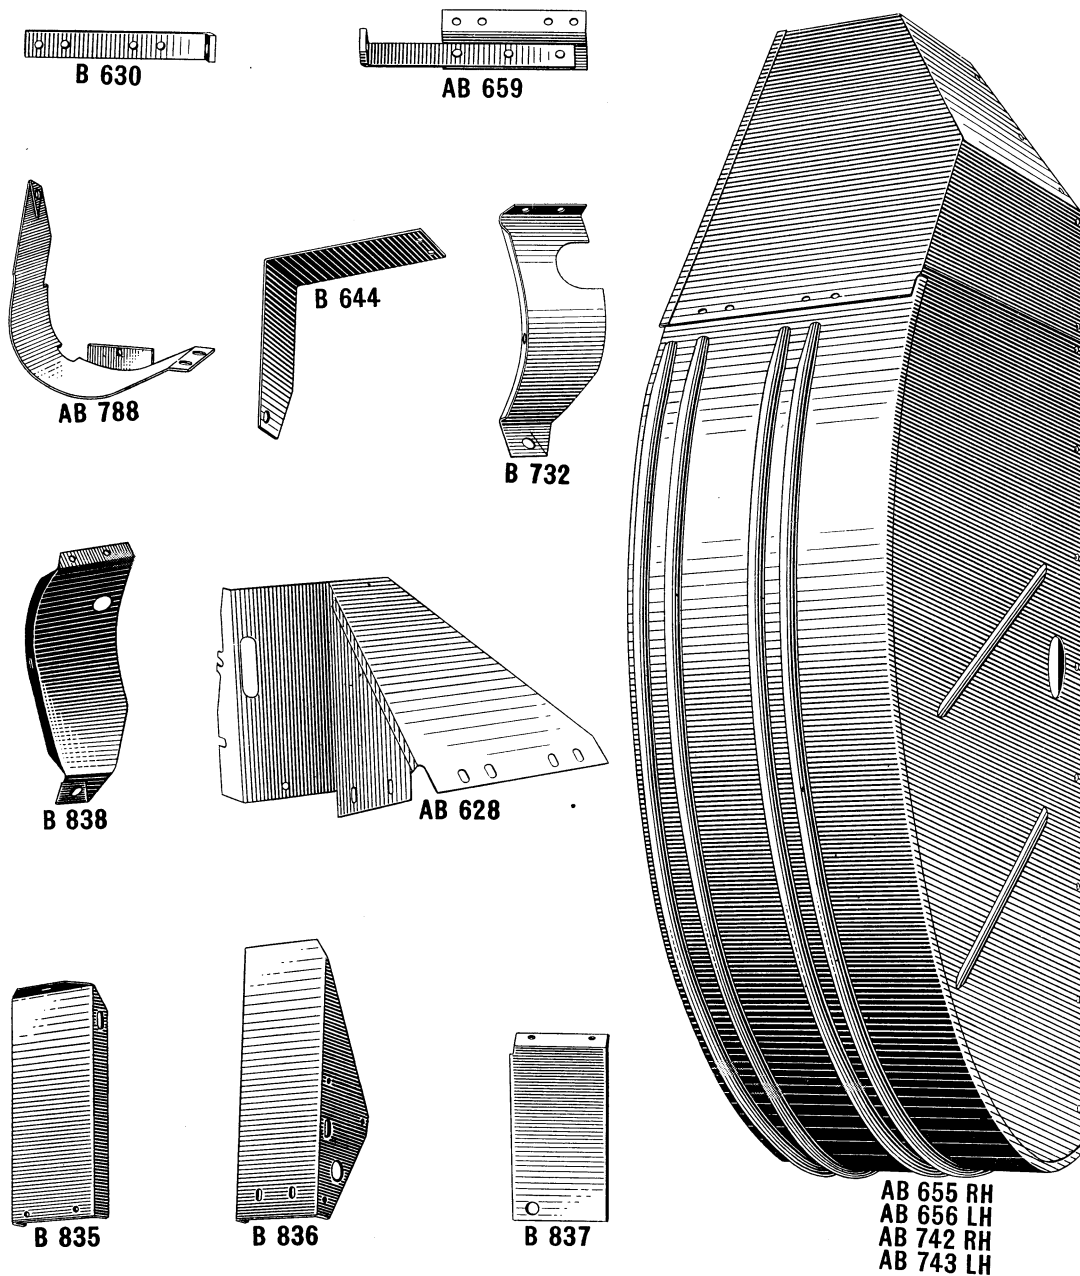



Plate No. 68

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS


AIR CLEANER

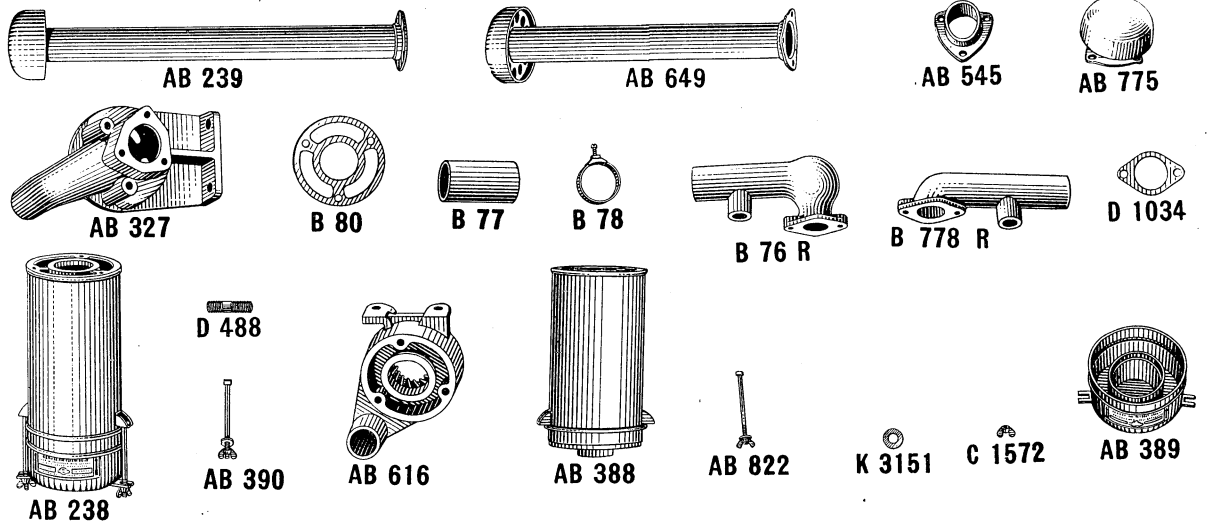

TOOL BOX AND TOOLS

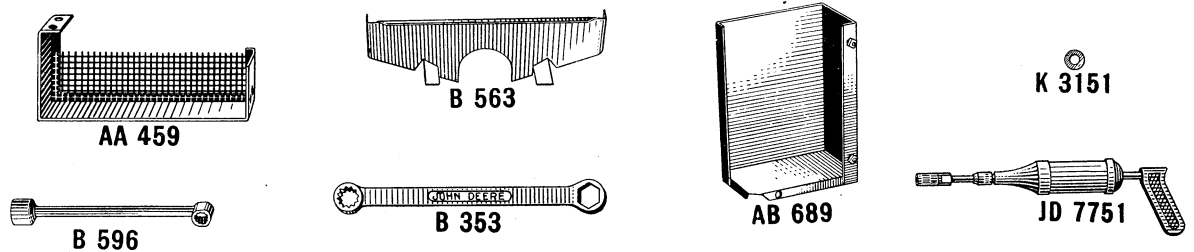

MAGNETO

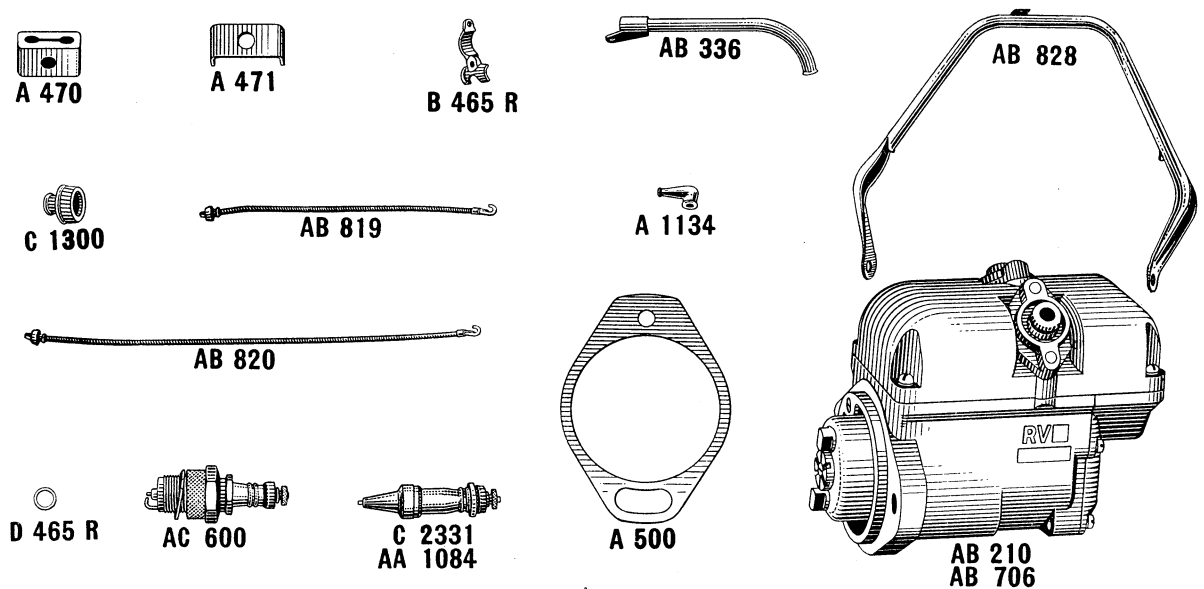

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

MAGNETO PARTS

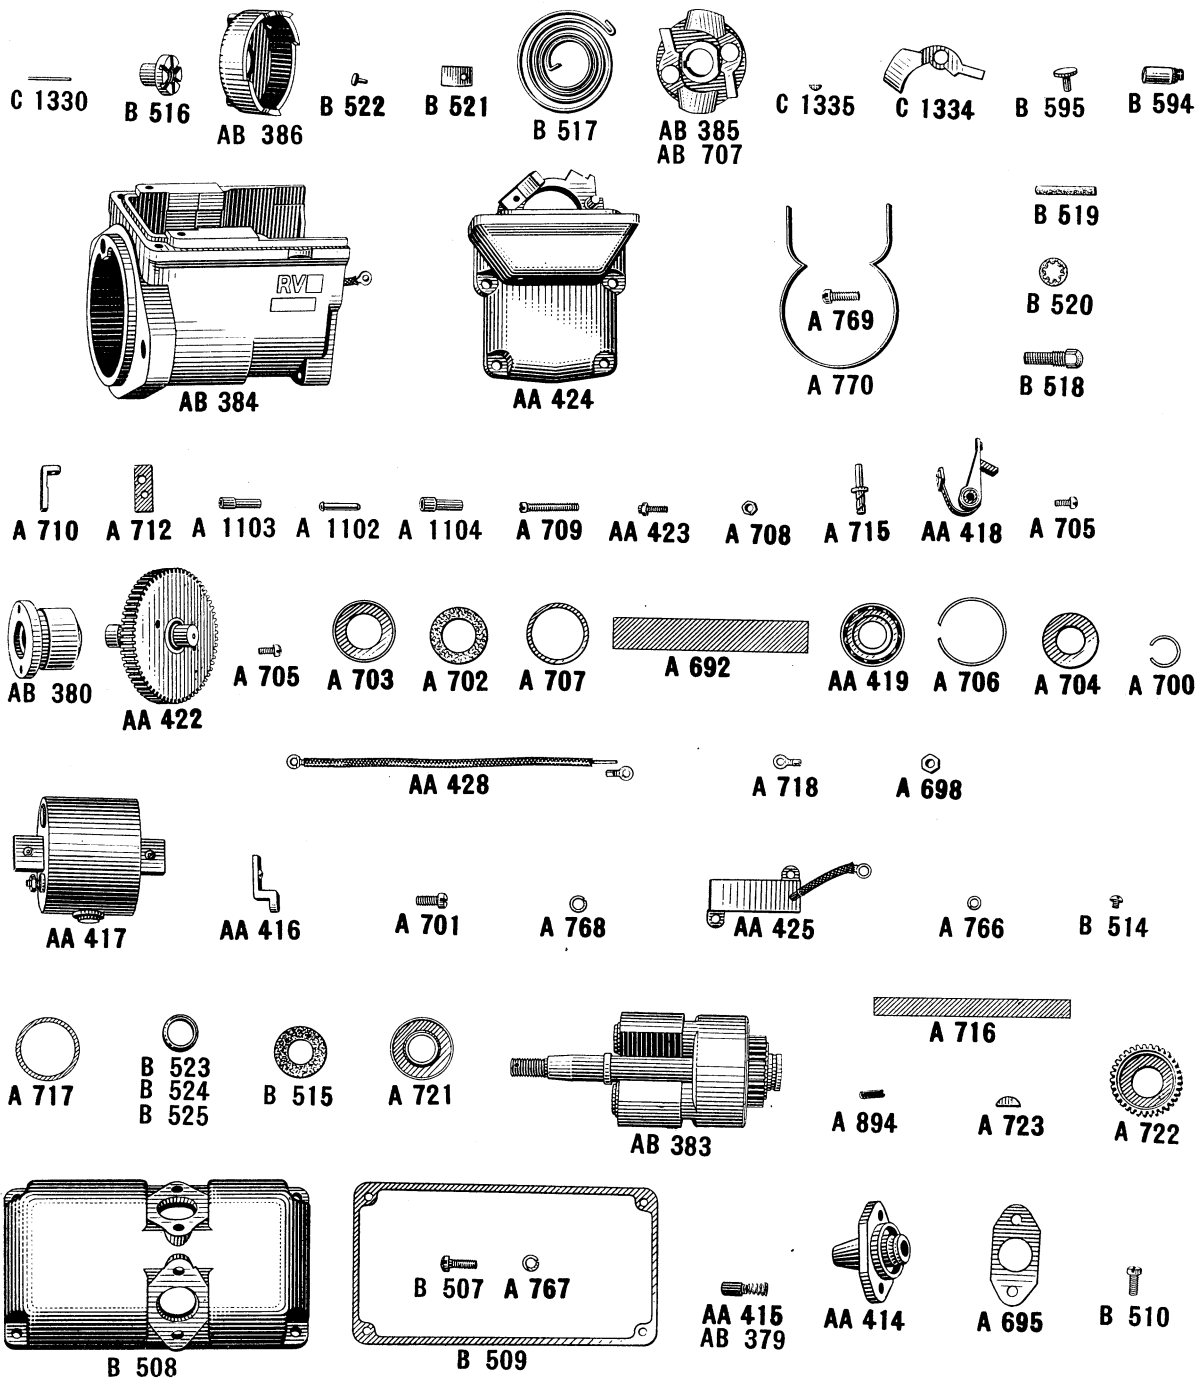


Plate No. 70

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

CARBURETOR

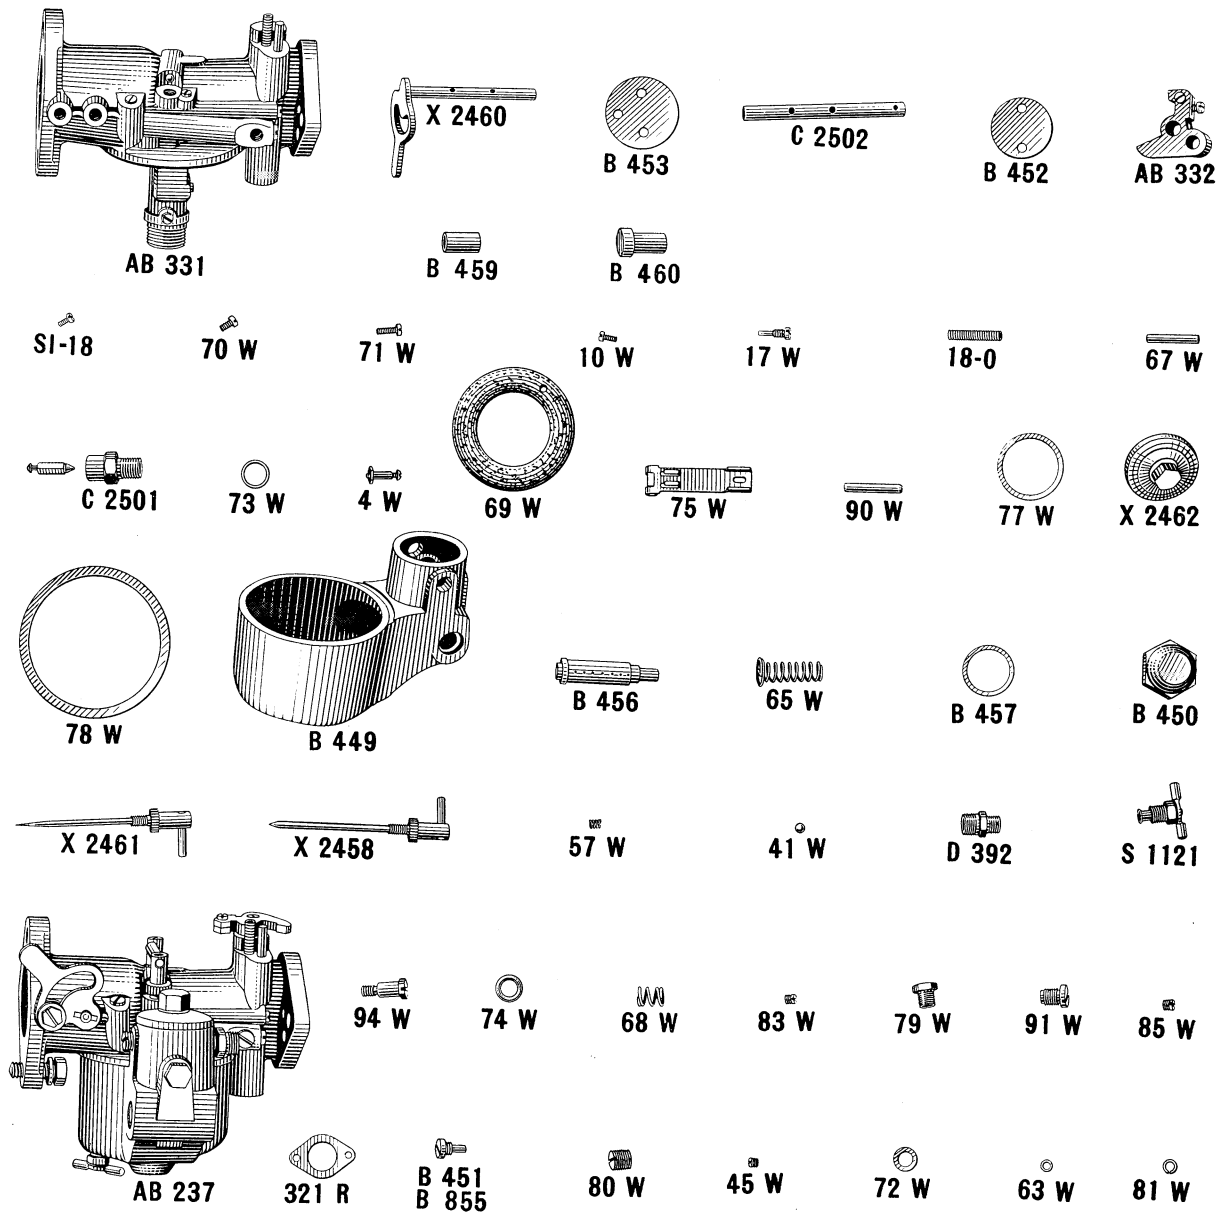



Plate No. 71

POWER LIFT



REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

POWER LIFT—Continued

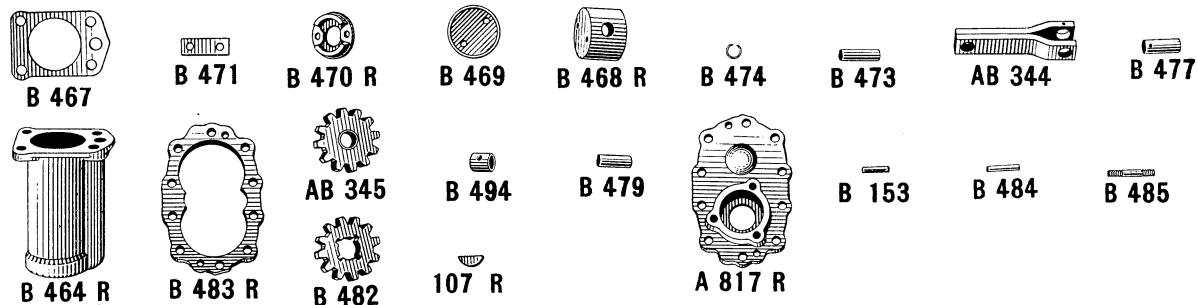

POWER SHAFT PARTS


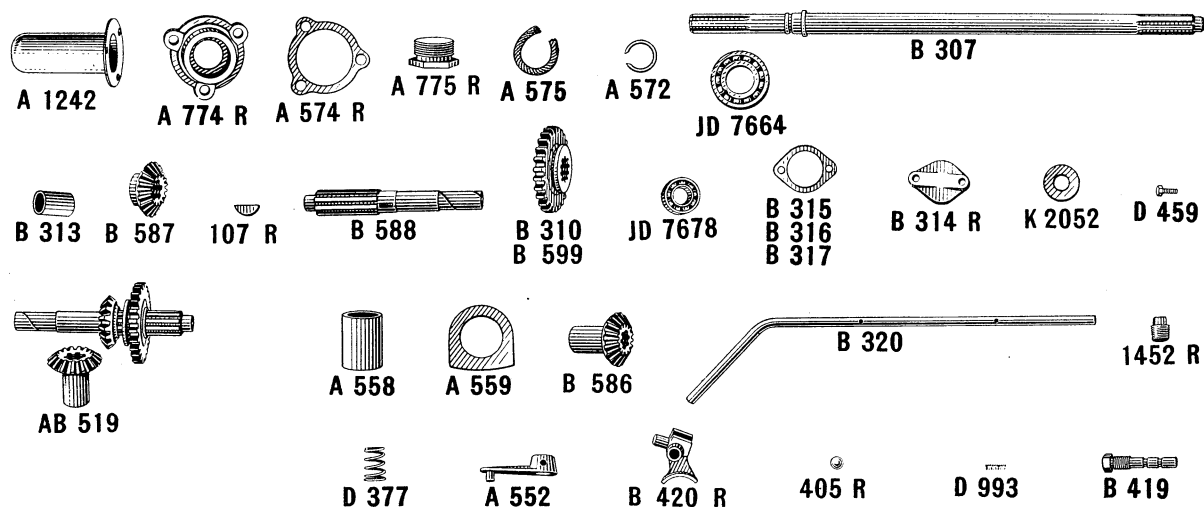



Plate No. 73

REPAIR PARTS FOR MODELS B, BN, BW, BR, BO, AND BI TRACTORS

LIGHTING EQUIPMENT

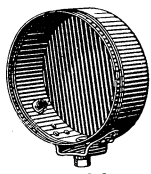


D 2144

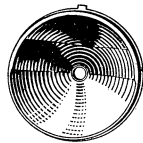

D 2142



D 2146

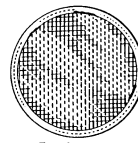

D 2147

 


D 2149

D 2141

C 1592

D 2569



D 2143

D 2148

D 2145


D 1108

AA 836
AA 837

AA 835

AA 834

A 1225

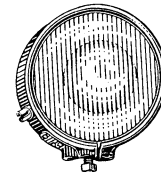

AA 832



 
A 1105




A 1219




A 1220



AA 826

 

AA 828

 

AA 827




AA 831



A 1216



A 1202

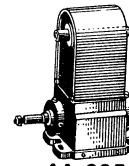

AA 825

A 1205

A 1206

A 1207



A 1212



A 1231

D 1124

A 1208

A 1209

AA 829

A 1201

AA 830

A 1200

A 1210

A 1215

A 1203

A 1211

 
A 1204

A 767


A 1213

A 1214

D 1158



A 1227

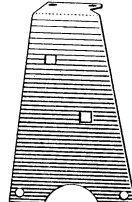

B 300



AA 839



A 1228




A 1230

INDEX


General Purpose, Wide Tread and Orchard Tractors

General Purpose
Tractors


Subject	Page	Subject	Page
Air Cleaner	187	Illustrations of Repair Parts	202
Auxiliary Air Cleaner and Stack	189	Lighting Equipment	191
Brakes	172	Lubricating System and Oil Pump	161
Breather, Crank Case	160	Magneto	179
Cam Followers	156	Magneto Parts	180
Cam Shaft	156	Manifold	156
Carburetors	184	Muffler and Spark Arrester	157
Casting Numbers	200	Oil Filter and Indicator	161
Clutch	000	Oil Pipes and Fittings	162
Connecting Rods	155	Pedestal	174
Controls	159	Pistons, Connecting Rods, and Crankshafts	155
Cooling System	163	Platform	178
Crank Case Ventilator	160	Plow Shifter	177
Crankshaft	155	Power Lift Parts	190
Cylinder Head	157	Power Shaft Parts	189
Cylinders, Valves and Manifolds	156	Pulley and Clutch	166
Differential	168	Radiator Guard and Curtain	164
Drawbar	177	Reverse Shaft	167
Engine	154	Seat	177
Fan	165	Spline Shaft	166
Fenders	178	Steering Parts	175
Final Drive	168	Swing Seat	178
Front Axle and Front End Support	172	Tool Box and Tools	189
Front Wheels	173	Transmission Case	154
Front Wheels and Front Wheel Equipment	174	Valves	156
Fuel System	162	Water Feed	157
Gear Shift	167	Wheels and Equipment, Rear	170
Generator	192	Wheel Scrapers	171
Governor	158		
Hardware List	194		
Hood	163		

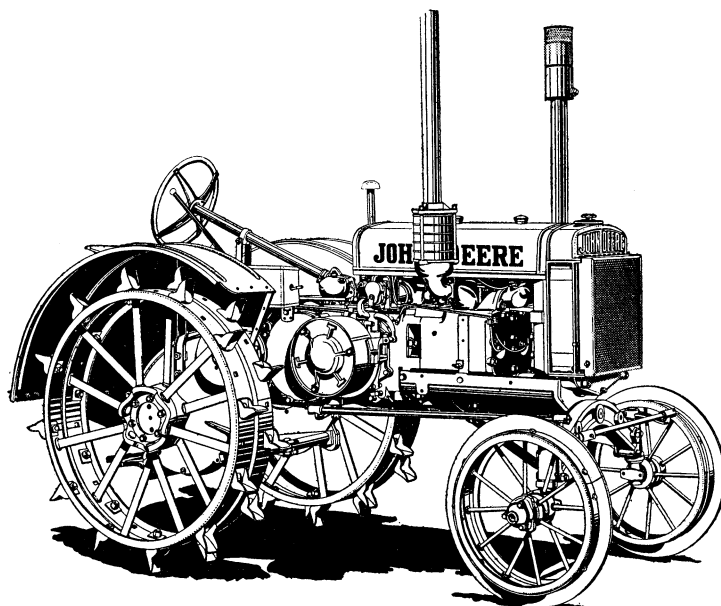

John Deere General Purpose Standard Tread Tractor

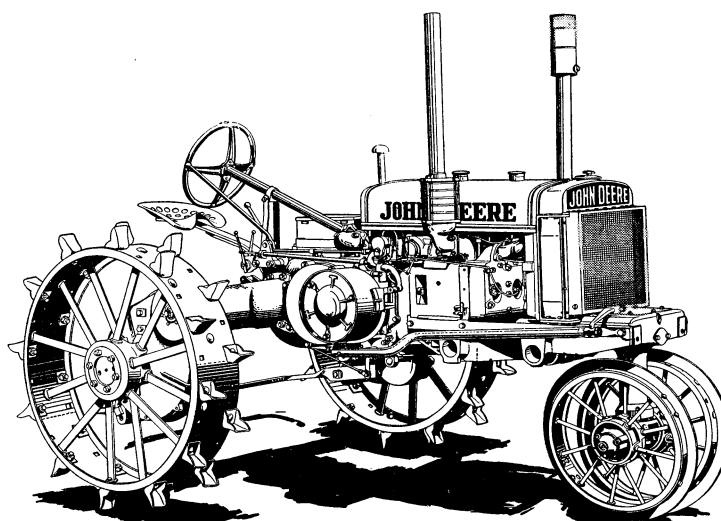

John Deere General Purpose Wide Tread Tractor

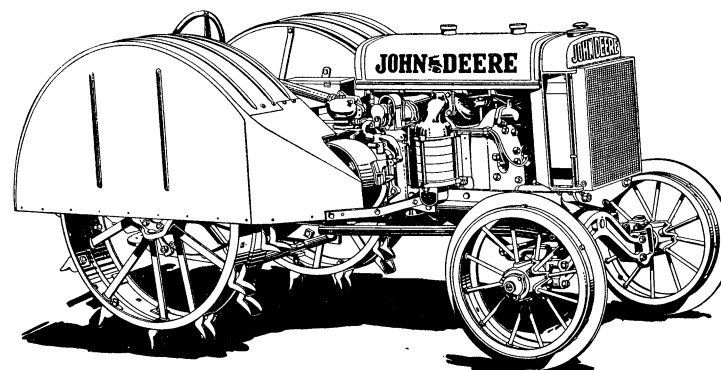

John Deere Orchard and Field Tractor

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
TRANSMISSION CASE					
AC166	Gasket, Complete, Rear Cover.....	200111-	400000-	0-15000-	75
AC255	Case, C300R, Transmission, Main..	200111-224099	400000-404809		
AC652	Case, C1733R, Transmission, Main..	224100-		0-15000-	
AC934	Breather Body and Crank Case Cover		404810-		75
AC1021	Case, C2310R, Transmission, Main..		404810-		
C598	Gasket, Power Shaft Housing Cover to Case.....	200111-202557			75
C698	Cover, Power Shaft Opening.....	200111-202557			75
C719	Stud, Differential Quill to Case.....	200111-	400000-	0-15000-	75
C783	Stud, Cylinder to Case, Long.....	200111-	400000-	0-15000-	75
C826	Stud, Cylinder to Case, Short.....	200111-	400000-	0-15000-	75
C826	Stud, Front End to Case.....	200111-	400000-	0-15000-	75
C960	Cover, Front.....	200111-223802	400000-402444		75
C961	Cover, Rear.....	200111-			75
C1001	Gasket, Complete, Front Cover.....	200111-	400000-	0-15000-	75
C1019	Stud, Control Quadrant to Case.....	200111-	400000-	0-15000-	75
C1038	Washer, Cover, Cap Screw.....	200111-	400000-	0-15000-	75
C1244	Cover, Power Shaft Opening.....	202558-		0-15000-	75
C1245	Gasket, Power Shaft Housing Cover to Case.....	202558-		0-15000-	75
C1493	Cover, Rear.....		400000-	0-15000-	75
C1808R	Cover, Front.....	223803-	402445-	0-15000-	75
D625	Pipe Plug, Transmission Filler and Oil Drain.....	200111-	400000-	0-15000-	75
D625	Pipe Plug, Crank Case Drain.....	200111-	400000-	0-15000-	75
E1976	Plug, Oil Sump Drain and Trans- mission Case Oil Level.....	200111-	400000-	0-15000-	75
JD7759	Alemite Zerk Fitting, Alemite Mod- el 1610, Steering Shaft Lower Bushing, 1/8" (Purchase Locally)	223538-	402169-	0-15000-	78
294R	Stud, Steering Gear Housing to Case	200111-	400000-404809	0-15000-	75
629R	Washer, Rear Cover Screw.....	223803-	402445-	0-15000-	75
ENGINE					
AC125	Flywheel C241R, with Bolts and Dowel Pin.....	200111-	400000-	0-15000-	75
AC161	Main Bearing Housing, C33R, with Cap, L. H.....	200111-224099	400000-		75
AC162	Main Bearing Housing, C32R, with Cap, R. H.....	200111-224099	400000-		75
AC457	Bushing, Main Bearing (2 Halves)...	200111-224099	400000-		75
AC645	Main Bearing Housing, C1740R, with Cap, R. H.....	224100-		0-15000-	75
AC646	Main Bearing Housing, C1741R, with Cap, L. H.....	224100-		0-15000-	75
AC653	Bushing, Main Bearing (2 Halves)...	224100-		0-15000-	75
C35R	Cover, L. H., Main Bearing.....	200111-224099	400000-		75
C138R	Collar, Flywheel Spacing.....	200111-	400000-	0-15000-	75
C602	Gasket, L. H., Main Bearing Cover.	200111-224099	400000-		75
C618	Adjusting Screw, L. H., Main Bearing	200111-224099	400000-		75
C673	Gasket, L. H., Main Bearing Hous- ing to Case.....	200111-	400000-	0-15000-	75
C981	Bolt, Flywheel.....	200111-	400000-	0-15000-	75
C1096	Cap Screw, Main Bearing, 1/2"x 1-1/4" (Drilled).....	224100-		0-15000-	75
C1743R	Cover, L. H., Main Bearing.....	224100-		0-15000-	75
C1745	Gasket, L. H., Main Bearing Cover	224100-		0-15000-	75
C1748	Cap Screw, Main Bearing Cap, 5/8"x 2-1/2" (Drilled).....	224100-		0-15000-	75
C1793	Shim, Main Bearing, Laminated.....	224100-		0-15000-	75
C1955	Shim, Main Bearing, Laminated.....	200111-224099	400000-		75
D174	Adjusting Screw, R. H., Main Bearing	200111-224099	400000-		75
D186	Dowel Pin, Flywheel, 1/4"x1/2" Round.....	200111-226599	400000-404052		75
D463	Welsh Plug, L. H., Main Bearing Housing.....	224100-		0-15000-	75
D626	Felt, R. H., Main Bearing.....	200111-	400000-	0-15000-	75
D1080	Screw, Flywheel, Locating.....	200111-	400000-	0-15000-	75

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
ENGINE—Continued					
D2009 1215R	Dowel Pin, Flywheel, 1/4" Square.. Nut, Main Bearing Adjusting Screw.	226600— 200111-224099	404053— 400000—	0-15000—	75
PISTONS, CONNECTING RODS, AND CRANKSHAFTS					
AC177	Crankshaft, C225R, with Gear.....	200111-224099	400000—	75
AC193	Connecting Rod, C226R, Complete..	200111-226401	400000-403960
AC194	Connecting Rod, C226R, and Cap with Piston Pin Bushing.....	200111-226401	400000-403960	76
AC456	Bushing, Connecting Rod (2 Halves)	200111—	400000—	0-15000—	76
AC639	Crankshaft, C1734R, with Gear....	224100—	0-15000—	75
AC763	Connecting Rod, C1922R, Complete	226402—	403961—	0-15000—
AC764	Connecting Rod, C1922R, with Pist- on Pin Bushing.....	226402—	403961—	0-15000—	76
AC1112	Piston with Rings, 5-3/4"	200111-223802	400000-402039	76
AC1113	Piston with Rings, 5-3/4", .045" Oversize.....	200111-223802	400000-402039	76
AC1114	Piston with Rings, 5-3/4", .090" Oversize.....	200111-223802	400000-402039	76
AC1115	Piston with Rings, 6"	226402—	403961—	0-15000—	76
AC1116	Piston with Rings, 6", .045" Over- size.....	226402—	403961—	0-15000—	76
AC1117	Piston with Rings, 6"	223803-226401	402040-403960	76
AC1118	Piston with Rings, 6", .045" Over- size.....	223803-226401	402040-403960	76
AD102	Bolt with Nut and Cotter, Connect- ing Rod.....	200111—	400000—	0-15000—	76
C150	Gear, Crankshaft.....	200111—	400000—	0-15000—	75
C921	Pin, Piston (Two Flat Spots for Set Screws D334).....	200111-223768	400000-402039	76
C1015	Ring, Piston, Oil Control, 5-3/4"...	200111-223802	400000-402039	76
C1099	Bushing, Piston Pin.....	200111—	400000—	0-15000—	76
C1404	Ring, Oil Control, 5-3/4", .045" Oversize (1 used per Piston).....	200111-223802	400000-402039	76
C1405	Ring, Oil Control, 5-3/4", .090" Oversize (1 used per Piston).....	200111-223802	400000-402039	76
C1480	Pin, Piston, .005" Oversize (Two Flat Spots for Set Screws, D334)...	200111-223768	400000-402039	76
C1707	Pin, Piston (Two Flat Spots for Set Screws, D334).....	223803-226401	402040-403960	76
C1720	Ring, Piston, 1/4"x6" (3 used on each 4 Ring Piston; 5 used on each 5 Ring Piston).....	223803—	402040—	0-15000—	76
C1721	Ring, 1/4"x6", Piston, Oil Drain (1 used per Piston).....	223803-226401	402040-403960	76
C1761	Ring, 3/16"x5-3/4", Piston (5 used per Piston).....	200111-223802	400000-402039	76
C1763	Pin, Piston (One Taper Hole for Set Screw, C1764).....	200111-223802	400000-402039	76
C1764	Set Screw, Piston Pin (Taper Type)	200111-223802	400000-402039	76
C1772	Ring, Piston, 5-3/4", .045" Oversize	200111-223802	400000-402039	76
C1774	Ring, Piston, 5-3/4", .090" Oversize	200111-223802	400000-402039	76
C1794	Shim, Connecting Rod, Laminated..	200111—	400000—	0-15000—	76
C1924	Pin, Piston, 6" (1 Taper Hole for Set Screw, C1925).....	226402—	403961—	0-15000—	76
C1925	Set Screw, Piston Pin (6" Taper Type).....	226402—	403961—	0-15000—	76
C2144	Ring, Piston, 6", .045" Oversize....	223803—	402040—	0-15000—	76
C2390	Piston Pin, .005" Oversize.....	226402—	403961—	0-15000—	76
C2417	Piston Pin, .005" Oversize (1 Taper Hole for Set Screw, C1764).....	200111-223802	400000-402039	76
D186	Dowel Pin, Crankshaft, 1/4"x1/2"...	200111—	400000—	0-15000—	75
D334	Set Screw, Piston Pin.....	200111-223768 223803-226401	400000-403960	76
D342	Key, Gear to Crankshaft.....	200111—	400000—	0-15000—	75

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
CAM SHAFT					
AC80	Bearing, C178R, Cam Shaft, R. H., with Cup.....	200111-	400000-	0-15000-	77
AC81	Bearing, C179R, Cam Shaft, L. H., with Cup.....	200111-	400000-	0-15000-	77
AC276	Gear, C304R, Cam Shaft, Complete with Governor Drive Gear.....	200211-	400000-404809	0-15000-	77
AC564	Cam Shaft, C397R, with Woodruff Key.....	200211-	400000-	0-15000-	77
C305	Clamp Ring, Cam Gear.....	200211-	400000-	0-15000-	77
C528	Cap Screw, Cam Gear, 3/8"x1-1/2" (Drilled Head).....	200111-	400000-	0-15000-	77
C759	Gasket, Cam Shaft, Bearing, L. H....	200111-	400000-	0-15000-	77
C784	Spring, Cam Shaft Thrust.....	200111-	400000-	0-15000-	77
C2207	Gear, Cam Shaft.....	200111-	404810-	0-15000-	77
D659	Key, Cam Gear to Shaft.....	200111-215717	400000-400804	0-15000-	77
D1164	Key, Cam Shaft Gear.....	215718-	400805-	0-15000-	77
JD7250	Cup, Cam Shaft Bearing.....	200111-	400000-	0-15000-	77
JD7358	Cone, with Rollers, Cam Shaft Bear- ing.....	200111-	400000-	0-15000-	77
CAM FOLLOWER					
C37R	Guide, Cam Follower.....	200111-	400000-	0-15000-	77
C420	Adjusting Screw, Cam Follower.....	200111-	400000-	0-15000-	77
C624	Cam Follower.....	200111-	400000-	0-15000-	77
C1592	Lock Nut, Cam Follower Adjusting Screw.....	200111-	400000-	0-15000-	77
CYLINDERS, VALVES AND MANIFOLDS					
AC251	Manifold, C295R, Intake and Ex- haust with Exhaust Elbow Studs..	200111-223802	400000-402039	0-15000-	76
AC256	Cylinder, 5-3/4", C301R, Complete with Studs, Valve Guides, Valves and Springs.....	200111-223802	400000-402039	0-15000-	76
AC257	Cylinder, 5-3/4", C301R, Complete with Studs and Valve Guides.....	200111-223802	400000-402039	0-15000-	76
AC566	Cap, Valve Spring, C1604, with Lock Washers.....	200111-210795	400000-400084	0-15000-	76
AC567	Cap, Valve Spring, C1604, with Lock Washers.....	210796-216011	400085-400718	0-15000-	76
AC619	Cylinder, 6", C1700R, Complete with Studs and Guides.....	223803-	402040-	0-15000-	76
AC620	Cylinder, 6", C1700R, Complete with Studs, Guides and Valves....	223803-	402040-	0-15000-	76
AC694	Manifold with Exhaust Elbow.....	200111-223802	402040-402444	0-15000-	76
AC886	Cylinder, AC257, with Pistons, Rings and Gaskets.....	200111-223802	400000-402039	0-15000-	76
AC887	Cylinder, AC619, with Pistons, Rings and Gaskets.....	223803-226401	402040-403960	0-15000-	76
AC888	Cylinder, AC619, with Pistons, Rings and Gaskets.....	226402-	403961-	0-15000-	76
AC901	Valve Spring, Cap and Centering Washer.....	200111-	400000-	0-15000-	76
C246R	Guide, Valve.....	200111-	400000-	0-15000-	76
C248R	Exhaust Elbow.....	200111-223802	400000-402039	0-15000-	76
C882	Cap Screw, Front End to Cylinder (Drilled Head).....	200111-	400000-	0-15000-	76
C1002	Gasket, Valve Cover.....	200111-	400000-	0-15000-	76
C1003	Gasket, Cylinder to Case.....	200111-	400000-	0-15000-	76
C1006	Gasket, Manifold to Cylinder.....	200111-223802	400000-402039	0-15000-	76
C1009	Cover, Valve.....	200111-	400000-	0-15000-	76
C1012	Valve, Intake and Exhaust.....	200111-	400000-	0-15000-	76
C1174	Stud, Manifold to Cylinder.....	200211-223802	400000-402039	0-15000-	76
C1604	Cap, Valve Spring.....	216012-229835	400719-	0-15000-0-15503	76
C1605	Lock Washer, Valve Stem (One-Half) Inch.....	216012-	400719-	0-15000-	76
C1606	Washer, Valve Spring, Centering	216012-229835	400719-	0-15000-0-15503	76
C1627R	Manifold (used in AC576 Assembly)				
C1628R	Choke Sleeve (used in AC576 As- sembly).....				76

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
CYLINDERS, VALVES AND MANIFOLDS—Continued					
C1723	Gasket, Manifold	223802—	402040—404809	0—15000—	76
C1791R	Manifold	223802—226401	402445—403960		76
C1823	Stud, Cylinder Head, Long, 5/8"x 6-3/8" (2 used)	223803—	402445—	0—15000—	76
C1908R	Manifold	226402—	403961—404809	0—15000—	76
C2109	Valve Spring	229836—		0—15504—	76
C2110	Centering Washer, Valve Spring	229836—		0—15504—	76
C2299	Manifold		404810—		76
C2300	Gasket, Manifold		404810—		76
D488	Stud, Manifold, 1/2"x2"		404810—		76
D625	Pipe Plug, 1-1/2", Cylinder Block	225034—	402035—	0—15000—	75
D1721	Cap, Valve Spring	229836—		0—15504—	76
D1865	Compression Relief Cock	200111—	400000—	0—15000—	76
K2198	Stud, for Cylinder Head, Short, 5/8" x5-7/8" (14 used)	200111—	400000—	0—15000—	76
K2525	Plug, Valve Oil Drain, Cylinder	200111—	400000—	0—15000—	76
14R	Stud, Manifold to Cylinder	223803—	402040—404809	0—15000—	76
294R	Stud, Exhaust Elbow to Manifold	200111—223802	400000—402039		76
321R	Gasket, Carburetor to Manifold	200111—	400000—	0—15000—	76
WATER FEED					
AC181	Water Valve, Complete	200111—223802	400000—402039		
AC274	Water Feed Pipe	200211—223802	400000—402039		77
C299	Body, Water Feed Valve	200211—223802	400000—402039		77
C663	Check, Water Valve	200211—223802	400000—402039		77
C975	Elbow, Water Feed Pipe to Cylinder	200211—223802	400000—402039		77
C1181	Nozzle, Water Valve	200211—223802	400000—402039		77
C1225	Washer, Lead, Water Valve Nozzle	200211—223802	400000—402039		77
D410	Packing Nut, Needle Valve	200211—223802	400000—402039		77
D449	Packing Nut, Water Feed	200211—223802	400000—402039		77
D451	Needle Valve, Water Feed	200211—223802	400000—402039		77
E2149	Nut, Solder Bushing, Water Feed Pipe, 5/16"	200211—223802	400000—402039		77
E2150	Gland, Solder Bushing, Water Feed Pipe, 5/16"	200211—223802	400000—402039		77
MUFFLER AND SPARK ARRESTER					
AC970	Muffler, Complete		404810—		77
AC971	Elbow with Flange, Exhaust		404810—		77
AD829	Lower Elbow, D1919R, with Studs	223803—	402445—	0—15000—	77
AD894	Muffler, Stack and Flange	223803—	402442—		77
C1280R	Elbow, Muffler and Spark Arrester, Lower	200111—223802	400000—402029		77
C2000R	Flange Casting			0—15000—	77
D1440	Pipe, Muffler and Spark Arrester	200111—223802	400000—402029		77
D1441	Finned Section, Muffler and Spark Arrester	200111—223802	400000—402029		77
D1442	Cap, Muffler and Spark Arrester	200111—223802	400000—402029		77
D1443R	Elbow, Muffler and Spark Arrester	200111—223802	400000—402029		77
D1922	Cap	223803—	402445—	0—15000—	77
D1923	Finned Section	223803—	402445—	0—15000—	77
D1924R	Spacing Collar	223803—	402445—	0—15000—	77
D1925	Stud, 1/2"x9-1/8"	223803—	402445—	0—15000—	77
CYLINDER HEAD					
AC600	Spark Plug	223803—	402040—	0—15000—	100
C250R	Cylinder Head	200111—223802	400000—402039		76
C251R	Water Inlet Pipe, Cylinder Head	200111—	400000—	0—15000—	76
C1005	Gasket, Head to Cylinder	200111—223802	400000—402039		76
C1600	Spark Plug	200111—223802	400000—402039		100
C1626R	Cylinder Head	212555—223802	400538—402039		76
C1701R	Cylinder Head	223803—	402040—	0—15000—	76
C1709	Gasket, Head to Cylinder	223803—	402040—	0—15000—	76
D465	Gasket, Spark Plug	223803—	402040—	0—15000—	100
K2525	Plug, Cylinder Head Drain	200111—202798			76
1450R	Plug, Cylinder Head (Side)	223803—	402040—	0—15000—	76

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	GOVERNOR				
AC201	Weight, Governor (Replaced by AC669)				
AC276	Gear, Governor Drive with Cam Shaft Gear	200211-	400000-404809	0-15000-	77
AC283	Sleeve, Governor Shaft	200211-228220	400000-404557	0-15000-0-15172	78
AC344	Case, Governor, C306R, with Plug	200211-228220	400000-404557	0-15000-0-15172	78
AC438	Shaft, Governor, C1193, with Governor Gear, C1195	200111-209462			78
AC441	Shaft, Governor, C1193, with Magneto Drive Flange, C363R	200111-209462			78
AC657	Filler Pipe, with Cap, Crank Case	200211-223802	400000-		78
AC667	Governor Weight (Repairs for AC669)	200111-	400000-	0-15000-	78
AC669	Governor Weights (Replaces 2 AC201)	200111-223768	400000-402200		
AC851	Shaft, Inside Governor Fork with Screws	200111-	400000-	0-15000-	78
AC854	Sleeve, Governor	228221-	404558-	0-15173	78
C308	Gear, Fan Drive Bevel	200211-	400000-404809	0-15000-	78
C311R	Housing, R. H., Governor Bearing	200211-228220	400000-404557	0-15000-0-15172	78
C363R	Flange, Magneto Drive	209463-228220	400000-404557		78
C609	Gasket, Governor Case to Main Case	200111-228220	400000-404557	0-15000-0-15172	78
C902	Pin, Governor, Weight to Gear	200111-	400000-	0-15000-	78
C950	Fork, Governor, Inside	200111-	400000-	0-15000-	78
C998	Thrust Bearing, Complete	200111-	400000-	0-15000-	78
C1193	Shaft, Governor (see AC438)	209463-228220	400000-404557	0-15000-0-15172	78
C1195	Gear, Governor (see AC438)	209463-228220	400000-404557	0-15000-0-15172	78
C1196	Snap Ring, L. H., Governor Bearing	200211-228220	400000-404557	0-15000-0-15172	78
C1197	Felt Washer, R. H., Governor Bearing	200211-228220	400000-404557	0-15000-0-15172	78
C1200	Nut, Slotted, Governor and Fan Shaft (See C1783)	200211-228220	400000-404557	0-15000-0-15172	78
C1201	Lock Nut, Fan Drive Bevel Gear	200211-228220	400000-404557	0-15000-0-15172	78
C1202	Lock Washer, Fan Drive Bevel Gear	200211-228220	400000-404557	0-15000-0-15172	78
C1209	Elbow, Oil Filler	200111-203035			78
C1364	Spring, Governor Weight (Replaced by AC669)				
C1783	Nut, Governor and Fan Shaft (.005 Undersize Threads)	200211-228220	400000-404557	0-15000-0-15172	
C2053R	Case, Governor	228221-	404558-404809	0-15173-	78
C2054	Shaft, Governor	228221-	404558-404809	0-15173-	78
C2055	Gear, Governor, Drive	228221-	404558-404809	0-15173-	78
C2057R	Flange, Magneto Drive	228221-	404558-	0-15173-	78
C2058	Felt Retainer, R. H., Governor Bearing	228221-	404558-	0-15173-	78
C2059	Washer, R. H., Governor Bearing, Felt Retainer (Steel)	228221-	404558-404809	0-15173-	78
C2060R	Housing, R. H., Governor Bearing	228221-	404558-404809	0-15173-	78
C2061	Washer, L. H., Bearing, Retaining	228221-	404558-	0-15173-	78
C2064	Spacer, R. H., Governor Bearing	228221-	404558-404809	0-15173-	78
C2067	Gasket, Governor Case to Main Case	228221-	404558-	0-15173-	78
C2068	Felt Washer, R. H., Governor Bearing	228221-	404558-	0-15173-	78
C2069	Gasket, R. H., Governor Bearing Housing (Thin)	228221-	404558-404809	0-15173-	78
C2070	Gasket, R. H., Governor Bearing Housing (Medium)	228221-	404558-404809	0-15173-	78
C2071	Gasket, R. H., Governor Bearing Housing (Thick)	228221-	404558-404809	0-15173-	78
C2072	Nut, 5/8", Governor Shaft Ends	228221-	404558-	0-15173-	
C2130	Reducer Bushing, Governor Case	223293-228220	402040-402444		78
C2200	Case, Governor		404810-		78
C2201	Shaft, Governor		404810-		78
C2202	Gear, Governor, Drive		404810-		78
C2203	Arm, Governor		404810-		78
C2204	Gear, Governor, Bevel		404810-		78
C2206	Spacer, Governor, R. H., Bearing		404810-		78
C2208	Gear, Magneto Drive		404810-		78
C2209	Shaft, Magneto Drive		404810-		78
C2211	Quill, Magneto Drive Shaft		404810-		78
C2212	Cork, Magneto Drive Shaft Quill		404810-		78

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	GOVERNOR—Continued				
C2213	Shim (Thick) Magneto Drive Shaft Quill.....		404810-		78
C2214	Shim (Thin) Magneto Drive Shaft Quill.....		404810-		78
C2216	Housing, Governor, R. H., Bearing.....		404810-		78
C2219	Shaft, Governor Lever.....		404810-		78
D297	Gaskets, Governor Bearings.....	200111-228220	400000-	0-15000-0-15172	78
D403	Key, Fan Drive Bevel Gear.....	200111-	400000-	0-15000-	78
D403	Key, Governor Drive Gear.....	228221-	404558-	0-15173-	78
D414	Pipe Plug, Governor Case.....		404810-		78
D426	Pipe Cap, Crank Case Filler Pipe.....	200211-223802	400000-402039		
D625	Plug, Governor Case, Top.....	223803-228220	402445-404557	0-15000-0-15172	78
D1828	Spacer, Magneto Drive Shaft.....		404810-		78
D1828	Spacer, Governor Shaft, Right End.....		404810-		78
E2244	Pipe Plug, Improvement Governor Case.....	200111-223802	400000-402040		
JD7250	Cup, Magneto Drive Shaft Bearing.....		404810-		78
JD7250	Cup, R. H., Governor Bearing.....	200211-228220	400000-404557	0-15000-0-15172	78
JD7354	Cone, with Rollers, R. H., Governor Bearing.....		404810-		78
JD7356	Cone, with Rollers, L. H., Governor Bearing.....	200211-	400000-	0-15000-	78
JD7356	Cone, with Rollers, R. H., Governor Bearing.....	228221-	404558-	0-15173-	78
JD7358	Cone, with Rollers, R. H., Governor Bearing.....	200211-228220	400000-404557	0-15000-0-15172	78
JD7358	Cone, with Rollers, Magneto Drive Shaft Bearing.....		404810-		78
JD7401	Cup, R. H., Governor Bearing.....		404810-		78
JD7402	Cup, L. H., Governor Bearing.....	200211-	400000-	0-15000-	78
JD7402	Cup, R. H., Governor Bearing.....	228221-	404558-	0-15173	78
K2069	Washer, Governor Shaft, Ends.....	228221-	404558-	0-15173	78
1454R	Plug, 1", Inspection Hole.....	203036-223802	400000-402039		78
1483R	Elbow, Improvement Governor Case.....	200111-223803	400000-402040		78
1705R	Washer, Governor Shaft, Ends.....	200111-228220	400000-404557	0-15000-0-15172	99
	CONTROLS				
AC226	Speed Change Lever and Trunnion.....	200111-	400000-404809	0-15000-	79
AC520	Quadrant, Control, C1596R, with Clutch Lever Pivot Bolt (Repairs for C253R, C1596R, and 1676R).....	200111-	400000-404809	0-15000-	79
AC611	Ball Joint, Throttle Rod.....	223803-228220	402040-404557	0-15000-0-15172	79
AC623	Ball Joint, Throttle Rod.....	221921-223802			79
AC625	Throttle Rod and Ball Joint.....	200111-221920	400000-402039		79
AC959	Tube with Support, Control Rod.....		404810-		79
C247R	Trunnion, Governor Speed Control Lever.....	200111-	400000-	0-15000-	79
C261R	Arm, Governor Speed Control.....	200111-228220	400000-404557	0-15000-0-15172	79
C440	Clip, Clutch, Operating Rod.....	200111-224099	400000-404809		79
C447	Lever, Clutch, Operating.....	200111-216370 216800-216821	400000-401238		79
C900	Lever, Water Feed.....	200111-223802	400000-402039		79
C906	Crank, Speed Control.....	200111-	400000-	0-15000-	79
C912	Bushing, Control Quadrant Stud.....	200111-	400000-	0-15000-	79
C916	Sleeve, Speed Change Spring.....	200111-	400000-	0-15000-	79
C924	Rod, Spark Control.....	200111-	400000-404809	0-15000-	79
C925	Rod, Speed Control.....	200111-	400000-404809	0-15000-	79
C927	Rod, Clutch, Operating.....	200111-	400000-404809	0-15000-	79
C954	Bracket, Speed Control Crank.....	200111-	400000-404809	0-15000-	79
C955	Clip, Water Feed Lever, Front.....	200111-223802	400000-402039		79
C956	Clip, Water Feed Lever, Rear.....	200111-223802	400000-402039		79
C957	Clip, Control Rod Tube.....	200111-224099	400000-404809		79
C994	Spring, Governor Speed Change.....	200111-228220	400000-404557	0-15000-0-15172	79
C1018	Tube, Control Rod.....	200111-224099	400000-404809		79
C1019	Stud, Control Quadrant to Case.....	200111-	400000-404809	0-15000-	79
C1091	Bolt, Governor Control Fork.....	200111-	400000-404809	0-15000-	79
C1595	Bolt, Clutch Lever Pivot.....	216822-	401329-404809	0-15000-	79
C1665	Rod, Throttle.....	221921-223802			79

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
CONTROLS—Continued					
C1677	Clip, Control Rods, Spark and Speed	224100—		0—15000—	79
C1679	Lever, Clutch, Operating.....	{216371—216799 216822	401329—404809		79
C1706	Rod, Throttle.....	223803—228220	402040—404557	0—15000—0—15172	79
C1749	Clip, Clutch, Operating Rod.....	224100—		0—15000—	79
C2017	Lever, Clutch, Operating.....			0—15000—	79
C2056R	Arm, Governor Speed Control.....	228221—	404558—404809	0—15173—	79
C2063	Rod, Throttle.....	228221—	404558—404809	0—15173—	79
C2073	Spring, Governor Speed Change.....	228221—	404558—	0—15173—	79
C2226	Lever, Speed Change.....		404810—		79
C2227	Pilot, Speed Change.....		404810—		79
C2228	Rod, Carburetor Throttle.....		404810—		79
C2229	Lever, Magneto, Operating.....		404810—		79
C2245	Link, Spark Control.....		404810—		79
C2246R	Arm, Spark Control.....		404810—		79
C2247	Shaft, Spark Control.....		404810—		79
C2278	Lever, Clutch.....		404810—		79
C2279	Rod, Clutch, Operating.....		404810—		79
C2280	Quadrant, Clutch Lever.....		404810—		79
C2282	Lever, Spark and Throttle Control.....		404810—		79
C2283R	Quadrant, Control.....		404810—		79
C2284	Bracket, Control Quadrant.....		404810—		79
C2285	Rod, Magneto Control.....		404810—		79
C2286	Rod, Throttle Control.....		404810—		79
C2379	Link, Clutch Lever Spring.....			0—15413	79
D87R	Lever, Spark and Speed Control.....	200111—	400000—404809	0—15000—	79
D157	End, Carburetor Spark and Speed Control Rods.....	200111—	400000—	0—15000—	79
D330	Bolt, Clutch, Operating Lever.....	200111—216821	400000—401328		79
D393R	Yoke, Clutch, Operating Rod.....	200111—	400000—	0—15000—	79
D453	Washer, Speed Change Lever.....	200111—	400000—	0—15000—	79
D1994	Clutch Rod, Yoke Pin.....	200111—	400000—	0—15000—	79
D2031	Bolt, Clutch Lever Pivot.....		404810—		79
E2057	Washer on Throttle Rod.....	{200111—221920 228221—	{400000—402039 404558—	0—15173—	79
JD7759	Alemite Zerk Fitting, Control Quad- rant, Alemite Model 1610.....	200111—	400000—	0—15000—	78
K2172	Spring, Control Lever Friction.....	200111—	400000—	0—15000—	79
629R	Washer, Speed Change Lever Bolt.....	200111—	400000—	0—15000—	79
2226R	Washer, Speed Change Lever Shaft.....		404810—		79
CRANK CASE BREATHER					
AA359	Stack, Breather, Complete.....	223803—	402445—		77
AC612	Breather, Complete.....		402040—402444		77
AC762	Stack, Breather.....			0—15000—	77
AC934	Breather Body and Crank Case Cover.....		404810—		75
AD918	Breather Body, Complete.....	223803—	402442—	0—15000—	77
D1949	Clamp, Stack, Breather.....	223803—	402445—	0—15000—	77
D1950	Spring, Stack Clamp, Breather.....	223803—	402445—	0—15000—	77
D1951	Gasket, Breather Filter.....	223803—	402445—	0—15000—	77
D1952	Core, Breather Filter.....	223803—	402445—	0—15000—	77
D1957	Gasket, Breather Cover.....	223803—	402445—	0—15000—	77
D2119	Clip, Breather Body.....	223803—	402442—	0—15000—	77
D2120	Clamp, Breather Stack.....	223803—	402442—	0—15000—	77
K2594	Nipple, Breather.....		402040—402444		77
K3151	Washer, Breather Stack Clamp.....	223803—	402445—	0—15000—	77
CRANK CASE VENTILATOR					
C1705	Gland, Ventilator Packing.....	223803—	402040—404809	0—15000—	77
C1708	Pipe, Ventilator.....		402040—402444		77
C1828	Tube, Ventilator.....	223803—229215	402445—404809	0—15000—0—15411	77
C1829	Pipe, Ventilator.....	223803—230513	402445—404809	0—15000—0—15588	77
C1833	Reducing Bushing, Ventilator.....	223803—228220	402445—404557	0—15000—0—15172	77
C1988	Pipe, Ventilator.....	200111—223802	400000—402039		77
C2062	Reducing Bushing, Ventilator.....	228221—	404558—404809	0—15173—	77
C2266	Pipe, Ventilator.....		404810—		77
C2267	Elbow, Ventilator.....		404810—		77

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	CRANK CASE VENTILATOR —Continued				
C2268	Packing Nut, Ventilator Pipe.....		404810-		77
C2269	Packing Gland, Ventilator Pipe.....		404810-		77
C2270	Packing Washer, Ventilator Pipe.....		404810-		77
C2421	Pipe, Ventilator.....	230514-		0-15589-	77
D179	Nut, Ventilator Pipe Packing.....		402040-402444		77
D401R	Elbow, Ventilator Pipe.....		402040-402444		77
K2049	Bushing (Reducing) Elbow to Gov- ernor Case.....		402040-402444		77
	LUBRICATING SYSTEM AND OIL PUMP				
AC445	Oil Strainer, Complete.....	{213695-218448 219333-	400719-	0-15000-	80
AC451	Oil Strainer, AC445, Complete, with Pipe.....	{200111-213694 218449-219332	400000-400718		80
C168R	Gear, Oil Pump Drive.....	200111-	400000-	0-15000-	80
C169R	Body, Oil Pump.....	200111-	400000-	0-15000-	80
C366R	Pipe, Oil Strainer.....	{213695-218448 219333-	400719-	0-15000-	80
C401	Pin, Oil Pump Cover.....	200111-	400000-	0-15000-	80
C604	Gasket, Oil Pump Body to Case....	200111-	400000-	0-15000-	80
C674	Gasket, Strainer Flange.....	{200111-213694 218449-219332	400000-400718		80
C725	Oil Pump Drive Shaft and Gear.....	200111-	400000-	0-15000-	80
C726	Oil Pump Idler Shaft and Gear.....	200111-	400000-	0-15000-	80
C1115	Screen, Strainer.....	200211-	400000-	0-15000-	80
C1490	Gasket, Oil Pump Strainer Body....	{213695-218448 219333-	400719-	0-15000-	80
D29R	Cover, Oil Pump Gear.....	200111-223802	400000-402445		80
D162	Relief Valve, Oil Pump Cover.....	200111-	400000-	0-15000-	80
D180	Nut, Relief Valve.....	200111-	400000-	0-15000-	80
D302	Gasket, Oil Pump Cover, .015" (Thick).....	200111-	400000-	0-15000-	80
D379	Spring, Relief Valve.....	200111-223802	400000-402444		80
D453	Washer, Relief Valve, Pressure (3 used).....	200111-	400000-	0-15000-	80
D456R	Elbow, Discharge Pipe, 3/8".....	200111-	400000-	0-15000-	80
D465	Gasket, Relief Valve Nut.....	200111-	400000-	0-15000-	80
D793	Body, Oil Level Test Cock.....	200111-	400000-	0-15000-	80
D794	Plug, Oil Level Test Cock.....	200111-	400000-	0-15000-	80
D1995	Spring, Relief Valve.....	223803-	402445-	0-15000-	80
D2065R	Cover, Oil Pump Gear.....	223803-	402445-	0-15000-	80
D2081	Packing Washer, Oil Pump Dis- charge Pipe.....	223803-	402445-	0-15000-	80
E2207	Key, Drive Gear to Shaft, Oil Pump	200111-	400000-	0-15000-	80
	OIL FILTER AND INDICATOR				
AC434	Body, Oil Indicator, D815R, with Tee.....	200111-211675	400000-400329		80
AC954	Body with Bolts, Oil Filter.....	223803-	402445-	0-15000-	80
AD290	Piston with Rod, Oil Indicator.....	200111-	400000-	0-15000-	80
AD833	Element, Oil Filter with Plunger and Handle.....	223803-	402445-	0-15000-	80
AD883	Base, D2056R, Oil Filter with Plugs	223803-	402445-	0-15000-	80
C1818	Outlet, Oil Filter.....	223803-227405	402445-404385		80
C2172	Adapter, Oil Filter Body to Base....		404810-		80
C2173	Gasket, Oil Filter Adapter to Base..		404810-		80
C2175	Stud, Oil Filter Adapter to Body....		404810-		80
D162	Valve, Oil Filter By-Pass.....	223803-	402445-	0-15000-	80
D180	Nut, Oil Filter By-Pass Valve.....	223803-	402445-	0-15000-	80
D310	Gasket, Oil Indicator Body.....	200111-223802	400000-402444		80
D380	Spring, Oil Indicator.....	200111-	400000-	0-15000-	80
D458	Packing Nut, Discharge Pipe.....	200111-	400000-	0-15000-	80
D465	Gasket, Oil Filter By-Pass Valve Nut	223803-	402445-	0-15000-	80
D815R	Body, Oil Indicator.....	211676-223802	400330-402444		80
D1987R	Body, Oil Filter.....	223803-	402445-	0-15000-	80

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
OIL FILTER AND INDICATOR—Continued					
D1989R	Head, Oil Filter.....	223803-	402445-	0-15000-	80
D1991	Gasket, Oil Filter Base to Case.....	223803-	402445-	0-15000-	80
D1992	Gasket, Oil Filter Head.....	223803-	402445-	0-15000-	80
D1993	Gasket, Oil Filter Body to Base.....	223803-	402445-404809	0-15000-	80
D2001	Spring, Oil Filter Relief.....	223803-	402445-	0-15000-	80
D2002	Handle, Oil Filter Element Plunger.....	223803-	402445-	0-15000-	80
D2004	Gasket, Oil Filter Element Plunger Handle.....	223803-	402445-	0-15000-	80
E1976	Drain Plug, Oil Filter Base, 3/8".....	223803-	402445-	0-15000-	80
K2525	Plug, Oil Filter Body and Oil Filter Base, 1/8".....	223803-	402445-	0-15000-	80
1450R	Plug, Oil Filter Head, 1/4".....	223803-	402445-	0-15000-	80
1452R	Plug, Oil Filter Head, 1/2".....	223803-	402445-	0-15000-	80
OIL PIPES AND FITTINGS					
A259	Bushing, Oil Filter Outlet.....	227406-	404386-	0-15000-	80
A374	Nut, Solder Bushing, 3/8".....	223803-	402445-	0-15000-	80
AC227	Oil Pipe, Governor.....	200111-211675	400000-400329	0-15000-	80
AC431	Oil Pipe, R. H., Main Bearing.....	200111-	400000-	0-15000-	80
AC431	Oil Pipe, Governor.....	211676-	400330-	0-15000-	80
AC731	Pipe, Oil Pump Discharge.....	223803-	402445-	0-15000-	80
AD44	Oil Pipe, L. H., Main Bearing.....	200111-223802	400000-402444	0-15000-	80
C629	Discharge Pipe, Pump to Indicator.....	200111-223802	400000-402444	0-15000-	80
C972	Oil Jet, Governor Case.....	200111-	400000-	0-15000-	80
C1468	Tee, Oil Indicator Body.....	211676-223802	400330-402444	0-15000-	80
D392	Body, Solder Bushing, 5/16".....	200111-	400000-	0-15000-	80
D417	Elbow, Solder Bushing, 5/16".....	223803-	402445-	0-15000-	80
D456R	Elbow, Discharge Pipe, Ends.....	200111-	400000-	0-15000-	80
D818	Bushing, Discharge Pipe to Indicator Body.....	200111-223802	400000-402444	0-15000-	80
D1935	Gland, Solder Bushing, 3/8".....	223803-	402445-	0-15000-	80
E2149	Nut, Solder Bushing, 5/16".....	200111-	400000-	0-15000-	80
E2150	Gland, Solder Bushing, 5/16".....	200111-	400000-	0-15000-	80
FUEL SYSTEM					
AA335	Adjusting Clamp, Fuel Filter.....	200111-230642	400000-402200	0-15000-0-15656	81
AA499	Filter, Fuel.....	223769-	402201-	0-15000-	81
AA517	Bail, Fuel Filter.....	230643-	402201-	0-15657-	81
AA518	Nut and Washer, Adjusting.....	230643-	402201-	0-15657-	81
AA519	Screen, Fuel Filter.....	200111-	400000-	0-15000-	81
AC102	Gasoline Strainer, Complete.....	200111-	400000-	0-15000-	81
AC116	Fuel Tank, Complete.....	200111-226401	400000-403960	0-15000-	81
AC183	Bracket, Fuel Tank, Front and Rear.....	200111-226401	400000-403960	0-15000-	81
AC205	Fuel Strainer, Complete.....	200111-223768	400000-402200	0-15000-	81
AC768	Insulation Assembly, Fuel Tank.....	226402-	403961-404809	0-15000-	81
AC769	Gasoline Pipe, Complete.....	226402-	403961-404809	0-15000-	81
AC770	Bracket, Fuel Tank, Front and Rear.....	226402-	403961-404809	0-15000-	81
AC787	Fuel Tank, with Insulation Baffle, Complete.....	226402-	403961-404809	0-15000-	81
AC932	Fuel Line, Complete.....	404810-	404810-	0-15000-	81
AC963	Insulation, Fuel Tank, Bottom.....	404810-	404810-	0-15000-	81
AC964	Gasoline Pipe, Complete.....	404810-	404810-	0-15000-	81
AC965	Support, Fuel Tank, Rear.....	404810-	404810-	0-15000-	81
AC988	Tank, Fuel.....	404810-	404810-	0-15000-	81
AC1079	Body and Valve, Fuel Filter.....	200111-	400000-	0-15000-	81
AC1080	Valve, Fuel Filter.....	200111-	400000-	0-15000-	81
AC1166	Gasoline Line.....	230514-	400000-	0-15589-	81
AD41	Gasoline Pipe, Complete.....	200111-226401	400000-403960	0-15000-	81
AD44	Fuel Pipe, Complete.....	223803-	402040-404809	0-15000-	81
AD78	Filler Cap, Complete, Fuel Tank.....	200111-226401	400000-403960	0-15000-	81
AD97	Screw Head, D363R, and Stud, Fuel Tank Filler Cap.....	200111-226401	400000-403960	0-15000-	81
AD320	Three-Way Cock (Replaced by AD680)				
AD680	Three-Way Cock (Replaces AD320, Individual Parts not sold alone).....	200111-	400000-	0-15000-	81
AD709	Filler Cap, Complete, Fuel Tank and Gasoline.....	226402-	403961-	0-15000-	81
AD819	Fuel Line.....	223803-	402445-	0-15000-	81

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
FUEL SYSTEM—Continued					
C1777	Sediment Bowl, Fuel Filter.....	200111-	400000-	0-15000-	81
C1778	Gasket, Fuel Filter.....	200111-	400000-	0-15000-	81
C1929	Insulation Sheet, Fuel Tank.....	226402-	403961-404809	0-15000-	81
C1934	Insulation, Fuel Tank, End.....	226402-	403961-404809	0-15000-	81
C1935	Retainer Band, Fuel Tank Insulation	226402-229254	403961-404809	0-15000-0-15412	81
C1936	Extension, Fuel Tank Strainer.....	226402-	403961-	0-15000-	81
C2254	Support, Fuel Tank, Front.....	404810-	81
C2378	Body, Fuel Filter.....	200111-	400000-	0-15000-	81
D19R	Cap, Gas Filler.....	200111-226401	400000-403960	81
D80R	Filler Flange, Fuel Tank, Gas and Fuel.....	200111-226401	400000-403960	81
D82	Outlet Flange, Fuel Tank, Gas and Fuel.....	200111-	400000-	0-15000-	81
D126	Baffle, Filler Cap.....	200111-226401	400000-403960	81
D288	Gasket, Fuel Tank Filler Cap.....	200111-226401	400000-403960	81
D319R	Cap, Fuel Tank Filler.....	200111-226401	400000-403960	81
D362	Clamp Bar, Filler Cap.....	200111-226401	400000-403960	81
D468	Cushion, Fuel Tank Bracket.....	200111-	400000-404809	0-15000-	81
D869	Nut, Handle, AD320, Three-Way Cock.....	200111-220542	400000-402039
D870	Lock Washer, Handle Nut, AD320, Three-Way Cock.....	200111-220542	400000-402039
D871	Handle, AD320, Three-Way Cock...	200111-220542	400000-402039
D872	Nut, Packing, AD320, Three-Way Cock.....	200111-220542	400000-402039
D873	Spring, AD320, Three-Way Cock...	200111-220542	400000-402039
D874	Washer, Packing, AD320, Three- Way Cock.....	200111-220542	400000-402039
D875	Packing, AD320, Three-Way Cock...	200111-220542	400000-402039
D1837	Filler Flange, Fuel Tank, Gas and Fuel.....	226402-	403961-	0-15000-	81
D2122	Packing Washer, Three-Way Cock...	220543-	402040-	0-15000-	81
E2149	Nut, Solder Bushing, 5/16".....	200111-	400000-	0-15000-	81
E2150	Gland, Solder Bushing, 5/16".....	200111-	400000-	0-15000-	81
HOOD					
AC178	Hood, Complete.....	200211-212554	400000-400537	82
AC491	Hood, Complete.....	223803-226401	402445-403960	82
AC771	Hood, Complete.....	212555-223802	400538-402444	82
AC958	Hood, Complete.....	226402-	403961-404809	0-15000-	82
C941	Clip, Hood.....	404810-	82
C980	Bolt, Hood Clamp to Bracket (Special Head).....	200111-219634	400000-402039	82
C1573	Clip, Hood.....	200111-	400000-	0-15000-	82
D566	Cover Canvas, Engine.....	219635-	402040-	0-15000-
		200111-	400000-	0-15000-
COOLING SYSTEM					
AC123	Radiator, Complete.....	200111-226401
AC494	Radiator, Complete.....	400000-403960
AC772	Cooling Baffle with Support and Radiator Shroud.....	226402-	403961-404809	0-15000-	83
AC785	Radiator, Complete.....	226402-	0-15000-
AC786	Radiator, Complete.....	403961-404809
AC788	Upper Water Pipe, C1909R, with Bearing Cup Pin.....	226402-	403961-404809	0-15000-	83
AC909	Upper Water Pipe, C2135, with Bearing Cup Pin.....	212493-226401	400530-403960	83
AC953	Fan Shroud, Complete.....	404810-	83
AD86	Filler Cap, Complete, Radiator.....	200111-	400000-	0-15000-	83
AD97	Screw Head, D363R, and Stud, Radiator Filler Cap.....	200111-	400000-	0-15000-	83
AD922	Radiator Cap (For Moto meter)	200111-	400000-	0-15000-	83
C256R	Top Tank, Radiator.....	200111-	400000-	0-15000-	83
C257R	Radiator, Side.....	200111-226401	400000-403960	83
C258R	Bottom Tank, Radiator.....	200111-	0-15000-	83
C259R	Lower Water Pipe Connection, Ra- diator.....	200111-	400000-404809	0-15000-	83

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
COOLING SYSTEM— Continued					
C307R	Upper Water Pipe.....	200211-212492	400000-400529		83
C332R	Bottom Tank, Radiator.....		400000-404809		83
C616	Hose, Radiator.....	200111-	400000-	0-15000-	83
C617	Hose Clamp.....	200111-	400000-	0-15000-	83
C928	Strap, Radiator.....	200111-	400000-	0-15000-	83
C1004	Gasket, Radiator, Top and Bottom.....	200111-	400000-	0-15000-	83
C1023	Screen over Radiator Tubes.....	200111-	400000-	0-15000-	83
C1522	Strap and Fan Shroud, Radiator....	200111-229523	400000-	0-15000-	83
C1729	Core, Radiator.....	200111-226401	400000-404745	0-15000-0-15463	83
C1799	Gasket, Upper and Lower Water Pipes to Radiator.....		400000-403960		83
C1865	Drain Plug, Radiator.....	200111-	400000-404809	0-15000-	83
C1910R	Radiator Side, R. H.....	226402-	400000-404809		83
C1911R	Radiator Side, L. H.....	226402-	403961-404809	0-15000-	83
C1940	Core, Radiator.....	226402-	403961-404809	0-15000-	83
C1942	Support, Cooling Baffle.....	226402-	403961-	0-15000-	83
C2089	Fan Shroud, Radiator, Lower.....	229524-	403961-404809	0-15000-	83
C2220	Top Tank, Radiator.....		404746-404809	0-15464-	83
C2221	Tank, Radiator, Bottom.....		404810-		83
C2222	Side, Radiator.....		404810-		83
C2223	Outlet, Radiator.....		404810-		83
C2257	Deflector, Fan Blast.....		404810-		83
C2290	Water Pipe, R. H., Upper.....		404810-		83
C2291	Water Pipe, L. H., Upper.....		404810-		83
C2292	Clamp, Upper, Water Pipe and In- take.....		404810-		83
C2293	Gasket, Upper, Water Pipe and In- take.....		404810-		83
C2294	Bolt, Upper, Water Pipe Clamp.....		404810-		83
D126	Baffle, Radiator Filler Cap.....	200111-	404810-		83
D305	Gasket, Upper, Water Pipe to Cyl- inder Head.....	200111-	400000-	0-15000-	83
D319R	Cap, Radiator Filler.....	200111-	400000-	0-15000-	83
D362	Clamp Bar, Filler Cap.....	200111-	400000-	0-15000-	83
D473	Gasket, Radiator Cap.....	200111-	400000-	0-15000-	83
D488	Stud, Radiator Outlet.....		400000-	0-15000-	83
D2101	Baffle, Radiator Cap, Motometer....	200111-	404810-		83
D2102	Nut, Radiator Cap.....	200111-	400000-	0-15000-	83
D2388R	Clamp, Motometer Radiator Cap.....	200111-	400000-	0-15000-	83
E2142	Plug, 3/4", Water Drain.....	200111-	400000-	0-15000-	83
27R	Washer, Upper, Water Pipe Cap Screw.....	200111-		0-15000-	83
2205R	Stud, Radiator, to Front End.....	200111-	400000-	0-15000-	83
RADIATOR GUARD AND CURTAIN					
AC435	Radiator Curtain, Complete.....	200111-223802	400000-402039		
AC723	Radiator Guard and Curtain, Com- plete.....	200111-223802			
AC730	Radiator Guard with Bolts.....	200111-226401			82
AC760	Radiator Guard with Bolts.....		400000-403960		82
AC777	Radiator Guard.....	226402-		0-15000-	82
AC779	Radiator Guard.....		403961-404809		82
AC782	Radiator Guard and Curtain, Com- plete.....		400000-402444		
C1089	Cloth, Radiator Curtain.....	200111-223802			82
C1090	Roller, Curtain, Wood.....	200111-223802			82
C1483	Cloth, Radiator Curtain.....	200111-223802			82
C1484	Strap, Radiator Curtain.....	200111-223802			82
C1812	Clip, Radiator Curtain Spring.....	200111-	400000-	0-15000-	82
C1813	Roller, Radiator Curtain.....	200111-	400000-	0-15000-	82
C1814	Cloth, Radiator Curtain.....	200111-	400000-	0-15000-	82
D379	Spring, Radiator Curtain Roller, Retaining.....	200111-	400000-	0-15000-	82
D564	Bracket, Radiator Curtain, R. H....	200111-223802			82
D572	Bracket, Radiator Curtain, L. H....	200111-223802			82

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
RADIATOR GUARD AND CURTAIN—Continued					
D1856	Spacer, Radiator Guard.....	200111-	400000-	0-15000-	82
D1887	Pin, Roller, Radiator Curtain.....	200111-	400000-	0-15000-	82
372R	Spring, Radiator Curtain.....	200111-	400000-	0-15000-	82
629R	Washer, Radiator Curtain Roller....	200111-	400000-	0-15000-	82
FAN					
AC49	Spider, D92R, and Blades, Complete	200111-	400000-404809	0-15000-	78
AC933	Fan, Complete.....		404810-		78
AC977	Housing with Sleeve Pin, Front Fan Bearing.....		404810-		78
C308	Gear, Fan Drive Bevel.....	200211-	400000-404809	0-15000-	78
C310R	Housing, Rear Fan Bearing.....	200211-226401	400000-403960		78
C312R	Cover, Front Fan Bearing.....	200211-212492	400000-400529		78
C381R	Cover, Front Fan Bearing.....	212493-	400530-404809	0-15000-	78
C1194	Shaft, Fan.....	200211-212492	400000-400529		78
C1198	Adjusting Nut, Front Fan Bearing..	200211-212492	400000-400529		78
C1199	Lock for Front Fan Bearing, Adjust- ing Nut.....	200211-212492	400000-400529		78
C1207	Bevel Pinion, on Fan Shaft.....	200211-	400000-404809	0-15000-	78
C1217	Gasket, Front Fan Bearing Cover...	200211-212492	400000-400529		78
C1469	Retainer, Fan Shaft, Felt.....	210251-226401	400024-403960		78
C1525	Shaft, Fan.....	212493-226401	400530-403960		78
C1526	Spacer, Front Fan Bearing.....	212493-226401	400530-403960		78
C1527	Gasket, Front Fan Bearing Cover...	212493-	400530-404809	0-15000-	78
C1528	Cup Pin, Front Fan Shaft Bearing...	212493-	400530-	0-15000-	78
C1529	Spring, Front Fan Bearing.....	212493-226401	400530-403960		78
C1530	Dust Shield, Front Fan Bearing.....	212493-	400530-	0-15000-	78
C1944	Shaft, Fan.....	226402-	403961-404809	0-15000-	78
C1945R	Housing, Rear Fan Bearing.....	226402-	403961-	0-15000-	78
C1946	Spring, Front Fan Bearing.....	226402-	403961-	0-15000-	78
C1947	Spacer, Front Fan Bearing.....	226402-	403961-	0-15000-	78
C1948	Felt Retainer, Front Fan Bearing...	226402-	403961-	0-15000-	78
C2167	Shaft, Fan.....		404810-		78
C2205	Pinion, Fan Drive Bevel.....		404810-		78
C2244	Gasket, Front Fan Bearing Cover...		404810-		78
C2296	Cover, Front Fan Bearing.....		404810-		78
D297	Gasket, Rear Fan Housing (Thick)...	200111-	400000-	0-15000-	78
D378	Spring, Fan Friction.....	200111-	400000-	0-15000-	78
D396	Disk, Fan Drive.....	200111-	400000-	0-15000-	78
D399	Facing, Fan Friction.....	200111-	400000-	0-15000-	78
D400	Key, Fan Disk.....	200111-	400000-	0-15000-	78
D403	Key, Bevel Pinion.....	200111-	400000-	0-15000-	78
D655	Felt Retainer, Fan Shaft, in Water Pipe.....	200111-210250	400000-400023		78
D655	Felt Retainer, Rear Fan Bearing....	226402-	403961-	0-15000-	78
D684	Felt Washer, Fan Shaft, in Water Pipe.....	200111-	400000-	0-15000-	78
D684	Felt Washer, Rear Fan Bearing.....	226402-	403961-	0-15000-	78
D825	Felt Washer, Front Fan Bearing Cover.....	200211-	400000-	0-15000-	78
D826	Felt Retainer, Front Fan Bearing Cover.....	200211-	400000-	0-15000-	78
D1661	Nut, 9/16", Hex., Slotted, Fan Shaft	200111-	400000-	0-15000-	
JD7250	Cup, Fan Shaft, Front and Rear Bearing.....	200211-212492	400000-400529		78
JD7250	Cup, Fan Shaft, Rear Bearing.....	212493-226401	400530-403960		78
JD7251	Cup, Front Fan Shaft Bearing.....	212493-	400530-	0-15000-	78
JD7354	Cone, with Rollers, Rear Fan Shaft Bearing.....	226402-	403961-	0-15000-	78
JD7358	Cone, with Rollers, Fan Shaft, Front Bearing.....	226402-	403961-	0-15000-	78
JD7358	Cone, with Rollers, Fan Shaft, Front and Rear Bearing.....	200211-226401	400000-403960		78
JD7401	Cup, Rear Fan Shaft Bearing.....	226402-	403961-	0-15000-	78
JD7759	Alemite Zerk Fitting, Alemite Mod- el 1610, Front Fan Bearing.....	207345-	400000-	0-15000-	78

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
FAN—Continued					
JD7792	Zerk Fitting, Front Fan Bearing, 1/8", Bassick No. 1365	200111-207344			78
27R	Washer, Fan Shaft, Front	200111-	400000-	0-15000-	78
1476R	Elbow, Front Fan Bearing	230514-		0-15589-	78
PULLEY AND CLUTCH					
AC130	Pulley, C126R, with Cone, Bushing and Gear	200111-	400000-	0-15000-	84
AC229	Disk, C127R, Clutch Driving with Bolts	200111-	400000-	0-15000-	84
AC237	Shaft and Lever, Clutch Throw-Out	200111-	400000-	0-15000-	84
AC446	Brake, C365R, with Lining, Pulley	200111-	400000-	0-15000-	84
AC699	Dust Shield, with Gasket, Pulley	200111-	400000-	0-15000-	84
C9R	Cone, Clutch	200111-	400000-	0-15000-	84
C74R	Dog, Clutch	200111-	400000-	0-15000-	84
C116	Gear, Pulley	200111-	400000-	0-15000-	84
C142R	Disk, Clutch, Adjusting	200111-	400000-	0-15000-	84
C171R	Fork, Clutch	200111-	400000-	0-15000-	84
C172R	Bearing, Clutch Fork	200111-	400000-	0-15000-	84
C184R	Cover, Pulley and Spline Gear	200111-224099	400000-	0-15000-	84
C404	Pin, Clutch Cone Drive	200111-	400000-	0-15000-	84
C434	Toggle, Clutch Dog	200111-	400000-	0-15000-	84
C545	Pin, Pulley Brake to Throw-Out Bearing	200111-	400000-	0-15000-	84
C603	Gasket, Clutch Fork Shaft Bearing	200111-	400000-	0-15000-	84
C614	Facing, Clutch Friction	200111-	400000-	0-15000-	84
C643	Bolt, Clutch, Operating	200111-	400000-	0-15000-	84
C667	Snap Ring, Gear Retainer	200111-	400000-	0-15000-	84
C717	Gasket, Pulley and Spline Gear Cover	200111-	400000-	0-15000-	84
C732	Welsh Plug, Clutch Fork Bearing	200111-	400000-	0-15000-	84
C834	Cap Screw, Dust Shield (Drilled Head)	200111-	400000-	0-15000-	84
C932	Lead Washer on Dust Shield Cap Screws	200111-	400000-	0-15000-	84
C1735R	Cover, Pulley and Spline Gear	224100-		0-15000-	84
C1736R	Cap, Pulley and Spline Gear Cover	224100-		0-15000-	84
C1738	Stud, Pulley and Spline Gear Cover	224100-		0-15000-	84
C1739	Gasket, Pulley and Spline Gear Cover Cap	224100-		0-15000-	84
C1815	Gasket, Pulley Dust Shield	200111-	400000-	0-15000-	84
C2280	Quadrant, Clutch Lever		404810-		79
C2379	Link, Clutch Lever Spring			0-15413-	79
D100R	Collar, Clutch	200111-	400000-	0-15000-	84
D141	Washer, Drive Disk to Crankshaft	200111-	400000-	0-15000-	84
D178	Cap Screw Pivot, Clutch Fork	200111-	400000-	0-15000-	84
D202	Bolt, Clutch Drive Disk	200111-206441		0-15000-	84
D279	Key, Belt Pulley Gear	200111-	400000-	0-15000-	84
D355	Pin, Clutch Dog to Pulley	200111-	400000-	0-15000-	84
D359	Snap Ring, Bearing Retainer	200111-	400000-	0-15000-	84
D377	Spring, Clutch Release	200111-	400000-	0-15000-	84
D385	Lining, Pulley Brake	200111-	400000-	0-15000-	84
D552	Bushing, Pulley	200111-	400000-	0-15000-	84
D651	Washer, Pulley Bearing	200111-	400000-	0-15000-	84
D917	Retainer, Felt Washer	200111-	400000-	0-15000-	84
D918	Felt Washer, Pulley Bearing	200111-	400000-	0-15000-	84
D1997	Spring, Clutch Fork Shaft	200111-	400000-	0-15000-	84
D2031	Bolt, Clutch Lever Pivot		404810-		84
JD7494	Outer Race, Pulley Bearing	200111-	400000-	0-15000-	84
JD7544	Roller Assembly, Pulley Bearing	200111-	400000-	0-15000-	84
JD7594	Inner Race, Pulley Bearing	200111-	400000-	0-15000-	84
SPLINE SHAFT					
AC79	Spider, C148R, with Ring Gear, Spline Shaft	200111-224099	400000-		84
AC176	Quill, C149R, Spline Shaft, Complete with Bearing Cup	200111-	400000-	0-15000-	84

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	SPLINE SHAFT—Continued				
AC640	Spider, C1737R, with Ring Gear, Spline Shaft.....	224100-	0-15000-	84
C85	Pinion, Low and Reverse Sliding.....	200111-	400000-	0-15000-	84
C207	Pinion, High and Intermediate, Sliding.....	200111-	400000-	0-15000-	84
C228	Gear, Sliding, Power Shaft Drive.....	200111-	400000-	0-15000-	84
C422	Key, Spline Shaft Gear.....	200111-	400000-	0-15000-	84
C490	Cover, Spline Shaft, Left.....	200111-218674	400000-402039	84
C535	Hexagon Nut, Spline Shaft.....	200111-	400000-	0-15000-	84
C591	Gasket, Left Spline Shaft Cover.....	200111-	400000-	0-15000-	84
C658	Oil Collar, Spline Shaft.....	200111-	400000-	0-15000-	84
C660	Shaft, Spline.....	200111-	400000-	0-15000-	84
C666	Snap Ring, Spline Shaft Bearing.....	200111-	400000-	0-15000-	84
C1620R	Cover, Spline Shaft Bearing.....	218675-	402040-	0-15000-	84
D136	Washer, Spline Shaft Nut, L. H.....	200111-	400000-	0-15000-	84
D490	Washer, Spline Shaft Nut, R. H.....	200111-	400000-	0-15000-	84
JD7214	Cone, with Rollers, Spline Shaft Bearing, L. H.....	200111-	400000-	0-15000-	84
JD7225	Cone, with Rollers, Spline Shaft Bearing, R. H.....	200111-	400000-	0-15000-	84
JD7260	Cup, Spline Shaft Bearing, L. H.....	200111-	400000-	0-15000-	84
JD7275	Cup, Spline Shaft Quill Bearing.....	200111-	400000-	0-15000-	84
1450R	Pipe Plug, Spline Shaft Bearing Cover, 1/4".....	218675-	402040-	0-15000-	80
	GEAR SHIFT				
AC71	Fork, C133R, Shift, Low and Re- verse, Complete.....	200111-	400000-	0-15000-	85
AC72	Fork, C132R, Shift, High and Inter- mediate, Complete.....	200111-	400000-	0-15000-	85
C27R	Quadrant, Gear Shift.....	200111-	400000-	85
C98R	Arm, on Gear Shift Lever.....	200111-	400000-	0-15000-	85
C139	Shift Fork, Power Shaft Sliding Gear.....	200111-	400000-	0-15000-	85
C443	Lever, Gear Shift.....	200111-	400000-404809	85
C457	Yoke, Shift Fork.....	200111-	400000-	0-15000-	85
C549	Spring, Gear Shift Lever.....	200111-	400000-	0-15000-	85
C657	Lever, Power Shifting Gear.....	200111-218674	400000-402039	85
C686	Shaft, Shifting Fork.....	200111-	400000-	0-15000-	85
C1060	Washer, Leather, Gear Shift Lever.....	200111-	400000-	0-15000-	85
C1246	Washer, Power Shifting Gear Lever.....	200111-	400000-	0-15000-	85
C1621	Lever, Power Shaft Shift (Substitute AC573).....	218675-	402040-	0-15000-	85
C1622	Stop Pin, Power Shaft Shift Shaft.....	218675-	402040-	0-15000-	85
C1623	Shaft, Power Shaft Shift.....	218675-	402040-	0-15000-	85
C2004R	Quadrant, Gear Shift.....	0-15000-	85
C2010	Lever, Gear Shift.....	0-15000-	85
C2277	Lever, Gear Shift.....	404810-	85
D342	Key, Arm to Lever.....	200111-	400000-	0-15000-	85
D678	Adjusting Screw, Shift Shaft.....	200111-	400000-	0-15000-	85
D789	Nipple, Stop Pin.....	200111-	400000-	0-15000-	85
D993	Spring, Power Shift Shaft Stop Pin.....	218675-	402040-	0-15000-	85
K2573	Washer, Gear Shift Lever.....	200111-	400000-	0-15000-	85
1146R	Spring, Stop Pin.....	200111-	400000-	0-15000-	85
2323R	Pin, Stop.....	200111-	400000-	0-15000-	85
	REVERSE SHAFT				
AC73	Reverse Gear with Bushing.....	200111-	400000-	0-15000-	85
AC458	Shaft, Reverse, with Spacer and Washers.....	200111-	400000-	0-15000-	85
C107R	Collar, Reverse Shaft.....	200111-211343	400000-400236	85
C496	Washer, Reverse Gear Spacing (Thick).....	200111-	400000-	0-15000-	85
C619	Welsh Plug, Each End of Reverse Shaft.....	200111-	400000-	0-15000-	85
C1098	Bushing, Reverse Gear.....	200111-	400000-	0-15000-	85
C1519	Spacer, Reverse Shaft.....	200111-	400000-	0-15000-	85
C1520	Washer, Reverse Shaft Spacing (Thin).....	200111-	400000-	0-15000-	85

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
DIFFERENTIAL					
AC149	Gears, High and Low with C211R Spider.....	200111-	400000-	0-15000-	85
AC150	Gear, Intermediate with C210R Spider.....	200111-	400000-	0-15000-	85
AC272	Quill, C297R, Differential Shaft, L. H., with Snap Ring and Dowel Pin.....	200211-			85
AC350	Quill, C341R, Differential Shaft, L. H., with Snap Ring.....		400000-		85
AC789	Quill, D2002R, Differential Shaft, L. H., with Snap Ring.....			0-15000-	85
AC912	Sprocket, Differential Shaft (8-Tooth) (1 C2133 and 1 C2134).....	{211700-211799 218358	400719-	0-15000-	85
C20R	Sprocket, Differential Shaft (9-Tooth).....	{200111-211699 211800-218357	400000-400718		85
C296R	Quill, Differential Shaft, R. H.....	200211-			85
C340R	Quill, Differential Shaft, R. H.....		400000-		85
C437	Shaft, Differential.....	200111-228723		0-15000-0-15241	85
C462	Washer, Differential Sprocket Bearing.....	200111-	400000-	0-15000-	85
C494	Washer, Differential Shaft Bearing.....	200111-226735	400000-404111		85
C535	Hexagon Nut, Differential Shaft.....	200111-	400000-	0-15000-	85
C578	Bolt, Differential Quill to Housing.....	200111-	400000-	0-15000-	85
C594	Gasket, Quill to Housing.....	200111-	400000-	0-15000-	85
C672	Gasket, Quill, L. H.....	200111-	400000-	0-15000-	85
C692	Snap Ring, Outside, Differential Bearing.....	200111-	400000-	0-15000-	85
C718	Gasket, Quill, R. H.....	200111-	400000-	0-15000-	85
C719	Stud, Differential Quill to Case, 5/8"x2-5/8".....	200111-	400000-	0-15000-	85
C786	Case, Differential, Pilot Side.....	200111-	400000-	0-15000-	85
C787	Case, Differential, Recess Side.....	200111-	400000-	0-15000-	85
C788	Spider, Differential Pinion.....	200111-	400000-	0-15000-	85
C789	Pinion, Differential.....	200111-	400000-	0-15000-	85
C790	Gear, Bevel Side.....	200111-	400000-	0-15000-	85
C1375	Shaft, Differential.....		400000-404769		85
C1476	Washer, Differential Shaft, Cork.....	200211-	400000-		85
C1504	Dowel Pin, Differential Quill.....	200111-212174	400000-400455		85
C1533	Dowel Pin, Differential Quill.....	212175-	400456-	0-15000-	85
C2001R	Quill, Differential Shaft, R. H.....			0-15000-	85
C2131	Shaft, Differential.....	228724-		0-15242-	85
C2132	Shaft, Differential.....		404770-		85
C2133	Sprocket, Differential Shaft (Part of AC912).....	228724-	404770-	0-15242-	85
C2134	Spacer, Differential Shaft Sprocket.....	228724-	404770-	0-15242-	85
C2149R	Cover, Differential Shaft.....	200111-			85
D136	Washer, Differential Shaft.....	200111-	400000-	0-15000-	85
D359	Snap Ring, Inside Differential Bearing.....	200111-	400000-	0-15000-	85
D651	Shim Washer, Differential Bearing.....	200111-	400000-	0-15000-	85
JD7675	Ball Bearing, Differential Shaft, Outside.....	200111-	400000-	0-15000-	85
JD7691	Ball Bearing, Differential Shaft, Inside.....	200111-	400000-	0-15000-	85
1304R	Nut, Differential Flange Bolt.....	200111-	400000-	0-15000-	85
FINAL DRIVE					
AC7	Drive Chain, 45 Links.....	200111-218357	400000-400718		86
AC212	Housing, C242R, with Studs and Snap Rings, Rear Axle, R. H.....	200111-206023			86
AC213	Housing, C243R, with Studs and Snap Rings, Rear Axle, L. H.....	200111-206023			86
AC397	Housing, C344R, with Studs and Snap Rings, Rear Axle, R. H.....	{206024-211699 211800-225840	400000-403696		86
AC398	Housing, C345R, with Studs and Snap Rings, Rear Axle, L. H.....	{206024-211699 211800-225840	400000-403696		86

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
AC436	FINAL DRIVE—Continued Cover, Rear Axle Housing, C1008, with Nut Cover, R. H. and L. H.	{200111-206023 211700-211799			86
AC437	Cover, Rear Axle Housing, C1250, with Nut Cover, R. H. and L. H.	{206024-211699 211800-220095	400000-402029		86
AC454	Clamp Nut, C373R, with Cap Screw, Rear Axle	211284-	400210-	0-15000-	86
AC503	Housing, C388R, with Studs and Snap Rings, Rear Axle, R. H.	211700-211799			86
AC504	Housing, C389R, with Studs and Snap Rings, Rear Axle, L. H.	211700-211799			86
AC559	Drive Chain, Complete (44 Links)	218358-	400719-	0-15000-	86
AC570	Drive Chain, Complete (34 Links— Used with 10- and 19-Tooth Sprockets)	200111-221584			86
AC684	Drive Chain, Complete (40 Links— Used with 9- and 30-Tooth Sprockets)	221585-			86
AC752	Rear Axle with Zerk Fitting	200111-221584	400000-402039		86
AC753	Rear Axle with Zerk Fitting	221585-225840	402040-403696		86
AC817	Housing, C1900R, with Studs and Snap Rings, Rear Axle, R. H.	225841-	403697-	0-15000-	86
AC818	Housing, C1901R, with Studs and Snap Rings, Rear Axle, L. H.	225841-	403697-	0-15000-	86
AC855	Brace, Rear Axle Housing (42" and 28" Row Unit)				86
AC1106	Felt Washer, Rear Axle, Inside	200111-225840	400000-403696		86
AC1107	Felt Washer, Rear Axle, Inside	225841-	403697-	0-15000-	86
AC1108	Felt Washer, Rear Axle, Outside	{200111-223802 224100-224207	400000-402695		86
AC1110	Rear Axle, Complete	225841-		0-15000-0-15172	86
AC1111	Felt Washer, Rear Axle	225841-		0-15000-	86
C24R	Collar, Rear Axle	{200111-223802 224100-224207	400000-402695		86
C361R	Mud and Dust Shield, R. H.	200211-206023			86
C362R	Mud and Dust Shield, L. H.	200211-206023			86
C364R	Sprocket, Rear Axle (38-Tooth)	211284-218357	400210-400718		86
C387R	Tightener, Drive Chain	211700-211799			86
C399R	Sprocket, Rear Axle (37-Tooth)	218358-221584	400719-402039		86
C470	Washer, Rear Axle Sprocket	200111-211283	400000-400209		86
C484	Clamp, Quill Bolt	200111-	400000-	0-15000-	86
C493	Dust Collar, Rear Axle	{200111-223802 224100-224207	400000-402695		86
C538	Nut, Rear Axle	200111-211283	400000-400209		86
C559	Felt Retainer, Rear Axle	200111-225840	400000-403696		86
C565	Snap Ring, Rear Axle Bearing	200111-225840	400000-403696		86
C595	Gasket, Rear Axle Housing Cover	{200111-206023 211700-211799			86
C597	Gasket, Rear Axle Nut Cover	200111-211283	400000-400209		86
C620	Cover, Rear Axle Nut	200111-211283	400000-400209		86
C1031	Stud, Fender Support, 5/8"x2"	200111-		0-15000-	86
C1107	Connecting Link, Drive Chain	200111-218357	400000-400718		86
C1251	Gasket, Rear Axle Housing Cover	{206024-211699 211800-	400000-		86
C1453	Nut Cover, Rear Axle	211284-	400210-	0-15000-	86
C1454	Gasket, Rear Axle Nut Cover	211284-	400210-	0-15000-	86
C1473	Shield, Rear Wheel, Dust Collar	{200211-223802 224100-224207	400000-402695		86
C1474	Collar, Rear Wheel, Dust	{200211-223802 224100-224207	400000-402695		86
C1475	Washer, Rear Axle, Cork	{200211-223802 224100-224207	400000-402695		86
C1477	Washer, Rear Axle, Cork	{200211-223802 224100-224207	400000-402695		86
C1478	Felt, Brake Drum, Mud Guard	200211-	400000-		86
C1479	Stud, Platform Support, 5/8"x2-1/4"	200111-		0-15000-	86
C1494	Stud, Rear Axle Housing, 5/8"x2-7/8"		400000-		86

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
FINAL DRIVE—Continued					
C1593	Stud, Rear Axle Housing, 1/2"x2-5/8"	216800—	400719—	0—15000—	86
C1597R	Sprocket, Differential (10-Tooth)....	200111—			
C1598R	Sprocket, Rear Axle (19-Tooth)....	200111—221584			
C1640	Cover, Rear Axle Housing.....	220096—	402030—	0—15000—	86
C1697R	Sprocket, Rear Axle (30-Tooth)....	221585—			
C1718R	Sprocket, Rear Axle (37-Tooth)....	221585—	402040—	0—15000—	86
C1893R	Sprocket, Rear Axle (19-Tooth)....	221585—			
C1902	Felt Retainer, Rear Axle.....	225841—	403697—	0—15000—	86
C1916R	Shaft, Rear Axle.....	225841—	403697—	0—15000—	86
C1919	Snap Ring, Rear Axle Bearing.....	225841—	403697—	0—15000—	86
C1920	Dust Collar, Rear Axle.....	225841—	403697—	0—15000—	86
C1921	Collar, Rear Axle Bolt.....	225841—	403697—	0—15000—	86
C2137	Collar, Rear Axle Dust.....	200111—	400000—		86
C2415	Extension, Grease Fitting.....	229850—230073 230201—230368		0—15505—0—15615	86
C2430	Rear Axle, Heavy Duty.....	225841—		0—15000—	
C2431	Retainer, Rear Axle, Felt.....	225841—		0—15000—	86
D175	Screw, Drive Chain Tightener, 3/4"x 3-7/8"	211700—211799			86
E2142	Plug, Oil Filler.....	200111—	400000—	0—15000—	86
JD7242	Cone, with Rollers, Rear Axle Bearing	200111—225840	400000—403696		86
JD7292	Cup, Rear Axle Bearing.....	200111—225840	400000—403696		86
JD7295	Cup, Rear Axle Bearing.....	225841—	403697—	0—15000—	86
JD7295	Cup, Rear Axle Bearing (Outer)....	200111—	400000—	0—15000—	86
JD7353	Cone, with Rollers, Rear Axle Bearing	225841—	403697—	0—15000—	86
JD7374	Cone, with Rollers, Rear Axle, Outer Bearing.....	225841—		0—15000—	86
1450R	Pipe Plug, 1/4", Rear Axle Housing Oil Test Level and Drain.....	200111—	400000—	0—15000—	86
REAR WHEELS					
AC1070	Rear Wheel with Rim Strip (Low Pressure Rubber Tires, 11.25x24)	200111—		0—15000—	89
AC1103	Rear Wheel with Rim Strip (High Pressure Rubber Tires, 9.00x36)....		400000—		89
C413	Bolt, Rear Wheel to Axle.....	200111—223802 224100—224207	400000—402695		87
C744	Washer, Hook Bolt, Plain.....	200111—	400000—	0—15000—	88
C1510	Drive Wheel (Skeleton Type, 46")....		400000—401237		87
C1538	Drive Wheel, Complete (44"x10")....		402669—		87
C1547	Drive Wheel, Complete, R. H. and L. H. (43-1/2", Skeleton Type)....	200111—	401238—		87
C1554	Drive Wheel, Complete (44"x8")....		400000—		87
C1716	Bolt, Rear Wheel, 5/8"x2-1/4".....	223803—224099 224208—	402696—		87
C2136	Collar, Rear Wheel.....	200111—225840	400000—403696		88
C2414	Bolt, Rear Wheel.....	229850—230073 230201—230368			87
D2184	Hook Bolt, less Nut, Wheel Weight, 3/4"x4"	200111—	400000—	0—15000—	88
JD1202	Drive Wheel, Complete.....	200111—		0—15000—	87
JD1212	Drive Wheel (Inset, 68" Tread)....		400000—		88
REAR WHEEL EQUIPMENT					
AC335	Road Band with Supports (One-Half)		401238—		89
AC401	Hayfield Overband with Supports and Bolts.....	200111—			89
AC649	Lug, Cast Cone.....	200111—	400000—	0—15000—	87
AC665	Road Band, Half, with Supports (2 used per C1538 and JD1212 Wheel)		402669—		89
AC918	Road Band with Supports (Single Piece).....		401238—		88
C367R	Lug, Narrow Wheel, Cast, Spade....		400000—402669		87
C368R	Road Lug, R. H.....	200111—		0—15000—	87
C369R	Road Lug, L. H.....	200111—		0—15000—	87

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
REAR WHEEL EQUIPMENT —Continued					
C1027	Extension Rim, 42-3/4"x6".....	200111-	0-15000-	88
C1030	Extension Rim Clip, Rear Wheel.....	200111-	400000-	0-15000-	88
C1235	Extension Rim, Rear Wheel, 42-3/4"x4".....	200111-	0-15000-	88
C1267	Support, Hayfield Overband.....	200111-	0-15000-	89
C1294	Meadow Grouser (Channel) R. H.	200111-	0-15000-	89
C1295	Meadow Grouser (Channel) L. H.	200111-	0-15000-	89
C1371	Support, Road Band.....	200111-	89
C1513	Bolt, Narrow Wheel Cast Spade Lug, 3/4"x4-1/2".....	400000-402668	89
C1514	Washer, Narrow Wheel Cast Spade Lug.....	400000-402668	89
C1515	Overtire (One-Half) (46" Wheel).....	400000-401237	89
C1516	Clip, Overtire (46" Wheel).....	400000-401237	87
C1517	Bolt, Overtire Clip, 3/4"x2-1/4".....	400000-401237	87
C1548	Overtire, 10" (One-Half) (43-1/2" Wheel).....	401238-	89
C1549	Clip, Overtire (43-1/2" Wheel).....	401238-	87
C1550	Tee Lug, R. H.	400000-
C1551	Tee Lug, L. H.	400000-
C1556	Extension Rim, 44"x6".....	401238-	88
C1646R	Button Lug (AC593 Complete Set).....	200111-	401238-	0-15000-	87
C1680	Support (AC635 Road Band).....	401238-405109	89
C1759	Support (AC665 Road Band).....	402669-	89
C1840	Overtire, 6" (One-Half) (43-1/2" Wheel).....	200111-	400000-	89
C2147	Support, Road Band.....	405110-	89
C2148	Support, Drive Wheel.....	401238-	89
C2199	Lug, Sand.....	200111-	400000-	0-15000-	87
D233	Spade Lug (4" High).....	200111-	400000-	0-15000-	87
D411	Bolt, Spade Lug.....	200111-	400000-	0-15000-	89
D574	Grouser, R. H., 2-1/2"x2-1/4"x5/16"x16".....	200111-	0-15000-	89
D575	Grouser, L. H., 2-1/2"x2-1/4"x5/16"x16".....	200111-	0-15000-	89
D576	Grouser, R. H., 4"x3"x3/8"x16".....	200111-	0-15000-	89
D577	Grouser, L. H., 4"x3"x3/8"x16".....	200111-	0-15000-	89
D578	Grouser, R. H., 4"x3"x3/8"x22".....	200111-	0-15000-	89
D579	Grouser, L. H., 4"x3"x3/8"x22".....	200111-	0-15000-	89
D600	Grouser, R. H., 4"x3"x3/8"x30".....	200111-	0-15000-	89
D601	Grouser, L. H., 4"x3"x3/8"x30".....	200111-	0-15000-	89
D938	Washer, used on Spade Lug Bolt.....	200111-	400000-	0-15000-	89
D1078	Spade Lug (5" High).....	200111-	400000-	0-15000-	87
D2121	Spade Lug, Heavy Duty, 5".....	200111-	400000-	0-15000-	87
D2373	Grouser, Right, Angle.....	200000-	400000-	0-15000-	89
D2374	Grouser, Left, Angle.....	200000-	400000-	0-15000-	89
WHEEL SCRAPERS					
AA399	Scraper, Front Wheel.....	400000-	90
AC591	Scraper, Right Front Wheel Double Guide Band.....	200111-	90
AC592	Scraper, Left Front Wheel Double Guide Band.....	200111-	90
AC895	Scraper Frame, Rear Wheel, Right.....	0-15000-	90
AC896	Scraper Frame, Rear Wheel, Left.....	0-15000-	90
AC922	Scraper, Right Front Wheel.....	200111-	90
AC923	Scraper, Left Front Wheel.....	200111-	90
C264R	Blade Holder, Rear Wheel Scraper.....	200111-	90
C354R	Holder, Extension Rim Scraper Blade.....	200111-	90
C1055	Scraper Blade, Rear Wheel Scraper.....	200111-	90
C1056	Brace, Platform to Rear Wheel Scraper.....	200111-	90
C1228	Blade, Front Wheel Scraper, R. H.	200111-	90
C1229	Blade, Front Wheel Scraper, L. H.	200111-	90

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	WHEEL SCRAPERS—Continued				
C1287	Brace, Extension Rim Scraper Corner	200111-			90
C1642	Scraper, Brace, Double Guide Band	200111-			90
C1643	Scraper, Blade, Double Guide Band	200111-			90
C1912	Brace, Rear Wheel Scraper (56" Tread Tractor)	200111-			90
C2090	Brace, Wheel Scraper Support (used with C1538 and JD1202 Wheels)				90
C2091	Washer, Wheel Scraper Support (used with C1538 and JD1202 Wheels)				90
C2092	Brace, Wheel Scraper, R. H. (used with C1538 and JD1202 Wheels)				90
C2093	Brace, Wheel Scraper, L. H. (used with C1538 and JD1202 Wheels)				90
C2094	Support, Wheel Scraper, R. H. (used with C1538 and JD1202 Wheels)				90
C2095	Support, Wheel Scraper, L. H. (used with C1538 and JD1202 Wheels)				90
C2138	Support, Extension Rim Scraper		400000-		90
D1767	Bolt, Scraper to Housing (used with C1538 and JD1202 Wheels)				90
	BRAKES				
AA663	Felt Washer, Brake Hub	200111-	400000-	0-15000-	90
AC48	Brake Lever with Foot Pedal, Complete, R. H. and L. H.	200111-			90
AC197	Brake Band, Complete with Lining	200111-	400000-	0-15000-	90
AC208	Brake Drum with Hub	200111-	400000-	0-15000-	90
C271	Brake Cam, R. H.	200111-		0-15000-	90
C272	Brake Cam, L. H.	200111-		0-15000-	90
C327	Brake Cam, R. H.		400000-		90
C328	Brake Cam, L. H.		400000-		90
C360R	Lever, Brake		400000-		90
C423	Anchor Pin, Brake	200111-	400000-	0-15000-	90
C485	Clip, Brake Lever Spring	200111-		0-15000-	90
C494	Washer, Felt Retainer, Brake	200111-	400000-	0-15000-	90
C596	Gasket, Brake Cam	200111-	400000-	0-15000-	90
C636	Foot Pedal, Brake	200111-			90
C656	Stop, Brake Lever (see C1537)	200111-220095	400000-402216		90
C700	Guard, Brake Drum, R. H.	200111-206023 211700-211799			90
C701	Guard, Brake Drum, L. H.	200111-206023 211700-211799			90
C1028R	Latch, Brake	200111-		0-15000-	90
C1029	Spacer, Brake Lever Latch	200111-		0-15000-	90
C1087	Lining, Brake Band	200111-	400000-	0-15000-	90
C1224	Spring, Brake Band	200111-	400000-	0-15000-	90
C1224	Spring, Brake Lever	200111-	400000-	0-15000-	90
C1248	Guard, Brake Drum, R. H.	206024-211699 211800-	400000-		90
C1249	Guard, Brake Drum, L. H.	206024-211699 211800-	400000-		90
C1372	Pin, Brake Latch		400000-		90
C1378	Latch, Brake		400000-404809		90
C1537	Stop, Brake Lever, L. H. (see C656)		400000-402216		90
C1641	Stop, Brake Lever	220096-	402217-	0-15000-	90
C1952	Guard, Brake Drum, R. H.			0-15000-	90
C1953	Guard, Brake Drum, L. H.			0-15000-	90
C2005R	Brake Lever, R. H.			0-15000-	90
C2006R	Brake Lever, L. H.			0-15000-	90
C2182	Latch, Brake		404810-		90
D635	Felt Retainer, Brake Hub	200111-	400000-	0-15000-	90
K2573	Washer, Brake Cam	200111-	400000-	0-15000-	90
1706R	Washer, Brake Latch Bolt	200111-		0-15000-	90
	FRONT AXLE AND FRONT END SUPPORT				
AC185	Front Axle, C255R, with Steering Spindle Bushing	200111-			91

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	FRONT AXLE AND FRONT END SUPPORT—Continued				
AC188	Spindle, C84R, and Knuckle, Front Wheel	200111-			91
AC346	Spindle and Knuckle, Front Wheel		400000-404809		91
AC631	Spindle and Knuckle, C1667R, Front Wheel (for 42" and 28" Rows)				91
AC774	Front Axle, C1878R, with Bushing (for 42" and 28" Rows)				91
AC1019	Double Knuckle with Spindle		404810-		91
AD821	Knuckle, D1879R, with Bushing			0-15000-	91
C237R	Bearing, Radius Rod	200111-207882			91
C302R	Support, Front End	200111-		0-15000-	91
C581	Thrust Bearing, Front Axle	200111-			91
C662	Shim, Radius Rod	200111-207882			91
C740	Pivot, Front Axle	200111-		0-15000-	91
C1108	Washer, Front Axle Spindle, Upper	200111-			91
C1270	Radius Rod, R. H.	207883-		0-15000-	91
	(Note: Substitute with C1271 for AC191 on Tractors 200111 to 207882)				
C1271	Radius Rod, L. H.	207883-		0-15000-	91
	(Note: Substitute with C1270 for AC191 on Tractors 200111 to 207882)				
C1539	Cap Screw, Front Axle Pivot, 3/8"x 3-1/2"	214851-		0-15000-	91
C1671	Bushing, Front Axle Spindle (for 42" and 28" Row Axle)				91
C1675	Thrust Bearing, Front Axle (for 42" and 28" Row Axle)				91
C2022R	Front Axle			0-15000-	91
C2170	Support, Front End		404810-		91
D96R	Nut, Front Axle Pivot Pin	200111-214850			91
D156	Bolt, Spindle Pin, Tapered, 5/16"x 2-1/2"			0-15000-	91
D555	Bushing, Front Axle Spindle	200111-			91
D1250	Thrust Washer, Front Wheel Knuckle			0-15000-	91
D1701	Pin, Front Axle Spindle			0-15000-	91
D1881	Cap, Front Wheel Knuckle			0-15000-	91
D1888	Bushing, Front Wheel Knuckle			0-15000-	91
JD7792	Oil Fitting, Front Axle, 1/8", Bassick No. 1365	200111-207344			91
	FRONT WHEELS				
AA663	Felt Washer, Front Wheel	200111-	400000-	0-15000-	92
AC119	Hub Cap, C167R, with Oil Fitting	200111-	400000-	0-15000-	92
AC371	Hub, C333R, with Races, Disk Type Front Wheel		400000-400678		92
AC439	Front Wheel with Races, less Hub Cap	{208384-213037 213538-213542			92
AC513	Hub, C391R, with Races, Disk Type Front Wheel		400679-402668		92
AC513	Hub, C391R, with Races		402669-		92
AC651	Front Wheel with Races, less Hub Cap	{200111-208383 213543-230745 213038-213537			92
AC830	Front Wheel, C2020R, with Races			0-15000-	92
AC847	Front Wheel, C334R, with Bolts (Disk Type)		400000-		92
AC885	Front Wheel with Races, less Hub Cap		402669-		92
AC1062	Front Wheel (High or Low Pressure Rubber Tires, 6.00x16)	200111-		0-15000-	92
AC1088	Front Wheel with Cups and Rim Strips (Low Pressure Rubber Tires, 5.50x16)		400000-		92

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No
		General Purpose	Wide Tread	Orchard	
FRONT WHEELS—Continued					
AD452	Nut, D1082R, Front Wheel Bearing with Cap Screw.....	200111-	400000-	0-15000-	92
C677	Gasket, Front Wheel Hub Cap.....	200111-	400000-	0-15000-	92
C722	Extension Rim, Front Wheel (24"x5")	200111-			93
C1238	Guide Band, 3-1/2" High (2 used per Wheel).....			0-15000-	93
C1276	Guide Band, 4" High (for Listed Corn).....	200111-		0-15000-	93
C1498	Hayfield Band, Front Wheel (AC403 Hayfield Overband).....	200111-		0-15000-	93
C1672	Felt Retainer, Front Wheel (for 42" and 28" Row Axle).....				
C1673	Felt Washer, Front Wheel (for 42" and 28" Row Axle).....				
C1732	Guide Band, 2-1/2" High, Front Wheel (1 used per Wheel).....	223803-	402669-	0-15000-	93
C2021	Enclosure Disk, Front Wheel.....			0-15000-	92
C2308	Rim, Front Wheel Extension.....		402669-		93
C2309	Clip, Front Wheel Extension.....		402669-		93
C2367	Hub Cap, Front Wheel.....	200111-229215		0-15000-0-15411	92
D583	Rim Clamp, Front Wheel Extension Rim.....	200111-		0-15000-	93
D584R	Washer, Rim Clamp, Front Wheel Extension Rim.....	200111-		0-15000-	93
D635	Felt Retainer, Front Wheel.....	200111-	400000-	0-15000-	92
D2217	Hub Cap, Front Wheel.....	229216-		0-15412-	92
D2218	Gasket, Front Wheel Hub Cap.....	229216-		0-15412-	92
FRONT WHEELS AND FRONT WHEEL EQUIPMENT					
JD1208	Front Wheel, less Hub (42" and 28" Row Axle).....				
JD7216	Cone, with Rollers, Outside, Front Wheel Bearing.....	{ 200111-208383 213038-213537 213543-	400679-	0-15000-	92
JD7219	Cone, with Rollers, Outside, Front Wheel Bearing.....	{ 208384-213037 213538-213542 200111-208383 213038-213537 213543-	400000-400678		92
JD7224	Cone, with Rollers, Inside, Front Wheel Bearing.....	{ 200111-208383 213038-213537 213543-	400679-	0-15000-	92
JD7226	Cone, with Rollers, Inside, Front Wheel Bearing.....	{ 208384-213037 213538-213542	400000-400678		92
JD7246	Cone, with Rollers, Outside, Front Wheel Hub Bearing (for 42" and 28" Row Axle).....				92
JD7247	Cone, with Rollers, Inside, Front Wheel Hub Bearing (for 42" and 28" Row Axle).....				92
JD7262	Cup, Outside, Front Wheel Bearing.....	{ 208384-213037 213538-213542 200111-208383 213038-213537 213543-	400000-400678		92
JD7266	Cup, Outside, Front Wheel Bearing.....	{ 213538-213542 200111-208383 213038-213537 213543-	400679-	0-15000-	92
JD7270	Cup, Inside, Front Wheel Bearing (also 42" and 28" Row Axle).....	200111-	400000-	0-15000-	92
JD7297	Cup, Inside, Front Wheel Hub Bearing (for 42" and 28" Row Axle).....				92
JD7759	Alemite Zerk Fitting, Alemite Model 1610, in Front Wheels (Purchase Locally).....	207345-	400000-	0-15000-	92
PEDESTAL					
AC408	Front Pedestal, C1274R, with Steering Arm Bushings.....		400000-404809		93
AC416	Sleeve, C336R, Steering Spindle with Pin.....		400000-404809		93

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
PEDESTAL—Continued					
C331R	Felt Retainer, Lower Pedestal.....		400000-404809		93
C337R	Eccentric, Steering Spindle.....		400000-404809		93
C338R	Lock Plate, Steering Spindle Eccentric.....		400000-404809		93
C1275R	Support, Front End.....		400000-		91
C1288	Pin, Steering Spindle Sleeve.....		400000-		93
C1381	Washer, Steering Arm Shaft Spindle.....		400000-404809		93
C1382	Cover, Pedestal.....		400000-404809		93
C1388	Felt Washer, Pedestal, Lower.....		400000-404809		93
C1390	Washer, Cork, Steering Spindle.....		400000-404809		93
C1391	Gasket, Pedestal, Cover.....		400000-404809		93
C1392	Gasket, Pedestal, Lower, Felt Re- tainer.....		400000-404809		93
C1455	Bushing, Steering Arm, Upper.....		400000-		93
C1456	Bushing, Steering Arm, Lower.....		400000-		93
C1521	Welsh Plug, Steering Arm Shaft.....		400000-404809		93
C2328R	Pedestal.....		404810-		93
C2329R	Support, Pedestal.....		404810-		93
D96R	Nut, Steering Spindle, Top.....		400000-404809		93
D679	Welsh Plug, Pedestal.....		400000-405110		93
D1034	Gasket, Eccentric Lock Plate.....		400000-404809		93
JD7226	Cone, with Rollers, Front Steering Spindle, Upper Bearing.....		400000-404809		93
JD7242	Cone, with Rollers, Front Steering Spindle, Lower Bearing.....		400000-404809		93
JD7270	Cup, Front Steering Spindle, Upper Bearing.....		400000-		93
JD7292	Cup, Front Steering Spindle, Lower Bearing.....		400000-404809		93
684R	Washer, Lower Spindle, Felt Retainer.....		400000-404809		93
STEERING PARTS					
A275	Retainer, Steering Shaft Cork.....		405139-		94
A360	Spring, Steering Shaft Oil Seal.....		405139-		94
A394	Washer, Steering Shaft Cork.....		405139-		94
AA380	Wheel, Steering.....		404810-		96
AC171	Drag Link, Complete.....	200111-			94
AC352	Dust Cover, Drag Link, Front.....		400000-404809		94
AC427	Steering Shaft, C915, with Worm, C275R.....	210156-	400000-404809	0-15000-	94
AC428	Wheel, with Stop Pin, Steering Worm.....	200111-	400000-404809	0-15000-	94
AC429	Drag Link, Complete.....		400000-404809		94
AC733	Steering Arm, C292R, R. H., with Bolt.....	{200211-211782 211800-211981			94
AC734	Steering Arm, C293R, L. H., with Bolt.....	{200111-211782 211800-211981			94
AC735	Steering Arm, C376R, R. H., with Bolt.....	{211783-211799 211982-			94
AC736	Steering Arm, C377R, L. H., with Bolt.....	{211783-211799 211982-			94
AC737	Steering Arm, C324R, with Bolt, Front.....		400000-404809		94
AC775	Drag Link, Complete (for 42" and 28" Row Unit).....			0-15000-	94
AC803	Drag Link, Complete.....			0-15000-	94
AC1019	Double Knuckle with Spindle.....		404810-		91
AC1067	Worm and Shaft, Steering.....		405139-		94
C112R	Collar, Steering Column.....	200111-	400000-404809	0-15000-	94
C232	Arm, Steering Gear.....	200111-	400000-404809		94
C275R	Worm, Steering (replaced by AC427 after this Serial No.).....	200111-210155			94
C276R	Adjusting Nut, Steering Worm.....	200111-	400000-404809	0-15000-	94
C321R	Housing, Steering Gear.....	200111-	400000-404809		94
C322R	Housing, Steering Worm.....	200111-	400000-404809		94
C325R	Gear, Spindle.....		400000-404809		94

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	STEERING PARTS—Continued				
C326R	Gear, Steering Arm.....		400000-404809		94
C678	Wheel, Steering.....	200111-	400000-404809	0-15000-	96
C838	Bearing, Ball Stud, Drag Link and Tie Rod.....	200111-	400000-	0-15000-	94
C840	Screw Plug, Drag Link and Tie Rod	200111-	400000-	0-15000-	94
C909	Stop Pin, Steering.....	200111-			94
C915	Steering Shaft (replaced by AC427 after this Serial No.).....	200111-210155			94
C918	Coupling, Steering Shaft.....	200111-210155			94
C934	Support, Steering Column.....	200111-	400000-404809		94
C977	Adjusting Screw, Steering Gear, Vertical Shaft.....	200111-	400000-404809	0-15000-	94
C978	Stop Screw, Steering Gear.....	200111-			94
C979	Set Screw, Headless, Steering Shaft Coupling.....	200111-210155			94
C985	Nut, Steering Wheel.....	200111-	400000-404809	0-15000-	94
C989	Tube, Steering Gear, Vertical Shaft	200111-	400000-404809	0-15000-	94
C1020	Tube, Steering Shaft.....	200111-	400000-404809	0-15000-	94
C1021	Bushing, Steering Shaft, Upper.....	200111-	400000-404809	0-15000-	94
C1024	Tie Rod.....	200111-			94
C1059	Thrust Washer, Steering Worm Wheel	200111-	400000-404809	0-15000-	94
C1102	Bushing, Steering Gear, Vertical Shaft.....	200111-	400000-	0-15000-	94
C1104	Nut, Steering Gear Shaft.....	200211-	400000-404809	0-15000-	94
C1109	End, Tie Rod.....	200211-		0-15000-	94
C1215	Spring, Oil Seal, Lower Steering Gear Shaft.....	200211-	400000-404809	0-15000-	94
C1220	Dowel Pin, Steering Gear Housing..	200111-	400000-	0-15000-	94
C1231	Gasket, Steering Worm Housing (Thick).....	200111-	400000-404809	0-15000-	94
C1234	Shaft, Steering Gear.....	200111-	400000-404809	0-15000-	94
C1242	Gasket, Steering Worm Housing (Thin).....	200111-	400000-404809	0-15000-	94
C1373	Shaft, Steering Arm.....		400000-404809		94
C1637R	Housing, Steering Gear.....			0-15000-	94
C1638R	Wheel, Steering Worm.....			0-15000-	94
C1639	Support, Steering Column.....			0-15000-	94
C1875	Tie Rod (for 42" and 28" Row Axle)				94
C1876R	Arm, R. H., Steering (for 42" and 28" Row Axle).....				94
C1877R	Arm, L. H., Steering (for 42" and 28" Row Axle).....				94
C2023R	Steering Arm, R. H.....			0-15000-	94
C2024R	Steering Arm, L. H.....			0-15000-	94
C2025	Tie Rod.....			0-15000-	94
C2027	Arm, Steering Gear.....			0-15000-	94
C2088	Support Brace, Steering Column.....			0-15000-	94
C2281	Support, Steering Shaft and Control Quadrant.....		404810-		94
C2312	Nut, Steering Worm, Adjusting.....		404810-405138		94
C2313	Plate, Steering Worm, Adjusting.....		404810-405138		94
C2314	Oil Seal, Steering Shaft.....		404810-405138		94
C2315R	Housing, Steering Gear.....		404810-		94
C2316	Cover, Steering Gear Housing.....		404810-		94
C2317	Gasket, Steering Gear Housing Cover		404810-		94
C2318	Gasket, Steering Gear Housing Cork		404810-		94
C2319R	Sector, Steering.....		404810-		94
C2320	Key, Steering Sector.....		404810-		94
C2321	Washer, Steering Sector.....		404810-		94
C2324	Washer, Spindle, Lower Cork Retainer.....		404810-		94
C2325	Washer, Spindle, Lower, Cork.....		404810-		94
C2326	Cap, Spindle, Lower, Cork.....		404810-		94
C2327	Gasket, Spindle, Lower, Cork Cap..		404810-		94
C2370R	Nut, Steering Worm, Adjusting.....		405139-		94
C2371	Cork, Steering Adjustment.....		405139-		94
C2372	Plate, Steering Adjustment.....		405139-		94
D147	Washer, Rear, Steering Arm, Adjusting.....	200111-	400000-	0-15000-	94

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	STEERING PARTS—Continued				
D156	Bolt, Spindle Pin Taper, 5/16"x2-1/2"			0-15000-	
D342	Key, Steering Shaft	200111-	400000-	0-15000-	94
D743	Washer, Oil Seal, Lower, Steering Gear, Vertical Shaft	200211-	400000-404809	0-15000-	94
D825	Felt Washer, Lower, Steering Gear Shaft	200111-	400000-	0-15000-	94
D1767	Bolt, Steering Arm	200111-	400000-404809		94
D1771	Nut, Steering Wheel to Shaft		404810-		96
D1898	Stud, Steering Arm, 5/8"x3-5/8"			0-15000-	94
JD7205	Cone, with Rollers, Steering Worm Bearing		404810-		94
JD7250	Cup, Steering Worm Bearing, Front	200111-	400000-	0-15000-	94
JD7253	Cup, Steering Worm Bearing		404810-		94
JD7297	Cup, Lower, Spindle Bearing		404810-		94
JD7350	Cone, Lower, Spindle Bearing		404810-		94
JD7356	Cone, with Rollers, Steering Worm Bearing, Rear	200111-	400000-	0-15000-	94
JD7358	Cone, with Rollers, Steering Worm Bearing, Front	200111-	400000-	0-15000-	94
JD7402	Cup, Steering Worm Bearing, Rear	200111-	400000-	0-15000-	94
JD7759	Alemite Zerk Fitting, Steering Spindle and Shaft, Alemite No. 1610	207345-	400000-	0-15000-	94
JD7792	Oil Fitting, Steering Shaft, 1/8", Bassick No. 1365	200111-207344			94
	DRAWBAR				
AC286	Swinging Drawbar	200211-			95
AC644	Swinging Drawbar		400000-		95
AC790	Swinging Drawbar			0-15000-	95
AC1037	Drawbar		400000-		95
AC1065	Drawbar (use with GP135 Lister)		400000-		95
C1210	Drawbar	200211-			95
C1211	Cross Member for Swinging Drawbar	200211-		0-15000-	95
C1213	Spacer, Drawbar	200211-	400000-	0-15000-	95
C1682	Cross Member, Front Swinging Drawbar		400000-		95
C2011	Drawbar			0-15000-	95
C2013	Support Strap, Drawbar			0-15000-	95
1719R	Washer, Drawbar Cap Screws	200211-	400000-	0-15000-	95
	AC580 PLOW SHIFTER				
AC582	Screw	200211-			95
AC583	Screw Guard	200211-			95
C1610R	Vertical Bevel Gear	200211-			95
C1611R	Yoke	200211-			95
C1612R	Bearing, R. H.	200211-			95
C1613R	Bearing, L. H.	200211-			95
C1616	Vertical Crank	200211-			95
C1617	Race, Vertical Crank	200211-			95
C1618R	Bearing, Vertical Crank, Lower	200211-			95
C1619	Clamp, Vertical Crank Brace	200211-			95
D403	Key, Bevel Gear	200211-			95
	SEAT				
AC282	Seat Spring and Leaf	200211-	400000-404809		96
AC351	Clamp, Seat Spring with Trip Pedal Bracket		400000-400678		96
AC781	Seat Spring and Leaf			0-15000-	96
C1177	Clamp, Seat Spring	200211-	400679-404809		96
C1785	Seat	200211-	400000-404809		96
C2096	Clamp, Seat Spring and Trip Pedal Support			0-15000-	96
C2183	Support, Seat, Lower		404810-		
C2184	Support, Seat, Upper		404810-		96
C2185	Pin, Seat Pivot		404810-		96
C2186	Bracket, Seat Spring, Lower		404810-		96

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No. 1
		General Purpose	Wide Tread	Orchard	
SEAT—Continued					
C2187	Washer, Seat Spring, Centering		404810—		96
C2188	Spacer, Seat Bolt		404810—		
C2189	Spring, Seat		404810—		
C2190	Nut, Seat Spring, Adjusting		404810—		96
C2191	Eyebolt, Seat Spring		404810—		
C2192	Bolt, Seat Pivot, Link		404810—		96
C2193	Spacer, Seat Eyebolt		404810—		
C2194	Link, Seat Pivot		404810—		96
C2195	Bushing, Seat Pivot Link		404810—		96
C2307	Washer, Seat Pivot Link, Adjusting		404810—		96
D827	Washer, on Seat Bolt			0-15000—	96
D897	Stud, Seat Spring Clamp	200211—	400000—	0-15000—	96
D1796	Seat		404810—	0-15000—	96
D1797	Clamp Nut, Seat			0-15000—	96
SWING SEAT					
A317	Bolt, Seat to Support		400000—		96
AC861	Bracket, Complete		400000—		96
C826	Stud, Seat Bracket, 3/4"x3-1/2"		400000—		96
C1974	Spacer, Seat Support		400000—		96
C1975R	Body, Seat Support		400000—		96
C1976	Pivot, Seat		400000—		96
C1977R	Latch, Seat, Adjusting		400000—		96
C1978	Pivot Pin, Latch		400000—		96
C1979	Support, Seat (Channel)		400000—		96
C1980	Pin, Support		400000—		96
C1981	Bolt, Seat Spring		400000—		96
C1982R	Washer, Seat Spring		400000—		96
C1983	Spring, Seat		400000—		96
C1984R	Plate, Swivel Seat		400000—		96
C1985	Spacer, Swivel Seat Bolt		400000—		96
D1796	Seat		400000—		96
D1797	Clamp Nut, Seat		400000—		96
E2296	Spring, Seat Adjusting Latch		400000—		96
PLATFORM					
AC826	Platform, with Front Supports and Side Angles			0-15000—	97
C943	Cross Angle, Platform	200111—			97
C945	Platform, Rear	200111—			97
C946	Platform, Center	200111—			97
C947	Platform, Right	200111—			97
C1032	Platform, Left	200111—			97
C1177	Support, Platform, Front	200211—			97
C1827	Washer, Front and Rear Support Bolts			0-15000—	97
C2040	Angle, Rear Support, R. H.			0-15000—	97
C2041	Angle, Rear Support, L. H.			0-15000—	97
C2042R	Support, Platform, R. H.			0-15000—	97
C2043R	Support, Platform, L. H.			0-15000—	97
C2045	Support, Platform, Front			0-15000—	97
C2046	Side Angle, Platform			0-15000—	97
C2047	Cross Angle, Platform			0-15000—	97
C2176	Platform		404810—		97
C2177	Bracket, Platform		404810—		97
C2178	Brace, Platform		404810—		97
C2271	Stud, Platform Support		404810—		97
D316	Washer, Platform, R. H. and L. H., to Support			0-15000—	97
27R	Washer, Rear Support Angle			0-15000—	97
629R	Washer, Platform, to Support Bolts			0-15000—	97
FENDERS					
AC242	Citrus Grove Fender, R. H.	200111—			99
AC243	Citrus Grove Fender, L. H.	200111—			99
AC374	Fender, Complete, R. H.	200111—			99
AC375	Fender, Complete, L. H.	200111—			99
AC602	Fender, Complete, R. H.		400000—		98

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	FENDERS—Continued				
AC603	Fender, Complete, L. H.		400000—		98
AC738	Guard, with Brace, Pulley.	224100—			99
AC802	Guard, with Brace, Pulley.	200111—224099			99
AC810	Citrus Grove Fender, R. H.			0—15000—	98
AC811	Citrus Grove Fender, L. H.			0—15000—	98
AC821	Fender, Complete, R. H.			0—15000—	98
AC822	Fender, Complete, L. H.			0—15000—	98
AC827	Dust Shield, Front, R. H., with Support.			0—15000—	99
AC828	Dust Shield, Front, L. H., with Support.			0—15000—	99
AC850	Dust Shield, Front, L. H.	200111—			99
AC873	Fender, Complete, R. H. (used with JD1212 Wheel).				98
AC874	Fender, Complete, L. H. (used with JD1212 Wheel).				98
C933	Brace, Fender, to Housing.	200111—206023			99
C1052	Brace, Fender, L. H.	200111—			99
C1053	Cross Brace, Fender.	200111—224099			99
C1054	Tie Rod, Fender.	200111—224099			99
C1252	Brace, Fender, to Housing.	206024—			99
C1648	Brace, Fender, Rear.		400000—		98
C1698	Brace, Citrus Grove Fender, R. H. ...	200211—224099			99
C1699	Brace, Citrus Grove Fender, R. H. ...	224100—			99
C1831	Brace, Pulley Guard.	200111—			99
C1894	Spacer, Rear Fender Brace (used with AC873 and AC874).				
C1964	Side Support, Citrus Fender.			0—15000—	98
C1965	Adjusting Strap, L. H.			0—15000—	99
C1966	Adjusting Strap, R. H.			0—15000—	99
C1967	Support, Citrus Fender.			0—15000—	99
C2036	Cross Brace, Fender.			0—15000—0—15225	99
C2037	U-Bolt, Fender Cross Brace.			0—15000—0—15225	99
C2050	Support, Dust Shield, Front, R. H. ...			0—15000—	99
C2051	Support, Dust Shield, Front, L. H. ...			0—15000—	99
C2086	Brace, Fender Support, R. H. (Short)			0—15000—0—15225	99
C2087	Brace, Fender Support, L. H. (Long)			0—15000—0—15225	99
C2272	Brace, R. H., Fender.			0—15226—	99
C2273	Brace, L. H., Fender.			0—15226—	99
C2276	Brace, Fender, Cross.			0—15226—	99
1705R	Washer, Fender Bolts.	200111—			99
	MAGNETO				
AC284	Wire, R. H., Spark Plug.	{ 200111—213037 213538—214850 223803—	400000—400718		100
AC284	Wire, L. H., Spark Plug.	{ 200111—213037 213538—214850	402040—404809	0—15000—	100
AC285	Wire, L. H., Spark Plug.	{ 200111—213037 213538—214850	400000—400718		100
AC432	Magneto, with Spark Advance Stop (replaced by AC1176, except as shown).		404810—405109		100
AC441	Shaft, Governor, C1193, with Mag- neto Drive Flange, C363R.	200111—209462			78
AC561	Wire, R. H., Spark Plug.	{ 213038—213537 214851	400719—404809	0—15000—	100
AC562	Wire, L. H., Spark Plug.	{ 213038—213537 214851—223802	400719—402039		100
AC600	Spark Plug.	223803—	402040—	0—15000—	100
AC1032	Wire, R. H., Spark Plug. Note: Used on all Tractors equipped with AC1177 Magneto.		404810—		100
AC1033	Wire, L. H., Spark Plug.		404810—		100
AC1176	Magneto, Complete, with Spark Plug Wires.	200111—	{ 400000—404809 405110—	0—15000—	100
AC1180	Cable, with Safety Nipple, L. H., Spark Plug (use with AC1176).	200111—	{ 400000—404809 405110—	0—15000—	100

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
MAGNETO—Continued					
C363R	Flange, Magneto Drive.....	209463-228220	400000-404557	0-15000-0-15172	100
C424	Plate, Magneto Timing.....	200111-	400000-	0-15000-	100
C471	Clamp Ring, Magneto Timing Plate.....	200111-	400000-	0-15000-	100
C1016	Bracket, Magneto.....	200111-	400000-404809	0-15000-	100
C1203	Arm, Magneto Control.....	200211-	400000-404809	0-15000-	100
C1204	Stop, Magneto, Advance.....	200211-	400000-	0-15000-	100
C1300	Safety Nipple, Spark Plug Wire.....	200111-	400000-	0-15000-	100
C1600	Spark Plug.....	200111-223802	400000-402039	0-15000-	100
C1603	Bracket, Spark Plug Wire.....	214851-223802	400719-402039	0-15000-	100
C1631	Clip, Spark Plug Wire.....	223803-	402040-404809	0-15000-	100
C1756	Porcelain, for C1600 Spark Plug.....	200111-223802	400000-402039	0-15000-	100
C2057R	Flange, Magneto Drive.....	228221-	404558-	0-15173-	100
C2304	Tube, Spark Plug Wire.....	404810-	100
C2305	Clamp, Spark Plug Wire Tube.....	404810-	100
C2306	Tube Plug.....	404810-	100
C2331	Porcelain, Spark Plug (for C4 or 3X).....	223403-	402040-	0-15000-	100
C2381	Collar, Magneto Drive.....	200111-	400000-	0-15000-	100
C2435	Pin, Impulse Stop.....	200111-	400000-	0-15000-	100
D316	Washer, Magneto Bracket.....	200111-	400000-404809	0-15000-	100
D369	Wood Clamp, Spark Plug Wires.....	200111-	400000-404809	0-15000-	100
D403	Key, Magneto Drive Flange.....	228221-	404558-	0-15173-	100
D465	Gasket, Spark Plug.....	223803-	402040-	0-15000-	100
D1945	Dust Shield, Magneto Drive Flange.....	404810-	100
AC432 MAGNETO PARTS					
AC300	Brush Holder, with Brushes and Springs.....	200111-200210	101
AC301	Brush Holder, with Brushes and Springs.....	200211-	400000-	0-15000-	101
AC305	Impulse Starter, Complete.....	200111-	400000-	0-15000-	101
AC306	Impulse Drive Member with Pawls, fits Armature Shaft.....	200111-	400000-	0-15000-	101
AC1054	Armature, Complete.....	200111-	400000-	0-15000-	101
C1302	Spark, Advance, Stop Screw.....	200111-	400000-	0-15000-	101
C1303	Spark, Advance, Stop Screw, Lock Washer.....	200111-	400000-	0-15000-	101
C1303	End Cap Cover Screw Lock Washer.....	200111-	400000-	0-15000-	101
C1303	Brush Holder Screw Lock Washer.....	200111-200210	101
C1304	End Cap Machine Screw.....	200111-	400000-	0-15000-	101
C1305	Adjustment Hole Screw Plug.....	200111-	400000-	0-15000-	101
C1306	End Cap.....	200111-	400000-	0-15000-	101
C1307	Dust Washer, End Cap, Cork.....	200111-	400000-	0-15000-	101
C1308	Gasket, End Cap.....	200111-	400000-	0-15000-	101
C1309	Reduction Gear Holder and Intermediate Gears.....	200111-	400000-	0-15000-	101
C1311	Snap Ring, Driving Gear.....	200111-	400000-	0-15000-	101
C1312	Gear, with Wood Washer, Driving.....	200111-	400000-	0-15000-	101
C1313	Key, Driving Gear.....	200111-	400000-	0-15000-	101
C1314	Thrust Washer and Retainer, Driving Gear.....	200111-	400000-	0-15000-	101
C1315	Cam Holder.....	200111-	400000-	0-15000-	101
C1316	Cam, Gear.....	200111-	400000-	0-15000-	101
C1317	Brush and Spring, Round.....	200111-	400000-	0-15000-	101
C1318	Screw, Brush Holder.....	200111-200210	400000-	0-15000-	101
C1319	Brush Holder Screw.....	200211-	400000-	0-15000-	101
C1320	Brush Holder Screw Lock Washer.....	200211-	400000-	0-15000-	101
C1321	Collector Brushes.....	200111-	400000-	0-15000-	101
C1322	Collector Brush Spring.....	200111-	400000-	0-15000-	101
C1324	Collector Brush Spring Screw Lock Washer.....	200111-	400000-	0-15000-	101
C1325	Brush Holder Gasket.....	200111-	400000-	0-15000-	101
C1326	Screw, End Cover.....	200111-	400000-	0-15000-	101
C1327	Impulse End Cover.....	200111-	400000-	0-15000-	101
C1328	Impulse End Cover Felt Washer.....	200111-	400000-	0-15000-	101
C1329	Impulse End Cover Cage Washer.....	200111-	400000-	0-15000-	101
C1330	Armature Shaft Nut Lock Wire.....	200111-	400000-	0-15000-	101
C1331	Armature Shaft Nut.....	200111-	400000-	0-15000-	101
C1332	Impulse Cam Member, fits Drive Collar.....	200111-	400000-	0-15000-	101

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AC432 MAGNETO PARTS				
	—Continued				
C1333	Impulse Spring	200111-	400000-	0-15000-	101
C1334	Impulse Drive Member Pawl	200111-	400000-	0-15000-	101
C1335	Impulse Drive Member Woodruff Key	200111-	400000-	0-15000-	101
C1336	Impulse Stop Screw	200111-	400000-	0-15000-	101
C1337	Snap Ring, Collector Ring Lock	200111-	400000-	0-15000-	101
C1338	Collector Ring	200111-	400000-	0-15000-	101
C1339	Collector Brush Spring Screw	200111-	400000-	0-15000-	101
C1341	Breaker Arm with Pivot	200111-	400000-	0-15000-	101
C1342	Support, Stationary Contact	200111-	400000-	0-15000-	101
C1343	Lock Screw, Stationary Contact Sup- port	200111-	400000-	0-15000-	101
C1344	Lock Washer, Stationary Contact Support Lock Screw	200111-	400000-	0-15000-	101
C1345	Insulator, Stationary Contact Sup- port	200111-	400000-	0-15000-	101
C1346	Screw, with Bushing and Washer, Stationary Contact Support	200111-	400000-	0-15000-	101
C1347	Pin and Washer, Fulcrum	200111-	400000-	0-15000-	101
C1348	Post, Breaker Bar Actuating Spring	200111-	400000-	0-15000-	101
C1349	Screw, Condenser	200111-	400000-	0-15000-	101
C1350	Lock Washer, Condenser Screw	200111-	400000-	0-15000-	101
C1350	Lock Washer, Stationary Contact Primary Screw	200111-	400000-	0-15000-	101
C1351	Screw, Stationary Contact, Primary	200111-	400000-	0-15000-	101
C1352	Insulator, Stationary Contact, Pri- mary Screw	200111-	400000-	0-15000-	101
C1353	Condenser	200111-	400000-	0-15000-	101
C1355	Thrust Washer, Driving End	200111-	400000-	0-15000-	101
C1356	Thrust Washer, Armature Driven End	200111-	400000-	0-15000-	101
C1357	Frame, with Washer and Outer Race	200111-	400000-	0-15000-	101
C1358	Frame Rollers with Cage	200111-	400000-	0-15000-	101
C1359	Retainer (for C1358)	200111-	400000-	0-15000-	101
C1360	Magnet	200111-	400000-	0-15000-	101
C1361	Pin, Magnet	200111-	400000-	0-15000-	101
C1362	Impulse, Pawl Rivet	200111-	400000-	0-15000-	101
C1363	Impulse, End Cover Screw	200111-	400000-	0-15000-	101
C1365	Adjustment Hole Screw Plug Gasket	200111-	400000-	0-15000-	101
C1366	Contact Screw with Contact Point	200111-	400000-	0-15000-	101
C1367	Retainer, Timing Lever Cork Washer	200111-	400000-	0-15000-	101
C1368	Brass Shim, Armature End Plate	200111-	400000-	0-15000-	101
C1369	Balls, Cam and Back Gear Ball Bearing	200111-	400000-	0-15000-	101
C1796	Wood Bushing, Intermediate Gear Retainer	200111-	400000-	0-15000-	101
C1797	Retainer, Intermediate Gear Wood Bushing	200111-	400000-	0-15000-	101
C1798	Snap Ring, Intermediate Gear Shaft	200111-	400000-	0-15000-	101
C1866	Spring, Breaker Bar, Retaining	200111-	400000-	0-15000-	101
C1867	Rivet, Breaker Bar, Retaining	200111-	400000-	0-15000-	101
C1868	Bushing, Breaker Bar, Retaining, Spring Spacing	200111-	400000-	0-15000-	101
C1897	Bushing, Ground Brush	200111-	400000-	0-15000-	101
C1898	Thrust Washer, Roller Bearing	200111-	400000-	0-15000-	101
C1899	Holder, Intermediate Gear	200111-	400000-	0-15000-	101
C1991	Wood Washer, Driving Gear	200111-	400000-	0-15000-	101
C1992	Outer Race, Armature Bearing	200111-	400000-	0-15000-	101
C1993	Terminal, Armature, Cupped Copper	200111-	400000-	0-15000-	101
C1994	Washer, Armature, Cupped	200111-	400000-	0-15000-	101
C1995	Brush Pin, Ground	200111-	400000-	0-15000-	101
C1996	Lock Washer, Breaker Lever Fulcrum	200111-	400000-	0-15000-	101
C1997	Bushing, Stationary Contact Support	200111-	400000-	0-15000-	101
C1998	Screw Washer, Stationary Contact Support	200111-	400000-	0-15000-	101
C1999	Thrust Bearing (Wood) Intermediate Gear Holder	200111-	400000-	0-15000-	101

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
AC432 MAGNETO PARTS					
—Continued					
C2218	Bracket, Magneto.....		404810-		
C2380	Gear, Intermediate.....	200111-	400000-	0-15000-	101
C2395	Gear, with Outer Race, Intermediate	200111-	400000-	0-15000-	101
C2396	Race, Intermediate Gear Side.....	200111-	400000-	0-15000-	101
C2397	Spacer, Intermediate Gear Bearing.	200111-	400000-	0-15000-	101
C2398	Snap Ring, Intermediate Gear Bearing	200111-	400000-	0-15000-	101
C2436	Plate, Rotor, Insulating.....	200111-	400000-	0-15000-	100
C2437	Safety Spark Gap.....	200111-	400000-	0-15000-	100
D395	Magneto Seal.....	200111-	400000-	0-15000-	101
AC1176 MAGNETO PARTS					
A692	Insulating Strip, Distributor Bearing	200111-	{400000-404809 405110-	0-15000-	100
A693	Top Cover, Frame.....	200111-	{400000-404809 405110-	0-15000-	100
A694	Gasket, Frame, Top Cover.....	200111-	{400000-404809 405110-	0-15000-	100
A695	Gasket, Brush Holder.....	200111-	{400000-404809 405110-	0-15000-	100
A698	Nut, Primary Lead.....	200111-	{400000-404809 405110-	0-15000-	100
A698	Nut, Stationary Contact Screw.....	200111-	{400000-404809 405110-	0-15000-	100
A700	Snap Ring, Distributor Shaft.....	200111-	{400000-404809 405110-	0-15000-	100
A701	Clamp Screw, Bridge.....	200111-	{400000-404809 405110-	0-15000-	100
A702	Cork Washer, Distributor Bearing, Oil Seal.....	200111-	{400000-404809 405110-	0-15000-	100
A702	Cork Washer, Rotor Shaft.....	200111-	{400000-404809 405110-	0-15000-	100
A703	Retainer, Distributor Bearing, Oil Seal Washer.....	200111-	{400000-404809 405110-	0-15000-	100
A704	Washer, Distributor Bearing, Flat...	200111-	{400000-404809 405110-	0-15000-	100
A705	Screw, Breaker Bar Clip.....	200111-	{400000-404809 405110-	0-15000-	100
A706	Snap Ring, Distributor Cup.....	200111-	{400000-404809 405110-	0-15000-	100
A707	Spacer, Distributor Bearing Cup....	200111-	{400000-404809 405110-	0-15000-	100
A708	Lock Nut, Stationary Contact Screw and Point.....	200111-	{400000-404809 405110-	0-15000-	100
A709	Screw, Stationary Contact Support..	200111-	{400000-404809 405110-	0-15000-	100
A710	Support, Stationary Contact.....	200111-	{400000-404809 405110-	0-15000-	100
A712	Insulator, Stationary Contact Support	200111-	{400000-404809 405110-	0-15000-	100
A715	Pin, Breaker Bar Fulcrum.....	200111-	{400000-404809 405110-	0-15000-	100
A716	Insulating Strip, Rotor Bearing.....	200111-	{400000-404809 405110-	0-15000-	100
A717	Insulating Washer, Rotor Bearing...	200111-	{400000-404809 405110-	0-15000-	100
A718	Terminal, Primary Lead Wire.....	200111-	{400000-404809 405110-	0-15000-	100
A721	Cup Washer, Oil Seal.....	200111-	{400000-404809 405110-	0-15000-	100
A722	Rotor Gear.....	200111-	{400000-404809 405110-	0-15000-	100
A766	Lock Washer, Breaker Bar Clip Screw	200111-	{400000-404809 405110-	0-15000-	100

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AC1176 MAGNETO PARTS —Continued				
A766	Lock Washer, Stationary Contact Support Screw.....	200111-	{400000-404809 405110-	0-15000-	100
A766	Lock Washer, Primary Lead Nut....	200111-	{400000-404809 405110-	0-15000-	100
A766	Lock Washer, Distributor Rotor Screw	200111-	{400000-404809 405110-	0-15000-	100
A766	Lock Washer, Condenser Screw.....	200111-	{400000-404809 405110-	0-15000-	100
A766	Lock Washer, Rotor, Insulating Plate Screw.....	200111-	{400000-404809 405110-	0-15000-	100
A767	Lock Washer, Frame Cover Screws..	200111-	{400000-404809 405110-	0-15000-	100
A767	Lock Washer, Brush Holder Screws.	200111-	{400000-404809 405110-	0-15000-	100
A768	Lock Washer, Bridge Clamp Screws.	200111-	{400000-404809 405110-	0-15000-	100
A768	Lock Washer, End Cap Screws.....	200111-	{400000-404809 405110-	0-15000-	100
A769	Screws, End Cap.....	200111-	{400000-404809 405110-	0-15000-	100
A770	Gasket, End Cap.....	200111-	{400000-404809 405110-	0-15000-	100
A894	Pin, Rotor Gear.....	200111-	{400000-404809 405110-	0-15000-	100
A1046	Rivet, Impulse Pawl.....	200111-	{400000-404809 405110-	0-15000-	100
A1102	Rivet, Stationary Contact Support.	200111-	{400000-404809 405110-	0-15000-	100
A1103	Insulator, Stationary Contact Support	200111-	{400000-404809 405110-	0-15000-	100
A1104	Insulator, Stationary Contact Support Screw.....	200111-	{400000-404809 405110-	0-15000-	100
AA414	Brush Holder with Screws.....	200111-	{400000-404809 405110-	0-15000-	100
AA415	Brush with Spring, Distributor.....	200111-	{400000-404809 405110-	0-15000-	100
AA415	Brush with Spring, Collector.....	200111-	{400000-404809 405110-	0-15000-	100
AA416	Bridge Clamp with Rivet.....	200111-	{400000-404809 405110-	0-15000-	100
AA417	Coil, Complete.....	200111-	{400000-404809 405110-	0-15000-	100
AA418	Breaker Bar, Complete, with Contact Point.....	200111-	{400000-404809 405110-	0-15000-	100
AA419	Bearing, Distributor.....	200111-	{400000-404809 405110-	0-15000-	100
AA419	Bearing, Rotor Shaft.....	200111-	{400000-404809 405110-	0-15000-	100
AA421	Rotor, Distributor.....	200111-	{400000-404809 405110-	0-15000-	100
AA422	Shaft with Gear, Distributor.....	200111-	{400000-404809 405110-	0-15000-	100
AA423	Screw with Point and Nut, Stationary Contact.....	200111-	{400000-404809 405110-	0-15000-	100
AA424	End Cap, Complete.....	200111-	{400000-404809 405110-	0-15000-	100
AA425	Condenser with Lead Wire.....	200111-	{400000-404809 405110-	0-15000-	100
AA428	Lead Wire with Terminals, Primary	200111-	{400000-404809 405110-	0-15000-	100
AA429	Impulse Drive Member with Pawl..	200111-	{400000-404809 405110-	0-15000-	100

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AC1176 MAGNETO PARTS— Continued				
AC1178	Rotor, with Gear.....	200111-	400000-404809 405110-	0-15000-	100
AC1179	Frame with Lead Wire.....	200111-	400000-404809 405110-	0-15000-	100
B507	Screws, Frame Cover.....	200111-	400000-404809 405110-	0-15000-	100
B510	Screw, Brush Holder.....	200111-	400000-404809 405110-	0-15000-	100
B514	Screws, Condenser.....	200111-	400000-404809 405110-	0-15000-	100
B514	Screws, Rotor, Insulating Plate.....	200111-	400000-404809 405110-	0-15000-	100
B515	Cork, Frame, Oil Seal.....	200111-	400000-404809 405110-	0-15000-	100
B518	Oil Wick Holder.....	200111-	400000-404809 405110-	0-15000-	100
B519	Felt, Cam Oil Wick.....	200111-	400000-404809 405110-	0-15000-	100
B520	Lock Washer, Cam Oil Wick Holder.....	200111-	400000-404809 405110-	0-15000-	100
C1327	Washer, Impulse Cup.....	200111-	400000-404809 405110-	0-15000-	100
C1328	Felt Washer, Impulse.....	200111-	400000-404809 405110-	0-15000-	100
C1329	Flat Washer, Impulse.....	200111-	400000-404809 405110-	0-15000-	100
C1330	Lock Wire, Impulse Nut.....	200111-	400000-404809 405110-	0-15000-	100
C1331	Nut, Impulse Coupling.....	200111-	400000-404809 405110-	0-15000-	100
C1332	Shell, Impulse Coupling.....	200111-	400000-404809 405110-	0-15000-	100
C1333	Spring, Impulse Coupling.....	200111-	400000-404809 405110-	0-15000-	100
C1334	Pawl, Impulse Coupling.....	200111-	400000-404809 405110-	0-15000-	100
C1335	Key, Impulse Coupling.....	200111-	400000-404809 405110-	0-15000-	100
C1363	Screw, Impulse Drive.....	200111-	400000-404809 405110-	0-15000-	100
C2435	Stop Pin, Impulse.....	200111-	400000-404809 405110-	0-15000-	100
C2436	Plate, Rotor, Insulating.....	200111-	400000-404809 405110-	0-15000-	100
C2437	Safety Spark Gap.....	200111-	400000-404809 405110-	0-15000-	100
	AC174 CARBURETOR				
AC174	Carburetor, Complete.....	200111-223802	400000-402039		102
AC857	Gaskets, C1141, C1142, and C1143 in Envelope (sold only as AC857)	200111-223802	400000-402039		102
C1117	Spring, Throttle, Stop.....	200111-223802	400000-402039		102
C1118	Disk, Throttle.....	200111-223802	400000-402039		102
C1119	Gasket, Strainer, Cage.....	200111-223802	400000-402039		102
C1120	Screw, Float Lever.....	200111-223802	400000-402039		102
C1121	Washer, Float Lever Screw.....	200111-223802	400000-402039		102
C1122	Float, Cork.....	200111-223802	400000-402039		102
C1123	Float, Lever.....	200111-223802	400000-402039		102
C1125	Pivot, Float, Lever.....	200111-223802	400000-402039		102
C1126	Screen, Strainer, Cage.....	200111-223802	400000-402039		102
C1127	Nut, Strainer, Cage.....	200111-223802	400000-402039		102
C1128	Control, Fuel.....	200111-223802	400000-402039		102
C1129	Cover, Fuel Bowl.....	200111-223802	400000-402039		102
C1130	Screw, Idle Speed, Adjusting.....	200111-223802	400000-402039		102
C1131	Disk, Choker.....	200111-223802	400000-402039		102
C1132	Staple, Choker and Throttle Disk.....	200111-223802	400000-402039		102
C1133	Bushing, Throttle, Bearing.....	200111-223802	400000-402039		102
C1134	Cage, Strainer.....	200111-223802	400000-402039		102

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AC174 CARBURETOR— Continued				
C1135	Screw, Throttle, Shaft Pin.....	200111-223802	400000-402039		102
C1136	Screw, Fuel Bowl.....	200111-223802	400000-402039		102
C1137	Spring, Needle Valve.....	200111-223802	400000-402039		102
C1138	Plug, 5/16", Welsh.....	200111-223802	400000-402039		102
C1139	Plug, 3/16", Welsh.....	200111-223802	400000-402039		102
C1140	Plug, 1/8", Welsh.....	200111-223802	400000-402039		102
C1144	Washer, Choker, Friction Screw, Large.....	200111-223802	400000-402039		102
C1145	Screw, Choker, Lever, Friction.....	200111-223802	400000-402039		102
C1146	Washer, Choker, Friction Screw, Small.....	200111-223802	400000-402039		102
C1148	Spacer, Choker, Friction Screw.....	200111-223802	400000-402039		102
C1149	Spring, Choker, Lever, Friction.....	200111-223802	400000-402039		102
C1150	Throttle Shaft with Lever.....	200111-223802	400000-402039		102
C1151	Air Choker Lever and Shaft.....	200111-223803	400000-402039		102
C1152	Float Valve.....	200111-223802	400000-402039		102
C1153	Screw, Load, Adjusting.....	200111-223802	400000-402039		102
C1154	Screw, Idle, Adjusting.....	200111-223802	400000-402039		102
C1155	Body Casting.....	200111-223802	400000-402039		102
C1574	Lock Washer, Bowl Cover Screw....	200111-223802	400000-402039		102
321R	Gasket, Carburetor to Manifold.....	200111-223802	400000-402039		102
S1121	Cock, Drain.....	200111-223802	400000-402039		102
	AC610 CARBURETOR				
AC610	Carburetor, Complete (replaces AC725).....	223803-	402040-404809	0-15000-	102
C2500	Throttle, Lever.....	229363-		0-15427-	102
C2501	Valve and Seat, Float.....	223803-	402040-	0-15000-	102
C2502	Shaft, Throttle.....	229363-	404810-	0-15427-	102
C2503	Body and Bushing, Complete.....	223803-	402040-	0-15000-	102
C2504	Bushing, Throttle Shaft (Upper)....	229363-	404810-	0-15427-	102
C2505	Bushing, Throttle Shaft (Lower)....	229363-	404810-	0-15427-	102
C2506	Throttle Lever.....		402040-		102
C2508	Bowl and Float.....	229363-	404810-	0-15427-	102
D392	Bushing, Fuel Line to Carburetor....	223803-	402040-404809	0-15000-	102
18-0	Throttle Stop Spring.....	223803-	402040-404809	0-15000-	102
P348	Air Valve Choker Disk.....	223803-	402040-404809	0-15000-	102
321R	Gasket, Carburetor to Manifold.....	223803-	402040-404809	0-15000-	102
S1121	Cock, Drain.....	223803-	402040-404809	0-15000-	102
SI-18	Choker Disk Screws.....	223803-	402040-404809	0-15000-	102
4W	Float Screw and Washer.....	223803-	402040-404809	0-15000-	102
10W	Clamp Screw, Throttle Lever, Ad- justing.....	223803-	402040-404809	0-15000-	102
17W	Throttle Lever and Bushing Retainer Screw.....	223803-	402040-404809	0-15000-	102
41W	Friction Balls.....	223803-	402040-404809	0-15000-	102
45W	Plug Screw for Drilled Holes.....	223803-	402040-404809	0-15000-	102
46W	Retaining Nut, Bowl.....	223803-	402040-404809	0-15000-	102
57W	Friction Ball Spring.....	223803-	402040-404809	0-15000-	102
63W	Lock Washers, Choker Disk Screw....	223803-	402040-404809	0-15000-	102
64W	Bowl Nut Gasket.....	223803-	402040-404809	0-15000-	102
65W	Nozzle, Retaining Spring.....	223803-	402040-404809	0-15000-	102
67W	Stop Pin, Throttle Lever.....	223803-	402040-404809	0-15000-	102
68W	Friction Spring, Choke Lever.....	223803-	402040-404809	0-15000-	102
69W	Cork Float with Washer.....	223803-	402040-404809	0-15000-	102
70W	Disk Screws, Throttle.....	223803-	402040-404809	0-15000-	102
71W	Adjusting Screw, Throttle Lever....	223803-	402040-404809	0-15000-	102
72W	Choke Lever Friction Spring Washer	223803-	402040-404809	0-15000-	102
73W	Seat Gasket, Float Valve.....	223803-	402040-404809	0-15000-	102
74W	Friction Washer, Choke.....	223803-	402040-404809	0-15000-	102
75W	Lever, Float.....	223803-	402040-404809	0-15000-	102
76W	Disk, Throttle.....	223803-	402040-404809	0-15000-	102
77W	Gasket, Strainer.....	223803-	402040-404809	0-15000-	102
78W	Gasket, Bowl.....	223803-	402040-404809	0-15000-	102
79W	Pipe Plug, Hex. Head.....	223803-	402040-404809	0-15000-	102
80W	Pipe Plug, Headless.....	223803-	402040-404809	0-15000-	102
81W	Lock Washer (Throttle Disk Screws)	223803-	402040-404809	0-15000-	102

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
AC610 CARBURETOR—Continued					
83W	Drill Plug (7/32", 32).....	223803—	402040-404809	0-15000—	102
85W	Drill Plug (1/4", 28).....	223803—	402040-404809	0-15000—	102
90W	Pivot Pin, Float.....	223803—	402040-404809	0-15000—	102
91W	Bearing Screws, Float.....	223803—	402040-404809	0-15000—	102
92W	Shaft, Throttle.....	223803-229362	402040-404809	0-15000-0-15426	102
93W	Idle Plug.....	223803—	402040-404809	0-15000—	102
94W	Friction Screw, Choker.....	223803—	402040-404809	0-15000—	102
95W	Nozzle.....	223803—	402040-404809	0-15000—	102
96W	Shaft Bushing, Throttle.....	223803-229362	402040-404809	0-15000-0-15426	102
97W	Casting, Bowl.....	223803—	402040-404809	0-15000—	102
X2458	Load Needle.....	223803—	402040-404809	0-15000—	102
X2460	Choker, Lever and Shaft.....	223803—	402040-404809	0-15000—	102
X2461	Idle Needle.....	223803—	402040-404809	0-15000—	102
X2462	Strainer, Complete.....	223803—	402040-404809	0-15000—	102
X2487	Lever and Bushing, Throttle.....	223803-229362	402040-404809	0-15000-0-15426	102
AC725 CARBURETOR					
AC725	Carburetor, Complete (replaced by AC610).....				
C1117	Spring, Throttle Stop.....	223803—		0-15000—	102
C1119	Gasket, Strainer, Cage.....	223803—		0-15000—	102
C1120	Screw, Float Lever.....	223803—		0-15000—	102
C1121	Washer, Float Lever Screw.....	223803—		0-15000—	102
C1125	Pivot, Float Lever.....	223803—		0-15000—	102
C1126	Screen, Strainer, Cage.....	223803—		0-15000—	102
C1127	Nut, Strainer, Cage.....	223803—		0-15000—	102
C1130	Screw, Idle Speed, Adjusting.....	223803—		0-15000—	102
C1131	Disk, Choker.....	223803—		0-15000—	102
C1132	Staple, Choker and Throttle Disk.....	223803—		0-15000—	102
C1134	Cage, Strainer.....	223803—		0-15000—	102
C1136	Screw, Fuel Bowl.....	223803—		0-15000—	102
C1137	Spring, Needle Valve.....	223803—		0-15000—	102
C1138	Plug, 5/16", Welsh.....	223803—		0-15000—	102
C1139	Plug, 3/16", Welsh.....	223803—		0-15000—	102
C1144	Washer, Choker, Friction Screw, Large.....	223803—		0-15000—	102
C1145	Screw, Choker, Lever Friction.....	223803—		0-15000—	102
C1146	Washer, Choker, Friction Screw, Small.....	223803—		0-15000—	102
C1148	Spacer, Choker, Friction Screw.....	223803—		0-15000—	102
C1149	Spring, Choker, Lever Friction.....	223803—		0-15000—	102
C1152	Float, Valve.....	223803—		0-15000—	102
C1574	Lock Washer, Bowl Cover Screw.....	223803—		0-15000—	102
C1841	Body, Casting.....	223803—		0-15000—	102
C1842	Control, Fuel.....	223803—		0-15000—	102
C1843	Bowl, Fuel.....	223803—		0-15000—	102
C1844	Throttle, Shaft and Stop.....	223803—		0-15000—	102
C1845	Disk, Throttle.....	223803—		0-15000—	102
C1846	Screw, Throttle Shaft.....	223803—		0-15000—	102
C1847	Air Choker Shaft and Lever.....	223803—		0-15000—	102
C1848	Screw, Idle, Adjusting.....	223803—		0-15000—	102
C1849	Screw, Load, Adjusting.....	223803—		0-15000—	102
C1850	Cork Float with Lever.....	223803—		0-15000—	102
C1852	Needle Valve.....	223803—		0-15000—	102
C1853	Spring, Needle Valve.....	223803—		0-15000—	102
C1854	Gasket, Fuel Bowl.....	223803—		0-15000—	102
C1855	Bushing, Throttle, Bearing.....	223803—		0-15000—	102
C1856	Bleed Screw (No. 70) in Body Casting.....	223803—		0-15000—	102
C1857	Bleed Screw (No. 46) in Body Casting, in Fuel Control.....	223803—		0-15000—	102
C1858	Bleed Screw (No. 53) in Body Casting.....	223803—		0-15000—	102
C1859	Bleed Screw (No. 52) in Fuel Control.....	223803—		0-15000—	102
C1861	Fuel Orifice, in Fuel Control.....	223803—		0-15000—	102
C1862	By-Pass Plug, 1/4", Welsh.....	223803—		0-15000—	102
C1863	Plug, Balance Tube, 3/8", Welsh.....	223803—		0-15000—	102
C1864	Plug, Dust Cover, 7/16", Welsh.....	223803—		0-15000—	102
C1869	Screw Plug, Fuel Control.....	223803—		0-15000—	102

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AC725 CARBURETOR— Continued				
D392	Bushing, Fuel Line to Carburetor....	223803—	0-15000—	102
321R	Gasket, Carburetor to Manifold.....	223803—	0-15000—	102
S1121	Cock, Drain.....	223803—	0-15000—	102
	AC999 CARBURETOR				
AC999	Carburetor, Complete.....		404810—	103
C2501	Valve and Seat, Float.....		404810—	103
C2502	Shaft, Throttle.....		404810—	103
C2503	Body and Bushing.....		404810—	103
C2504	Bushing, Throttle Shaft (Upper).....		404810—	103
C2505	Bushing, Throttle Shaft (Lower).....		404810—	103
C2506	Throttle, Lever.....		404810—	103
D392	Bushing, Fuel Line to Carburetor....		404810—	103
18-0	Spring, Throttle, Stop.....		404810—	103
P348	Disk, Air Valve Choker.....		404810—	103
1670R	Attaching Screw.....		404810—
1722R	Lock Washer, Attaching Screw.....		404810—
S1121	Drain Cock.....		404810—	103
SI-18	Screw, Choker, Disk.....		404810—	103
4W	Float Screw and Washer.....		404810—	103
10W	Clamp Screw, Throttle Lever, Ad- justing Screw.....		404810—	103
17W	Retaining Screw, Throttle Lever and Bushing.....		404810—	103
41W	Ball, Adjusting Needle, Friction.....		404810—	103
45W	Plug Screw, Drilled Holes.....		404810—	103
46W	Nut, Bowl, Retaining.....		404810—	103
57W	Spring, Friction, Ball.....		404810—	103
63W	Lock Washer, Clutch Disk Screw.....		404810—	103
64W	Gasket, Bowl, Nut.....		404810—	103
65W	Spring, Nozzle, Retaining.....		404810—	103
67W	Stop Pin, Throttle, Lever.....		404810—	103
68W	Spring, Choker Lever, Friction.....		404810—	103
69W	Cork Float with Washer.....		404810—	103
70W	Screw, Throttle, Disk.....		404810—	103
71W	Screw, Throttle Lever, Adjusting.....		404810—	103
72W	Washer, Choke Lever, Friction Spring		404810—	103
73W	Gasket, Float Valve, Seat.....		404810—	103
74W	Washer, Choker, Friction.....		404810—	103
75W	Lever, Float.....		404810—	103
76W	Disk, Throttle.....		404810—	103
77W	Gasket, Strainer.....		404810—	103
78W	Gasket, Bowl.....		404810—	103
79W	Pipe Plug, Hex. Head.....		404810—	103
80W	Pipe Plug, Headless.....		404810—	103
81W	Lock Washer (Throttle Disk Screw)		404810—	103
83W	Drill Plug (7/32").....		404810—	103
85W	Drill Plug (1/4").....		404810—	103
90W	Pin Float Pivot.....		404810—	103
91W	Screw, Float, Bearing.....		404810—	103
93W	Idle Plug.....		404810—	103
94W	Screw, Choker, Friction Spring.....		404810—	103
95W	Nozzle.....		404810—	103
97W	Bowl, Casting.....		404810—	103
X2458	Load Needle.....		404810—	103
X2460	Choker Lever and Shaft.....		404810—	103
X2461	Idle Needle.....		404810—	103
X2462	Strainer, Complete.....		404810—	103
	AIR CLEANER				
A444	Hose, Air Cleaner.....	230514—	0-15589—	104
A447	Clamp, Air Cleaner Hose.....	230514—	0-15589—	104
A688	Spring, Cup Disk, Retaining.....	230514—	0-15589—	104
A690	Washer, Cup, Retaining Rod.....	230514—	0-15589—	104
AA394	Cup Disk, Air Cleaner.....	230514—	0-15589—	104
AA395	Rod, Air Cleaner Cup, Retaining....	230514—	0-15589—	104
AC478	Air Cleaner, AC479, with Air Stack Elbow, C384R.....	212555-223802	400538-402444	104

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AIR CLEANER—Continued				
AC741	Bail, Air Cleaner Cover.....	223803-230513	402445-404809	0-15000-0-15588	104
AC745	Container, C1822R, Air Cleaner with Gasket.....	223803-230513	402445-404809	0-15000-0-15588	104
AC747	Cover, C1821R, Air Cleaner, with AC741 Bail.....	223803-230513	402445-404809	0-15000-0-15588	104
AC955	Cover and Stack, Air Cleaner.....		404810-		
AC956	Bail, Air Cleaner Cover.....		404810-		104
AC1093	Core, Air Cleaner, Complete.....	223803-229215	402445-404809	0-15000-0-15411	
AC1095	Body, Air Cleaner.....	229216-230513		0-15412-0-15588	104
AC1096	Screen, Air Cleaner.....	229216-230513		0-15412-0-15588	104
AC1097	Core, Air Cleaner.....	229216-230513		0-15412-0-15588	104
AC1168	Vortex Air Cleaner and Connecting Parts, Complete.....			0-15000-0-15588	
AC1169	Body, Air Cleaner.....	230514-		0-15589-	104
AC1170	Cup, Air Cleaner, Complete.....	230514-		0-15589-	104
AD115	Filter Collar.....	200111-223802	400000-402444		104
C265R	Intake Pipe, Carburetor to Air Cleaner.....	200111-212554	400000-400537		104
C385R	Intake Pipe, Carburetor to Air Cleaner.....	212555-223802	400538-402039		104
C910	Brace, Air Cleaner.....	200111-212554	400000-400537		104
C1033	Gasket, Intake Pipe to Air Cleaner	200111-212554	400000-400537		104
C1629R	Intake Pipe, Carburetor to Air Cleaner (use in AC576 Assembly).....				104
C1703R	Pipe, Carburetor Intake.....		402040-402444		104
C1751	Washer (Inside) Air Cleaner Bracket, Reinforcing.....	200111-223802	400000-402444		104
C1753	Washer (Inside) Air Cleaner Flange, Reinforcing.....	200111-223802	400000-402444		104
C1825	Gasket, Filter Core.....	223802-230513	402445-	0-15000-0-15588	104
C1827	Washer, Cover Pin.....	223802-230513	402445-404809	0-15000-	104
C1828	Tube, Ventilator in Air Cleaner Cover.....	223803-229215	402445-404809	0-15000-0-15411	104
C1987R	Intake Pipe, Carburetor to Air Cleaner (used in AC871 Assembly).....	212555-223802	400538-402039		104
C1989R	Intake Pipe, Carburetor to Air Cleaner (used in AC870 Assembly).....	200111-212554	400000-400537		104
C2230	Core, Air Cleaner Filter.....		404810-		104
C2235	Gasket, Air Cleaner Cover.....		404810-		104
C2238	Cap Screw, Air Cleaner Cover Bail.....		404810-		104
C2239	Stud, Air Cleaner Cover Bail.....		404810-		104
C2240	Bail Tightener, Hand Wheel.....		404810-		104
C2241	Elbow, Carburetor, Intake.....		404810-		104
C2243	Cover Plate, Air Cleaner.....		404810-		104
C2244	Gasket, Air Cleaner Cover Plate.....		404810-		104
C2399	Retainer, Air Cleaner Screen.....	229216-230513		0-15412-0-15588	104
C2405	Pilot Pin, Air Cleaner.....	229216-230513		0-15412-0-15588	
C2406	Pin, Air Cleaner Screen.....	229216-230513		0-15412-0-15588	
C2424	Bracket, Air Cleaner.....	230514-		0-15589-	104
C2425	Clamp, Air Cleaner.....	230514-		0-15589-	104
C2429	Elbow, Carburetor.....	230514-		0-15675-	104
D1034	Gasket, Intake Pipe to Carburetor.....	200111-223802	400000-402444		104
D1037	Gasket, Air Cleaner Pipe.....	200111-223802	400000-402444		104
D1040R	Flange, Air Cleaner.....	200111-223802	400000-402444		104
D1051	Gasket, Air Cleaner Flange.....	200111-223802	400000-402444		104
D1414	Flange, Air Cleaner Screw Cap.....	200111-223802	400000-402444		104
D1415	Cap, Filter Collar Screw.....	200111-223802	400000-402444		104
D1513	Felt Washer, Air Cleaner Filter Collar.....	200111-223802	400000-402444		104
D1748R	Bail Tightener (Hand Wheel) Air Cleaner.....	223803-230513	402445-404809	0-15000-0-15588	104
D1749	Bolt, Cover Clamp, Air Cleaner.....	223803-230513	402445-404809	0-15000-0-15588	104
D1790	Gasket, Air Cleaner to Carburetor.....	223803-	402445-	0-15000-	104
D1820	Rivet, Air Cleaner Cover Bail (Oval Head Rivet) 3/8"x1-3/4".....	223803-230513	402445-404809	0-15000-0-15588	104
D2234	Plug, Air Cleaner Container.....	223803-229215	402445-404809	0-15000-0-15411	104
D2237	Plug, Air Cleaner Cover.....	223803-229215	402445-404809	0-15000-0-15411	104

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
AIR CLEANER—Continued					
27R	Washer, Air Cleaner.....	200111-223802	400000-402444	104
1476R	Elbow, Front Fan Bearing.....	230514-	0-15589-	104
1563R	Pin, Air Cleaner Cover, Connecting.	223802-	402445-	0-15000-	104
AUXILIARY AIR CLEANER AND STACK					
AC663	Air Cleaner, Complete (part of AC560, AC563, and AC565 Aux- iliary Air Cleaners).....	200111-212554	400000-400537	103
AC799	Auxiliary Air Cleaner, Complete.....	404810-	0-15000-	103
AC955	Cover and Stack, Air Cleaner.....	103
AC1167	Adapter, Air Stack.....	230514-	0-15589-	103
AD343	Auxiliary Air Cleaner, Complete.....	200111-223802	400000-402444	103
AD825	Auxiliary Air Cleaner, Complete.....	223803-	402445-	103
C384R	Elbow, Air Cleaner Stack.....	212555-223803	400538-402444	103
C398R	Elbow, Air Cleaner Stack (AC560 Auxiliary Air Cleaner).....	200111-212554	400000-400537	103
C1116	Cap, Auxiliary Drain on Air Cleaner	200111-212554	400000-400537	103
C1503	Bracket, Air Stack Elbow (AC560, AC563, and AC565 Auxiliary Air Cleaners).....	200111-212554	400000-400537	103
C1664	Gasket, Air Cleaner to Air Stack Elbow.....	200111-223802	400000-402444	103
C2007R	Elbow, Auxiliary Air Cleaner.....	0-15000-0-15588	103
C2427R	Adapter, Auxiliary Air Cleaner.....	230514-	0-15589-	103
D1914	Gasket, Auxiliary Air Cleaner Flange	223803-	402445-404809	0-15000-	103
1454R	Drain Plug, Auxiliary Air Cleaner...	200111-	400000-	0-15000-	103
TOOL BOX AND TOOLS					
AC228	Tool Box, Complete.....	200111-	98
AD840	Tool Box, Complete.....	400000-	0-15000-	98
C1219	Bracket, Tool Box Support.....	200111-	98
C1579	Gauge, Tappet.....	200111-	400000-	0-15000-	98
C1591	Socket Wrench, 5/8", for Cylinder Head Nuts.....	200111-	400000-	0-15000-	98
D1083	Socket Wrench for Connecting Rod Nuts.....	200111-	400000-	0-15000-	98
D2063	Lug Wrench.....	200111-	400000-	0-15000-	98
D2064	Flywheel Wrench.....	200111-	400000-	0-15000-	98
E2125	Funnel.....	200111-	400000-	0-15000-	98
JD7751	Grease Gun, Alemite Model No. 6556	207345-	400000-	0-15000-	98
JD7752	Grease Gun, Bassick No. Z-6-B1	200111-207344	98
POWER SHAFT PARTS					
AC210	Gear, with Bushing, Idler.....	200111-	400000-	0-15000-	105
AC386	Housing, C342R, with Studs, Power Shaft.....	200111-	400000-	0-15000-	105
C154R	Lock Nut, Power Shaft Housing.....	200111-	400000-	0-15000-	105
C315	Gear, Spur, Power Shaft.....	200111-	400000-	0-15000-	105
C343R	Cap, Power Shaft, Front.....	200111-	400000-	0-15000-	105
C346R	Cap, Power Shaft, Rear.....	200111-	400000-	0-15000-	105
C535	Hexagon Nut, Power Shaft Bevel Gear.....	200111-	400000-	0-15000-	105
C691	Lock Washer, Power Shaft Quill.....	200111-	400000-	0-15000-	105
C719	Stud, Power Shaft Housing to Case.	200111-	400000-	0-15000-	105
C1246	Washer, Power Shifter Spacing.....	200111-	400000-	0-15000-	105
C1269	Brace, Power Shaft Housing to Main Case.....	200211-202557	105
C1410	Power Shaft.....	200111-	400000-	0-15000-	105
C1411	Pinion, Bevel, on Power Shaft.....	200111-	400000-	0-15000-	105
C1412	Gear with Shaft, Power Shaft Bevel.	200111-	400000-405110	0-15000-	105
C1413	Cover, Power Shaft Housing.....	200111-	400000-	0-15000-	105
C1414	Gasket, Power Shaft Housing Cover	200111-	400000-	0-15000-	105
C1415	Washer, Oil Seal, Power Shaft, Long Bevel Gear.....	200111-	400000-	0-15000-	105
C1416	Washer, Oil Seal, Power Shaft, Front and Rear.....	200111-	400000-	0-15000-

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	POWER SHAFT PARTS— Continued				
C1419	Gasket, Power Shaft, Front Cap, Medium.....	200111-	400000-	0-15000-	105
C1420	Gasket, Power Shaft, Rear Cap, Medium.....	200111-	400000-	0-15000-	105
C1421	Gasket, Power Shaft Housing to Case	200111-	400000-	0-15000-	105
C1422	Gasket, Power Shaft, Front Cap, Thick.....	200111-	400000-	0-15000-	105
C1423	Gasket, Power Shaft, Rear Cap, Thick.....	200111-	400000-	0-15000-	105
C2118	Shift Lever, Power Shaft.....	404760-			105
C2357	Cup, Power Shaft Quill Seal.....	405110-			105
C2358	Cork, Power Shaft Quill Seal.....	405110-			105
C2359	Cover, Power Shaft Quill Seal.....	405110-			105
C2360	Spring, Power Shaft Quill Seal.....	405110-			105
C2361	Gear, Power Shaft Bevel (Long).....	405110-			105
D136	Washer, Spur Gear Nut.....	200111-	400000-	0-15000-	105
E2142	Plug, Oil Filler.....	200111-	400000-	0-15000-	105
JD7223	Cone, with Rollers, Power Shaft, Long Bevel Gear.....	200111-	400000-	0-15000-	105
JD7236	Cone, with Rollers, Power Shaft, Rear Bearing.....	200111-	400000-	0-15000-	105
JD7267	Quill, Power Shaft Bevel Gear.....	200111-	400000-405109	0-15000-	105
JD7269	Quill, Power Shaft Bevel Gear.....		405110-		105
JD7286	Cup, Power Shaft, Rear Bearing.....	200111-	400000-	0-15000-	105
JD7356	Cone, with Rollers, Power Shaft, Front Bearing.....	200111-	400000-	0-15000-	105
JD7402	Cup, Power Shaft, Front Bearing.....	200111-	400000-	0-15000-	105
56R	Key, Power Shaft, Bevel Pinion.....	200111-	400000-	0-15000-	105
	POWER LIFT PARTS				
AC260	Clutch Foot Trip.....	200111-213542			105
AC387	Clutch Plate, Complete, Power Lift.....	200111-	400000-	0-15000-	105
AC388	Worm Wheel with Hub, C353R, Power Lift.....	200111-	400000-405110	0-15000-	105
AC391	Crank with Pin, Power Lift.....	200111-	400000-	0-15000-	105
AC594	Pitman, Power Lift with Oil Fittings		400000-		105
AC1059	Power Lift Housing, C2351R, with Clutch Pawl Centering Pin.....	200111-	400000-	0-15000-	105
C284R	Yoke, Clutch Trip Rod.....	200111-	400000-	0-15000-	105
C349R	Pawl, Clutch.....	200111-	400000-	0-15000-	105
C1067	Pin, Clutch Foot Trip Rod Yoke.....	200111-	400000-	0-15000-	105
C1069	Rod, Clutch Foot Trip.....	200111-213542			105
C1074	Bearing, Clutch Foot Trip.....	200111-213542			105
C1164	Spring, Clutch Dog.....	200111-	400000-	0-15000-	105
C1216	Bearing Spacer, Clutch Foot Trip.....	200111-213542			105
C1220	Dowel Pin, Power Lift Housing.....	200111-	400000-	0-15000-	105
C1277	Center Bearing, Clutch Foot Trip.....	200111-213542			105
C1284	Pin, Pawl Spring, Centering.....	200111-	400000-	0-15000-	105
C1394	Bracket, Trip Pedal.....		400000-400678		105
C1424	Pin, Clutch Dog Spring, Short.....	200111-	400000-	0-15000-	105
C1425	Lock Pin, Power Lift Crank.....	200111-	400000-	0-15000-	105
C1426	Pin, Clutch Dog Spring, Long.....	200111-	400000-	0-15000-	105
C1427	Pin, Clutch Dog, Link.....	200111-	400000-	0-15000-	105
C1428	Pin, Clutch Dog, Pivot.....	200111-	400000-	0-15000-	105
C1428	Pin, Clutch Dog, Roller.....	200111-	400000-	0-15000-	105
C1429	Lever, Clutch Trip.....	200111-	400000-	0-15000-	105
C1430	Clutch Roller.....	200111-	400000-	0-15000-	105
C1431	Pivot Bearing, Clutch Dog.....	200111-	400000-	0-15000-	105
C1432	Pin, Power Lift Shaft Crank.....	200111-	400000-	0-15000-	105
C1433	Strap, Clutch Dog.....	200111-	400000-	0-15000-	105
C1434	Link, Clutch Dog.....	200111-	400000-	0-15000-	105
C1435	Dog, Clutch.....	200111-	400000-	0-15000-	105
C1436	Spacer, Clutch Dog, Roller.....	200111-	400000-	0-15000-	105
C1438	Spring, Clutch Pawl.....	200111-	400000-	0-15000-	105
C1439	Washer, Oil Seal, Clutch Trip Lever	200111-	400000-	0-15000-	105
C1440	Washer, Oil Seal, Power Lift Crank	200111-	400000-	0-15000-	105
C1441	Gasket, Power Lift Housing.....	200111-	400000-	0-15000-	105

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	POWER LIFT PARTS— Continued				
C1442	Pin, Pitman Strap Pivot.....		400000—		105
C1444	Rod, Power Lift Trip.....	213543—	400000-404809	0-15000—	105
C1446	Pedal, Clutch Trip.....		400000-400678		105
C1449	Spacer, Pitman Strap.....		400000—		105
C1495	Strap, Lift Pitman.....		400000—		105
C1496	Strap, Bent, Lift Pitman.....		400000—		105
C1497	Pin, Pitman, Connecting.....		400000—		105
C1534	Bracket, Trip Pedal.....	213543—	400679—	0-15000—	105
C1535	Pedal, Clutch Trip.....	213543—	400679-404809	0-15000—	105
C1536	Brace, Pedal Bracket to Power Shaft	213543—	400679-404809	0-15000—	105
C1576	Brace, Pedal Bracket to Power Shaft		400000-400678		105
C1635	3 Pt. Can, Power Lift Lubricant....	200111—	400000—	0-15000—	105
C2179	Pedal, Clutch Trip.....		404810—		105
C2180	Rod, Power Lift Trip.....		404810—		105
C2181	Brace, Pedal Bracket to Power Shaft		404810—		105
C2352	Bushing (Outer) Power Lift Crank....		405110—		105
C2353	Bushing (Inner) Power Lift Crank....		405110—		105
C2354	Welsh Plug.....		405110—		105
C2355	Washer, Power Lift Oil Seal.....		405110—		105
C2357	Cup, Power Shaft Quill Seal.....		405110—		105
C2358	Cork, Power Shaft Quill Seal.....		405110—		105
C2359	Cover, Power Shaft Quill Seal.....		405110—		105
C2360	Spring, Power Shaft Quill Seal.....		405110—		105
C2361R	Gear, Power Shaft Bevel (Long).....		405110—		105
D136	Washer on Crank Pin.....	200111—	400000—	0-15000—	105
D469	Welsh Plug, Clutch Trip Lever Hole	200111—	400000—	0-15000—	105
D679	Welsh Plug, Power Lift Crank Hole	200111—	400000—	0-15000—	105
JD7759	Alemite Zerk Fitting, Power Lift Pitman, 1/8", Alemite No. 1610		400000—		105
K2371	Spring, Power Lift Crank Lock Pin....	200111—	400000—		105
E1976	Plug, Oil Level Test and Drain.....	200111—	400000—	0-15000—	105
1713R	Washer, Clutch Dog Spacer.....	200111—	400000—	0-15000—	105
	HEAVY DUTY POWER LIFT				
AC720	Power Lift, R. H., Foot Trip, Com- plete.....	200111—			
AC1059	Housing with Bushing and Oil Seal, Power Lift.....	200111—		0-15000—	105
C284R	Yoke, Clutch Foot Trip Rod.....	200111—			105
C1067	Pin, Clutch Foot Trip Rod Yoke.....	200111—			105
C1787	Trip, Clutch Foot, R. H.....	200111—			105
C1788	Rod, Clutch Foot, R. H.....	200111—			105
C1789R	Bearing, Clutch Foot, R. H.....	200111—			105
C1790	Bearing, Center, Clutch Foot, R. H.	200111—			105
C2352	Bushing (Outer) Power Lift Crank....	213642—		0-15000—	105
C2353	Bushing (Inner) Power Lift Crank....	213642—		0-15000—	105
C2354	Welsh Plug.....	213642—		0-15000—	105
C2355	Washer, Power Lift Oil Seal.....	213642—		0-15000—	105
C2357	Cup, Power Shaft Quill Seal.....	213642—		0-15000—	105
C2358	Cork, Power Shaft Quill Seal.....	213642—		0-15000—	105
C2359	Cover, Power Shaft Quill Seal.....	213642—		0-15000—	105
C2360	Spring, Power Shaft Quill Seal.....	213642—		0-15000—	105
C2361R	Gear, Power Shaft Bevel (Long).....	213642—		0-15000—	105
JD7269	Quill, Power Shaft Bevel Gear.....	200111—		0-15000—	105
	AC425 ELECTRIC LIGHTING EQUIPMENT				
A1225	Cable Clip.....	200111—	400000—	0-15000—	106
AA832	Lamp, Complete.....	200111—	400000—	0-15000—	106
C1561	Stud, Rear, Lamp Bracket Base.....	200111—	400000—	0-15000—	106
C1562	Base, Rear, Lamp Bracket.....	200111—	400000—	0-15000—	106
C1567	Cable, Complete.....	200111—	400000—	0-15000—	106
C1568	Conduit.....	200111—	400000—	0-15000—	106
C1569	Clip, Conduit.....	200111—	400000—	0-15000—	106
C1586	Bracket, Rear, Lamp.....		400000—		106
C2347	Support, Rear, Light.....			0-15000—	

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AC425 ELECTRIC LIGHTING EQUIPMENT—Continued				
C2348	Extension Cable.....			0-15000-	
D1100	Bracket, Lamp.....	200111-	400000-	0-15000-	106
D1101	Spring, Lamp Bracket.....	200111-	400000-	0-15000-	106
D1102	Washer, Lamp Bracket.....	200111-	400000-	0-15000-	106
D1108	Light Bulb, DC 9V—27 CP.....	200111-	400000-	0-15000-	106
D1116	Strap, Cable Clip.....	200111-	400000-	0-15000-	106
D1160	Shaft, Bracket.....	200111-	400000-	0-15000-	106
D2139	Mounting Bracket, Lamp.....	200111-	400000-	0-15000-	106
D2141	Moulding.....	200111-	400000-	0-15000-	106
D2142	Reflector.....	200111-	400000-	0-15000-	106
D2143	Wiring, Complete.....	200111-	400000-	0-15000-	106
D2144	Body, Lamp.....	200111-	400000-	0-15000-	
D2145	Clip, Lens Holder.....	200111-	400000-	0-15000-	106
D2146	Cork Washer, Lamp.....	200111-	400000-	0-15000-	106
D2147	Lens, Lamp.....	200111-	400000-	0-15000-	106
D2148	Spring, Lens, Retaining.....	200111-	400000-	0-15000-	106
D2149	Screw, Moulding.....	200111-	400000-	0-15000-	106
D2569	Washer, Lamp, Mounting Bracket.....	200111-	400000-	0-15000-	106
E2057	Washer, Cable Clip Screw.....	200111-	400000-	0-15000-	106
E2094	Nut, Lens Holder Screw.....	200111-	400000-	0-15000-	106
2490R	Screw, Lens Holder.....	200111-	400000-	0-15000-	106
	AD479 GENERATOR, COMPLETE (Part of AC425)				
C1563	Generator Bracket.....	200111-	400000-	0-15000-	106
C1564	Brace, Generator Bracket.....	200111-	400000-	0-15000-	106
C1570	Spring, Bracket, Tension.....	200111-	400000-	0-15000-	106
C1571	Bolt, Bracket, Tension Spring.....	200111-	400000-	0-15000-	
C1572	Wing Nut, Bracket, Tension Spring Bolt.....	200111-	400000-	0-15000-	106
C1768	Split Pulley with Screws for Flat Belt.....	200111-	400000-	0-15000-	106
C1769	Taper Hole, Belt Pulley (Flat Belt).....	200111-	400000-	0-15000-	106
C1776	Leather Belt with Clipper Hooks.....	200111-	400000-	0-15000-	106
D1114	Screw, Split Pulley.....	200111-	400000-	0-15000-	106
D1124	Annular Bearing (Ball Bearing).....	200111-	400000-	0-15000-	106
D1125	Oil Cups in Annular End Piece.....	200111-	400000-	0-15000-	106
D1126	Rotor Cover (Case).....	200111-	400000-	0-15000-	106
D1127	Spring, Bracket, Cushion.....	200111-	400000-	0-15000-	106
D1128	Stem Binding Post (Long).....	200111-	400000-	0-15000-	106
D1129	Stem Binding Post (Short).....	200111-	400000-	0-15000-	106
D1130	Case End and Side.....	200111-	400000-	0-15000-	106
D1131	Clamp, Magnet.....	200111-	400000-	0-15000-	106
D1132	Collar, Annular End Piece (Distrib- utor End).....	200111-	400000-	0-15000-	106
D1133	Adjusting Nut, Rotor Shaft.....	200111-	400000-	0-15000-	106
D1134	Rotor Shaft.....	200111-	400000-	0-15000-	106
D1135	Binding Post.....	200111-	400000-	0-15000-	106
D1136	Fibre Bridge, Drilled.....	200111-	400000-	0-15000-	106
D1137	Fibre Binding Post Mount.....	200111-	400000-	0-15000-	106
D1138	Nut, Stem Binding Post.....	200111-	400000-	0-15000-	106
D1140	Washer, Binding Post.....	200111-	400000-	0-15000-	106
D1141	Screw, Fibre Bridge, 6-32x1" Round Head (Brass).....	200111-	400000-	0-15000-	106
D1142	Screw, Annular End Piece, Upper Hole, 12-24x1/2" Fillister Head....	200111-	400000-	0-15000-	106
D1143	Screw, Annular End Piece, Lower Hole, 12-24x7/16" Fillister Head.....	200111-	400000-	0-15000-	106
D1144	Cap Screw, Annular End Piece, 10-32x7/16" Fillister Head.....	200111-	400000-	0-15000-	106
D1146	Screw, Case End and Side, End, 8-32x1/4" Fillister Head.....	200111-	400000-	0-15000-	106
D1147	Screw, Case End and Side, Center, 6-32x1/4" Fillister Head.....	200111-	400000-	0-15000-	106
D1148	Screw, Magnet Clamp, Upper, 12- 24x3/8" Fillister Head.....	200111-	400000-	0-15000-	106
D1149	Screw, Magnet Clamp, Lower, 12- 24x1-1/8" Fillister Head.....	200111-	400000-	0-15000-	106

REPAIRS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number			Plate No.
		General Purpose	Wide Tread	Orchard	
	AD479 GENERATOR, COMPLETE—Continued				
D1150	Screw, Rotor Cover (Pointed) 10- 32x7/16" Headless.....	200111-	400000-	0-15000-	106
D1151	Screw, Bracket Clamp, 12-24x5/8" Fillister Head.....	200111-	400000-	0-15000-	106
D1151	Screw, Bracket, Top, Upper Hole, 12-24x5/8" Fillister Head.....	200111-	400000-	0-15000-	106
D1152	Screw, Bracket, Top, Lower Hole, 12-24x1-3/8" Fillister Head.....	200111-	400000-	0-15000-	106
D1153	Magnet.....	200111-	400000-	0-15000-	106
D1154	Pole Piece, Complete.....	200111-	400000-	0-15000-	106
D1155	Washer, Rotor Shaft.....	200111-	400000-	0-15000-	106
D1156	Clamp, Bracket.....	200111-	400000-	0-15000-	106
D1158	Key, in Taper Hole, Belt Pulley....	200111-	400000-	0-15000-	106
D1159	Winding "A" Special.....	200111-	400000-	0-15000-	106
D1161	Bracket, Top.....	200111-	400000-	0-15000-	106
D1666	Annular End Piece, Plain, with D1132 Bearing Spacer.....	200111-	400000-	0-15000-	106
D1667	Annular End Piece, with D1132 Bearing Spacer.....	200111-	400000-	0-15000-	106
K3151	Washer, Bracket, Tension Spring Bolt.....	200111-	400000-	0-15000-	106
71W	Screw, Fibre Binding Post Mount, 8-32x1/2" Fillister Head.....	200111-	400000-	0-15000-	106
1383R	Hooks, Belt Clipper.....	200111-	400000-	0-15000-	106
2364R	Rawhide Pin, Belt Connection.....	200111-	400000-	0-15000-	106
	AC579 PREST-O-LITE LIGHTING OUTFIT				
	Prest-O-Lite Gas Lighting Unit (Complete Units and Repair Parts are to be ordered direct from Prest- O-Lite Co., Inc., Indianapolis, Indiana. Billings are direct from Manufacturer to Branch House.)				

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS					
1669R	AC22	Oil Strainer to Pipe.....	3/8"x3/4"	3
1683R	AC48	Brake Lever to R. H. Brake Cam.....	1/2"x1-1/4"	1
1683R	AC48	Brake Lever to L. H. Brake Cam.....	1/2"x1-1/4"	1
1669R	AC80	R. H., Cam Shaft Bearing Dowel.....	3/8"x3/4"	1
1670R	AC81	L. H., Cam Shaft Bearing to Case.....	3/8"x1"	2
1671R	AC119	Hub Cap to Wheel.....	3/8"x1-1/4"	3
1682R	AC161	L. H., Bearing to Case.....	1/2"x1"	3
1684R	AC161	L. H., Main Bearing to Case.....	1/2"x1-1/2"	4
D328	AC162	R. H., Main Bearing to Case (Drilled).....	1/2"x1"	4
1670R	AC174	Carburetor to Manifold.....	3/8"x1"	2
D328	AC176	Spline Shaft Quill to Case (Drilled).....	1/2"x1"	4
1682R	AC183	Rear Tank Bracket to Governor Case.....	1/2"x1"	1
1682R	AC183	Front Tank Bracket to Water Pipe.....	1/2"x1"	2
1670R	AC220	R. H., Front Fender Bracket to Housing.....	3/8"x1"	1
1670R	AC221	L. H., Front Fender Bracket to Housing.....	3/8"x1"	1
D333	AC229	Clutch Driving Disk to Crankshaft.....	3/4"x1-1/4"	1
1685R	AC272	L. H., Differential Quill to Housing.....	1/2"x2"	2
D901	AC282	Seat Spring and Leaf to Case.....	3/4"x2-1/4"	1
1669R	AC344	Governor Case to Main Case.....	3/8"x3/4"	7
1670R	AC344	Governor Case to Main Case.....	3/8"x1"	1
1685R	AC350	L. H., Differential Quill to Housing.....	1/2"x2"	2
D475	AC386	Power Shaft Housing to Main Case.....	5/8"x1-1/2"	3
D328	AC394	Spline Shaft Quill to Case (Drilled).....	1/2"x1"	4
D901	AC408	Pedestal, to Front End.....	3/4"x2-1/4"	4
1669R	AC432	Magneto to Bracket.....	3/8"x3/4"	4
1682R	AC436	Rear Axle Housing Cover to R. H. and L. H. Hous- ing (each).....	1/2"x1"	13
1682R	AC437	Rear Axle Housing Cover to R. H. and L. H. Hous- ing (each).....	1/2"x1"	11
D474	AC437	Rear Axle Housing Cover to R. H. and L. H. Hous- ing (each).....	1/2"x1-3/4"	2
1671R	AC445	Oil Pump Strainer to Pipe.....	3/8"x1-1/4"	1
D474	AC454	Rear Axle Nut Clamp Screw.....	1/2"x1-3/4"	1
E2027	AC494	Radiator, to Support.....	5/8"x3-1/4"	2
1685R	AC553	L. H., Differential Quill to Housing.....	1/2"x2"	2
1670R	AC610	Carburetor to Manifold.....	3/8"x1"	2
C1096	AC645	R. H., Main Bearing to Case (Drilled).....	1/2"x1-1/4"	7
1682R	AC646	L. H., Main Bearing to Case.....	1/2"x1"	3
1684R	AC646	L. H., Main Bearing to Case.....	1/2"x1-1/2"	4
C1748	AC646	Main Bearing Cap Screw.....	5/8"x2-1/2"	2
C834	AC699	Dust Shield to Gear Cover (Drilled).....	5/16"x5/8"	4
1670R	AC745	Air Cleaner Container to Carburetor.....	3/8"x1"	1
1672R	AC745	Air Cleaner Container to Carburetor.....	3/8"x1-1/2"	1
1682R	AC770	Rear Fuel Tank Bracket to Governor Case.....	1/2"x1"	1
1684R	AC770	Front Fuel Tank Bracket to Water Pipe.....	1/2"x1-1/2"	2
D901	AC781	Seat Spring and Leaf to Case.....	3/4"x2-1/4"	1
E2027	AC786	Radiator, to Front End.....	5/8"x3-1/4"	2
1685R	AC789	L. H., Differential Quill to Housing.....	1/2"x2"	2
1682R	AC810	Citrus Grove Fender Support to Cylinder.....	1/2"x1"	2
1682R	AC811	Citrus Grove Fender Support to Cylinder.....	1/2"x1"	2
C1871	AC817	Rear Axle Housing to Case.....	1/2"x1-7/8"	1
C1871	AC818	Rear Axle Housing to Case.....	1/2"x1-7/8"	1
1684R	AC909	Upper Water Pipe to Radiator.....	1/2"x1-1/2"	2
1684R	AC909	Upper Water Pipe to Cylinder Head.....	1/2"x1-1/2"	4
1670R	AC999	Carburetor Attaching Screws.....	3/8"x1"	1
1683R	AC1059	Power Lift Housing to Power Shaft Housing.....	1/2"x1-1/4"	7
1671R	AD452	Front Wheel Bearing Clamp Screw.....	3/8"x1-1/2"	1
1669R	AD453	Oil Indicator Body to Case.....	3/8"x3/4"	2
E2290	AD883	Oil Filter Base to Case.....	3/8"x2-1/2"	2
1683R	C27R	Gear Shift Gate to Case.....	1/2"x1-1/4"	2
1671R	C35R	L. H., Main Bearing Cover to Main Bearing.....	3/8"x1-1/4"	3
1669R	C169	Oil Pump Body to L. H., Main Bearing Housing.....	3/8"x3/4"	3
1674R	C172R	Clutch Fork Bearing to Gear Cover.....	3/8"x1-3/4"	4
1683R	C184R	Pulley and Spline Gear Cover to Case.....	1/2"x1-1/4"	2
C529	C184R	Pulley and Spline Gear Cover to Case.....	1/2"x3-1/2"	8
1666R	C256R	Radiator Top Tank to Radiator Core.....	5/16"x3/4"	12
1683R	C259R	Lower Water Connections to Radiator.....	1/2"x1-1/4"	2
1669R	C265R	Intake Pipe to Air Cleaner.....	3/8"x3/4"	3
1670R	C265R	Intake Pipe to Carburetor.....	3/8"x1"	2

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS—Continued					
1671R	C274R	Steering Worm Housing to Steering Gear Housing..	3/8"x1-1/4"	4
1685R	C296R	R. H., Differential Quill to Housing.....	1/2"x2"	2
D942	C302	Front End Support to Cylinder.....	5/8"x2-1/4"	4
C882	C302	Front End Support to Cylinder (Drilled).....	3/4"x3-1/2"	2
C528	C305	Clamp Ring to Cam Gear (Drilled).....	3/8"x1-1/2"	2
1684R	C307R	Upper Water Pipe to Radiator.....	1/2"x1-1/2"	2
1684R	C307R	Upper Water Pipe to Cylinder Head.....	1/2"x1-1/2"	4
1669R	C310R	Rear Fan Bearing Housing to Governor Case.....	3/8"x3/4"	3
1669R	C311R	R. H., Governor Bearing Housing to Governor Case.....	3/8"x3/4"	3
1670R	C312R	Front Fan Bearing Cover to Water Pipe.....	3/8"x1"	2
1683R	C321R	Steering Worm Housing to Steering Gear Housing	1/2"x1-1/4"	4
D466	C321R	In Steering Worm Wheel Housing.....	1/2"x3/4"	2
1670R	C331R	Lower Felt Retainer to Pedestal.....	3/8"x1"	4
1670R	C338R	Eccentric Lock Plate to Pedestal.....	3/8"x1"	2
1685R	C340R	R. H., Differential Quill to Housing.....	1/2"x2"	2
1671R	C343R	Power Shaft, Front, Cap to Housing.....	3/8"x1-1/4"	3
1671R	C346R	Power Shaft, Rear, Cap to Housing.....	3/8"x1-1/4"	6
1683R	C360R	Brake Lever to Brake Cam.....	1/2"x1-1/4"	1
1670R	C381R	Front Fan Bearing Cover to Water Pipe.....	3/8"x1"	2
1685R	C392R	R. H., Differential Quill to Housing.....	1/2"x2"	2
C806	C471	Timing Plate Clamp Ring to Drive Flange.....	5/16"x5/8"	3
1669R	C490	L. H., Spline Shaft Cover to Case.....	3/8"x3/4"	4
1671R	C686	Shift Fork Shaft, End.....	3/8"x1-1/4"	1
D466	C698	Power Shaft Opening Cover to Case.....	1/2"x3/4"	4
1669R	C700	R. H., Brake Drum Guard to Housing.....	3/8"x3/4"	2
1669R	C701	L. H., Brake Drum Guard to Housing.....	3/8"x3/4"	2
C1539	C740	Front Axle Pivot Pin.....	3/8"x3-1/2"	1
1682R	C934	Steering Column Support to Case.....	1/2"x1"	2
1669R	C960	Front Cover to Case.....	3/8"x3/4"	8
1669R	C961	Rear Cover to Case.....	3/8"x3/4"	8
C976	C1009	Valve Cover to Cylinder.....	1/2"x4-1/4"	2
1669R	C1016	Magneto Bracket to Case.....	3/8"x3/4"	4
1686R	C1028R	Brake Latch to Housing.....	1/2"x2-1/2"	1
E2152	C1028R	In Brake Latch.....	1/2"x2-1/4"	2
1670R	C1053	Citrus Grove Fender Brace to Case.....	3/8"x1"	1
C1214	C1210	Drawbar to Housing, Rear.....	1"x4-1/2"	2
C1214	C1211	Swinging Drawbar Cross Member, Front, to Housing	1"x4-1/2"	2
D1088	C1244	Power Shaft Opening Cover to Main Case.....	5/8"x3/4"	2
1669R	C1248	R. H., Brake Drum Guard to Housing.....	3/8"x3/4"	2
1669R	C1249	L. H., Brake Drum Guard to Housing.....	3/8"x3/4"	2
C1273	C1275	Front End to Pedestal.....	7/8"x2-1/4"	4
1669R	C1382	Pedestal Cover to Pedestal.....	3/8"x3/4"	6
D466	C1413	Power Lift Opening Cover to Housing.....	1/2"x3/4"	2
1669R	C1465	Clamp to Elbow, Air Cleaner.....	3/8"x3/4"	2
1669R	C1620R	L. H., Spline Shaft Cover to Case.....	3/8"x3/4"	4
D466	C1637R	In Steering Worm Wheel Housing.....	1/2"x3/4"	2
C1272	C1640	Rear Axle Housing Cover to L. H. Housing.....	1/2"x3/4"	1
1682R	C1640	Rear Axle Housing Cover to R. H. and L. H. Housing (each).....	1/2"x1"	11
1685R	C1735R	Pulley and Spline Gear Cover to Case.....	1/2"x2"	2
C976	C1735R	Pulley and Spline Gear Cover to Case.....	1/2"x4-1/4"	6
1670R	C1736R	Pulley and Spline Gear Cover Cap to Cover.....	3/8"x1"	3
1672R	C1736R	Pulley and Spline Gear Cover Cap to Cover.....	3/8"x1-1/2"	2
C1748	C1742R	In Main Bearing Cap (Drilled).....	5/8"x2-1/2"	4
1671R	C1743R	L. H., Main Bearing Cover to Bearing.....	3/8"x1-1/4"	7
1670R	C1808R	Front Cover to Main Case.....	3/8"x1"	1
1671R	C1808R	Front Cover to Main Case.....	3/8"x1-1/4"	7
1666R	C1940	Radiator Core and Sides to Radiator Top Tank.....	5/16"x3/4"	12
1669R	C1945R	Rear Fan Bearing Housing to Governor Case.....	3/8"x3/4"	3
1669R	C1952	R. H., Brake Drum Guard to Housing.....	3/8"x3/4"	2
1669R	C1953	L. H., Brake Drum Guard to Housing.....	3/8"x3/4"	2
1685R	C2001R	R. H., Differential Quill to Housing.....	1/2"x2"	2
1683R	C2004R	Gear Shift Gate to Main Case.....	1/2"x1-1/4"	2
1683R	C2005R	R. H., Brake Lever to Brake Cam.....	1/2"x1-1/4"	1
1683R	C2006R	L. H., Brake Lever to Brake Cam.....	1/2"x1-1/4"	1
1682R	C2042R	R. H., Platform Support to Rear Axle Housing.....	1/2"x1"	2
1682R	C2043R	L. H., Platform Support to Rear Axle Housing.....	1/2"x1"	2
1669R	C2053R	Governor Case to Main Case.....	3/8"x3/4"	5
1670R	C2053R	Governor Case to Main Case.....	3/8"x1"	3

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS—Continued					
1669R	C2060R	R. H., Governor Bearing Housing to Governor Case	3/8"x3/4"	3
C2215	C2200	Governor Case to Case	3/8"x4-1/2"	1
1670R	D29R	Oil Pump Gear Cover to Oil Pump	3/8"x1"	1
1673R	D29R	Oil Pump Gear Cover to Oil Pump	3/8"x2"	1
1672R	D1987R	Oil Filter Body to Base	3/8"x1-1/2"	2
1670R	D1989R	Oil Filter Head to Body	3/8"x1"	4
1670R	D2065R	Oil Pump Gear Cover to Oil Pump	3/8"x1"	1
1673R	D2065R	Oil Pump Gear Cover to Oil Pump	3/8"x2"	1
D2219	D2217	Hub Cap, Front Wheel	3/8"x7/8"	4
SET SCREWS—CUP POINT					
1786R	AC47	Pulley Brake, Adjusting	1/2"x2-1/4"	1
1784R	AC446	Pulley Brake, Adjusting	1/2"x1-3/4"	1
C530	AC458	Reverse Shaft to Case	1/2"x4-1/2"	1
D622	C107R	Collar to Reverse Shaft (Drilled)	1/2"x1-1/2"	1
1771R	C261R	Outside Governor Control Arm to Shaft	5/16"x1/2"	1
D622	C686	Shift Shaft to Case (Drilled)	1/2"x1-1/2"	1
1775R	C1018	Control Tube Set Screws	3/8"x1"	1
1791R	C1055	Rear Wheel Scraper Blade to Holder	5/8"x2"	1
1771R	C2056R	Outside Governor Control Arm to Shaft	5/16"x1/2"	1
C2242	C2241	Carburetor to Intake Elbow	1/2"x2-3/4"	1
1789R	C2329R	Pedestal Support to Pedestal	5/8"x1-1/2"	2
SET SCREWS—DOG POINT					
D334	C921	Piston Pin to Piston	1/2"x1-3/4"	2
CARRIAGE BOLTS WITH SQUARE NUTS					
D411	AC336	Road Band Support to Rear Wheel	3/4"x1-7/8"	3
D411	AC401	Hayfield Overband Supports to Rear Wheel	3/4"x1-7/8"	3
D476	AC821	R. H., Fender to Rear Support	5/16"x3/4"	4
D476	AC822	L. H., Fender to Rear Support	5/16"x3/4"	4
D476	C946	Platform Center to Platform	5/16"x3/4"	10
D411	C1030	Extension Rim Clip	3/4"x1-7/8"	2
D477	C1785	Seat to Seat Spring	7/16"x1"	1
M25	C2044	Platform to Platform Support Channel	3/8"x3/4"	4
2270R	C2047	Platform Cross Angle to Platform	3/8"x1"	2
D411	D233	4" Spade Lug to Rear Wheel	3/4"x1-7/8"	1
1584R	D369	Wood Clamp to Tank Bracket	1/4"x1-1/2"	1
D411	D1078	5" Spade Lug to Rear Wheel	3/4"x1-7/8"	1
CARRIAGE BOLTS WITH HEX. NUTS					
C980	AC178	Hood to Tank Brackets	3/8"x1-3/4"	4
C1091	AC226	Speed Change Lever to Speed Control Crank	3/8"x1-1/4"	1
C1578	AC436	Rear Axle Housing Cover to R. H. and L. H. Housing	1/2"x1-3/4"	2
C1578	AC437	Rear Axle Housing Cover to R. H. and L. H. Housing	1/2"x1-3/4"	2
2313R	C1268	Hayfield Front Wheel Bands to Front Wheel	1/2"x1-1/2"	4
C1647	C1534	Trip Pedal Bracket to Foot Rest	3/8"x1-1/4"	2
C1578	C1640	Rear Axle Housing Cover to R. H. and L. H. Housing	1/2"x1-3/4"	2
D585	C2021	Wheel Enclosure Disk to Front Wheel	1/2"x3"	6
D585	D583	Rim Clamp to Front Wheel	1/2"x3"	1
D585	D584R	Rim Clamp to Front Wheel	1/2"x3"	1
CARRIAGE BOLTS WITHOUT NUTS					
D563	D564	Radiator Curtain Bracket, R. H., to Curtain Roller	3/8"x1"	1
D563	D572	Radiator Curtain Bracket, L. H., to Curtain Roller	3/8"x1"	1
MACHINE BOLTS WITH SQUARE NUTS					
1625R	AC228	Tool Box Support to Tractor	1/2"x2-1/2"	1
1626R	AC272	L. H., Differential Quill to Housing	1/2"x2-1/4"	4
D498	AC286	Swinging Drawbar to Cross Members (Drilled)	5/8"x3"	2
1623R	AC336	Road Band to Road Band	1/2"x1-3/4"	2
1625R	AC350	L. H., Differential Quill to Housing	1/2"x2-1/2"	2
D544	AC374	R. H., Fender to Platform and Cross Angle	1/2"x1"	7
D544	AC375	L. H., Fender to Platform and Cross Angle	1/2"x1"	7
1623R	AC401	Overband to Overband	1/2"x1-3/4"	2
1625R	AC553	L. H., Differential Quill to Housing	1/2"x2-1/2"	2
1613R	AC573	Power Shaft Shift Lever to Shift Shaft	3/8"x1-1/4"	1
1623R	AC636	Road Band to Road Band	1/2"x1-3/4"	1
1623R	AC666	Road Band to Road Band	1/2"x1-3/4"	1

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
MACHINE BOLTS WITH SQUARE NUTS					
—Continued					
1625R	AC789	L. H., Differential Quill to Housing.....	1/2"x2-1/2"	2
1614R	AC799	Auxiliary Air Cleaner to Elbow.....	3/8"x1"	4
1622R	AC810	Citrus Grove Fender Adjusting Strap to Fender Support.....	1/2"x1-1/2"	2
D544	AC810	Citrus Grove Fender Adjusting Strap to Side Support.....	1/2"x1"	2
1622R	AC810	Citrus Grove Fender Adjusting Strap to Fender Support.....	1/2"x1-1/2"	2
1622R	AC811	Citrus Grove Fender Adjusting Strap to Side Support.....	1/2"x1"	2
D544	AC821	R. H., Fender to Rear Support.....	1/2"x1"	1
D544	AC822	L. H., Fender to Rear Support.....	1/2"x1"	1
1614R	AC826	Platform to Platform Support.....	3/8"x1"	2
1614R	AD825	Auxiliary Cleaner to Air Cleaner Body.....	3/8"x1"	4
C1105	C112R	In Steering Worm Adjusting Nut.....	5/16"x1-3/4"	1
D595	C256R	Radiator Top Tank to Radiator Core.....	5/16"x7/8"	6
1611R	C256R	Radiator Top Tank to Radiator Core.....	5/16"x1-1/8"	4
D595	C258R	Radiator Bottom Tank to Radiator Core.....	5/16"x7/8"	12
1611R	C258R	Radiator Bottom Tank to Radiator Core.....	5/16"x1-1/8"	10
1624R	C264R	Rear Wheel Scraper Blade Holder to Fender Cross Angle.....	1/2"x2"	2
C1105	C276R	Steering Worm Adjusting Nut Clamp Bolt.....	5/16"x1-3/4"	1
1625R	C296R	R. H., Differential Quill to Housing.....	1/2"x2-1/2"	4
D595	C332R	Radiator Bottom Tank to Radiator Core.....	5/16"x7/8"	12
1611R	C332R	Radiator Bottom Tank to Radiator Core.....	5/16"x1-1/8"	10
1625R	C340R	R. H., Differential Quill to Housing.....	1/2"x2-1/2"	2
1625R	C392R	R. H., Differential Quill to Housing.....	1/2"x2-1/2"	2
1615R	C910	Air Cleaner Brace to Front End.....	3/8"x1-3/4"	1
1622R	C933	Fender Brace to Housing.....	1/2"x1-1/2"	1
1628R	C934	Steering Support to Tube.....	1/2"x3-1/2"	1
D544	C943	Cross Angle to Platform.....	1/2"x1"	4
D595	C947	R. H., Platform to Support.....	5/16"x7/8"	2
M21	C954	Governor Control Shaft Bracket to Magneto Bracket	3/8"x3/4"	1
D595	C1032	L. H., Platform to Support.....	5/16"x7/8"	2
D544	C1040	Guide Band to Front Wheel.....	1/2"x1"	4
1621R	C1056	Rear Wheel Scraper Brace to Platform.....	1/2"x1-1/4"	2
1614R	C1074	Clutch Foot Trip Bearing to Platform.....	3/8"x1"	2
C1458	C1210	Drawbar to Housings.....	1"x4-1/2"	4
1623R	C1228	R. H., Front Wheel Scraper Blade to Knuckle.....	1/2"x1-3/4"	2
1623R	C1229	L. H., Front Wheel Scraper Blade to Knuckle.....	1/2"x1-3/4"	2
1929R	C1244	Power Shaft Opening Cover to Main Case.....	1/2"x2"	2
1622R	C1252	Fender Brace to Housing.....	1/2"x1-1/2"	1
D544	C1277	Clutch Foot Trip Center Bearing to Platform.....	1/2"x1"	1
1622R	C1287	Wheel Scraper Brace to Platform.....	1/2"x1-1/2"	3
C1458	C1376	Drawbar to Housings.....	1"x4-1/2"	4
1613R	C1413	Power Lift Opening Cover to Housing.....	3/8"x1-1/4"	6
D595	C1464	Brace for Air Cleaner Stack.....	5/16"x7/8"	1
1611R	C1464	Brace for Air Cleaner Stack.....	5/16"x1-1/8"	1
1625R	C1495	Pitman Lift Strap to Strap.....	1/2"x2-1/2"	1
C1458	C1553	Drawbar to Housings.....	1"x4-1/2"	4
D544	C1732	Guide Bands to Front Wheel.....	1/2"x1-1/2"	8
1615R	C1787	R. H., Foot Trip Bearing to Platform.....	3/8"x1-3/4"	2
1615R	C1789	R. H., Bearing to Platform.....	3/8"x1-3/4"	2
D544	C1790	Center Foot Trip Bearing to Platform.....	1/2"x1"	1
D544	C1790	Center Bearing to Platform.....	1/2"x1"	1
D595	C1942	Cooling Baffle Support to Radiator Side.....	5/16"x7/8"	2
1625R	C2001R	R. H., Differential Quill to Housing.....	1/2"x2-1/2"	2
C2015	C2011	Drawbar to Support Strap.....	3/4"x2-1/2"	2
C1458	C2011	Drawbar to Housing (Rear).....	1"x4-1/2"	2
C2016	C2013	Drawbar Support Strap to Housing.....	1"x3-1/2"	2
1622R	C2036	Fender Cross Brace to Center Support.....	1/2"x1-1/2"	2
1621R	C2039	Fender Braces to Bracket.....	1/2"x1-1/4"	2
1622R	C2040	R. H., Fender to Support Angle.....	1/2"x1-1/2"	3
1622R	C2041	L. H., Fender to Support Angle.....	1/2"x1-1/2"	3
1622R	C2042R	R. H., Platform Support to Fender Support Angle..	1/2"x1-1/2"	3
1622R	C2043R	L. H., Platform Support to Fender Support Angle..	1/2"x1-1/2"	3
1622R	C2047	Platform Cross Angle to Platform Support.....	1/2"x1-1/2"	4
1619R	D87R	Control Levers to Quadrant.....	3/8"x3-1/2"	1

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
MACHINE BOLTS WITH SQUARE NUTS					
—Continued					
1611R	D564	Radiator Curtain Bracket to Radiator.....	5/16"x1"	1
1611R	D572	Radiator Curtain Bracket to Radiator.....	5/16"x1"	1
MACHINE BOLTS WITH HEX. NUTS					
1935R	AC229	In Clutch Driving Disk.....	1/2"x3-1/2"	2
1893R	AC242	Citrus Grove Fender to Cross Angle, R. H.....	5/16"x1-1/2"	2
1893R	AC243	Citrus Grove Fender to Cross Angle, L. H.....	5/16"x1-1/2"	2
D1767	AC733	Steering Arm to Spindle, R. H.....	1/2"x3"	1
D1767	AC734	Steering Arm to Spindle, L. H.....	1/2"x3"	1
D1767	AC735	Steering Arm to Spindle, R. H.....	1/2"x3"	1
D1767	AC736	Steering Arm to Spindle, L. H.....	1/2"x3"	1
D1767	AC737	Steering Arm to Shaft.....	1/2"x3"	1
1930R	AC788	Upper Water Pipe to Cylinder Head.....	1/2"x2-1/4"	2
1927R	AC971	Exhaust Elbow to Manifold.....	1/2"x1-1/2"	4
1930R	AC977	Front Fan Bearing Housing.....	1/2"x2-1/4"	2
1929R	AC1059	Power Lift Housing to Power Shaft Housing.....	1/2"x2"	1
1928R	AD829	Muffler, Lower Elbow to Manifold.....	1/2"x1-3/4"	4
D597	C98R	Gear Shift Arm to Gear Shift Lever.....	3/8"x1-3/4"	1
1930R	C1055	In Scraper Blade Holder.....	1/2"x2-1/4"	4
C684	C1270	R. H., Radius Rod to Front Axle.....	3/4"x4-3/4"	2
C684	C1271	L. H., Radius Rod to Front Axle.....	3/4"x4-3/4"	2
1959R	C2149R	Differential Shaft Cover.....	5/8"x7-1/2"	2
1930R	C2281	Steering Shaft Support to Clutch Lever Support.....	1/2"x2-1/4"	2
1940R	C2283R	Control Quadrant to Steering Shaft Support.....	1/2"x5-1/2"	1
1970R	C2329R	Pedestal Support.....	3/4"x5-1/2"	2
1903R	D1987R	Oil Filter Body to Base.....	3/8"x2"	2
MACHINE BOLTS WITHOUT NUTS					
C981	AC125	Flywheel to Crankshaft.....	3/4"x5"	2
C1385	C325R	In Spindle Gear.....	5/8"x3"	1
C1385	C326R	In Steering Arm Gear.....	5/8"x3"	1
C2014	C2011	Drawbar to Front Cross Member.....	1"x2"	2
STOVE BOLTS AND MACHINE SCREWS					
2326R	AC352	Drag Link Dust Cover Screw.....	3/16"x5/8"	1
2326R	AC810	Citrus Grove Fender to Dust Shield.....	3/16"x5/8"	1
2326R	AC827	R. H., Front Dust Shield to Fender.....	3/16"x5/8"	2
2326R	AC828	L. H., Front Dust Shield to Fender.....	3/16"x5/8"	3
2392R	AC850	L. H., Front Dust Shield to Fender.....	1/4"x5/8"	3
D1144	AC851	Governor Lever Shaft Screws.....	No. 10-32x7/16"	2
E2062	C620	Rear Axle Nut Cover to Housing, R. H. and L. H. Cover.....	5/16-18x1/2"	6
E2063	C910	Brace to Air Cleaner.....	1/4-20x3/4"	2
C986	C950	Governor Lever to Shaft.....	No. 10-32x1/2"	2
E2062	C1453	Rear Axle Nut Cover to R. H. and L. H. Cover.....	5/16-18x1/2"	6
2334R	All Radiator Guards to Radiator.....	5/16x1"	4
HEXAGON NUTS					
D1771	AA380	Steering Wheel to Shaft.....	3/4"	1
1506R	AC47	On Pulley Brake Set Screw.....	1/2"	1
1506R	AC251	Manifold to Cylinder (Studs).....	1/2"	1
1513R	AC257	Cylinder to Main Case.....	3/4"	9
1512R	AC272	L. H., Differential Quill to Main Case.....	5/8"	7
1512R	AC350	L. H., Differential Quill to Main Case.....	5/8"	7
1512R	AC374	Fender Support to Housing, R. H.....	5/8"	2
1512R	AC375	Fender Support to Housing, L. H.....	5/8"	2
1512R	AC386	Power Shaft Housing to Main Case.....	5/8"	2
1520R	AC446	On Pulley Brake Set Screw.....	1/2"	1
1512R	AC520	Control Quadrant Studs.....	5/8"	2
1512R	AC553	L. H., Differential Quill to Main Case.....	5/8"	7
1513R	AC619	Cylinder to Main Case.....	3/4"	9
1513R	AC647	Cast Cone Lug to Wheel.....	3/4"	1
1506R	AC694	Manifold to Cylinder (Studs).....	1/2"	4
1512R	AC789	L. H., Differential Quill to Main Case.....	5/8"	7
1495R	AC1117	Piston Pin to Piston on Set Screw.....	1/2"	1
1506R	C107R	Reverse Shaft Collar Set Screw.....	1/2"	1
1506R	C248R	Exhaust Elbow to Manifold Studs.....	1/2"	4
1512R	C250R	Cylinder Head to Cylinder.....	5/8"	16

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
HEXAGON NUTS—Continued					
1506R	C262R	Steering Gear Housing to Case.....	1/2"	2
1512R	C296R	R. H., Differential Quill to Main Case.....	5/8"	7
1513R	C302R	Front End Studs to Radiator.....	3/4"	2
1513R	C302R	Front End to Case.....	3/4"	3
1506R	C322R	Steering Gear and Worm Housing.....	1/2"	2
1512R	C340R	R. H., Differential Quill to Main Case.....	5/8"	7
1512R	C354R	Scraper Blade Holder Set Screw.....	5/8"	4
1513R	C367R	Lug to Rear Wheel (Wide Tread and "P").....	3/4"	1
1512R	C392R	R. H., Differential Quill to Main Case.....	5/8"	7
1512R	C413	Rear Wheel to Axle (R. H., 6; L. H., 6).....	5/8"	12
1520R	C426	Reverse Shaft to Case (Screw).....	1/2"	1
1513R	C618	L. H., Main Bearing Adjusting Screw.....	3/4"	1
D528	C904	On Throttle Rod.....	1/4"	1
1506R	C921	Piston Pin to Piston (Screws).....	1/2"	2
D528	C924	On Spark Control Rod.....	1/4"	1
D528	C925	On Speed Control Rod.....	1/4"	1
1514R	C927	Clutch Operating Rod.....	9/16"	1
1512R	C945	Platform to Rear Axle Housing Studs.....	5/8"	4
1521R	C977	On Adjusting Screw Steering Gear Shaft.....	5/8"	1
1520R	C978	On Stop Screws to Steering Gear.....	1/2"	2
1513R	C981	Flywheel Bolts.....	3/4"	2
1493R	C1018	Control Tube Set Screw (Nut).....	3/8"	1
1512R	C1031	On Rear Axle Housing Stud.....	5/8"	1
1512R	C1055	Scraper Blade Set Screw.....	5/8"	1
1516R	C1214	Drawbar to Housing Cap Screw (Rear).....	1"	2
1513R	C1267	Hayfield Over band Support to Wheel Rim Bolts.....	3/4"	3
C535	C1412	On Gear with Shaft, Power Shaft Bevel Gear (Slotted).....	1"	1
1493R	C1465	Clamp, Air Cleaner Stack Elbow.....	3/8"	2
1493R	C1539	On Front Axle Pivot Pin Bolt.....	3/8"	1
1512R	C1626R	Cylinder Head to Cylinder.....	5/8"	16
1506R	C1627R	Manifold to Cylinder (Studs).....	1/2"	4
1512R	C1701R	Cylinder Head to Cylinder.....	5/8"	16
1495R	C1704	Piston Pin to Piston on Set Screw.....	1/2"	1
D528	C1706	On Throttle Rod and Joint.....	1/4"	2
1512R	C1716	Rear Wheel to Axle (R. H., 6; L. H., 6).....	5/8"	12
1521R	C1764	On Wrist Pin Set Screw (Jam Nut).....	5/8"	1
1493R	C1788	On Clutch Foot Trip Rod.....	3/8"	1
1506R	C1791R	Manifold to Cylinder (Studs).....	1/2"	4
1506R	C1908R	Manifold to Cylinder (Studs).....	1/2"	4
1521R	C1925	On Wrist Pin Set Screw (Jam Nut).....	5/8"	1
1512R	C2001R	R. H., Differential Quill to Main Case.....	5/8"	7
C1592	C2347	Lamp, Support.....	1/2"	1
1493R	D87R	Spark and Speed Lever Control (Extra Nut).....	3/8"	1
1513R	D174	R. H., Main Bearing Adjusting Screw.....	3/4"	1
1512R	D330	Clutch, Operating Lever Bolt.....	5/8"	1
1513R	D411	Spade Lug Bolt to Wheel.....	3/4"	1
1513R	D411	Road Band Support Bolt to Rear Wheel.....	3/4"	3
1506R	D622	Shift Shaft Set Screw to Case.....	1/2"	1
1513R	D897	Seat Spring to Case Studs.....	3/4"	2
1513R	D2184	Hook Bolt.....	3/4"	1
HEXAGON NUTS—CASTELLATED					
D1661	AC229	On Clutch Driving Disk Bolts.....	9/16"	2
C538	AC752	Rear Axle to Sprocket.....	1-1/2"	1
C1592	C420	Cam Follower Adjusting Screw Lock Nut (Plain).....	1/2"	1
C535	C437	Differential Shaft to Brake Drum.....	1"	1
C535	C660	Each End of Spline Shaft.....	1"	1
C985	C678	Steering Wheel to Shaft (Plain).....	7/8"	1
D1661	C725	Gear to Oil Pump Drive Shaft.....	9/16"	1
1304R	C791	Differential Gears to Differential Housing Bolt.....	1/2"	8
C985	C1024	On Each End of Tie Rod to End (Plain).....	7/8"	2
D1661	C1193	Governor Shaft Ends.....	9/16"	2
C1661	C1194	Fan Shaft Ends.....	9/16"	2
C2072	C2054	Governor Shaft Ends.....	5/8"	2
RIVETS—R. I. HEAD					
D436	AC208	R. H. and L. H. Brake Drum to Hub.....	3/8"x1"	6
D430	AC226	In Speed Change Lever.....	3/16"x5/8"	2

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
RIVETS—R. I. HEAD—Continued					
1561R	AC286	Swinging Drawbar	1/2"x2-1/4"	1
C1399	C347	Worm Wheel to Hub (Power Lift)	1/4"x2"	7
D479	C636	Brake Pedal to Brake Lever	1/4"x3/4"	2
D478	C941	Hood Clamp to Hood	3/16"x3/8"	2
D443	C1371	Road Band Support to Road Band	1/2"x1-7/8"	5
D478	C1573	Hood Clamp to Hood	3/16"x3/8"	2
RIVETS—C. S. HEAD					
C546	AC71	Yoke to Sliding Gear Fork (Low and Reverse)	3/8"x1-1/2"	2
C546	AC72	Yoke to Sliding Gear Fork (High and Intermediate)	3/8"x1-1/2"	2
D1416	AC861	Seat Latch Bracket to Seat Support	3/8"x1/4"	4
D1416	C457	Yoke, Shift Fork	3/8"x1/4"	2
2188R	D1040R	Air Cleaner to Flange	1/4"x5/8"	6
RIVETS—SPLIT BRASS					
D695	C1087	Lining to Brake Band	5/32"x1/2"	12
D695	D385	Lining to Pulley Brake	5/32"x1/2"	4
D1592	D385R	Lining to Pulley Brake	9/64"x7/16"	5
D695	D468	Fuel Tank Cushion to Bracket	5/32"x1/2"	2
D1520	D468	Fuel Tank Cushion to Support	9/64"x5/16"	4

LOCK WASHERS

Size	No.
3/64"	C1320
3/16"	D603
1/4"	1729R
5/16"	1721R
3/8"	1722R
1/2"	1724R
5/8"	1726R
3/4"	1728R
1"	1882R

COTTER KEYS

Length	Diameter				
	3/32"	1/8"	3/16"	1/4"	3/8"
1/2"	1730R				
5/8"		1732R			
3/4"			D339		
1"	1731R	1735R	1741R		
1-1/4"			1742R		
1-1/2"		1737R	1743R		
2"		1738R	2215R	1748R	
3-1/2"					M23

CASTINGS SOLD ONLY AS ASSEMBLIES FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
C32R	Main Bearing Housing with Cap, R. H.	AC162	154	75
C33R	Main Bearing Housing with Cap, L. H.	AC161	154	75
C84R	Spindle and Knuckle, Front Wheel	AC188	173	91
C126R	Pulley with Cone, Bushing and Gear	AC130	166	84
C127R	Disk, Clutch Driving, with Bolts	AC229	166	84
C132R	Fork, Shift, High and Intermediate, Complete	AC72	167	85
C133R	Fork, Shift, Low and Reverse, Complete	AC71	167	85
C148R	Gear, Spline Shaft	AC79	166	84
C149R	Quill, Spline Shaft, Complete with Bearing Cup	AC176	166	84
C167R	Hub Cap with Oil Fitting	AC119	173	92
C178R	Bearing, Cam Shaft with Cup, R. H.	AC80	156	77
C179R	Bearing, Cam Shaft with Cup, L. H.	AC81	156	77
C210R	Spider, Intermediate, with Gear	AC150	168	85
C211R	Spider, High and Low, with Gears	AC149	168	85
C225R	Crankshaft with Gear	AC177	155	75
C226R	Connecting Rod, Complete	AC193	155
C226R	Connecting Rod and Cap with Piston Pin Bushing	AC194	155
C241R	Flywheel with Bolts and Dowel Pin	AC125	154	75
C242R	Rear Axle Housing, R. H., with Studs and Snap Rings	AC212	168	86
C243R	Rear Axle Housing, L. H., with Studs and Snap Rings	AC213	168	86
C253R	Quadrant, Control, with Clutch Lever Pivot Bolt	AC520	159	79

**CASTINGS SOLD ONLY AS ASSEMBLIES FOR GENERAL PURPOSE,
WIDE TREAD, AND ORCHARD TRACTORS (Continued)**


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
C255R	Front Axle with Steering Spindle Bushings.....	AC185	172	91
C292R	Steering Arm, R. H., with Bolt.....	AC733	175	94
C293R	Steering Arm, L. H., with Bolt.....	AC734	175	94
C294R	Strainer, Complete.....	AC451	161	80
C295R	Manifold, Intake and Exhaust with Exhaust Elbow Studs.....	AC251	156	76
C297R	Quill, Differential Shaft, L. H., with Snap Ring and Dowel Pin.....	AC272	168	85
C300R	Case, Transmission, Main.....	AC255	154
C301R	Cylinder, 5-3/4", Complete with Studs, Valve Guides, Valves and Springs.....	AC256	156
C301R	Cylinder with Pistons, Rings and Gaskets.....	AC886	156
C301R	Cylinder, 5-3/4", Complete with Studs and Valve Guides.....	AC257	156	76
C303R	Cam Shaft, with Woodruff Key.....	AC564	156	77
C304R	Gear, Cam Shaft, Complete with Governor Drive Gear.....	AC276	156	77
C306R	Case, Governor, with Plug.....	AC344	158	78
C324R	Steering Arm, with Bolt, Front.....	AC737	175	94
C333R	Hub with Races, Front Wheel.....	AC371	173	92
C334R	Front Wheel, with Bolts (Disk Type).....	AC847	173	92
C336R	Sleeve, Steering Spindle with Pin.....	AC416	174	93
C341R	Quill, Differential Shaft, L. H., with Snap Ring.....	AC350	168	85
C342R	Power Shaft Housing.....	AC386	189	105
C344R	Rear Axle Housing, R. H., with Studs and Snap Rings.....	AC397	168	86
C345R	Rear Axle Housing, L. H., with Studs and Snap Rings.....	AC398	168	86
C350R	Quill, Spline Shaft, Complete, with Bearing Cup.....	AC176	166	84
C353R	Power Lift Worm Wheel Hub.....	AC388	190	105
C365R	Brake, with Lining, Pulley.....	AC446	166	84
C373R	Clamp Nut, with Cap Screw, Rear Axle.....	AC454	169	86
C376R	Steering Arm, R. H., with Bolt.....	AC735	175	94
C377R	Steering Arm, L. H., with Bolt.....	AC736	175	94
C383R	Front End Support.....	C302R	173	91
C388R	Rear Axle Housing, R. H., with Studs and Snap Rings.....	AC503	169	86
C389R	Rear Axle Housing, L. H., with Studs and Snap Rings.....	AC504	169	86
C390R	Front End Support.....	C1275R	175	91
C391R	Hub with Races, Front Wheel.....	AC513	173	92
C397R	Cam Shaft with Woodruff Key.....	AC564	156	77
C1274R	Front Pedestal with Steering Arm Bushings.....	AC408	174	93
C1596R	Quadrant, Control, with Clutch Lever Pivot Bolt.....	AC520	159	79
C1645R	Quill, Differential Shaft, L. H., with Snap Ring and Dowel Pin.....	AC272	168	85
C1667R	Spindle and Knuckle, Front Wheel.....	AC631	173	91
C1676R	Quadrant, Control, with Clutch Lever Pivot Bolt.....	AC520	159	79
C1700R	Cylinder, 6", with Studs and Guides.....	AC619	156	76
C1700R	Cylinder, 6", with Studs, Guides and Valves.....	AC620	156
C1700R	Cylinder, with Pistons, Rings and Gaskets.....	AC888	156
C1700R	Cylinder, with Pistons, Rings and Gaskets.....	AC887	156
C1733R	Case, Transmission, Main.....	AC652	154
C1734R	Crankshaft, with Gear.....	AC639	155	75
C1737R	Gear, Spline Shaft.....	AC640	177	84
C1740R	Main Bearing Housing, R. H., with Cap.....	AC645	154	75
C1741R	Main Bearing Housing, L. H., with Cap.....	AC646	154	75
C1795R	Radiator Top Tank.....	C256R	163	83
C1821R	Cover, Air Cleaner, with Bail.....	AC747	188	104
C1822R	Container, Air Cleaner, with Gasket.....	AC745	188	104
C1878R	Front Axle, with Bushings.....	AC774	173	91
C1900R	Rear Axle Housing, R. H., with Studs and Snap Rings.....	AC817	169	86
C1901R	Rear Axle Housing, L. H., with Studs and Snap Rings.....	AC818	169	86
C1909R	Upper Water Pipe, with Bearing Cup Pin.....	AC788	163	83
C1922R	Connecting Rod, Complete.....	AC763	155
C1922R	Connecting Rod, with Piston Pin Bushing.....	AC764	155	76
C2002R	Quill, Differential Shaft, L. H., with Snap Ring.....	AC789	168	85
C2020R	Front Wheel, with Races.....	AC830	173	92
C2135	Upper Water Pipe, with Bearing Cup Pin.....	AC909	163	83
C2168R	Fan, Complete.....	AC933	165	78
C2234R	Cover and Stack, Air Cleaner.....	AC955	189
C2295R	Housing with Sleeve Pin, Front Fan Bearing.....	AC977	165	78
C2310R	Case, Transmission.....	AC1021	154
C2351R	Housing with Bushings and Oil Seal, Power Lift.....	AC1059	190	105
D92R	Spider and Blades, Complete.....	AC49	165	78
D363R	Screw Head, and Stud, Fuel Tank Filler Cap.....	AD97	162	81
D363R	Screw Head, and Stud, Radiator Filler Cap.....	AD97	162	81
D815R	Body, Oil Indicator.....	AC434	161	80
D1082R	Nut, Front Wheel Bearing with Cap Screw.....	AD452	174	92
D1919R	Muffler, Lower, Elbow.....	AD829	157	77
D1920R	Muffler, Stack and Flange.....	AD894	157	77
D1987R	Body, with Bolts, Oil Filter.....	AC954	161	80
D2056R	Base, Oil Filter with Plugs.....	AD883	161	80

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

TRANSMISSION CASE

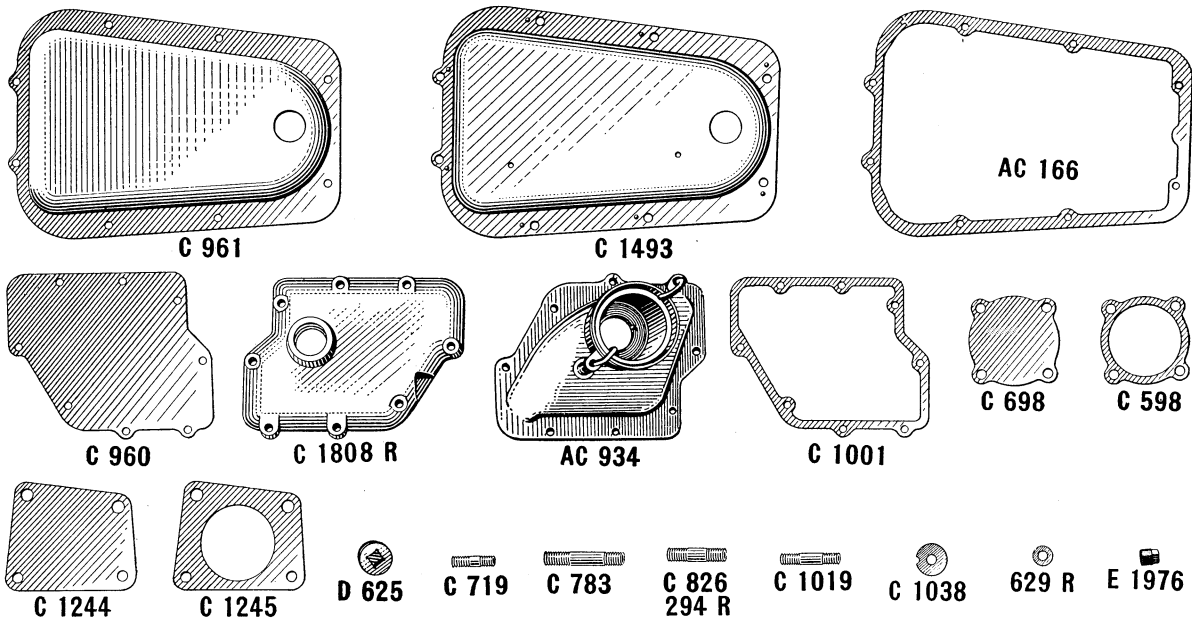


ENGINE AND CRANKSHAFTS

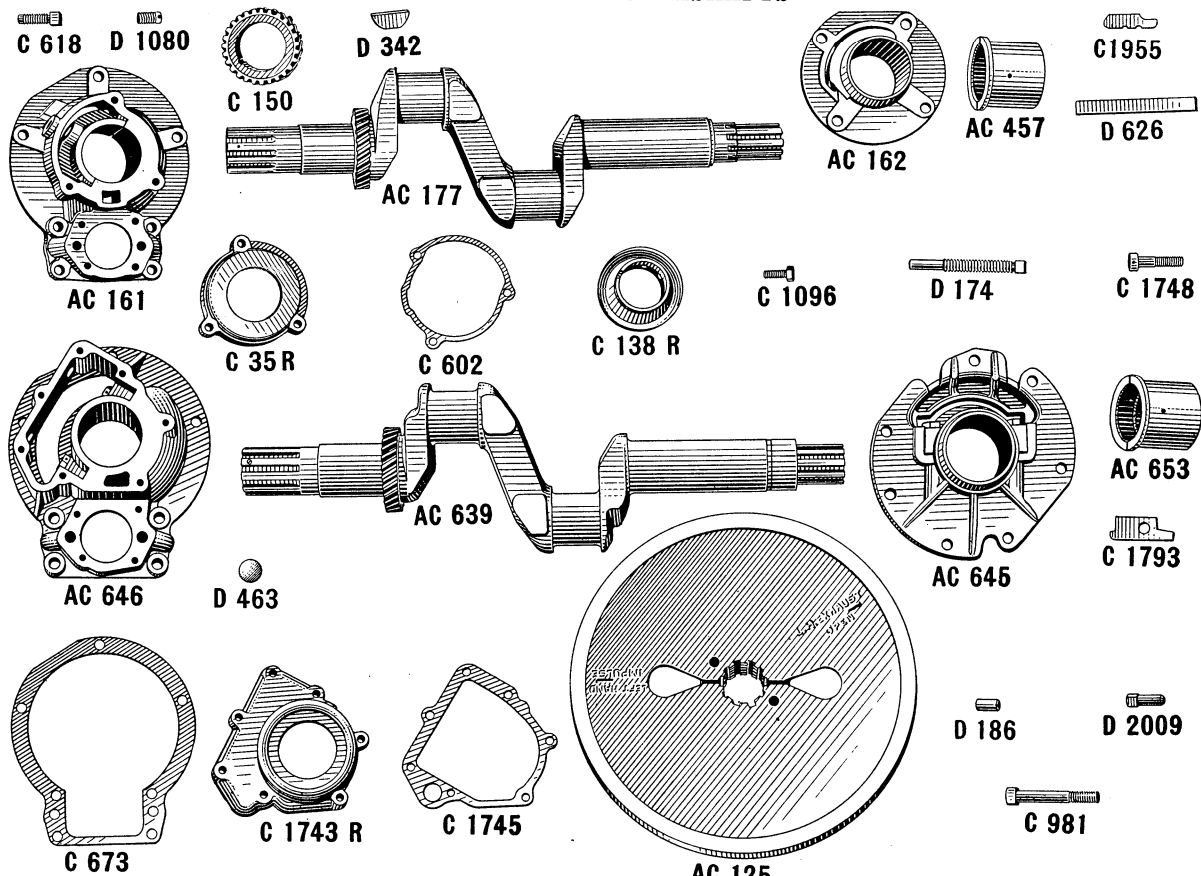


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

PISTONS AND CONNECTING RODS

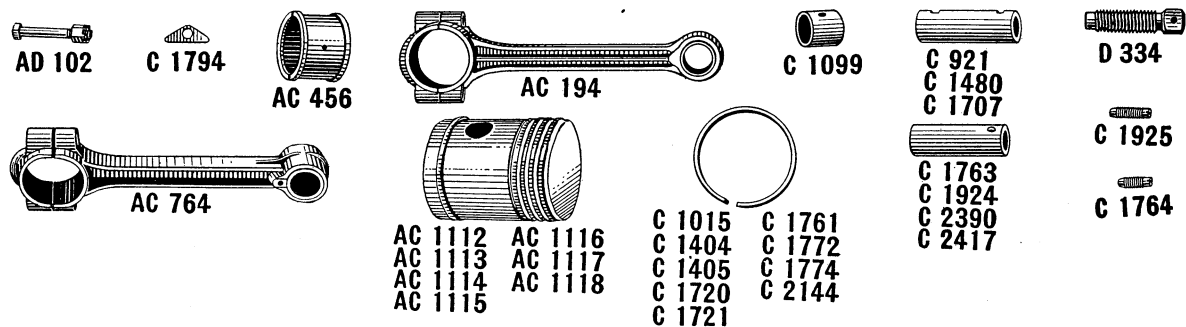


CYLINDERS, VALVES, AND MANIFOLDS

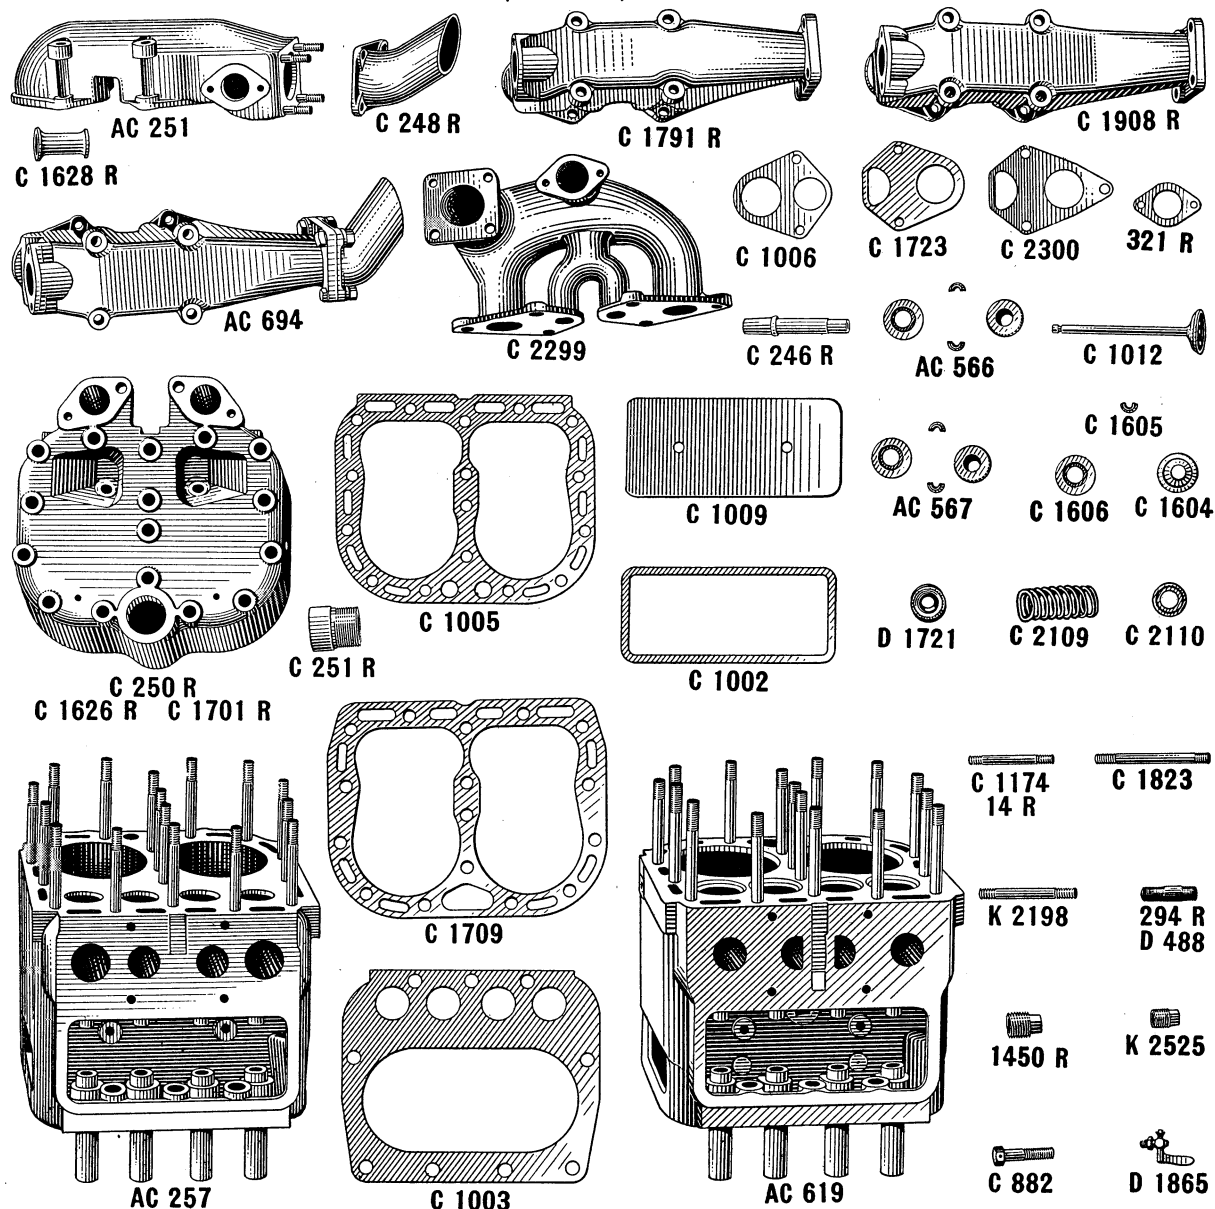


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS


CAM SHAFT

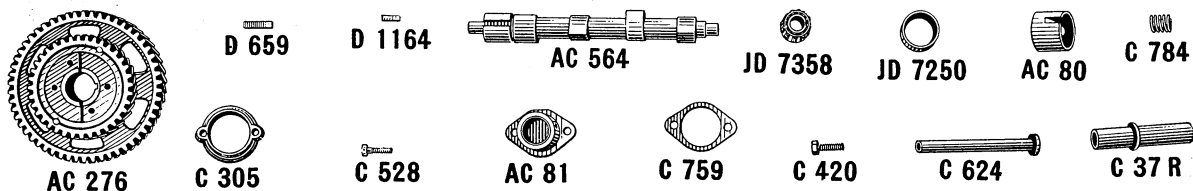


WATER FEED

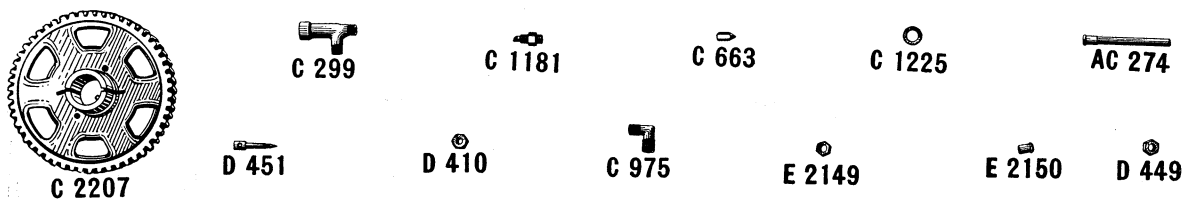


MUFFLER AND SPARK ARRESTER

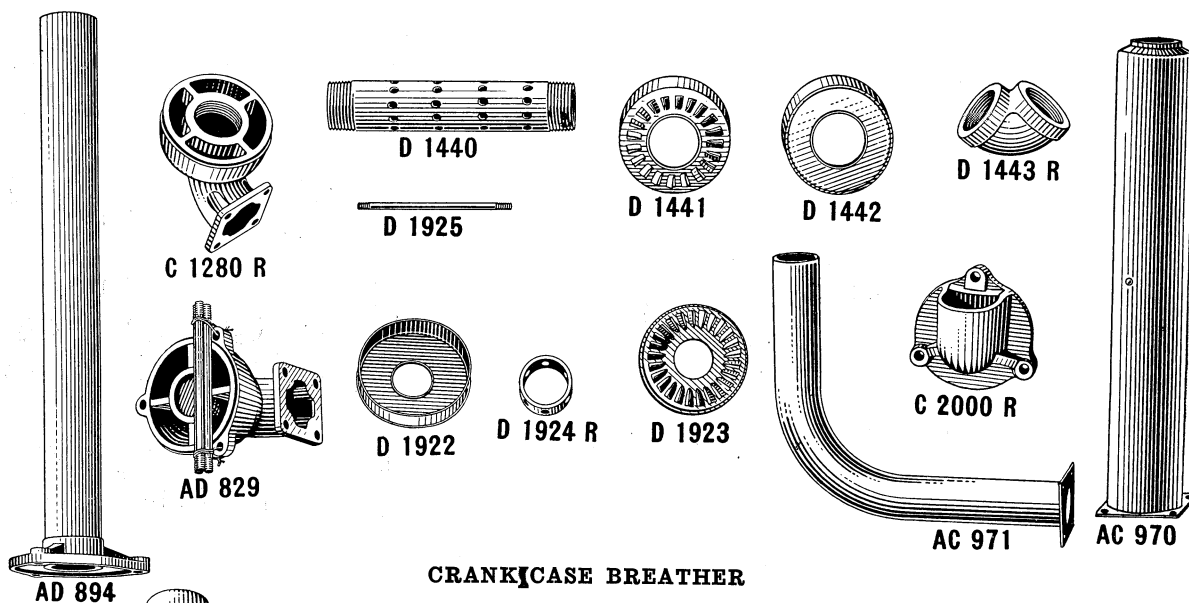

CRANKCASE BREATHER

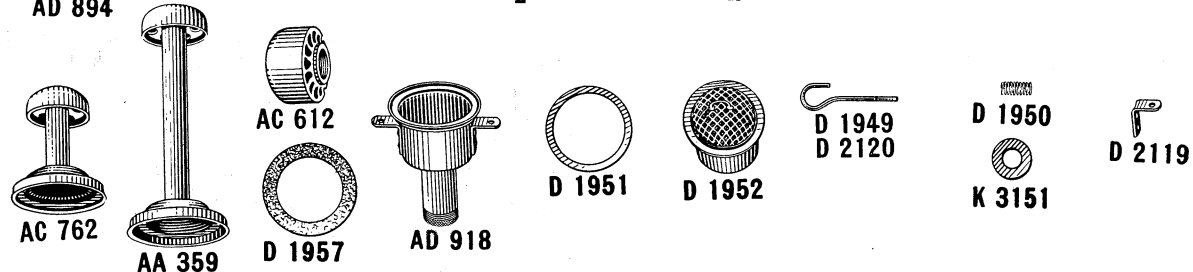


CRANK CASE VENTILATOR

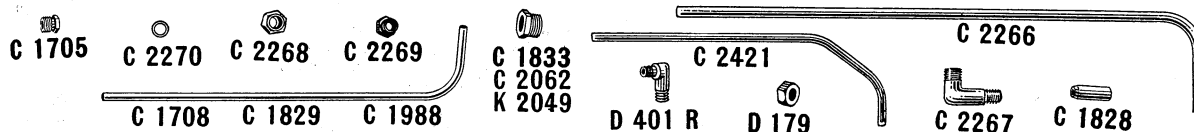

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

GOVERNOR

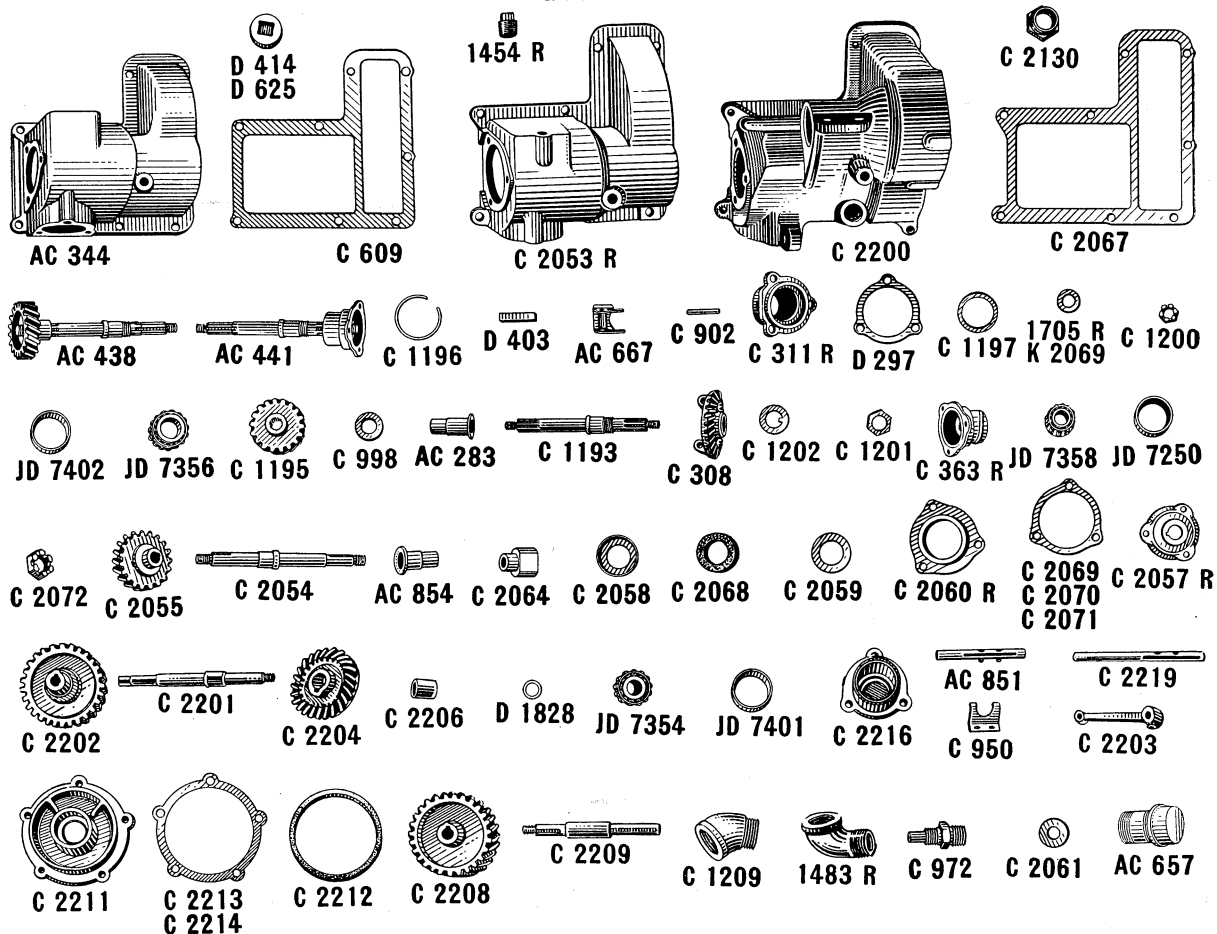

FAN

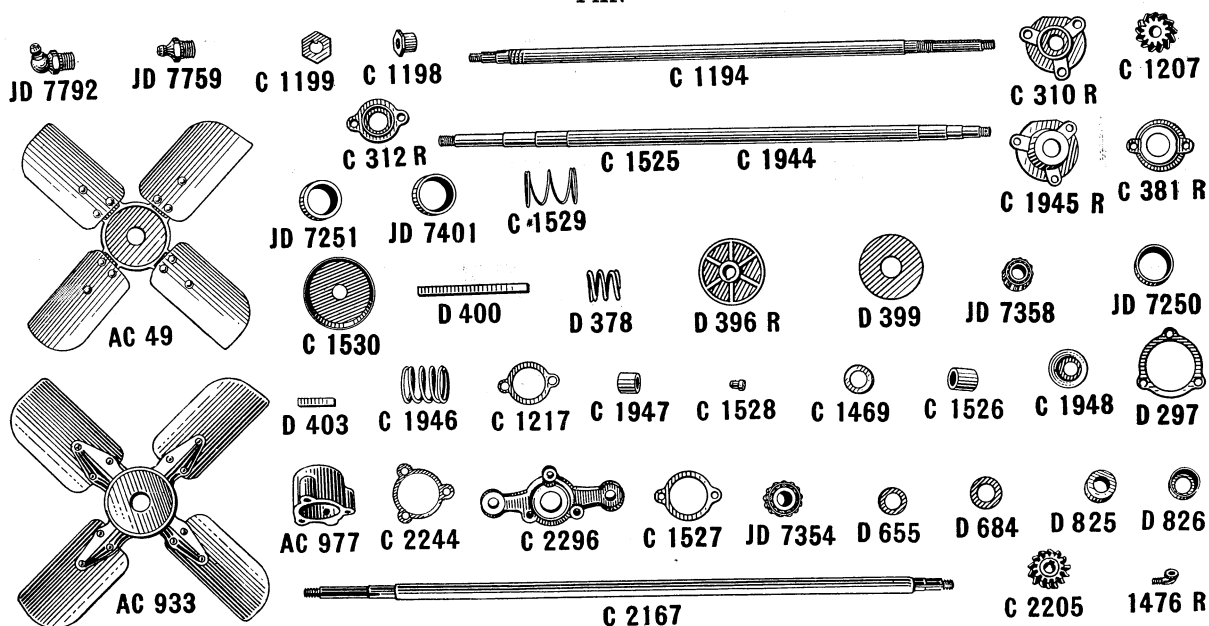


Plate No. 78

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

CONTROLS


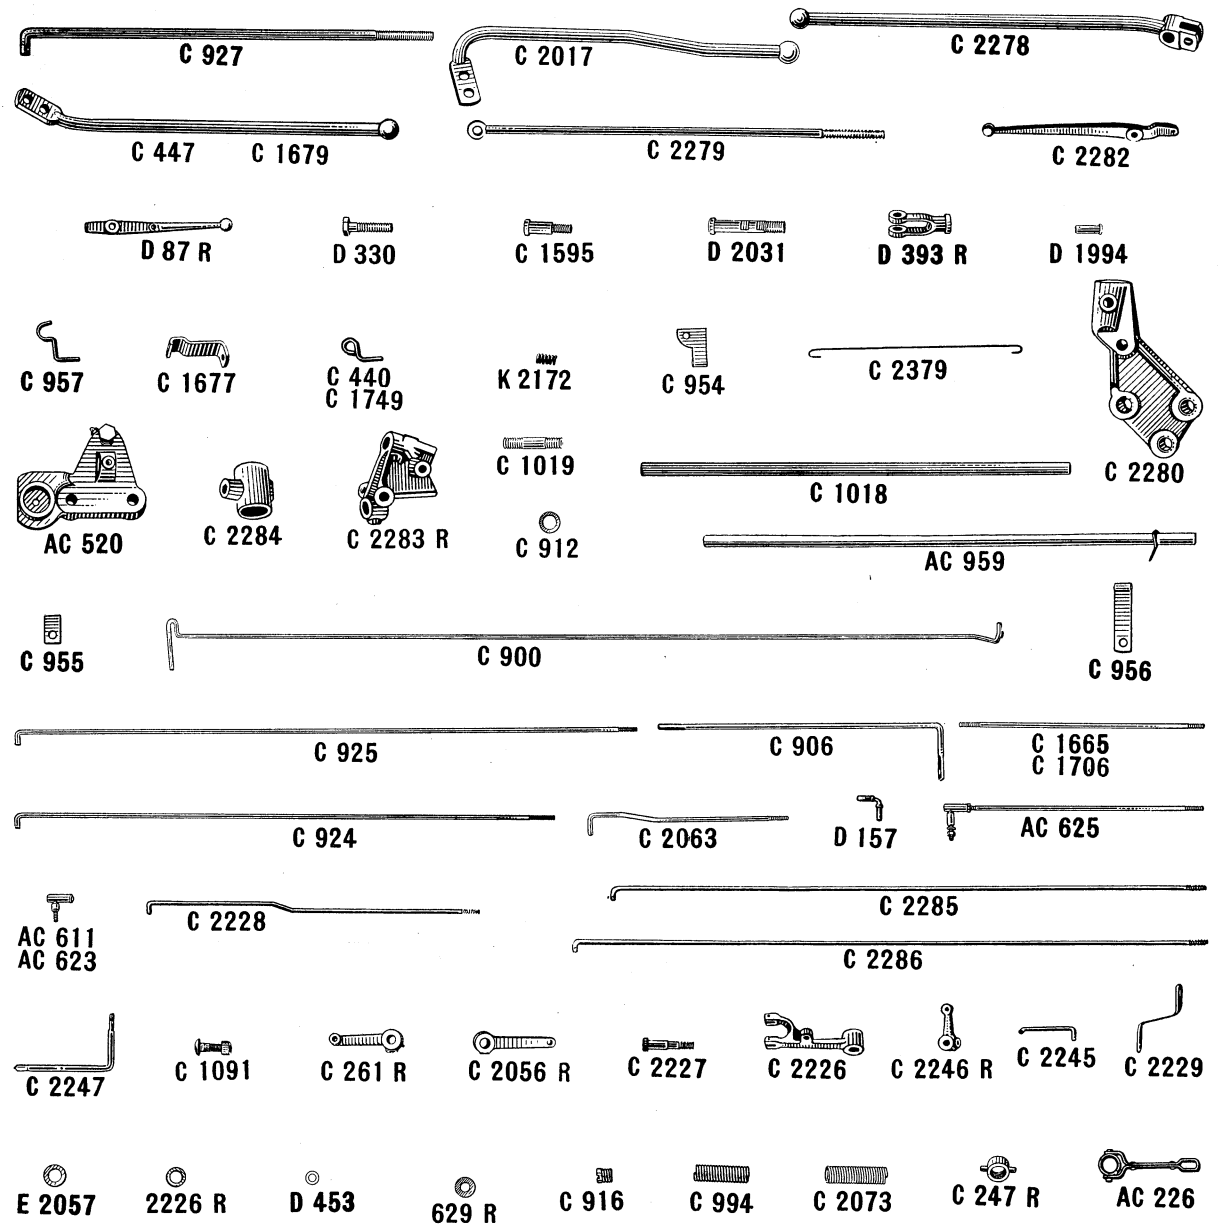



Plate No. 79

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS


LUBRICATING SYSTEM AND OIL PUMP

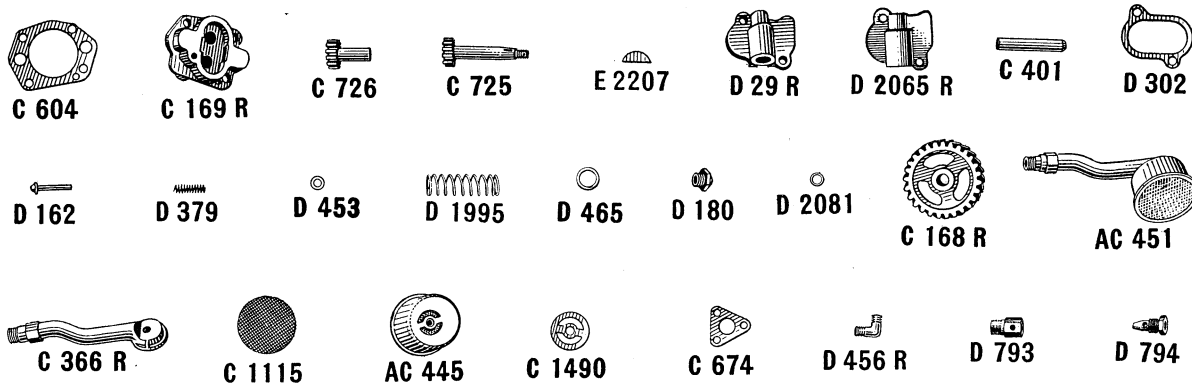

OIL FILTER AND INDICATOR

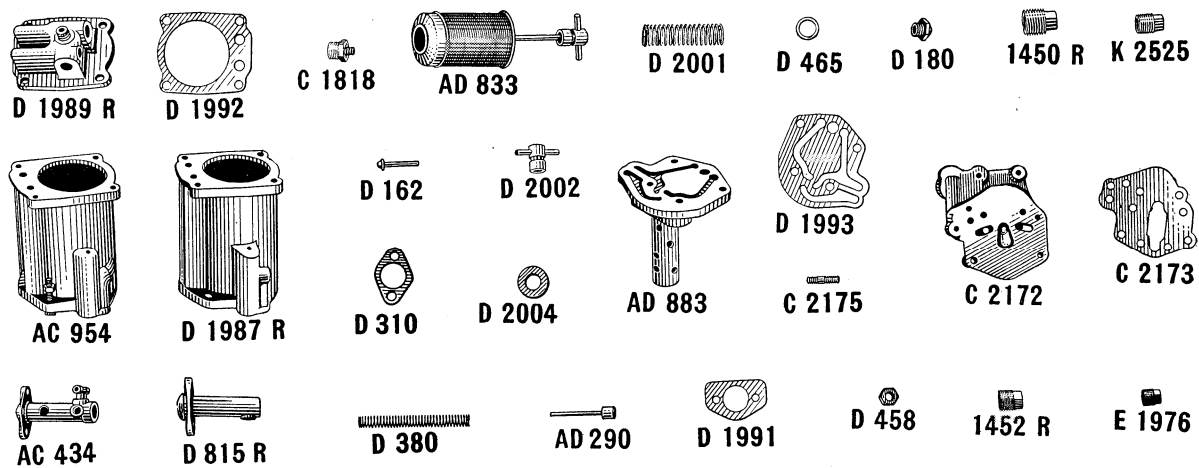

OIL PIPES AND FITTINGS

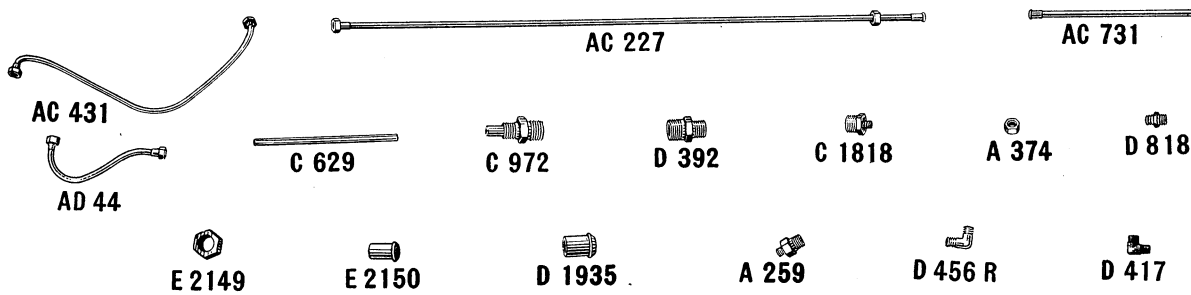


FUEL SYSTEM



REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

HOOD

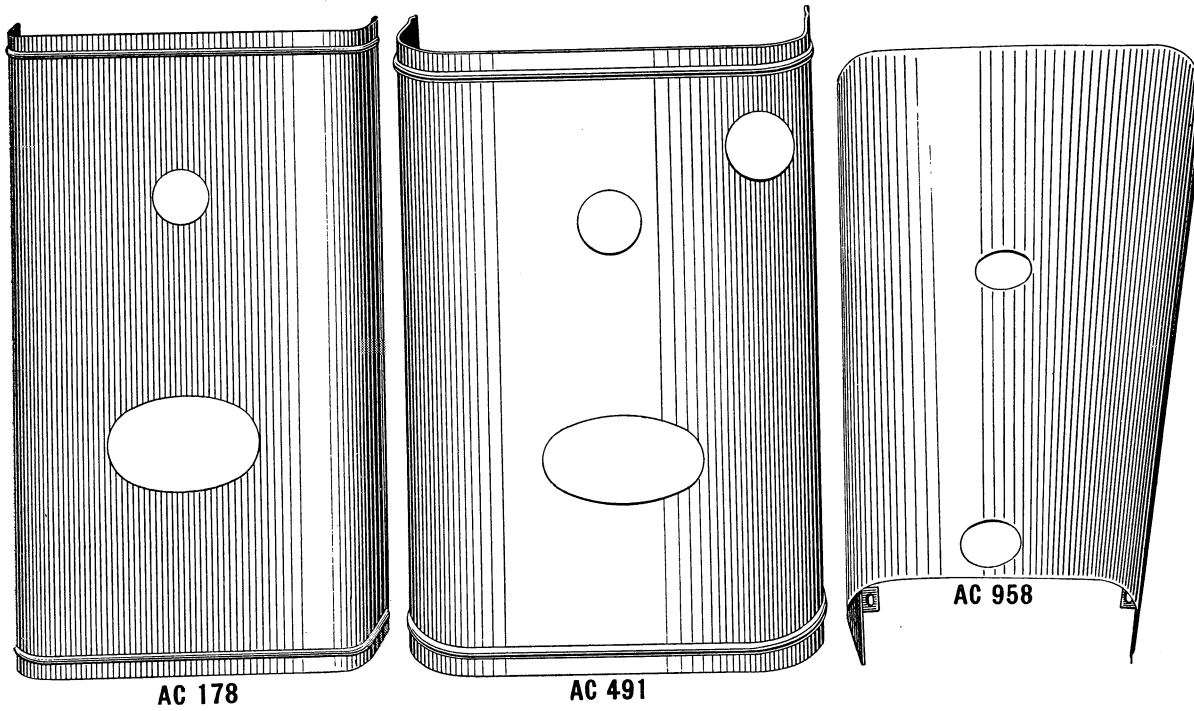

RADIATOR GUARD AND CURTAIN


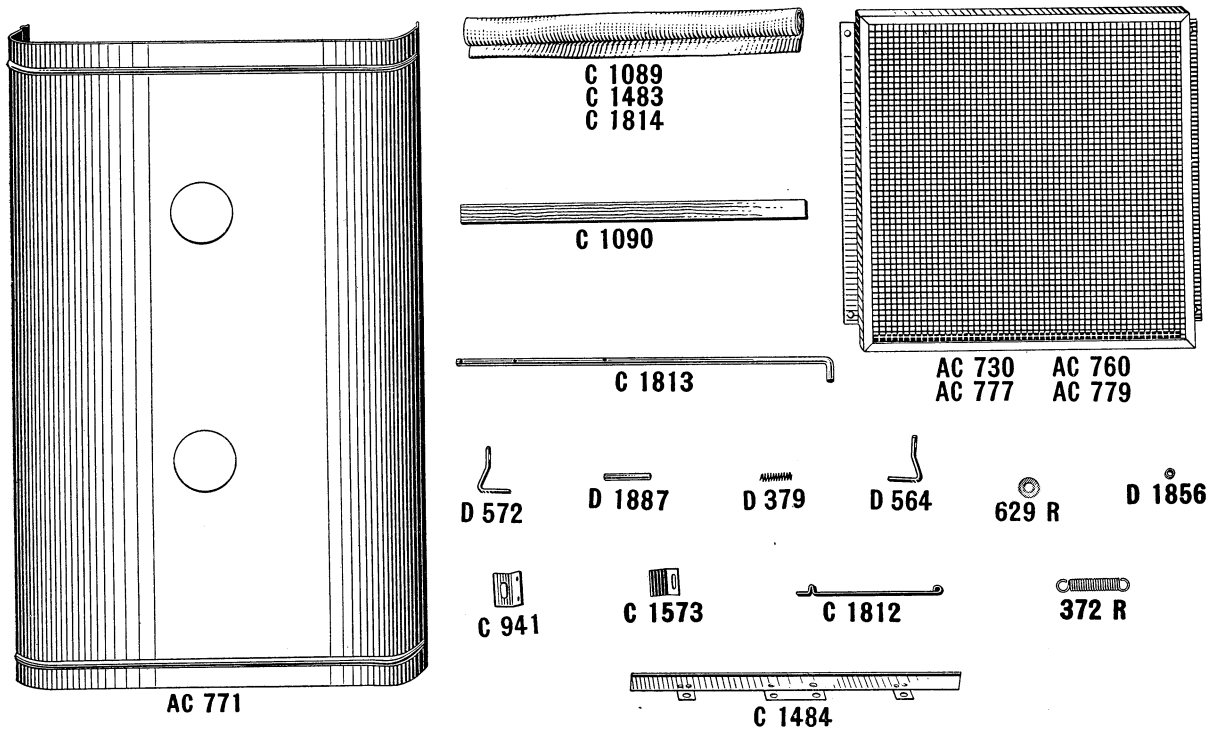


Plate No. 82


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

COOLING SYSTEM

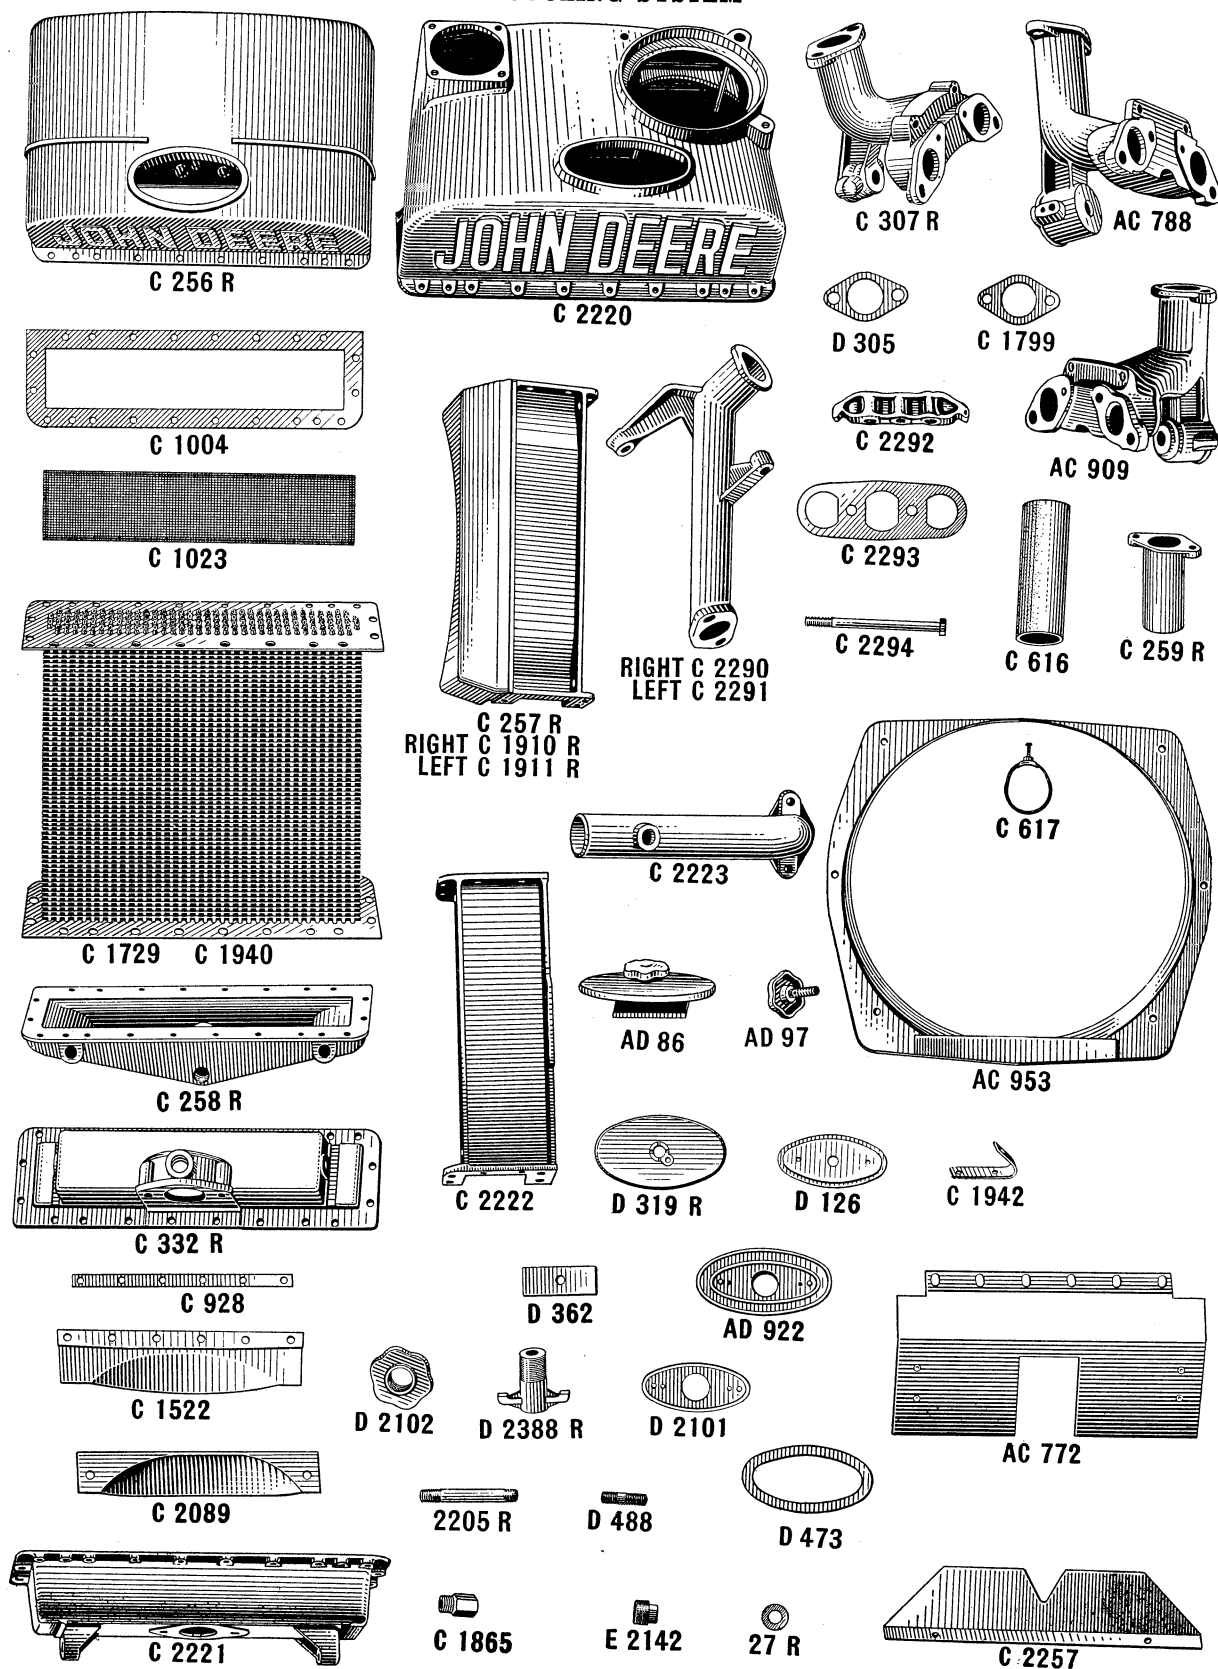

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

PULLEY AND CLUTCH

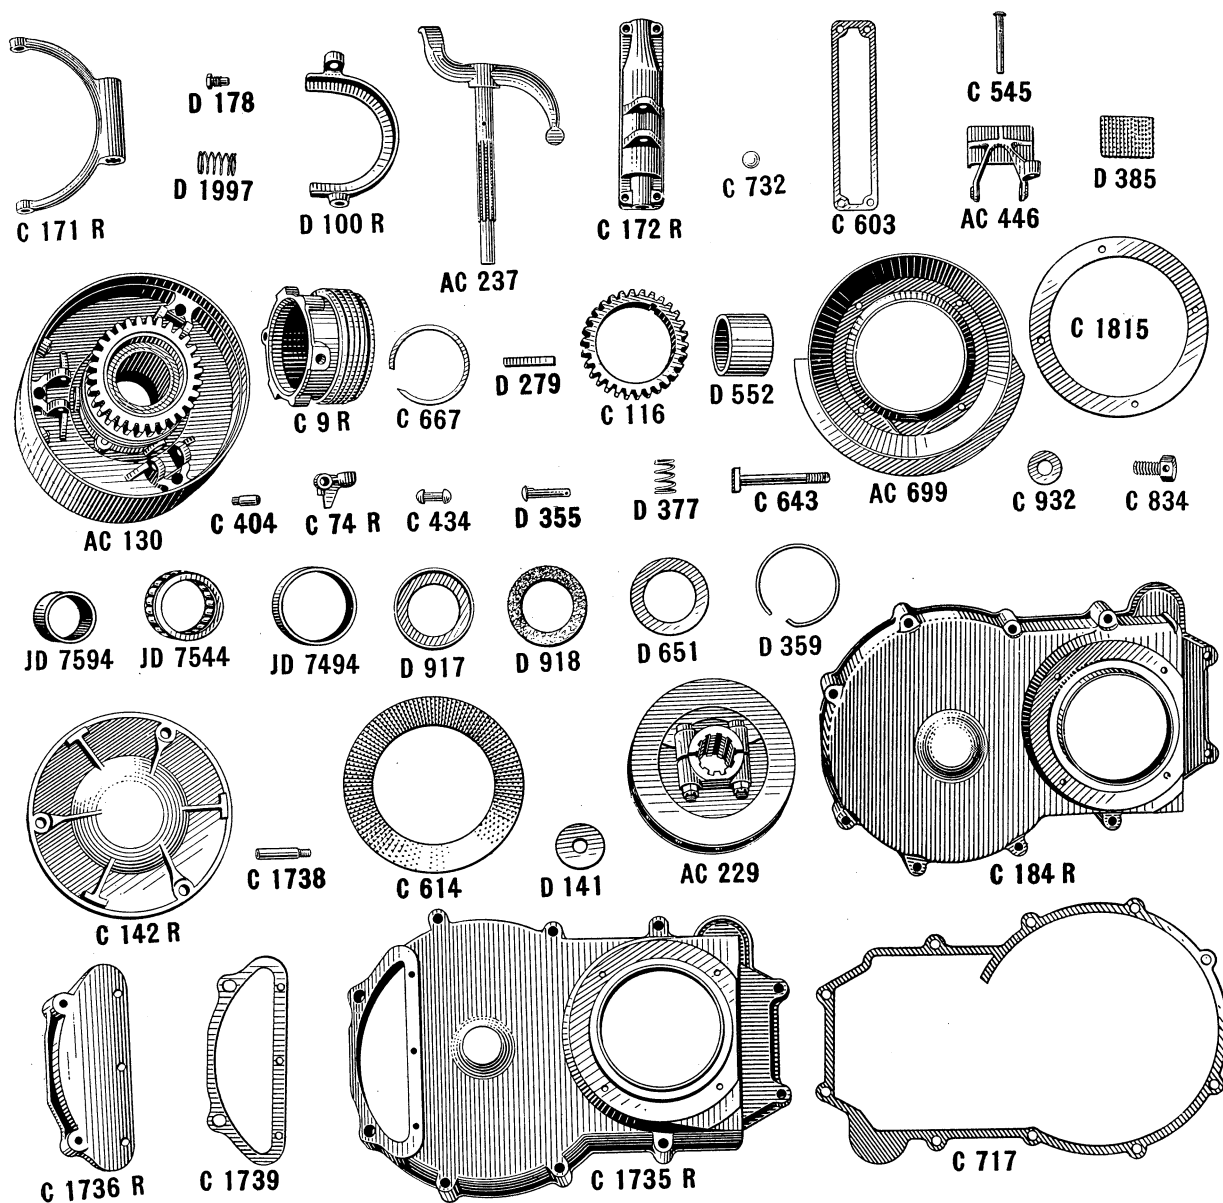

SPLINE SHAFT


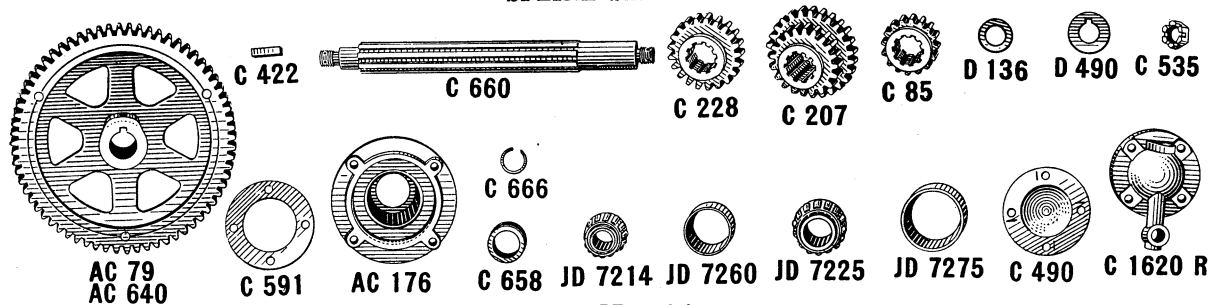



Plate No. 84

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS


GEAR SHIFT

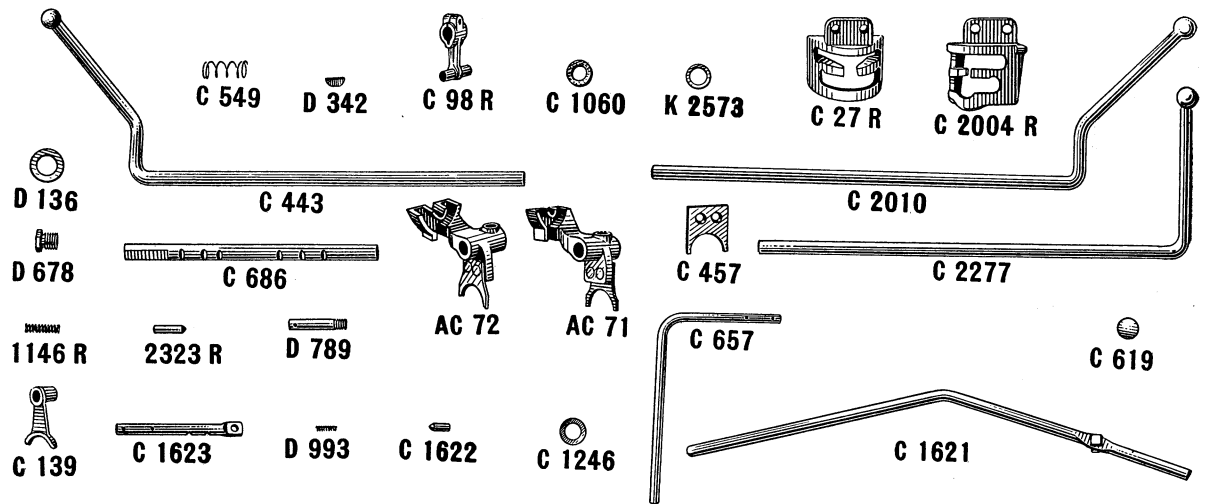

REVERSE SHAFT

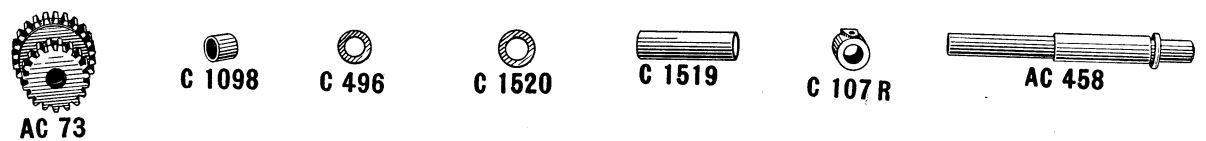


DIFFERENTIAL

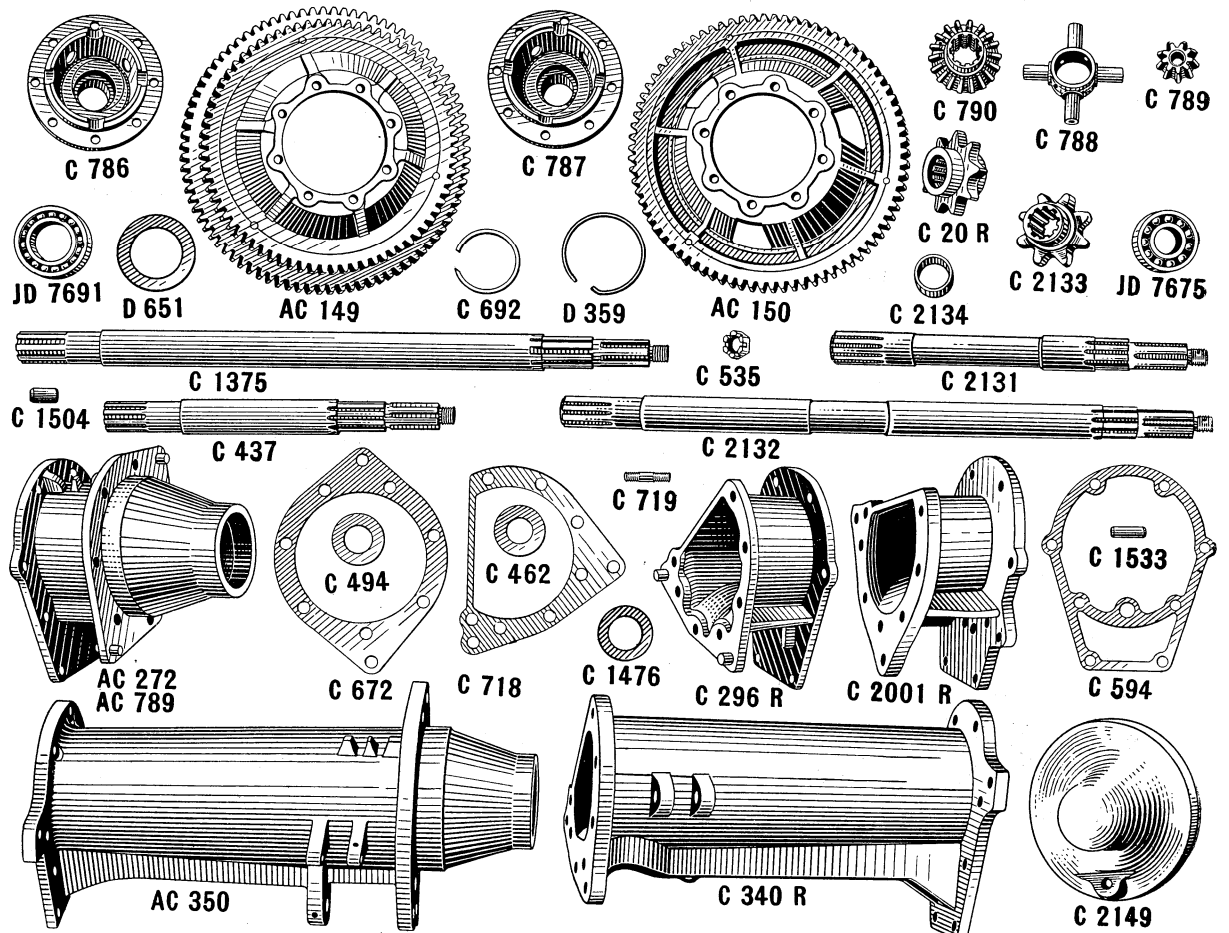

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

FINAL DRIVE

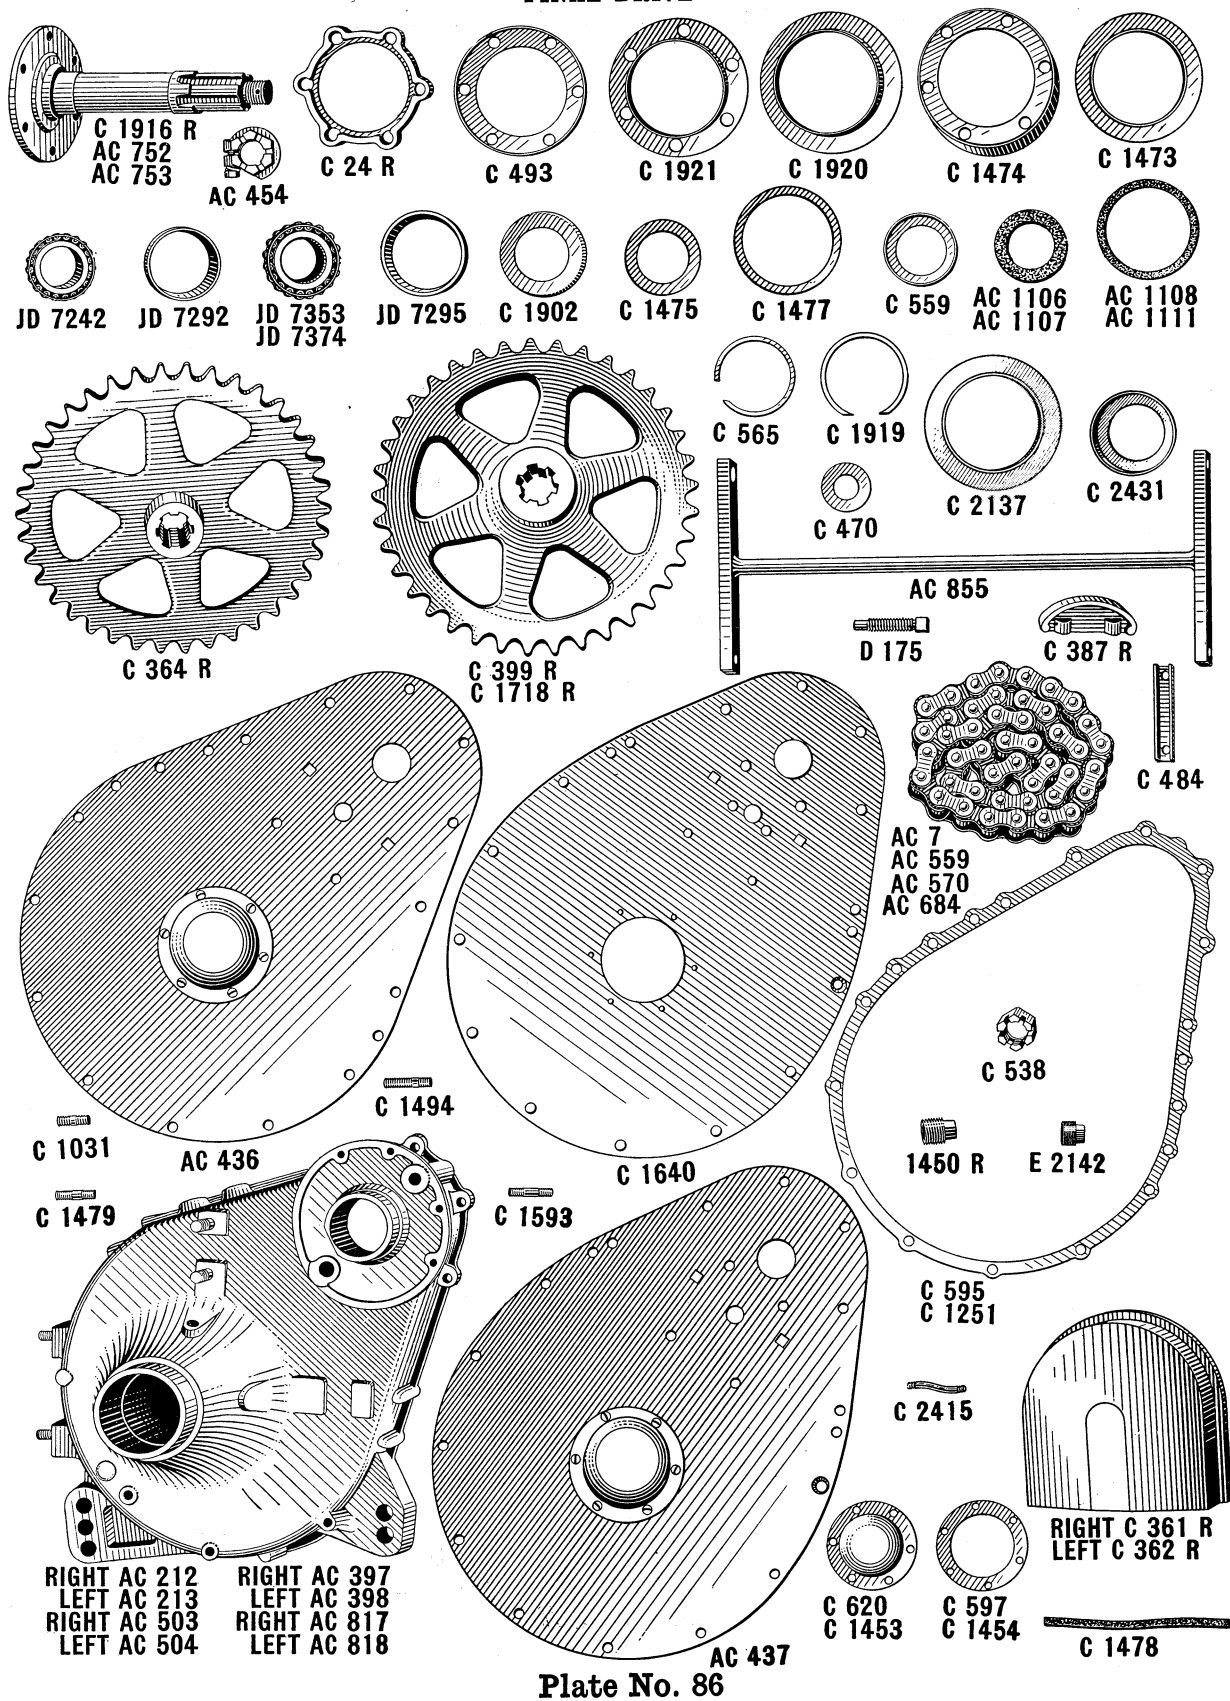

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

REAR WHEELS AND REAR WHEEL EQUIPMENT



JD 1202 C 1538 C 1554



 
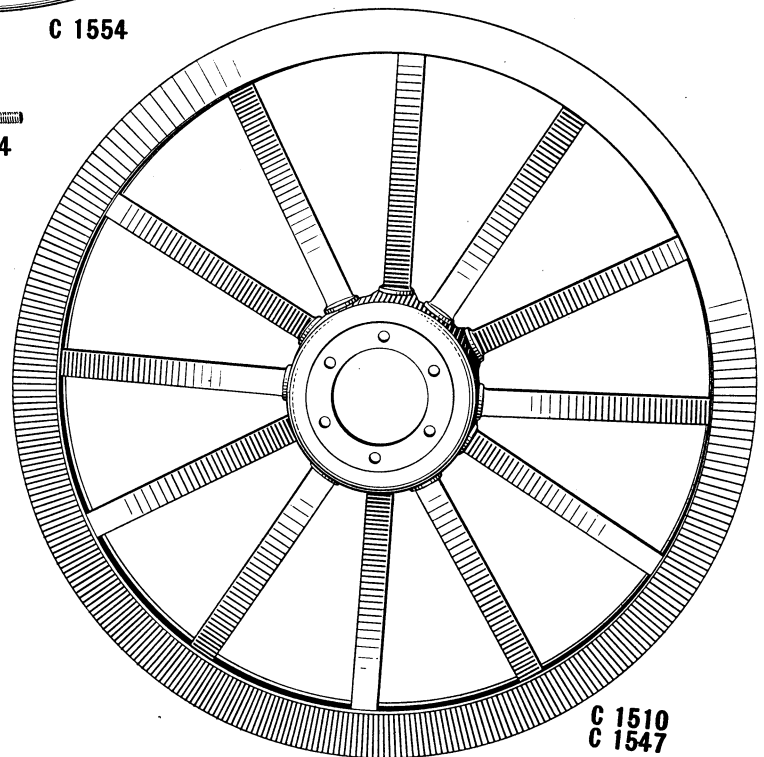



Plate No. 87

**REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND
ORCHARD TRACTORS**

REAR WHEELS AND REAR WHEEL EQUIPMENT—Continued

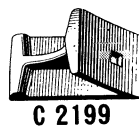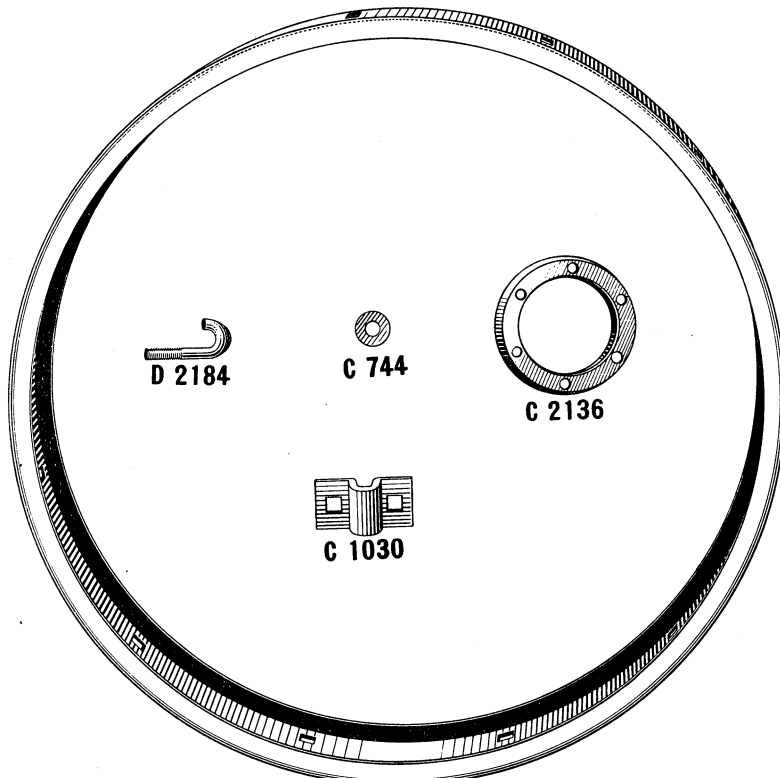

C 1027 C 1235 C 1556

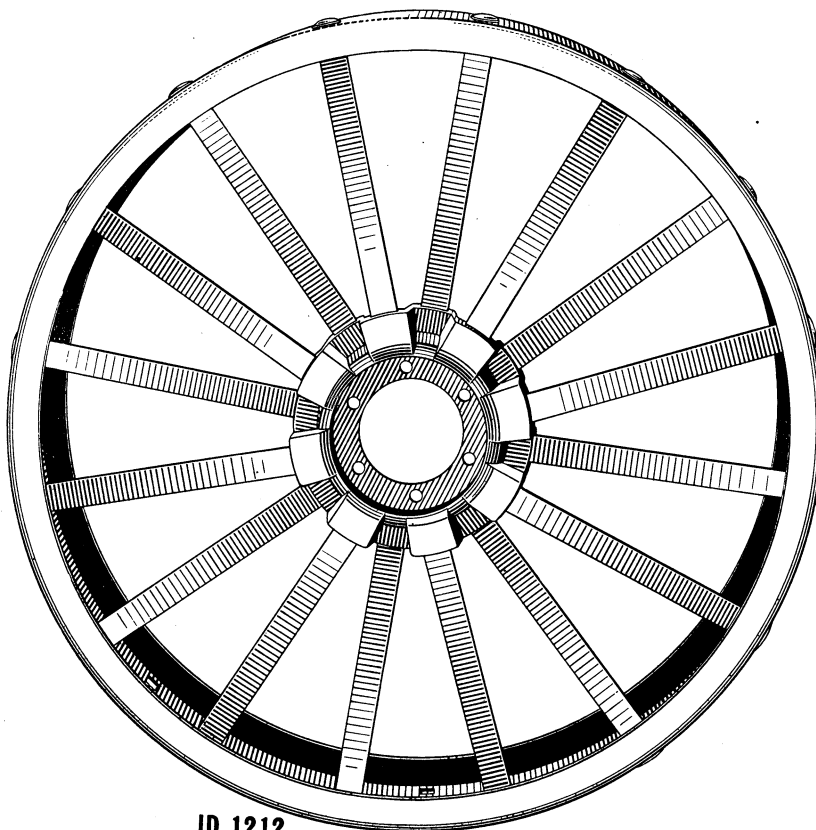

JD 1212


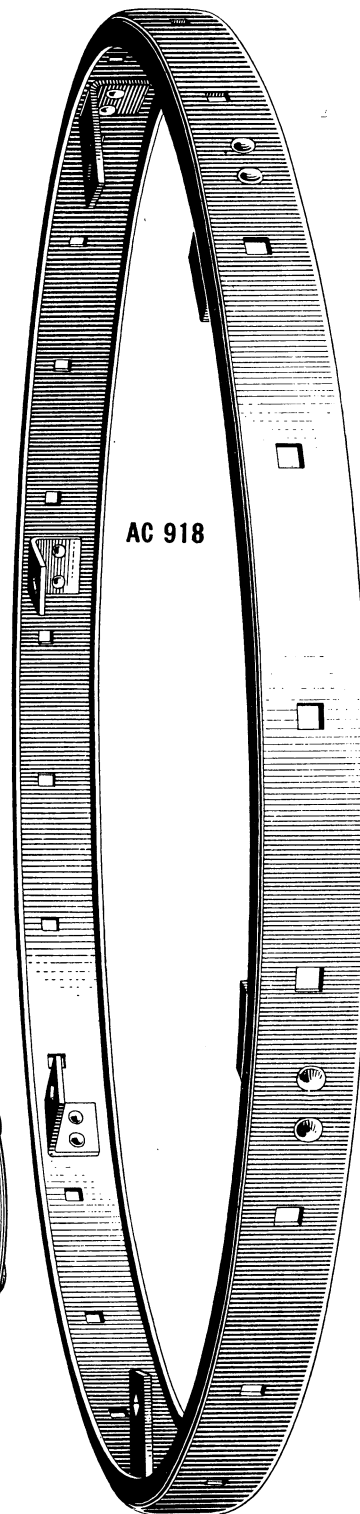


Plate No. 88


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

REAR WHEELS AND REAR WHEEL EQUIPMENT

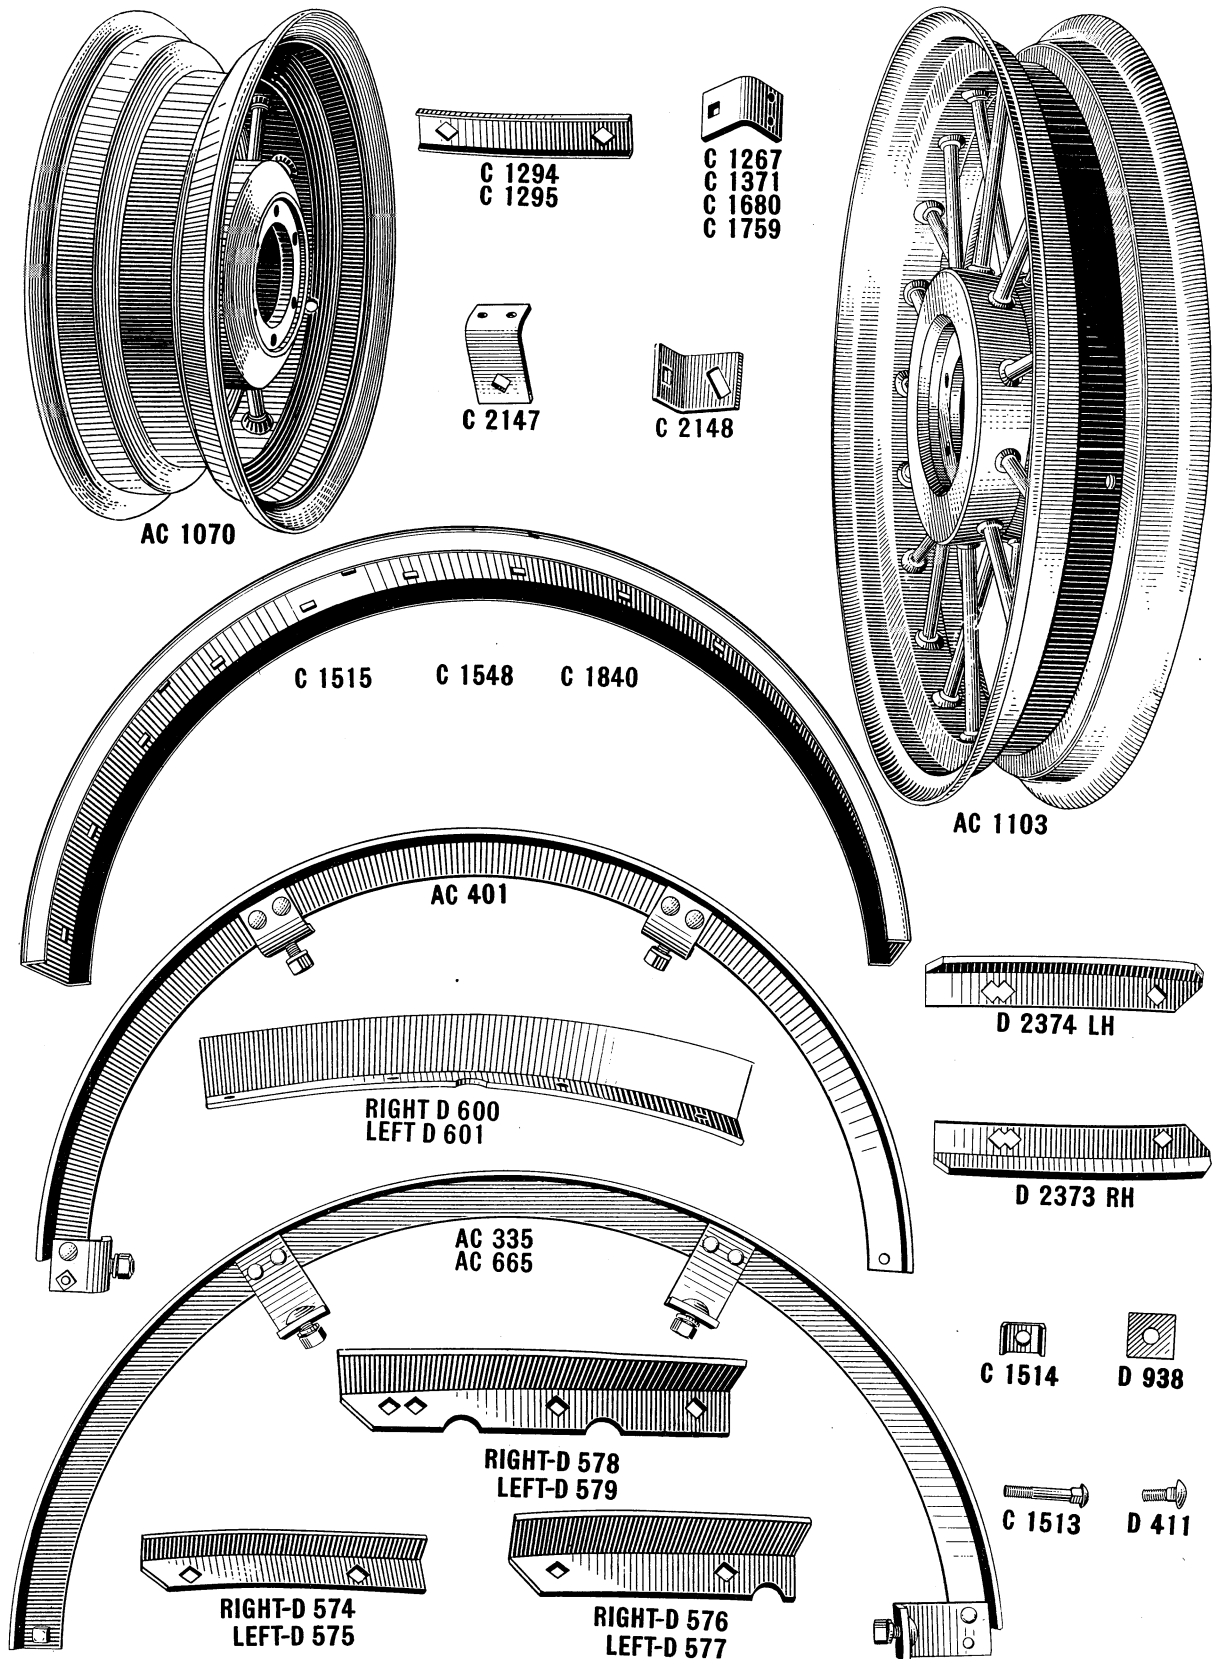


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

WHEEL SCRAPERS

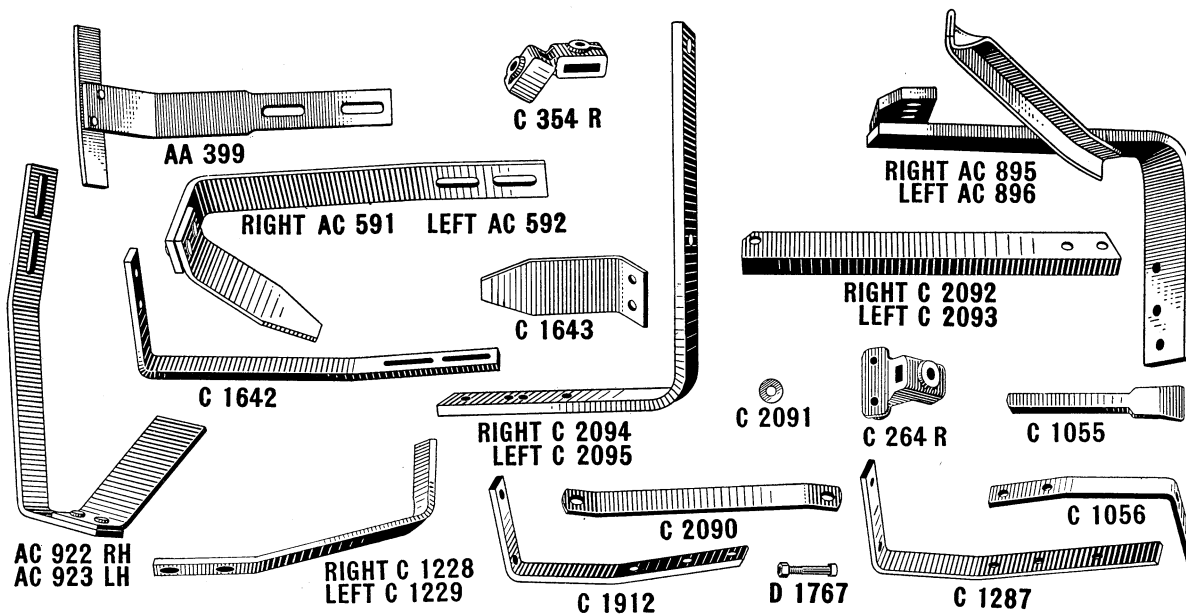

BRAKES

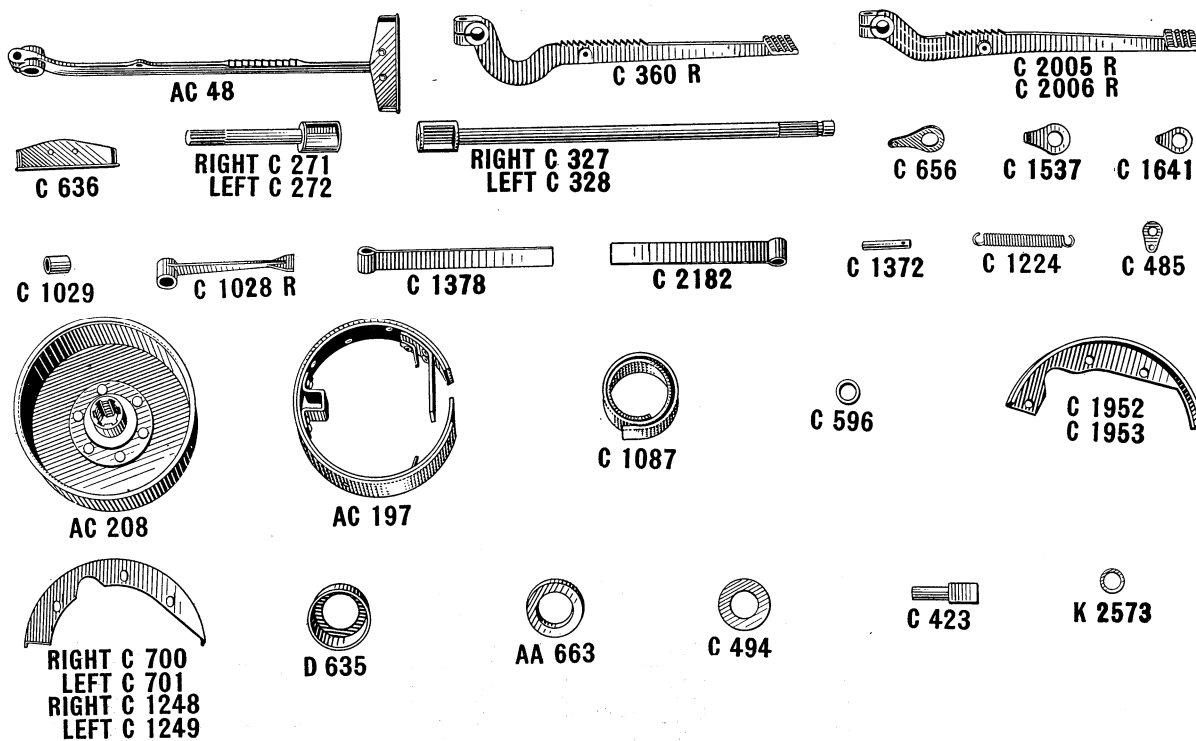

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

FRONT AXLE AND FRONT END SUPPORT

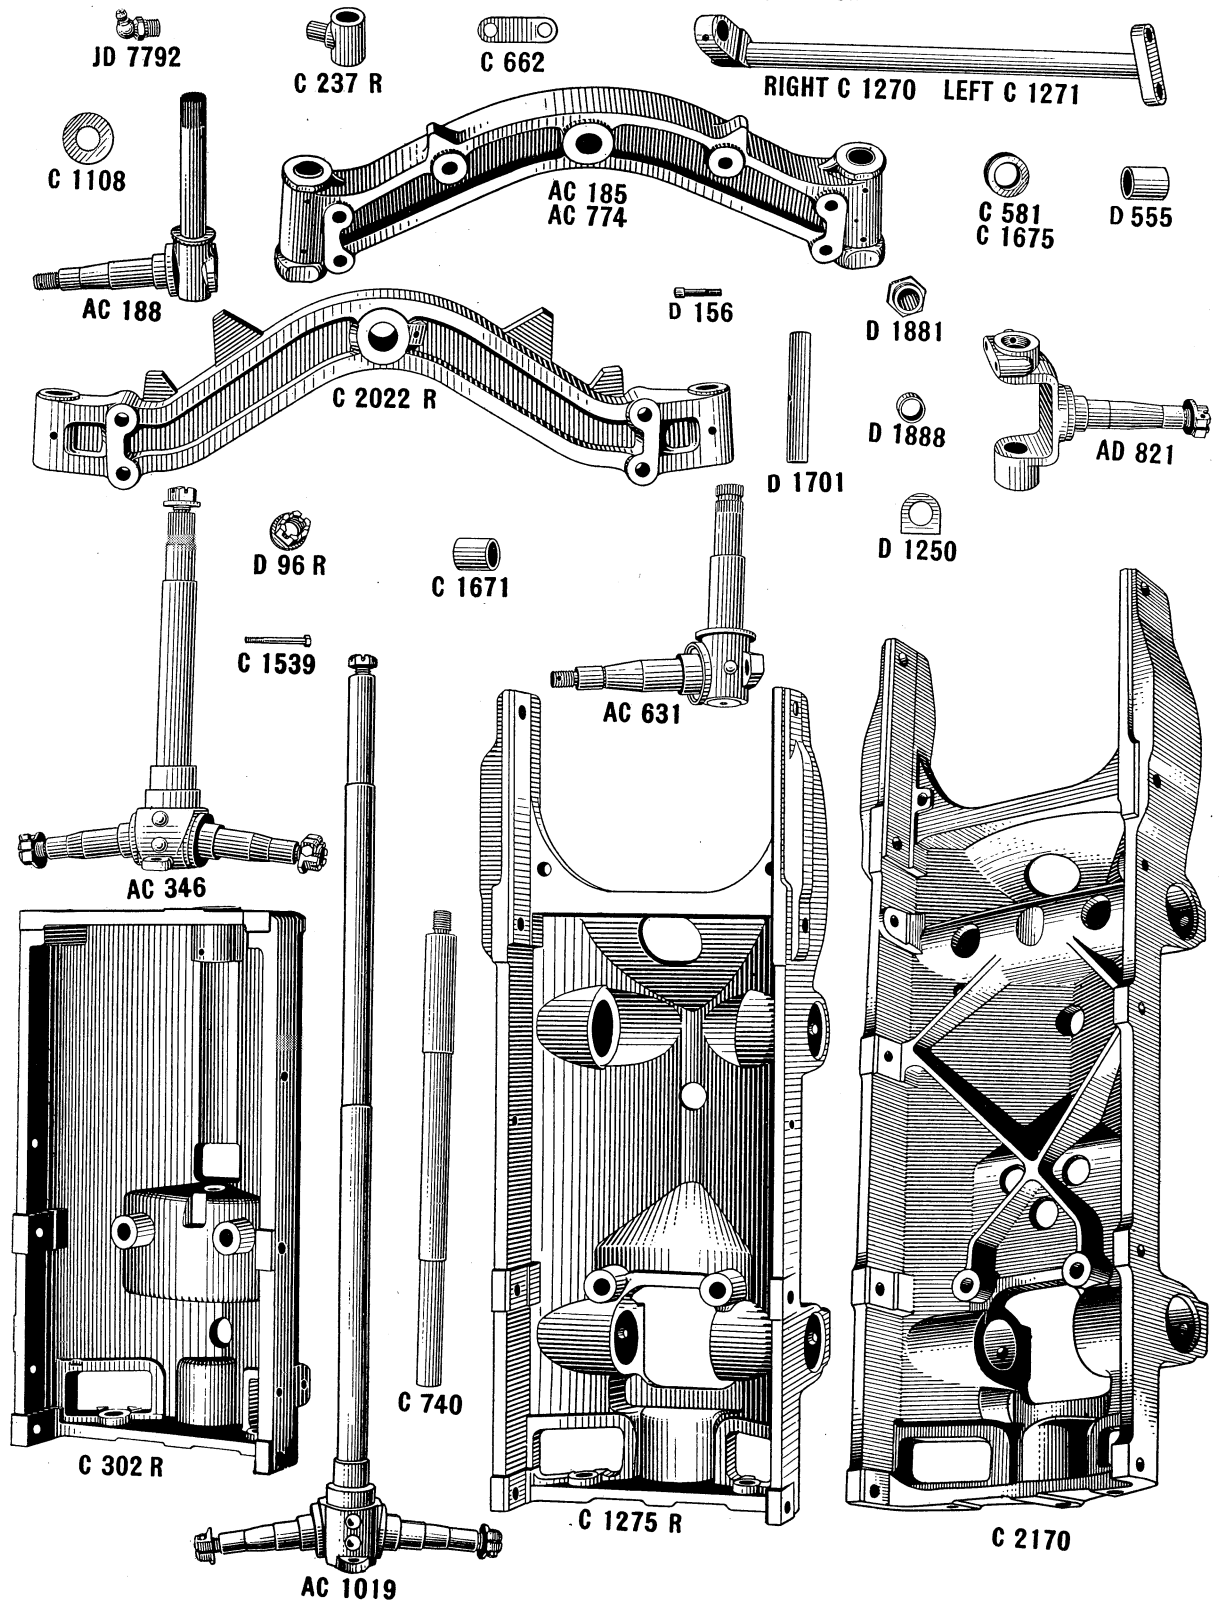


Plate No. 91

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

FRONT WHEELS


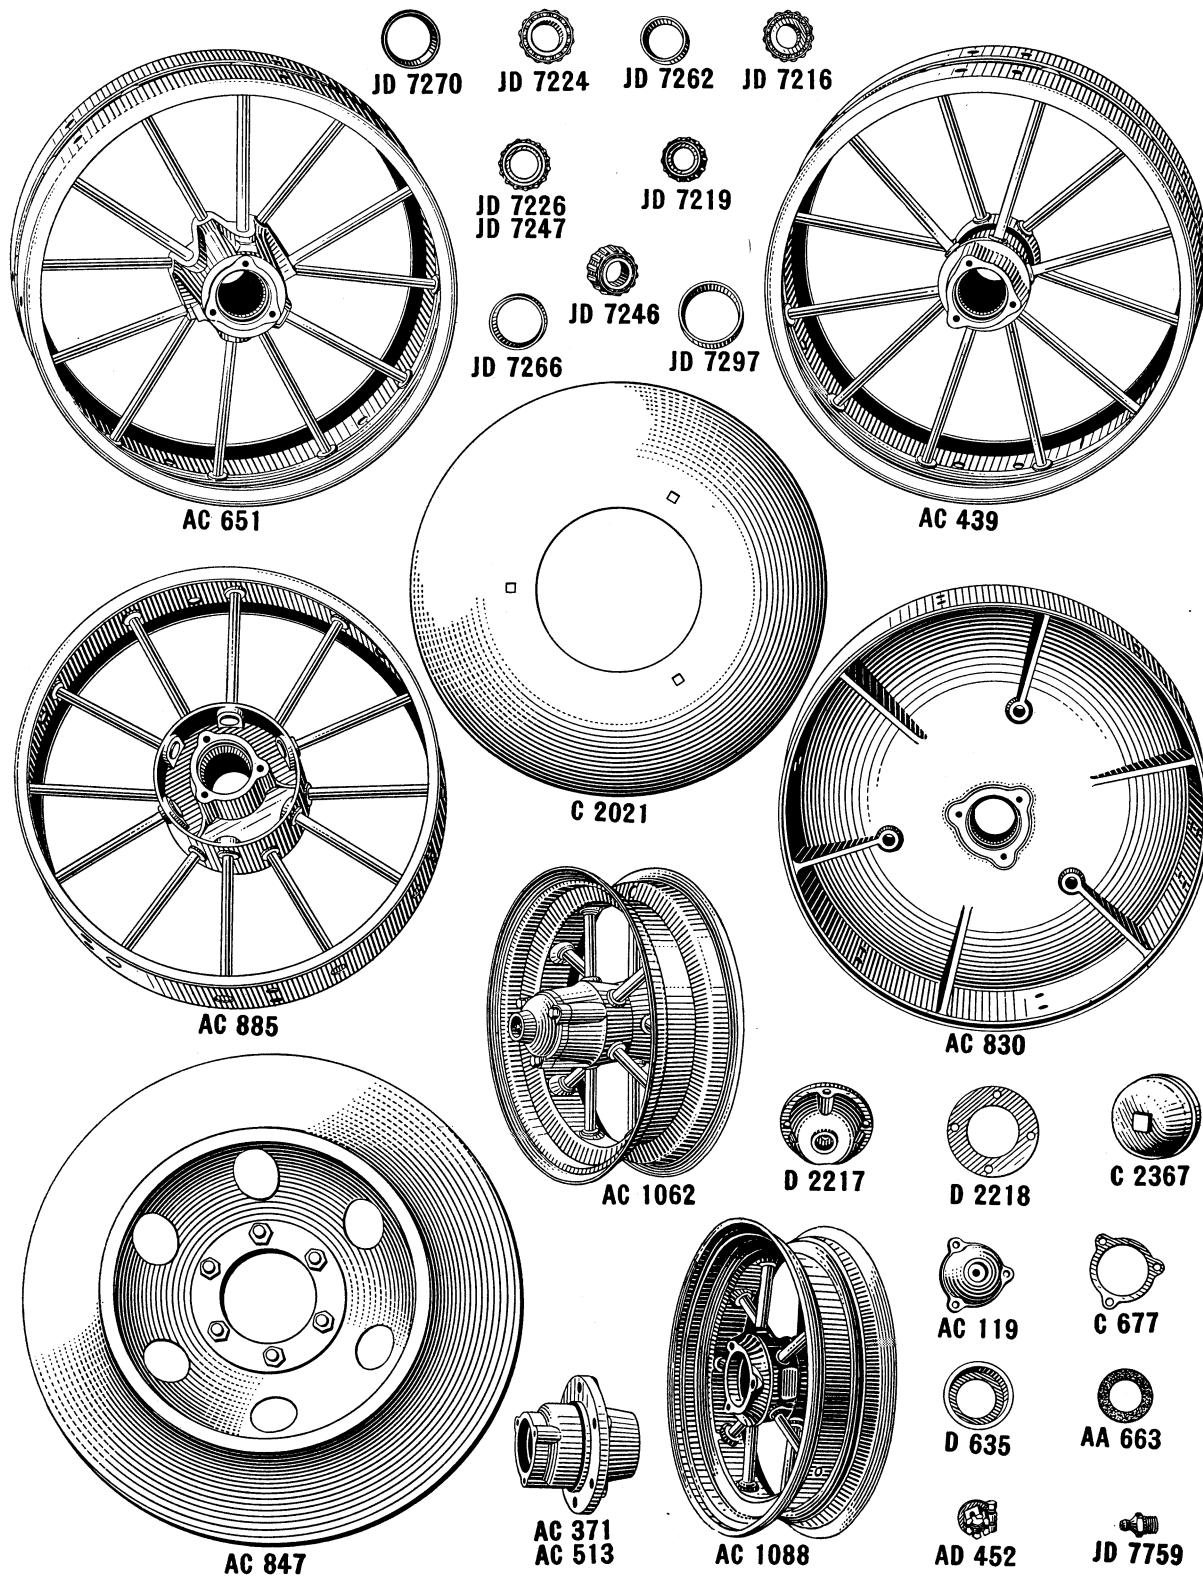



Plate No. 92

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

FRONT WHEEL EQUIPMENT

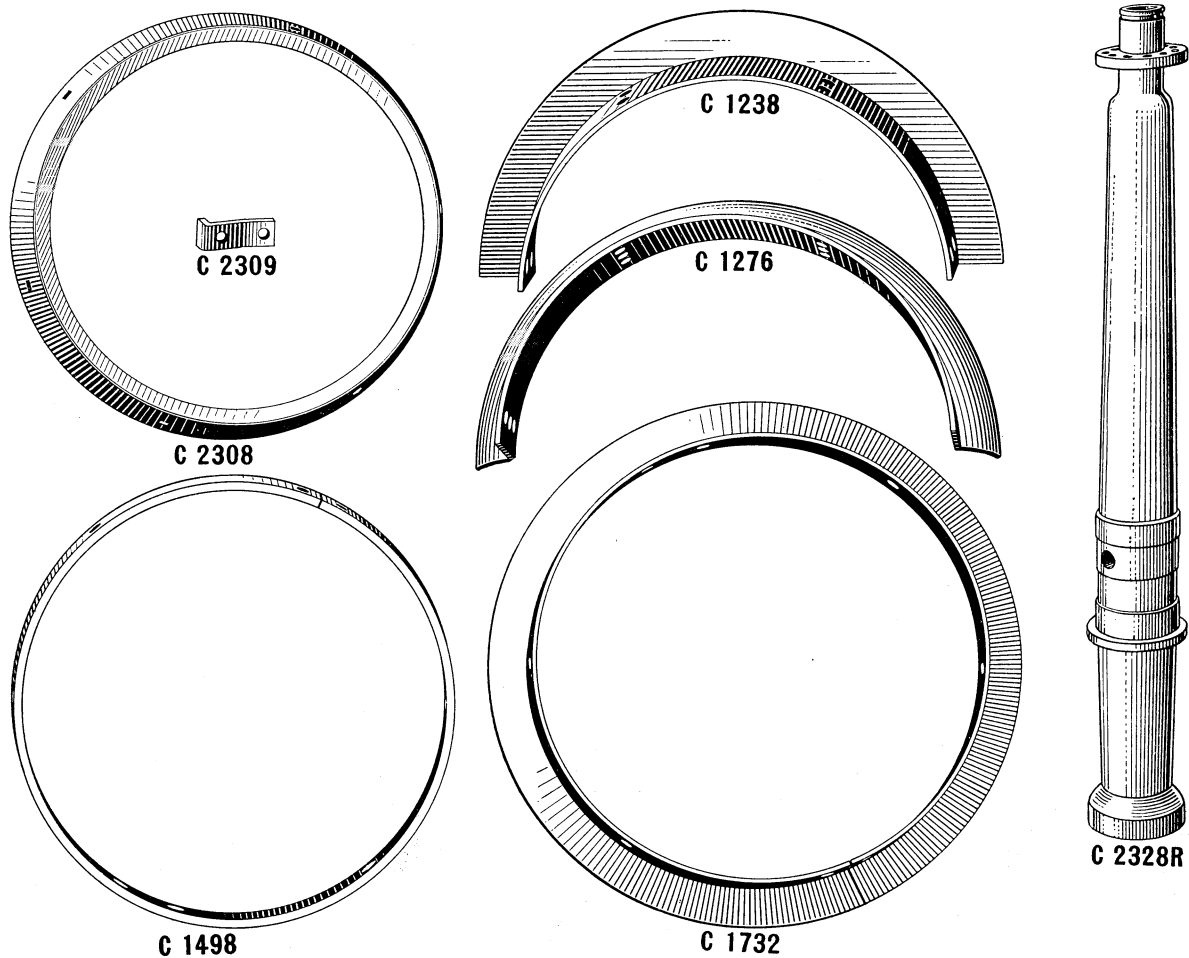


PEDESTAL

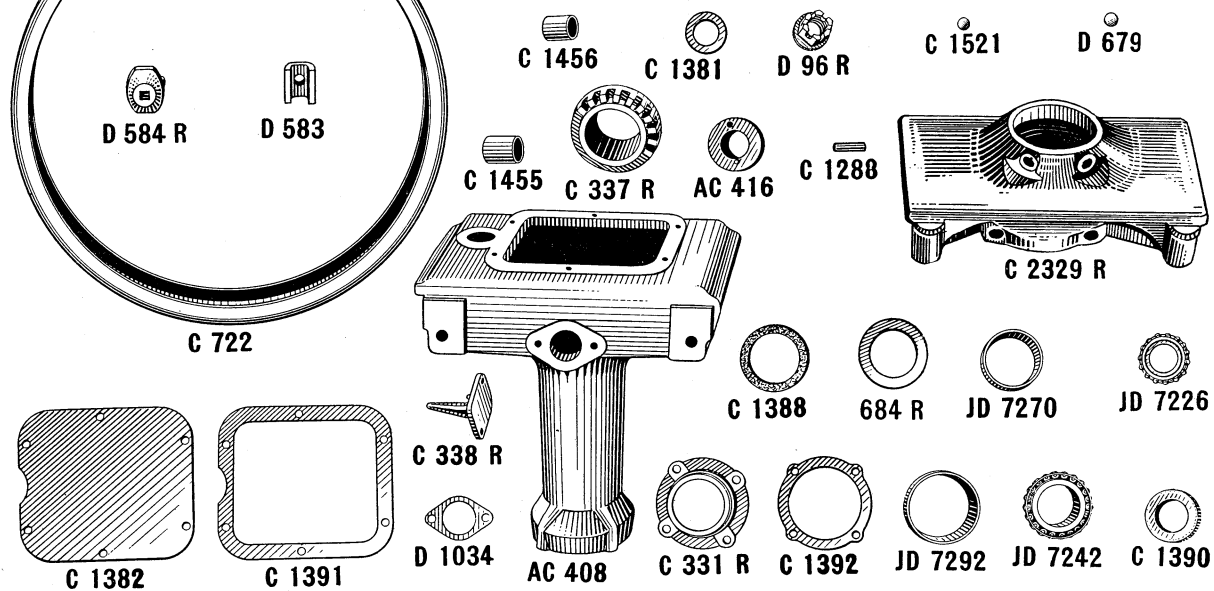


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

STEERING PARTS

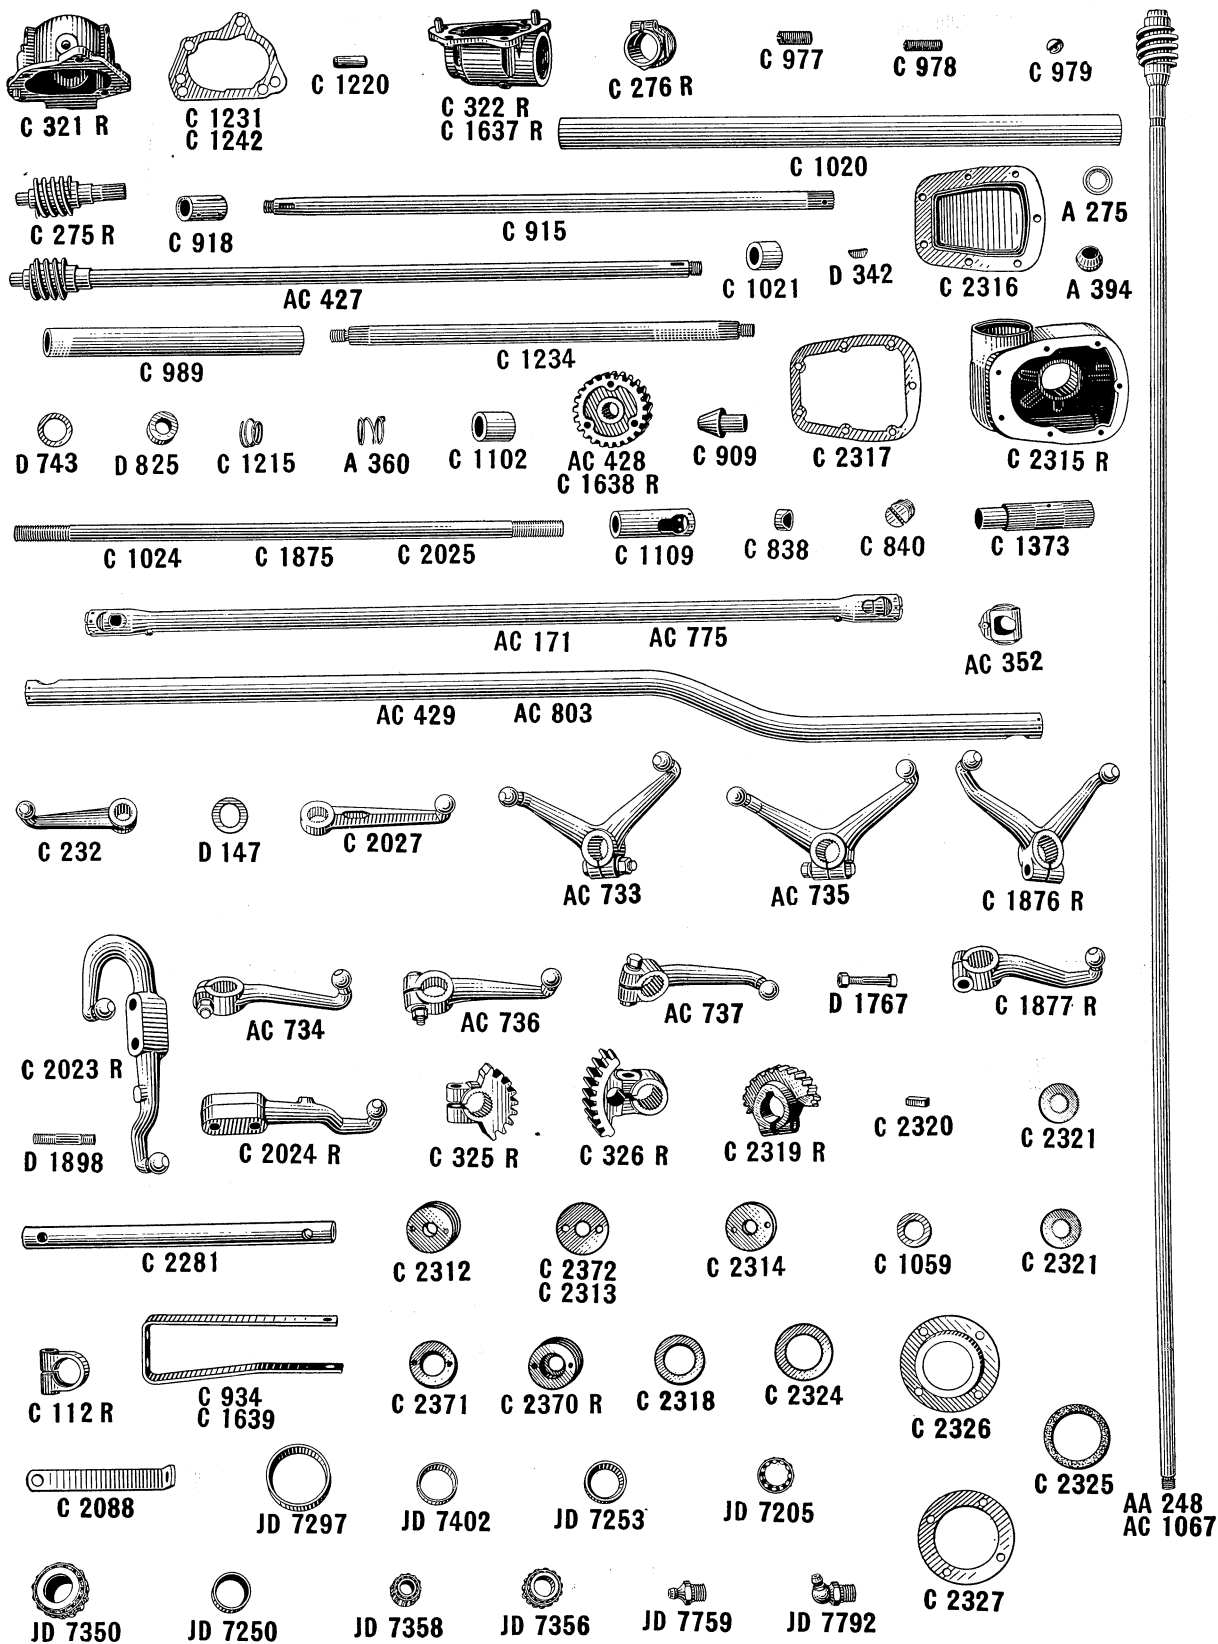


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

DRAWBAR

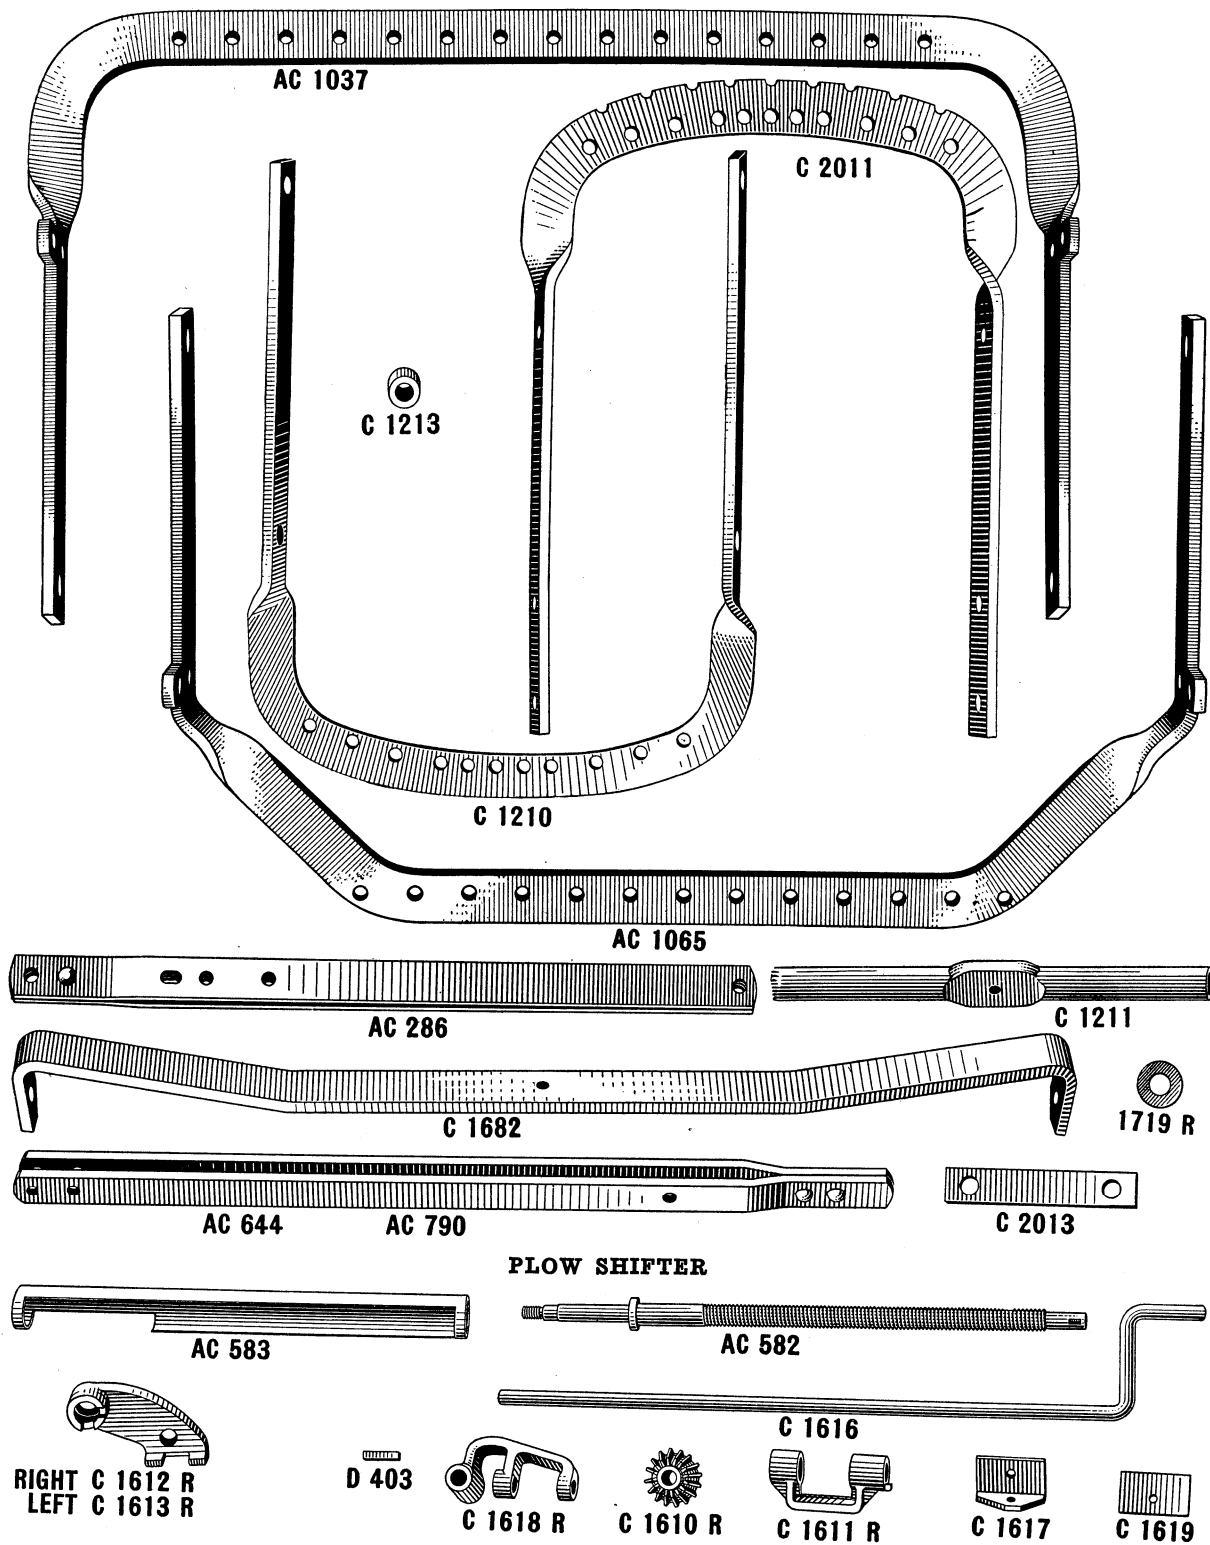


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

SEAT

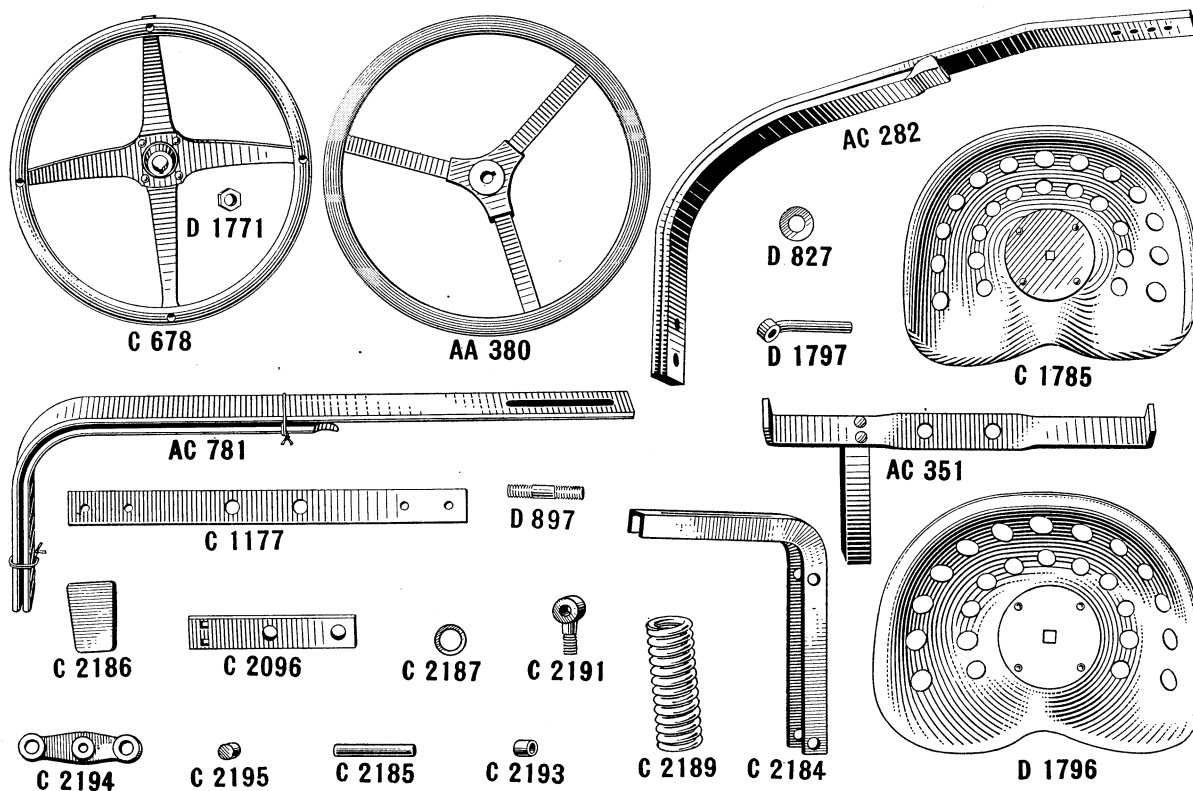

SWING SEAT

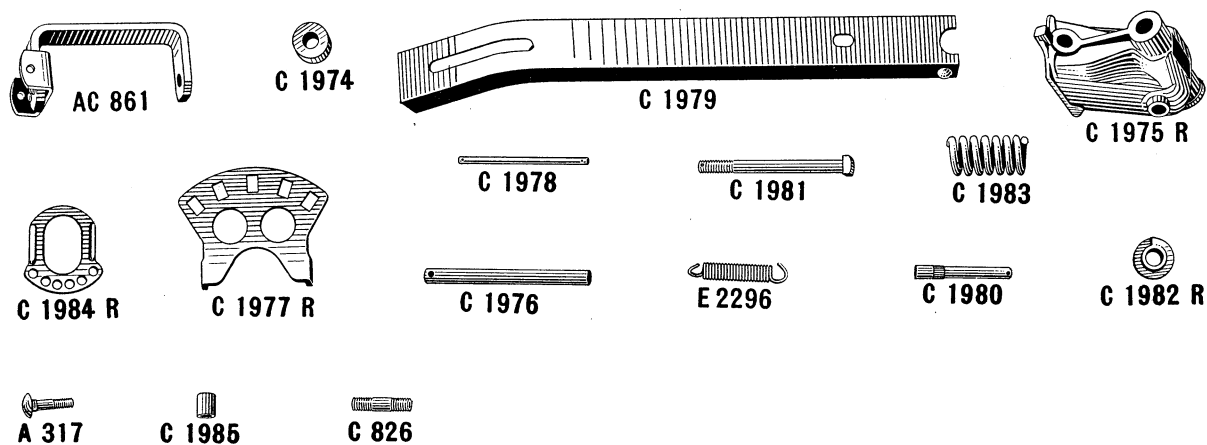

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

PLATFORM

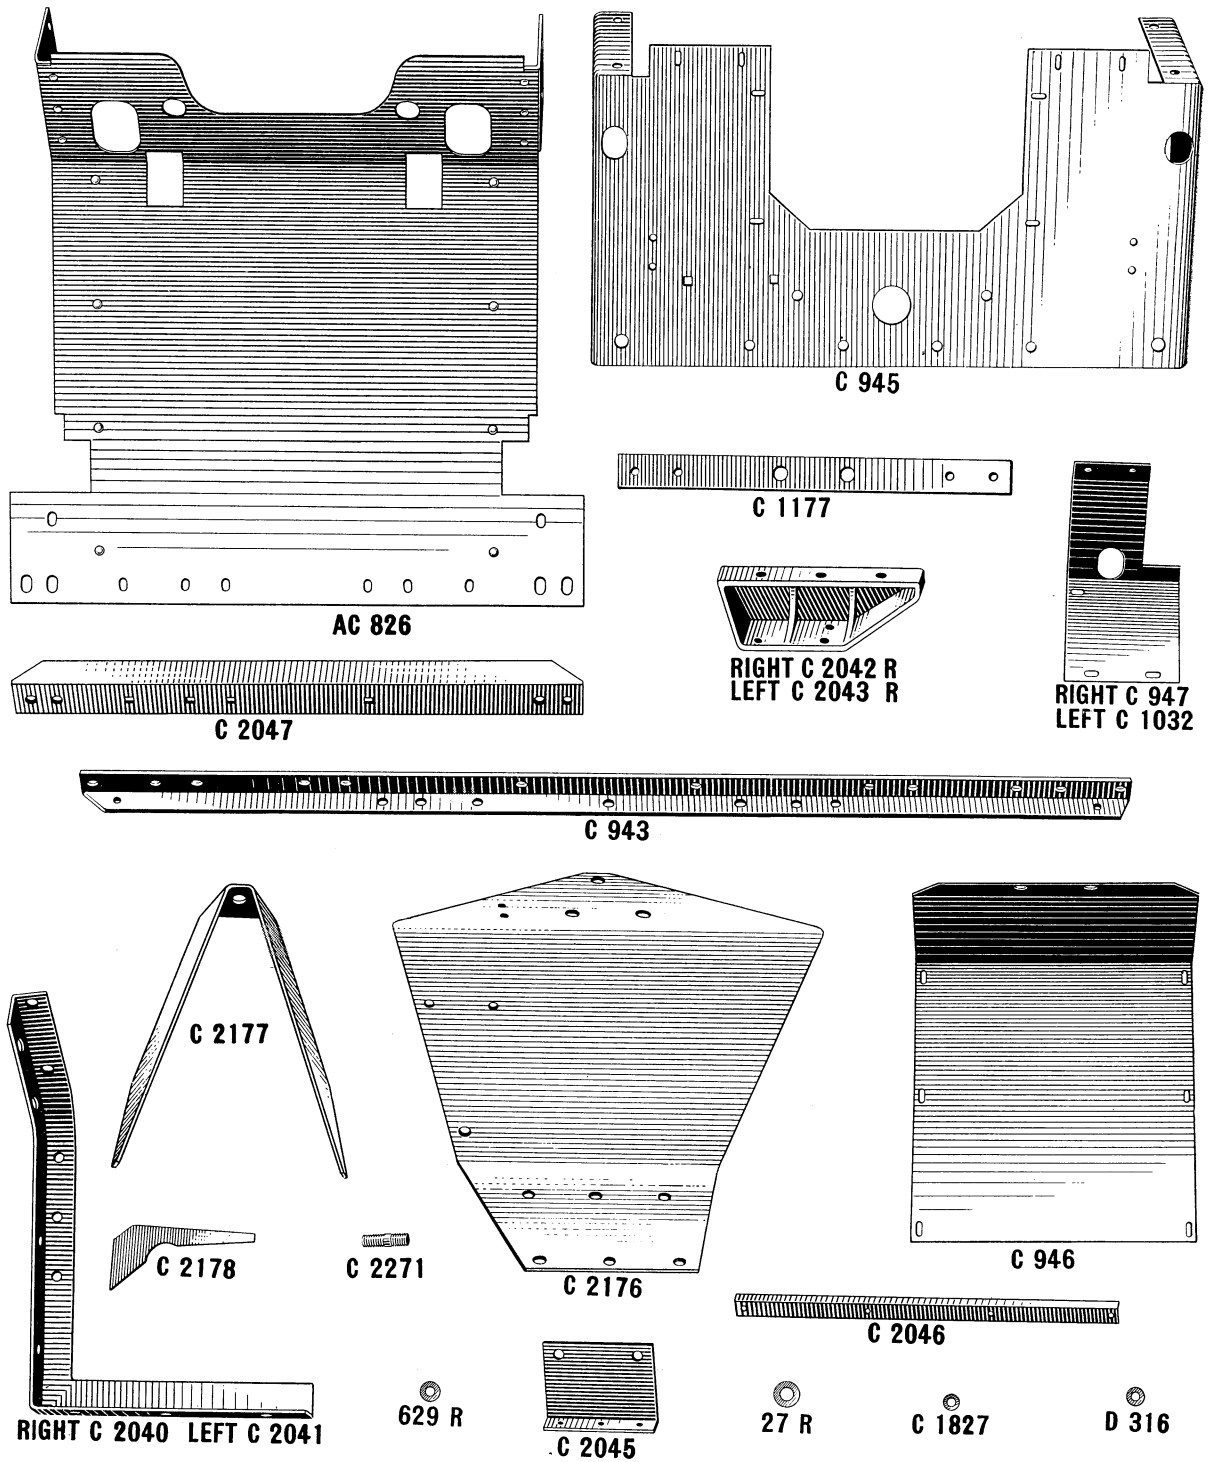



Plate No. 97

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS


TOOL BOX AND TOOLS

C 1579


C 1591

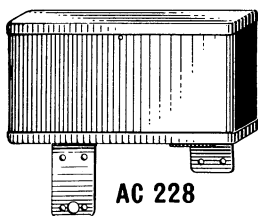

AC 228

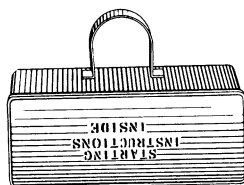


AD 840

 JD 7751
JD 7752

D 1083



 
E 2125



D 2063




 C 1219





D 2064

FENDERS

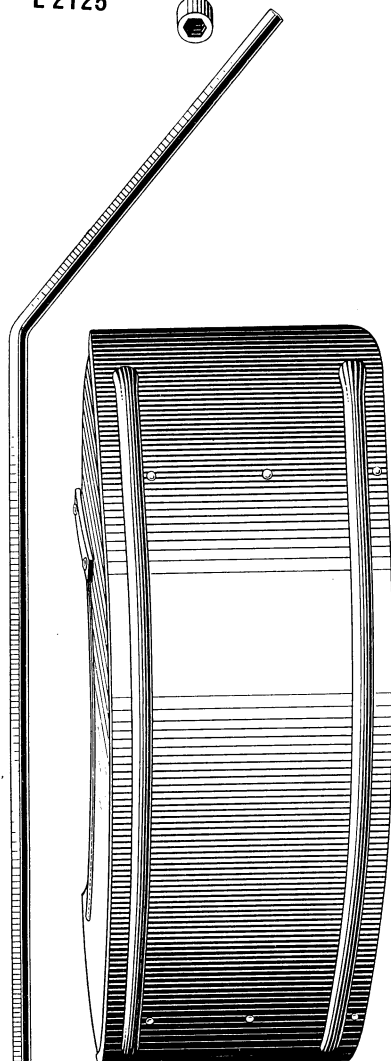RIGHT AC 602
LEFT AC 603RIGHT AC 873
LEFT AC 874


C 1648

C 1964

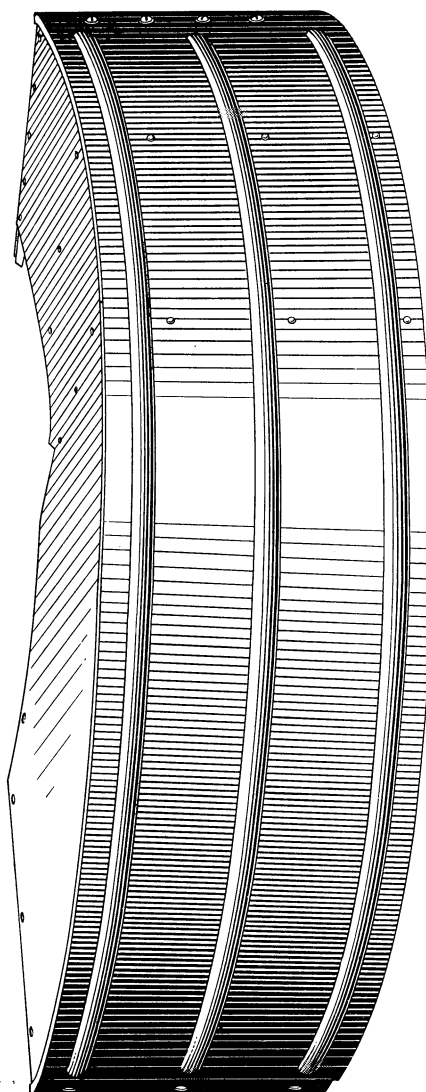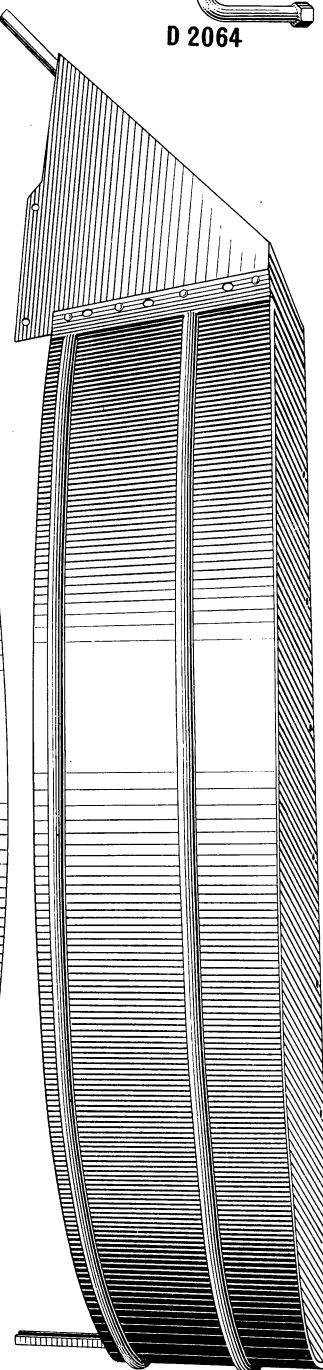RIGHT AC 821
LEFT AC 822RIGHT AC 810
LEFT AC 811


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

FENDERS—CONTINUED

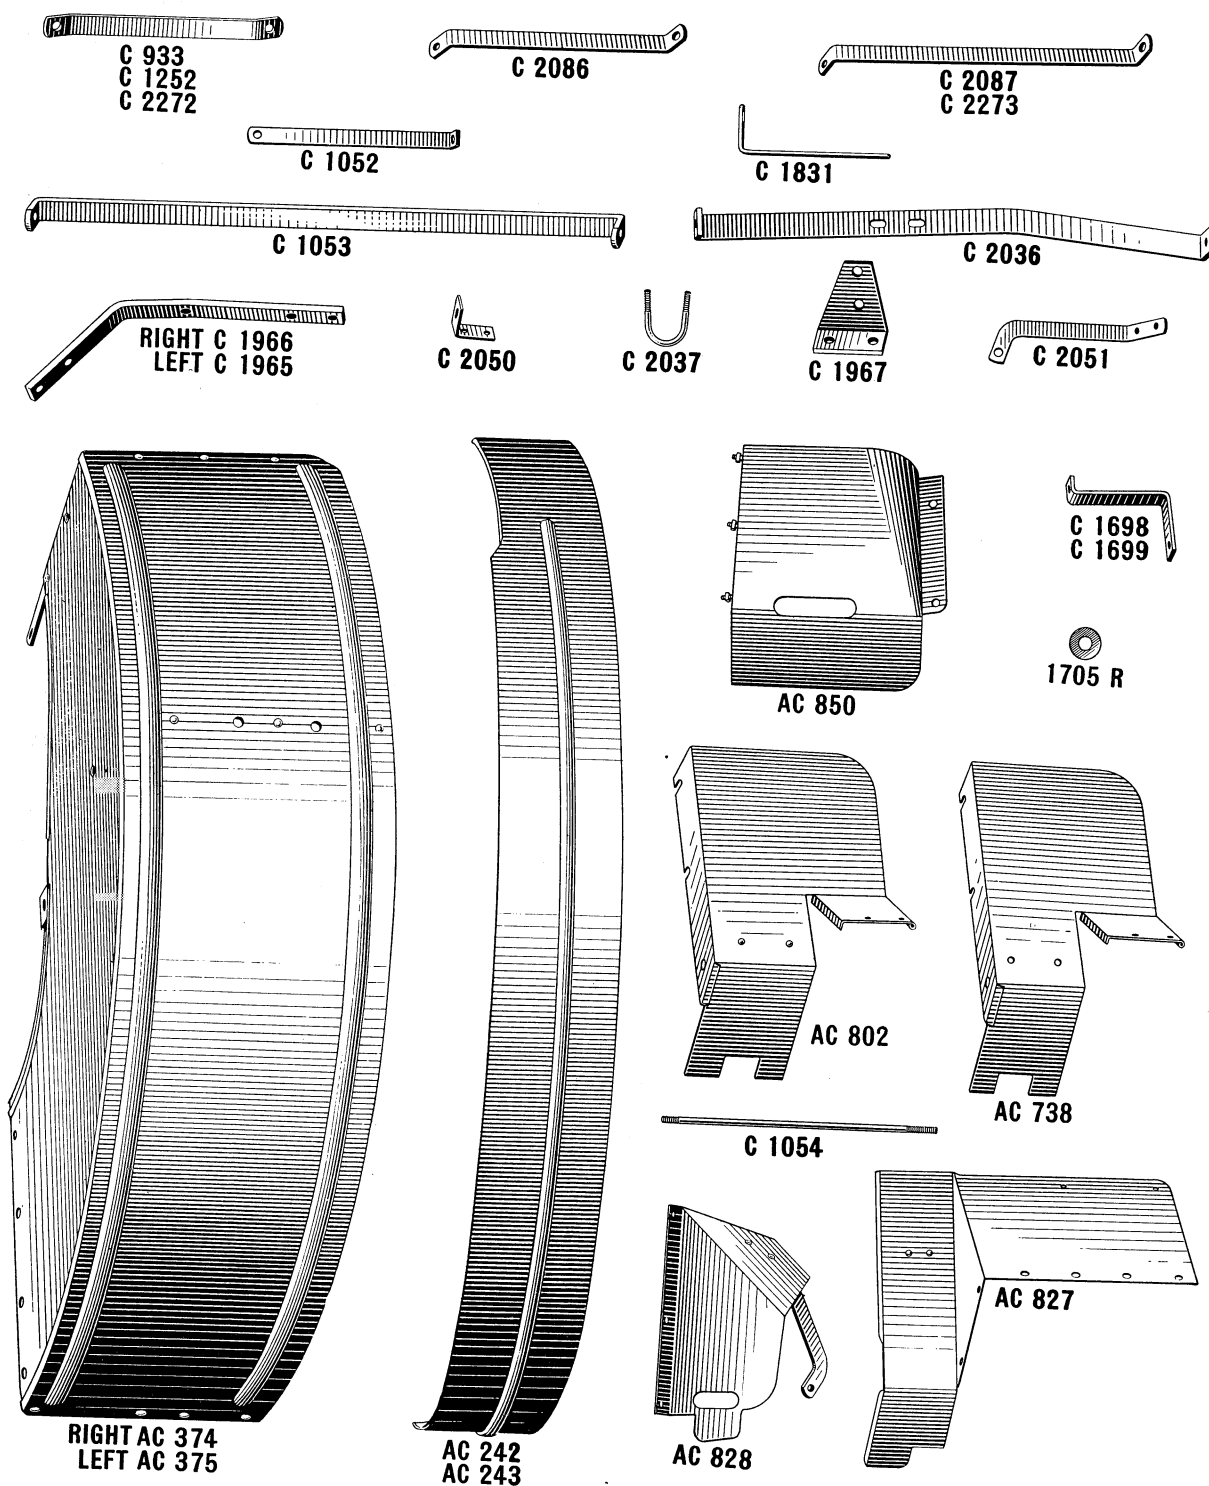


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

MAGNETO

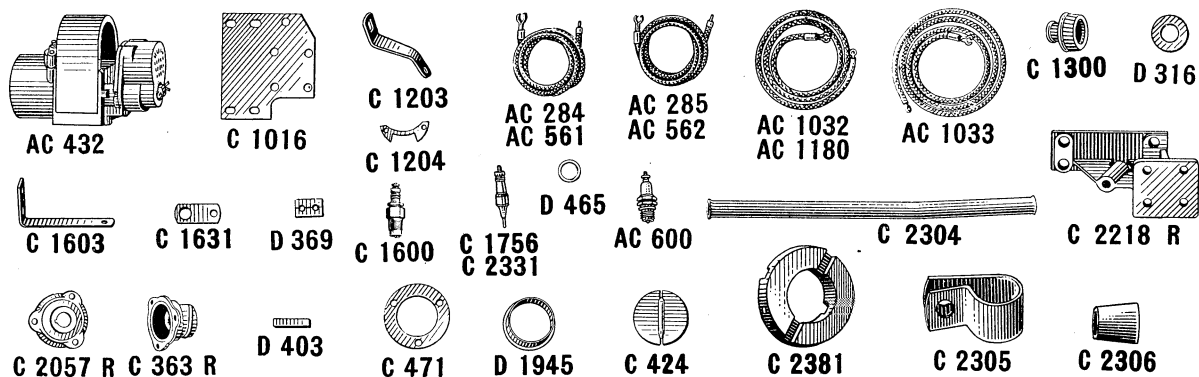


AC1176 MAGNETO PARTS

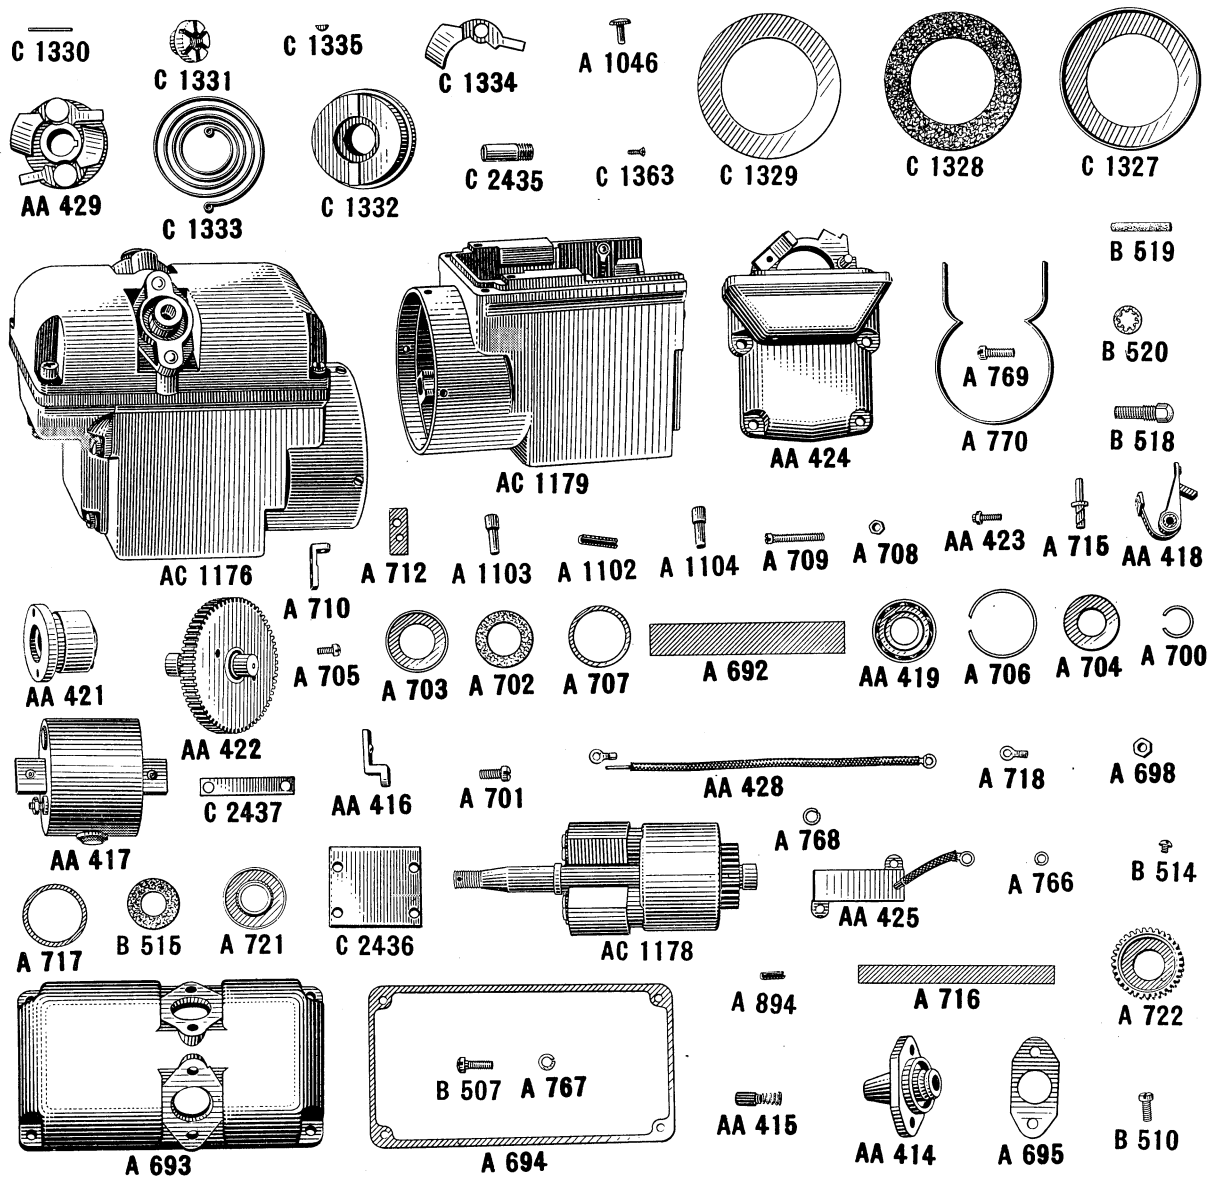


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

AC432 MAGNETO

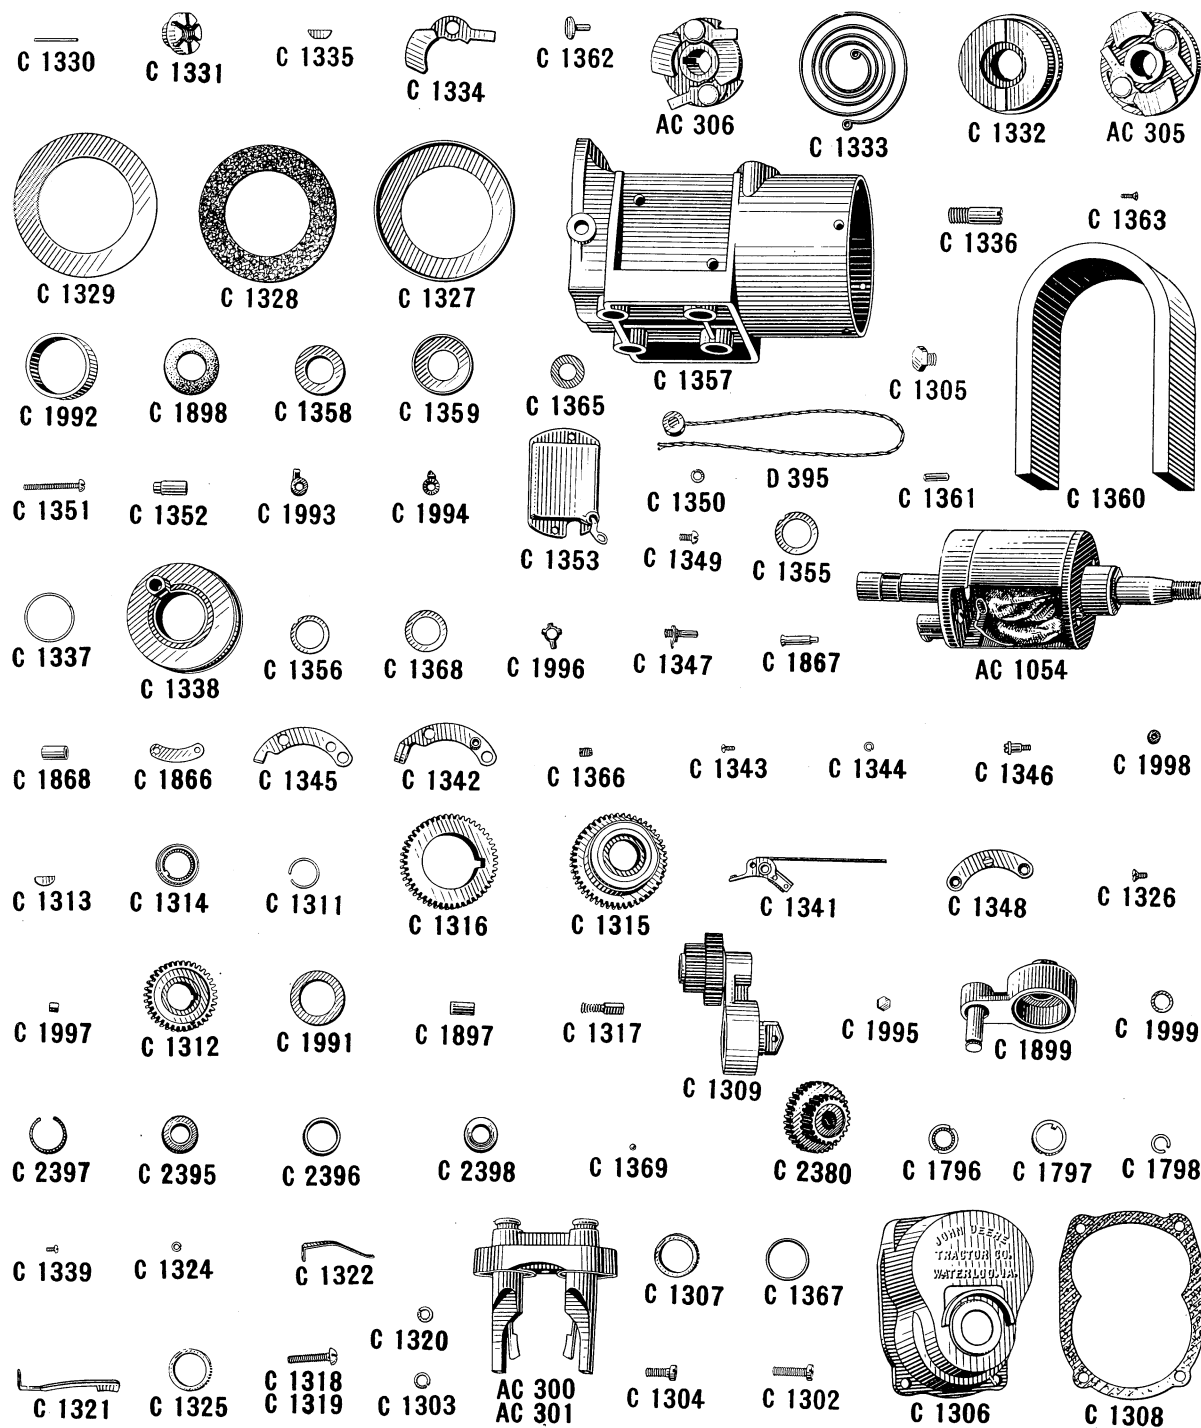


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

CARBURETORS

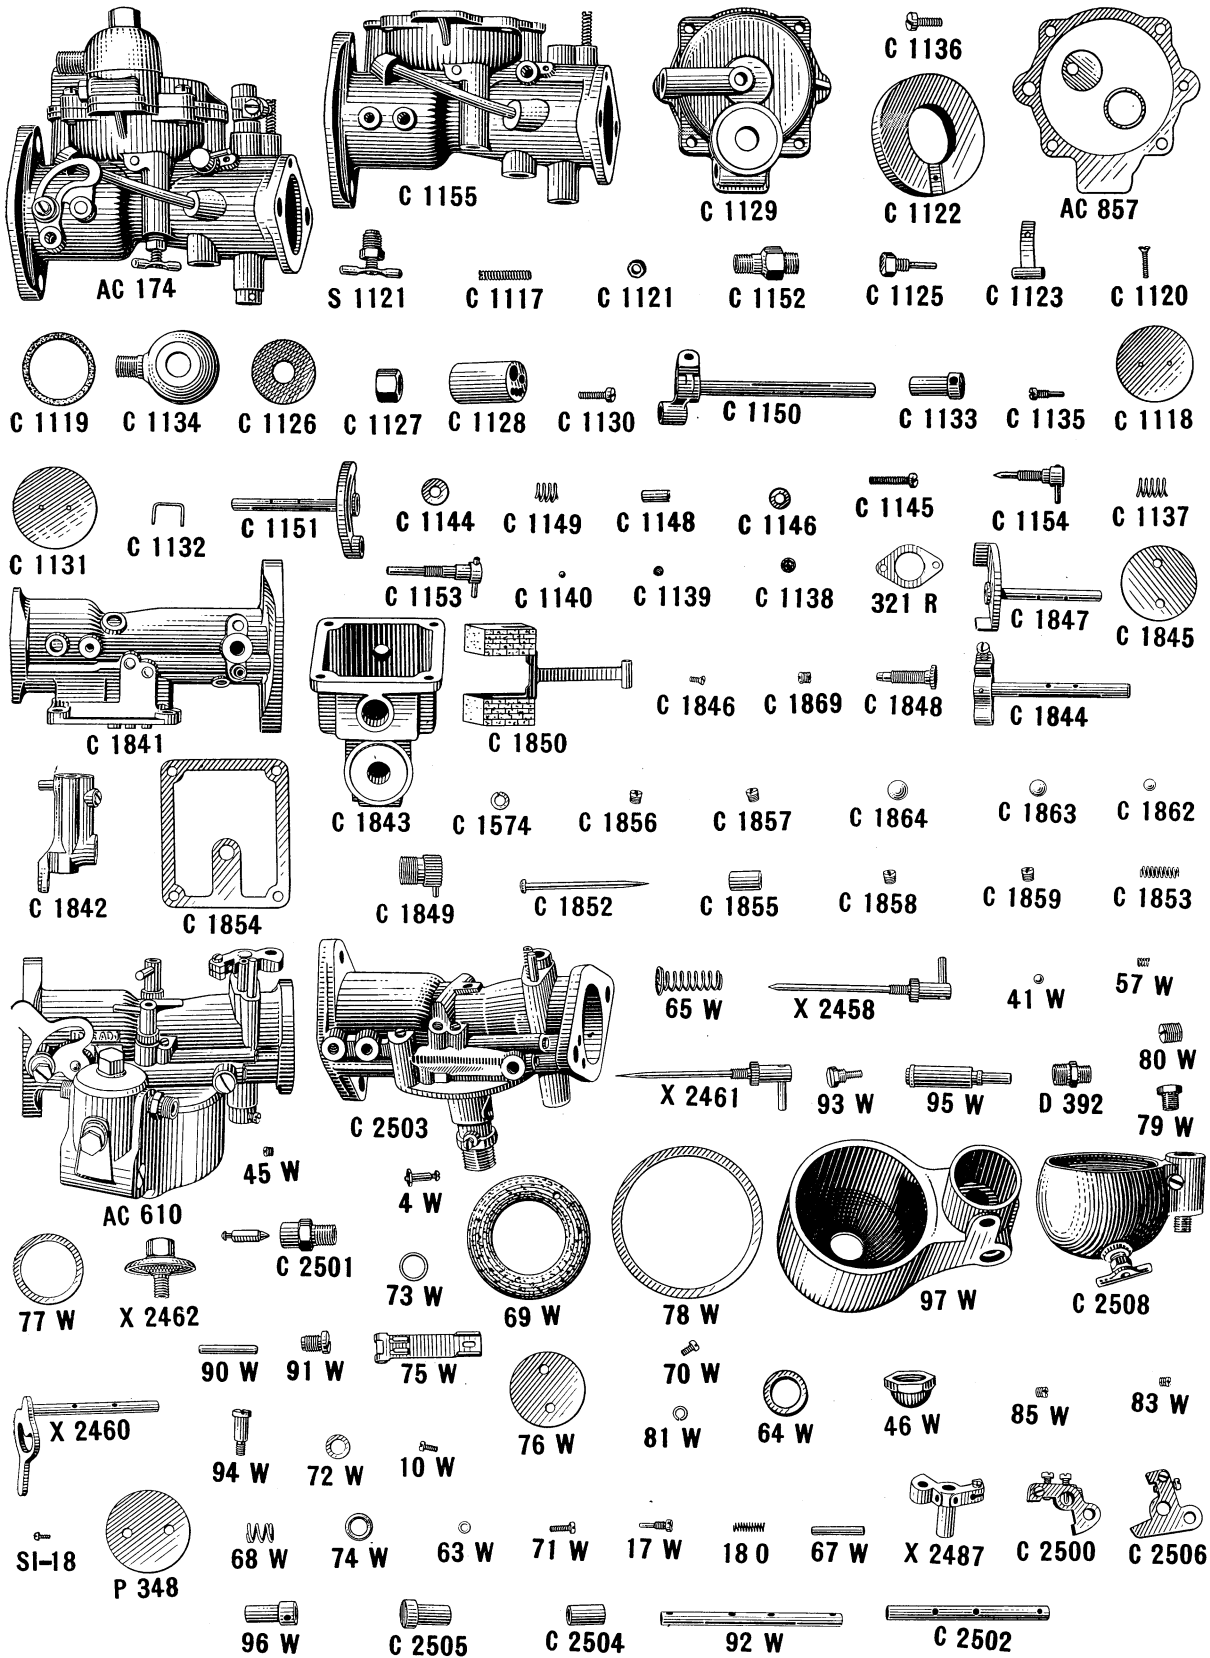


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

CARBURETORS—Continued

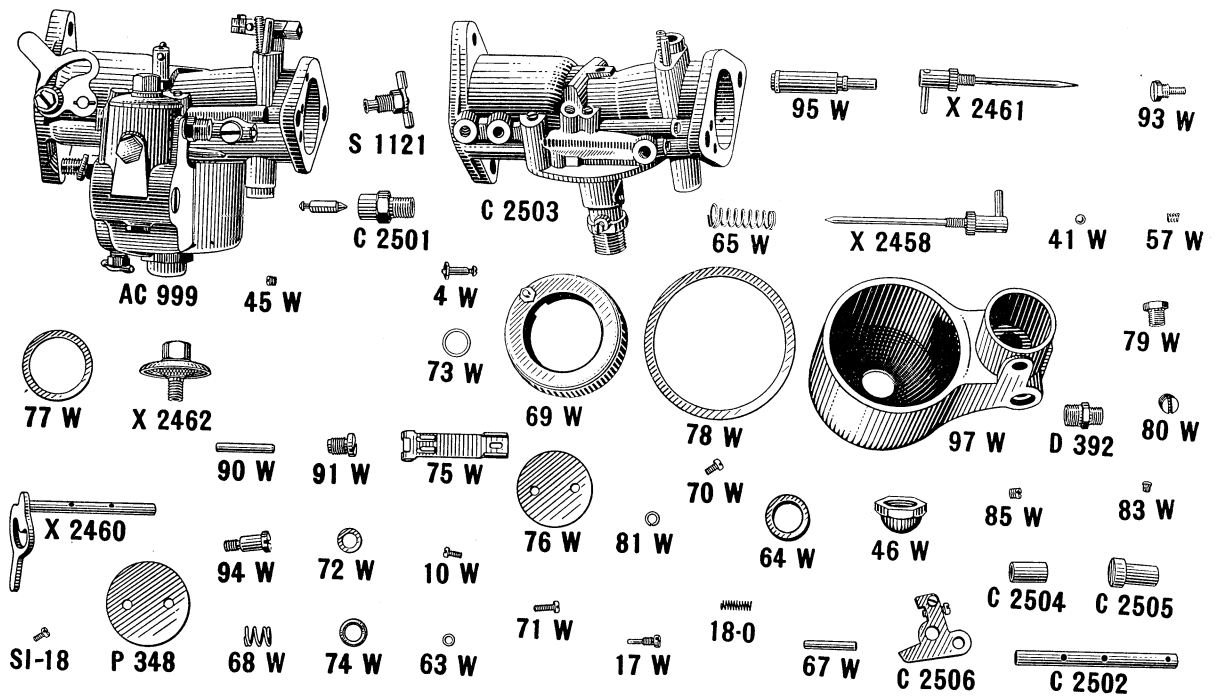


AUXILIARY AIR CLEANER AND STACK

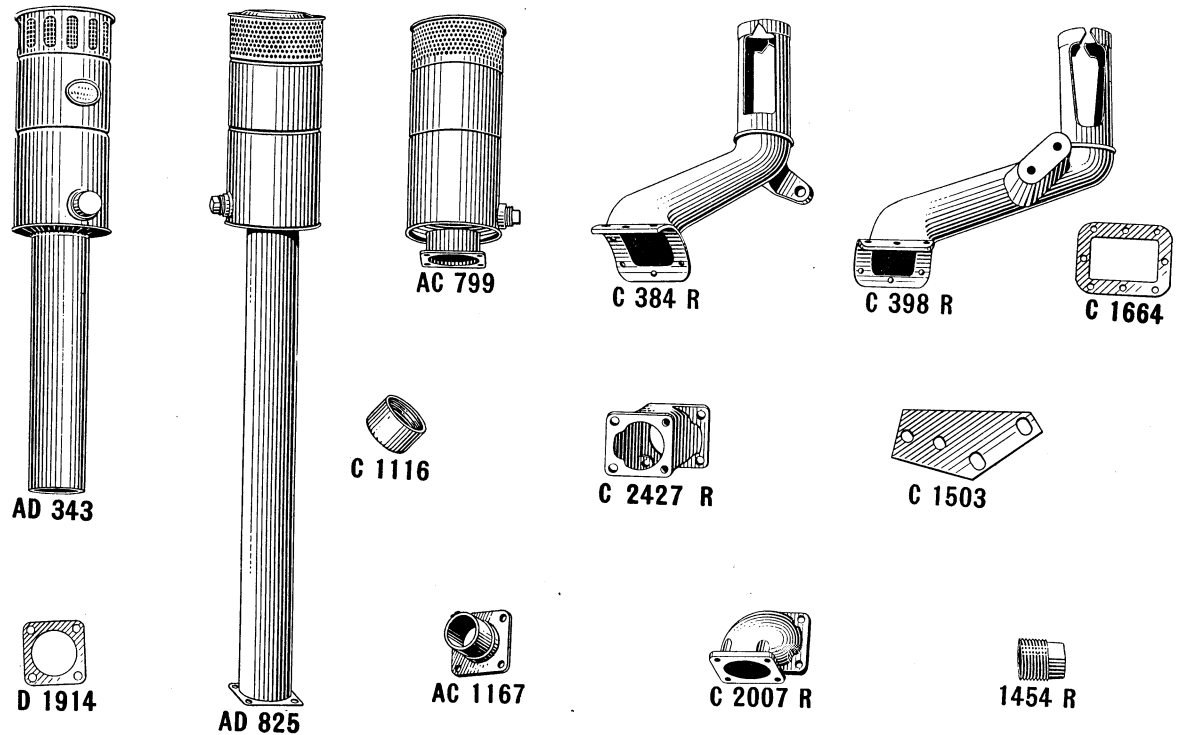


REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

AIR CLEANER

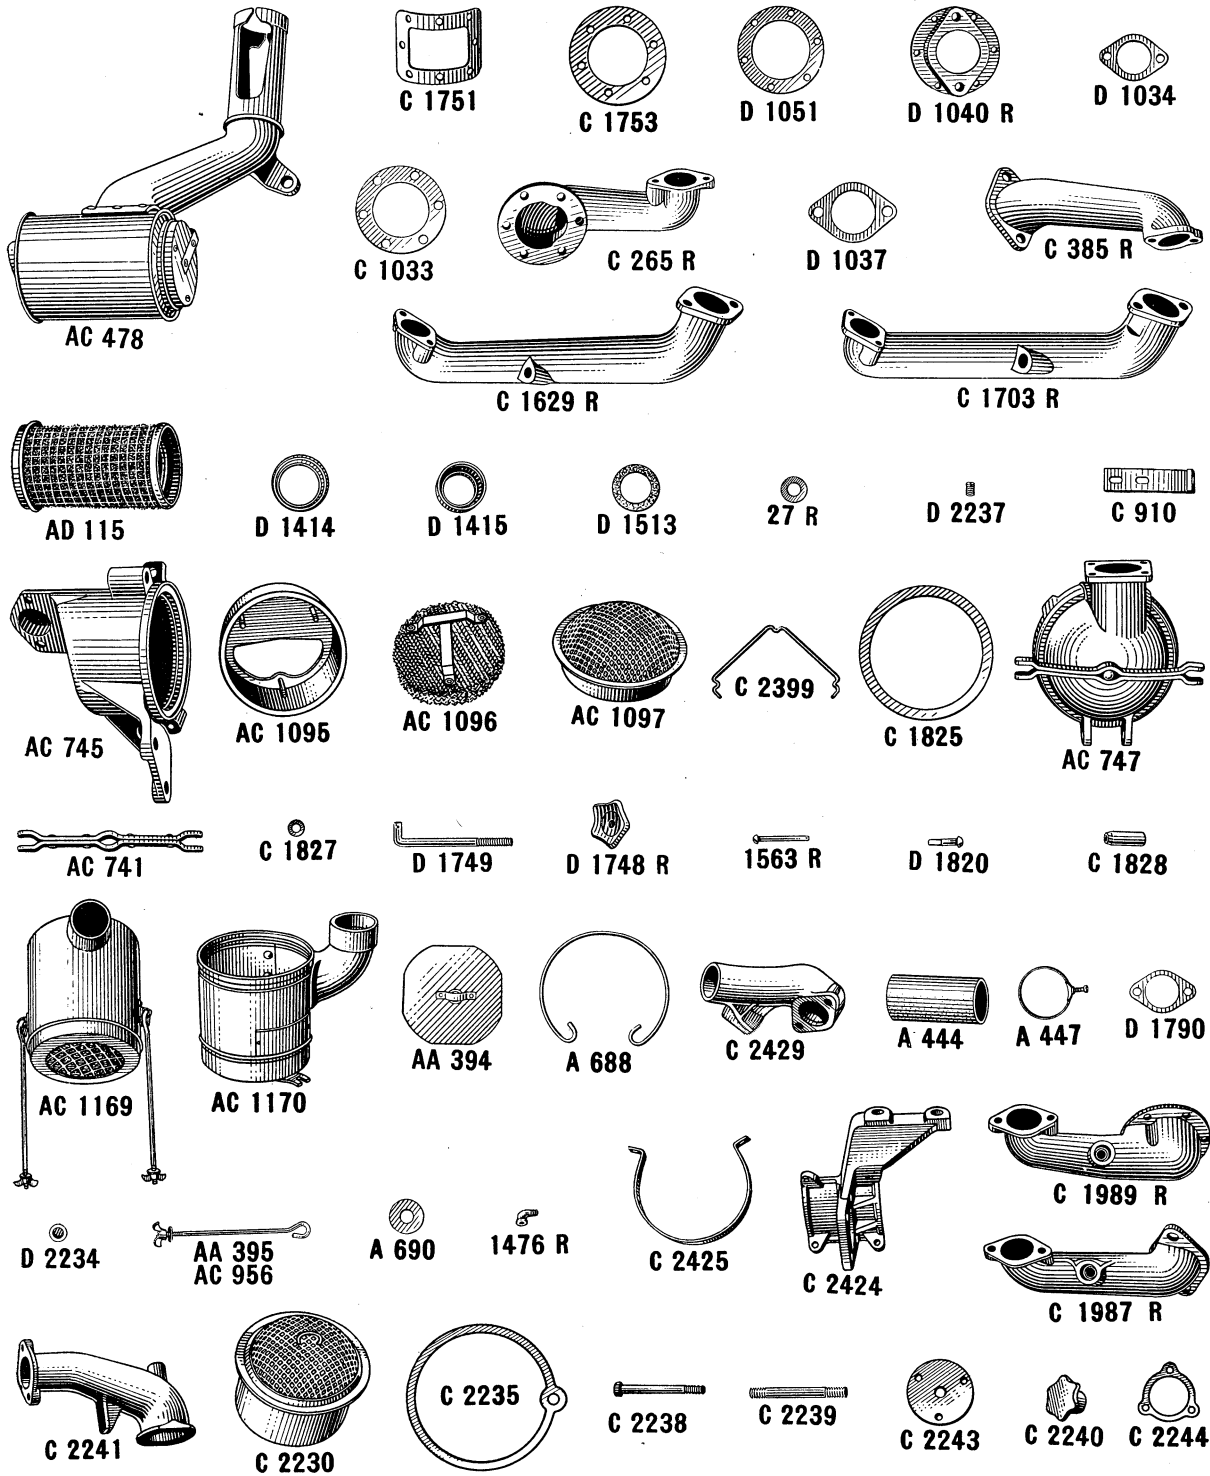

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

POWER LIFTS AND POWER SHAFTS

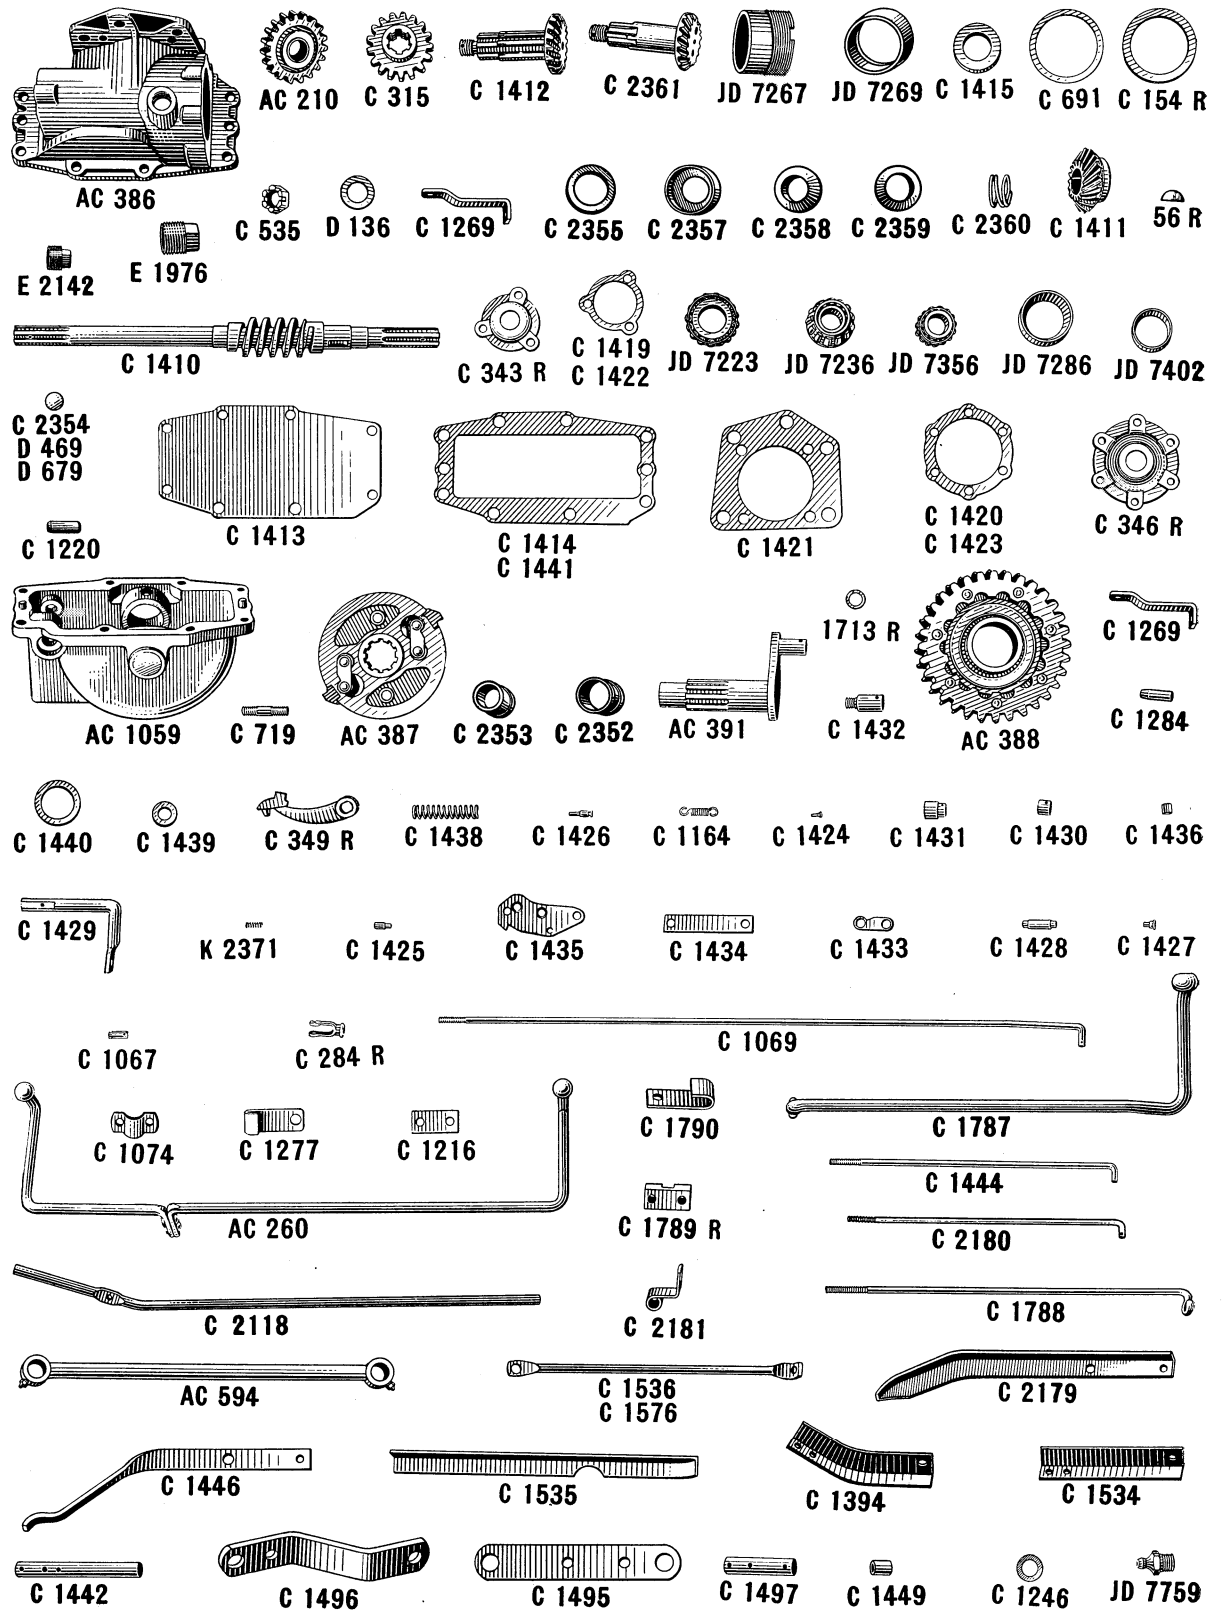

REPAIR PARTS FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

LIGHTING EQUIPMENT


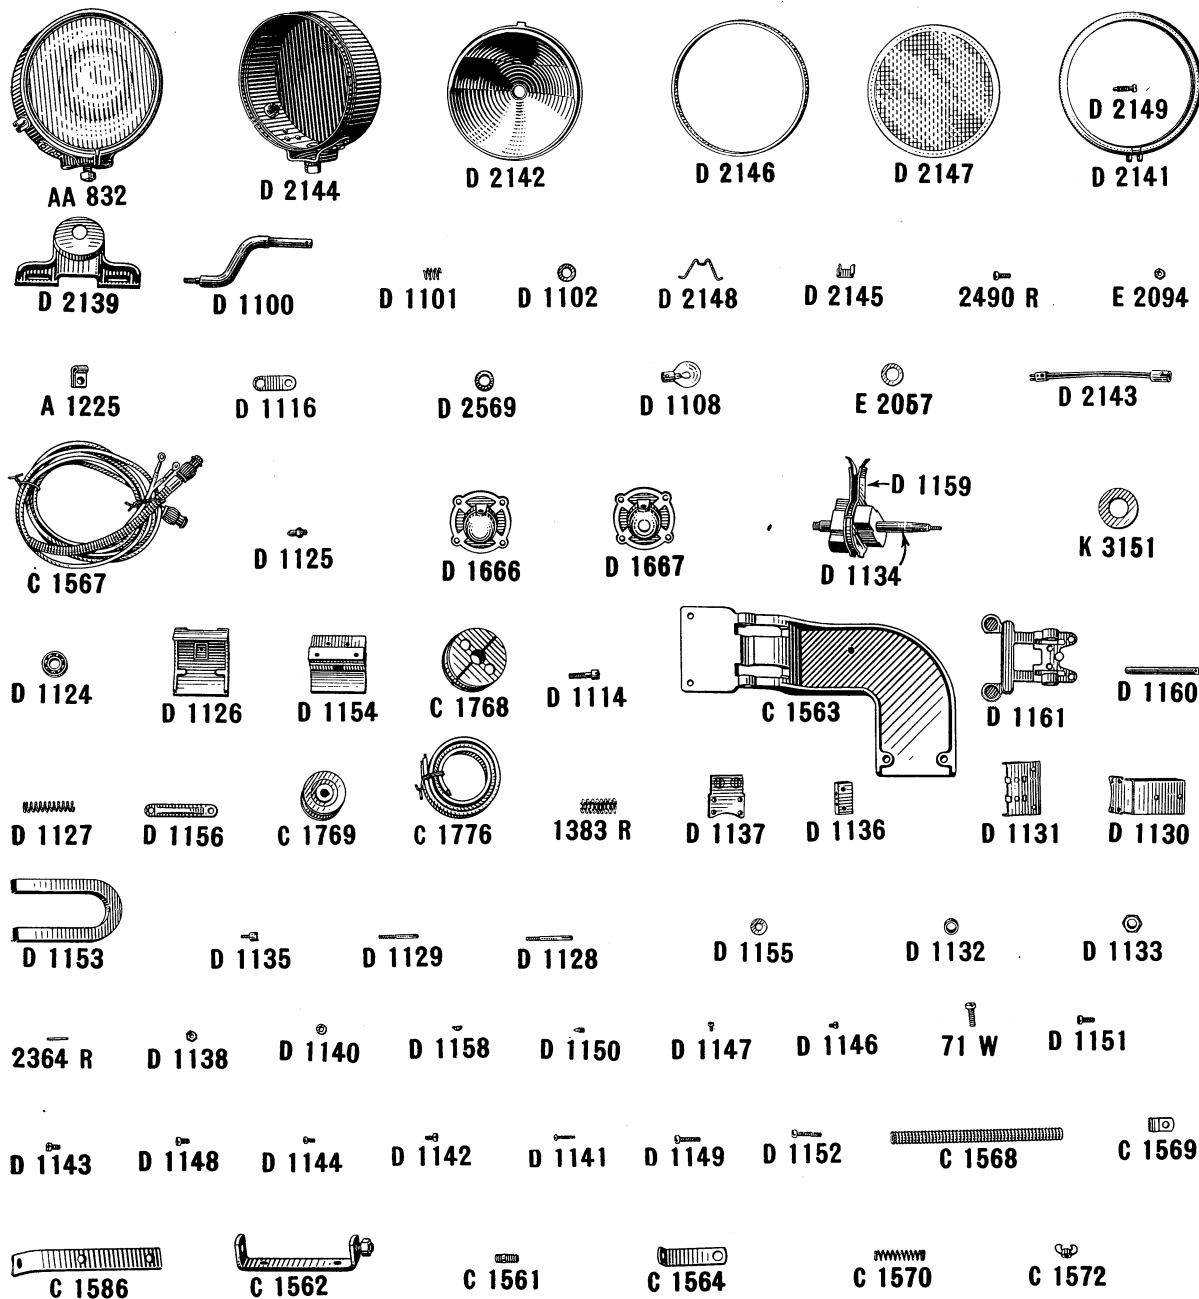


Plate No. 106


INDEX

For Models D and DI Tractors

SUBJECT	Page	SUBJECT	Page
Air Cleaner.....	263	Hardware List.....	269
Auxiliary Air Cleaner and Stack...	264	Hood.....	244
Brake Control Extension.....	252	Illustrations of Repair Parts.....	280
Brake, Emergency.....	252	Lighting Equipment.....	267
Brakes, Rear Wheel.....	252	Lubricating System and Oil Pump.....	241-242
Breather, Crank Case.....	241	Magneto.....	257
Cam Followers.....	239	Magneto Parts.....	258
Cam Shaft.....	238	Manifold.....	238
Carburetors.....	260	Muffler and Spark Arrester.....	239
Casting Numbers.....	278-279	Oil Filter and Indicator.....	242
Clutch Fork Bearing and Pulley Brake.....	247	Oil Pipes and Fittings.....	243
Clutch Parts.....	246	Pistons, Connecting Rod and Crankshaft.....	237
Connecting Rods.....	237	Platform.....	257
Controls.....	241	Plow Shifter.....	256
Cooling System.....	244	Power Control.....	266
Crank Case Ventilator.....	241	Power Shaft Parts.....	264
Crankshaft.....	237	Pulley.....	246
Cylinder.....	238	Radiator Guard and Curtain.....	245
Cylinder Head, Valves and Manifold.....	238	Reverse Shaft.....	248
Differential.....	249	Seat.....	256
Drawbar.....	256	Spline Shaft.....	247
Engine.....	236	Steering Parts.....	254
Fan.....	245	Tappets.....	239
Fenders.....	257	Tool Box and Tools.....	264
Final Drive.....	249	Transmission Case.....	236
Front Axle and Front End Support.....	253	Valves.....	238
Front Wheels and Front Wheel Equipment.....	254	Water Feed.....	238
Fuel System.....	243	Wheels and Equipment, Rear.....	250-251
Gear Shift.....	248	Wheel Scrapers.....	252
Generator.....	268		
Governor.....	239		
Governor Idler Gear.....	240		

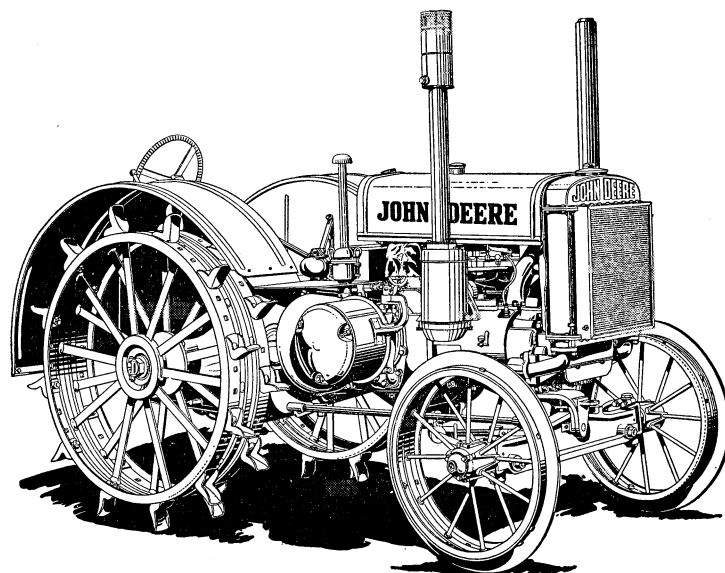

Model "D"

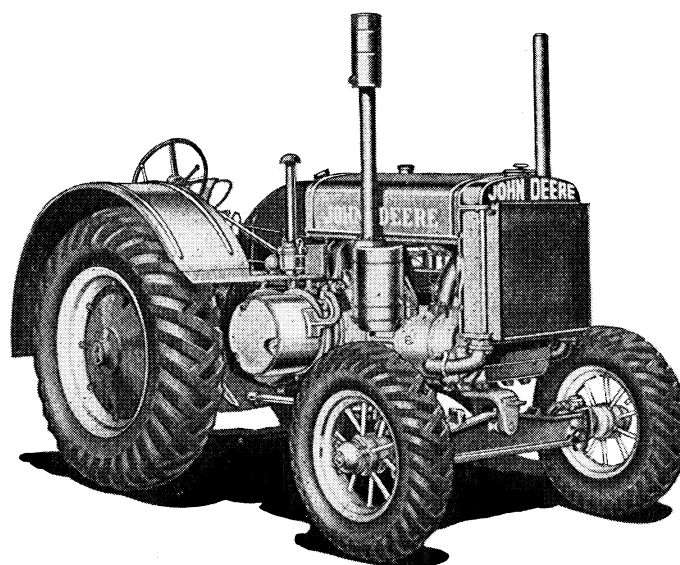

Model "DI"

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
TRANSMISSION CASE			
A461	Welsh Plug, Transmission Case, Top.....	119100-	107
AD76	Case, D1R, Transmission, Main.....	30400- 31279	107
AD117	Gasket, Complete, Front Cover.....	30400- 35634	107
AD209	Case, D670R, Transmission, Main.....	31280-109943	107
AD298	Gasket, Complete, Front Cover.....	35635-	107
AD299	Gasket, Complete, Rear Cover.....	30400-109943	107
AD778	Gasket, Rear Transmission Case Cover.....	109944-	107
AD793	Case, D2240R, Transmission, Main.....	109944-119099	107
AD915	Cover with Oil Guard, Rear Transmission Case.....	109944-119099	107
AD1235	Case, D2417R, Transmission, Main.....	119100-	107
AD1249	Cover with Oil Guard, Rear Transmission Case.....	119100-	107
C1102	Bushing, Steering Gear Shaft, Lower.....	109944-	107
C1521	Welsh Plug, Power Shaft Shift Lever Hole.....	109944-	107
D4R	Cover, Front.....	30400- 35634	107
D5	Cover, Rear.....	30400-109943	107
D163	Stud, Radius Rod Pivot (Drilled) 3/4"x5".....	30400- 35407	107
D269	Pipe Plug, 2", Transmission Drain.....	30451- 31279	107
D409	Stud, Cylinder Flange, 3/4"x3-1/4".....	30400-	107
D426	Pipe Cap, Crank Case Oil Filler Pipe.....	30400-109943	107
D625	Pipe Plug, 1-1/2", Transmission Drain and Oil Filter.....	30400-	107
D836	Strap, Front Cover.....	35635-	107
D837	Cover, Front.....	35635-109943	107
D843	Stud, Radius Rod Pivot.....	35408-	107
D937	Washer, Front and Rear Covers.....	30400-	107
D1246	Cover, Rear Power Shaft Opening.....	109944-	107
D1247	Gasket, Power Shaft Rear Opening Cover.....	109944-	107
D1257	Tube, Vertical Steering Shaft.....	109944-	107
D1376	Pipe Nipple, 1-1/2"x8", Crank Case Oil Filler.....	30400-109943	107
D1739	Cover, Power Shaft Opening, Side.....	109944-	107
D1740	Gasket, Power Shaft Opening Cover, Side.....	109944-	107
D1910	Cover, Front, Transmission.....	109944-	107
E2142	Pipe Plug, 3/4", Power Shaft Filler.....	109944-	107
1452R	Pipe Plug, 1/2", Power Shaft Sump Drain.....	109944-	107
ENGINE			
AD32	Main Bearing Housing, D639R, with Cap, R. H.....	30400-109943	109
AD33	Main Bearing Housing, D8R, with Cap, L. H.....	30400-109943	109
AD305	Flywheel, D33R, with Bolts and Dowel Pin.....	30400- 53387	108
AD337	Flywheel Bolts, 3/4"x5-1/2", with Key D200.....	36249- 38121	108
AD338	Flywheel Bolts, 3/4"x6-1/2" with Key D200.....	38692- 53387	108
AD339	Flywheel Bolts, 3/4"x5-1/2", with Key D782.....	30400- 36248	108
AD383	Flywheel, D1053R, with Bolts and Dowel Pin.....	38122- 38691	108
AD635	Bushings, Main Bearing (2 Halves).....	53388- 94800	108
AD661	Flywheel, D1606R, with Bolts, and Dowel Pin.....	94901-103107	109
AD703	Housing, D1985R, R. H. Main Bearing with Cap, Bolts and Nuts.....	30400-	109
AD733	Housing, D1725R, L. H. Main Bearing with Cap, Bolts and Nuts.....	94801- 94900	108
AD852	Flywheel, D1970R, with Bolts, and Dowel Pin.....	103108-109943	109
AD935	Spacer with Oil Seal Washer, Flywheel.....	109944-	109
D23R	Note: When Furnished for Tractors Nos. 60000-60256, add also D1054.	109944-	109
D26R	Collar, Flywheel Spacing.....	109944-	109
D174	Cover, L. H. Main Bearing.....	53388-	109
D175	Adjusting Screw, R. H. Main Bearing.....	30400- 53387	109
D186	Adjusting Screw, L. H. Main Bearing.....	30400-109943	109
D200	Dowel Pin, in Flywheel, 1/4"x1/2" Round.....	30400-109943	109
D299	Key, Flywheel, 5/8"x5/8"x3-3/8".....	30400-114279	108
D300	Gasket, L. H. Main Bearing to Case.....	30400- 38121	108
D328	Gasket, L. H. Main Bearing Cover.....	38692- 53387	109
D626	Cap Screw, 1/2"x1" Drilled Head.....	30400-	109
D782	Felt, R. H. Main Bearing.....	30400-109943	109
D1054R	Key, Flywheel, 5/8"x9/16"x3-3/8".....	31280-109943	109
D1080	Cover, L. H. Main Bearing.....	38122- 38691	108
D1684	Screw, Flywheel Locating.....	53388-109943	109
D1783R	Bolt, Main Bearing.....	53388-	109
D1791	Cover, L. H. Main Bearing.....	109944-	109
	Gasket, L. H. Main Bearing Cover.....	109944-	109

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
ENGINE—Continued			
D1861	Felt, R. H. Main Bearing.....	109944—	109
D1964	Shim, Laminated, R. H. Main Bearing.....	109944—	109
D2009	Dowel Pin, Flywheel, 1/4" Square x 27/32" Long.....	114280—	108
D2048	Shim, Laminated, Main Bearing.....	30400—109943	109
D2052	Shim, Laminated, L. H. Main Bearing.....	109944—	109
D2124	Washer, Flywheel Spacer, Oil Seal.....	53388—	109
E2142	Plug, 3/4", Crank Case, Drain.....	30400—	109
E2142	Plug, 3/4", L. H. Main Bearing Housing.....	109944—	109
PISTONS, CONNECTING RODS, AND CRANKSHAFTS			
AD35	Connecting Rod, D103, and Cap, with Piston Pin Bushing.....	30400— 94800 94901—103107	109
AD101	Connecting Rod, D103, Complete.....	30400— 94800 94901—103107
AD102	Connecting Rod Bolt, with Nut and Cotter (4 used per Rod).....	30400— 94800 94901—103107	109
AD382	Crankshaft, D1162, with Gear and Bearing Inner Race.....	53388— 94800 94901—103107	109
AD600	Crankshaft, D104, with Gear and Bearing Inner Race.....	30400— 53387	109
AD634	Bushings, Connecting Rod (2 Halves).....	30400— 94800 94901—103107	109
AD644	Connecting Rod, D1601R, and Cap, with Piston Pin Bushing.....	94801— 94900 103108—	109
AD647	Crankshaft, D1600, with Gear and Bearing Inner Race.....	94801— 94900 103108—109943	109
AD656	Connecting Rod, D1601R, Complete.....	94801— 94900 103108—
AD668	Connecting Rod Bolt with Nut and Cotter (4 used per Rod).....	94801— 94900	109
AD669	Connecting Rod Bolt with Nut and Cotter (4 used per Rod).....	103108—	109
AD671	Bushings, Connecting Rod (2 Halves).....	94801— 94900 103108—	109
AD838	Crankshaft, D1750R, with Gear, Bearing Inner Race and Balance.....	109944—	109
AD1334	Piston with Rings, 6-3/4", .125" Oversize.....	53388—	110
AD1352	Piston with Rings, 6-1/2".....	30400— 53387	110
AD1353	Piston with Rings, 6-1/2", .045" Oversize.....	30400— 53387	110
AD1354	Piston with Rings, 6-1/2", .090" Oversize.....	30400— 53387	110
AD1355	Piston with Rings, 6-3/4".....	53388—	110
AD1356	Piston with Rings, 6-3/4", .045" Oversize.....	53388—	110
AD1357	Piston with Rings, 6-3/4", .090" Oversize.....	53388—	110
AD1358	Piston with Rings, 6-3/4", High Altitude.....	53388—	110
D106R	Gear, Crankshaft.....	30400— 58297	109
D186	Dowel Pin, 1/4"x1/2".....	30400—109943	108
D223	Pin, Piston.....	30400—	109
D334	Set Screw, Piston Pin, 1/2"x2-1/4" Drilled Head.....	30400—	109
D553	Bushing, Piston Pin.....	30400—	109
D687	Piston Ring, 6-1/2", .045" Oversize.....	30400— 53387	110
D688	Piston Ring, 6-1/2", .090" Oversize.....	30400— 53387	110
D762	Pin, Piston, .005" Oversize.....	30400—	109
D964	Ring, 6-3/4" Piston.....	53388—	110
D1163	Gear, Crankshaft.....	58298—	109
D1164	Key, Gear to Crankshaft.....	58298—	109
D1173	Ring, 6-3/4", .045" Oversize.....	53388—	110
D1174	Ring, 6-3/4", .090" Oversize.....	53388—	110
D1176	Ring, Oil Control, 6-1/2".....	30400— 53387	110
D1345	Ring, Oil Control, 6-3/4".....	53388—	110
D1427	Ring, Oil Control, 6-1/2", .045" Oversize.....	30400— 53387	110
D1428	Ring, Oil Control, 6-1/2", .090" Oversize.....	30400— 53387	110
D1429	Ring, Oil Control, 6-3/4", .045" Oversize.....	53388—	110
D1430	Ring, Oil Control, 6-3/4", .090" Oversize.....	53388—	110
D1965	Shim, Laminated, Connecting Rod.....	94801— 94900 103108—	109
D2049	Shim, Laminated, Connecting Rod.....	30400— 94800 94901—103107	109
D2532	Ring, 6-3/4", .125" Oversize.....	53388—	110
56R	Woodruff Key, Gear to Crankshaft.....	30400— 58297	109
2166R	Ring, Piston, 6-1/2".....	30400— 53387	110

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CYLINDER			
AD64	Cylinder, 6-1/2", D2R, Complete, with Studs.....	30400- 53387	110
AD391	Cylinder, 6-3/4", D962R, Complete, with Studs.....	53388-109943	110
AD788	Cylinder, C1716R, Complete, with Studs.....	109944-	110
AD901	Cylinder, AD64, with Pistons, Rings and Gaskets.....	30400- 53387
AD902	Cylinder, AD391, with Piston, Rings and Gaskets.....	53388-109943
AD903	Cylinder, AD788, with Pistons, Rings and Gaskets.....	109944-
C524	Priming Cup.....	109944-
D160	Stud, Front End Support, 5/8"x3".....	30400- 31279	110
D290	Gasket, Cylinder to Case.....	30400-109943	110
D364	Stud, Water Pipe to Cylinder, 1/2"x2-3/16".....	30400-	110
D409	Stud, Front End Support, 3/4"x3-1/4".....	31280-	110
D489	Priming Cup.....	30400-109943	110
D1717	Stud for Cylinder Head, 3/4"x7-7/16".....	109944-	110
D1789	Gasket, Cylinder to Case.....	109944-	110
E2142	Plug, for Cylinder Head, 3/4".....	30400-109943	110
2205R	Stud for Cylinder Head, 3/4"x6".....	30400-109943	110
CYLINDER HEAD AND MANIFOLD			
AD34	Cylinder Head, D280R, with Valve Guides.....	30451-109943	110
AD60	Cylinder Head, D280R, Complete, with Valves and Springs.....	30451-109943
AD789	Cylinder Head, D1718R, with Valve Guides and Studs.....	109944-	110
AD790	Cylinder Head, D1718R, Complete, with Valves and Springs.....	109944-
D42R	Manifold.....	30400-109943	110
D306	Gasket, Manifold to Head.....	30400-109943	110
D488	Stud, Manifold, 1/2"x2".....	30400-	110
D895	Cap, Valve Spring (Use 1 with 2 D896 Lock Washers).....	30400-109943	110
D896	Lock Washers, Valve Stem (One-Half) (Use 2 with 1 D895 Cap).....	30400-109943	110
D944	Valve, Intake and Exhaust.....	30400-109943	110
D1719R	Guide, Valve.....	109944-	110
D1720	Lock Washer, Valve Stem (Use 2 with 1 D1721).....	109944-	110
D1721	Cap, Valve Spring.....	109944-	110
D1723	Valve, Intake and Exhaust.....	109944-	110
D1724	Spring, Valve.....	109944-	110
D1787	Gasket, Cylinder Head.....	30400-	110
D1788	Gasket, Manifold to Head.....	109944-	110
D1891R	Manifold.....	109944-	110
86R	Guide, Valve.....	30400-109943	110
264R	Lead Washer, Cylinder Head Stud (9 used per head).....	30400-109943	110
485R	Spring, Valve.....	30400-109943	110
WATER FEED			
AD53	Pipe, with Gland, Water Feed.....	30400-109943	111
AD104	Water Valve Body, Complete.....	30400-	111
AD874	Pipe with Gland, Water Feed.....	109944-	111
D177	Drilled Plug, Water Feed Lever in Transmission Case.....	30400-	111
D410	Nut, Packing, Water Needle Valve.....	30400-	111
D447	Check, Water Valve.....	30400-	111
D448R	Body, Water Valve.....	30400-	111
D449	Nut, Packing, Pipe to Cylinder.....	30400-	111
D450	Bushing, Water Feed Pipe.....	30400-	111
D451	Needle Valve, Water Feed.....	30400-	111
D452	Cap, Water Valve Body.....	30400-	111
D1772	Lever, Water Feed.....	30400-	111
D2079	Packing Washer, Water Feed Pipe.....	30400-	111
E2149	Nut, Solder Bushing, Pipe to Body, 5/16".....	30400-	111
E2150	Gland, Solder Bushing, Water Feed Pipe, 5/16".....	30400-	111
CAM SHAFT			
AD98	Cam Shaft Gear, D37R, with Bolts.....	30400-	111
D6R	Bearing, Cam Shaft.....	30400-	111
D102R	Cam Shaft.....	30400-	111
D291	Gasket, Cam Shaft Bearing, Thick.....	30400-	111
D460	Bolt, in Cam Gear, 7/16"x3-7/16", Drilled.....	30400- 31279	111
D467	Washer, Cam Shaft Spacer.....	30400-	111
D534	Gasket, Cam Shaft Bearing, Thin.....	30400-	111
D744	Bolt, in Cam Gear, 1/2"x3", Drilled.....	31280-	111
56R	Woodruff Key, Cam Gear.....	30400-	111
1452R	Pipe Plug, 1/2", Cam Gear Sump Drain.....	30400-	111

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CAM FOLLOWERS			
D67R	Cam Follower.....	30400-	111
D190	Shaft, Cam Follower.....	30400-109943	111
D349	Spacer, Cam Follower, 2-1/4" Long.....	30400-	111
D351	Spacer, Cam Follower, 2-15/16" Long.....	30400- 37367	111
D469	Welsh Plug, End of Shaft.....	30400-	111
D795	Spring, Cam Follower Spacer.....	30400-	111
D1773	Shaft, Cam Follower.....	109944-	111
92R	Washer, Cam Follower Spacing.....	30400-	111
1452R	Pipe Plug, 1/2", Cam Follower Shaft Hole.....	30400-	111
TAPPETS			
AD84	Oilier Pipe.....	30400-	111
AD179	Tappet Lever, D88R, with Rivet.....	30400-	111
AD466	Tappet Case, D281R, with Plugs.....	30451-	111
AD622	Tappet Lever Spacer and Washers (1 Spacer and 2 Washers).....	30400-	111
AD639	Tappet Case Cover with Gasket and Cap Screws.....	30400-100515	111
D31R	Elbow, Tappet Case End.....	30400-	111
D169	Socket, Tappet Lever.....	30400-	111
D179	Nut, Packing, Feed Pipe.....	30400-	111
D193	Shaft, Tappet Lever.....	30400-	111
D214	Tappet Rod.....	30400-109943	111
D285	Gasket, Tappet Case to Cylinder Head.....	30400-	111
D309	Gasket, Tappet Case Cover.....	30400-	111
D346	Feed Pipe, Governor to Tappet Case.....	30400-109943	111
D364	Stud, Tappet Case to Head, 1/2"x2-3/16".....	30451-	111
D376	Spring, Tappet Lever Spacer.....	30400-	111
D401R	Elbow, Governor Case End.....	30400-	111
D463	Welsh Plug, End of Shaft.....	30400-	111
D565	Gasket on Elbow, Tappet Case End.....	30400-	111
D683	Rivet, Tappet Lever.....	30400-	111
D1563	Cover, Tappet Case (Steel).....	100516-	111
D1776	Tappet Rod.....	109944-	111
D1785	Feed Pipe, Governor to Tappet Case.....	109944-	111
D2080	Packing Washer, Tappet Feed Pipe (8 used).....	30400-	111
E1976	Pipe Plug, 3/8", Tappet Case.....	30400-	111
K2052	Lead Washer, Tappet Oilier Cap Screw.....	30400-	111
MUFFLER AND SPARK ARRESTER			
AC765	Muffler and Spark Arrester.....	118759-	112
AD103	Muffler, AD87, Complete.....	30400-109943	112
AD241	Exhaust Elbow, D731R, Complete.....	30400-109943	112
AD348	Spark Arrester, Complete.....	30400-109943	112
AD349	Stack, Spark Arrester (less Elbow).....	30400-109943	112
AD829	Elbow, Lower, and Stack.....	109944-	112
AD879	Elbow with Studs, Muffler and Spark Arrester, Lower.....	30400-109943	112
AD894	Stack and Flange, Muffler.....	109944-	112
AD1203	Muffler and Spark Arrester.....	109944-	112
C2000R	Flange, Muffler and Spark Arrester.....	109944-118758	112
D213	Clamp, Muffler, Exhaust and Spark Arrester Elbow.....	30400-109943	112
D924R	Elbow, Spark Arrester.....	30400-109943	112
D929R	Flange, Spark Arrester.....	30400-109943	112
D1527	Brace, Spark Arrester (AD348).....	30400-109943	112
D1597	Clip, Spark Arrester Brace (AD348).....	30400-109943	112
D1922	Cap, Muffler and Spark Arrester.....	109944-	112
D1923	Finned Section, Muffler and Spark Arrester.....	109944-	112
D1924R	Collar, Spacing, Muffler and Spark Arrester.....	109944-	112
D1925	Stud, 1/2"x9-1/8", Muffler and Spark Arrester.....	109944-	112
D2062	Brace, Muffler and Spark Arrester.....	30400-109943	112
GOVERNOR			
AC667	Weight, Governor (1 only) (2 used per Engine).....	109944-	113
AD7	Thrust Bearing, Complete.....	30400-109943	113
AD300	Case, D21R, Governor, with Oil Trough.....	30400-109943	113
AD399	Fan Drive Spiral Bevel Gear and Pinion.....	35309-109943	113
AD483	Sleeve, Governor Shaft.....	109944-	113
AD878	Shaft, Governor Lever with Screws.....	109944-	113
AD936	Bevel Gear and Pinion, Fan Drive.....	30400- 35308	113
C902	Pin, Governor Weight.....	109944-	113
D10R	Bearing Housing, R. H. Governor.....	30400- 35308	113

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
GOVERNOR—Continued			
D11R	Bearing Housing, L. H. Governor	30400- 35308	113
D34R	Fork, Governor	30400-109943	113
D36R	Flange, Magneto Drive	30400- 35308	113
D59R	Sleeve, Governor Shaft	30400-109943	113
D60R	Weight, Governor	30400-109943	113
D69R	Gear, Governor Drive	30400- 35308	113
D170	Plunger, Throttle	30400-109943	113
D171	Shaft, Governor	30400- 35308	113
D189	Pin, Governor Fork	30400-109943	113
D279	Key, Magneto Drive Flange, 3/16"x1-1/4"	30451-	113
D279	Key, Bevel Gear to Governor Shaft, 3/16"x1-1/4"	30400- 68958	113
D279	Key, Governor Drive Gear to Shaft, 3/16"x1-1/4"	30400-	113
D297	Gasket, Governor Bearing Housing to Case, Thick	30400-	113
D298	Gasket, Governor Case to Transmission Case	30400-	113
D352	Spacer, Governor Shaft	30400-	113
D372	Felt Washer, R. H. Governor Bearing Housing	30400- 35308	113
D398	Snap Ring, R. H. Governor Bearing	30400- 35308	113
D403	Key, Bevel Gear to Governor Shaft	35309-109943	113
D509	Gasket, Governor Bearing Housing to Case, Thin	68959-	113
D509	Gasket, Fan Shaft Rear Bearing Housing to Case	30400-	113
D722	Spacer, Fan Drive Bevel Gear, 5/16", Thick	30400-	113
D823R	Flange Magneto Drive	48689- 68958	113
D824R	Bearing Housing, R. H. Governor Shaft	35309-109943	113
D825	Felt Washer, R. H. Governor Bearing	35309-109943	113
D826	Felt Retainer, R. H. Governor Bearing	35309-109943	113
D827	Washer, R. H. Governor Bearing	35309-109943	113
D829	Shaft, Governor	35309-109943	113
D830R	Bearing Housing, L. H. Governor Shaft	35309-109943	113
D831R	Cover, Bearing Housing, L. H. Governor Shaft	35309-109943	113
D832	Oil Trough, Governor Case	35309-	113
D842R	Gear, Governor Drive	35309- 46219	113
D961	Oil Trough, Governor Case	35309-109943	113
D1185	Gear, Fan Drive, Spiral Bevel	46220-109943	113
D1187	Spacer, Spiral Bevel, Drive Gear, 15/16", Thick	68959-	113
D1298	Lever, Inside Governor	68959-109943	113
D1300	Thrust Bearing, Governor Fork	109944-	113
D1306	Washer, Governor Sleeve	109944-	113
D1367R	Housing, L. H. Governor Shaft	109944-	113
D1690R	Case, Governor	109944-	113
D1695R	Housing, R. H. Governor Shaft	109944-	113
D1696	Arm, Governor	109944-	113
D1827	Shaft, Governor	109944-	113
D1828	Spacer, L. H. Governor Bearing	109944-	113
D1863	Spacer, R. H. Governor Bearing	109944-	113
D1938	Snap Ring, Governor Bearing Retainer	109944-	113
D1939	Spring, R. H. Governor Bearing Tension	109944-	113
D1942	Felt Retainer, Governor Shaft, R. H.	109944-	113
D1943	Felt Washer, Governor Shaft, R. H.	109944-	113
D1944	Washer, Oil Seal, Governor Bearing	109944-	113
D1946R	Flange, Magneto Drive	109944-	113
D1958R	Gear, Governor Drive	109944-	113
D1962	Support, Governor Lever Shaft	109944-	113
D2134	Spacer, Fan Drive Bevel Gear	30400- 35308	113
JD7655	Cup, Governor Shaft, Bearing	109944-	113
JD7656	Cone, Governor Shaft, Bearing	109944-	113
JD7657	Retainer with Balls, Governor Shaft Bearing	109944-	113
JD7658	Ball Bearing, Governor Shaft	30400-109943	113
K2573	Thrust Washer, Governor Shaft	119100-	113
293R	Washer, Governor Shaft	30400-109943	113
GOVERNOR IDLER GEAR			
AD99	Gear, D71R, Governor Idler with Bushing	30400-	113
AD174	Spindle, Idler Gear	30400-	113
D186	Dowel Pin, 1/4"x1/2"	30400-	113
D490	Washer, Idler Gear Thrust	30400-	113
D554	Bushing, Idler Gear	30400-	113

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CONTROLS			
A1197	Bushing, Clutch Lever Pivot.....	125896-	114
AD1360	Lever, Clutch, with Pivot Bushing.....	114692-	114
C247R	Trunnion, Speed Change.....	109944-	114
C912	Bushing, Control Quadrant Stud.....	109944-	114
C916	Sleeve, Speed Change Spring.....	109944-	114
C1494	Stud, Control Quadrant, 5/8"x2-7/8".....	109944-	114
C1595	Bolt, Clutch Operating Lever.....	109944-114691	114
D35R	Fork, Governor Speed Control.....	30400-109943	114
D87R	Lever, Spark and Speed Control.....	30400-114691	114
D157	End, Throttle, Speed and Spark Rod.....	30400-	114
D209	Rod, Spark Control.....	30400-	114
D212	Rod, Carburetor Control.....	30400- 31279	114
D215	Crank, Speed Control.....	30400-109943	114
D216	Rod, Clutch, Operating.....	30400-114691	114
D221	Lever, Clutch, Operating.....	30400-109943	114
D224	Clip, Clutch Operating Rod.....	30400-	114
D247	Tube, Control Rod.....	30400-	114
D266R	Quadrant, Control.....	30451-109943	114
D330	Bolt, Clutch Operating Lever.....	30400-109943	114
D381	Spring, Carburetor Control Rod, 8-1/8" Long.....	30400- 31279	114
D393R	Yoke, Clutch Operating Rod.....	30400-	114
D412	Rod, Speed Control.....	30400-109943	114
D559	Set Screw, Speed Control Fork, 3/8"x1", Flat Point.....	30400-	114
D617	Rod, Carburetor Control.....	31280-109943	114
D618	Spring, Carburetor Control Rod, 12" Long.....	31280-109943	114
D796	Washer, Carburetor Control Rod.....	30400-109943	114
D1710	Lever, Clutch Operating.....	109944-114691	114
D1899R	Quadrant, Control.....	109944-114691	114
D1926	Rod, Carburetor Control.....	109944-	114
D1959R	Fork, Governor Speed Control.....	109944-	114
D1960	Spring, Speed Change.....	109944-	114
D1961	Crank, Governor Control.....	109944-	114
D1983	Rod, Speed Control.....	109944-	114
D1994	Pin, Clutch Rod Yoke, 5/8"x1-5/8".....	30400-	114
D2027R	Quadrant, Control.....	114692-	114
D2029	Rod, Clutch Operating.....	114692-	114
D2031	Bolt, Clutch Lever Pivot.....	114692-	114
D2033R	Lever, Spark and Speed Control.....	114692-	114
D2059	Clip, Clutch Operating Rod Support.....	30400-	114
D2060	Cap, Clutch Operating Rod Support Clip.....	30400-	114
E2057	Washer, Throttle Rod.....	109944-	114
K2172	Spring, Control Lever Friction.....	30400-	114
CRANK CASE BREATHER			
AA359	Stack, Crank Case Breather.....	109944-	112
AC762	Stack, Crank Case Breather.....	109944-	112
AD918	Body, Crank Case Breather.....	109944-	112
D1949	Clamps, Crank Case Breather.....	109944-119099	112
D1950	Spring, Clamp, Crank Case Breather.....	109944-	112
D1951	Felt Gasket, Filter, Crank Case Breather.....	109944-	112
D1952	Filter Core, Crank Case Breather.....	109944-	112
D1957	Felt Gasket, Cover, Crank Case Breather.....	109944-	112
D2119	Clip, Breather Body.....	109944-	112
D2120	Clamp, Crank Case Breather.....	119100-	112
K3151	Washer, Clamps, Breather Stack.....	109944-	112
CRANK CASE VENTILATOR			
A535	Packing, Ventilator Pipe.....	119100-	112
C1705	Gland, Ventilator Pipe Packing.....	109944-	112
D179	Nut, Ventilator, Pipe Packing.....	109944-	112
D1915	Tube, Ventilator, Air Cleaner Cover.....	109944-113088	112
D1916R	Elbow, Ventilator Pipe.....	109944-	112
D1917	Pipe, Ventilator, Governor Case to Air Cleaner Cover.....	109944-119099	112
D2026	Tube, Ventilator, Air Cleaner Cover.....	113089-116272	112
D2080	Packing, Washer, Ventilator Pipe, Discharge End.....	109944-119099	112
D2380	Pipe, Ventilator, Governor Case to Air Cleaner Cover.....	119100-	112
LUBRICATING SYSTEM AND OIL PUMP			
AD700	Strainer, D1670R, Complete.....	30400-	114
D14R	Body, Oil Pump.....	30400-	114

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
LUBRICATING SYSTEM AND OIL PUMP—Continued			
D29R	Cover, Oil Pump Gear.....	30400-109943	114
D38R	Gear, Oil Pump Drive.....	30400-	114
D162	Valve, Relief, Oil Pump Cover.....	30400-119099	114
D180	Nut, Relief Valve.....	30400-119099	114
D185	Gear Pin, Oil Pump.....	30400- 52443	114
D271	Screen, Oil Strainer.....	30400-	114
D301	Gasket, Cork, Oil Pump Body to Case.....	30400-	114
D302	Gasket, Oil Pump Gear Cover, .015" Thick.....	30400-	114
D308	Gasket, Strainer Flange.....	30400-	114
D317	Stud, Strainer Flange.....	30400-	114
D379	Spring, Relief Valve.....	30400-109943	114
D403	Key, Drive Gear to Shaft, 3/16"x7/8".....	30400-	114
D453	Washer, Relief Valve Pressure (3 used).....	30400-119099	114
D456R	Elbow, Discharge Pipe, 3/8".....	30400-	116
D465	Gasket, Oil Relief Valve Nut.....	30400-	114
D793	Body, Oil Level Test Cock.....	30400-	114
D794	Plug, Oil Level Test Cock.....	30400-	114
D1075	Oil Pump Drive Shaft with Gear.....	30400-	114
D1076	Oil Pump Idler Shaft with Gear.....	30400-	114
D1995	Spring, Relief Valve.....	109944-119099	114
D2005	Body, Oil Level Test Cock (Extension Type).....	109944-	114
D2065R	Cover, Oil Pump Gear.....	109944-	114
D2081	Packing Washer, Oil Pump Discharge Pipe.....	109944-119099	114
D2437R	Cover, Oil Pump Gear.....	119100-	114
D2438	Packing Nut, Oil Pump Discharge Pipe.....	119100-	114
D2439	Packing, Oil Pump Discharge Pipe.....	119100-	114
D2440	Bushing, Oil Pump Discharge Pipe to Case.....	119100-	114
OIL FILTER AND INDICATOR			
A174	Ball, By-Pass Valve.....	119100-	115
A354	Spring, Oil Relief.....	119100-	115
A515	Body, Oil Filter.....	119100-	115
A516	Gasket, Oil Filter Head.....	119100-	115
A518	Stud, Oil Filter.....	119100-123022	115
A519	Gasket, Oil Filter Bottom.....	119100-	115
A520	Nut, Oil Filter Bottom.....	119100-	115
A521	Gasket, Oil Filter Bottom Nut (Copper).....	119100-	115
A521	Gasket, Filter By-Pass Valve Cap (Copper).....	119100-	115
A522	Bottom, Oil Filter.....	119100-	115
A523	Spring, Oil Filter Bottom.....	119100-	115
AA357	Element, Oil Filter.....	119100-	115
AB292	Gauge, Oil Pressure.....	119100-	115
AC954	Body, Oil Filter.....	109944-119099	115
AD170	Oil Indicator Rod, Cover, Piston Pin and Spring.....	30400- 35326	115
AD290	Piston with Rod, Oil Indicator.....	35327-119099	115
AD833	Oil Filter Element with Plunger and Handle.....	109944-119099	115
AD883	Base, D2056R, Oil Filter with Drain Plug.....	109944-119099	115
AD1225	Leaf Spring, Relief Valve with Centering Button.....	119100-	115
D15R	Body, Oil Indicator.....	30400- 35327	115
D162	Valve, Oil Filter By Pass.....	109944-	115
D164	Piston, Oil Indicator.....	30400- 31279	115
D172	Cover, Oil Indicator.....	30400- 31279	115
D180	Nut, Oil Filter By-Pass Valve.....	109944-	115
D188	Rod, Oil Indicator.....	30400- 31279	115
D310	Gasket, Oil Indicator Body to Case.....	30400-109943	115
D465	Gasket, Oil Filter By-Pass Nut.....	119099-	115
D556	Pin, Oil Indicator Piston, 3/16"x11/16".....	109943-	115
D642	Piston, Oil Indicator.....	30718- 31279	115
D643	Pin, Oil Indicator Piston, No. 14 Wire x 11/16".....	31280- 35326	115
D644	Rod, Oil Indicator.....	31280- 35326	115
D646	Cover, Oil Indicator.....	31280- 35326	115
D815R	Body, Oil Indicator.....	35327-109943	115
D1671	Washer, Oil Strainer Flange.....	30400-	115
D1989R	Head, Oil Filter.....	109944-119099	115
D1991	Gasket, Oil Filter Base to Main Case.....	109944-119099	115
D1992	Gasket, Oil Filter Head to Body.....	109944-119099	115
D1993	Gasket, Oil Filter Body to Base.....	109944-119099	115
D2001	Spring, Oil Filter By-Pass Valve.....	109944-	115
D2002	Handle, Oil Filter Element Plunger.....	109944-119099	115

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
OIL FILTER AND INDICATOR—Continued			
D2004	Gasket, Oil Filter Element Plunger Handle.....	109944-119099	115
D2386	Spring, Oil Indicator.....	30400-119099	115
D2422R	Mounting Flange, Oil Pressure Gauge.....	119100-	115
D2423	Head, Oil Filter.....	119100-	115
D2425	Button, Coil Spring Centering.....	119100-	115
D2426	Clip, Leaf Spring.....	119100-	115
D2427	Screw, Pressure Regulating.....	119100-	115
D2428	Cap, Filter By-Pass Valve.....	119100-	115
D2444	Stud, Oil Filter.....	123023-	115
D2445	Shield, Filter Head, Oil.....	123023-	115
E1976	Plug, Oil Filter Drain, 3/8".....	109944-119099	115
E2142	Plug, in Oil Filter Base, 3/4".....	109944-114650	115
K2525	Plug, Oil Filter Body, 1/8".....	109944-119099	115
K2573	Washer, Oil Filter Bottom Nut.....	119100-	115
1450R	Plug, Oil Filter Head, 1/4".....	109944-119099	115
1452R	Plug, Oil Filter Head, 1/2".....	109944-119099	115
1452R	Plug, in Oil Filter Base, 1/2".....	114651-119099	115
OIL PIPES AND FITTINGS			
A258	Bushing, Oil Gauge Mounting Flange.....	109944-	116
A374	Nut, Solder Bushing, Filter Head to Tee Oil Line.....	109944-	116
A374	Nut, Solder Bushing, 3/8", R. H. Main Bearing Oil Pipe.....	109944-	116
A465	Solder Bushing, Filter Head to Tee.....	119100-	116
AC431	Oil Pipe, Governor.....	109944-119099	116
AD41	Oil Pipe to R. H. Main Bearing.....	30400-109943	116
AD44	Oil Pipe to L. H. Main Bearing.....	30400-109943	116
AD828	Oil Pipe, R. H. Main Bearing.....	109944-119099	116
AD841	Discharge Pipe, Pump to Oil Filter Base.....	109944-119099	116
AD853	Oil Pipe, L. H. Main Bearing.....	109944-119099	116
AD1226	Oil Line, Pump Discharge.....	119100-	116
AD1227	Oil Line, R. H. Main Bearing.....	119100-	116
AD1228	Oil Line, Governor.....	119100-	116
AD1229	Oil Line, Filter Head to Tee.....	119100-	116
AD1230	Oil Line, Pressure Gauge.....	119100-	116
AD1231	Oil Line, L. H. Main Bearing.....	119100-	116
B256	Solder Bushing, in Filter Head for Pump Discharge Line.....	119100-	116
B256	Solder Bushing, Discharge Pipe to Case.....	119100-	116
B258	Nut, Solder Bushing, Oil Pump Discharge Pipe.....	109944-	116
C972	Oil Jet, Governor Case.....	109944-	116
D274	Discharge Pipe, Pump to Indicator.....	{ 30400-109943 113089-119099	116
D392	Solder Bushing, 5/16", L. H. Main Bearing Oil Pipe.....	30400-109943	116
D417	Elbow, 5/16", L. H. Main Bearing and Governor Oil Pipe.....	109944-	116
D456R	Elbow, 3/8", R. H. Main Bearing Oil Pipe.....	30400-119099	116
D456R	Elbow, 3/8", Oil Filter Head to Tee.....	119099-	116
D456R	Elbow, 3/8", each End of Oil Pump Discharge Pipe.....	30400-119099	116
D457	Bushing, Discharge Pipe in Indicator Body, 3/8".....	30400- 35326	116
D458	Nut, Packing, Discharge Pipe, 3/8".....	30400-119099	116
D818	Bushing, Discharge Pipe to Indicator Body.....	35327-109943	116
D1935	Gland, Solder Bushing, 3/8", Discharge Pipe.....	109944-	116
D1936	Bushing, 3/8", R. H. Main Bearing Oil Pipe.....	109944-	116
D1936	Bushing, 3/8", L. H. Main Bearing Oil Pipe.....	109944-	116
D2429	Solder Bushing, Filter Head to Governor Oil Line.....	119100-	116
D2434	Tee, Oil Line.....	119100-	116
E2149	Nut, Solder Bushing, R. H. Main Bearing Oil Pipe, 5/16".....	30400-	116
E2149	Nut, Solder Bushing, Governor Oil Pipe, 5/16".....	30400-	116
E2149	Nut, Solder Bushing, L. H. Main Bearing Oil Pipe, 5/16".....	30400-	116
E2149	Nut, Solder Bushing, Oil Pressure Gauge Pipe, 5/16".....	119100-	116
E2150	Gland, Solder Bushing, 5/16", Governor Oil Jet Pipe.....	30400-	116
E2150	Gland, Solder Bushing, L. H. and R. H. Main Bearing Oil Pipe, 5/16".....	109944-	116
FUEL SYSTEM			
AA335	Adjusting Clamp, Fuel Filter.....	107361-119104	117
AA499	Fuel Filter.....	107361-	117
AA517	Bail, Fuel Filter.....	119105-	117
AA518	Nut with Washer, Fuel Filter, Adjusting.....	119105-	117
AA519	Screen, Fuel Filter.....	107361-	117
AC102	Elbow, Gasoline Strainer.....	116768-	117
AC205	Fuel Strainer, Complete.....	68880-107360	117
AC1079	Body and Shut-Off Valve, Fuel Filter.....	107361-	117

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FUEL SYSTEM—Continued			
AC1080	Valve, Fuel Filter.....	107361—	117
AD15	Fuel Tank, Complete.....	30400— 68879	117
AD44	Gasoline Pipe, Complete.....	30400—109943	117
AD45	Fuel Pipe, Complete (Use with AD107 Carburetor).....	30400— 49773	117
AD51	Fuel Strainer, Complete.....	30400— 68879	117
AD78	Fuel Tank Filler Cap, Complete.....	30400—109943	117
AD97	Screw Head, D363R, and Stud, Filler Cap.....	30451—109943	117
AD278	Body, Gasoline Drain with Strainer.....	30400—116767	117
AD289	Fuel Pipe, Complete (Use with AD287 and AD411 Carburetors).....	49774—109943	117
AD320	Three-Way Cock (Replaced by AD680).....
AD543	Bracket with Cushions, Fuel Tank, Front.....	68880—	117
AD544	Bracket with Cushions, Fuel Tank, Rear.....	68880—	117
AD680	Three-Way Cock (Replaced AD320) (Individual Parts not Sold Alone)...	30400—	117
AD709	Filler Cap, Kerosene and Gasoline.....	109944—	117
AD806	Fuel Line.....	107361—109943	117
AD810	Fuel Tank.....	68880—109943	117
AD819	Fuel and Gasoline Pipes.....	109944—116767	117
AD1009	Fuel Tank.....	109944—116767	117
AD1011	Fuel Tank.....	116768—	117
AD1012	Gasoline Line.....	116768—	117
AD1013	Fuel Line.....	116768—	117
C1777	Sediment Bowl, Fuel Filter.....	107361—	117
C1778	Gasket, Cork, Fuel Filter.....	107361—	117
C2378	Body, Fuel Filter.....	107361—	117
D19R	Cap, Gas Filler.....	30400—109943	117
D80R	Flange, Fuel Tank Filler.....	30400—109943	117
D81R	Flange, Gas Filler.....	30400—109943	117
D82R	Flange, Gas and Fuel Outlet.....	30400—	117
D91R	Flange, Fuel Tank Outlet.....	30400— 68879	117
D126	Baffle, Fuel Tank Filler Cap.....	30400—	117
D252	Bracket, Fuel Tank, Rear.....	30400— 68879	117
D253	Bracket, Fuel Tank, Front.....	30400— 68879	117
D288	Gasket, Fuel Tank Filler Cap.....	30400—109943	117
D319R	Cap, Kerosene Filler.....	30400—109943	117
D362	Clamp Bar, Fuel Tank Filler Cap.....	30400—109943	117
D392	Body, Solder Bushing, 5/16".....	30400—	117
D468	Cushion, Fuel Tank.....	30400—109943	117
D763	Drain Cock, Gasoline.....	30400— 35436	117
D792	Drain Plug, Gasoline.....	35437—116767	117
D1837	Flange, Gas and Fuel Filler.....	109944—	117
D1851	Washer, Leather, Kerosene and Gasoline Cap.....	109944—	117
D1873	Clip, Fuel Tank Bracket.....	109944—	117
D2054	Cushion, Fuel Tank.....	109944—	117
D2122	Packing Washer, Three-Way Fuel Cock.....	104354—	117
E2149	Nut, Solder Bushing, 5/16", Fuel and Gas Pipe.....	30400—	117
E2150	Gland, Solder Bushing, 5/16", Fuel and Gas Pipe.....	30400—	117
294R	Stud, Front Tank Bracket.....	30400— 48724	117
1450R	Pipe Plug, 1/4", Fuel Tank Drain.....	30400— 68879	117
HOOD			
AD13	Hood, Complete.....	30400— 68879	118
AD541	Hood, Complete.....	68880—109943	118
AD744	Hood, Complete.....	109944—116767	118
AD1014	Hood, Complete.....	116768—	118
C941	Clamp, Hood.....	68880—109943	118
C980	Bolt (Special Head) Hood to Bracket.....	68880—
C1573	Clamp, Hood.....	109944—	118
D236	Clamp, Hood.....	30400— 68879	118
D566	Engine Cover, Canvas.....	30400—
COOLING SYSTEM			
A1247	Bracket, Heat Indicator.....	125430—	120
A1248	Bushing, Heat Indicator Tube.....	125430—	120
A1284	Bracket, Heat Indicator.....	109944—125429	120
AA883	Heat Indicator.....	125080—	120
AA952	Heat Indicator.....	109944—125079	120
AD77	Radiator, Complete.....	30400—
AD86	Filler Cap, Radiator, Complete.....	30400—	120
AD97	Screw Head, D363R, and Stud, Filler Cap.....	30451—	120
AD112	Bottom Tank, D54R, with Studs, Radiator.....	30400—	120

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
COOLING SYSTEM—Continued			
AD222	Water Pipe, D681R, Cylinder to Radiator.....	30400- 53387	120
AD393	Water Pipe, D965R, Cylinder to Radiator.....	53388- 68879	120
AD545	Water Pipe, D1218R, Cylinder to Radiator.....	68880-109943	120
AD860	Water Pipe, D1784R, Cylinder to Radiator.....	109944-	120
AD922	Radiator Cap, for Motometer.....	30400-	120
D32R	Elbow, Radiator to Cylinder Head.....	30400-	120
D53R	Top Tank, Radiator.....	30400-	120
D55R	Radiator Side.....	30400-	120
D126	Baffle, Filler Cap.....	30400-	120
D228	Strap, Radiator Top, Side.....	30400-	120
D229	Strap, Radiator Top, Rear.....	30400-	120
D230	Strap, Radiator Bottom, Rear.....	30400-	120
D231	Strap, Radiator Bottom and Top, Front.....	30400-	120
D272	Screen, over Radiator Tubes.....	30400-	120
D294	Gasket, Elbow to Cylinder Head.....	30400-	120
D295	Gasket, Top of Water Pipe, Cylinder to Radiator.....	30400-	120
D295	Gasket, Bottom of Water Pipe, Cylinder to Radiator.....	30400- 53387	120
D303	Gasket, Radiator Top Tank.....	30400-	120
D304	Gasket, Radiator Bottom Tank.....	30400-	120
D305	Gasket, Elbow to Radiator.....	30400-	120
D319R	Cap, Radiator Filler.....	30400-	120
D362	Clamp Bar, Radiator Filler Cap.....	30400-	120
D473	Gasket, Motometer Radiator Cap.....	30400-	120
D473	Gasket, Radiator Filler Cap.....	30400-	120
D488	Stud, Radiator Bottom Tank.....	30400-	120
D966	Gasket, Bottom of Water Pipe, Cylinder to Radiator.....	53388-109943	120
D1786	Gasket, Bottom of Water Pipe, Cylinder to Radiator.....	109944-	120
D2000	Core, Radiator.....	30400-	120
D2101	Baffle, Motometer Cap.....	30400-	120
D2102	Nut, Motometer Radiator Cap.....	30400-	120
D2388R	Clamp, Motometer Radiator Cap.....	30400-	120
27R	Washer, Radiator Elbow and Upper Water Pipe Cap Screws.....	30400-	120
RADIATOR GUARD AND CURTAIN			
AD813	Radiator Guard with Bolts.....	30400-	118
AD1469	Radiator Curtain, Complete.....	109944-	118
D379	Spring, Radiator Curtain Roller Retainer.....	30400-	118
D454	Drive Screw, Curtain Roller.....	30400-	118
D564	Bracket, R. H. (AD172, Radiator Curtain).....	30400-109943	118
D572	Bracket, L. H. (AD172, Radiator Curtain).....	30400-109943	118
D1545	Strap, Cloth to Radiator.....	30400-109943	118
D1856	Spacer, Radiator Guard to Radiator Side.....	30400-	118
D1884	Roller, Radiator Curtain.....	30400-109943	118
D1885	Clip, Radiator Curtain Spring.....	30400-109943	118
D1886	Curtain, Cloth, Radiator.....	30400-109943	118
D1887	Pin, Radiator Curtain Roller.....	30400-109943	118
372R	Spring, Radiator Curtain Clip.....	30400-	118
629R	Washer, Radiator Curtain Roller.....	30400-	118
2387R	Roller, Curtain, Wood (AD172 Radiator Curtain).....	30400-109943	118
2389R	Curtain, Cloth (AD172 Radiator Curtain).....	30400-109943	118
FAN			
AD49	Fan Spider, D92R, with Blades.....	30400-	113
AD220	Housing, D654R, with Felt Washer and Retainer, Rear Fan Bearing.....	30400-109943	113
AD221	Cover, D653R, with Felt Washer and Retainer, Front Fan Bearing.....	30400-109943	113
AD399	Fan Drive Spiral Bevel Gear and Pinion.....	35309-109943	113
AD796	Housing, D1366R, with Felt Washer and Retainer, Rear Fan Bearing.....	109944-	113
AD936	Bevel Gear and Pinion, Fan.....	30400- 35308	113
C1526	Spacer, Front Fan Bearing.....	109944-	113
C1530	Dust Shield, Front Fan Bearing.....	109944-	113
D168	Shaft, Fan.....	30400-109943	113
D246	Spacer, Front Fan Bearing.....	30400-109943	113
D297	Gasket, Rear Fan Bearing Housing to Case (Thick).....	30400-	113
D371	Felt Washer, Fan Shaft, Front and Rear Bearings.....	30400- 31279	113
D378	Spring, Fan Friction.....	30400-	113
D396R	Disk, Fan Drive.....	30400-	113
D398	Snap Ring, Rear Fan Bearing.....	30400-109943	113
D399	Facing, Fan Friction.....	30400-	113
D400	Key, Drive Disk.....	30400-	113
D403	Key, Bevel Pinion, 3/16"x7/8".....	30400-	113

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FAN—Continued			
D509	Gasket, Rear, Fan Bearing Housing to Case (Thin).....	30400—	113
D655	Felt Retainer, Front and Rear Fan Bearings.....	31280—	113
D684	Felt Washer, Fan Shaft, Front and Rear Bearings.....	31280—	113
D722	Spacer, Fan Drive Bevel, Gear 5/16" Thick.....	48689— 68958	113
D1186	Pinion, Spiral Bevel, Fan Shaft.....	68959—109943	113
D1691	Shaft, Fan.....	109944—	113
D1736	Felt Retainer, Front Fan Bearing, Small.....	109944—	113
D1737	Felt, Front Fan Bearing, Outer.....	109944—	113
D1866	Cover, Front Fan Bearing.....	109944—	113
D1868	Retainer, Large, Front Fan Bearing.....	109944—	113
D1938	Snap Ring, Fan and Governor Bearing Retainer.....	109944—	113
D1939	Spring, Fan Bearing Tension.....	109944—	113
D1940	Dust Shield, Rear Fan Bearing.....	109944—	113
D1941	Pinion, Fan Drive Bevel.....	109944—	113
D2134	Spacer, Fan Drive Bevel Gear.....	30400—	113
JD7003	Grease Cup, Front Fan Bearing, 1/8".....	30400— 35308	...
JD7655	Cup, Fan Shaft Bearing.....	109944—	113
JD7656	Cone, Fan Shaft Bearing.....	109944—	113
JD7657	Retainer with Balls, Fan Shaft.....	109944—	113
JD7658	Ball Bearing, Fan Shaft.....	30400—109943	113
JD7759	Alemite Zerk Fitting, Front Fan Bearing, 1/8", Alemite Model 1610.....	109944—	133
K2069	Washer, Fan Shaft.....	30400—109943	113
K3090	Oil Cup, Front Fan Bearing.....	35309—109943	113
27R	Washer, Fan Shaft, Front.....	35309—	113
1707R	Washer, 5/8", Fan Friction Spring.....	30400—
PULLEY			
AD36	Belt Pulley, D47R, with Bushing, Cone and Gear.....	30400— 31279	121
AD292	Belt Pulley, D833R, with Bushing, Cone and Gear.....	31280— 43565	121
AD346	Belt Pulley, D833R, with Bushing, Cone and Gear.....	{43566—48672 48674—48745 48776—48812 48673—48673}	121
AD368	Belt Pulley, D833R, with Bushing, Cone and Gear.....	{48746—48775 48813—109943}	121
AD832	Pulley, D1706R, with Bushing, Cone and Gear.....	109944—	121
C667	Snap Ring, Pulley Gear Retainer.....	109944—	121
D28R	Cover, Pulley and Spline Gear.....	30400— 31279	121
D110R	Gear, Belt Pulley.....	30400— 31279	121
D289	Gasket, Pulley and Spline Gear Cover.....	30400—	121
D311	Snap Ring, Gear Retainer.....	30400—109943	121
D359	Snap Ring, Bearing Retainer.....	30400—	121
D390	Key, Belt Pulley Gear, 3/8"x5/16"x1-1/4".....	30400— 31279	121
D394	Washer, Perforated, Bearing Retainer.....	30400— 31279	121
D499	Washer, Solid, Bearing Retainer.....	30451— 31279	121
D552	Bushing, Belt Pulley, Bronze.....	30400—	121
D651	Washer, Pulley Bearing.....	31280—	121
D652	Felt Washer, Pulley Bearing.....	31280— 43565	121
D659	Key, Belt Pulley Gear, 5/16"x1/4"x1-1/4".....	31280—	121
D661R	Gear, Belt Pulley.....	{31280—48672 48674—48745 48776—48812}	121
D676R	Cover, Pulley and Spline Gear.....	31280— 43565	121
D914R	Cover, Pulley and Spline Gear.....	43566—109943	121
D917	Felt Retainer, Pulley Bearing.....	43566—	121
D918	Felt Washer, Pulley Bearing.....	43566—	121
D967	Gear, Belt Pulley.....	{48746— 48775 48813—109943}	121
D1707R	Gear, Belt Pulley.....	109944—	121
D1909R	Cover, Pulley and Spline Gear.....	109944—	121
D1927R	Dust Cover, Pulley, Outside.....	109944—	122
D1928	Stud, Pulley Dust Cover, 1/2"x5-7/16".....	109944—	122
JD7494	Outer Race, Pulley Bearing.....	30400—	121
JD7544	Roller Assembly, Pulley Bearing.....	30400—	121
JD7594	Inner Race, Pulley Bearing.....	30400—	121
CLUTCH PARTS			
AD352	Dust Shield, Clutch.....	31280—109943	121
AD380	Disk, Clutch Driving, with Cap Screws.....	{30400— 94800 94901—103107}	122

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CLUTCH PARTS—Continued			
AD470	Disk, Clutch Adjusting, with Dust Cap.....	{ 35402- 94800	122
AD658	Disk, Clutch Driving, with Cap Screws.....	{ 94901-103107	122
AD662	Disk, Clutch Adjusting, with Dust Cap.....	{ 94801- 94900	122
AD749	Disk, Clutch Driving, D1754R, with Cap Screws.....	{ 103108-109943	122
AD752	Disk, Clutch Facing, with Linings.....	{ 94801- 94900	122
AD917	Dust Shield with Cap Screws, Clutch.....	{ 103108-109943	121
C74R	Clutch Dog.....	{ 94801- 94900	122
C434	Link, Clutch Dog.....	{ 103108-109943	122
C614	Facing, Clutch (Loose).....	{ 109944- 109944	122
D64R	Cone, Clutch.....	{ 109944- 109944	122
D66R	Disk, Clutch Adjusting.....	{ 30400- 43565	122
D79R	Dog, Clutch.....	{ 30400- 35401	122
D127	Dust Shield, Clutch.....	{ 30400-109943	121
D141	Washer, Drive Disk to Crankshaft.....	{ 30400- 31279	122
D158	Pin, Clutch Cone Drive, 1/2"x2".....	{ 30400- 31279	122
D161	Pin, Clutch, Release Spring.....	{ 30400-109943	122
D203	Bolt, Clutch Operating.....	{ 30400-109943	122
D237	Link, Clutch Dog.....	{ 30400-109943	122
D355	Pin, Clutch Dog, 1/2"x2-1/2".....	{ 30400-109943	122
D356	Pin, Clutch Dog Link, Outer, 1/2"x1-1/16".....	{ 30400-109943	122
D357	Pin, Clutch Dog Link, Inner, 1/2"x1-15/16".....	{ 30400-109943	122
D377	Spring, Clutch Release.....	{ 30400- 109944	122
D384	Facing, Clutch Friction.....	{ 30400-109943	122
D459	Cap Screw, Dust Shield, 3/8"x1" (Drilled Head).....	{ 109944-117554	121
D738	Shim Washer, Clutch Driving Disk.....	{ 30400- 43566	122
D915R	Cone, Clutch.....	{ 43566-109943	122
D916	Cap Screw, Dust Shield, 3/8"x3/4" (Drilled Head).....	{ 43566-109943	121
D1169	Dust Cap, Clutch Adjusting Disk.....	{ 117555- 61053	122
D1708R	Cone, Clutch Operating.....	{ 61053-109943	122
D1709	Bolt, Clutch Operating.....	{ 109944-110753	122
D1755R	Disk, Clutch Driving, Sliding.....	{ 109944- 109944	122
D1757R	Disk, Clutch Adjusting.....	{ 109944- 109944	122
D1760	Facing, Clutch (Riveted Type).....	{ 109944- 109944	122
D1929	Gasket, Clutch Dust Shield.....	{ 109944- 110754	121
D1968R	Cone, Clutch Operating.....	{ 110754- 43566	122
K2052	Lead Washer, Dust Shield Cap Screw.....	{ 43566-109943	121
CLUTCH FORK BEARING AND PULLEY BRAKE			
AD25	Pulley Brake, D62R, with Lining.....	{ 30400-109943	122
AD706	Pulley Brake, D1686R, with Lining.....	{ 109944-122776	122
AD1023	Brake with Lining, Pulley.....	{ 122777- 68880	122
C171R	Fork, Clutch.....	{ 68880- 68880	122
C732	Welsh Plug, Lower End of Clutch Fork Shaft Bearing, D1342R.....	{ 68880- 30400	122
D12R	Bearing, Clutch Fork.....	{ 30400- 68879	122
D83R	Fork, Clutch.....	{ 30400- 68879	122
D100R	Collar, Clutch, Bronze.....	{ 30400- 30400	122
D178	Pivot, Clutch Fork (Drilled Cap Screw).....	{ 30400- 30400	122
D194	Shaft, Clutch Fork (Bent).....	{ 30400- 68879	122
D293	Gasket, Clutch Fork Shaft Bearing.....	{ 30400- 30400	122
D385	Lining, Pulley Brake.....	{ 30400-109943	122
D463	Welsh Plug, Lower End of Clutch Fork Shaft Bearing, D12R.....	{ 30400- 68879	122
D487	Key, Clutch Fork, 5/16"x1/4"x5".....	{ 30451- 68879	122
D1342R	Bearing, Clutch Fork.....	{ 68880- 68880	122
D1343	Shaft, Clutch Fork (Splined).....	{ 68880- 68880	122
D1932	Lining, Pulley Brake.....	{ 109944- 68880	122
D1997	Spring, Clutch Fork.....	{ 68880- 68880	122
SPLINE SHAFT			
AD367	Gear, Spline Shaft.....	{ 48673- 48673	123
AD942	Shaft and Gear, Spline.....	{ 48746- 48775	123
C1096	Cap Screw, R. H. Quill to Case, 1/2"x1-1/4", Drilled Head.....	{ 48813- 46905	123
D50R	Quill, Spline Shaft, R. H.....	{ 30400- 30400	123
D51R	Quill, Spline Shaft, L. H.....	{ 30400- 31279	123

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
SPLINE SHAFT—Continued			
D111R	Pinion, Low Speed Sliding	30400-119099	123
D112R	Pinion, High Speed Sliding	30400-119099	123
D134	Washer, Bearing Retainer	30400- 31279	123
D138	Washer, Thrust Retainer	30400- 31279	123
D141	Washer, Spline Shaft Gear	30400-	123
D243	Spacer, Spline Shaft Gear	30400- 31279	123
D307	Gasket, L. H. Spline Shaft Quill	30400- 31279	123
D332	Cap Screw, Gear to Shaft, 3/4"x1-1/4", Drilled Head	30400- 31279	123
D358	Snap Ring, Bearing Retainer	30400-	123
D365R	Gear, Spline Shaft	{ 30451- 48672 48674- 48745 48776- 48812	123
D375	Shaft, Spline	30451- 31279	123
D382	Key, Gear to Shaft	30400-	123
D420	Snap Ring, Left End of Shaft	30400-	123
D673R	Quill, Spline Shaft, R. H.	31280-	123
D675R	Nut, Spline Shaft	31280-	123
D677	Gasket, L. H., Spline Shaft Cover	31280-109943	123
D799	Shaft, Spline (If AD350 Power Shaft is used, see D950)	31280- 46904	123
D950	Shaft, Spline (Exception: Before this Serial No. 46905, AD385 Spline Shaft Assembly must be installed in order to use AD350 Power Shaft)	46905-109943	123
D951	Cover, Spline Shaft, L. H.	31280-109943	123
D1685	Shaft, Spline	109944-	123
D1739	Cover, Spline and Power Shaft	109944-	123
D1740	Gasket, Spline and Power Shaft Cover	109944-	123
D2408	Pinion, Low Speed Sliding	119100-	123
D2409	Pinion, High and Intermediate Speed Sliding	{ 119100-125079 125291-125429	123
D2543	Pinion, High and Intermediate Sliding	{ 125080-125290 125430-	123
JD7479	Outer Race, Spline Shaft Bearing	30400- 31279	123
JD7529	Roller Assembly, Spline Shaft Bearing	30400- 31279	123
JD7579	Inner Race, Spline Shaft Bearing	30400- 31279	123
JD7680	Ball Bearing, Spline Shaft, Complete	31280-	123
GEAR SHIFT			
AD92	Fork, D187R, Shift, Low and Reverse, Complete	30400-119099	123
AD93	Fork, D198R, Shift, High, Complete	30400-119099	123
AD530	Fork, C1205R, with Yoke, Sliding Gear, High and Intermediate	119100-	123
AD531	Fork, D1206R, with Yoke, Sliding Gear, Low and Reverse	119100-	123
D184R	Arm, on Gear Shift Lever	30400- 31279	123
D208R	Quadrant, Gear Shift	30400-109943	123
D220	Lever, Gear Shift	30400- 31279	123
D244	Shaft, Shifting Fork	30400- 31279	123
D245	Yoke, Sliding Gear Fork	30400-119099	123
D342	Woodruff Key, Arm to Lever	30400-	123
D619	Lever, Gear Shift	31280-109943	123
D620R	Arm, on Gear Shift Lever	31280-	123
D622	Set Screw, Shift Shaft to Case, 1/2"x1-1/2", Drilled Head	31280-	123
D667	Nipple, Stop Pin	31280- 35349	123
D671	Shaft, Shifting Fork	31280-109943	123
D678	Adjusting Screw, Shift Shaft	31280-	123
D789	Nipple, Stop Pin	35350-	123
D1229R	Arm, Sliding Gear Fork	119100-	123
D1258	Yoke, Sliding Gear Fork	119100-	123
D1774	Shaft, Shifting Fork	109944-	123
D1777	Lever, Gear Shift	109944-119099	123
D1781R	Quadrant, Gear Shift	109944-119099	123
D2098	Drip Ring, on Shifter Lever, Oil	30400-	123
D2413	Shaft, Shifting Fork	119100-	123
D2416R	Quadrant, Gear Shift	119100-	123
D2453	Lever, Gear Shift	119100-	123
79R	Spring, Gear Shift Lever	30400-	123
1146R	Spring, Stop Pin	30400-	123
2323R	Pin, Stop	30400-	123
REVERSE SHAFT			
AD736	Reverse Shaft with Pin	109944-119099	124
AD774	Reverse Gear with Bushing	30400-119099	124
AD1247	Gear with Bushing, Reverse	119100-	124

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REVERSE SHAFT—Continued			
AD1248	Shaft with Pin, Reverse.....	119100—	124
C1220	Pin, Reverse Shaft.....	109944—	124
D22R	Collar, Reverse Shaft.....	30400—109943	124
D197	Shaft, Reverse.....	30400— 31279	124
D555	Bushing, Reverse Gear.....	30400—	124
D621	Shaft, Reverse.....	31280—109943	124
D622	Set Screw, Collar to Shaft, 1/2"x1-1/2", Drilled Head.....	30400—	124
D679	Welsh Plug, End of Shaft.....	31280—109943	124
D1821	Washer, Reverse Shaft.....	109944—	124
DIFFERENTIAL			
AD14	Differential Spider, D25R and Shaft.....	30451—119099	124
AD366	Differential Bevel Gear and Sprocket.....	30451—	124
AD690	Bolts, Nuts, Lock Washers, and Cotter Keys, Differential Ring Gear....	30400—
AD1239	Differential Spider, D2405R, with D2406 High Drive Gear and D206 Shaft.....	{ 119100—125079 125291—125429	124
AD1240	Gear, Intermediate Drive with Spider.....	{ 119100—125079 125291—125429	124
AD1242	Gear, Low Speed, with Spider.....	119100—	124
AD1256	Bolt with Nut, Differential Spider (9 used).....	119100—	132
AD1368	Gear, with Differential Spider and Shaft, High Drive.....	{ 125080—125290 125430—	124
AD1371	Gear with Spider, Intermediate Drive.....	{ 125080—125290 125430—	124
D49R	Quill, Differential Shaft.....	30400—	124
D121R	Gear, High Speed.....	30451—119099	124
D133R	Gear, Low Speed.....	30451—119099	124
D140	Washer, Differential Shaft, Outer Thrust.....	30400—	124
D143	Washer, Bevel Gear Thrust.....	30400—	124
D147	Washer, Bevel Pinion Thrust.....	30400—	124
D186	Dowel Pin, 1/4"x1/2".....	30400—	124
D195	Shaft, Differential Pinion.....	30400—119099	124
D296	Gasket, Differential Quill.....	30400—	124
D328	Cap Screw, Differential Shaft, 1/2"x1", Drilled Head.....	30400—	124
D359	Snap Ring, Differential Quill.....	30400—	124
D526	Differential Bevel Pinion.....	30451— 48783	124
D946R	Gear, Differential Bevel.....	30451—	124
D947R	Sprocket, Differential.....	30451—	124
D948	Differential Bevel Pinion.....	48784—	124
D1081	Washer, Differential Bevel Gear Thrust, 1/16" Thick.....	30400—	124
D1269	Shaft, Differential Pinion.....	119100—	124
D1596	Bolt, Differential Gear to Spider (AD690, Complete Set).....	30400—	124
JD7484	Outer Race, Differential Shaft Bearing.....	30400—	124
JD7534	Roller Assembly, Differential Shaft Bearing.....	30400—	124
JD7584	Inner Race, Differential Shaft Bearing.....	30400—	124
684R	Washer, Differential Shaft End Thrust.....	30400—	124
FINAL DRIVE			
A76R	Nut, Rear Axle.....	{ 123100—123200 124194—	125
AD31	Drive Chain, 44 Links for 38-Tooth Sprockets.....	30400—109943	126
AD100	Quill, D52R, Rear Axle, with Snap Rings.....	30400— 31279	125
AD200	Connecting Link, Drive Chain.....	30400—	126
AD216	Quill, D628R, Rear Axle, with Snap Rings.....	31280— 34101	125
AD269	Quill, D765R, Rear Axle, with Snap Rings.....	34102—119099	125
AD314	Drive Chain 34 Links for 22-Tooth Sprocket.....	30400—	126
AD315	Drive Chain, 38 Links for 28-Tooth Sprocket.....	30400—	126
AD401	Lock Nut, Rear Axle.....	{ 30400—123099 123201—124193	125
AD787	Drive Chain, 46 Links for 41-Tooth Sprocket.....	109944—	126
AD1234	Link, Drive Chain Offset.....	30400—	126
AD1251	Oil Seal, Rear Axle Bearing.....	119100—	125
AD1252	Quill, D765R, with Oil Seal, Rear Axle.....	{ 119100—123099 123201—124193	125
AD1258	Oil and Dust Seal, Rear Axle Bearing.....	30400—119099	125
AD1259	Felt Washer, Rear Axle Bearing (Part of AD1258).....	30400—119099	125
AD1265	Felt Washer, Rear Axle.....	{ 30400—123099 123201—124193	125
AD1268	Oil Seal, Rear Axle Bearing.....	30400—119099	125
AD1275	Washer, Rear Axle, Felt.....	{ 123100—123200 124194—	125
AD1276	Quill, D2459R, with Oil Seal, Rear Axle (D only).....	{ 123100—123200 124194—	125

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FINAL DRIVE—Continued			
AD1276	Quill, D2459R, with Oil Seal, Rear Axle (DI only)	{ 124194-125582 125591-126414	125
AD1350	Mud guard with Brackets, Rear Axle	{ 123100-123200 124194- 125583-125590	127
AD1456	Quill, D2549, with Oil Seal, Rear Axle (DI only)	{ 126415- 30400- 31279	125
D63R	Clamp, Quill to Case	30400-109943	125
D74R	Sprocket, Rear Axle (38-Tooth)	{ 30400-123099 123201-123280	126
D89R	Nut, Rear Axle	{ 30400-123099 123201-124193	125
D113R	Shaft, Rear Axle	{ 30400-123099 123201-124193	125
D122	Felt Retainer, Rear Axle	{ 30400- 34101 30400-123099	125
D144	Washer, Lock, Rear Axle Nut	{ 123201-124193 30400-123099	125
D331	Bolt, Rear Axle Sprocket	{ 123201-124193 30400- 31280-	125
D402	Snap Ring, Axle Bearing Retainer	30400-	125
D629R	Clamp, Quill to Case	31280-	125
D727R	Sprocket, Rear Axle (22-Tooth)	{ 30400-123099 123201-124194	126
D728R	Sprocket, Rear Axle (28-Tooth)	{ 30400-123099 123201-124194	126
D764	Mud Guard, Rear Axle	31280-	127
D766	Felt Retainer, Rear Axle	34102-123283	125
D933	Washer, Vellumoid, Rear Axle Quill Bolt (10 per Bolt)	30400-	125
D1542	Link, Chain Roller	30400-	126
D1780R	Sprocket, Rear Axle (41-Tooth)	{ 109944-123099 123201-124193	126
D2389	Adapter, Oil Seal (Part of AD1258)	30400-119099	125
D2390	Nut, Rear Axle (Part of AD1258)	30400-119099	125
D2391	Felt Retainer Washer	30400-119099	125
D2421R	Retainer, Rear Axle Oil Seal	119100-	125
D2442	Felt Retainer, Rear Axle	123284-124193	125
D2443	Nut, Rear Axle	123284-124193	125
D2452	Shaft, Rear Axle	{ 123100-123200 124194-	125
D2454	Spacer, Rear Axle Bearing	{ 123100-123200 124194-	125
D2456	Felt Retainer, Rear Axle	{ 123100-123200 124194-	125
D2457R	Sprocket, 41-Tooth, Rear Axle	{ 123100-123200 124194-	126
D2535	Sprocket, Rear Axle (28-Tooth)	{ 123100-123200 124194-	126
D2539	Bracket, Mud Guard	{ 123100-123200 124194-	127
D2540	Hook Bolt, Mud Guard to Wheel	{ 123100-123200 124194-	127
D2550	Felt Retainer, Rear Axle (DI only)	{ 125583-125590 126415-	125
JD7008	Grease Cup, 1/4"	30400- 95900	125
JD7248	Cone, with Rollers, Rear Axle Bearing, Inner	34102-	125
JD7249	Cone, with Rollers, Rear Axle Bearing	30400- 34101	125
JD7298	Cup, Rear Axle Bearing	34102-	125
JD7299	Cup, Rear Axle Bearing	30400- 34101	125
JD7376	Cone with Rollers, Rear Axle, Outer Bearing	{ 123100-123200 124194-	125
JD7760	Alemite Zerk Fitting, Rear Axle Quill, Alemite Model No. 1612 (2 used)	121803-	125
JD7777	Alemite Zerk Fitting, Rear Axle Quill, Alemite Model No. 1614 (2 used)	95900-121802	125
1450R	Pipe Plug, 1/4", Rear Axle Quill	30400-	125
REAR WHEELS			
AD38	Drive Wheel, Complete	30400- 47025	127
AD102	Bolt with Nut and Cotter, Rear Wheel Clamp Nut (AD357)	30400-124193	127
AD319	Reversible Drive Wheel, Complete, 8" Rim	30400- 47025	128
AD351	Drive Wheel, Complete (Export only)	30400- 47025	128
AD357	Nut, Drive Wheel	{ 30400-123099 123201-124193	127

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REAR WHEELS—Continued			
AD400	Drive Wheel, Complete.....	47026- 53387	127
AD972	Rear Wheel with Rim Strip, Tire Size, 12.75x28.....	{ 123201-124193	130
AD1310	Rear Axle Shaft and Drive Wheel Sleeve AD1311 (Repairs for JD1200 and D1019).....	{ 30400-123099	
AD1311	Hub Replacement Sleeve (Repairs for JD1200 and D1019).....		125
AD1322	Rim with Driver, Demountable, Tire Size 12.75x28 (For D2570R and D2512R Wheels).....	123100-123200	130
AD1343	Rear Wheel with Rim Strip, 12.75x28.....	124194-	
AD1389	Reversible Drive Wheel, Complete, 8" Rim.....	123100-123200	129
AD1390	Drive Wheel, Complete, 8" Rim.....	124194-	
AD1441	Rim, Side Ring and Lock Ring, Demountable (For D2622R Wheel).....	123100-123200	131
AD1443	Side Ring and Lock Ring (For D2622R Wheel).....	124194-	131
AD1450	Extension with Studs and Nuts, D2623R Dual Wheel, Tire Size 12.75x28 (For D2570R and D2512R Wheels).....	123100-123200	131
AD1451	Spacer, Dual Rim (For D2570R and D2512R Wheels).....	124194-	131
AD1462	Dual Drive Wheels with Studs and Nuts, D2622R, High Pressure Rubber Tires, Tire Size, 9.75x24.....	124194-	131
AD1471	Drive Wheel with Studs and Nuts, D2512R, Tire Size, 12.75x28.....	{ 123100-123200	130
AD1472	Solid Drive Wheel with Studs and Nuts, D2570R, Tire Size, 12.75x28...	{ 124194-	
AD1473	Drive Wheel with Studs and Nuts, D2618R, High Pressure Rubber Tires, Tire Size, 9.75x24.....	123100-123200	130
C719	Stud, Wedge Ring (For D2622R Wheel) 5/8"x2-5/8".....	124194-	131
C744	Washer, Hook Bolt.....	30400-	130
C1479	Stud, Rim Clamp (For D2618R Wheel) 5/8"x2-5/8".....	124194-	131
D41R	Hub, Drive Wheel.....	30400- 47025	127
D130	Washer, Lock, Drive Wheel Nut.....	{ 30400-123099	127
D409	Stud, Rim Clamp, 3/4"x3-1/4" (For D2623R, D2512R, and D2570 Wheels)	{ 123201-124193	
D1020R	Hub, Drive Wheel.....	124194-	130
D1021	Drive Wheel, Complete (Export only).....	47026- 53387	127
D1044	Reversible Drive Wheel, Complete, 8" Rim.....	{ 47026-123099	128
D1165	Drive Wheel, Complete, 8" Rim.....	{ 123201-124193	
D1166	Drive Wheel, Complete, 8" Rim.....	{ 47026-123099	128
D2106	Clamp, Rim (High Pressure Rubber Tires).....	{ 123201-124193	
D2110	Spacer Ring, Rear Wheel, 24"x4" (For D2622R Wheel).....	30400- 47025	131
D2184	Hook Bolt without Nut, 3/4"x4".....	124194-	131
D2383	Wedge Ring, Rear Wheel (For D2622R Wheel).....	30400-	130
D2460	Retaining Plate, Drive Wheel.....	124194-	131
D2461	Cap Screw, Drive Wheel Retaining Plate (Drilled).....	{ 123100-123200	130
D2526	Clamp, Rim.....	124194-	
D2629	Washer, Wheel Weight Bolt, 3/4".....	123100-123200	130
JD1200	Drive Wheel.....	124194-	130
JD1219	Drive Wheel, Complete.....	53388-123099	127
		{ 123201-124193	
		{ 123100-123200	129
		124194-	
REAR WHEEL EQUIPMENT			
AC649	Lug, Cone.....	30400-	128
AD248	Road Band with Supports (2 used per Wheel).....	30400- 49736	129
AD436	Road Band with Supports (2 used per Wheel).....	49737-	129
D233	Spade Lug, 4" High.....	30451-	128
D411	Bolt, Spade Lug.....	30451-	128
D530	Grouser, R. H., 2-1/4"x2-1/4"x5/16"x22".....	30451-	129
D531	Grouser, L. H., 2-1/4"x2-1/4"x5/16"x22".....	30451-	129
D532	Extension Rim, 6" Wide, Rear Wheel.....	30451-	135

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REAR WHEEL EQUIPMENT—Continued			
D573	Spade Lug, 6" High	30451-	128
D574	Grouser, R. H., 2-1/4"x2-1/4"x5/16"x16"	30451-	128
D575	Grouser, L. H., 2-1/4"x2-1/4"x5/16"x16"	30451-	128
D576	Grouser, R. H., 4"x3"x3/8"x16"	30451-	128
D577	Grouser, L. H., 4"x3"x3/8"x16"	30451-	128
D578	Grouser, R. H., 4"x3"x3/8"x22"	30451-	129
D579	Grouser, L. H., 4"x3"x3/8"x22"	30451-	129
D600	Grouser, R. H., 4"x3"x3/8"x30"	30451-	129
D601	Grouser, L. H., 4"x3"x3/8"x30"	30451-	129
D713	Extension Rim Clip, Rear Wheel	31280-	135
D726R	Road Lug, Herringbone	30451-	127
D730	Support for Road Band	30451- 49736	129
D938	Washer, Spade Lug Bolt	30400-	128
D1056	Support for Road Band (Offset)	49737-	129
D1078	Spade Lug, 5" High	30451-	128
D1283	Spade Lug, "A" Shape, 5" High	67719-	128
D1458R	Road Lug, R. H.	30451-	128
D1459R	Road Lug, L. H.	30451-	128
D1591	Extension Rim, Rear Wheel, 12" Wide	53388-	135
D2121	Spade Lug, Heavy Duty, 5"	30400-	128
D2184	Hook Bolt without Nut, 3/4"x4", Wheel Weight	124194-	130
D2373	Grouser, 16" Angle, Right	30400-	128
D2374	Grouser, 16" Angle, Left	30400-	128
D2446	Spade Lug, 6" (31° Face)	30400-	128
D2447	Spade Lug, Heavy Duty 4"	30400-	128
D2627	Lug, Spade, 6", "A" Shape	30400-	128
D2629	Washer, Wheel Weight Bolt, 3/4"	124194-	130
WHEEL SCRAPERS			
D769	Bar, Drive Wheel Scraper	33300-	135
D770	Support, Scraper Bar	33300-	135
D771R	Clamp, Scraper Blade	33300-	135
D772	Blade, Drive Wheel Scraper	33300-	135
D773	Bar, Extension Rim Scraper	33300-	135
D774	Blade, R. H., Extension Rim Scraper	33300-	135
D775	Blade, L. H., Extension Rim Scraper	33300-	135
EMERGENCY BRAKE			
AD24	Brake Band, Complete	30400-109943	132
AD486	Brake Band, Complete	119100-	132
AD696	Brake Band, Complete	109944-119099	132
D147	Washer, Brake Lever	30400-109943	132
D421	Lever, Brake	30400-109943	132
D423	End, Brake Band	30400-	132
D424	Lining, Brake Band	109944-	132
D1775	Lever, Brake	109944-119099	132
D2414	Lever, Brake	119100-	132
BRAKE CONTROL EXTENSION			
D186	Stop Pin, Brake Rod	119100-	132
D316	Washer, Brake Control	30400-	132
D1593	Lever, Brake	30400-109943	132
D1594	Rod, Brake Control	30400-119099	132
D1595	Bracket, Brake Control	30400-119099	132
D2365	Lever, Brake	109944-119099	132
D2515	Lever, Brake	119100-	132
D2546	Rod, Brake Control	119100-	132
D2547	Bracket, Brake Rod	119100-	132
REAR WHEEL BRAKES			
A348	Spring, Brake Shoe	126415-	132
A676	Key, Brake Shaft	126415-	132
AD1430	Brake Shoe Carrier with Retaining Pins	126415-	132
AD1431	Shoe, with Facing, Brake	126415-	132
AD1459	Latch, Brake	126415-	132
D393R	Clevis, Brake Rod	126415-	132
D937	Washer, Brake Shoe Retaining Pin	126415-	132
D958	Reinforcing Strap, Fender	126415-	139
D959	Cross Angle, 64" Long	126415-	138
D1290	Reinforcing Strap, Platform End	126415-	139

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REAR WHEEL BRAKES—Continued			
D1994	Pin, Brake Rod.....	126415-	132
D2585	Pin, Brake Shoe Retaining.....	126415-	132
D2586	Screw, Brake Adjusting.....	126415-	132
D2587	Bracket, Brake, Cam Shaft.....	126415-	132
D2588	Cam Shaft, Brake.....	126415-	132
D2589	Lever, Brake Cam.....	126415-	132
D2590	Pin, Brake Adjusting.....	126415-	132
D2592	Facing, Brake.....	126415-	132
D2594	Roller, Brake Shoe.....	126415-	132
D2595	Pin, Brake Shoe Roller.....	126415-	132
D2596	Cam, Brake.....	126415-	132
D2597	Arm, Brake Torque.....	126415-	132
D2598	Support, Platform, Right.....	126415-	138
D2599	Support, Platform, Left.....	126415-	138
D2600	Platform.....	126415-	139
D2601	Spacer, Platform.....	126415-	138
D2602	Bearing, Brake Shaft.....	126415-	132
D2604	Shaft, Brake.....	126415-	132
D2605	Lever, Hand.....	126415-	132
D2606	Pawl, Hand Lever.....	126415-	132
D2607	Rod, Hand Lever.....	126415-	132
D2608	Spring, Hand Lever Pawl Rod.....	126415-	132
D2609	Button, Hand Lever Pawl Rod.....	126415-	132
D2610	Spacer, Brake Shaft, Right.....	126415-	132
D2611	Spacer, Brake Shaft, Left.....	126415-	132
D2612	Lever, Brake Shaft.....	126415-	132
D2613	Dust Shield, Rear, Left.....	126415-	139
D2615	Washer, Plate, Torque Brace.....	126415-	132
D2616	Rod, Brake.....	126415-	132
K2525	Pipe Plug, Brake Carrier.....	126415-	132
FRONT AXLE AND FRONT END SUPPORT			
AD113	Front Axle, D483R, with Bushing.....	30451- 35382	133
AD253	Front Axle, D1026R, with Bushing.....	35383-109943	133
AD274	Knuckle, D630, Steering, R. H., with Nut and Cotter.....	31280-109943	133
AD275	Knuckle, D631, Steering, L. H., with Nut and Cotter.....	31280-109943	133
AD276	Knuckle, D630, Steering, R. H., with Nut and Cotter.....	30400- 31279	133
AD277	Knuckle, D631, Steering, L. H., with Nut and Cotter.....	30400- 31279	133
AD282	Support, Front End.....	30400- 68879	133
AD477	Support, Front End.....	68880-	133
AD721	Radius Rods, with Pivot.....	109944-	133
AD821	Knuckle, D1879R, with Bushings, Nut and Cotter, Front Wheel.....	109944-	133
AD1475	Radius Rod, Offset (For Belt Work with L. P. Tires).....	109944-	133
D46R	Pivot, Radius Rod.....	30400- 31279	133
D136	Washer, Knuckle Bolt.....	30400-109943	133
D139	Washer, Radius Rod Pivot.....	30400- 35407	133
D156	Taper Bolt, Steering Knuckle Pivot Pin.....	116273-	133
D163	Stud, Radius Rod Pivot.....	35408-	133
D196	Pin, Front Axle Pivot.....	30400- 35407	133
D217	Radius Rod, 7/8".....	30400-	133
D353	Bushing, Radius Rod Pivot.....	30400- 31279	133
D409	Stud, Front End Support, 3/4" x 3-1/4".....	30400- 35407	133
D484	Bolt, Steering Knuckle.....	30400-	133
D486	Bushing, Radius Rod Pivot.....	30451- 35382	133
D632	Radius Rod, 1".....	35408-	133
D634R	Pivot, Radius Rod.....	31280-109943	133
D777	Pivot Pin, Steering Knuckle.....	31280- 68879	133
D843	Stud, Radius Rod Pivot.....	35383-109943	133
D844	Washer, Radius Rod Pivot.....	35408-	133
D1250	Washer, Spindle Pin.....	35408-116272	133
D1391R	Pivot, Radius Rod.....	109944-	133
D1701	Spindle Pin.....	68880-109943	133
D1702R	Front Axle.....	109944-	133
D1881	Dust Cap, Knuckle.....	109944-	133
D1888	Bushing, Front Wheel Knuckle.....	109944-	133
D1898	Stud, Steering Arm, 5/8"x3-5/8".....	109944-	133
D1969	Pin, Front Axle Pivot Pin to Front End Support.....	109944-	133
D2630	Pivot, Radius Rod.....	109944-	133
JD7003	Grease Cup, Front Axle, 1/8".....	30400- 95900	133

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FRONT AXLE AND FRONT END SUPPORT—Continued			
JD7100	Cap, Grease Cup (For JD7003).....	30400- 95900	133
JD7759	Alemite Zerk Fitting, Radius Rod Pivot, Alemite Model 1610 (1 used)...	95901-	133
JD7759	Alemite Zerk Fitting, Front Axle, Center, Alemite Model 1610 (1 used)...	95901-	133
JD7759	Alemite Zerk Fitting, in Knuckles, Alemite Model 1610 (4 used).....	95901-	133
FRONT WHEELS AND FRONT WHEEL EQUIPMENT			
AA663	Felt Washer (2 used).....	30400-	134
AC119	Hub Cap, with Oil Fitting.....	{ 30400- 68879 95945-	134
AC1062	Front Wheel with Hub Cap, Bearing Cups and Rim Strip, Tire Size 6.00"x16".....	124194-	134
AD81	Dust Excluder, Front Wheel, Complete.....	30400- 31279	134
AD452	Nut, Front Wheel Bearing.....	30400-	134
AD536	Front Wheel with Hub Cap and Bearing Cups.....	68880- 90521	134
Also used on the Following Tractors:			
	90524 to 90538 92068 to 92092 92265		
	91111 92144 to 92163 92278		
	91222 92205 to 92208 92296 to 92320		
	92006 to 92018 92217 to 92241 92374 to 92398		
	92022 to 92055 92245 92498		
	92524 to 93125 94114 94211		
	93413 94199 94701 to 94883		
	94109 94205 94901 to 94906		
	94111 94208		
	94113 94209		
AD621	Front Wheel with Hub Cap and Bearing Cups..... (See AD536 for Exceptions to these Serial Numbers).....	90539- 92523 93126- 95944	134
AD900	Front Wheel with Hub Cap and Bearing Cups.....	{ 30400- 68879 95945-	134
AD990	Front Wheel with Hub Cap and Bearing Cups, Tire Size, 7.50"x18"....	109944-	134
C677	Gasket, Front Wheel Hub Cap.....	{ 30400- 68879 95945-	134
D327R	Hub Cap.....	68880- 95944	134
D461	Snap Ring, Front Wheel.....	30400- 31279	134
D582	Extension Rim, 5' Wide, Front Wheel.....	30400-	135
D583	Rim Clamp, Front Wheel Extension Rim.....	30400-	135
D584R	Washer, Rim Clamp, Front Wheel Extension Rim.....	30400-	135
D635	Felt Retainer.....	30400-	134
D849	Guide Band, Front Wheel, for Listed Corn (2 used per Wheel).....	30400-	135
D1050	Guide Band, Front Wheel, for Listed Corn (2 used per Wheel) (3-1/2")..	30400-	135
D1523	Guide Band, Front Wheel (1 used per Wheel) (1-1/2" High).....	30400-	135
D1524	Guide Band, Front Wheel (1 used per Wheel) (2-1/2" High).....	30400-	135
JD2200	Hub Cap (Threaded) Front Wheel (Order by Number Cast on Hub Cap).....	134
JD7216	Outside Cone.....	{ 30400- 68879 95945-	134
JD7219	Outside Cone.....	68880- 95944	134
JD7220	Inside Cone.....	30400- 31279	134
JD7224	Inside Cone.....	{ 31280- 68879 95945-	134
JD7226	Inside Cone.....	68880- 95944	134
JD7262	Outside Cup.....	68880- 95944	134
JD7266	Outside Cup.....	{ 30400- 68879 95945-	134
JD7270	Inside Cup.....	30400-	134
JD7759	Alemite Zerk Fitting in Hub Cap, Alemite Model 1610 (2 used).....	134
STEERING PARTS			
A939	Wheel, Steering Worm.....	125462-	136
AA380	Steering Wheel.....	109944-	136
AC428	Wheel, Steering Worm.....	109944-125461	136
AD753	Drag Link, Complete.....	109944-	136
AD755	Steering Shaft with Steering Worm.....	109944-	136
C232R	Arm, Steering Gear.....	109944-125461	136
C838	Ball Stud Bearings, Drag Link and Tie Rod.....	109944-	136
C840	Screw Plug, Drag Link and Tie Rod.....	109944-	136
C977	Adjusting Screw, Steering Gear Shaft.....	109944-	136

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
STEERING PARTS—Continued			
C1059	Washer, Thrust, Steering Worm Wheel.....	109944-	136
C1102	Bushing, Steering Gear Shaft, Lower.....	109944-	136
C1109	End, Tie Rod.....	109944-	136
C1215	Spring, Lower Bearing Vertical Steering Shaft.....	109944-	136
C1220	Dowel Pin, Steering Housing.....	109944-	136
C1231	Gasket, Steering Worm Housing, Thick.....	109944-	136
C1242	Gasket, Steering Worm Housing, Thin.....	109944-	136
D9R	Bearing, Steering Shaft.....	30400- 31279	136
D58R	Segment, Steering.....	30400- 95900	136
D61R	Wheel, Steering.....	30400-109943	136
D76R	Worm, Steering.....	30400- 95900	136
D105	Adjusting Pin (Tie Rod D219).....	30400- 44232	136
D156	Taper Bolt, Steering Wheel.....	30400- 44232	136
D191	Shaft, Steering Worm.....	30400-109943	136
D218	Shaft, Steering, Long.....	30400- 31279	136
D219	Tie Rod (Adjusting Pin D105) (Replaced by one D922 and one D923).....		
D265R	Block, Universal Joint.....	30400-109943	136
D342	Key, Steering Wheel.....	109944-	136
D470	Key, Steering Worm, 1/4"x1/4"x2-1/2".....	30451- 31279	136
D485R	Cover, Steering Worm.....	30400-109943	136
D486	Bushing, Steering Worm Shaft.....	30400-122064	136
D524R	Side Bar, Universal Joint.....	30451-109943	136
D557	Bolt, Steering Wheel Handle.....	30400-112131	136
D627	Key, Steering Worm, 5/16"x1/4"x2-1/2".....	31280-109943	136
D663R	Bearing, Steering Shaft, Upper.....	31280-109943	136
D664R	Bearing, Steering Shaft, Lower.....	31280-109943	136
D665	Shaft, Steering, Front, 34" Long.....	31280- 68879	136
D666	Shaft, Steering, Rear.....	31280-109943	136
D743	Oil Seal Washer, Lower Steering Shaft.....	109944-	136
D768R	Cover, Steering Segment.....	33137-109943	136
D825	Felt Washer, Lower Steering Shaft.....	109944-	136
D922	Tie Rod (Adjusting Pin D923).....	44233-109943	136
D923	Adjusting Pin (Tie Rod D922).....	44233-109943	136
D1203R	Housing, Steering Gear.....	109944-	136
D1255	Shaft, Steering Gear Vertical.....	109944-	136
D1257	Tube, Vertical Steering Shaft.....	109944-	136
D1392	Shaft, Steering, Front, 38" Long.....	68880-109943	136
D1535R	Segment, Steering.....	95901-109943	136
D1536R	Worm, Steering.....	95901-109943	136
D1673R	Steering Arm, R. H.....	109944-	136
D1674R	Steering Arm, L. H.....	109944-	136
D1703	Tie Rod.....	109944-	136
D1766R	Adjusting Nut, Steering Worm.....	109944-	136
D1768	Washer, Oil Seal and Steering Worm Adjusting Nut.....	109944-	136
D1769R	Housing, Steering Worm.....	109944-	136
D1876R	Support, Steering Shaft.....	109944-119099	136
D1877R	Bearing, Steering Shaft, Upper.....	109944-	136
D1898	Stud, Steering Arm, 5/8"x3-5/8".....	109944-	136
D1998	Bolt, Steering Wheel Handle.....	112132-120315 120567-120606	136
D2410R	Support, Steering Shaft.....	119100-	136
D2463	Shaft, Steering Gear.....	125462-	136
D2464	Arm, Steering Gear.....	125462-	136
H34	Spring, Steering Handle.....	112132-	136
JD7205	Cone with Roller, Steering Worm.....	109944-	136
JD7253	Cup, Steering Worm Bearing.....	109944-	136
JD7759	Alemite Zerk Fitting, Steering Shaft, Lower Bushing, Alemite Model 1610 (1 used).....	95901-	136
JD7759	Alemite Zerk Fitting, Steering Shaft Bearing, Alemite Model 1610 (1 used).....	95901-	136
JD7759	Alemite Zerk Fitting, Steering Gear Housing, Alemite Model 1610 (1 used).....	95901-	136
JD7759	Alemite Zerk Fitting, in Drag Link, Alemite Model 1610 (2 used).....	95901-	136
JD7759	Alemite Zerk Fitting, Tie Rod Ends, Alemite Model 1610 (2 used).....	95901-	136
294R	Stud, Steering Housing to Case, 1/2"x1-11/16".....	109944-	136
764R	Handle, Steering Wheel.....	30400-120315	136
1719R	Washer, Steering Worm.....	30400-109943	136

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
DRAWBAR			
AD162	Swinging Link.....	30400- 31279	137
AD211	Swinging Link.....	31280-116272	137
AD365	Drawbar.....	31280-109943	137
AD996	Drawbar.....	116273-	137
AD997	Swinging Link, Drawbar.....	116273-	137
D136	Washer, Drawbar.....	119100-	137
D139	Washer, Drawbar Link Pivot.....	119100-	137
D256	Drawbar.....	30400- 31279	137
D496	Cross Member, Swinging Drawbar.....	30400-116272	137
D498	Machine Bolt with Square Nut, 5/8"x3", Drilled.....	30400-	137
D1559	Cap Screw, Special, Drawbar (Long Head).....	30400-	137
D1779	Drawbar.....	109944-113822	137
D2030	Drawbar.....	113823-116272	137
D2245	Spacer, Drawbar Cap Screw.....	116273-	137
D2248	Bushing, Drawbar Link Pivot (D only).....	116273-	137
D2248	Bushing, Drawbar Link Pivot (DI only).....	124194-125580	137
D2249	Cap, Drawbar Link Pivot.....	116273-	137
D2250	Bolt, Drawbar Link Pivot, 3/4"x4-1/4".....	116273-118479	137
D2251R	Link, Drawbar Adjusting.....	116273-	137
D2252	Clamp, Drawbar.....	116273-	137
D2266	Stud, Drawbar Adjusting, 3/4"x3-3/4".....	116273-	137
D2366	Bolt, Drawbar Link Pivot.....	118480-	137
D2494R	Link Extension, Drawbar (DI only).....	124194-125580	137
D2545	Rivet, Oval Head, Drawbar Link Extension (DI only).....	124194-	137
D2571	Link, Drawbar, Straight (DI only).....	125581-	137
D2572	Link, Drawbar, Bent (DI only).....	125581-	137
D2573	Spacer, Drawbar Link (DI only).....	125581-	137
D2574	Pin, Drawbar Link, 1-1/4"x4-3/4" (DI only).....	125581-	137
D2576	Bushing, Drawbar Link Pivot (DI only).....	125581-	137
2215R	Cotter, Drawbar Link Extension Pin (DI only).....	124194-
CALIFORNIA DRAWBAR			
AD273	Swinging Drawbar, California Drawbar (1925-1926).....		137
AD344	Swinging Drawbar, California Drawbar (1927).....		137
AD408	Bracket, R. H., California Drawbar (1927).....		137
AD409	Bracket, L. H., California Drawbar (1927).....		137
D136	Washer on Forward End of Bracket, with 1" Cap Screws, California Drawbar (1927).....		137
D147	Washer, California Drawbar (1925).....		137
D802	Swinging Link, California Drawbar (1925-1926).....		137
D803	Guide Bar, California Drawbar (1925).....		137
D902	Swinging Link, California Drawbar (1927).....		137
E2189	Washer on Forward End of Bracket, with 3/4" Cap Screws, California Drawbar (1927).....		137
PLOW SHIFT			
D567R	Quadrant, Plow Shift.....	31280-	138
D570	Connecting Link, Plow Shift.....	31280-	138
D698	Lever, Plow Shift.....	31280-	138
D699	Spring, Plow Shift Lever.....	31280-	138
SEAT			
AD341	Spring and Leaf, Seat.....	30400- 39789	138
AD474	Spring and Leaf, Seat.....	39790-109943	138
AD758	Spring and Leaf, Seat.....	109944-116487	138
AD1298	Frame, Side Seat.....	124194-	138
AD1299	Cushion, Side Seat.....	124194-	138
C826	Stud, Seat Spring Clamp.....	109944-	138
C1785	Seat.....	30400-109943	138
C1980	Support Pin, Swing Seat Channel.....	116488-	138
C1981	Bolt with Nut, Seat Spring, 3/4"x8-1/4".....	116488-	138
C1982R	Washer, Swing Seat Spring.....	116488-	138
C1983	Spring, Swing Seat.....	116488-	138
C1985	Spacer, Swivel Bolt, Seat.....	116488-	138
D391	Stud, Seat Spring, 7/8"x3-5/8".....	30451- 39789	138
D827	Washer, Seat Bolt.....	109944-	138
D897	Stud, Seat Spring, 3/4"x4-1/2".....	39790-109943	138
D898	Clamp, Seat Spring.....	39790-	138
D1796	Seat.....	109944-	138
D1797	Clamp Nut, Seat.....	109944-	138
D2263	Channel, Seat.....	116488-	138

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
SEAT—Continued			
D2264	Bracket, Seat.....	116488—	138
D2265R	Bearing, Seat Pivot.....	116488—	138
D2495	Bracket, Side Seat.....	124194—	138
PLATFORM			
D249	Support, Platform, R. H.....	30400— 31279	138
D250	Support, Platform, L. H.....	30400— 31279	138
D251	Cross Angle, 58" Long.....	30400— 49736	138
D370	Platform Plank.....	30400— 68879	138
D522	Bracket, Support to Drawbar, 2-13/16" High.....	30451— 31279	138
D614	Bracket, Support to Drawbar, 4-11/16" High.....	30451— 31279	138
D648	Support, Platform, R. H.....	31280—109943	138
D649	Support, Platform, L. H.....	31280—109943	138
D959	Cross Angle, 64" Long.....	49737—	138
D1288	Platform.....	68880—	140
D1289	Spacer, Platform.....	68880—	138
D1290	Reinforcing Strap, Platform End.....	68880—	138
D1798	Support, Platform, R. H.....	109944—	138
D1799	Support, Platform, L. H.....	109944—	138
D2598	Support, Platform, R. H. (DI only).....	126415—	138
D2599	Support, Platform, L. H. (DI only).....	126415—	138
D2600	Platform (DI only).....	126415—	139
D2601	Spacer, Platform (DI only).....	126415—	138
K3151	Washer, Platform and Dust Shield Bolts.....	30400—	138
FENDERS			
AD122	Fender, Complete, R. H.....	30400— 49736	140
AD123	Fender, Complete, L. H.....	30400— 49736	140
AD232	Citrus Grove Fender, Complete, R. H.....	30400— 49736	140
AD233	Citrus Grove Fender, Complete, L. H.....	30400— 49736	140
AD370	Fender, Complete, R. H.....	49737— 68879	140
AD371	Fender, Complete, L. H.....	49737— 68879	140
AD416	Citrus Grove Fender, Complete, R. H.....	49737— 68879	140
AD417	Citrus Grove Fender, Complete, L. H.....	49747— 68879	140
AD488	Fender, Complete, R. H.....	68880—109943	139
AD489	Fender, Complete, L. H.....	68880—109943	139
AD495	Citrus Grove Fender, Complete, R. H.....	68880—109943	140
AD496	Citrus Grove Fender, Complete, L. H.....	68880—109943	140
AD640	Dust Shield, Pulley, Complete.....	95900—109943	140
AD762	Fender, Complete, R. H.....	109944—	139
AD763	Fender, Complete, L. H.....	109944—	139
AD768	Pulley Dust Guard with Support.....	109944—	140
AD843	Dust Shield, Front, L. H., with Support.....	109944—	139
D462	Reinforcing Strap, Fender.....	30400— 49736	139
D516	Dust Shield, Front, R. H.....	30451—109943	140
D517	Dust Shield, Front, L. H.....	30451—109943	140
D518	Dust Shield, Rear, R. H.....	30451—109943	139
D519	Dust Shield, Rear, L. H.....	30451—109943	139
D703	Tie Rod, Citrus Grove Fender.....	30451—	140
D710	Brace, Citrus Grove Fender.....	30451—	140
D936	Cross Brace, Citrus Grove Fender.....	30451—	140
D958	Reinforcing Strap, Fender (DI only).....	126415—	139
D958	Reinforcing Strap, Fender.....	49737—109943	139
D1003R	Bracket, Fender to Case.....	30400—109943	140
D1237R	Bracket, Fender to Case.....	109944—	140
D1411	Support, Pulley Dust Guard.....	95900—109943	139
D1818	Dust Shield, Rear, R. H.....	109944—	139
D1819	Dust Shield, Rear, L. H.....	109944—	139
D2613	Dust Shield, Rear, Left (DI only).....	126415—	139
MAGNETO			
AA1084	Porcelain, for AC600, No. 2, Spark Plug, 7/8".....	109944—	141
AC600	Spark Plug, 7/8".....	109944—	141
AD26	Wire, R. H. Spark Plug.....	30400—	141
AD27	Wire, L. H. Spark Plug.....	30400—	141
AD116	Magneto, Complete with Arm.....	30400— 35308	141
AD597	Magneto, Complete with Arm.....	35309—	141
C2331	Porcelain for AC600, C-4 or 3-X, Spark Plug.....	35309—	141
D36R	Flange, Magneto Drive.....	30400— 35308	141

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
MAGNETO—Continued			
D225	Arm, Magneto Control.....	30400—	141
D316	Washer, Magneto Bracket.....	30400—	141
D369	Wood Clamp, Spark Plug Wires.....	30400—	141
D403	Key, Magneto Drive Flange, 3/16"x7/8".....	30400—	141
D465	Gasket, Spark Plug.....	109944—	141
D491R	Bracket, Magneto and Air Cleaner.....	30451— 35308	141
D505	Collar, Magneto Drive.....	30451— 35308	141
D798R	Bracket, Magneto and Air Cleaner.....	35309—109943	141
D823R	Flange, Magneto Drive.....	35309—109943	141
D1733R	Bracket, Magneto.....	109944—	141
D1908	Porcelain for 508R Spark Plug, 1/2".....	30400—109943	141
D1918	Support, Spark Plug Wires (Wood) (Large Hole).....	109944—	141
D1945	Dust Shield, Magneto Drive Flange.....	109944—	141
D1946R	Flange, Magneto Drive.....	109944—	141
D2260	Collar, Magneto Drive.....	35309—	141
132R	Clamp, Timing Plate.....	30400—	141
135R	Hood, Magneto.....	30400—	141
508R	Spark Plug, 1/2".....	30400—109943	141
629R	Washer, Slotted Hole in Magneto Bracket.....	35309—	141
2152R	Plate, Magneto Timing.....	30400—	141
MAGNETO PARTS			
43	Screw for Top and Side Covers.....	81070—	141
74	Nut, Plain, Armature Shaft.....	85534—	142
180	Screw and Washer, Primary Lead.....	30400—	143
224	Lock Washer for 225, 227, and 5631.....	30400—	141
225	Screw, Distributor Bearing with Lock Washer.....	30400—	143
227	Screw, with Lock Washer Distributor Block.....	30400—	143
293	Shim Washer under Breaker Bar.....	30400—	143
1638	Bearing Holder Screw, Short.....	30400—	143
1979	Screw for 8097, 8104, and 8445, to Breaker Base.....	30400—	142
2710	Thumb Nut for Distributor Block.....	30400—	143
2918	Nut, Slotted, Drive End.....	30400— 35308	143
3107	Screw with Lock Washer, Primary Lead.....	30400—	143
3378	Screw with Lock Washer for Ground Clip.....	30400—	143
3396	Screw with Lock Washer for Cover and Side Plates.....	30400— 81069	142
3399	Woodruff Key for Distributor Pinion.....	30400—	143
3494	Steel Shim for Rotor, .003" Thick.....	30400—	141
3495	Steel Shim for Rotor, .005" Thick.....	30400—	141
3496	Steel Shim for Rotor, .007" Thick.....	30400—	141
3703	Screw with Washer, High Tension Winding.....	30400—	142
3782	Lock Washer, Drive Shaft Nut.....	30400— 35308	143
3794	Lock Washer, for 3378, 3796, 1979, 9588, 180, 3107.....	30400—	143
3796	Screw, Breaker Bar Spring to Breaker Bar.....	30400—	143
4130	Rod, Side Plate.....	30400— 81069	142
4212	Lock Washer for Cam Screw.....	30400—	142
4555	Strap with Screw, Primary Lead.....	30400—	143
5631	Screw with Lock Washer, Short, Distributor Block.....	30400—	143
7600	Drain Screen (Round).....	115233—	141
8001	Magnets (Pair).....	30400—	142
8053	Bearing Holder with Bearing Drive End.....	30400—	143
8070	Oil Hole Cover with Spring and Pin, Back, L. H.....	30400— 35308	143
8097	Finger Spring.....	30400—	143
8104	Buffer Spring.....	30400—	143
8112	Side Plate Stud.....	30400— 81069	142
8285	Thrust Button with Spring, Center of Distributor Block.....	30400—	143
8338	Wick and Spring, Distributor Bearing.....	35309—	143
8408	Ground Clip.....	30400—	143
8445	Breaker Bar Spring.....	30400—	143
8460	Screw, Breaker Base Fastening.....	30400—	142
8461	Breaker Bar Bearing Wick.....	30400—	141
8559	Distributor Pinion.....	30400—	143
8695	Safety Gap Holder.....	30400—	143
8707	Distributor Gear and Shaft.....	30400—	143
8871	Insulating Bushing for Breaker Box Cover.....	30400— 81069	141
8873	Ground Stud.....	30400—	143
8888	Cam Screw.....	30400—	143
8905	Snap Ring for 8871.....	30400— 81609	141
9228	Holder with Wick.....	30400—	143
9366	Distributor Disk, Complete.....	30400—	143

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
MAGNETO PARTS—Continued			
9432	Cam, L. H.	30400—	143
9433	Collector Brush with Spring	30400—	143
9588	Lock Screw, Contact Screw Bracket	30400—	143
9603	Primary Lead	30400—	143
9968	Back Plate, L. H.	30400— 35308	143
10048	Nut, Breaker Box Cover or Ground Stud	81609—	143
14249	Bearing Holder with Bearing	30400—	143
14264	Primary Lead Strap with Screw	30400—	143
14566	Distributor Bearing with Wick	30400—	143
14724	Field Pole Cover	30400—	143
14752	Field Pole Structure	30400—	143
14757	Breaker Box Cover, Complete	30400—	143
14761	Side Plate, R. H.	30400— 81069	142
14762	Side Plate, L. H.	30400— 81069	142
14791	Insulation, Contact Screw Bracket	30400—	143
14846	Bushing, Bracket Insulation	30400—	142
14847	Washer, Bracket Insulation	30400—	142
16774	Screw for Bearing Holder, Long	30400—	143
17537	Contact Screw with Point	81070—	141
18333	Screw for Safety Gap Holder	30400—	143
18832	Cam Wiper	30400—	141
19109	Screw, Contact Bracket Fastening	30400—	142
20232	Gasket for Side Plate	30400— 81069	142
26334	Washer, Armature Shaft (Tongued)	85534—	142
27130	Oil Hole Cover with Spring and Pin	30400— 81069	141
27155	Gasket for Back Plate	30400— 35308	...
27196	Shim, Fiber, Distributor Gear	35309—	141
27397	Washer, Fiber Retaining (For 27398)	81070—	143
27398	Felt Washer, Breaker Base	81070—	143
27406	Magnet Cover, Top Plate	30400— 81069	142
27408	Breaker Bar, Complete with Point	30400— 81069	143
27421	Housing and Back Plate	35309— 81069	142
27422	Breaker Base	30400—	143
28400	Rotating Pole Structure	30400—	143
28438	Contact Screw Bracket with Point and Ground Stud	30400— 81069	143
28439	Contact Screw with Point	30400— 81069	143
28444	Magnet Cover Pad	30400— 81069	142
28463	Spark Gap Protector	30400—	143
28539	Washer, Felt, for Back Plate (Fits over Armature End)	81070—	141
29381	Dowel Pin for Back Plate	81070—	141
33158	Felt Gasket for Distributor Block and Breaker Base	{ 30400— 35308 81070—	143
35238	Distributor Block, Complete	30400—	143
36034	High Tension Winding	30400—	143
36035	Oil Hole Cover with Gasket	81070—	141
36046	Side Plate with Gasket	81070—	141
36048	Top Cover with Gasket	81070—	141
36051	Gasket for Side Plate	81070—	141
36052	Gasket for Top Cover (Impulse End)	81070—	141
36063	Gasket for Top Cover (Distributor End)	81070—	141
36066	Breaker Bar, Complete with Point	81070—	141
36164	Condenser	30400—	143
37489	Baffle, Micanite	115233—	143
50089	Housing and Back Plate	81070—	142
50119	Gasket for Distributor Block	81070—	...
50639	Washer, Oil Drain	115233—	141
52252	Frame, Complete with Oilers	30400—	141
55056	Contact Screw Bracket, with Point	81070—	141
C1335	Woodruff Key for Drive End	30400—	143
D2003	Lock Washer for 3703 and 8460	30400—	...
D2716	Brass Washer for Ground Stud	30400—	143
D2720	Lock Washer for Ground Stud	30400—	143
D2727	Woodruff Key, Cam	30400—	143
E2302	Oiler for Back Plate	81070—	142
IMPULSE STARTER—ROTATING UNIT			
AD10	Rotating Unit, Complete	30400— 35308	141
AD302	Rotating Unit, Complete	35309—	142
3782	Lock Washer, Magneto Shaft	30400— 35308	...
18404	Nut, Magneto Shaft, Castellated	35309— 85533	141

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
IMPULSE STARTER—ROTATING UNIT—Continued			
18495	Cam Member, Slotted for Drive Collar.....	30400- 35308	141
18637	Magneto Member, Fits Armature Shaft.....	30400-	142
18640	Washer, Special for Coupling.....	30400-	141
19327	Cotter Key, Magneto Shaft.....	35309- 85533	142
20624	Lock Washer for 18404.....	35309-	143
27810	Cushion Spring, Short.....	30400-	141
27974	Compression Spring, Long.....	30400-	141
28531	Cam Member.....	35309-	142
IMPULSE STARTER—STATIONARY UNIT			
AD11	Stationary Unit, Complete.....	30400- 35308	141
AD303	Stationary Unit, Complete.....	35309- 81069	142
AD592	Stationary Unit, Complete.....	81070-	142
1212	Cover Screw, Bottom, with Lock Washer.....	35309-	142
1672	Lock Washer for 1212, 18609 and 3258.....	35309-	142
2139	Screw with Lock Washer, Pawl Stop.....	35309-	142
3033	Lock Washer for 2139.....	35309-	142
3040	Spring, Oil Cover.....	35309-	142
3258	Screw, for 18612 Clip.....	35309- 81069	142
8976	Flat Washer for 2139.....	35309-	142
13746	Lock Washer for 29529.....	35309-	142
16769	Screw, Impulse Starter Bracket to Magneto.....	30400- 35308	141
18605	Cover, Housing with Felt.....	35309-	142
18608	Felt Washer, Housing Cover.....	35309-	142
18609	Head Screw with Lock Washer, Top Cover Plate.....	35309-	142
18610	Pawl.....	35309-	142
18612	Clip, Magnet Cover.....	35309- 81069	142
18615	Plunger.....	35309-	142
18616	Pawl Pivot.....	35309-	142
18617	Spring, Plunger.....	35309-	142
18618	Plunger Washer.....	30400-	141
18619	Bearing, Plunger.....	35309-	142
18620	Plug, Opposite Plunger Bearing.....	35309-	142
18633	Pawl Lever, Complete.....	35309-	142
18644	Spacer, Pawl Lever.....	35309-	142
18656	Pawl Stop.....	35309-	142
18661	Pawl.....	30400- 35308	141
18662	Reinforcing Link.....	30400- 35308	142
18663	Plunger Fulcrum Pin.....	30400- 35308	142
18664	Pawl Stud.....	30400- 35308	142
18665	Spacing Collar.....	30400- 35308	142
18666	Cotter Key, for Fulcrum Pin.....	30400- 35308	142
18667	Pawl Plate.....	30400- 35308	141
18687	Plunger Spring.....	30400- 35308	141
18688	Plunger.....	30400- 35308	141
19124	Pin, Oil Cover.....	35309-	142
27421	Housing and Back Plate.....	35309- 81069	142
27981	Screw Plug, Inspection Hole.....	35309-	142
28527	Oil Cover with Felt.....	35309- 81069	142
29347	Lock Washer, Inspection Hole Screw Plug.....	35309-	142
29529	Cap Screw, Starter Housing to Magneto.....	35309-	141
50089	Housing and Back Plate.....	81070-	142
AD107 CARBURETOR			
AD107	Carburetor, Complete (Serial No. 30451 to 49773) (Except 605 Tractors, using AD287).....		143
P348	Butterfly (Choker) Disk.....		144
S82	Union Nipple.....		144
S83	Union Nut.....		144
S87	Lock Nut for Air Valve Adjusting Screw.....		144
S359	Float Lever Pin.....		144
S1121	Drain Cock.....		144
S1276	Throttle Shaft.....	30451- 31304	144
S1392	Throttle Shaft Bushing.....	30451- 31304	144
S1480	Throttle Shaft.....	31305- 49773	144
S1490	Throttle Shaft Bushing.....	31305- 49773	144
SI-18	Screw for Choker Disk.....		144
S29D	Spray Nozzle.....		144
WD322	Lid Casting.....		144
WD323	Throttle Casting.....	30451- 31304	144

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
AD107 CARBURETOR—Continued			
WD329	Air Valve Casting.....		144
WD330	Throttle Lever.....	30451- 31304	144
WD332	Throttle Casting.....	31305- 49773	144
WD333	Throttle Lever.....	31305- 49773	144
X100A	Choker Lever Assembly.....	30451- 43264	144
X1814	Throttle, Complete.....		143
X1882	Air Valve, Complete.....		143
X1940	Air Valve Leather Disk Assembly.....		144
BW	Bowl Casting.....		143
EW	Needle Valve with Packing Nut.....		144
FW	Cork Float.....		143
HW	Float Valve.....		144
JW	Float Lever.....		144
KW	Throttle Disk.....		144
MW	Air Valve Adjusting Screw.....		144
NW	Lid Cork Gasket.....		144
UW	Bowl Cap.....		144
XW	Needle Valve Connection.....		144
4W	Float Washer and Screw.....		144
5W	Throttle Casting Cap Screw.....		144
5W	Air Valve Casting Cap Screw.....		144
5W	Lid Casting Cap Screw.....		144
6W	Float Valve Retainer Nut.....		144
8W	Float Lever Bearing.....		144
10W	Throttle Clamp Screw.....		144
11W	Throttle Stop Adjusting Screw.....		144
12W	Throttle Stop.....	30451- 31304	144
15W	Throttle Shaft Collar.....	30451- 31304	144
16W	Throttle Lever Lock Nut.....	30451- 31304	144
17W	Throttle Stop Lock Screw.....	30451- 31304	144
17W	Throttle Shaft Collar Screw.....		144
20W	Air Valve Spring Washer.....		144
21W	Bowl Cap Cork Gasket.....		144
33W	Choker Lever and Shaft.....	43265- 49773	144
40W	Choker Shaft Spring.....		144
70W	Throttle Disk Screw.....		144
18-O	Throttle Stop Spring.....		144
18P	Air Valve Spring.....		144
321R	Gasket, Carburetor to Manifold.....		144
AD287 CARBURETOR			
AD287	Carburetor, Complete (Used on 605 Tractors between Serial No. 39907 and 46767).....		144
P348	Butterfly (Choker) Disk.....		144
S1490	Throttle Shaft Bushing.....		144
SI-18	Butterfly (Choker) Disk Screw.....		144
4W	Float Washer and Screw.....		144
6W	Float Valve Retainer Nut.....		144
10W	Throttle Clamp Screw.....		144
11W	Throttle Stop Adjusting Screw.....		144
17W	Throttle Shaft Collar Screw.....		144
17W	Throttle Stop Lock Screw.....		144
30W	Body Casting.....		144
31W	Throttle Lever Casting.....		144
33W	Choker Lever and Shaft.....		144
34W	High Speed or Load Needle Valve.....		144
35W	Low Speed or Idle Needle Valve.....		144
36W	Cork Float.....		144
37W	Float Lever.....		144
38W	Bowl Cap.....		144
39W	Float Valve.....		144
40W	Choker Shaft Spring.....		144
41W	Friction Ball.....		144
42W	Gasoline Inlet Elbow.....		144
43W	Drain Cock.....		144
44W	Float Lever Pin.....		144
45W	Plug Screw for Drill Hole.....		144
46W	Bowl Lock Nut.....		144
47W	Nozzle Retainer Plug.....		144
48W	Idle Plug.....		144

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
AD287 CARBURETOR—Continued			
49W	Float Lever Bearing Screw.....		144
50W	Dowel Pin.....		144
51W	Throttle Shaft.....		144
52W	Nozzle.....		144
55W	Throttle Disk.....		144
57W	Friction Ball Spring.....		144
58W	Bowl Cap Gasket.....		144
59W	Bowl Gasket.....		144
60W	Bowl Casting.....		144
70W	Throttle Disk Screw.....		144
18-O	Throttle Stop Spring.....		144
321R	Gasket, Carburetor to Manifold.....		144
AD411 CARBURETOR			
AD411	Carburetor, Complete.....	49774-109943	145
P348	Air Valve Choker Disk.....		145
S1121	Drain Cock.....		145
S1490	Throttle Shaft Bushing.....		144
SI-18	Air Valve Choker Disk Screw.....		145
4W	Float Washer and Screw.....		145
6W	Float Valve Retainer Nut.....		145
10W	Throttle Clamp Screw.....		145
11W	Throttle Stop Adjusting Screw.....		145
17W	Throttle Stop Lock Screw.....		145
17W	Throttle Shaft Collar Screw.....		145
31W	Throttle Lever Casting.....		145
33W	Choker Lever and Shaft.....		145
34W	High Speed or Load Needle Valve.....		145
35W	Low Speed or Idle Needle Valve.....		145
37W	Float Lever.....		145
38W	Bowl Cap.....		145
39W	Float Valve.....		145
40W	Choker Shaft Spring.....		145
41W	Friction Ball.....		145
42W	Gasoline Inlet Elbow.....		145
44W	Float Lever Pin.....		145
45W	Plug Screw for Drill Hole.....		145
46W	Bowl Lock Nut.....		145
48W	Idle Plug.....		145
49W	Float Lever Bearing Screw.....		145
51W	Throttle Shaft.....		145
52W	Nozzle.....		145
55W	Throttle Disk.....		145
57W	Friction Ball Spring.....		145
58W	Bowl Cap Gasket.....		145
60W	Bowl Casting.....		145
61W	Body Casting.....		145
63W	Choker Disk Screw Lock Washer.....		145
64W	Bowl Gasket.....		145
65W	Nozzle Retainer Spring.....		145
66W	Cork Float.....		145
70W	Throttle Disk Screw.....		145
18-O	Throttle Stop Spring.....		145
321R	Gasket, Carburetor to Manifold.....		145
AD830 CARBURETOR			
AD830	Carburetor, Complete.....	109944-	145
AD1330	Body with Bushings.....	128111-	145
B449	Bowl Casting.....	{126522-126599 126648-	145
B450	Nut, Bowl Retaining.....	{126522-126599 126648-	145
B451	Idle Plug.....	{126522-126599 126648-	145
B457	Gasket, Bowl.....	{126522-126599 126648-	145
C2500	Throttle Lever, Complete.....	115932-	145
C2501	Valve and Seat, Float.....	115932-	145
C2502	Shaft, Throttle.....	115932-	145
C2504	Bushing, Throttle Shaft, Upper.....	115932-	145
C2505	Bushing, Throttle Shaft, Lower.....	115932-128110	145

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
AD830 CARBURETOR—Continued			
C2507	Body with Bushing, Carburetor	115932-128110	145
D392	Bushing, Fuel Line		145
D2530	Bushing, Throttle Shaft, Lower	128111-	145
P348	Choker Disk		145
18-O	Spring, Throttle Stop Pin		145
SI-18	Screw, Choker Disk		145
S1121	Drain Cock		145
4W	Float Washer and Screw		145
10W	Clamp Screw, Throttle Lever Adjusting		145
17W	Retainer Screw, Throttle Lever and Bushing		145
41W	Friction Ball		145
45W	Screw Plug, Drilled Hole		145
46W	Nut, Bowl Retainer	{ 109944-126522 126599-126648 }	145
57W	Spring, Friction Ball		145
63W	Lock Washer, Choker Disk Screw		145
64W	Gasket, Bowl Retaining Nut	{ 109944-126522 126599-126648 }	145
65W	Spring, Nozzle Retainer		145
67W	Stop Pin, Throttle Lever		145
68W	Spring, Friction, Choker Lever		145
69W	Cork Float with Washer		145
70W	Screw, Throttle Disk		145
71W	Adjusting Screw, Throttle Lever		145
72W	Washer, Choker Lever Friction Spring		145
73W	Gasket, Float Valve Seat		145
74W	Washer, Choker Friction		145
75W	Lever, Float		145
76W	Disk, Throttle		145
77W	Gasket, Strainer		145
78W	Gasket, Bowl		145
79W	Pipe Plug, Hexagon Head		145
80W	Pipe Plug, Headless		145
81W	Lock Washer, Throttle Disk Screws		145
83W	Drill Plug, 7/32"		145
85W	Drill Plug, 1/4"		145
90W	Pin, Float Pivot		145
91W	Screw, Float Bearing		145
92W	Shaft, Throttle	109944-115931	145
94W	Screw, Choker Friction		145
96W	Bushing, Throttle Shaft	109944-115931	145
97W	Bowl Casting	{ 109944-126522 126599-126648 }	145
121W	Nozzle		145
123W	Idle Needle		145
X2458	Load Needle		145
X2460	Choker Lever and Shaft		145
X2462	Strainer, Complete		145
X2487	Throttle Lever and Bushing	109944-115931	145
321R	Gasket, Carburetor to Manifold		145
AIR CLEANER			
AD110	Air Cleaner, Complete with Elbow (Use with AD107 Carburetor)	30451- 49773	146
AD115	Filter Collar, Air Cleaner	30451-109943	146
AD202	Outlet Pipe, Complete (Use with AD107 Carburetor)	30451- 49773	146
AD288	Outlet Pipe, Complete (Use with AD287 Carburetor)		146
AD296	Air Cleaner, Complete with Elbow (Use with AD287 Carburetor)		146
AD414	Air Cleaner, Complete with Bracket	49774-109943	146
AD745	Cover Bail, Air Cleaner	109944-119099	146
AD775	Cover, D1913R, with Bail, Air Cleaner	109944-119099	146
AD827	Container, D1912R, with Filter Core Gasket	109944-119099	146
AD1002	Body, Air Cleaner	116273-119099	146
AD1003	Screen, Air Cleaner	116273-119099	146
AD1004	Core, Air Cleaner	116273-119099	146
AD1007	Core, Combination Air Cleaner	109944-116272	146
AD1218	Air Cleaner, Complete	119100-	146
AD1220	Body, Air Cleaner	119100-	146
AD1221	Cup, Air Cleaner	119100-	146
C1664	Gasket, Air Cleaner to Stack Elbow	106909-109943	146
C1827	Washer, Cup to Body Bolt	119100-	146

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
AIR CLEANER—Continued			
D491R	Bracket, Magneto and Air Cleaner	30451- 35308	146
D798R	Bracket, Magneto and Air Cleaner	35309-109943	146
D934	Washer, Felt Retainer, Air Cleaner, Outlet Pipe	42428- 49773	146
D1032R	Bracket, Air Cleaner (Use with AD411 Carburetor)	49774-109943	146
D1033R	Outlet Pipe, Air Cleaner to Carburetor	49774-109943	146
D1034	Gasket, Air Cleaner, Outlet Pipe to Carburetor	49774-109943	146
D1037	Gasket, Horizontal Twister and Inertia Cleaner to Air Cleaner	49774-109943	147
D1037	Gasket, Air Cleaner Outlet Pipe to Air Cleaner	49774-109943	147
D1040R	Flange, Air Cleaner Outlet	49774-109943	146
D1051	Gasket, Air Cleaner, Outlet Flange to Air Cleaner	49774-109943	146
D1414	Flange, Air Cleaner Screw Cap	30451-109943	146
D1415	Screw Cap, Air Cleaner, Filter Collar	30451-109943	146
D1513	Felt Washer, Air Cleaner, Filter Collar	30451-109943	146
D1744	Core, Filter, Air Cleaner	109944-116272	146
D1747	Gasket, Filter Core	109944-119099	146
D1748R	Hand Wheel, Bail Tightener	109944-119099	146
D1749	Bolt, Cover Swivel	109944-119099	146
D1790	Gasket, Air Cleaner to Carburetor	109944-	146
D1820	Rivet, Air Cleaner Bail to Cover	109944-119099	146
D1829	Gasket, Air Cleaner to Cylinder	109944-119099	146
D1914	Gasket, Auxiliary Air Cleaner Flange to Air Cleaner Body	109944-	147
D1914	Gasket, Air Cleaner Cover to Elbow	109944-	147
D1915	Tube, Ventilator Air Cleaner Cover	109944-113088	146
D2220	Retainer, Air Cleaner Screen	116273-119099	146
D2234	Plug, Air Cleaner Container	109944-116272	146
D2237	Plug, Air Cleaner Cover	109944-119099	146
D2375R	Support, Air Cleaner	119100-	146
D2376R	Bracket, Air Cleaner Support	119100-	146
D2377	Gasket, Air Cleaner	119100-	146
D2378	Bolt, Cup Retaining	119100-	146
D2379	Wing Nut, Cup Retaining	119100-	146
K3151	Washer, Air Cleaner Cover Pin	109944-	146
27R	Washer, Air Cleaner Clamp Bolt	109944-	146
1077R	Felt Washer, Outlet Pipe Flange	31280- 49973	146
1563R	Pin, Air Cleaner Cover to Body (Drilled)	109944-119099	146
AUXILIARY AIR CLEANER AND AIR STACK			
AC799	Auxiliary Air Cleaner	109944-	147
AD119	Air Stack 13-1/4" Long (Use with AD107 Carburetor)	30451-109943	147
AD297	Air Stack, 17-1/4" Long (Use with AD287 Carburetor)		147
AD343	Auxiliary Air Cleaner, Complete	30451-109943	147
AD465	Horizontal Twister Air Cleaner, Complete	49774-109943	147
AD825	Auxiliary Air Cleaner, Complete	109944-	147
C2007R	Elbow, Auxiliary Air Cleaner	109944-	147
D492R	Elbow, Air Stack (Use with AD107 Carburetor)	30451- 49773	147
D778	Air Stack Extension	30451-109943	147
D819R	Elbow, Air Stack (Use with AD287 Carburetor)		147
D931	Drain Cap, Horizontal Auxiliary Air Cleaner	49774-109943	147
D1036R	Flange, Horizontal Twister Air Cleaner	49774-109943	147
D1037	Gasket, Horizontal Twister and Inertia Air Cleaner to Air Cleaner	49779-109943	147
D1093R	Elbow, Vertical Auxiliary Air Cleaner	49774-109943	147
1454R	Drain Plug, 1" Horizontal and Vertical Auxiliary Air Cleaners	109944-	147
TOOL BOX AND TOOLS			
AD840	Tool Box	30400-	116
D510	Flywheel Wedge	30400- 53387	116
D586	Gauge, Magneto Breaker Contact Point	30400-	116
D1083	Socket Wrench for Connecting Rod and Main Bearing Nut	30400-	116
D2063	Lug Bolt Wrench	30400-	116
D2064	Flywheel Bolt Wrench	30400-	116
JD7751	Grease Gun, Alemite Model No. 6556 (Purchase locally)	95900-	116
REPAIRS FOR AD307 POWER SHAFT			
AD308	Gear with Hub, Spiral Drive		148
AD309	Guard, Power Shaft		148
AD312	Shaft, Power		148
D139	Washer, Spiral Drive Gear		148
D297	Gasket, Rear Support Cover		148
D382	Key, Spiral Drive Gear		148

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REPAIRS FOR AD307 POWER SHAFT—Continued			
D677	Gasket, Housing to Case.....		148
D733R	Support, Steering and Power Shaft.....		148
D748R	Cover, Rear Support.....		148
D751R	Housing, Upper Bearing.....		148
D752R	Clamp Ring, Upper Bearing Housing.....		148
D753R	Lever, Throw-Out.....		148
D755R	Housing.....		148
D759R	Cover, Housing.....		148
D825	Felt Washer, Rear Support and Cover.....		148
D826	Felt Retainer, Rear Bearing.....		148
D845	Key, Spiral Driven Gear.....		148
D846	Collar, Ball Bearing.....		148
D847	Gear, Spiral Driven.....		148
D848	Washer, Guard Reinforcing.....		148
D852R	Hub, Spiral Drive Gear.....		148
D853	Snap Ring, Upper Bearing.....		148
D854	Ball Bearing, Rear Support.....		148
D866	Gasket, Housing Cover.....		148
D1098	Washer, Oil Retainer.....		148
E2142	Filler Plug, Housing.....		148
JD7003	Grease Cup, 1/8" Rear Support.....		148
JD7164	Ball Bearing, Upper Housing.....		148
1077R	Felt Washer, Upper Housing.....		148
POWER SHAFT CONTROL LEVER EXTENSION FOR AD350			
D316	Washer, Lever Rod.....	31280-	148
D980R	Lever, Throw-Out.....	31280-109943	148
D1595	Bracket, Throw-Out Rod.....	31280-109943	148
D1668	Rod, Lever, Throw-Out.....	31280-109943	148
REPAIRS FOR AD350 HEAVY DUTY POWER SHAFT			
Heavy Duty Power Shaft (Exception: By installing AD385 Spline Shaft, AD350 Power Shaft can be used on Serial No. 31280 to 46904) .		46905-109943	
AD379	Housing, Power Shaft, D985R, with Bushing.....		148
AD410	Collar, Front Bearing, Complete with Screws.....		148
D677	Gasket, Housing to Case (2 used).....		148
D827	Washer, under Lay Shaft Nuts.....		148
D971	Shaft, Shift Fork.....		148
D972	Shaft, Lay.....		148
D973	Shaft, Power.....		148
D974	Cover Plate, Housing.....		148
D975	Lock Nut Plate, Thrust Bearing Nut.....		148
D977	Bushing, Shift Lever.....		148
D978	Felt Retainer, Front and Rear Bearing.....		148
D979R	Lever, Shift.....		148
D980R	Lever, Hand Throw-Out.....		148
D981	Pinion, Bevel.....		148
D982	Gear, Spur, Lay Shaft.....		148
D983	Gear, Bevel.....		148
D984	Gear, Sliding.....		148
D986R	Cover, Lay Shaft Bearings.....		148
D987R	Cover, Rear Power Shaft Bearing.....		148
D988R	Cover, Front Power Shaft Bearing.....		148
D989R	Nut, Adjusting, Thrust Bearing.....		148
D990R	Bracket, Rear Bearing.....		148
D991R	Fork, Gear Shift.....		148
D992	Cap Screw, Special Socket Head, Housing To Case.....		148
D993	Spring, Gear Shift Fork.....		148
D995	Spacer, Gear.....		148
D996	Felt Washer, Front Bearing.....		148
D997	Felt Washer, Rear Bearing.....		148
D999	Thrust Bearing, Complete, Bevel Gear.....		148
D1000	Gasket, Thin, Lay Shaft Bearing Cover.....		148
D1001	Gasket, Thick, Lay Shaft Bearing Cover.....		148
D1002	Gasket, Housing Cover Plate.....		148
D1017	Bolt Plate, Rear Bracket.....		148
D1018	Guard, Universal Joint.....		148
D1022	Wrench, for Special Socket Head Cap Screw.....		148
D1031	Gasket, Front Bearing Cover.....		148

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REPAIRS FOR AD350 HEAVY DUTY POWER SHAFT—Continued			
D1663	Spacer, Power Shaft (Housing to Main Case)		148
E2142	Plug, Oil Filter and Drain		148
JD7003	Grease Cup, 1/8"		148
JD7210	Cone with Rollers, Lay Shaft Bearing		148
JD7260	Cup, Lay Shaft Bearing		148
JD7490	Outer Race, Bevel Gear Bearing		148
JD7540	Roller Assembly, Bevel Gear Bearing		148
JD7670	Bearing, Complete, Front and Rear, Power Shaft		148
405R	Ball, Shift Fork		148
REPAIRS FOR AD780 POWER SHAFT			
AD867	Universal Joint Guard Power Shaft	109944-	147
AD876	Bearing Collar Halves with Screws		147
C1038	Washer, Plain, Guard to Bracket, Upper Bolts, Control Lever		147
C1439	Washer, Oil Seal, Cork, Power Shaft Shifter		147
D993	Spring, Shift Fork Lock, Power Shaft		147
D1247	Gasket, Rear, Power Shaft Opening Cover		147
D1324	Nut, Spindle (Special) Power Shaft		147
D1330	Shim, Power Shaft Spindle (16 Halves)		147
D1332	Shim, Power Shaft Quill Bearing Adjusting Cover (Steel)		147
D1385	Shim, Bearing Cage, Thick (6)		147
D1386	Shim, Bearing Cage, Thin (4)		147
D1740	Gasket, Side, Power Shaft Cover		147
D1830	Power Shaft		147
D1831R	Shift Fork, Power Shaft		147
D1832R	Gear, Drive, Power Shaft		147
D1833	Shifter, Power Shaft		147
D1834	Spindle, Power Shaft		147
D1835	Gear, Bevel, Power Shaft		147
D1836	Gear, Idler, Power Shaft		147
D1840R	Housing, Power Shaft		147
D1841	Lock Nut, Bevel Gear, Power Shaft		147
D1842	Lock Washer, Bevel Gear, Power Shaft		147
D1843	Cap Screw, Bevel Gear Lock Nut (Drilled Head)		147
D1844R	Cage, Bearing, Power Shaft		147
D1847	Shift Shaft, Power Shaft		147
D1849R	Shift Lever, Power Shaft		147
D1857R	Cover, Rear Bearing, Power Shaft		147
D1858R	Quill, Power Shaft, Rear		147
D2036	Bracket, Guard, Power Shaft, Control Lever		147
D2037	Shim, Quill Bearing, Adjusting Cover, Power Shaft (Paper)		147
D2038	Screw, Collar, Power Shaft, 5/16"x1-3/8"		147
D2039	Lever, Hand Control, Power Shaft		147
D2040	Rod, Control, Power Shaft, Control Lever		147
E2207	Key, Woodruff, Shifter to Lever		147
JD7207	Cone, with Rollers, Quill		147
JD7214	Cone, with Rollers, Idler Gear, Inner		147
JD7231	Cone, with Rollers, Bevel Gear, Rear		147
JD7262	Cup, Quill		147
JD7282	Cup, Bevel Gear, Rear		147
JD7297	Cup, Bevel Gear, Front		147
JD7350	Cone, with Rollers, Bevel Gear, Front		147
JD7351	Cone, with Rollers, Idler Gear, Outer (Long Cone)		147
JD7759	Alemite Zerk Fitting, Power Shaft Quill, Alemite Model 1610 (Purchase locally)		147
405R	Ball, Shift Fork		147
1450R	Pipe Plug, Spindle, Power Shaft, 1/4"		147
"DI" POWER CONTROL			
A572	Snap Ring, Power Control, Drive Shaft Pinion	TP100-	149
A676	Key, Pinion	TP100-	149
A676	Key, Clutch Shaft	TP100-	149
A676	Key, Countershaft	TP100-	149
AD1288	Housing Cover with Bushings, Power Control	TP100-	149
AD1293	Gear with Bushing, Clutch	TP100-	149
AD1294	Sprocket, with Bushing, Clutch	TP100-	149
AD1296	Chain, Power Control, Reverse Drive	TP100-	149
AD1298	Frame, Side Seat	TP100-	138
AD1299	Cushion, Side Seat	TP100-	138

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
"DI" POWER CONTROL—Continued			
AD1300	Clutch Lever with Extension.....	TP100—	149
AD1325	Guard, Power Control.....	TP100—	149
AD1327	Oil Seal, Clutch Shaft.....	TP100—	149
AD1333	Housing with Bushing and Plug, Power Control.....	TP100—	149
D2469	Gasket, Power Control Housing.....	TP100—	149
D2470	Drive Shaft, Power Control.....	TP100—	149
D2471	Pinion, Power Control, Drive.....	TP100—	149
D2472	Clip, Power Control Bearing Retainer.....	TP100—	149
D2473	Countershaft, Power Control.....	TP100—	149
D2474	Pinion, Countershaft, Power Control.....	TP100—	149
D2475	Sprocket, Countershaft, Power Control.....	TP100—	149
D2476	Gear, Countershaft, Power Control.....	TP100—	149
D2477	Shaft, Clutch Shifter, Power Control.....	TP100—	149
D2478	Pin, Shifter to Shifter Shaft.....	TP100—	149
D2480	Shifter, Long, Clutch.....	TP100—	149
D2486	Block, Platform Spacer.....	TP100—	149
D2487	Bracket, Control Lever.....	TP100—	149
D2488	Lever, Control.....	TP100—	149
D2489	Link, Control Lever.....	TP100—	149
D2490	Pivot, Control Lever.....	TP100—	149
D2491	Washer, Control Lever Pivot.....	TP100—	149
D2493	Lever, Long, Throttle.....	TP100—	149
D2495	Bracket, Side Seat.....	TP100—	138
PURCHASE FROM "CATERPILLAR" TRACTOR COMPANY, PEORIA, ILLINOIS			
		Their Number	
D2518	Shifter, Short, Clutch.....	1A6260	TP100— 149
D2520	Shaft, Clutch.....	1A6256	TP100— 149
D2521	Washer, Clutch Shaft.....	1A4512	TP100— 149
D2522	Clutch, Sliding.....	1A6264	TP100— 149
D2523	Spring, Shifter Lock.....	1B1983	TP100— 149
D2527	Bushing, Power Control Housing, Short.....	1A6292	TP100— 149
D2527	Bushing, Power Control Housing Cover, Short.....	1A6292	TP100— 149
D2528	Bushing, Power Control Housing Cover, Long.....	1A6291	TP100— 149
D2529	Bushing, First Clutch Gear.....	1A6288	TP100— 149
D2529	Bushing, Second Clutch Sprocket.....	1A6288	TP100— 149
E1976	Pipe Plug, Shifter Lock Opening, 3/8".....	TP100—	149
E2207	Key, Power Shaft Shifter Lever.....	TP100—	149
JD7214	Cone, with Rollers, Power Shaft Idler Gear (Inner).....	TP100—	149
JD7231	Bearing Cone, Rear, Power Shaft, Bevel Gear.....	TP100—	149
JD7282	Bearing Cup, Rear, Power Shaft, Bevel Gear.....	TP100—	149
JD7297	Bearing Cup, Front, Power Shaft, Bevel Gear.....	TP100—	149
JD7350	Bearing Cone, Front, Power Shaft, Bevel Gear.....	TP100—	149
JD7351	Cone and Roller, Outer Bearing Power Shaft, Idler Gear.....	TP100—	149
JD7664	Bearing, Power Control, Drive Shaft.....	TP100—	149
92R	Washer, Power Shifter, 25/32" Inside Diameter.....	TP100—	149
405R	Ball, Shift Fork, 3/8".....	TP100—	149
629R	Washer, Control Lever Link, 3/8"x7/8".....	TP100—	149
1452R	Pipe Plug, Oil Hole, 1/2".....	TP100—	149
LIGHTING EQUIPMENT			
A1225	Clip, Cable.....	35309—	150
AA832	Lamp, Complete.....		150
AA835	Double Contact Plug and Cap.....		150
AA862	Split Pulley, Complete.....		150
AD862	Trouble Light, Socket, Complete.....		150
D603	Lock Washer, Lens Holder Screw.....		150
D1100	Bracket, Lamp.....		150
D1101	Spring, Lamp Bracket.....		150
D1102	Washer, Lamp Bracket.....		150
D1108	Light Bulb, DC 9V—27 CP.....		150
D1112	Bracket, Generator.....		150
D1114	Screw in Split Pulley.....		150

REPAIRS FOR MODELS D AND DI TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
LIGHTING EQUIPMENT—Continued			
D1116	Strap, Cable Clip.....		150
D1117	Cable, Complete, for Lighting Outfit.....		150
D1120	Leather Belt with Clipper Hooks.....		150
D2139	Bracket, Lamp Mounting.....		150
D2141	Moulding, Lamp.....		150
D2142	Reflector, Lamp.....		150
D2143	Wiring, Lamp.....		150
D2144	Body, Lamp.....		150
D2145	Clip, Lamp Holder.....		150
D2146	Cork Washer, Lamp.....		150
D2147	Lens, Lamp.....		150
D2148	Spring, Lens Retaining.....		150
D2149	Moulding Screw.....		150
E2057	Cable Clip Strap Screw Washer.....		150
E2064	Screw, Cable Clip Strap.....		150
E2094	Nut, Lens Holder Screw.....		150
1383R	Belt Clipper Hooks.....		150
2364R	Rawhide Pin, Belt Connection.....		150
2490R	Screw, Lens Holder.....		150
AD479 GENERATOR			
D1124	Annular Bearing (Ball Bearing).....		150
D1125	Oil Cups in Annular End Piece.....		150
D1126	Rotor Cover (Case).....		150
D1127	Bracket Cushion Springs.....		150
D1128	Stem Binding Post, Long.....		150
D1129	Stem Binding Post, Short.....		150
D1130	Pole Case.....		150
D1131	Magnet Clamp.....		150
D1132	Annular End Piece Collar (Distributor End).....		150
D1133	Rotor Shaft Adjusting Nut.....		150
D1134	Rotor Shaft.....		150
D1135	Binding Post.....		150
D1136	Fibre Bridge (Drilled).....		150
D1137	Fibre Binding Post Mount.....		150
D1138	Stem Binding Post Lock Nut.....		150
D1140	Binding Post Washers.....		150
D1141	Fibre Bridge Screw, 6-32x1" Round Head (Brass).....		150
D1142	Annular End Piece Upper Hole Screws, 12-24x1/2" Fillister Head.....		150
D1143	Annular End Piece Lower Hole Screws, 12-24x7/16" Fillister Head.....		150
D1145	Fibre Binding Post Mount Screw, 8-32x1/2" Fillister Head.....		150
D1146	Pole Case End Screws, 8-32x1/4" Fillister Head.....		150
D1147	Pole Case Center Screws, 6-32x1/4" Fillister Head.....		150
D1148	Magnet Clamp Upper Screws, 12-24x3/8" Fillister Head.....		150
D1149	Magnet Clamp Lower Screws, 12-24x1-1/8" Fillister Head.....		150
D1150	Rotor Cover Screw (Pointed) 10-32x7/16", Headless.....		150
D1151	Bracket Clamp Screws, 12-24x5/8" Fillister Head.....		150
D1151	Bracket, Top Upper Hole Screws.....		150
D1152	Bracket, Top Lower Hole Screws, 12-24x1-3/8" Fillister Head.....		150
D1153	Magnet.....		150
D1154	Pole Piece, Complete.....		150
D1155	Rotor Shaft Washer.....		150
D1156	Bracket Clamp.....		150
D1157	Taper Hole Belt Pulley.....		150
D1158	Key, in Taper Hole Belt Pulley.....		150
D1159	Winding "A" Special.....		150
D1160	Shaft, Bracket.....		150
D1161	Bracket Top.....		150
D1666	Annular End Piece (Plain).....		150
D1667	Annular End Piece.....		150
PREST-O-LITE GAS LIGHTING UNIT			
AC579	Complete Units and Repair Parts are to be Ordered Direct from Prest-O-Lite Co., Inc., Indianapolis, Indiana. Billings are Direct from Manufacturer to Branch House.		

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS					
C806	A515	Oil Filter Body to Head.....	5/16"x9/16"	3
1671R	AC119	Hub Cap to Front Wheel.....	3/8"x1-1/4"	3
D328	AD32	Right Main Bearing to Case (Drilled).....	1/2"x1"	6
1683R	AD33	Left Main Bearing to Case.....	1/2"x1-1/4"	6
1667R	AD84	Tappet Lever Oilier Pipe to Case.....	5/16"x1"	1
1670R	AD107	Carburetor to Manifold.....	3/8"x1"	2
1669R	AD166	Magneto to Bracket.....	3/8"x3/4"	3
1671R	AD179	Tappet Lever Clamp Screw.....	3/8"x1-1/4"	4
1669R	AD220	Rear Fan Bearing Housing to Governor Case.....	3/8"x3/4"	3
1670R	AD221	Front Fan Bearing Cover to Water Pipe.....	3/8"x1"	2
1684R	AD222	Upper Water Pipe to Radiator.....	1/2"x1-1/2"	2
1670R	AD287	Carburetor to Manifold.....	3/8"x1"	2
1669R	AD295	Magneto to Bracket.....	3/8"x3/4"	3
1669R	AD300	Governor Case to Main Case.....	3/8"x3/4"	8
1688R	AD308	Power Shaft Gear to Spline Shaft.....	3/4"x1-3/4"	1
D901	AD342	Seat Spring and Leaf to Case.....	3/4"x2-1/4"	1
D916	AD352	Dust Shield to Gear Cover (Drilled).....	3/8"x3/4"	4
D941	AD365	Drawbar to Case, Front, (Serial No. 46457 and Up).....	1"x1-1/2"	2
D508	AD365	Drawbar to Case, Rear, (Serial No. 46457 and Up).....	3/4"x1-1/2"	2
D992	AD379	Power Shaft Housing to Case (Special Head).....	1/2"x1-1/2"	4
D942	AD380	Clutch Driving Disk Clamp Screw.....	5/8"x2-1/4"	2
D333	AD380	Clutch Driving Disk to Crankshaft.....	3/4"x1-1/4"	1
1684R	AD393	Upper Water Pipe to Radiator.....	1/2"x1-1/2"	2
1686R	AD401	Rear Axle Lock Nut Clamp Screw.....	1/2"x2-1/2"	1
D1029	AD408	Right Bracket to Case, Front.....	1"x1-3/4"	1
D1029	AD409	Left Bracket to Case, Front.....	1"x1-3/4"	1
1670R	AD411	Carburetor to Manifold.....	3/8"x1"	2
1682R	AD415	Inertia Cleaner to Air Cleaner.....	1/2"x1"	2
1671R	AD452	Front Wheel Bearing Nut Clamp Screw.....	3/8"x1-1/4"	1
1669R	AD453	Oil Indicator Body to Case.....	3/8"x3/4"	2
1682R	AD465	Horizontal Twister Cleaner to Air Cleaner.....	1/2"x1"	2
1684R	AD466	Tappet Case to Cylinder Head.....	1/2"x1-1/2"	2
D901	AD474	Seat Spring and Leaf to Case.....	3/4"x2-1/4"	1
D466	AD543	Front Bracket to Water Pipe.....	1/2"x3/4"	1
1682R	AD544	Rear Bracket to Governor Case.....	1/2"x1"	2
1684R	AD545	Upper Water Pipe to Radiator.....	1/2"x1-1/2"	2
D328	AD703	R. H. Main Bearing to Case (Drilled).....	1/2"x1"	6
1683R	AD733	L. H. Main Bearing to Case.....	1/2"x1-1/4"	6
D1564	AD749	Clutch Driving Disk (Fixed) Clamp Screws.....	5/8"x2-1/2"	2
D901	AD758	Seat Spring and Leaf to Case.....	3/4"x2-1/4"	1
1669R	AD796	Rear Fan Shaft Bearing to Governor Case.....	3/8"x3/4"	3
1683R	AD801	Steering Worm Housing to Steering Gear Housing.....	1/2"x1-1/4"	4
1684R	AD823	Muffler and Spark Arrester to Manifold.....	1/2"x1-1/2"	4
1671R	AD827	Air Cleaner Container to Carburetor.....	3/8"x1-1/4"	2
D475	AD827	Air Cleaner Container to Cylinder.....	5/8"x1-1/2"	1
1670R	AD830	Carburetor to Manifold.....	3/8"x1"	2
1683R	AD843	L. H. Front Dust Shield Support to Main Bearing Housing.....	1/2"x1-1/4"	1
1684R	AD860	Upper Water Pipe to Radiator.....	1/2"x1-1/2"	2
E2290	AD883	Oil Filter Body and Base to Case.....	3/8"x2-1/2"	2
C806	AD1022	Fan Shroud to Radiator.....	5/16"x9/16"	4
1688R	AD1054	Crank Case to Rear Cross Sill.....	3/4"x1-3/4"	4
E2290	AD1218	Air Cleaner to Bracket.....	3/8"x2-1/2"	4
1683R	AD1288	Power Control Cover to Housing.....	1/2"x1-1/4"	7
D1564	AD1333	Offset Radius Rod to Radius Rod Pivot.....	5/8"x2-1/2"	2
A313	AD1333	Power Control Housing to Case.....	5/8"x1-3/4"	3
B562	AD1475	Power Control Housing to Platform Support.....	5/8"x2-3/4"	1
1682R	D4R	Front Cover to Case.....	1/2"x1"	6
1682R	D5R	Rear Cover to Case (Grey Iron).....	1/2"x1"	6
D466	D5R	Rear Cover to Case (Steel).....	1/2"x3/4"	6
1683R	D6R	Cam Shaft Bearing to Case.....	1/2"x1-1/4"	4
1684R	D9R	Steering Shaft Bearing to Case.....	1/2"x1-1/2"	2
1669R	D10R	R. H. Governor Bearing Housing to Governor Case.....	3/8"x3/4"	3
1669R	D11R	L. H. Governor Bearing Housing to Governor Case.....	3/8"x3/4"	3
1674R	D12R	Clutch Fork Bearing to Gear Cover.....	3/8"x1-3/4"	4
1670R	D14R	Oil Pump Body to Case.....	3/8"x1"	4
1669R	D15R	Oil Indicator Body to Case.....	3/8"x3/4"	2
1671R	D24R	Tappet Case Cover to Tappet Case.....	3/8"x1-1/4"	6
1670R	D26R	L. H. Main Bearing Cover to Main Bearing.....	3/8"x1"	3

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS—Continued					
1683R	D28R	Pulley and Spline Gear Cover to Case.....	1/2"x1-1/4"	9
1670R	D29R	Oil Pump Gear Cover to Oil Pump.....	3/8"x1"	2
D333	D30R	Clutch Driving Disk to Crankshaft.....	3/4"x1-1/4"	1
D474	D32R	Radiator Elbow to Cylinder Head.....	1/2"x1-3/4"	4
1683R	D49R	Differential Quill to Case.....	1/2"x1-1/4"	7
D474	D49R	L. H. Differential Quill to Case (See D664R).....	1/2"x1-3/4"	1
1683R	D49R	Differential Quill to Case.....	1/2"x1-1/4"	8
C1096	D50R	R. H. Spline Quill to Case (Drilled).....	1/2"x1"	4
1683R	D51R	L. H. Spline Quill to Case.....	1/2"x1-1/4"	4
D475	D78R	Fender Bracket to Case.....	5/8"x1-1/2"	4
1669R	D127	Dust Shield to Gear Cover.....	3/8"x3/4"	4
D328	D140	Outer Thrust Washer to Differential Shaft (Drilled).....	1/2"x1"	4
D333	D141	Washer to Crankshaft.....	3/4"x1-1/4"	1
1671R	D169	Tappet Lever Socket to Tappet Lever.....	3/8"x1-1/4"	1
1683R	D208R	Gear Shift Gate to Case.....	1/2"x1-1/4"	2
1683R	D224	Clutch Operating Rod Clip to Case.....	1/2"x1-1/4"	1
1671R	D244	Shift Fork Shaft End.....	3/8"x1-1/4"	1
1682R	D252	Rear Tank Bracket to Governor Case.....	1/2"x1"	2
D466	D253	Front Tank Bracket to Pipe (Serial No. 43724 and up).....	1/2"x3/4"	1
D508	D256	Drawbar to Case.....	3/4"x1-1/2"	4
D474	D266	Quadrant to Case.....	1/2"x1-3/4"	2
1684R	D281R	Tappet Case to Cylinder Head.....	1/2"x1-1/2"	2
1674R	D485	Steering Worm Cover to Axle.....	3/8"x1-3/4"	3
1670R	D491R	Magneto Bracket to Case.....	3/8"x1"	3
D508	D647	Drawbar to Case (Serial No. 31280 to 46456).....	3/4"x1-1/2"	4
D508	D648	Platform Support to Case.....	3/4"x1-1/2"	2
D508	D649	Platform Support to Case.....	3/4"x1-1/2"	2
D916	D650	Dust Shield to Gear Cover (Drilled).....	3/8"x3/4"	4
1684R	D663R	Upper Steering Shaft Bearing to Case.....	1/2"x1-1/2"	2
D474	D664R	Lower Steering Shaft Bearing to Case.....	1/2"x1-3/4"	1
1671R	D671	Shift Fork Shaft End.....	3/8"x1-1/4"	1
C1096	D673	R. H. Spline Quill to Case (Drilled).....	1/2"x1-1/4"	4
D466	D674	L. H. Spline Cover to Case.....	1/2"x3/4"	4
1683R	D676R	Pulley and Spline Gear Cover to Case.....	1/2"x1-1/4"	9
1683R	D710	Citrus Grove Fender Braces to Case.....	1/2"x1-1/4"	2
1684R	D733R	Steering Shaft and Power Shaft Support to Case.....	1/2"x1-1/2"	1
1672R	D748R	Cover to Steering Shaft and Power Shaft Support.....	3/8"x1-1/2"	3
1683R	D752R	Clamp Ring to Bearing Housing.....	1/2"x1-1/4"	2
1667R	D753R	Throw Out Lever to Bearing Housing.....	5/16"x1"	2
1684R	D755R	Housing, to Case Power Shaft.....	1/2"x1-1/2"	4
1683R	D759	Cover to Housing Power Shaft.....	1/2"x1-1/4"	4
1684R	D768R	Steering Segment Cover to Axle.....	1/2"x1-1-2"	1
1670R	D798R	Magneto Bracket to Case.....	3/8"x1"	3
1688R	D804	R. H. Bracket to Case.....	3/4"x1-3/4"	1
1688R	D805	L. H. Bracket to Case.....	3/4"x1-3/4"	1
1669R	D815R	Oil Indicator Body to Case.....	3/8"x3/4"	2
1669R	D824R	R. H. Governor Bearing Housing to Case.....	3/8"x3/4"	3
1670R	D831	L. H. Governor Bearing Cover to Case.....	3/8"x1"	3
D333	D834R	Clutch Driving Disk to Crankshaft.....	3/4"x1-1/4"	1
D466	D836	Front Cover Strap to Case.....	1/2"x3/4"	2
D466	D837	Front Cover to Case.....	1/2"x3/4"	8
1683R	D914R	Pulley and Spline Gear Cover to Case.....	1/2"x1-1/4"	9
1683R	D929R	Spark Arrester Flange to Elbow.....	1/2"x1-1/4"	2
D466	D951	L. H. Spline Shaft Cover to Case.....	1/2"x3/4"	4
E2095	D974	Cover Plate to Power Shaft Housing.....	1/4"x1/2"	9
E2095	D975	Lock Nut Plate to Power Shaft Housing.....	1/4"x1/2"	1
1671R	D980R	Hand Throw Out Lever to Shift Lever.....	3/8"x1-1/4"	1
1670R	D986R	Lay Shaft Bearing Cover to Housing.....	3/8"x1"	3
1670R	D987R	Rear Bearing Cover to Bracket.....	3/8"x1"	3
1670R	D988R	Front Bearing Cover to Housing.....	3/8"x1"	3
D475	D1003	Fender Bracket to Case.....	5/8"x1-1/2"	2
1671R	D1033R	Air Cleaner Outlet Pipe to Carburetor.....	3/8"x1-1/4"	2
1682R	D1033R	Air Cleaner Outlet Pipe to Air Cleaner.....	1/2"x1"	2
1670R	D1054R	L. H. Main Bearing Cover to Main Bearing.....	3/8"x1"	3
1682R	D1093R	Auxiliary Air Cleaner Elbow to Air Cleaner.....	1/2"x1"	2
D1088	D1246	Rear Power Shaft Opening Cover to Case.....	5/8"x3/4"	4
1674R	D1342R	Clutch Fork Bearing to Gear Cover.....	3/8"x1-3/4"	4
1669R	D1563	Tappet Case Cover to Tappet Case.....	3/8"x3/4"	6
1683R	D1595	Power Shaft Bracket to Case.....	1/2"x1-1/4"	1

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS—Continued					
D1029	D1609	Drawbar Bracket to Case	1"x1-3/4"	2
1669R	D1690R	Governor Case to Main Case	3/8"x3/4"	7
1674R	D1690R	Governor Case to Main Case	3/8"x1-3/4"	1
1670R	D1695R	R. H. Governor Bearing Housing to Case	3/8"x1"	3
1669R	D1733	Magneto Bracket to Case	3/8"x3/4"	3
D466	D1739	Power Shaft Opening Cover to Case	1/2"x3/4"	8
1682R	D1739	Power Shaft Opening Cover to Case	1/2"x1"	1
1671R	D1774	Shift Shaft End to Case	3/8"x1-1/4"	1
D459	D1778R	Dust Shield to Gear Cover (Drilled)	3/8"x1"	4
D941	D1779	Drawbar to Case (Front)	1"x1-1/2"	2
D474	D1781R	Gear Shift Quadrant to Case	1/2"x1-3/4"	2
1670R	D1783	Left Main Bearing Cover to Bearing Housing	3/8"x1"	6
D508	D1798	Platform Support to Case, R. H. and L. H.	3/4"x1-1/2"	4
1683R	D1834R	Spindle to Housing, Power Shaft	1/2"x1-1/4"	2
1683R	D1840R	Housing to Main Case, Power Shaft	1/2"x1-1/4"	7
E2152	D1840R	Housing to Main Case, Power Shaft	1/2"x2-1/4"	2
D1843	D1841	Lock Nut, Bevel Gear to Cage, Power Shaft (Drilled)	5/16"x1"	2
D459	D1844R	Bearing Cage to Housing, Power Shaft (Drilled)	3/8"x1"	4
1672R	D1849R	In Shifter Lever, Power Shaft	3/8"x1-1/2"	1
D475	D1858R	Quill to Main Case, Power Shaft	5/8"x1-1/2"	4
1669R	D1866	Front Fan Bearing Housing Cover to Upper Water Pipe	3/8"x3/4"	2
D466	D1867	Rear Transmission Cover to Case	1/2"x3/4"	12
D474	D1876	Steering Shaft Support to Case	1/2"x1-3/4"	2
D474	D1899R	Gear Shift Quadrant to Case	1/2"x1-3/4"	2
1683R	D1909R	Pulley and Spline Gear Cover to Case	1/2"x1-1/4"	8
1684R	D1909R	Pulley and Spline Gear Cover to Case	1/2"x1-1/2"	1
D466	D1910	Transmission Front Cover to Case	1/2"x3/4"	8
D916	D1962	Governor Lever Shaft Support to Governor Case (Drilled)	3/8"x3/4"	1
1672R	D1987R	Oil Filter Body to Base	3/8"x1-1/2"	2
1670R	D1989R	Oil Filter Head to Body	3/8"x1"	4
D941	D2030	Drawbar to Case (Front)	1"x1-1/2"	2
D2032	D2033R	Throttle and Spark Lever Adjusting Screw	3/16"x2"	1
D2067	D2033R	Throttle Control Lever Adjusting Screw	5/16"x2-1/4"	1
1672R	D2036	Bracket to Quill, Power Shaft	3/8"x1-1/2"	3
1683R	D2162R	Clutch Fork Cover to Cover	1/2"x1-1/4"	6
1671R	D2173R	Control Quadrant to Case	3/8"x1-1/4"	2
1670R	D2191R	L. H. Governor Bearing Housing and Fuel Pump Bracket to Case	3/8"x1"	2
D2317	D2191R	L. H. Governor Bearing Housing and Fuel Pump Bracket to Case	3/8"x3-1/4"	1
1670R	D2275R	Oil Indicator Body to Case	3/8"x1"	2
1671R	D2265R	Water Pump Cover to Body	3/8"x1-1/4"	6
D474	D2300R	Water Inlet Manifold to Cylinder Head	1/2"x1-3/4"	4
1676R	D2305R	Oil Filter Base to Case	7/16"x1-1/4"	4
D474	D2359	Steering Shaft Support to Case	1/2"x1-3/4"	2
D2614	D2410R	Torque Brace, Washer Plate to Transmission Case	3/4"x2-1/2"	6
1669R	D2547	Timing Plate to Flange	3/8"x3/4"	2
1686R	D2615	Overpulley to Hub	1/2"x2-1/2"	6
1624R	132R	Brake Control Bracket to Fender Bracket	1/2"x2"	1
2234R	All Over-pulleys	Seat Pivot Bearing to Seat Bracket	1/2"x1-3/4"	1
SET SCREWS—CUP POINT					
1786R	AD25	Pulley Brake Adjustment	1/2"x2-1/4"	1
D622	D22R	Reverse Shaft Collar to Shaft (Drilled)	1/2"x1-1/2"	1
1778R	D87R	Throttle Control Lever	3/8"x1-3/4"	1
1786R	D190	Cam Follower Shaft to Case	1/2"x2-1/4"	1
1783R	D193	Tappet Lever Shaft to Case	1/2"x1-1/2"	2
1786R	D197	Reverse Shaft to Case	1/2"x2-1/4"	1
D622	D244	Shifting Fork Shaft to Case (Drilled)	1/2"x1-1/2"	1
1775R	D247	Control Tube to Quadrant	3/8"x1"	1
1786R	D621	Reverse Shaft to Case	1/2"x2-1/4"	1
D622	D671	Shifting Fork Shaft to Case (Drilled)	1/2"x1-1/2"	1
1791R	D771R	Clamp to Scraper Bar	5/8"x2"	1
1775R	D971	Shift Fork Shaft to Housing	3/8"x1"	1

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
SET SCREWS—CUP POINT—Continued					
1771R	D1696	Governor Arm to Inside Governor Lever Shaft.	5/16"x1/2"	1
1786R	D1773	Cam Follower Shaft to Case.	1/2"x2-1/4"	1
D1871	D1847	In Shift Shaft Power Shaft (Drilled).	1/2"x2"	1
SET SCREWS—FLAT POINT					
D174	AD32	R. H. Main Bearing Cap.		1
D175	AD33	L. H. Main Bearing Cap.		1
D559	D35R	Governor Speed Control Fork to Control Crank.	3/8"x1"	1
D559	D1959R	Speed Change Lever Set Screw.	3/8"x1"	1
SET SCREWS—DOG POINT					
D1086	AD706	Pulley Brake Adjustment.	1/2"x2-1/4"	1
D334	D223	Piston Pin to Piston (Drilled).	1/2"x2-1/4"	2
D334	D762	.005" Oversize Piston Pin to Piston (Drilled).	1/2"x2-1/4"	2
SET SCREWS—OVAL POINT					
D1091	AD379	Power Shaft Housing Adjusting Screw.	1/2"x2"	2
C977	D1203R	Steering Gear Housing to Vertical Steering Shaft (Headless Round Point).	5/8"x1-1/2"	1
CARRIAGE BOLTS WITH SQUARE NUTS					
D324	AD122	R. H. Fender to Platform Plank.	5/16"x2-1/4"	4
D324	AD123	L. H. Fender to Platform Plank.	5/16"x2-1/4"	4
D324	AD370	Right Fender to Platform Plank.	5/16"x2-1/4"	4
D324	AD371	Left Fender to Platform Plank.	5/16"x2-1/4"	4
D322	AD488	Right Fender to Platform.	5/16"x1"	4
D322	AD489	Left Fender to Platform.	5/16"x1"	4
D2496	AD1298	Seat to Seat Bracket.	1/2"x1-1/4"	2
D411	D233	4" Spade Lug to Rear Wheel.	3/4"x1-7/8"	1
D323	D236	Hood Clamp to Tank Bracket.	5/16"x2"	4
1584R	D369	Wood Clamp for Spark Plug Wires.	1/4"x1-1/2"	3
D324	D370	Platform Plank to Support.	5/16"x2-1/4"	4
D322	D462	Fender Reinforcing Strap to Fender.	5/16"x1"	3
D411	D530	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D531	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D573	6" Spade Lug to Rear Wheel.	3/4"x1-7/8"	1
D411	D574	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D575	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D576	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D577	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D578	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D579	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D580R	Road Lug to Rear Wheel.	3/4"x1-7/8"	2
D411	D581R	Road Lug to Rear Wheel.	3/4"x1-7/8"	2
D411	D600	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D601	Grouser to Rear Wheel.	3/4"x1-7/8"	2
D411	D713	Extension Rim Clip.	3/4"x1-7/8"	2
D411	D726	Herringbone Road Lug to Rear Wheel.	3/4"x1-7/8"	2
D411	D730	Road Band Support to Rear Wheel.	3/4"x1-7/8"	1
D477	D867	Seat to Seat Spring.	7/16"x1"	1
D322	D958	Fender to Reinforcing Strap to Fender.	5/16"x1"	3
D411	D1056	Road Band Support to Rear Wheel.	3/4"x1-7/8"	1
D411	D1078	5" Spade Lug to Rear Wheel.	3/4"x1-7/8"	1
D324	D1288	Platform to Supports.	5/16"x2-1/4"	8
D322	D1290	Reinforcing Strap to Platform End.	5/16"x1"	4
A317	D1796	Seat to Channel.	5/8"x2-1/2"	1
2234R	D2265R	Seat Pivot Bearing to Seat Bracket.	1/2"x2-3/4"	1
D2603	D2602	Brake Shaft Bearing to Support.	7/16"x2-3/4"	4
CARRIAGE BOLTS WITH HEX. NUTS					
1893R	AD495	Citrus Grove Fender to Cross Angle.	5/16"x1-1/2"	2
1893R	AD496	Citrus Grove Fender to Cross Angle.	5/16"x1-1/2"	2
D585	D583	Rim Clamp to Front Wheel.	1/2"x3"	1
D585	D584R	Rim Clamp to Front Wheel.	1/2"x3"	1
CARRIAGE BOLTS WITHOUT NUTS					
D563	D564	Radiator Curtain Bracket, R. H., to Curtain Roller.	3/8"x1"	1
D563	D572	Radiator Curtain Bracket, L. H., to Curtain Roller.	3/8"x1"	1

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
MACHINE BOLTS WITH SQUARE NUTS					
D744	AD98	Cam Shaft Gear to Shaft (Drilled).....	1/2"x3"	2
1638R	AD100	Rear Axle Quill to Case.....	5/8"x2-1/2"	16
1611R	AD112	Radiator Bottom Tank to Core.....	5/16"x1-1/8"	10
D595	AD112	Radiator Bottom Tank to Core.....	5/16"x7/8"	12
1623R	AD122	Right Fender to Bracket.....	1/2"x1-3/4"	2
1623R	AD123	Left Fender to Bracket.....	1/2"x1-3/4"	2
D498	AD211	Swinging Link to Drawbar (Drilled).....	5/8"x3"	2
D745	AD216	Rear Axle Quill to Case.....	3/4"x2-3/4"	16
D591	AD251	Extension Wheel Scraper to Wheel Scraper.....	5/8"x3-3/4"	2
D745	AD269	Rear Axle Quill to Case.....	3/4"x2-3/4"	16
1623R	AD370	Right Fender to Bracket.....	1/2"x1-3/4"	2
1623R	AD371	Left Fender to Bracket.....	1/2"x1-3/4"	2
1614R	AD822	Auxiliary Air Cleaner Flange to Air Cleaner Cover..	3/8"x1"	4
1614R	AD826	Air Cleaner Cover to Flange.....	3/8"x1"	1
D888	AD852	Flywheel to Crankshaft Bolts.....	3/4"x5-1/2"	2
D498	AD997	In Swinging Drawbar Link.....	5/8"x3"	1
D745	AD1017	Crank Case to Skid.....	3/4"x2-3/4"	3
D595	D53R	Radiator Top Tank to Radiator Core.....	5/16"x7/8"	24
1611R	D55R	Radiator Side to Top and Bottom Tanks.....	5/16"x1-1/8"	6
.....	D61R	Steering Wheel (See D156 Taper Bolt).....
1638R	D63R	Rear Axle Quill Clamp to Case.....	5/8"x2-1/2"	1
1618R	D87R	Spark and Speed Lever to Quadrant.....	3/8"x3"	1
D544	D248	Guide Band to Front Wheel.....	1/2"x1"	4
1620R	D492R	Air Cleaner Elbow to Bracket.....	3/8"x1-1/2"	3
1636R	D496	Cross Member to Drawbar.....	5/8"x2"	2
1621R	D522	Platform Support to Drawbar.....	1/2"x1-1/4"	2
D544	D529	Guide Band to Front Wheel.....	1/2"x1"	4
1611R	D564	Radiator Curtain Bracket to Radiator.....	5/16"x1-1/8"	1
1622R	D567	Plow Shift Quadrant to Angle.....	1/2"x1-1/2"	2
1624R	D570	Plow Shift Connecting Link to Lever.....	1/2"x2"	1
1625R	D570	Plow Shift Connecting Link to Swinging Drawbar...	1/2"x2-1/2"	1
1611R	D572	Radiator Curtain Bracket to Radiator.....	5/16"x1-1/8"	1
1625R	D604	Guard Support Bracket to Platform.....	1/2"x2-1/2"	2
1621R	D614	Platform Support to Drawbar.....	1/2"x1-1/4"	2
D745	D629R	Rear Axle Quill Clamp to Case.....	3/4"x2-3/4"	1
D571	D698	Plow Shift Lever to Quadrant.....	1/2"x3-3/4"	1
1638R	D769	Scraper Bar to Bar.....	5/8"x2-1/2"	2
1636R	D770	Support to Platform Angle.....	5/8"x2"	4
1640R	D773	Extension Scraper Bar to Bar.....	5/8"x3"	2
1636R	D803	Guide Bar to Bracket.....	5/8"x2"	2
1620R	D819R	Air Cleaner Elbow to Bracket (Use with AD287 Car- buretor).....	3/8"x1-1/2"	3
D544	D849	Listed Guide Band to Front Wheel.....	1/2"x1"	4
1624R	D859	Cross Angle Brace to Tractor Drawbar.....	1/2"x2"	1
1624R	D860	Extension Drawbar Brace, L. H., to Fender Cross Angle.....	1/2"x2"	1
1624R	D860	Extension Drawbar Brace to Extension Drawbar...	1/2"x2"	1
1622R	D861	Extension Drawbar Brace, R. H., to Fender Cross Angle.....	1/2"x1-1/2"	1
1624R	D861	Extension Drawbar Brace to Extension Drawbar...	1/2"x2"	1
1651R	D862	Extension Drawbar to Tractor Drawbar.....	3/4"x3"	1
1618R	D990R	Rear Bearing Bracket to Platform.....	3/8"x3"	4
1615R	D1032R	Air Cleaner Bracket to Magneto Bracket.....	3/8"x1-3/4"	3
D544	D1050	Guide Band to Front Wheel.....	1/2"x1"	4
1613R	D1095	Guard Support to Rear Power Shaft Bracket.....	3/8"x1-1/4"	2
D595	D1453	Air Stack Brace to Bracket.....	5/16"x7/8"	4
944R	D1613R	In Drawbar Carrier Bracket.....	1/2"x4-1/2"	6
1636R	D1613R	Drawbar Carrier to Bracket.....	5/8"x2"	4
1640R	D1618R	In Drawbar End Spacer Block.....	5/8"x3"	2
802R	D1619R	In Drawbar End (Drilled).....	3/4"x3"	1
1625R	D1769R	Steering Worm Clamp Bolt.....	1/2"x2-1/2"	1
1625R	D1877R	Steering Shaft Bearing to Steering Support.....	1/2"x2-1/2"	1
M21	D2034	Guard to Bracket, Power Shaft.....	3/8"x3/4"	4
D595	D2216	Magneto Ground Wire Clips to Rear Tank Bracket.	5/16"x7/8"	2
1624R	D2251R	Brake Control Bracket to Fender Bracket.....	1/2"x2"	1
1642R	D2547	Adjusting Link to Pivot Cap.....	5/8"x4"	1
D2575	D2571	In Drawbar Link.....	5/8"x3-3/4"	1
B848	D2571	In Drawbar Link.....	5/8"x3-1/4"	2

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
MACHINE BOLTS WITH HEX. NUTS					
1903R	AC954	Oil Filter Body to Base	3/8"x2"	2
1893R	AD232	Citrus Grove Fender to Cross Angle	5/16"x1-1/2"	2
1893R	AD233	Citrus Grove Fender to Cross Angle	5/16"x1-1/2"	2
1893R	AD416	Citrus Grove Fender to Cross Angle	5/16"x1-1/2"	2
1893R	AD417	Citrus Grove Fender to Cross Angle	5/16"x1-1/2"	2
1929R	AD466	Tappet Case to Head	1/2"x2"	4
1928R	AD1203	Muffler and Spark Arrester to Manifold	1/2"x1-3/4"	4
C1981	C1983	In Seat Spring	3/4"x8-1/4"	1
D597	D184R	Arm to Gear Shift Lever	3/8"x1-3/4"	1
D597	D220	Gear Shift Lever to Arm	3/8"x1-3/4"	1
D597	D619	Gear Shift Lever to Arm	3/8"x1-3/4"	1
D597	D620R	Arm to Gear Shift Lever	3/8"x1-3/4"	1
1932R	D1014	Fork to Shaft Clamp Bar	1/2"x2-3/4"	1
1894R	D1237R	Fender Bracket to R. H. and L. H. Dust Shields	3/16"x1-3/4"	4
1944R	D1611R	Drawbar Guide to Bracket	5/8"x2"	2
D1767	D1769R	In Steering Worm Housing	1/2"x3"	1
1928R	D2176R	Exhaust Flange to Manifold	1/2"x1-3/4"	4
1971R	D2182	Wheel Weight	3/4"x6"	2
D2544	D2494R	In Drawbar Link Extension	3/4"x3-1/4"	1
1932R	D2494R	In Drawbar Link Extension	1/2"x2-3/4"	1
MACHINE BOLTS WITHOUT NUTS					
D888	AD305	Flywheel to Crankshaft	3/4"x5-1/2"	2
D888	AD383	Flywheel to Crankshaft	3/4"x5-1/2"	2
D616	AD408	R. H. Bracket to Case, Rear	3/4"x2-3/4"	2
D616	AD408	L. H. Bracket to Case, Rear	3/4"x2-3/4"	2
D616	AD409	Drawbar Bracket to Case	3/4"x2-3/4"	2
D616	AD409	Drawbar Bracket to Case	3/4"x2-3/4"	2
D888	AD661	Flywheel to Crankshaft	3/4"x5-1/2"	2
A327	AD852	For Attaching Wheel Weights	3/4"x4-3/4"	2
D1617	AD1470	In Drawbar Latch	7/16"x8"	1
A326	D1615R	In Front End Support	3/4"x2-1/4"	3
D888	D2271R	Flywheel to Crankshaft	3/4"x5-1/2"	2
STOVE BOLTS AND MACHINE SCREWS					
E2065	A1225	Lighting Outfit Cable Clip to Strap	1/4"-20"x3/8"	1
E2064	A1247	Heat Indicator Bracket to Governor Case	1/4"x1/2"	2
2334R	AD243	Radiator Guard to Radiator	5/16"x1"	6
D602	AD288	Air Cleaner Outlet Pipe to AD287 Carburetor	10-32x1/4"	1
D1024	AD410	Front Bearing Collar to Power Shaft	1/4-20x1"	2
2334R	AD813	Radiator Guard to Radiator Side (2 per Side)	5/16"x1"	4
2336R	AD843	Dust Shield Support to Fender	1/4"x1"	1
D2319	AD1030	Fuel Pump to Bracket	5/16"x3/4"	2
E2064	AD1225	Relief Valve to Filter Head	1/4"x1/2"	2
2334R	AD1495	Radiator Guard to Radiator Side	5/16"x1"	4
2393R	D516	Right Forward Dust Shield to Fender	1/4"x7/8"	3
2392R	D517	Left Forward Dust Shield to Fender	1/4"x5/8"	2
2392R	D518	Right Rear Dust Shield to Fender	1/4"x5/8"	3
2392R	D519	Left Rear Dust Shield to Fender	1/4"x5/8"	3
2490R	D1107	Lens Holder to Lamp (Brass)	8/32x5/8"	1
D1144	D1298	Inside Governor Lever to Shaft	10/32x7/16"	2
2392R	D1818	Rear Dust Shield, R. H. to Fender	1/4"x5/8"	5
2392R	D1819	Rear Dust Shield, L. H. to Fender	1/4"x5/8"	2
HEXAGON NUTS					
1520R	A518	Oil Filter Stud	1/2"	1
1493R	A1225	On Electric Light Cable Clip	3/8"	2
1506R	AD25	Pulley Brake Adjusting Set Screw	1/2"	1
1513R	AD32	R. H. Main Bearing Adjusting Screw	3/4"	1
1513R	AD33	L. H. Main Bearing Adjusting Screw	3/4"	1
1513R	AD34	Cylinder Head to Cylinder Studs	3/4"	9
1506R	AD46	Oil Pump Strainer to Oil Pump Stud	1/2"	2
1513R	AD60	Cylinder Head to Cylinder Stud	3/4"	9
1513R	AD64	Cylinder to Case Stud	3/4"	9
1535R	AD103	Muffler to Manifold Clamp	5/16"	2
1506R	AD222	Upper Water Pipe to Cylinder Stud	1/2"	2
1535R	AD241	Exhaust Elbow to Manifold Clamps	5/16"	2
1513R	AD282	Front End Support to Studs	3/4"	3
1513R	AD305	Flywheel to Crankshaft, Bolt	3/4"	2

HARDWARE LIST FOR MODELS D AND DI TRACTORS


Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
HEXAGON NUTS—Continued					
1515R	AD341	Seat Spring to Case Studs.....	7/8"	2
1513R	AD342	Seat Spring to Case Studs.....	3/4"	2
1535R	AD348	Spark Arrester to Manifold Clamp.....	5/16"	2
1513R	AD383	Flywheel to Crankshaft, Bolt.....	3/4"	2
1513R	AD391	Cylinder, 6-3/4" to Case Stud.....	3/4"	9
1506R	AD393	Upper Water Pipe to Cylinder Stud.....	1/2"	4
1506R	AD466	Tappet Lever Case to Head Stud.....	1/2"	2
1513R	AD474	Seat Spring and Leaf to Case Studs.....	3/4"	2
1513R	AD477	Front End Support to Studs.....	3/4"	5
1506R	AD545	Upper Water Pipe to Cylinder.....	1/2"	4
1506R	AD700	Oil Pump Strainer to Oil Pump Stud.....	1/2"	2
C1201	AD700	Oil Pump Strainer Flange.....	15/16"	1
1506R	AD706	Pulley Brake Adjusting Set Screw.....	1/2"	1
1516R	AD721	Radius Rod to Front Axle.....	1"	2
1515R	AD721	Radius Rod Pivot End to Case.....	7/8"	1
1513R	AD758	Seat Spring and Leaf to Case Studs.....	3/4"	2
1508R	AD788	Cylinder to Case Studs.....	3/4"	9
1508R	AD789	Cylinder Head to Cylinder Stud.....	3/4"	9
1508R	AD790	Cylinder Head to Cylinder Stud.....	3/4"	9
1506R	AD860	Upper Water Pipe to Cylinder Stud.....	1/2"	5
1506R	AD1023	Pulley Brake Adjusting Set Screw.....	1/2"	1
1512R	C719	Wedge Ring Stud.....	5/8"	6
1512R	C1479	Rim Clamp Stud.....	5/8"	6
1506R	D22R	Reverse Shaft Collar Set Screw.....	1/2"	2
1506R	D32R	Radiator Elbow to Radiator Stud.....	1/2"	2
1493R	D35R	Governor Speed Control Fork to Control Crank Set Screw.....	3/8"	1
1506R	D42R	Manifold to Cylinder Head Stud.....	1/2"	4
1513R	D46R	Radius Rod Pivot to Case Stud.....	3/4"	1
1512R	D74R	Sprocket to Rear Axle Bolt.....	5/8"	9
1493R	D87R	Spark and Speed Control Lever Bolt.....	3/8"	1
1513R	D105	Adjusting Pin to Tie Rod.....	3/4"	1
1492R	D156	Taper Bolt to Steering Wheel.....	5/16"	1
1492R	D156	Taper Bolt to Knuckle Pivot Pin.....	5/16"	1
D528	D157	Rod End to Spark and Speed Rod.....	1/4"	3
1515R	D163	Radius Rod Pivot to Case Stud.....	7/8"	1
1506R	D190	Cam Follower Shaft Set Screw.....	1/2"	1
1506R	D193	Tappet Lever Set Screw.....	1/2"	2
1506R	D197	Reverse Shaft Set Screw.....	1/2"	1
D528	D209	Rod End Spark and Speed Control.....	1/4"	2
1535R	D213	Clamp to Muffler and Exhaust Elbow.....	5/16"	2
1514R	D216	Clutch Operating Rod Bolt.....	9/16"	1
D397	D217	Radius Rod Ends.....	7/8"	2
1513R	D219	Tie Rod to End.....	3/4"	1
1512R	D221	Clutch Lever to Quadrant.....	5/8"	1
1495R	D223	Piston Pin Set Screw Locknut.....	1/2"	1
1506R	D244	Shifting Fork Shaft to Case.....	1/2"	1
1493R	D247	Control Tube Set Screw.....	3/8"	1
1512R	D330	Clutch Operating Lever Bolt.....	5/8"	1
1512R	D331	Rear Axle Sprocket Bolt.....	5/8"	1
1513R	D409	Rim Clamp Stud.....	3/4"	8
1513R	D411	Spade Lug Bolt to Wheels.....	3/4"	1
1506R	D621	Reverse Shaft Set Screw.....	1/2"	1
1516R	D632	Radius Rod Ends.....	1"	2
1506R	D671	Shifting Fork Shaft to Case Set Screw.....	1/2"	1
1512R	D727R	Rear Axle Sprocket, 22-Tooth to Bolt.....	5/8"	9
1512R	D728R	Rear Axle Sprocket, 28-Tooth to Bolt.....	5/8"	9
1506R	D762	.005" Oversize Piston Pin to Piston Set Screw.....	1/2"	1
1512R	D771R	Scraper Bar Clamp Set Screw.....	5/8"	1
1516R	D922	Tie Rod to End.....	1"	1
1506R	D1091	Power Shaft Housing Adjusting Screw.....	1/2"	1
1492R	D1157	Lighting Generator Pulley to Shaft.....	5/16"	2
1506R	D1203R	Steering Gear Housing to Case.....	1/2"	4
1521R	D1203R	Steering Gear Housing Adjusting Screw.....	5/8"	1
1506R	D1671	On Shift Shaft Set Screw, Power Shaft.....	1/2"	1
1512R	D1673	Steering Arm, R. H., to Knuckle Studs.....	5/8"	2
1512R	D1674	Steering Arm, L. H., to Knuckle Studs.....	5/8"	2
C985	D1703	Tie Rod to Tie Rod Ends.....	7/8"	2
D1771	D1770	Steering Wheel to Steering Shaft.....	3/4"	1
1506R	D1773	Cam Follower Shaft Set Screw.....	1/2"	1

HARDWARE LIST FOR MODELS D AND DI TRACTORS


Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
HEXAGON NUTS—Continued					
1506R	D1891	Manifold to Cylinder Head Studs.....	1/2"	6
1518R	D1898	Steering Arm Stud.....	5/8"	2
1512R	D1899	Control Quadrant to Case Studs.....	5/8"	2
1493R	D1899	Control Quadrant Throttle Arm Set Screw.....	3/8"	1
D528	D1926	Throttle Rod Ends.....	1/4"	2
1493R	D1959R	Speed Change Lever Set Screw.....	3/8"	1
1513R	D2184	Wheel Weight Bolt.....	3/4"	1
C760	D2312	Clutch Operating Lever Bolt.....	5/8"	1
1506R	D2420	Water Pump Packing Stud.....	1/2"	1
1518R	D2520	Clutch Shaft Power Control.....	5/8"	2
1495R	1686R	Overpulley to Hub Screws.....	1/2"	6
E2094	2490R	Lens Holder Screw to Lamp.....	8/32"	1
HEXAGON NUTS—CASTELLATED					
D1661	AD49	Fan Spider with Blades to Fan Shaft.....	9/16"	1
D1662	AD174	Idle Spindle to Case.....	1"	1
C760	AD470	Clutch Adjusting Disk to Pulley.....	5/8"	3
C760	AD696	Brake Band End to Case.....	5/8"	1
D1661	D36R	Magneto Drive Flange to Governor Shaft.....	9/16"	1
C760	D66R	Clutch Adjusting Disk to Pulley.....	5/8"	3
D1661	D168	Fan Shaft Ends.....	9/16"	2
D1661	D171	Governor Shaft Ends.....	9/16"	2
C760	D203	Clutch Adjusting Bolt.....	5/8"	1
D1661	D396	Fan Drive Disk to Fan Shaft.....	9/16"	1
C760	D423	Brake Band End to Case.....	5/8"	1
D1662	D484	Steering Knuckle Bolt to Front Axle.....	1"	1
D1661	D823	Magneto Drive Flange to Governor Shaft.....	9/16"	1
D1661	D829	Governor Shaft Ends.....	9/16"	2
C760	D835	Clutch Adjusting Disk to Pulley.....	5/8"	3
C760	D847	Spiral Driven Gear to Shaft.....	5/8"	1
C1104	D1255	Both Ends Vertical Steering Shaft.....	7/8"	2
D336	D1684	R. H. and L. H. Main Bearing Clamp Bolts (4 per Bearing).....	9/16"	8
C1200	D1691	On Rear End of Fan Shaft.....	9/16"	1
D1661	D1827	Governor Shaft Ends.....	9/16"	2
D1930	D1927	Pulley Dust Cover to Studs.....	1/2"	3
C760	D2031	Clutch Operating Lever Bolt.....	5/8"	1
C760	D2294	Bearing to Lay Shaft, Power Shaft.....	5/8"	2
C1200	JD7310	Water Pump Shaft.....	9/16"	1
RIVETS—R. I. HEAD					
D479	AD745	In Air Cleaner Cover Bail.....	1/4"x3/4"	4
D431	AD752	Clutch Facing Disk Reinforcing to Disk.....	3/16"x3/4"	12
D430	AD768	Pulley Guard to Support.....	3/16"x5/8"	5
D430	AD843	Forward Dust Shield to Support.....	3/16"x5/8"	3
D430	AD1068	Gasoline Tank to Support.....	3/16"x5/8"	4
D478	C941	Hood Clamp to Hood.....	3/16"x3/8"	8
D439	D58R	Steering Segment to Knuckle.....	3/8"x2-1/4"	4
D435	D60R	Governor Weight to Governor Gear.....	1/4"x2"	1
D940	D121	High Speed Gear to Differential.....	7/16"x3-1/2"	12
D940	D133	Low Speed Gear to Differential.....	7/16"x3-1/2"	12
D430	D225	Control Arm to Magneto.....	3/16"x5/8"	2
D506	D241	Spoke to Wheel Rim.....	5/8"x1-7/8"	2
D507	D241	Spoke to Wheel Hub.....	5/8"x2-1/8"	2
D436	D251	Fender Cross Angle to Platform Support.....	3/8"x1"	2
D479	D422	Brake Band Loop.....	1/4"x3/4"	4
D479	D423	End to Brake Band.....	1/4"x3-4"	4
D432	D492	Elbow to Air Cleaner.....	1/4"x1/2"	7
D432	D819R	Elbow to Air Cleaner.....	1/4"x1/2"	8
D478	D832	Oil Trough to Governor Case.....	3/16"x3/8"	2
D430	D929R	Spark Arrester Flange to Stack.....	3/16"x5/8"	3
D1079	D959	Fender Cross Angle to Platform Support.....	3/8"x1-1/4"	2
D431	D959	Fender to Brace and Angle.....	3/16"x3/4"	6
D478	D961	Oil Trough to Governor Case.....	3/16"x3/8"	3
1561R	D1005	Drawbar Hammer Strap to Drawbar.....	1/2"x2-1/4"	2
D432	D1032R	Bracket to Air Cleaner.....	1/4"x1/2"	7
D439	D1535R	Steering Segment to Knuckle.....	3/8"x2-1/4"	4
D1762	D1759	Reinforcement to Clutch Facing Disk.....	3/16"x7/8"	6
D478	D1808	Fender to Angle.....	3/16"x3/8"	4
D478	D1809	Fender to Angle.....	3/16"x3/8"	4

HARDWARE LIST FOR MODELS D AND DI TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
RIVETS—R. I. HEAD—Continued					
D430	D1810	Fender to Brace.....	3/16"x5/8"	9
D430	D1811	Fender to Brace.....	3/16"x5/8"	9
D355	D2039	Control Lever Pin, Power Shaft (Drilled).....	1/2"x2-1/2"	1
D2545	D2494	In Drawbar Link Extension.....	1"x4"	1
D430	D2539	Bracket to Mud Guard.....	3/16"x5/8"	6
1580R	533R	Pulley Counterweights to Pulley Rim.....	1/4"x1-1/4"
1580R	534R	Pulley Counterweights to Pulley Rim.....	1/4"x1-1/4"
1580R	535R	Pulley Counterweights to Pulley Rim.....	1/4"x1-1/4"
RIVETS—C. S. HEAD					
D262	D245	Yoke to Sliding Gear Fork.....	3/8"x1-3/4"	2
D2462	D1258	Fork to Yoke, Sliding Gear.....	3/8"x1"	4
D1624	D1623	Drawbar Lower Member to Yoke.....	1/2"x2-3/4"	2
D1416	D2617	In Brake Latch.....	3/8"x1-1/4"	1
RIVETS—FLAT HEAD					
D1820	AD775	Cover, Air Cleaner to Bail.....	3/8"x1-3/4"	1
D558	D1040R	Outlet Flange to Air Cleaner.....	1/4"x1/2"	6
RIVETS—BRASS					
D1520	AD543	In Fuel Tank Bracket.....	9/64"x5/16"	8
D1520	AD544	In Fuel Tank Bracket.....	9/64"x5/16"	8
D2309	AD752	Clutch Facing to Disk.....	3/16"x5/16"	24
D695	D385	Lining to Pulley Brake.....	5/32"x1/2"	4
D695	D424	Lining to Brake Band.....	5/32"x1/2"	12
D1520	D424	In Brake Band.....	9/64"x5/16"	12
D695	D468	Fuel Tank Cushion to Bracket.....	5/32"x1/2"	2
D1761	D1760	Clutch Facings to Clutch Facing Disk.....	3/16"x7/16"	12
D695	D1932	Pulley Brake Lining to Pulley Brake.....	9/64"x7/16"	6
D1592	D1932	In Pulley Brake and Lining.....	9/64"x7/16"	6
D2593	D2592	Brake Facing to Shoe.....	3/16"x5/8"	18
TINNERS' RIVETS					
2338R	D81R	Gas Outlet Flange to Tank.....	5 lbs.	2
2338R	D91R	Kerosene Outlet Flange to Tank.....	5 lbs.	4

 **LOCK WASHERS**

Size	No.
3/64"	C1320
3/16"	D603
7/32"	D2003
1/4"	1729R
5/16"	1721R
3/8"	1722R
7/16"	1723R
1/2"	1724R
5/8"	1726R
11/16"	1727R
3/4"	1728R
7/8"	1881R
1"	1882R

 **COTTER KEYS**

Length	Diameter				
	3/32"	1/8"	3/16"	3/8"	1/4"
1/2"	1730R				
5/8"		1732R			
3/4"		1733R	D339		
1"	1731R	1735R	1741R		
1-1/4"		1736R	1742R		
1-1/2"		1737R	1743R		
2"		1738R	2215R		1748R
2-1/2"				D340	

CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS D AND DI TRACTORS


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
AD87	Muffler, Complete.	AD103	239	112
D1R	Case, Transmission Main.	AD76	236	...
D2R	Cylinder, Complete, with Studs.	AD64	238	110
D2R	Cylinder with Pistons, Rings and Gaskets.	AD901	238	...
D8R	Main Bearing Housing, L. H.	AD33	236	109
D21R	Case, Governor with Oil Trough.	AD300	239	113
D25R	Differential Spider and Shaft.	AD14	249	124
D33R	Flywheel with Bolts and Dowel Pin.	AD305	236	108
D37R	Cam Shaft Gear with Bolts.	AD98	238	111
D47R	Belt Pulley with Bushing Cone and Gear.	AD36	246	121
D52R	Quill, Rear Axle with Snap Rings.	AD100	249	125
D54R	Bottom Tank Radiator with Studs.	AD112	244	120
D62R	Pulley Brake with Lining.	AD25	247	122
D71R	Gear, Governor Idler with Bushing.	AD99	240	113
D88R	Tappet Lever with Rivet.	AD179	239	111
D92R	Fan Spider with Blades.	AD49	245	113
D103	Connecting Rod and Cap with Piston Pin Bushing.	AD35	237	109
D103	Connecting Rod, Complete.	AD101	237	...
D104	Crankshaft, with Gear.	AD600	237	109
D187R	Fork, Shift, Low and Reverse, Complete.	AD92	248	123
D198R	Fork, Shift, High, Complete.	AD93	248	123
D280R	Cylinder Head with Valve Guides.	AD34	238	110
D280R	Cylinder Head, Complete, with Valves.	AD60	238	...
D281R	Tappet Case, with Plugs.	AD466	239	111
D363R	Screw Head with Stud, Fuel Tank Filler Cap.	AD97	244	117
D363R	Screw Head with Stud, Radiator Filler Cap.	AD97	244	120
D628R	Quill, Rear Axle with Snap Rings.	AD216	249	125
D630	Knuckle, Steering, R. H., with Nut and Cotter.	AD274	253	133
D630	Knuckle, Steering, R. H., with Nut and Cotter.	AD276	253	133
D631	Knuckle, Steering, L. H., with Nut and Cotter.	AD275	253	133
D631	Knuckle, Steering, L. H., with Nut and Cotter.	AD277	253	133
D639R	Main Bearing Housing, R. H.	AD32	236	109
D653R	Cover, with Felt Washer and Retainer, Front Fan Bearing.	AD221	245	113
D654R	Housing with Felt Washer and Retainer, Front Fan Bearing.	AD220	245	113
D660R	Belt Pulley with Bushing, Cone and Gear.	AD292	246	121
D670R	Case, Transmission, Main.	AD209	236	...
D681R	Water Pipe, Cylinder to Radiator.	AD222	245	120
D731R	Exhaust Elbow, Complete.	AD241	239	112
D765R	Quill, Rear Axle, with Snap Rings.	AD269	249	125
D765R	Quill, Rear Axle, with Snap Ring.	AD1252	249	125
D776R	Front Axle, with Bushing.	AD253	253	133
D833R	Belt Pulley, with Bushing, Cone and Gear.	AD292	246	121
D833R	Belt Pulley, with Bushing, Cone and Gear.	AD346	246	121
D833R	Belt Pulley, with Bushing, Cone and Gear.	AD368	246	121
D962R	Cylinder, Complete, with Studs, 6-3/4".	AD391	238	110
D962R	Cylinder with Pistons, Rings and Gaskets.	AD902	238	...
D965R	Water Pipe, Cylinder to Radiator.	AD393	245	120
D985R	Power Shaft Housing with Bushing.	AD379	265	148
D1026R	Front Axle with Bushing.	AD253	253	133
D1053R	Flywheel with Bolts and Dowel Pin.	AD383	236	108
D1162	Crankshaft with Gear.	AD382	237	109
D1205R	Fork, with Yoke, Sliding Gear, High and Intermediate.	AD530	248	123
D1206R	Fork, with Yoke, Sliding Gear, Low and Reverse.	AD531	248	123
D1218R	Water Pipe, Cylinder to Radiator.	AD545	245	120
D1366R	Bearing Housing, Fan Shaft, Rear, with Felt Washer and Retainer.	AD796	245	113
D1600	Crankshaft with Gear and Race.	AD647	237	109
D1601	Connecting Rod and Cap with Piston Pin Bushing.	AD644	237	109
D1601	Connecting Rod, Complete.	AD656	237	...
D1606R	Flywheel, with Bolts, Nuts, and Dowel Pin.	AD661	236	108
D1670R	Strainer, Oil Pump, Complete.	AD700	241	114
D1686R	Pulley Brake with Lining.	AD706	247	122
D1706R	Pulley with Gear and Studs.	AD832	246	121
D1716R	Cylinder, Complete with Studs, 6-3/4".	AD788	238	110
D1716R	Cylinder with Pistons, Rings and Gaskets.	AD903	238	...
D1718R	Cylinder Head with Valve Guides and Studs.	AD789	238	110
D1718R	Cylinder Head, Complete with Valves and Springs.	AD790	238	...
D1725R	Main Bearing, L. H., with Cap, Bolts and Nuts.	AD733	236	109
D1750R	Crankshaft with Gear, Inner Race, and Balance.	AD838	237	109
D1754R	Disk, Clutch Driving with Cap Screws.	AD749	247	122
D1784R	Upper Water Pipe, Cylinder to Radiator.	AD860	245	120
D1879R	Knuckle with Bushing.	AD821	253	133
D1912R	Air Cleaner Container with Gasket.	AD827	263	146

CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS D AND DI TRACTORS

Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
D1913R	Air Cleaner Cover with Bail.....	AD775	263	146
D1920R	Stack and Flange, Muffler.....	AD894	239	112
D1947R	Top Tank, Radiator.....	D53R	245	120
D1970R	Flywheel with Bolts, Nuts, Lock Washers and Dowel Pin.....	AD852	243	109
D1985R	Main Bearings, R. H., with Cap, Bolts and Nuts.....	AD703	236	109
D1987R	Body with Bolts, Oil Filter.....	AC954	242	115
D2056R	Base, Oil Filter with Drain Plug.....	AD883	242	115
D2061R	Elbow with Studs, Muffler, and Spark Arrester, Lower.....	AD879	239	112
D2123R	Spacer with Oil Seal Washer, Flywheel.....	AD935	236	109
D2240	Case, Transmission, Main.....	AD793	236	...
D2255R	Muffler and Spark Arrester.....	AD1203	239	112
D2289R	Pulley Brake with Lining.....	AD1023	247	122
D2400R	Intermediate Drive Gear and Spider.....	AD1240	249	124
D2402R	Gear with Spider, Low Speed.....	AD1242	249	124
D2405R	Differential Spider with High Drive Gear and Shaft.....	AD1239	249	124
D2417R	Case, Transmission, Main.....	AD1235	236	...
D2459R	Quill with Oil Seal, Rear Axle.....	AD1276	249	125
D2467R	Housing with Bushings and Plug, Power Control.....	AD1333	267	149
D2468R	Cover with Bushings, Housing.....	AD1288	266	149
D2482	Gear with Bushing, Clutch.....	AD1293	266	149
D2483	Sprocket with Bushing, Clutch.....	AD1294	266	149
D2512R	Drive Wheel, with Studs and Nuts.....	AD1471	251	130
D2549R	Quill, with Oil Seal, Rear Axle.....	AD1456	250	125
D2566R	High Drive Gear with Differential Spider and Shaft.....	AD1368	249	124
D2568R	Intermediate Drive Gear with Differential Spider.....	AD1371	249	124
D2570R	Solid Drive Wheel with Studs and Nuts.....	AD1472	251	130
D2584R	Brake Shoe Carrier with Retaining Pin.....	AD1430	252	132
D2591R	Brake Shoe with Facing.....	AD1431	252	132
D2618R	Drive Wheel with Studs and Nuts.....	AD1473	251	...
D2622R	Dual Drive Wheel with Studs and Nuts.....	AD1462	251	131
D2623R	Extension with Studs and Nuts, Dual Wheel.....	AD1450	251	131

REPAIR PARTS FOR MODELS D AND DI TRACTORS

TRANSMISSION CASE

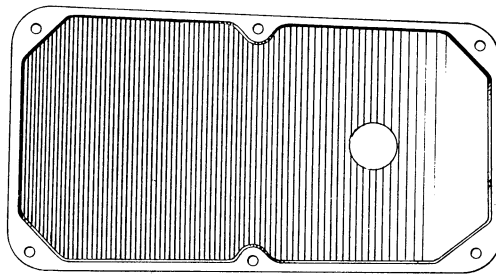


D 5




C 1102




D 937

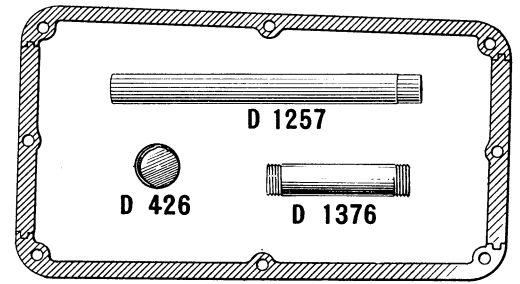


AD 299

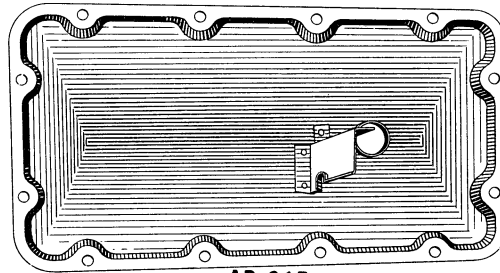

AD 915

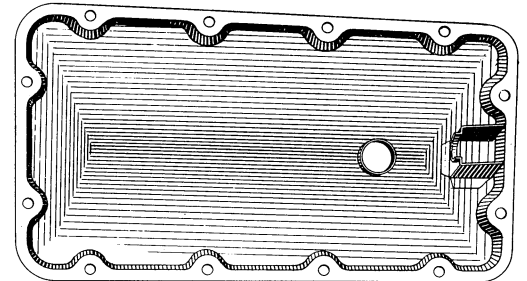


AD 1249

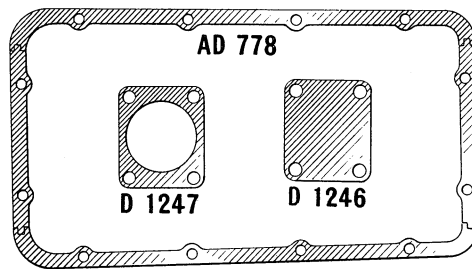


AD 778

D 1247


D 1246

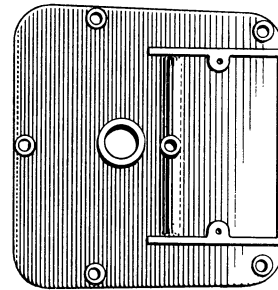


D 4 R

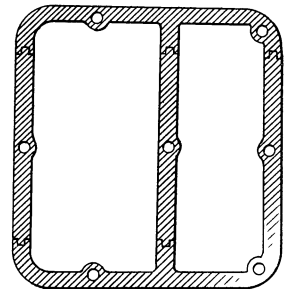


AD 117

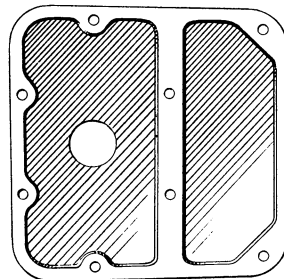


D 837

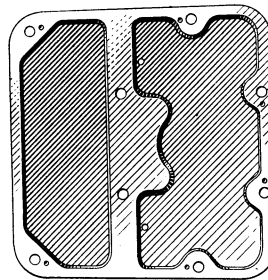

D 1910

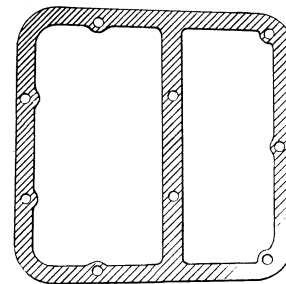

AD 298

 


D 836




D 625



D 269

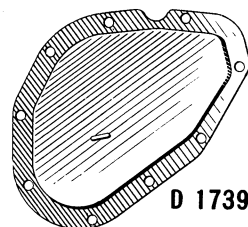

D 1739

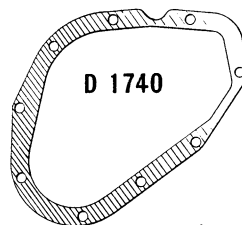

D 1740



D 163



D 409



D 843



C 1521



A 461



E 2142



1452 R

REPAIR PARTS FOR MODELS D AND DI TRACTORS

ENGINE

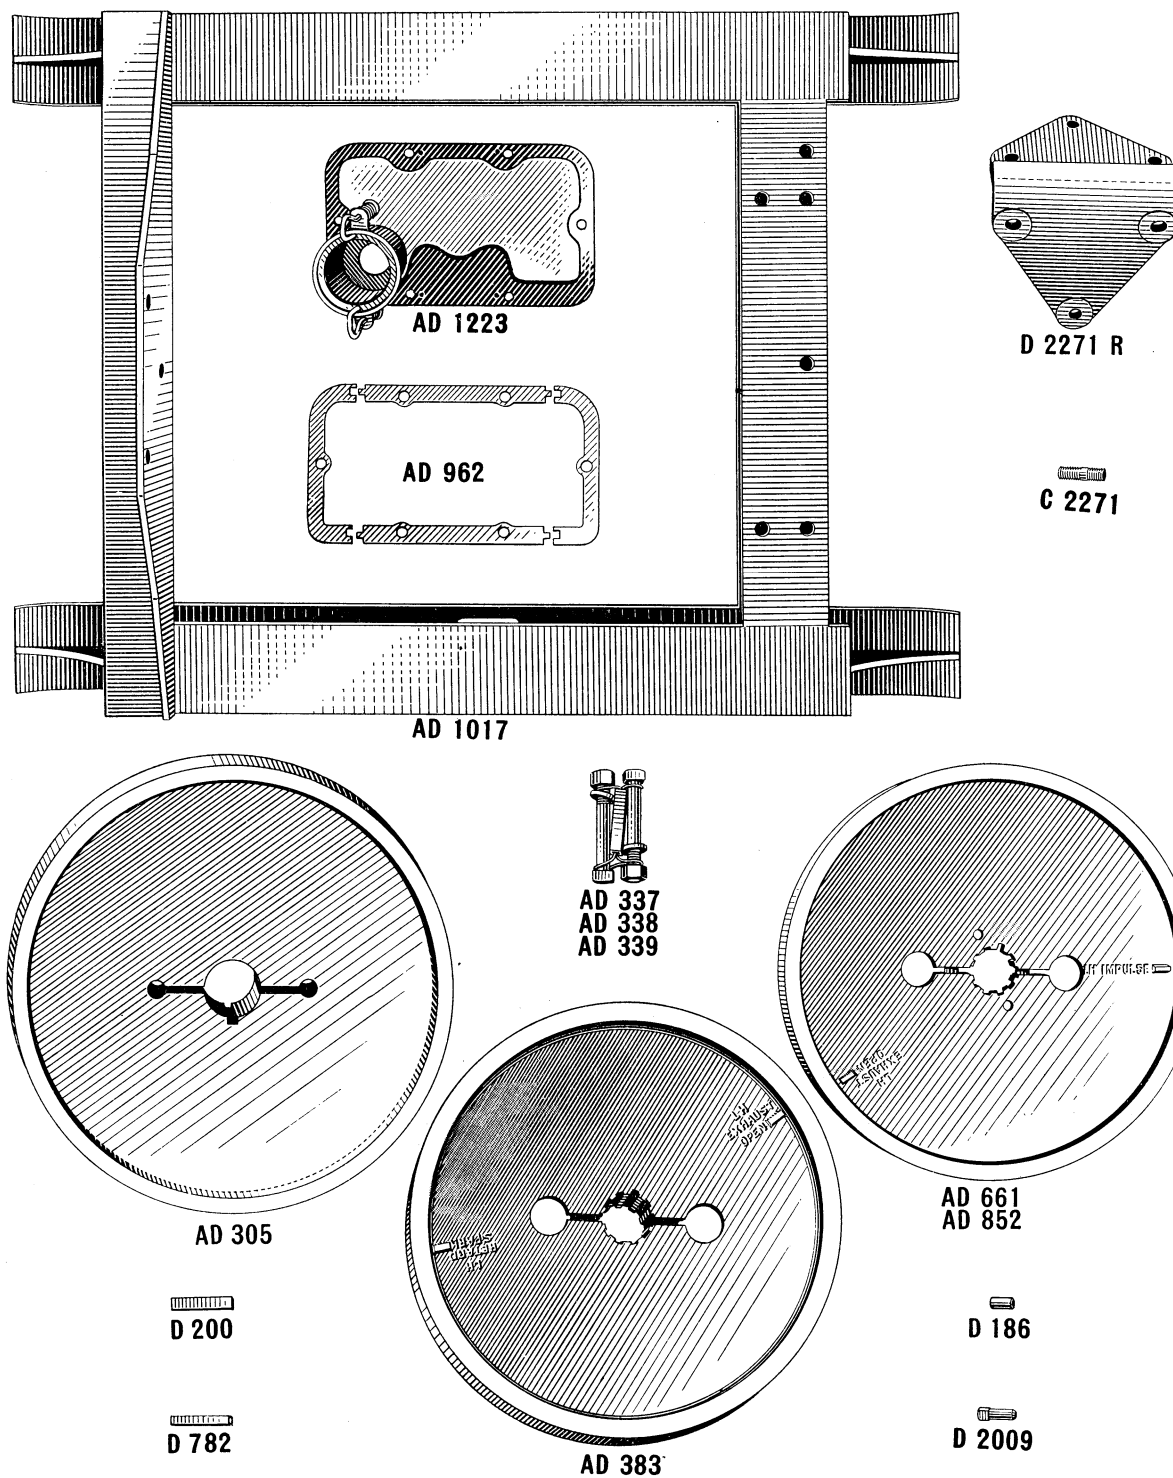


Plate No. 108

REPAIR PARTS FOR MODELS D AND DI TRACTORS

CONNECTING RODS AND CRANKSHAFT

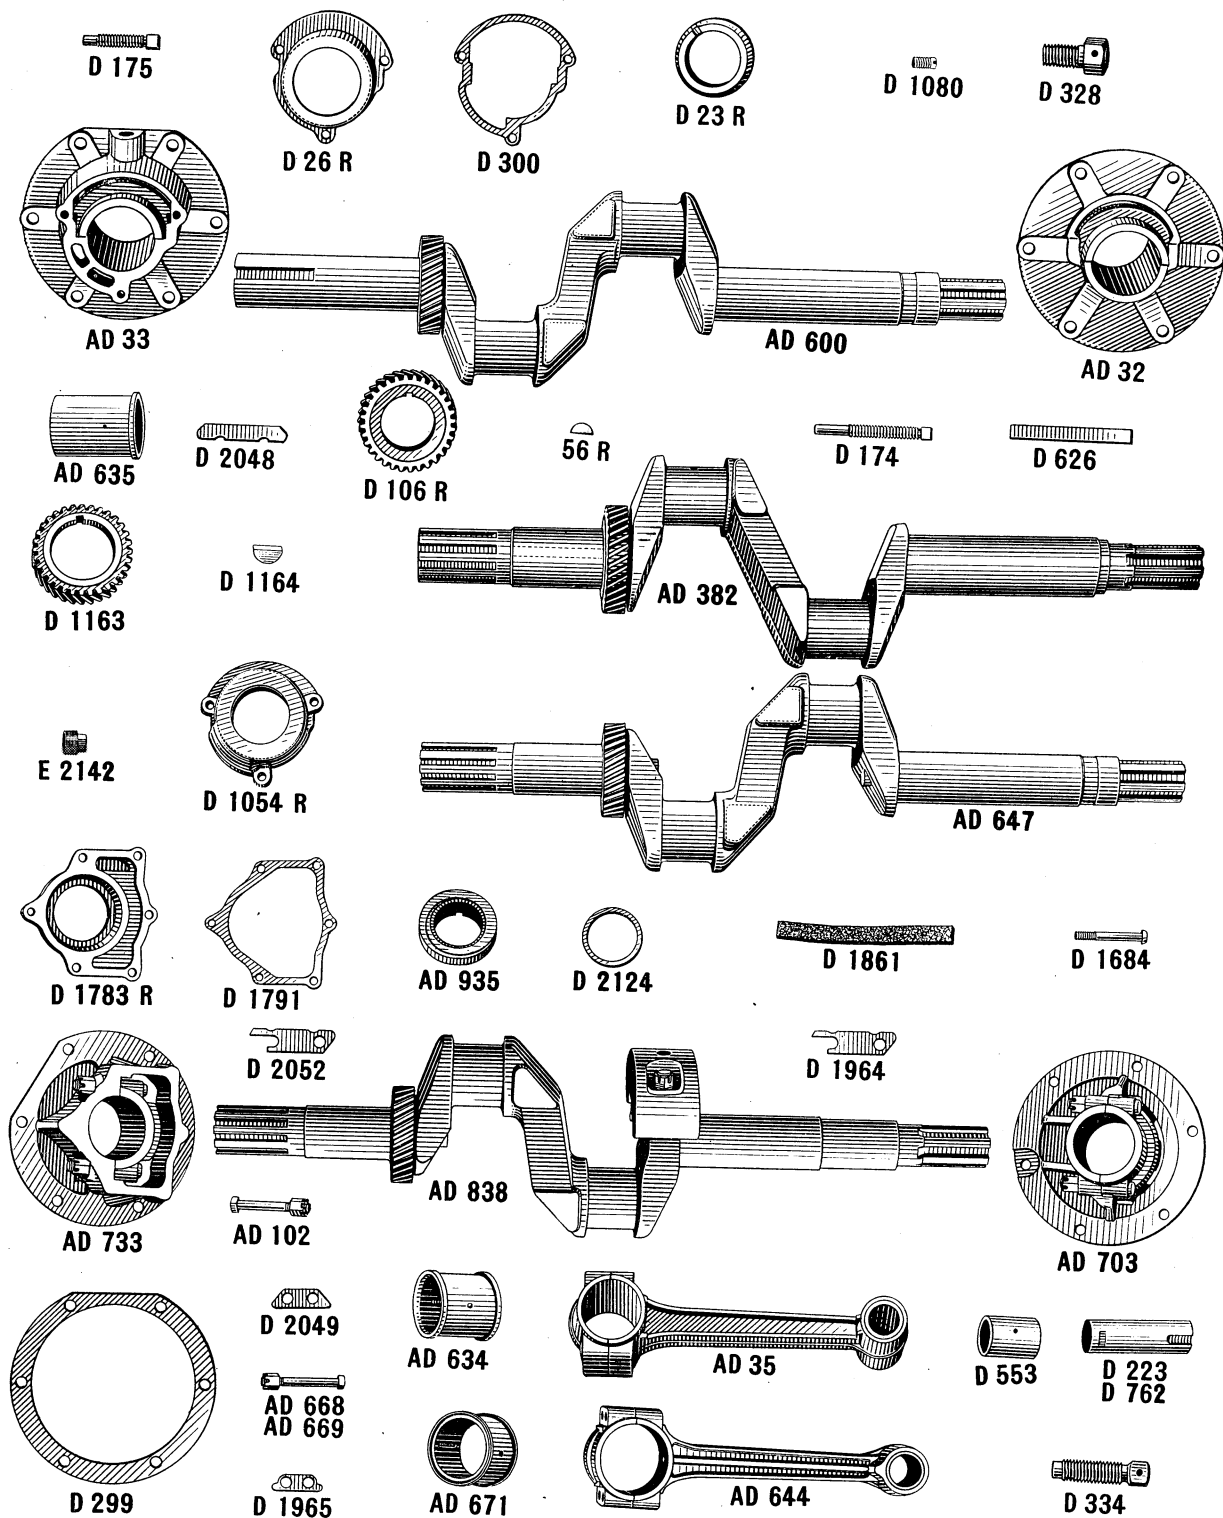


Plate No. 109

REPAIR PARTS FOR MODELS D AND DI TRACTORS

CYLINDER, CYLINDER HEAD AND MANIFOLD


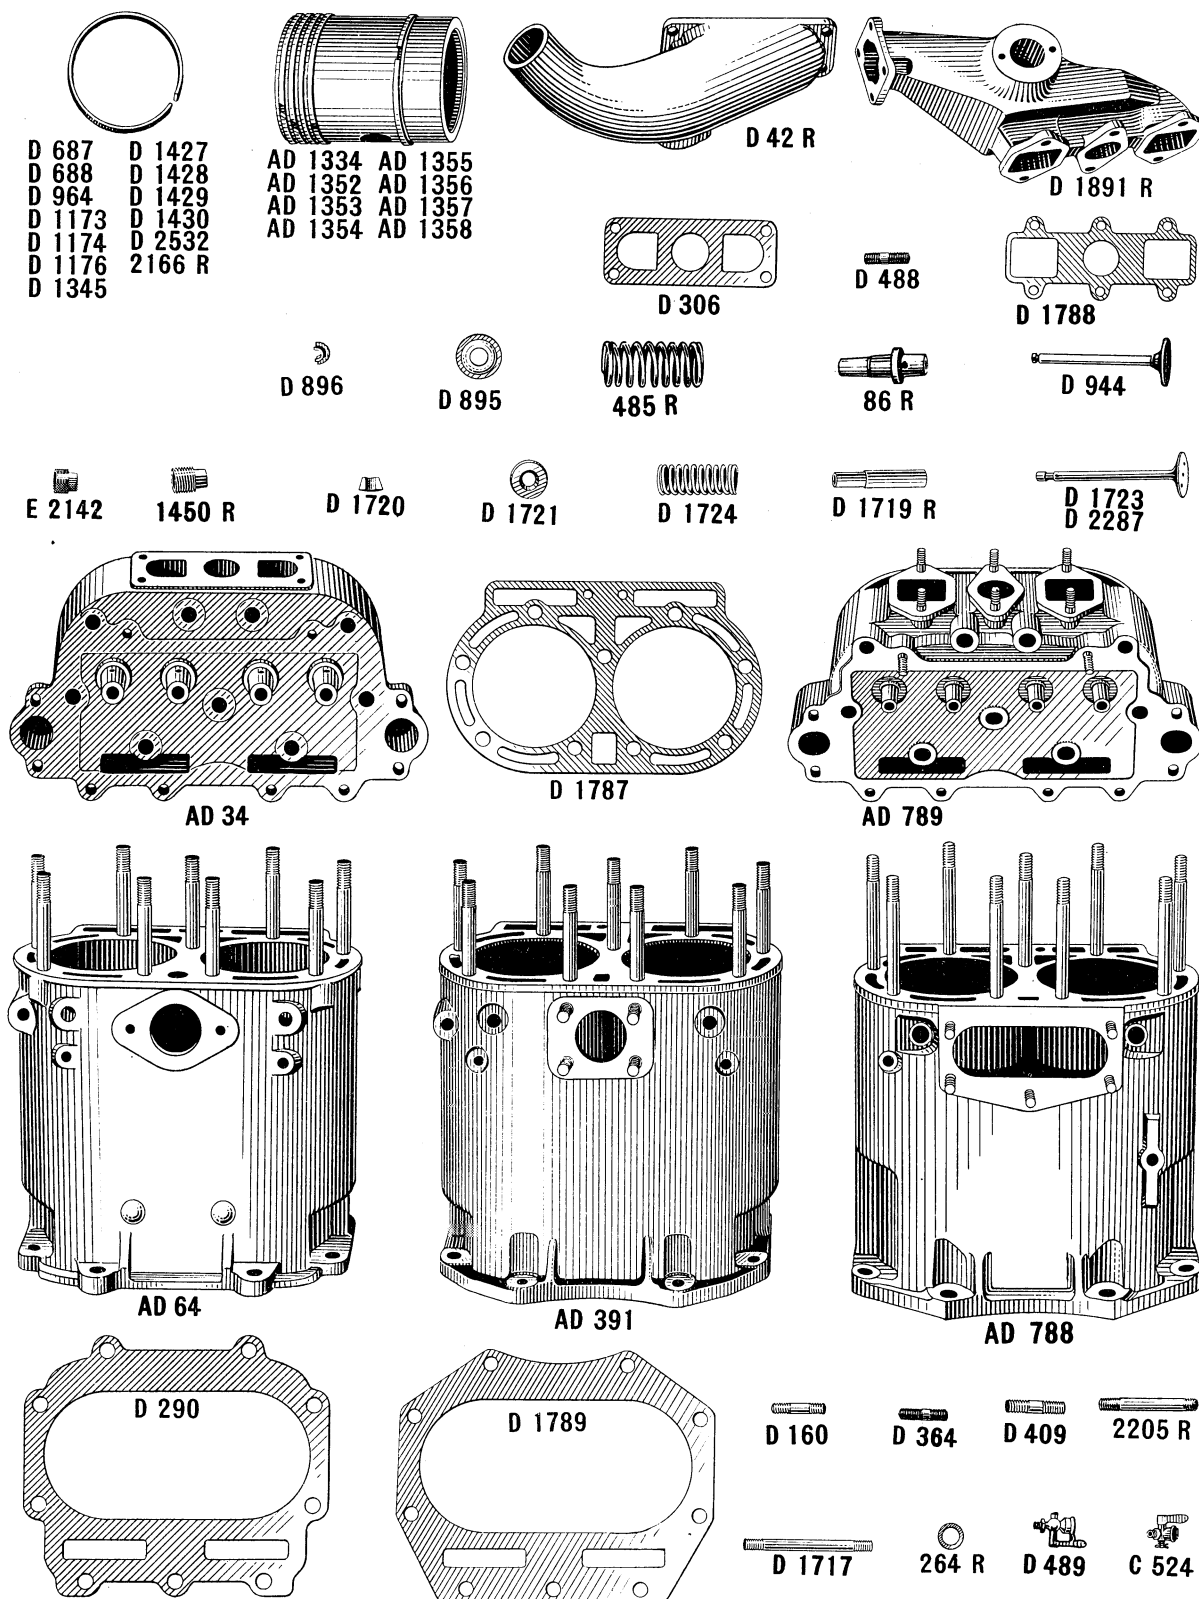



Plate No. 110

REPAIR PARTS FOR MODELS D AND DI TRACTORS



WATER FEED

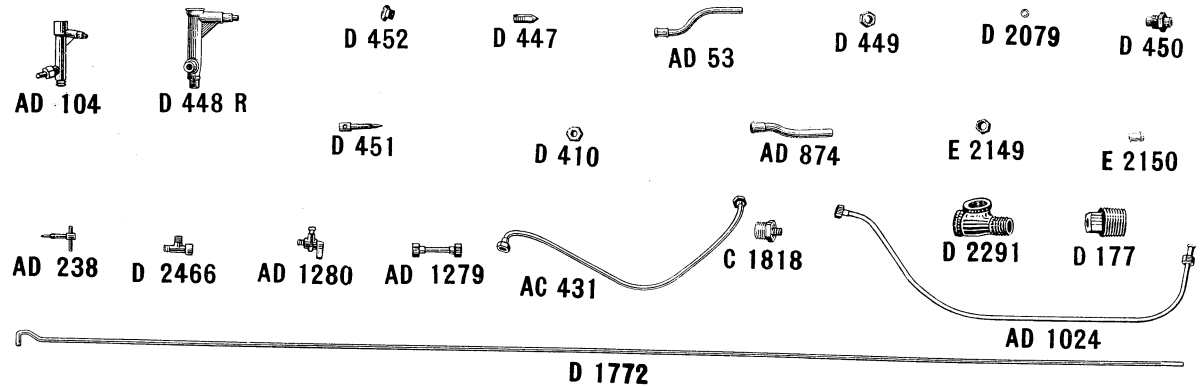

CAM SHAFT AND CAM FOLLOWERS

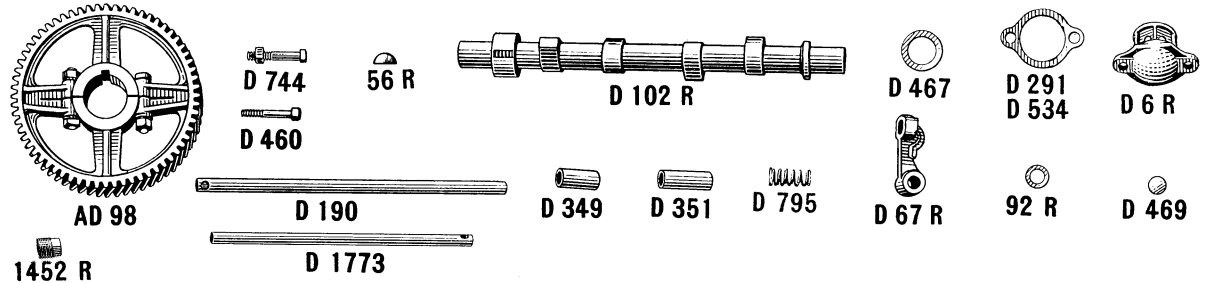


TAPPETS

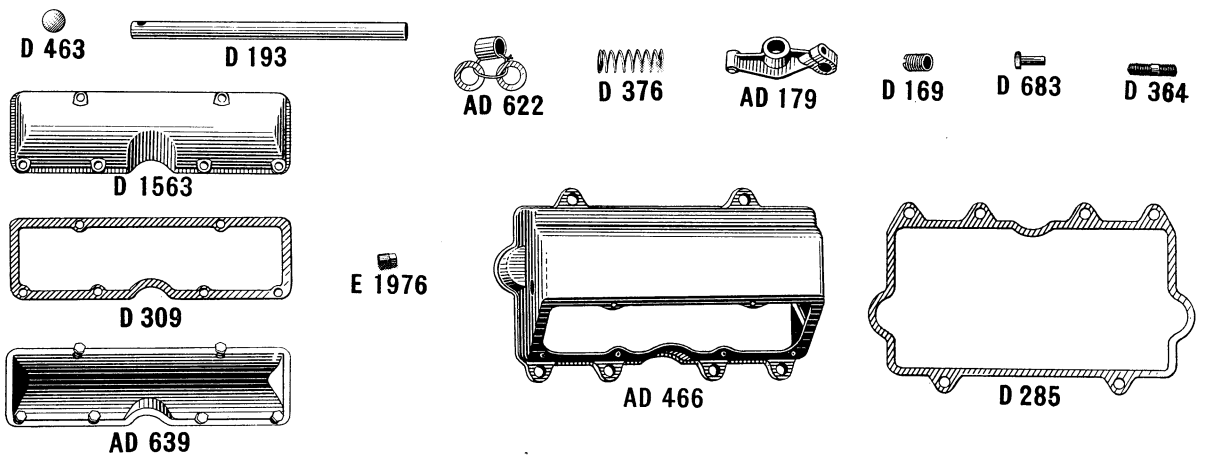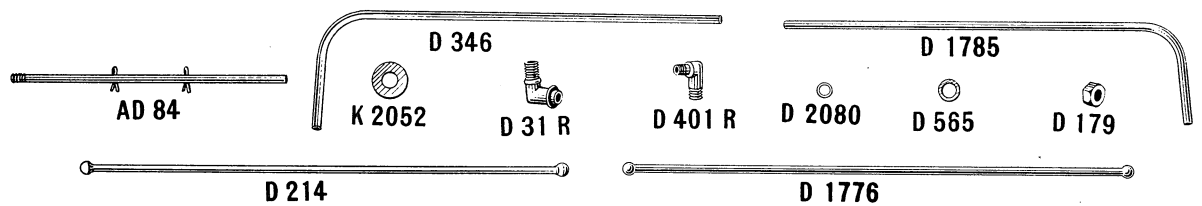

REPAIR PARTS FOR MODELS D AND DI TRACTORS


MUFFLER AND SPARK ARRESTER

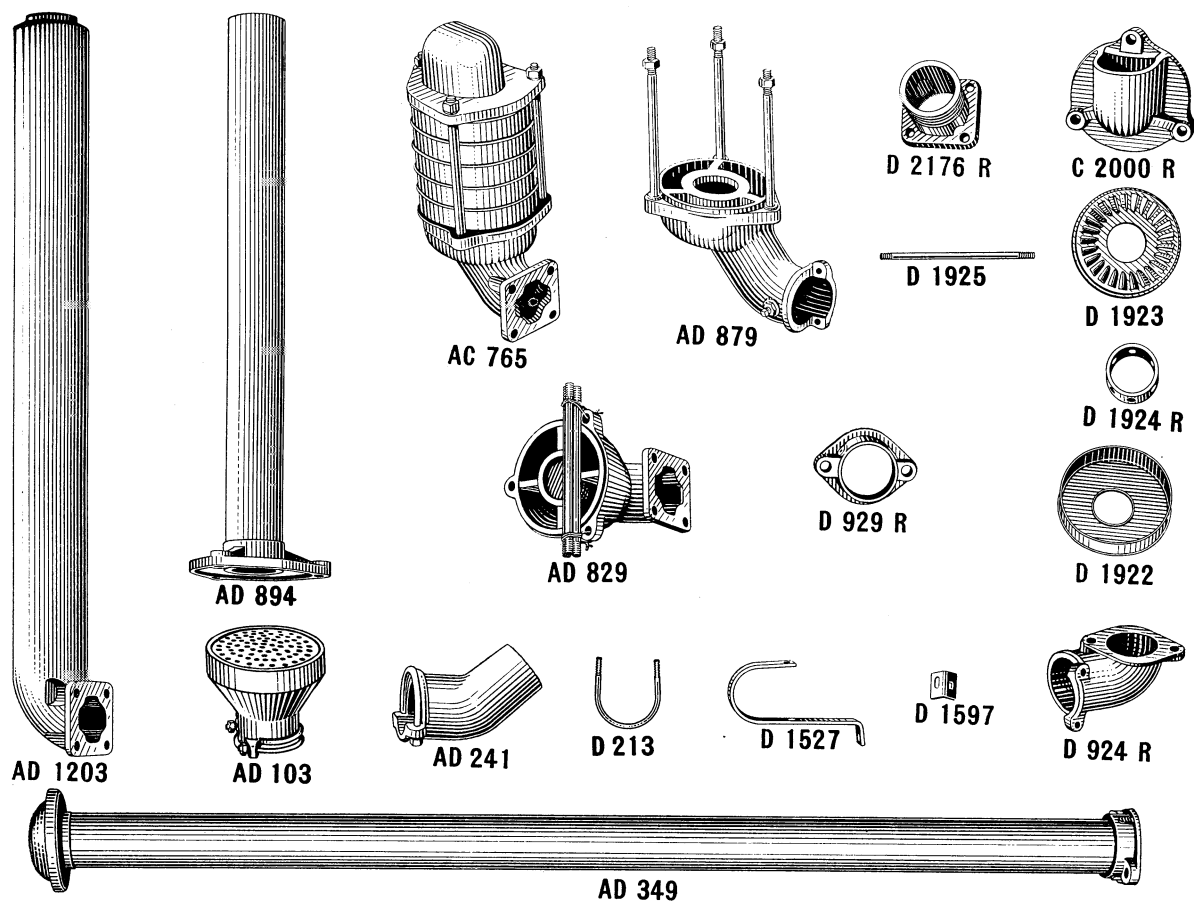

CRANK CASE VENTILATOR




CRANK CASE BREATHER

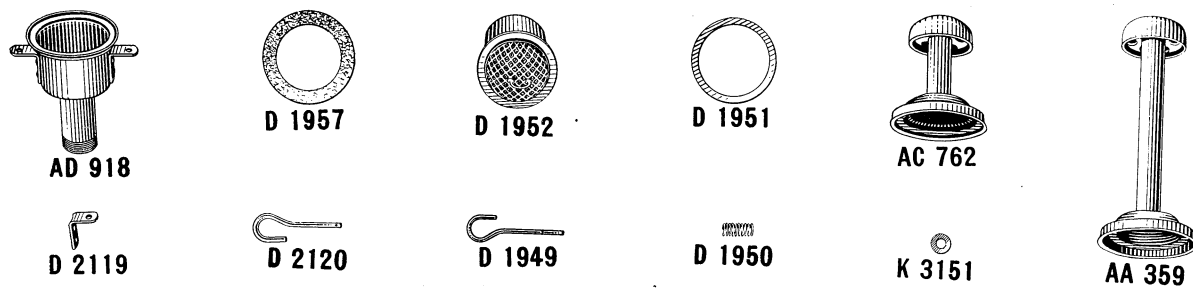

REPAIR PARTS FOR MODELS D AND DI TRACTORS


GOVERNOR

GOVERNOR IDLER GEAR

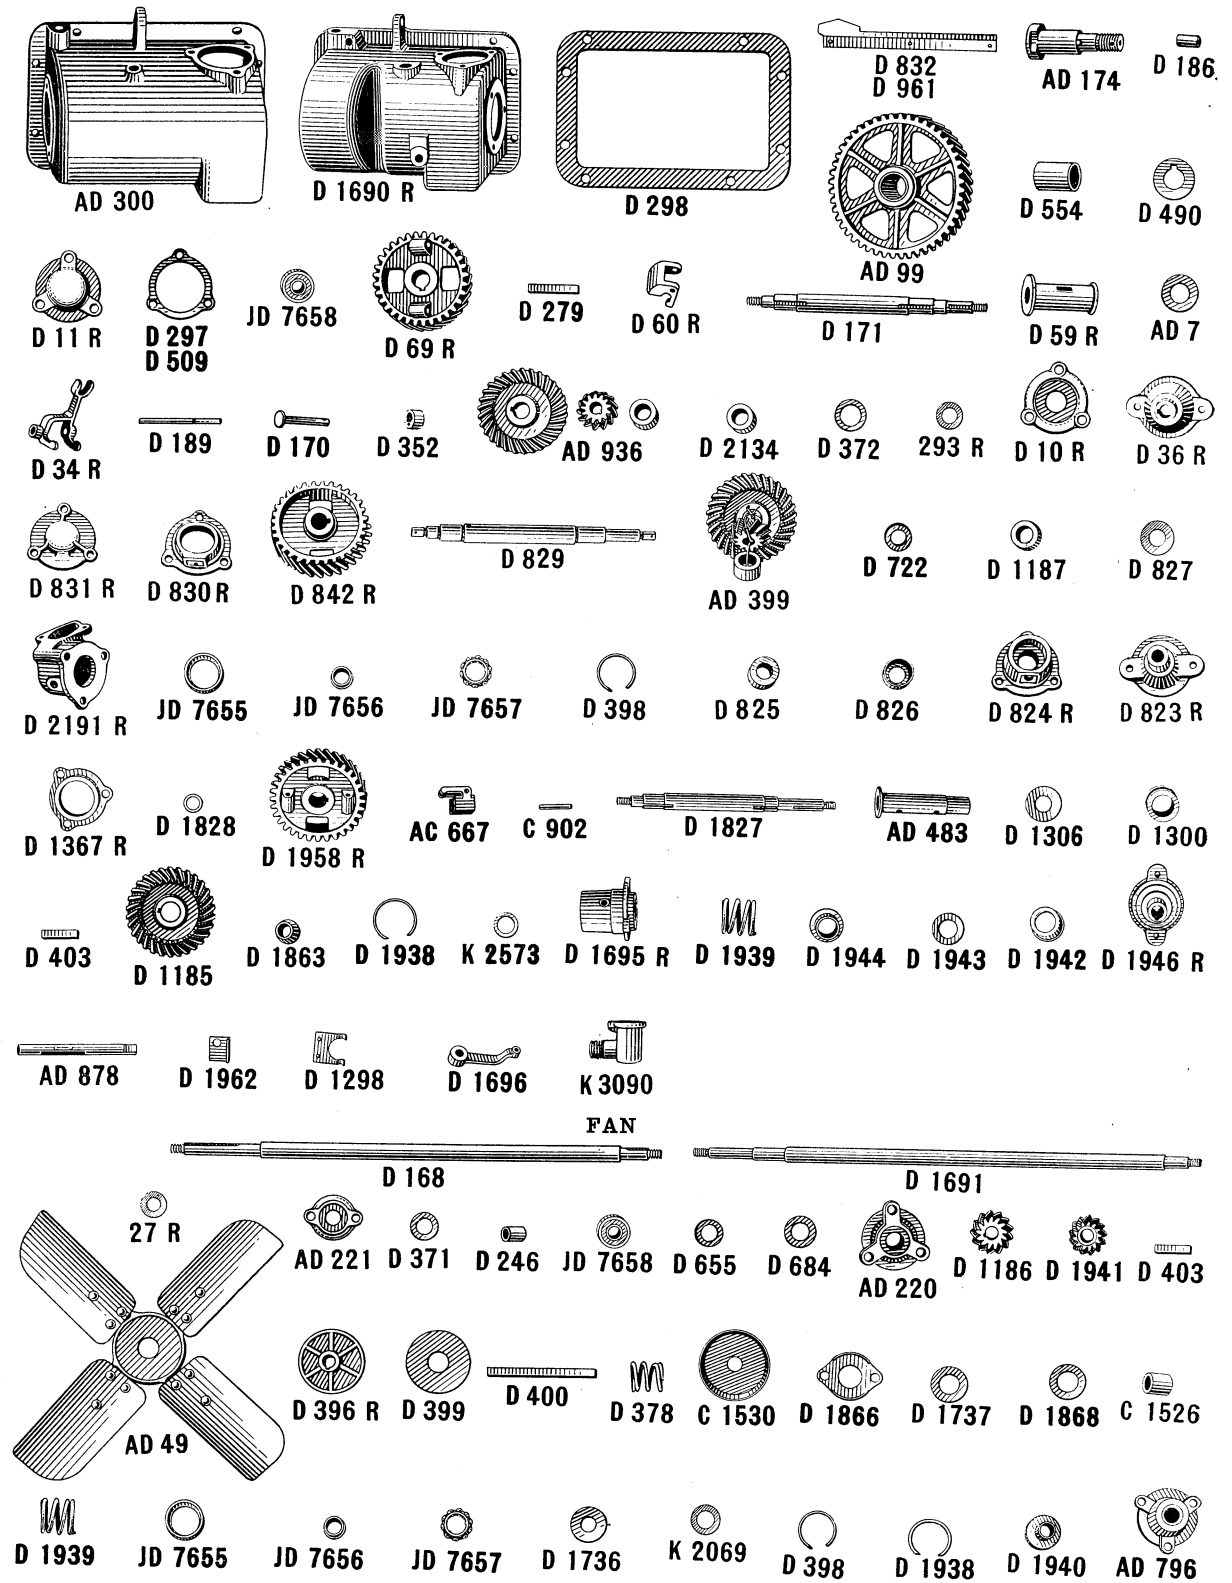


REPAIR PARTS FOR MODELS D AND DI TRACTORS

CONTROLS

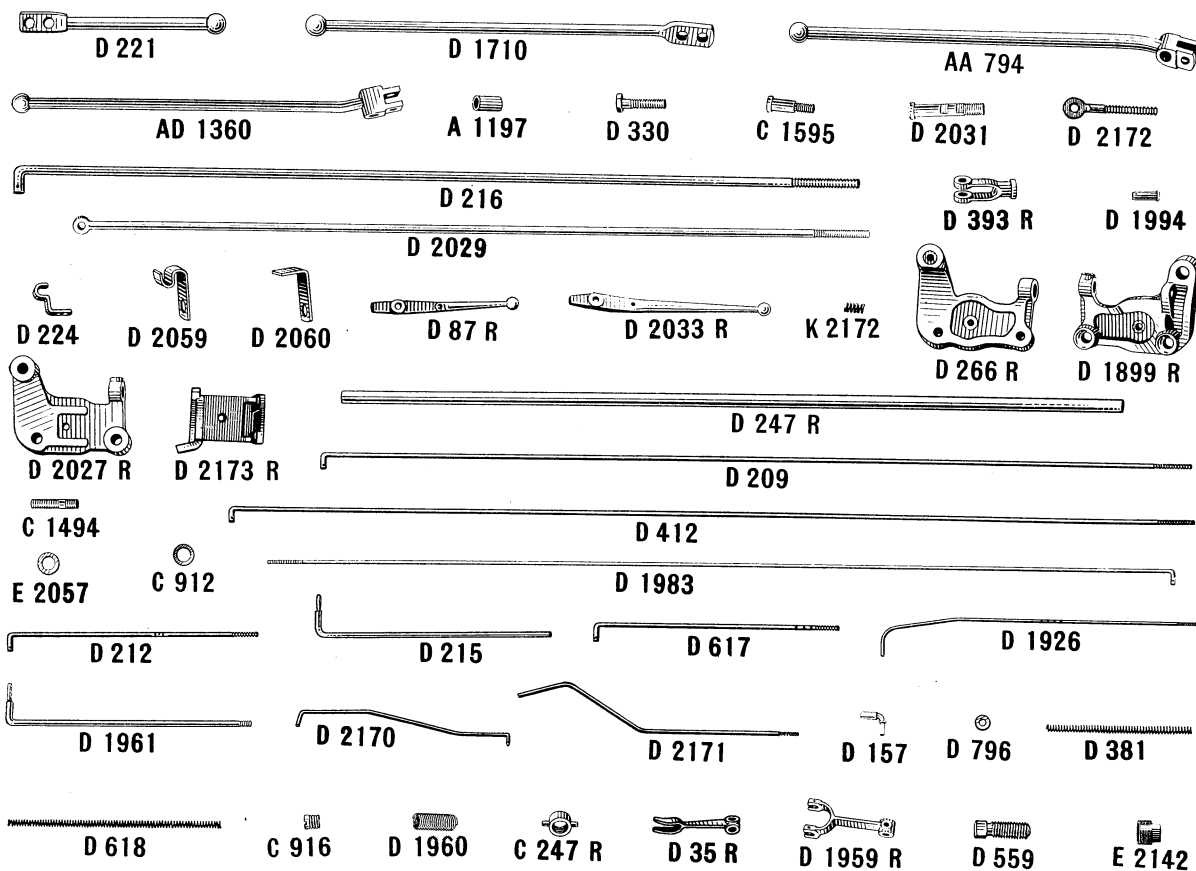

LUBRICATING SYSTEM AND OIL PUMP

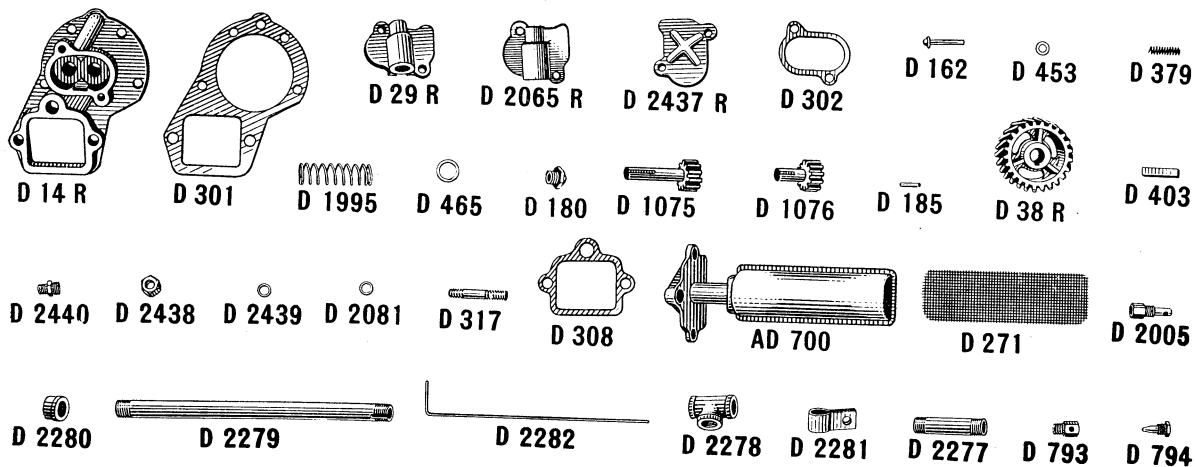

REPAIR PARTS FOR MODELS D AND DI TRACTORS

OIL FILTER AND INDICATOR


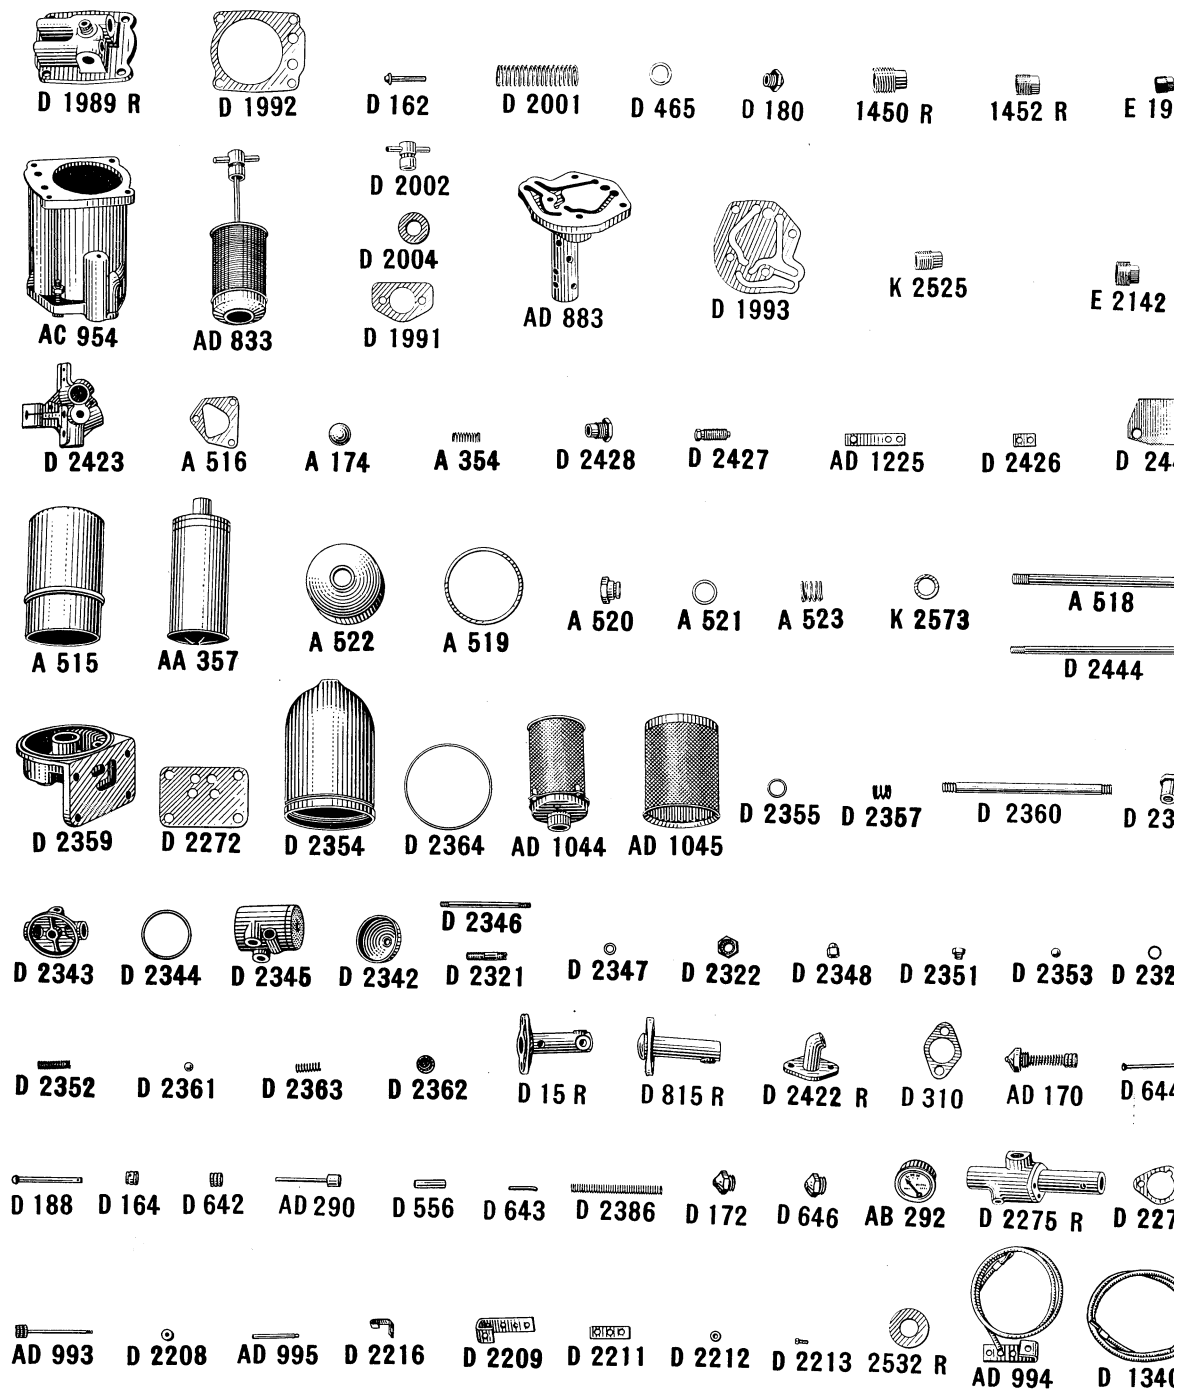


Plate No. 115

REPAIR PARTS FOR MODELS D AND DI TRACTORS

OIL PIPES AND FITTINGS

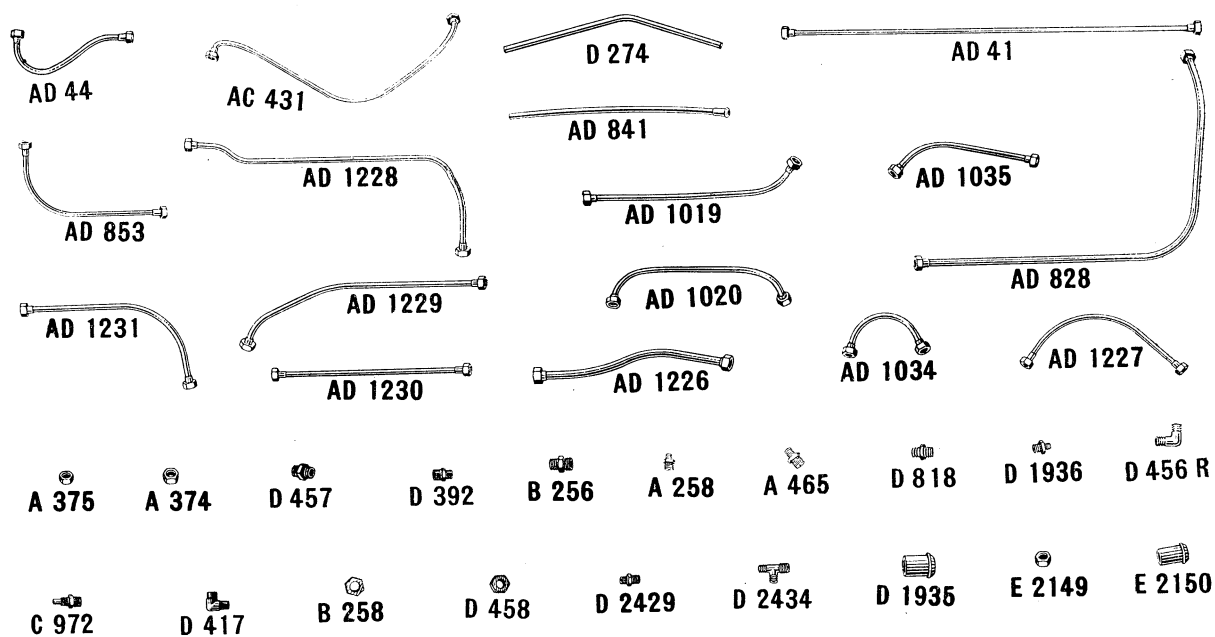

TOOLS


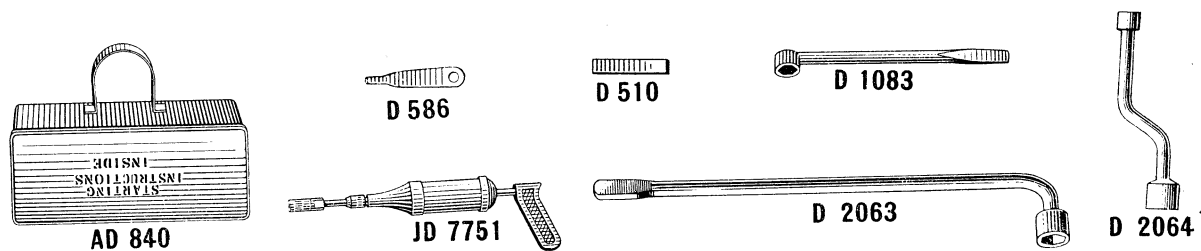


Plate No. 116

REPAIR PARTS FOR MODELS D AND DI TRACTORS


HOOD

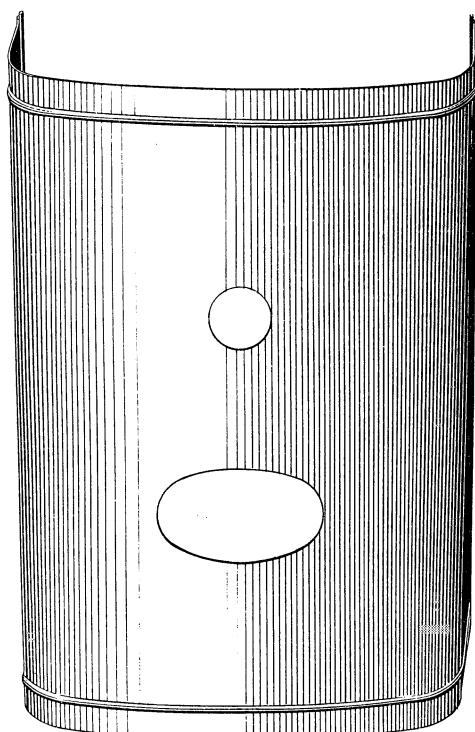

AD 13 AD 541


C 1573


D 236

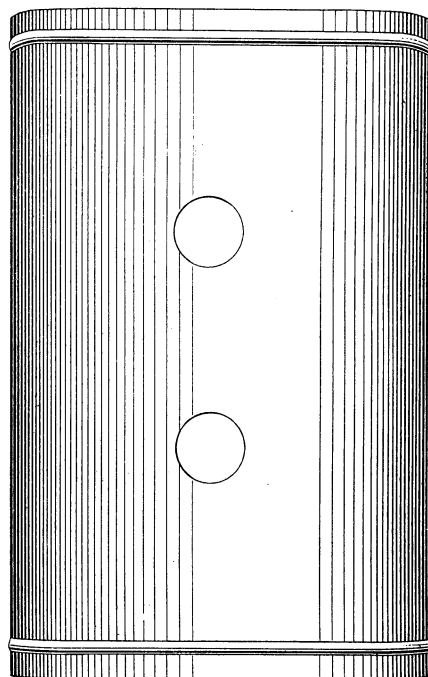
C 941


AD 744

RADIATOR GUARD AND CURTAIN

 

D 564


D 572


D 1856



D 379


372 R


D 1885


629 R


D 1887

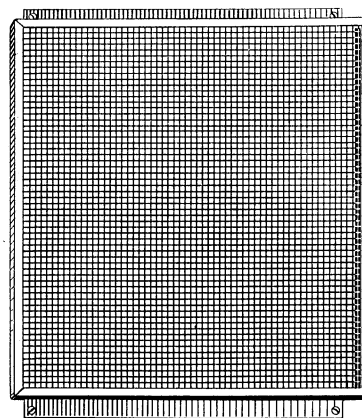
D 454


AD 813



2389 R AD 1469



2387 R




D 1886



D 1545




D 1884

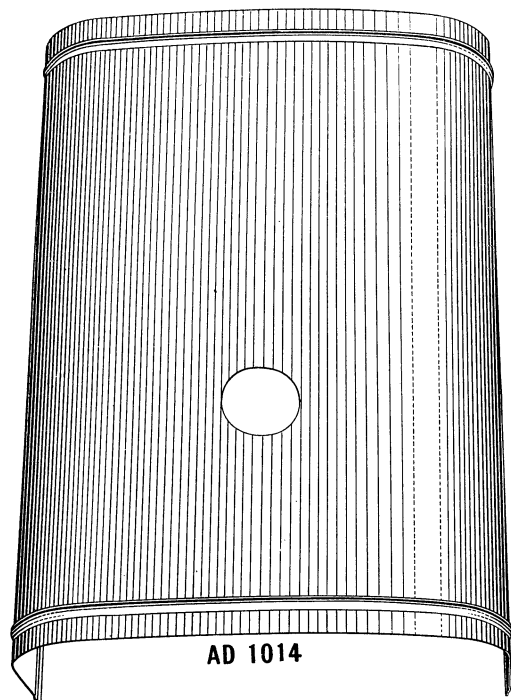


AD 1014

REPAIR PARTS FOR MODELS D AND DI TRACTORS


COOLING SYSTEM

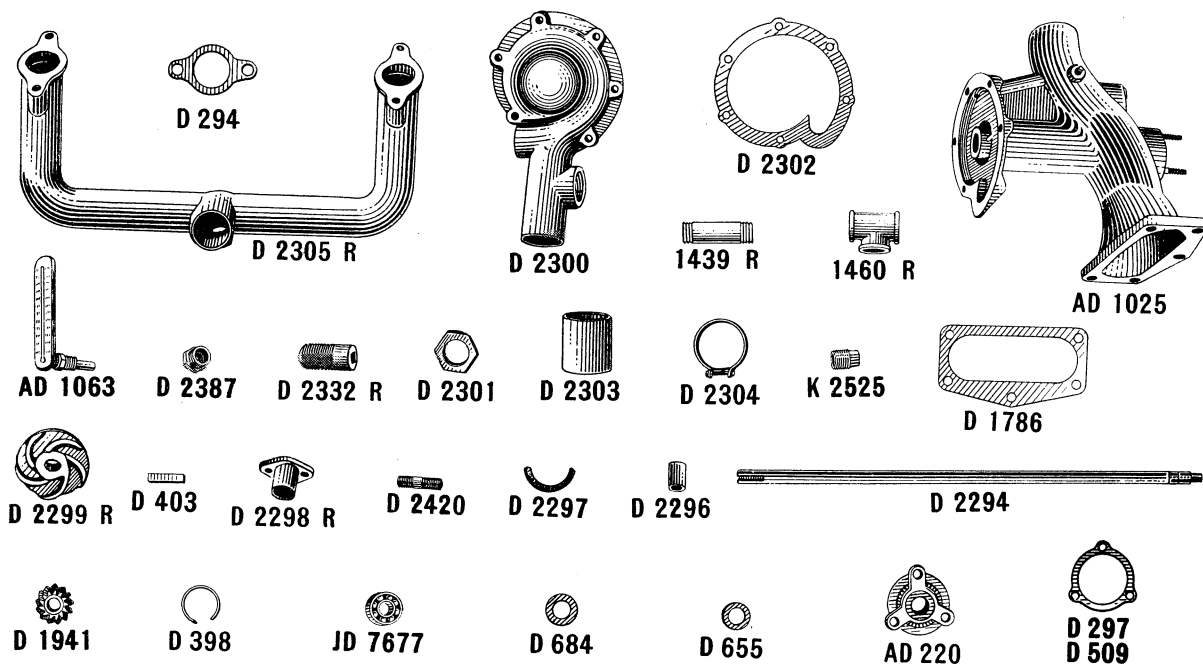

RADIATOR GUARD

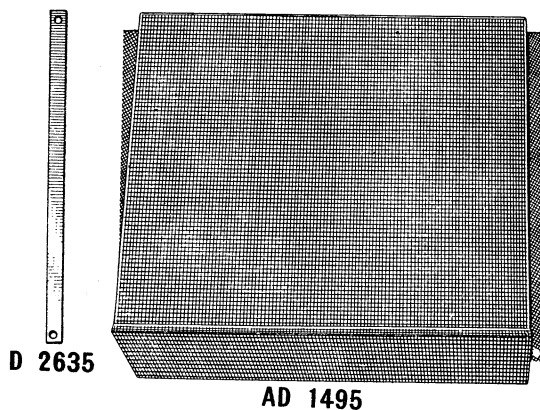


PULLEY AND OVERPULLEY

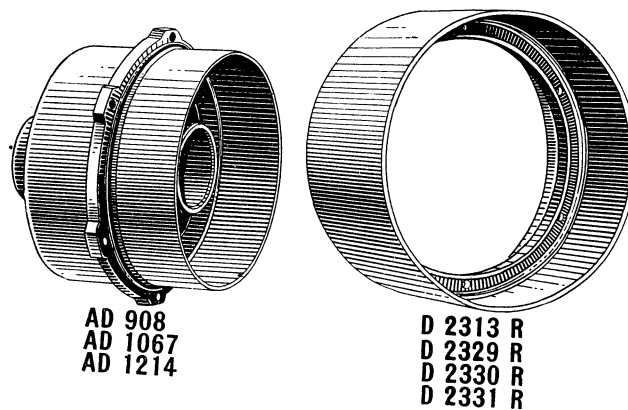


REPAIR PARTS FOR MODELS D AND DI TRACTORS



COOLING SYSTEM—Continued

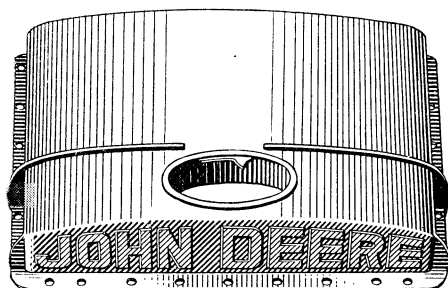

D 53 R

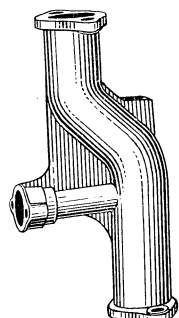


AD 222

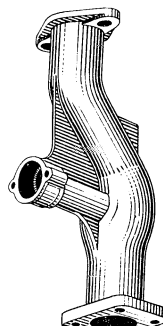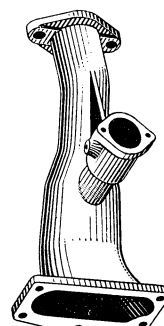AD 393
AD 545

AD 860



 D 272




D 295



D 966



D 1786

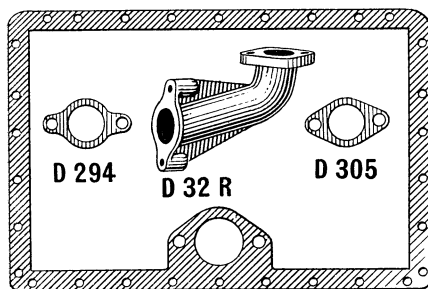

D 303



27 R



AD 86



AD 97



D 319 R



D 126



D 362



AD 922



D 2102




D 2388 R



D 473



D 2101

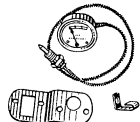

AA 952



AA 883



A 1247



A 1284




D 1138




A 1248




C 1818

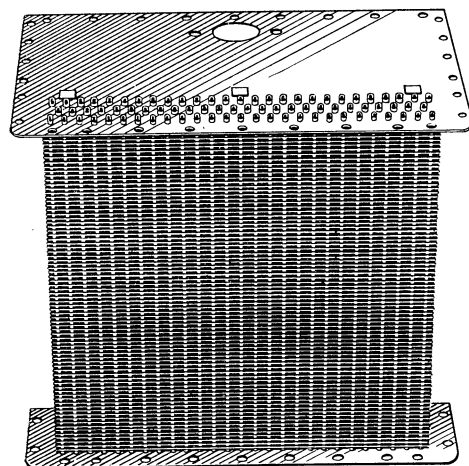

AD 1043 D 2000

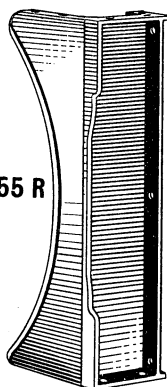

D 55 R

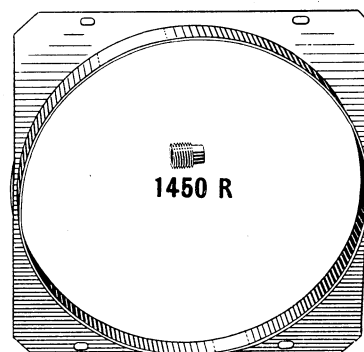


1450 R


AD 1022



 D 228




D 230

 


D 231

 D 2284




D 229

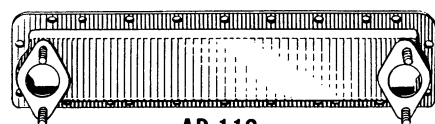

AD 112

D 2283 R

 D 488



D 304

REPAIR PARTS FOR MODELS D AND DI TRACTORS

PULLEY



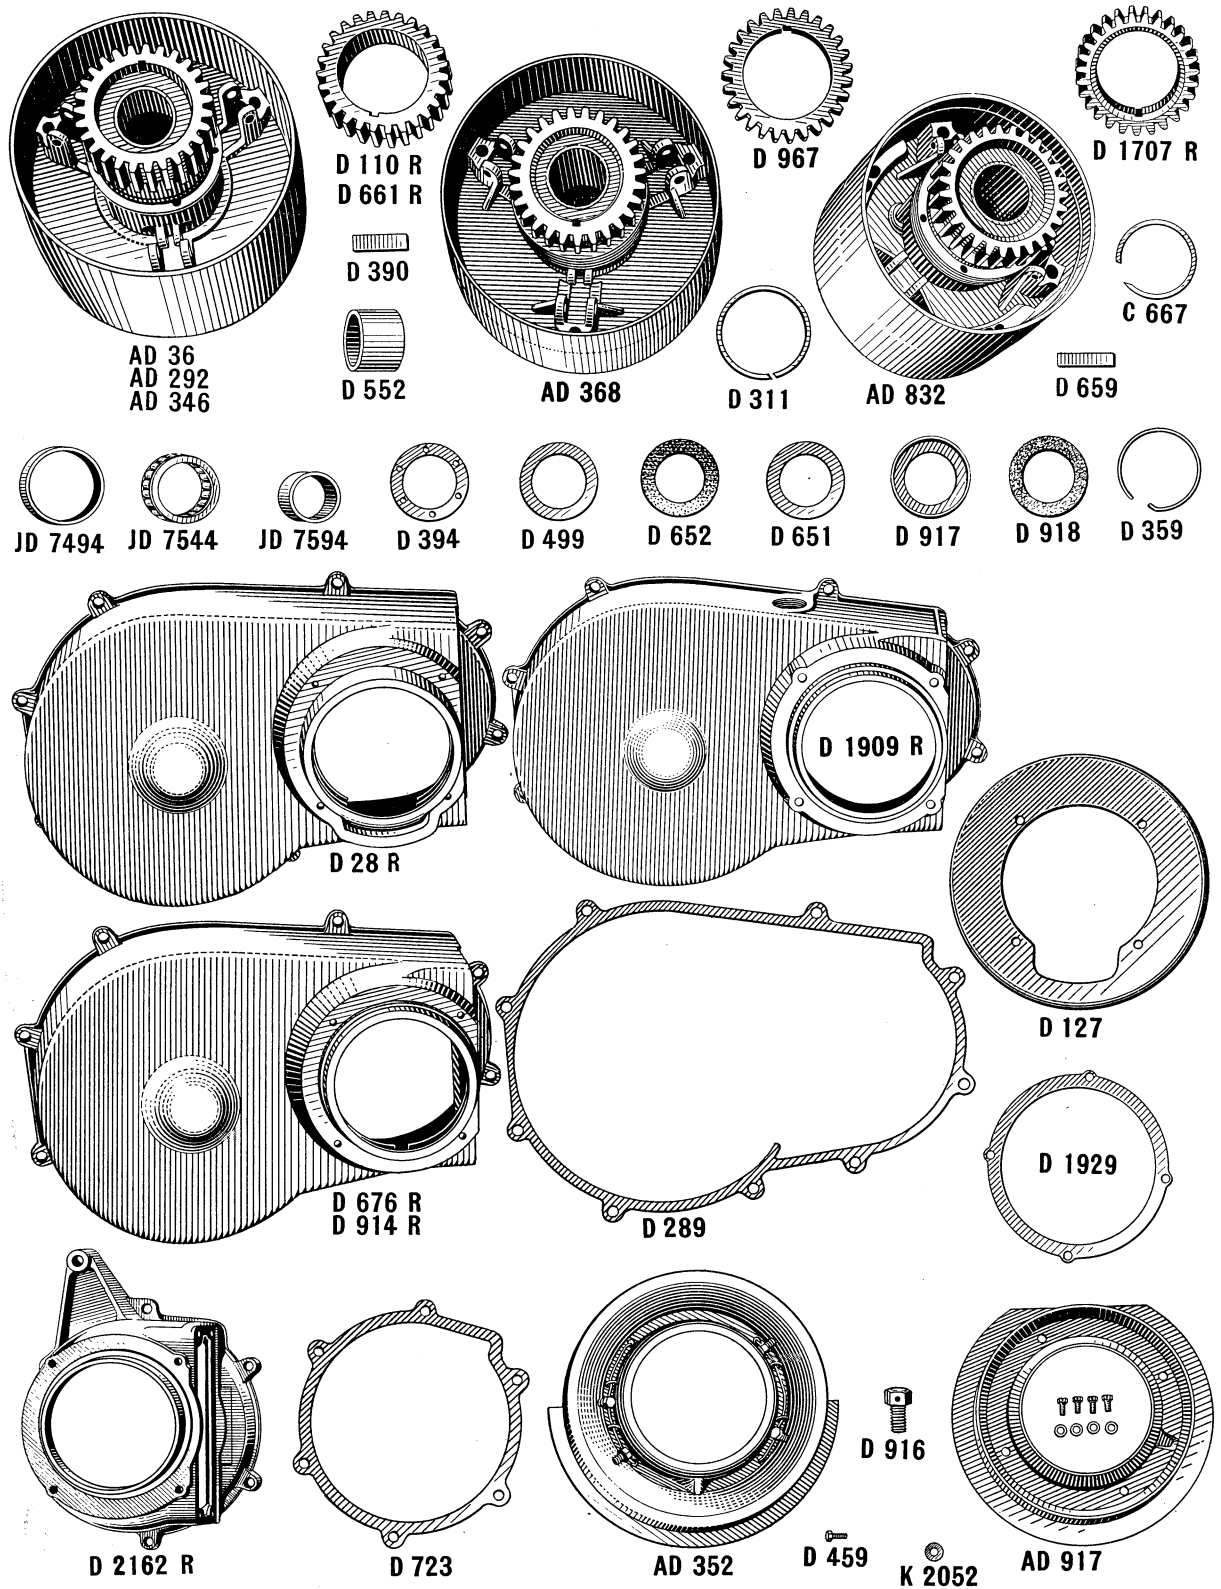


Plate No. 121


CLUTCH PARTS

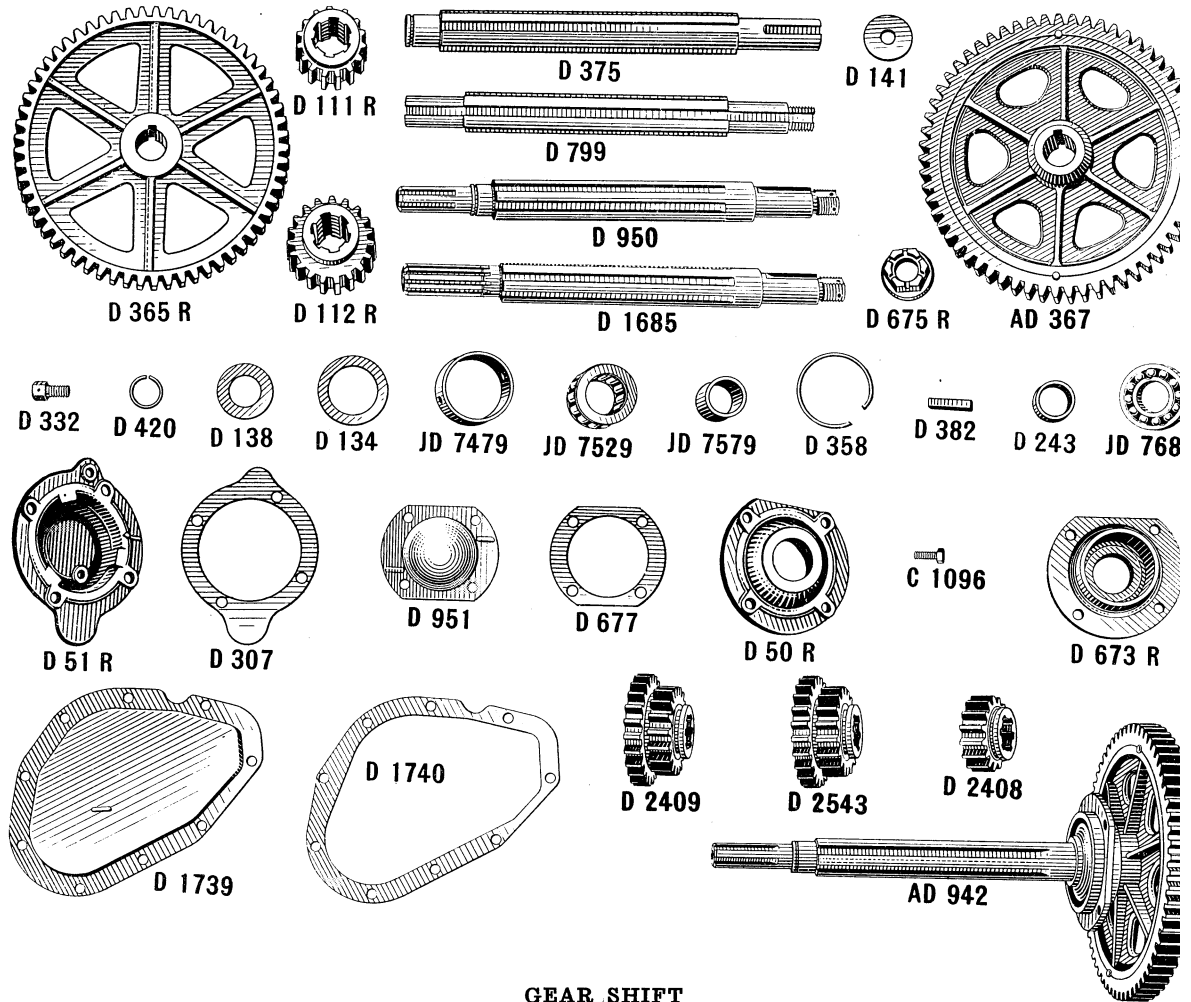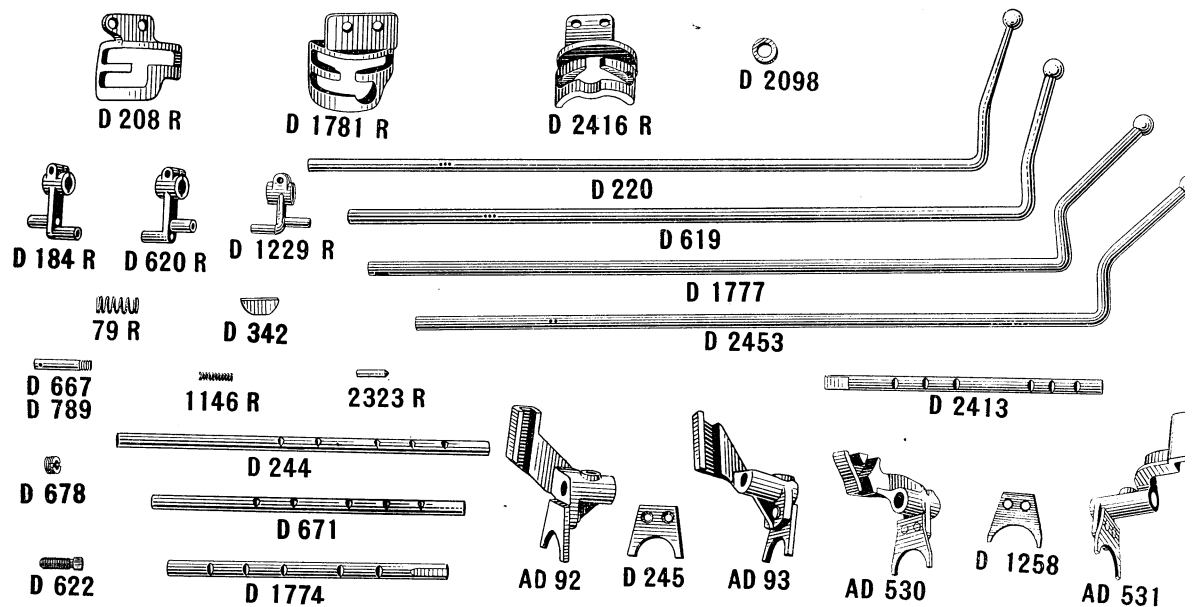

REPAIR PARTS FOR MODELS D AND DI TRACTORS**SPLINE SHAFT****GEAR SHIFT**

REPAIR PARTS FOR MODELS D AND DI TRACTORS

REVERSE SHAFT

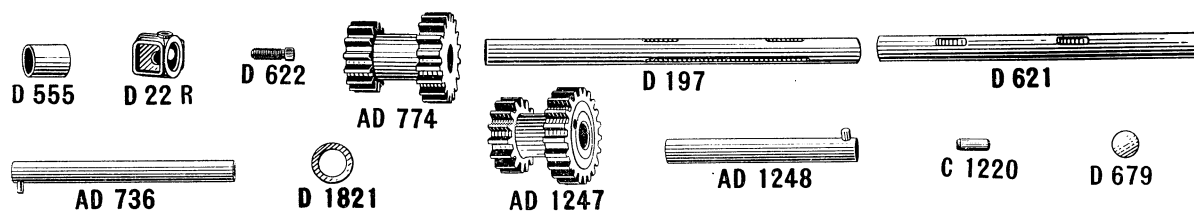

DIFFERENTIAL

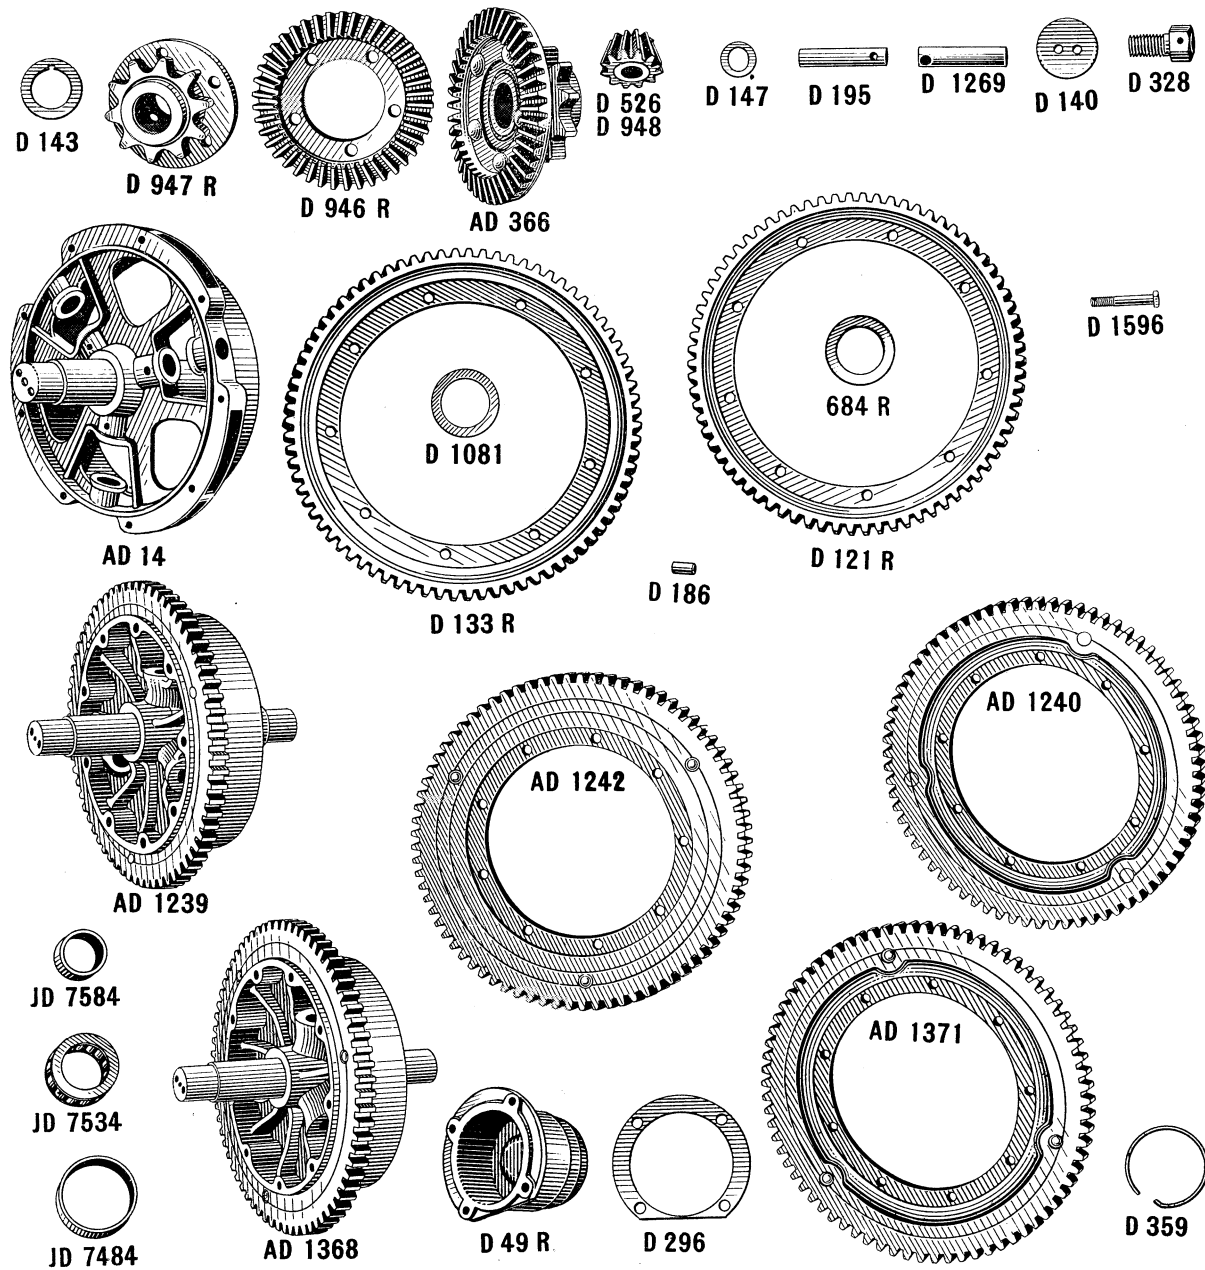


Plate No. 124

REPAIR PARTS FOR MODELS D AND DI TRACTORS

FINAL DRIVE

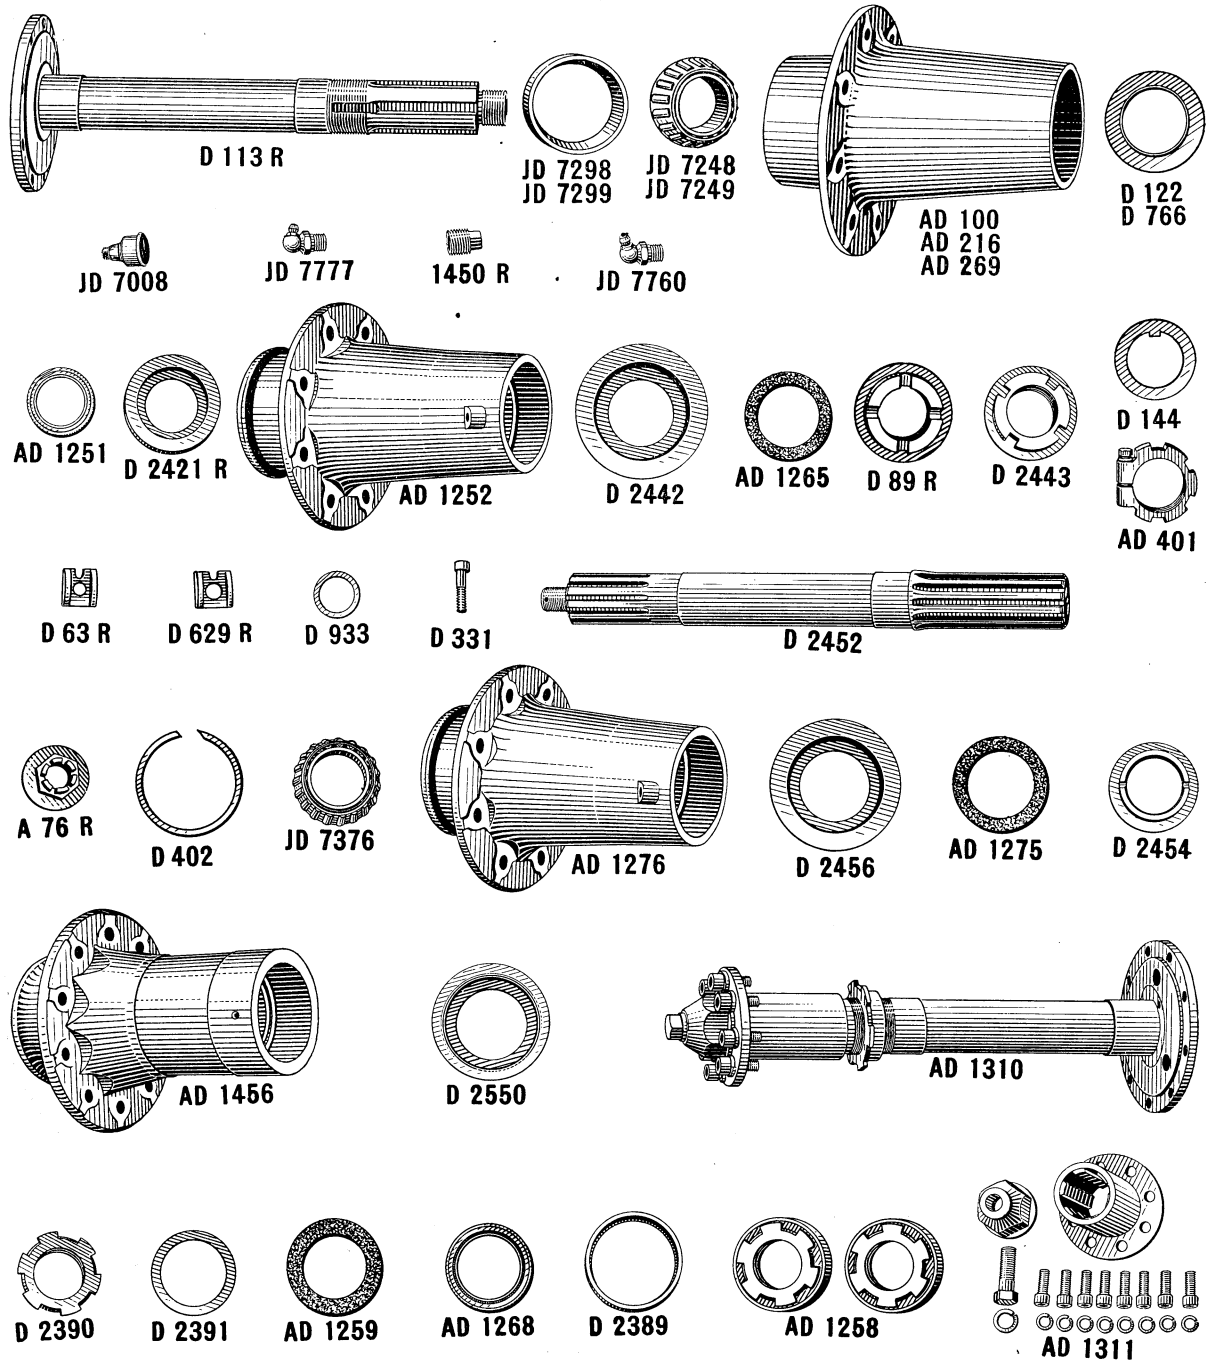
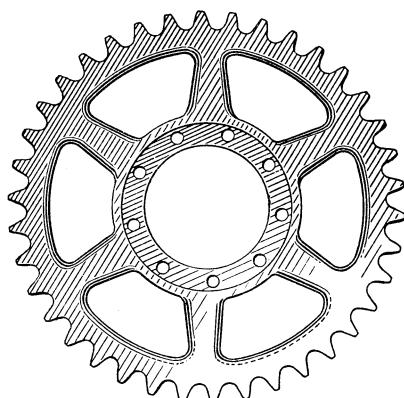
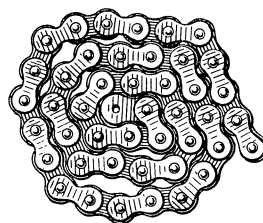
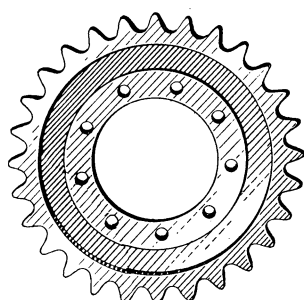
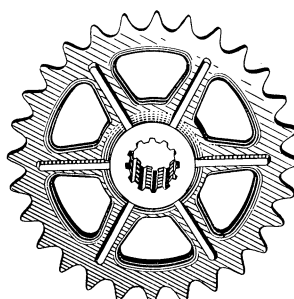
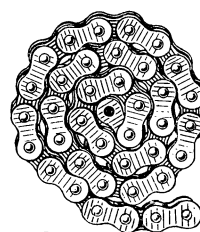
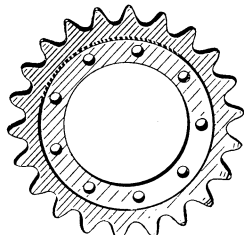
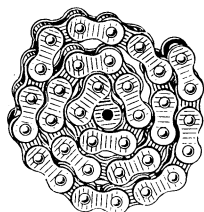
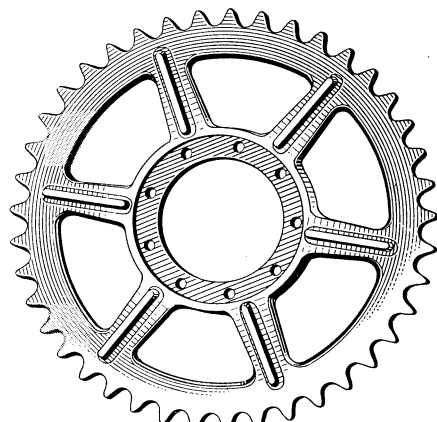
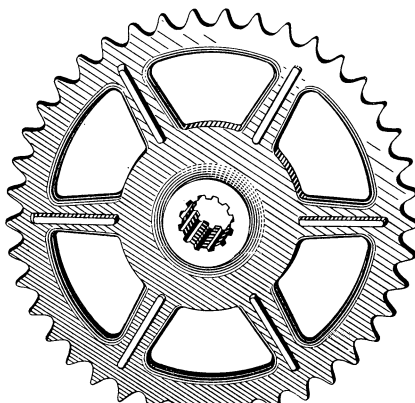
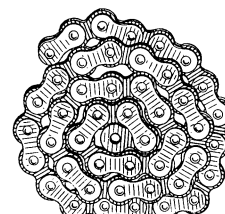
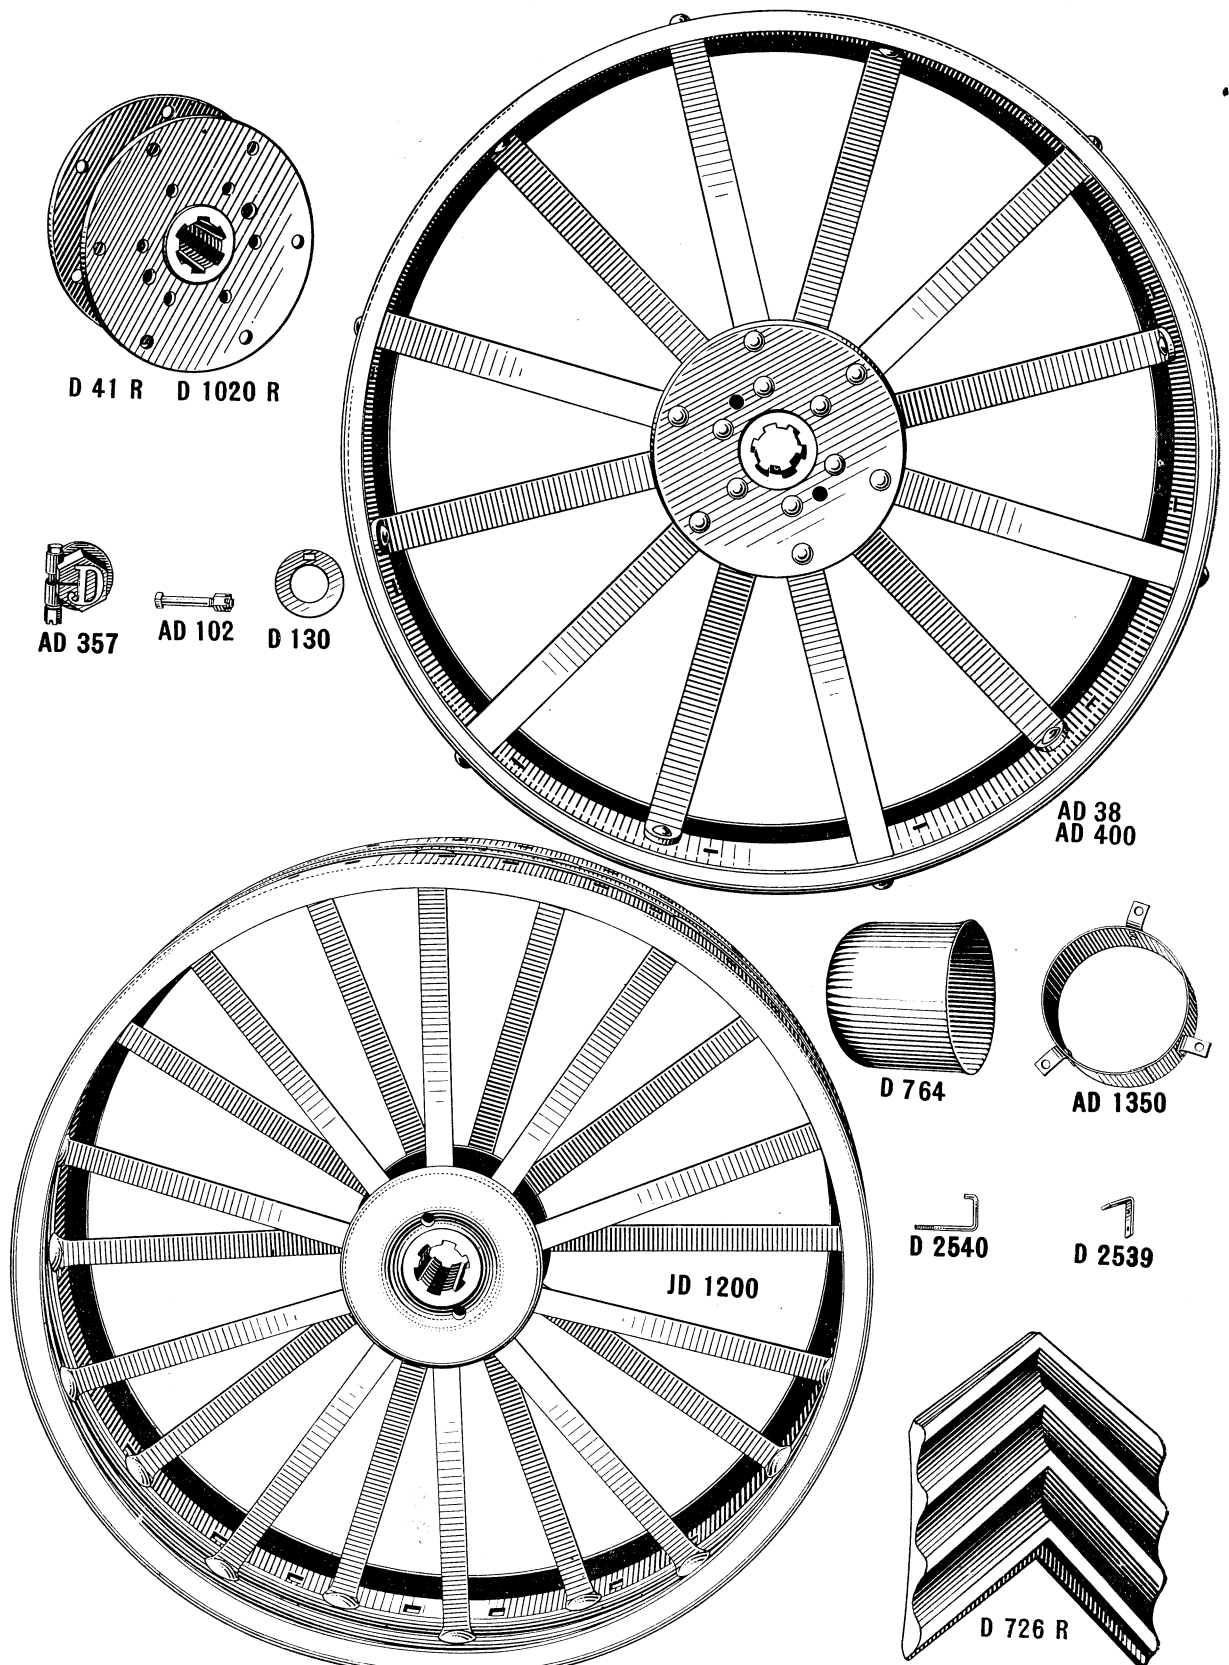



Plate No. 125

REPAIR PARTS FOR MODELS D AND DI TRACTORS**FINAL DRIVE—Continued****D 74 R****AD 31****D 728 R****D 2535****AD 315****D 727 R****AD 314****AD 1234****D 1542****AD 200****D 1780 R****D 2457****AD 787**

**REPAIR PARTS FOR MODELS D AND DI TRACTORS
REAR WHEELS****Plate No. 127**

REPAIR PARTS FOR MODELS D AND DI TRACTORS

REAR WHEELS—Continued

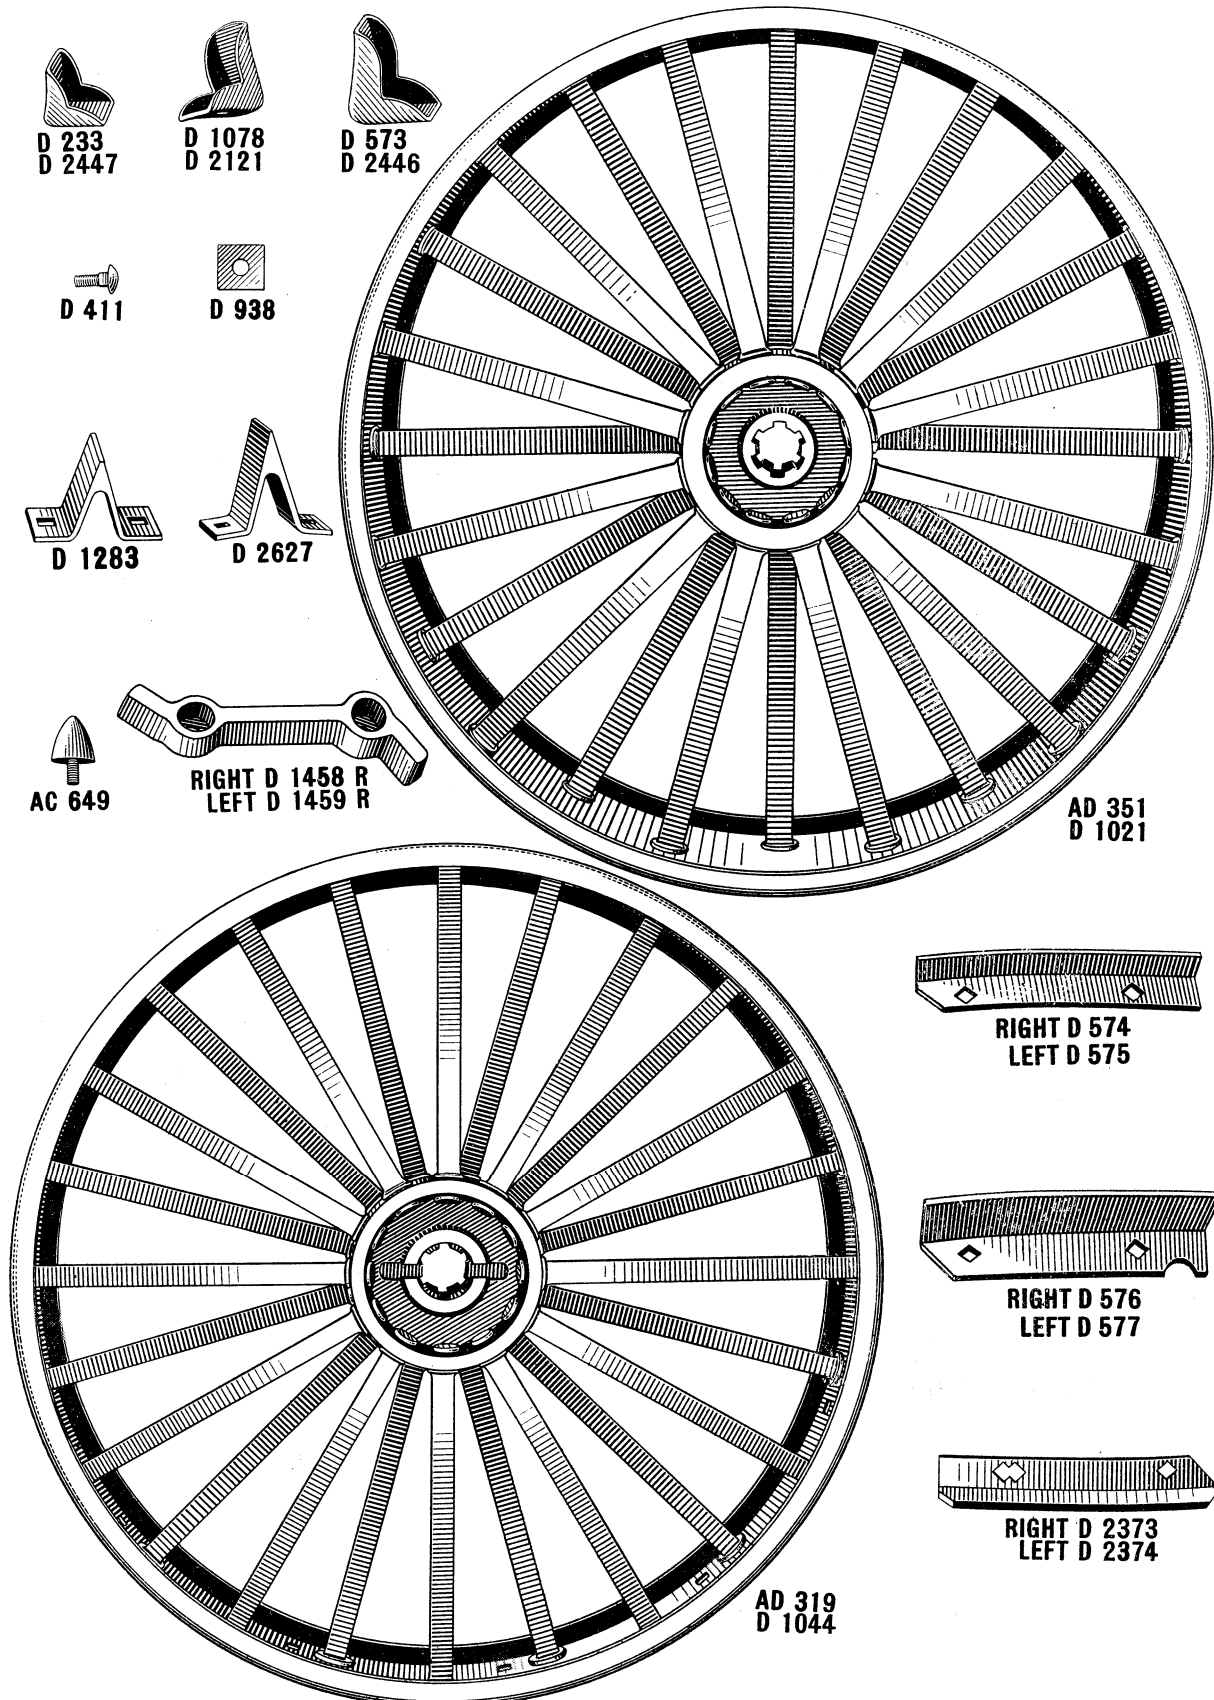

REPAIR PARTS FOR MODELS D AND DI TRACTORS

REAR WHEELS—Continued

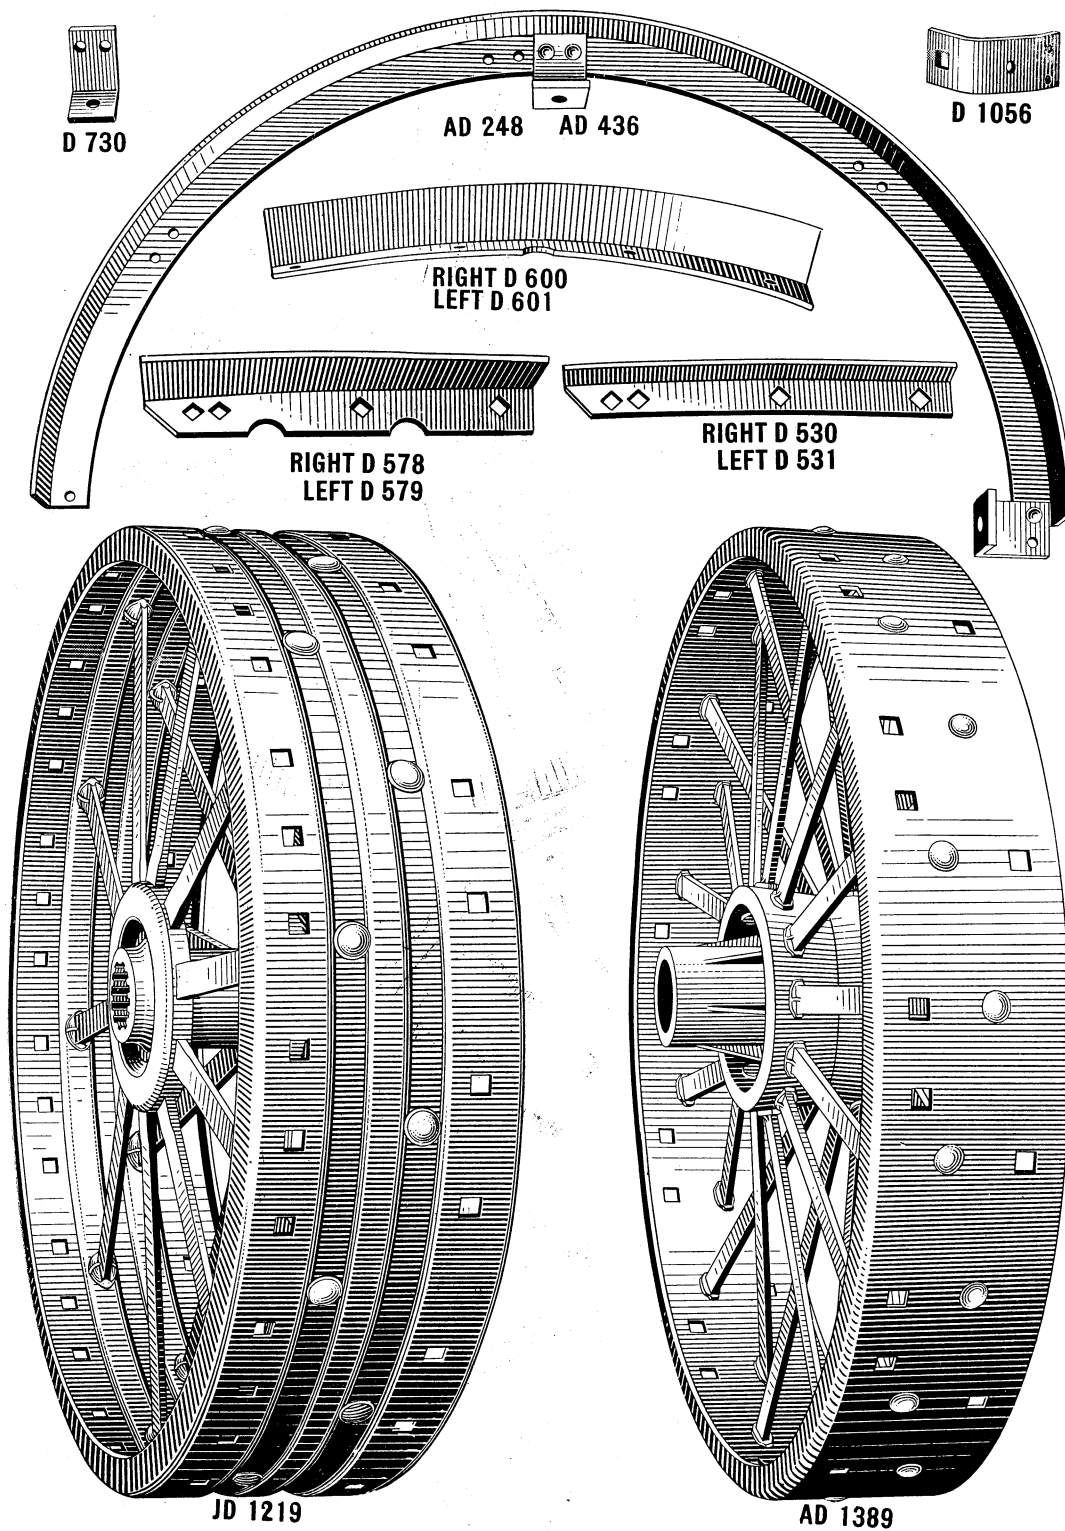
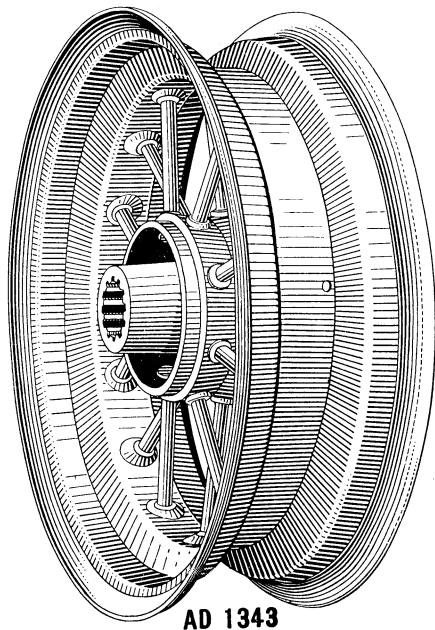


Plate No. 129

REPAIR PARTS FOR MODELS D AND DI TRACTORS


REAR WHEELS—Continued

A small bolt with a hexagonal head and a threaded shaft.

D 2461

A small nut with a hexagonal head and a threaded shaft.

D 2460

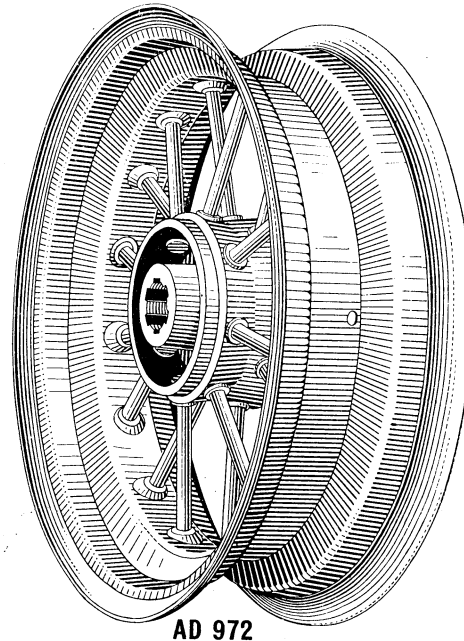A small nut with a hexagonal head and a threaded shaft.



D 2629

A small L-shaped bracket with a threaded hole.

D 2184

A small nut with a hexagonal head and a threaded shaft.

C 744

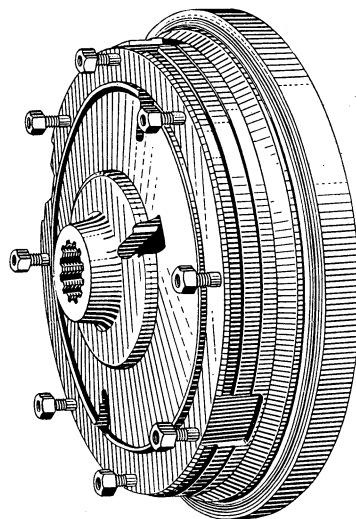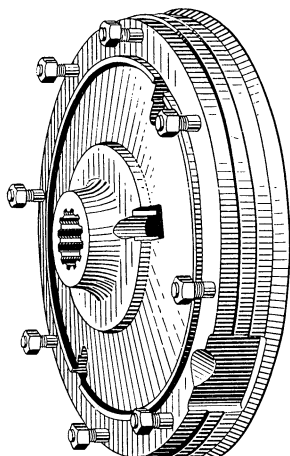
A small bracket with a hexagonal head and a threaded hole.








D 2526

AD 1471

A small bracket with a hexagonal head and a threaded hole.


D 409

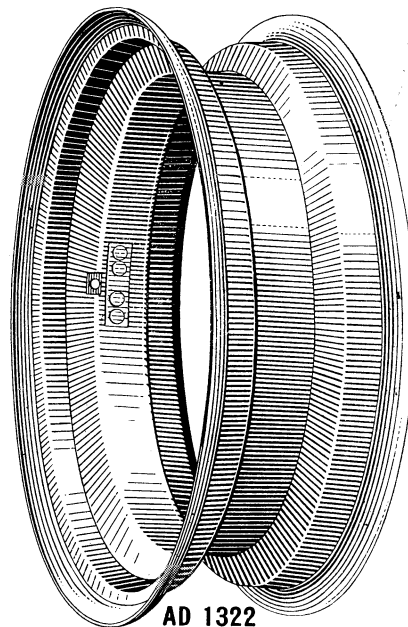

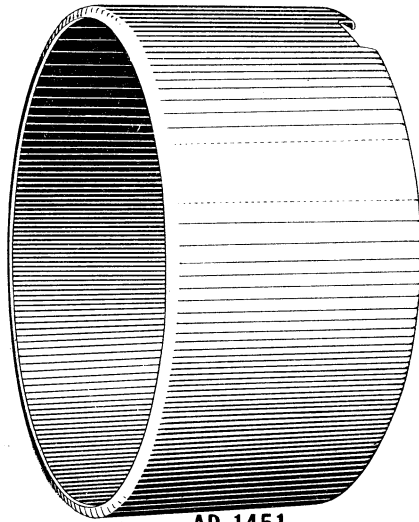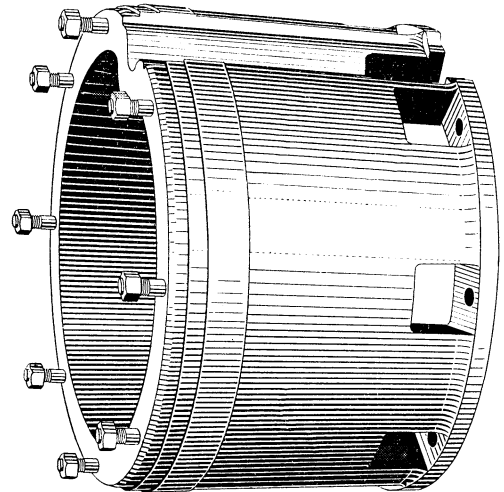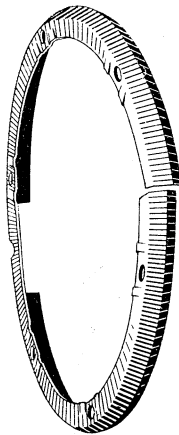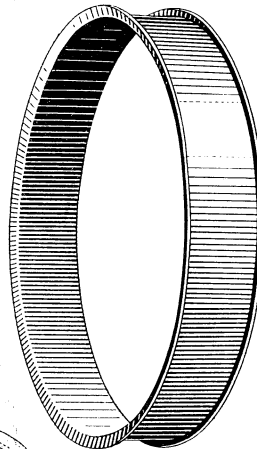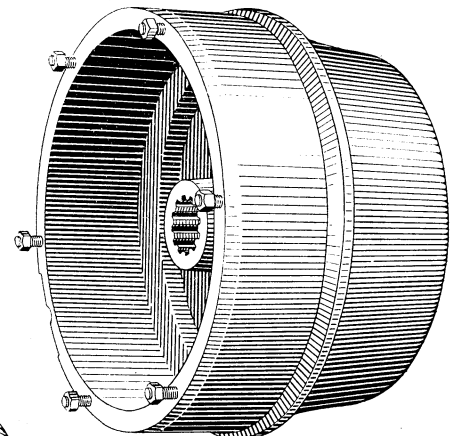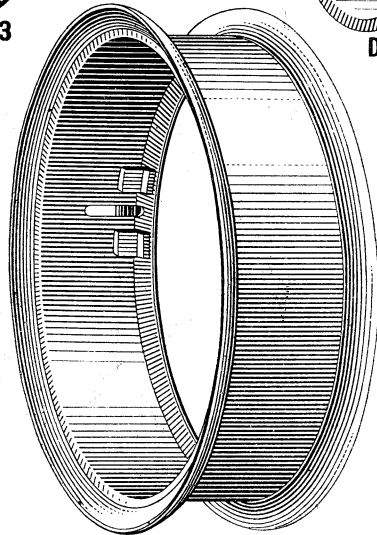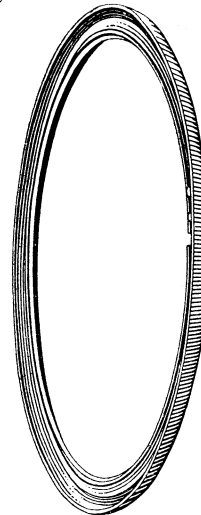
REPAIR PARTS FOR MODELS D AND DI TRACTORS**REAR WHEELS—Continued****AD 1451****AD 1450****D 2383****D 2110****AD 1462****AD 1441****AD 1443**
C 1479
C 719
D 2106

REPAIR PARTS FOR MODELS D AND DI TRACTORS

EMERGENCY BRAKE

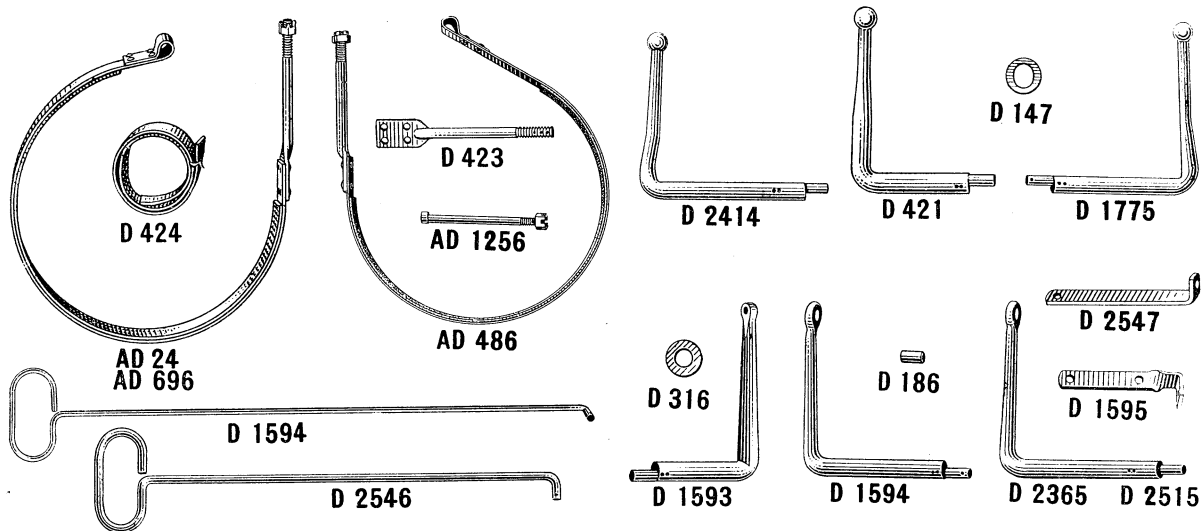

REAR WHEEL BRAKES

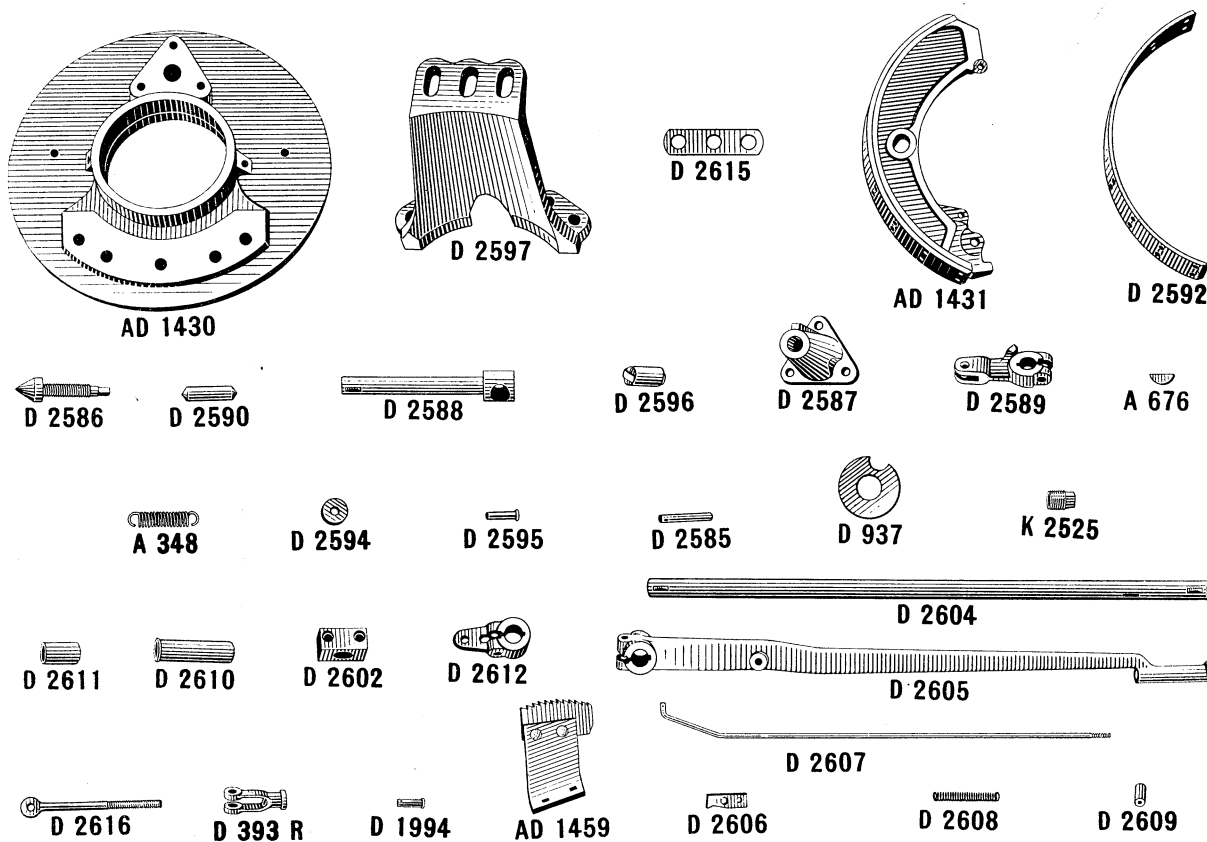

REPAIR PARTS FOR MODELS D AND DI TRACTORS

FRONT AXLE AND FRONT END SUPPORT


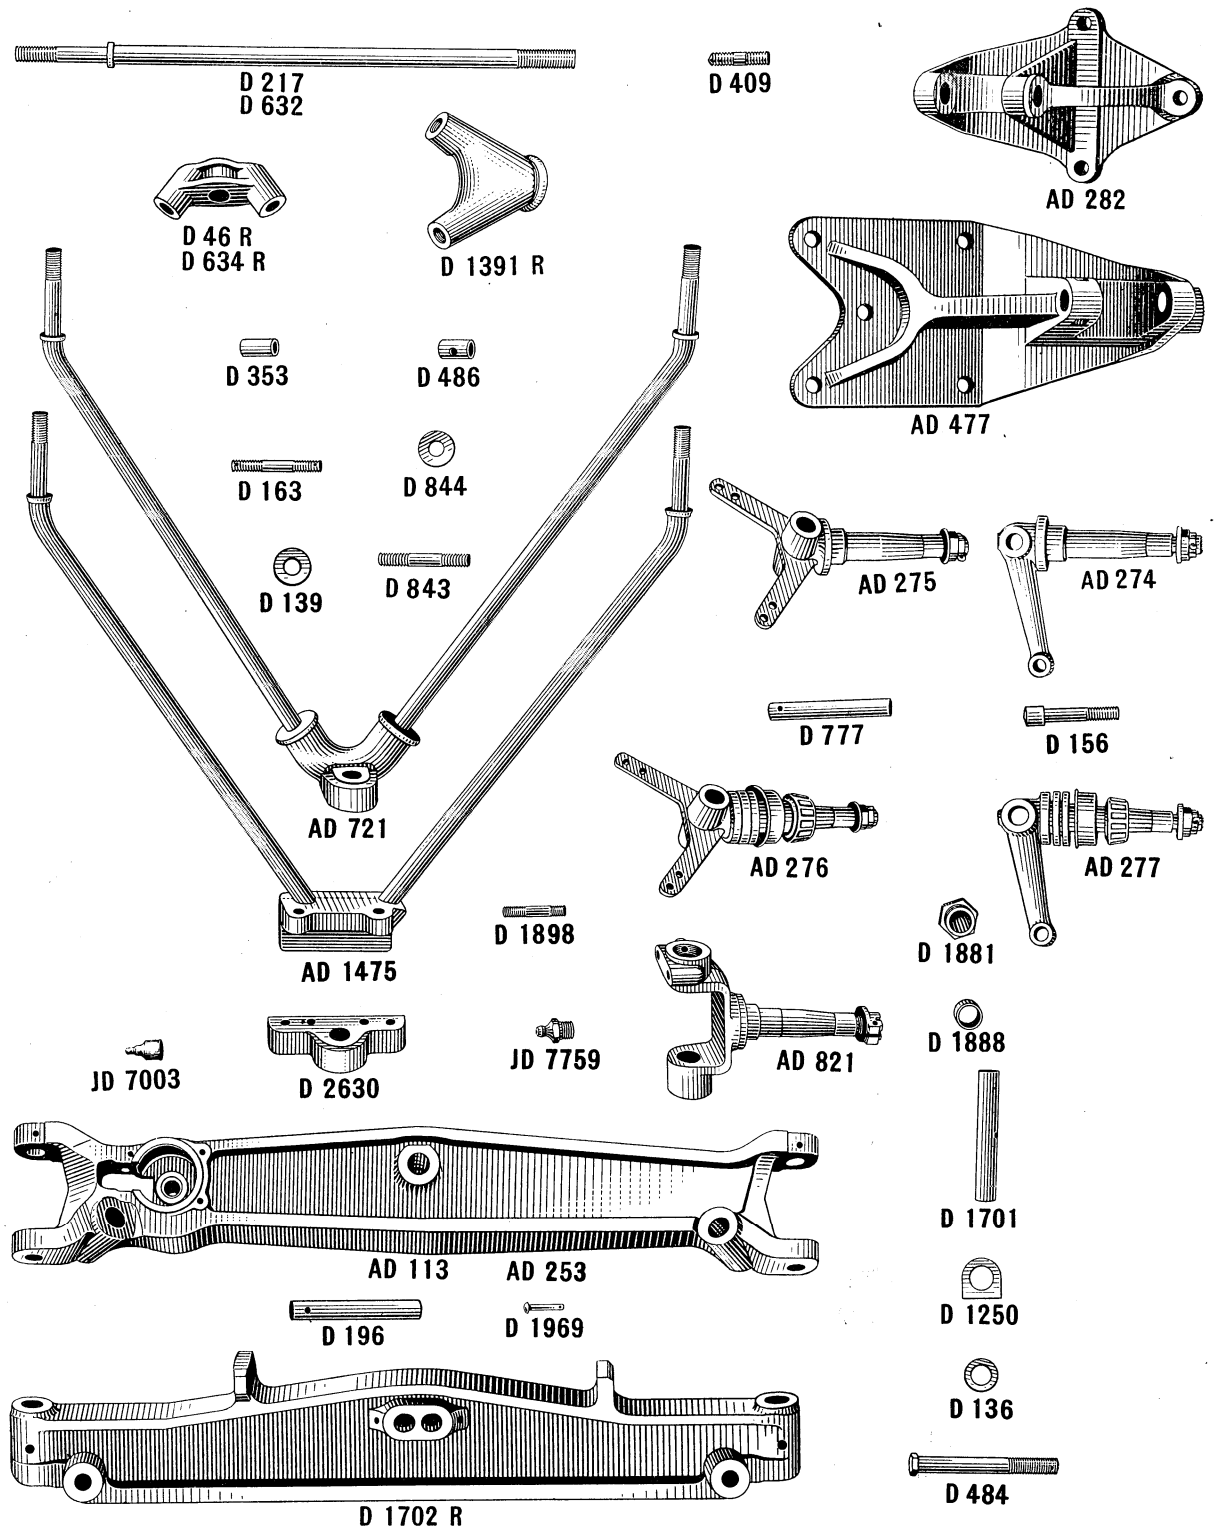


Plate No. 133

REPAIR PARTS FOR MODELS D AND DI TRACTORS

FRONT WHEELS AND EQUIPMENT

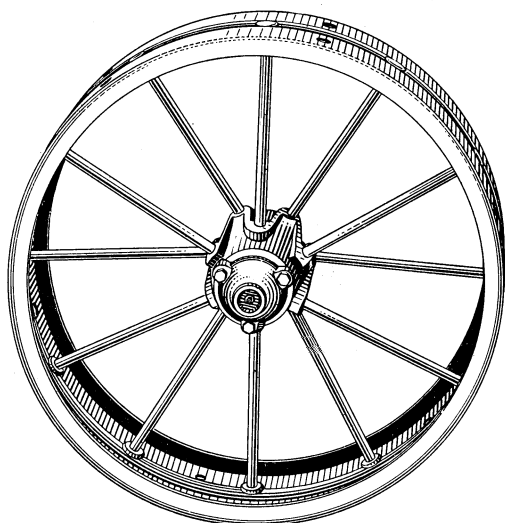

AD 900



AD 536



JD 7216



JD 7266



JD 7220



JD 7224



JD 7270



JD 7219



JD 7262



JD 7226



AD 81



D 461



JD 2200



D 327 R



AD 621




AA 663



D 635



AD 452

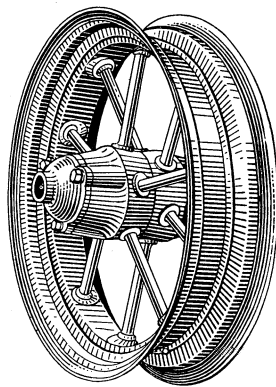

AD 990




AC 119




C 677



JD 7759

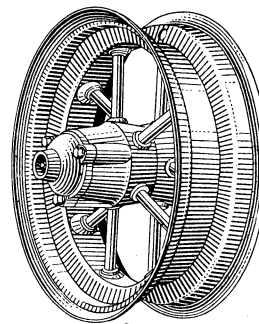

AC 1062

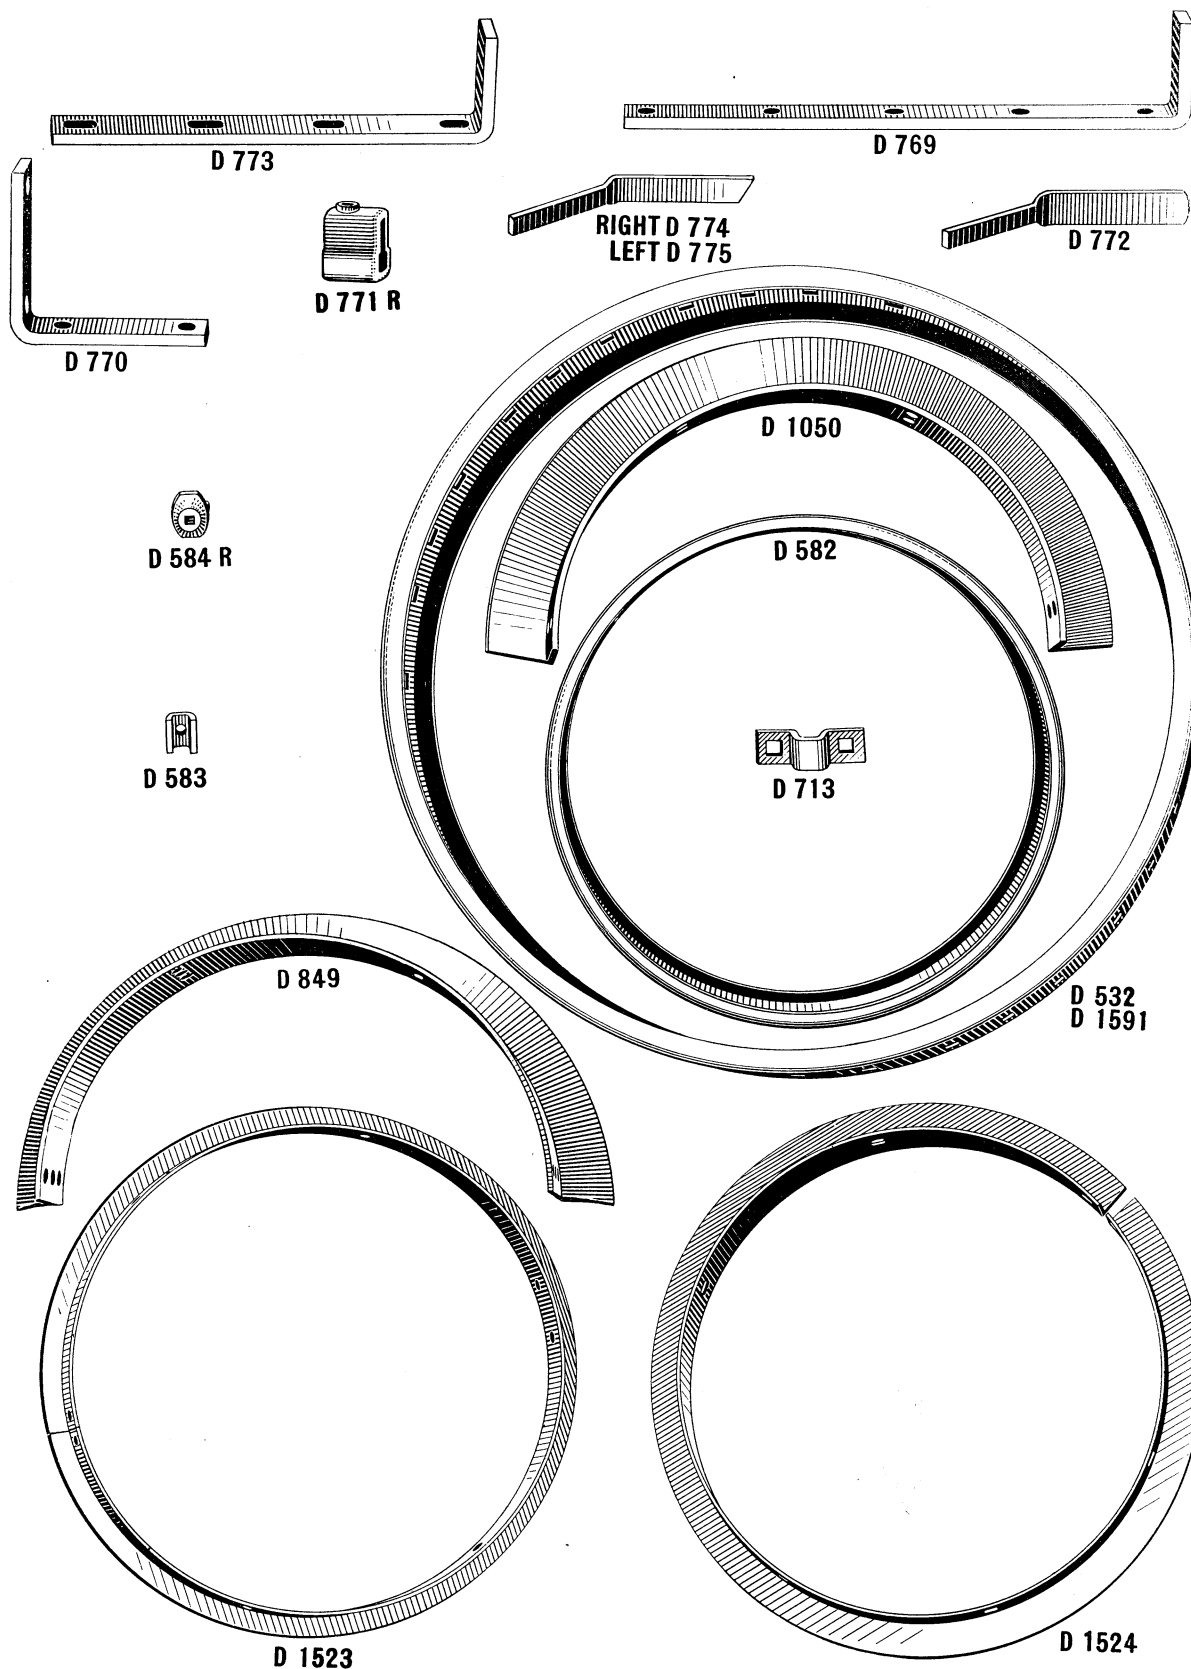REPAIR PARTS FOR MODELS D AND DI TRACTORS
FRONT WHEELS AND EQUIPMENT—Continued

REPAIR PARTS FOR MODELS 'D AND DI TRACTORS

STEERING PARTS


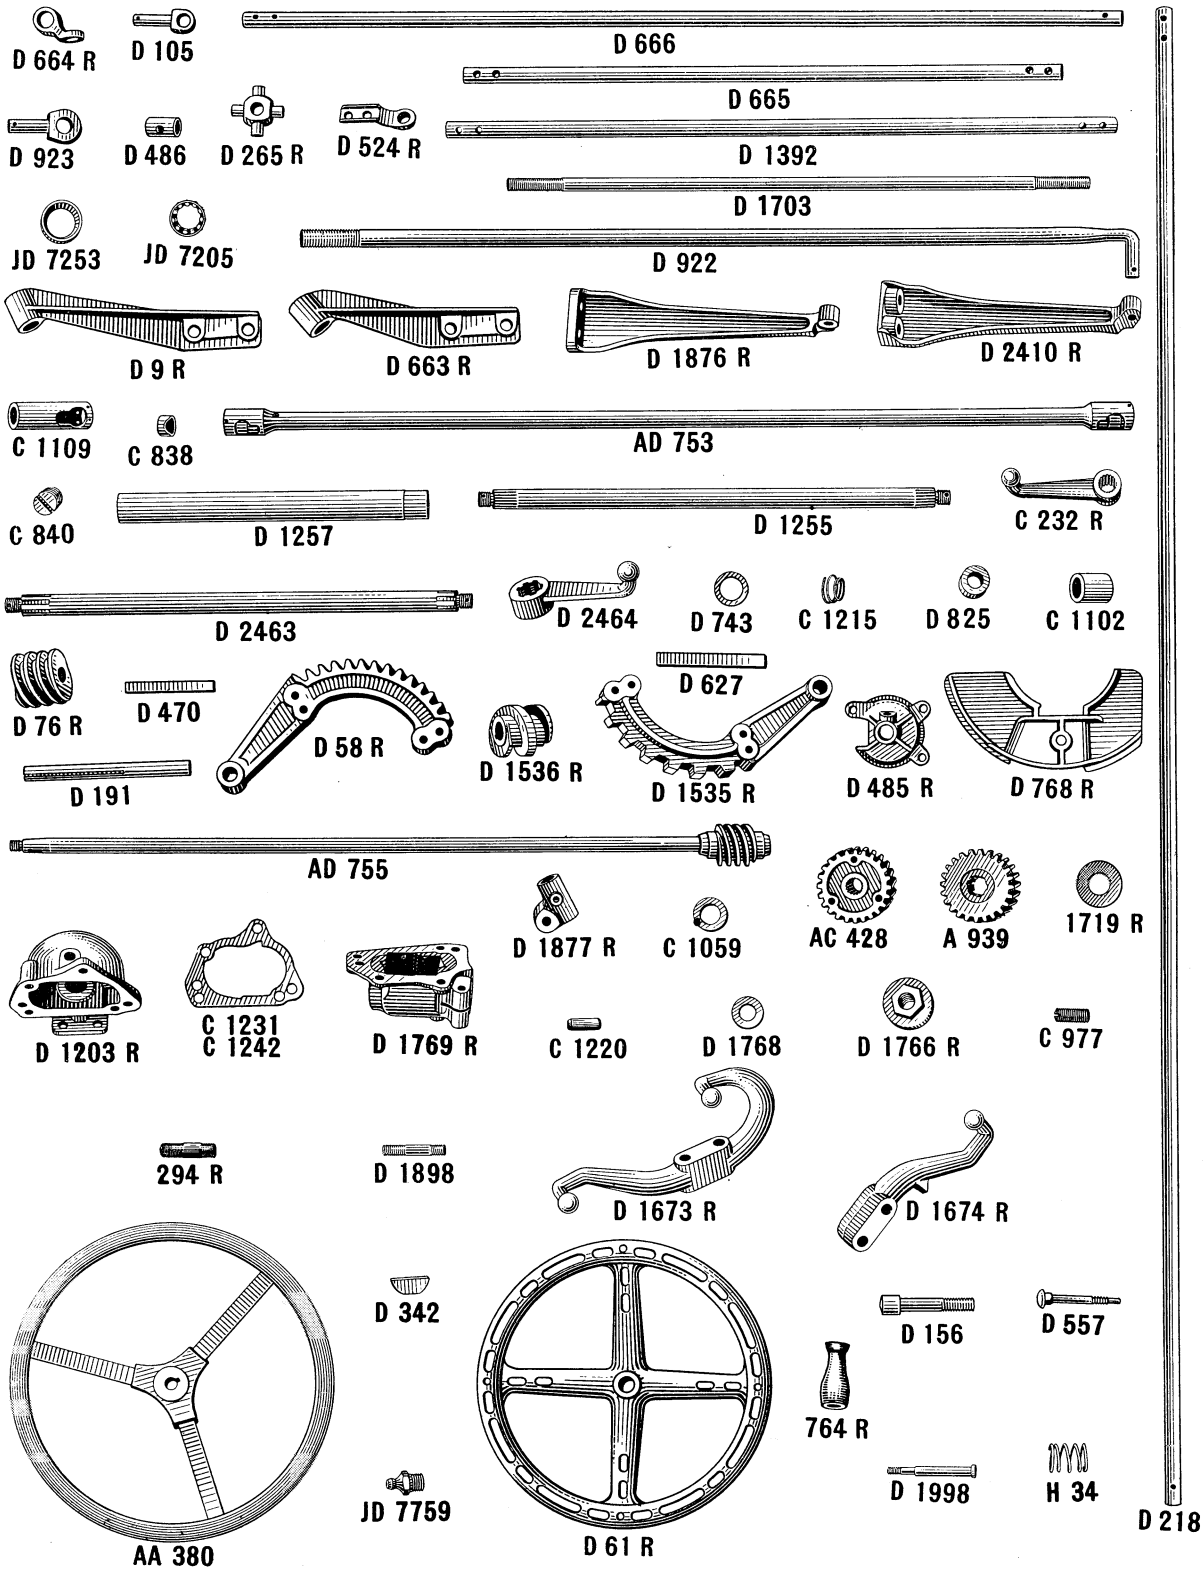



Plate No. 136

REPAIR PARTS FOR MODELS D AND DI TRACTORS

DRAWBAR

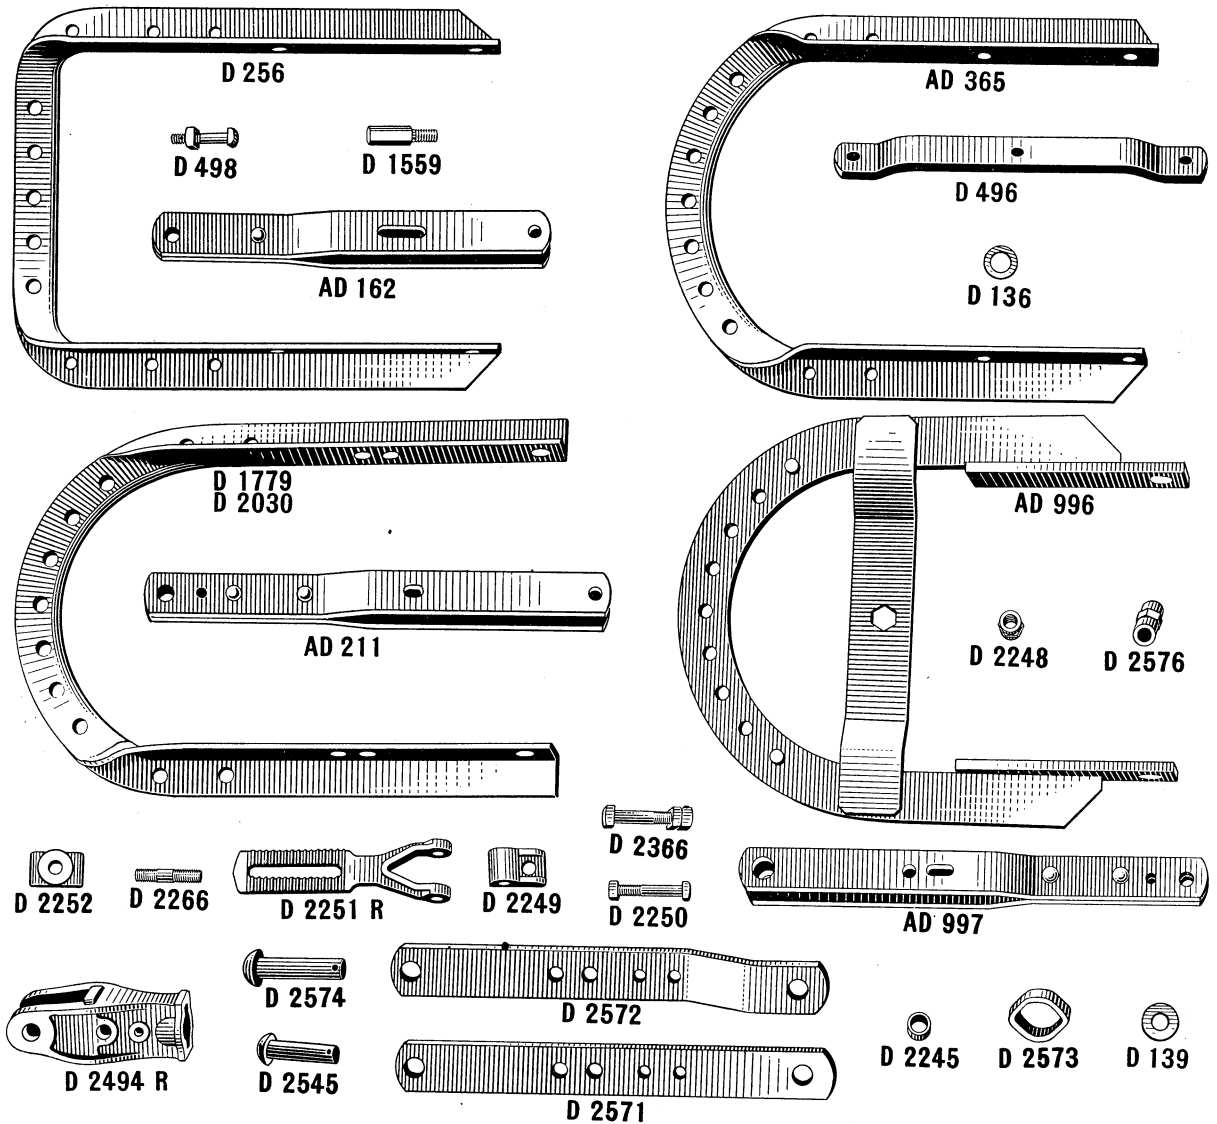


CALIFORNIA DRAWBAR

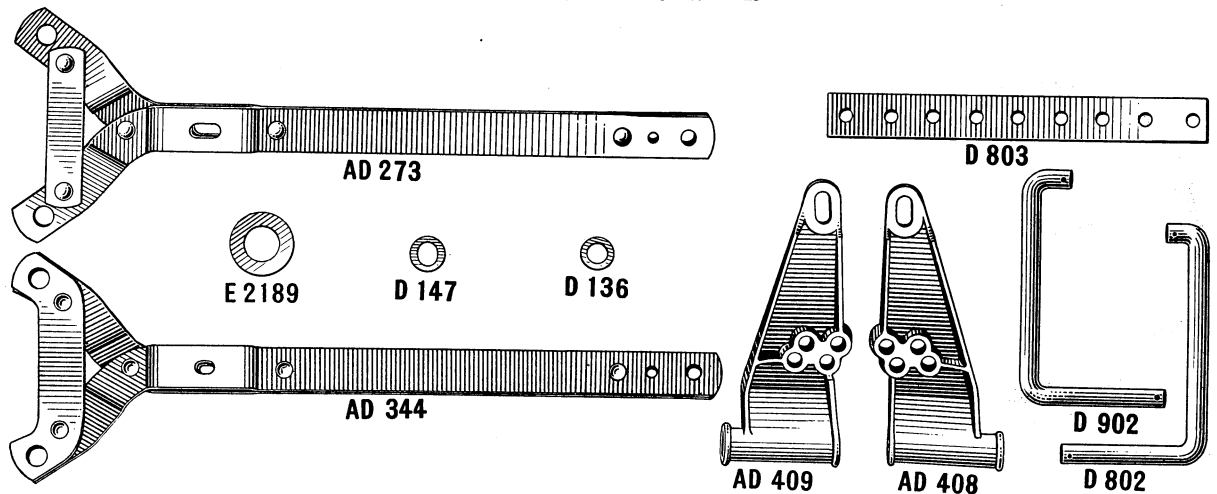


REPAIR PARTS FOR MODELS D AND DI TRACTORS


PLOW SHIFT

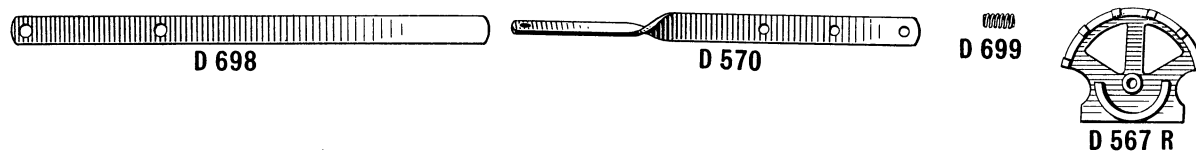

SEAT

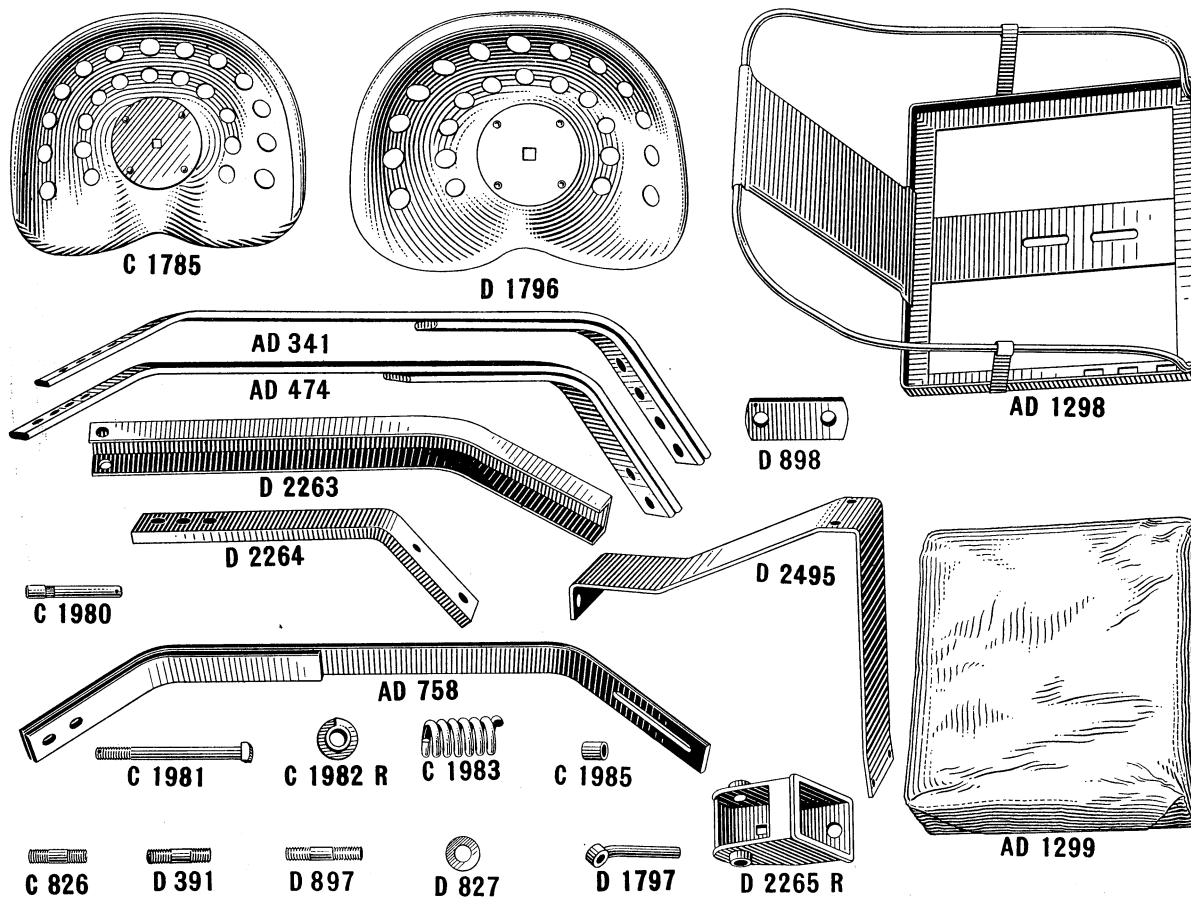

PLATFORM

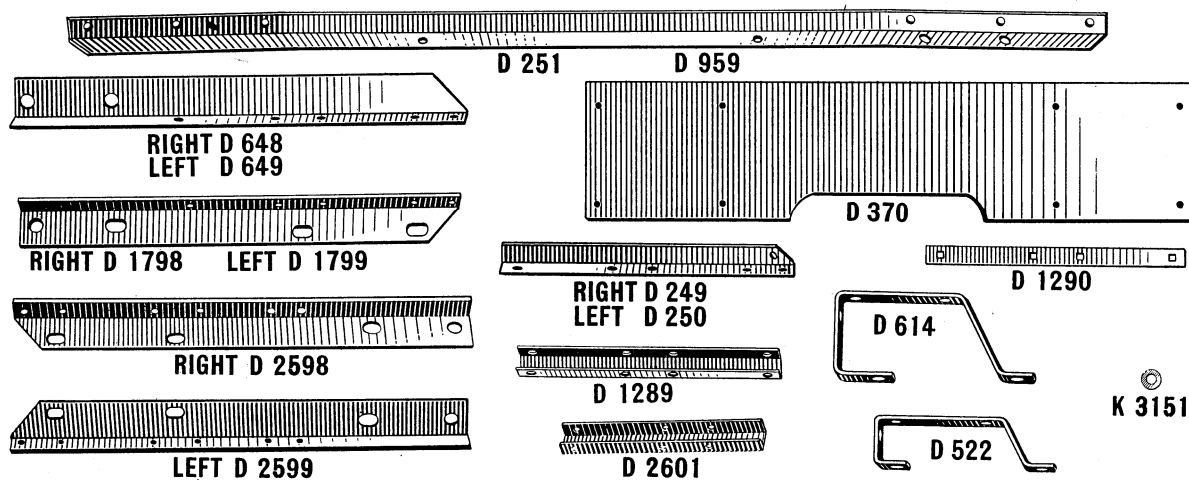

REPAIR PARTS FOR MODELS D AND DI TRACTORS

FENDERS


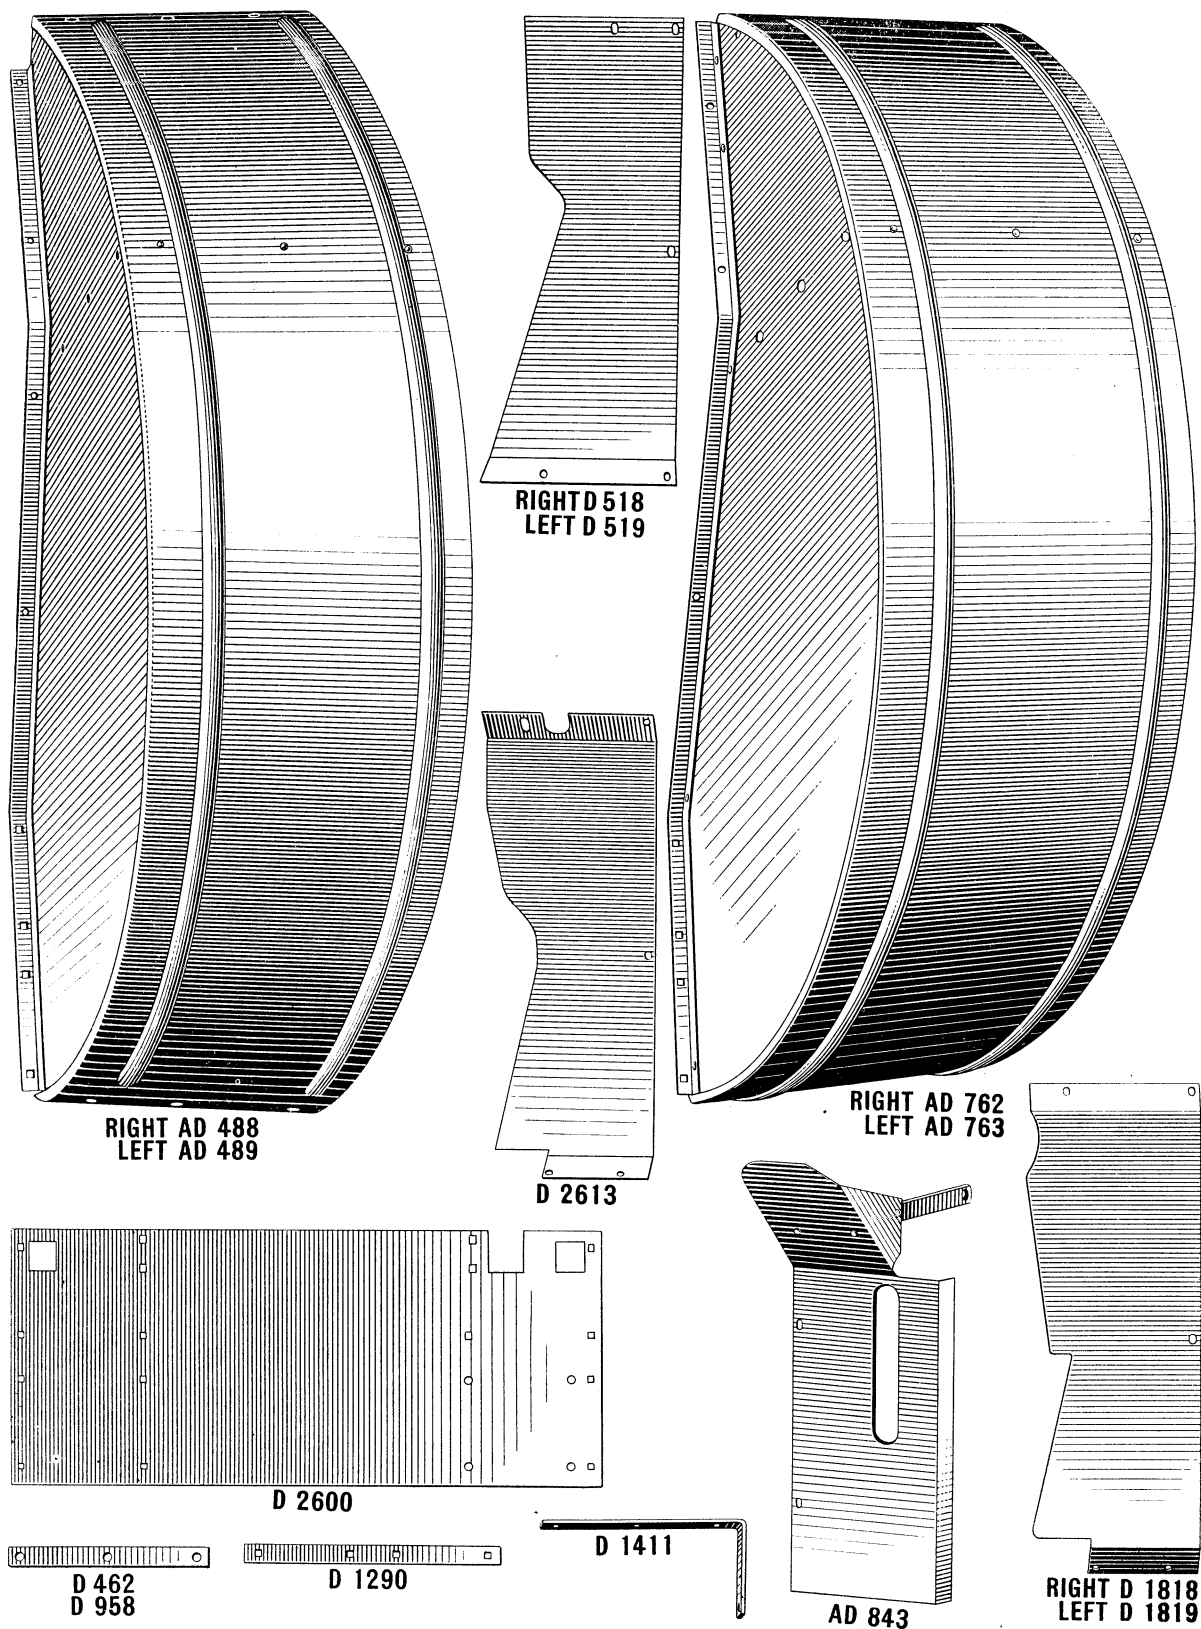



Plate No. 139

REPAIR PARTS FOR MODELS D AND DI TRACTORS


FENDERS—Continued

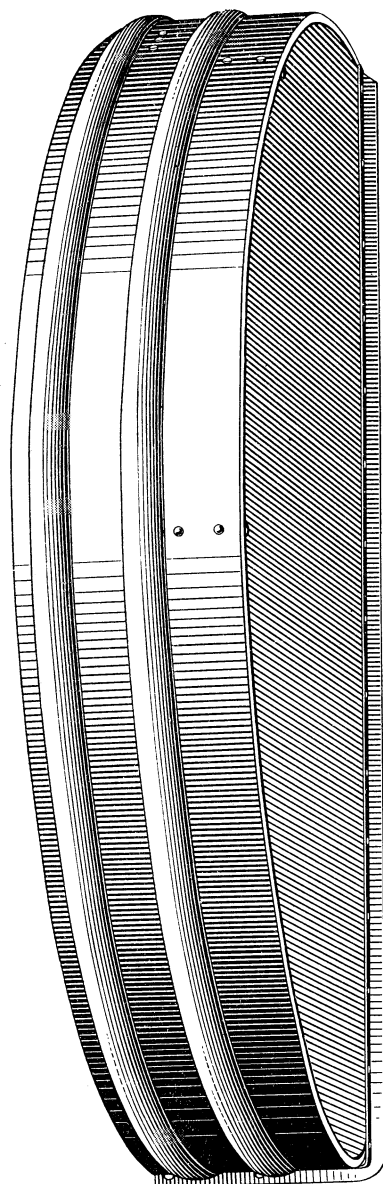


RIGHT AD 232 LEFT AD 233
 RIGHT AD 416 LEFT AD 417
 RIGHT AD 495 LEFT AD 496

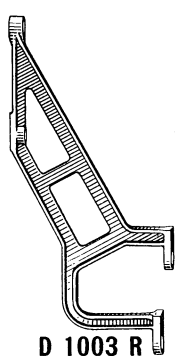


D 1003 R

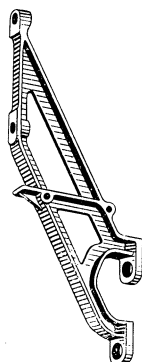


D 1237 R

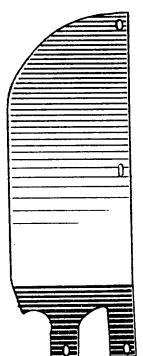


RIGHT D 516
 LEFT D 517

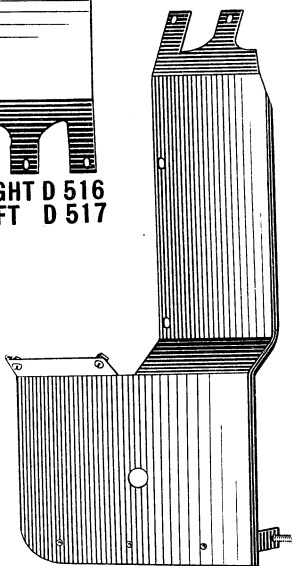

AD 640

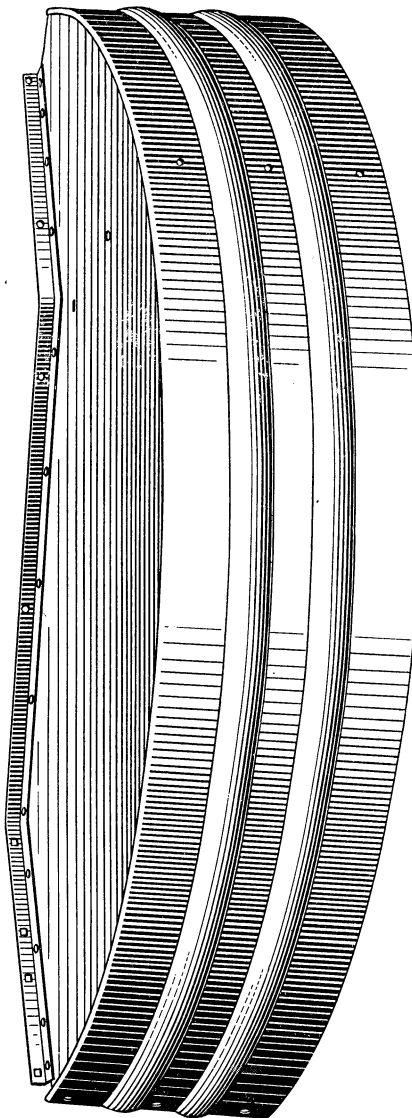


RIGHT AD 122 LEFT AD 123
 RIGHT AD 370 LEFT AD 371

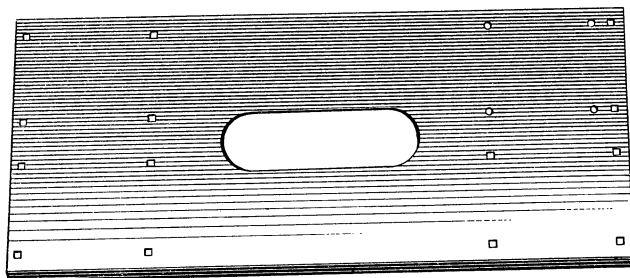

D 1288



D 936

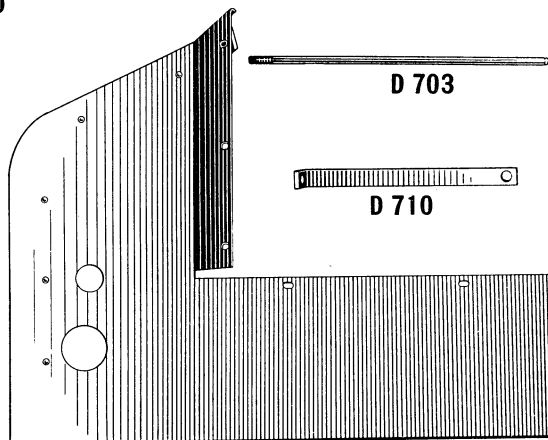


D 703

D 710


AD 768

REPAIR PARTS FOR MODELS D AND DI TRACTORS

MAGNETO

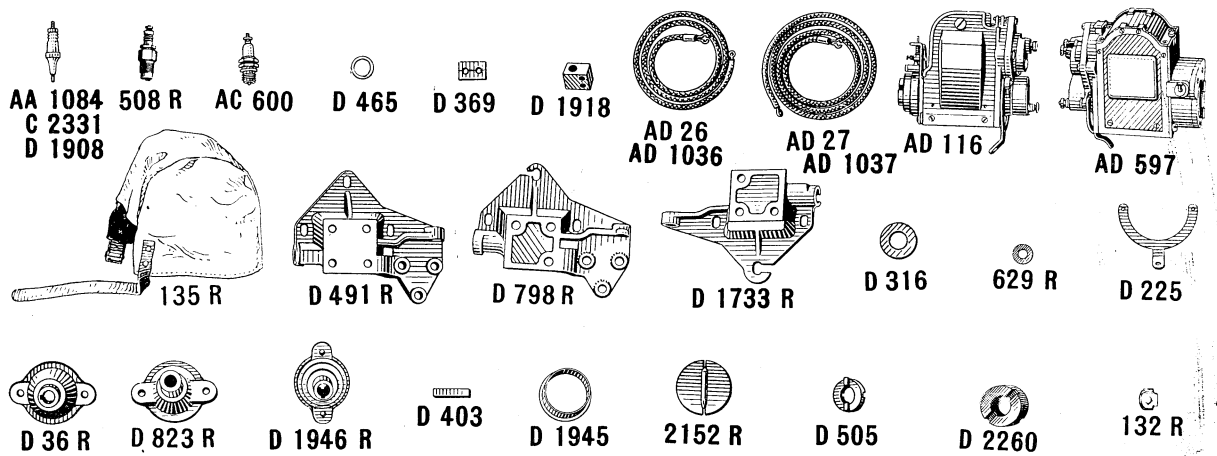


MAGNETO PARTS

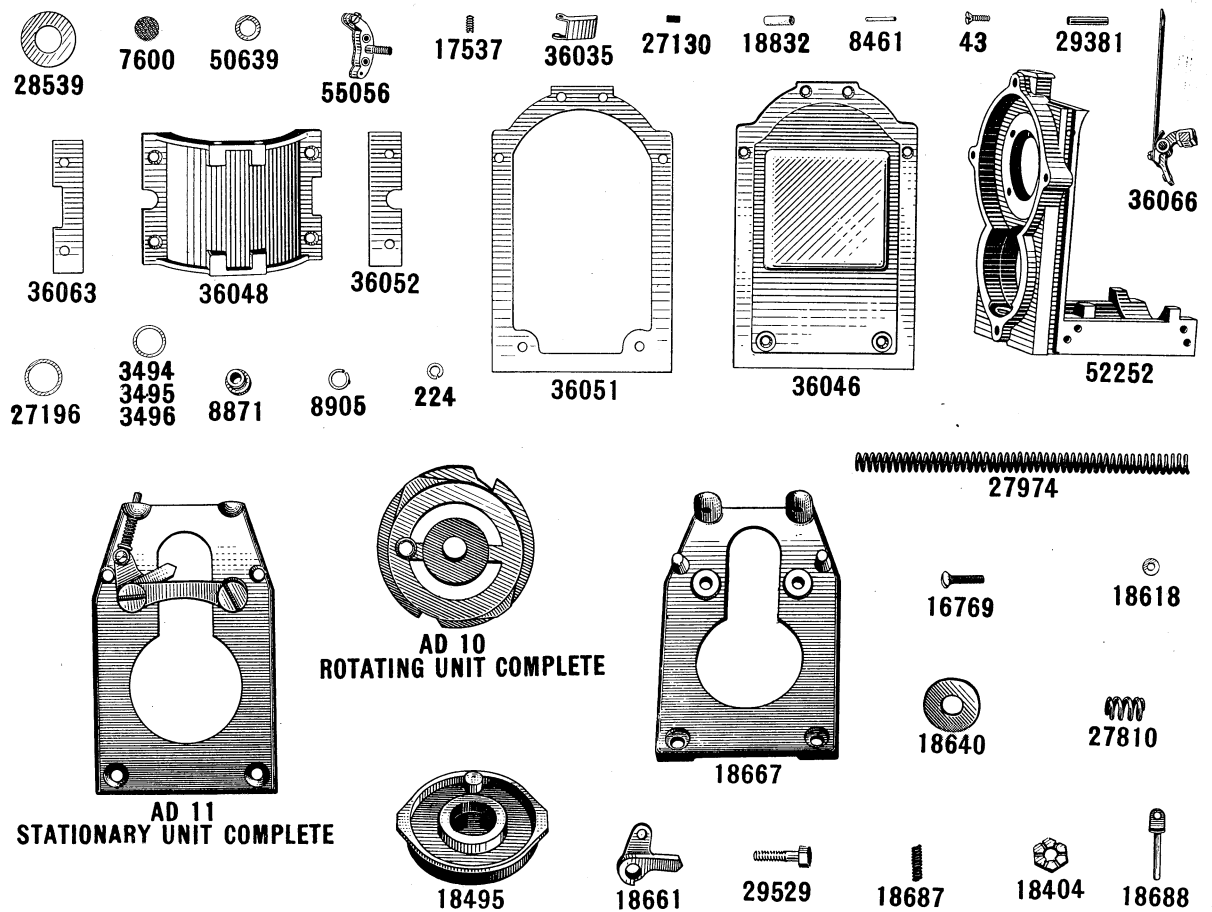


REPAIR PARTS FOR MODELS D AND DI TRACTORS

MAGNETO PARTS—Continued

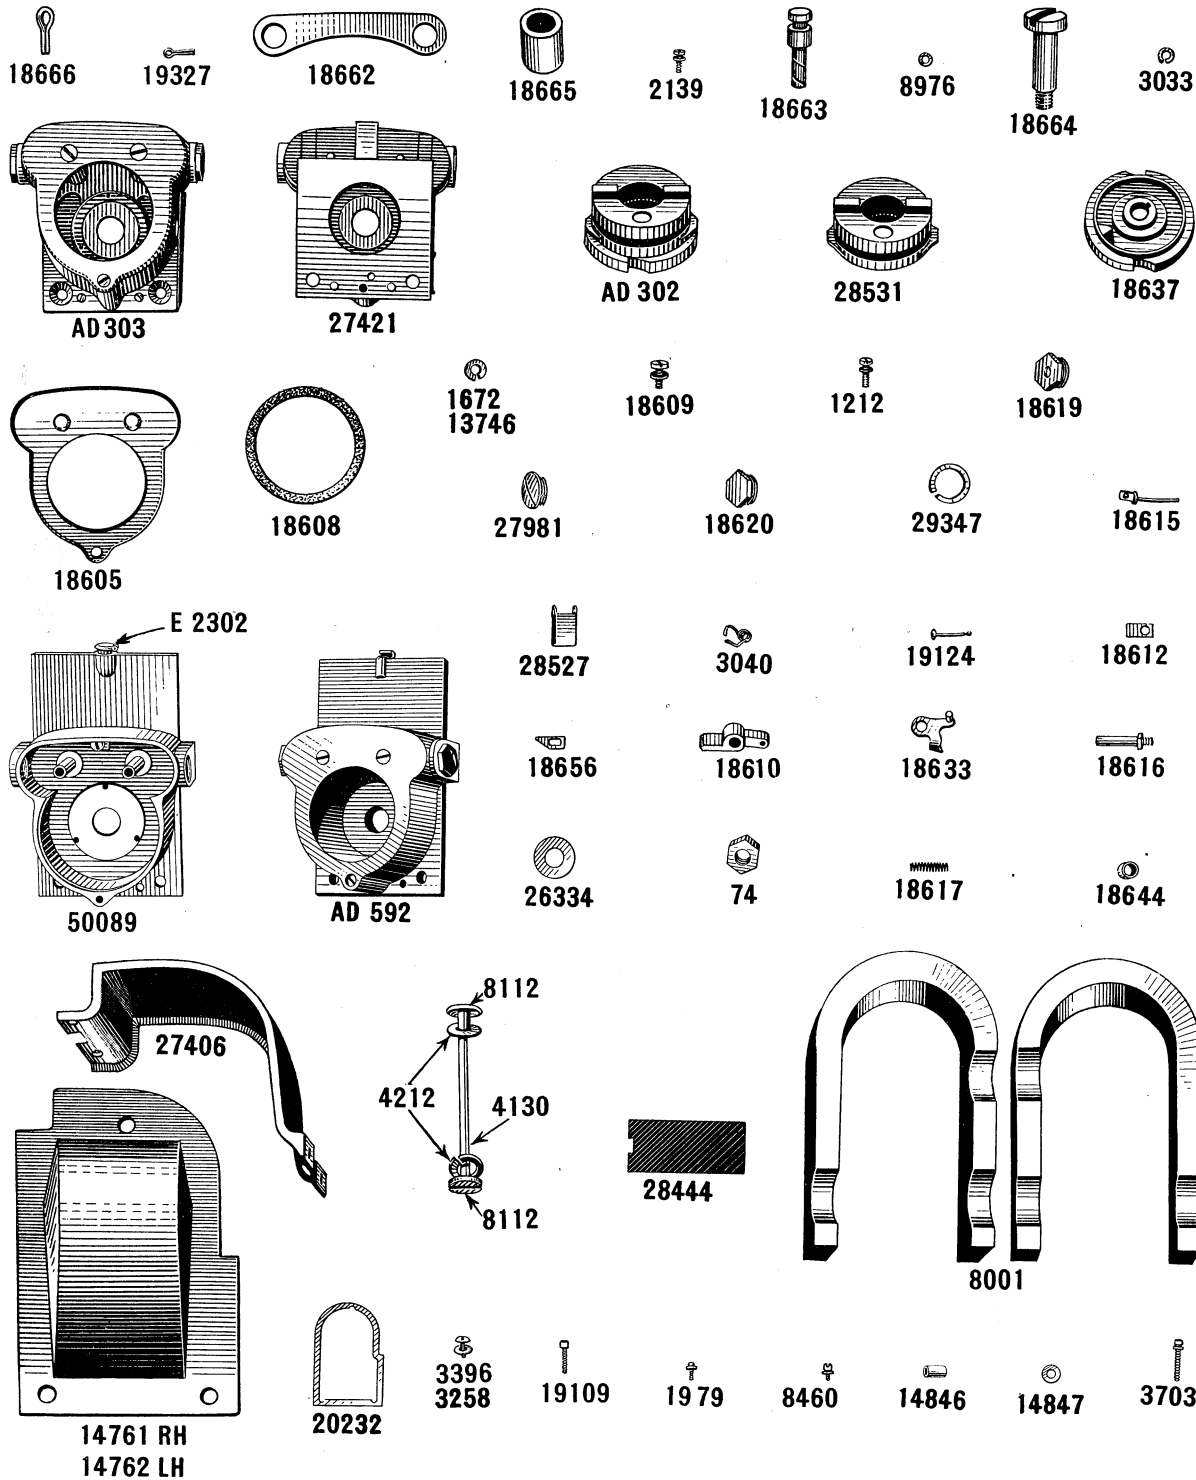


REPAIR PARTS FOR MODELS D AND DI TRACTORS

MAGNETO PARTS—Continued

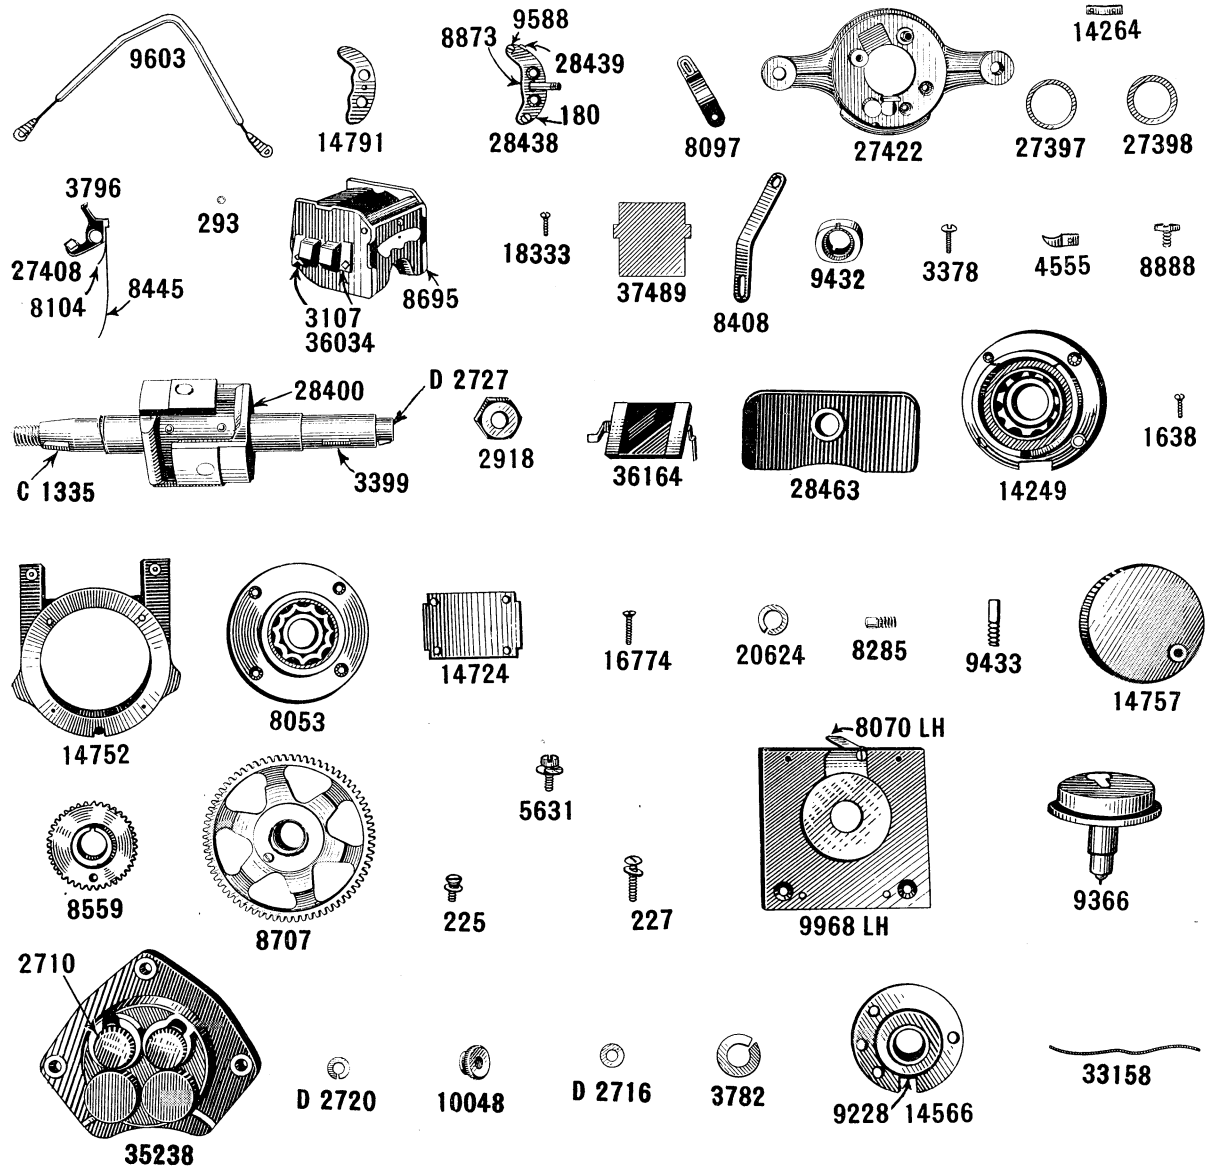


CARBURETORS

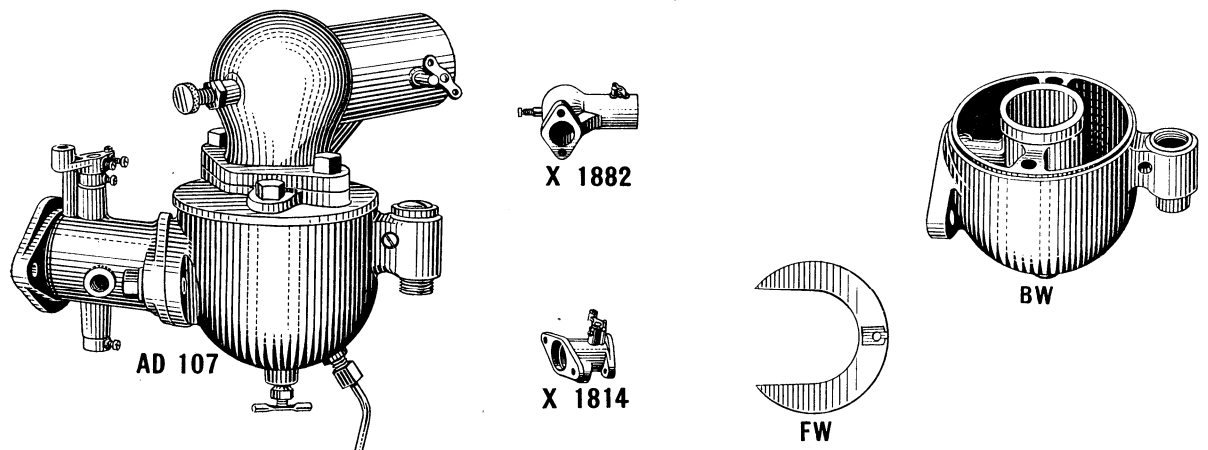


REPAIR PARTS FOR MODELS D AND DI TRACTORS

CARBURETORS—Continued

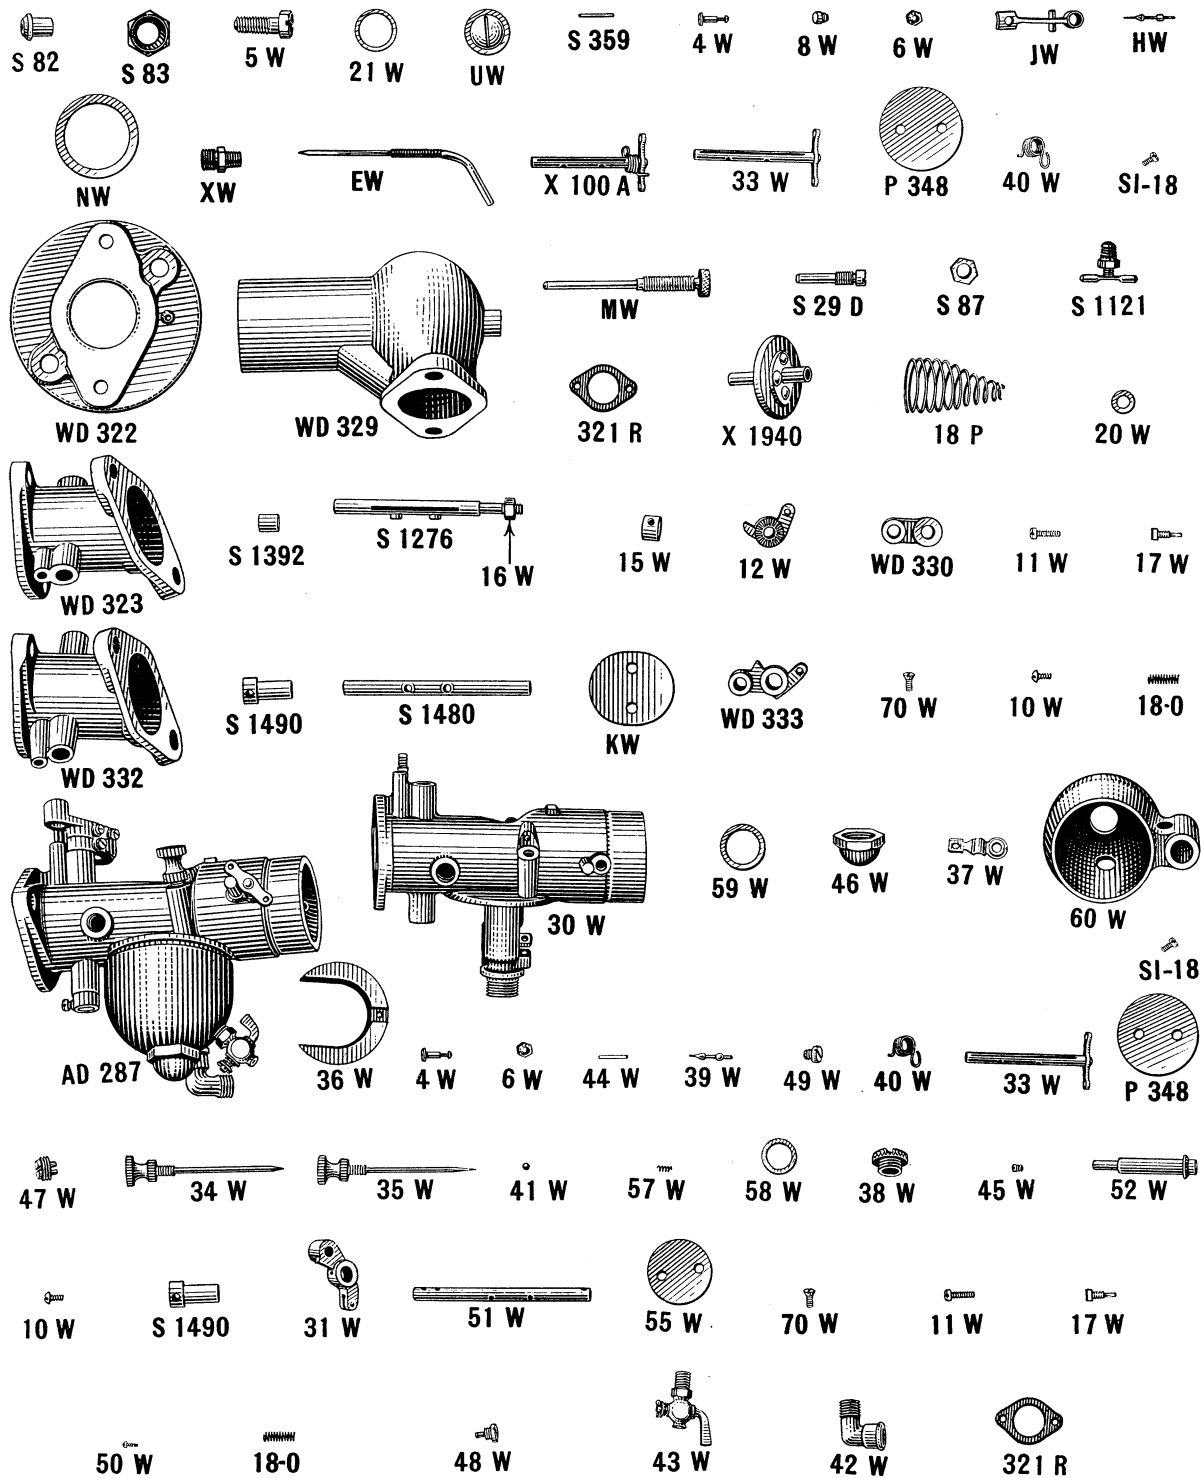

REPAIR PARTS FOR MODELS D AND DI TRACTORS

CARBURETORS—Continued

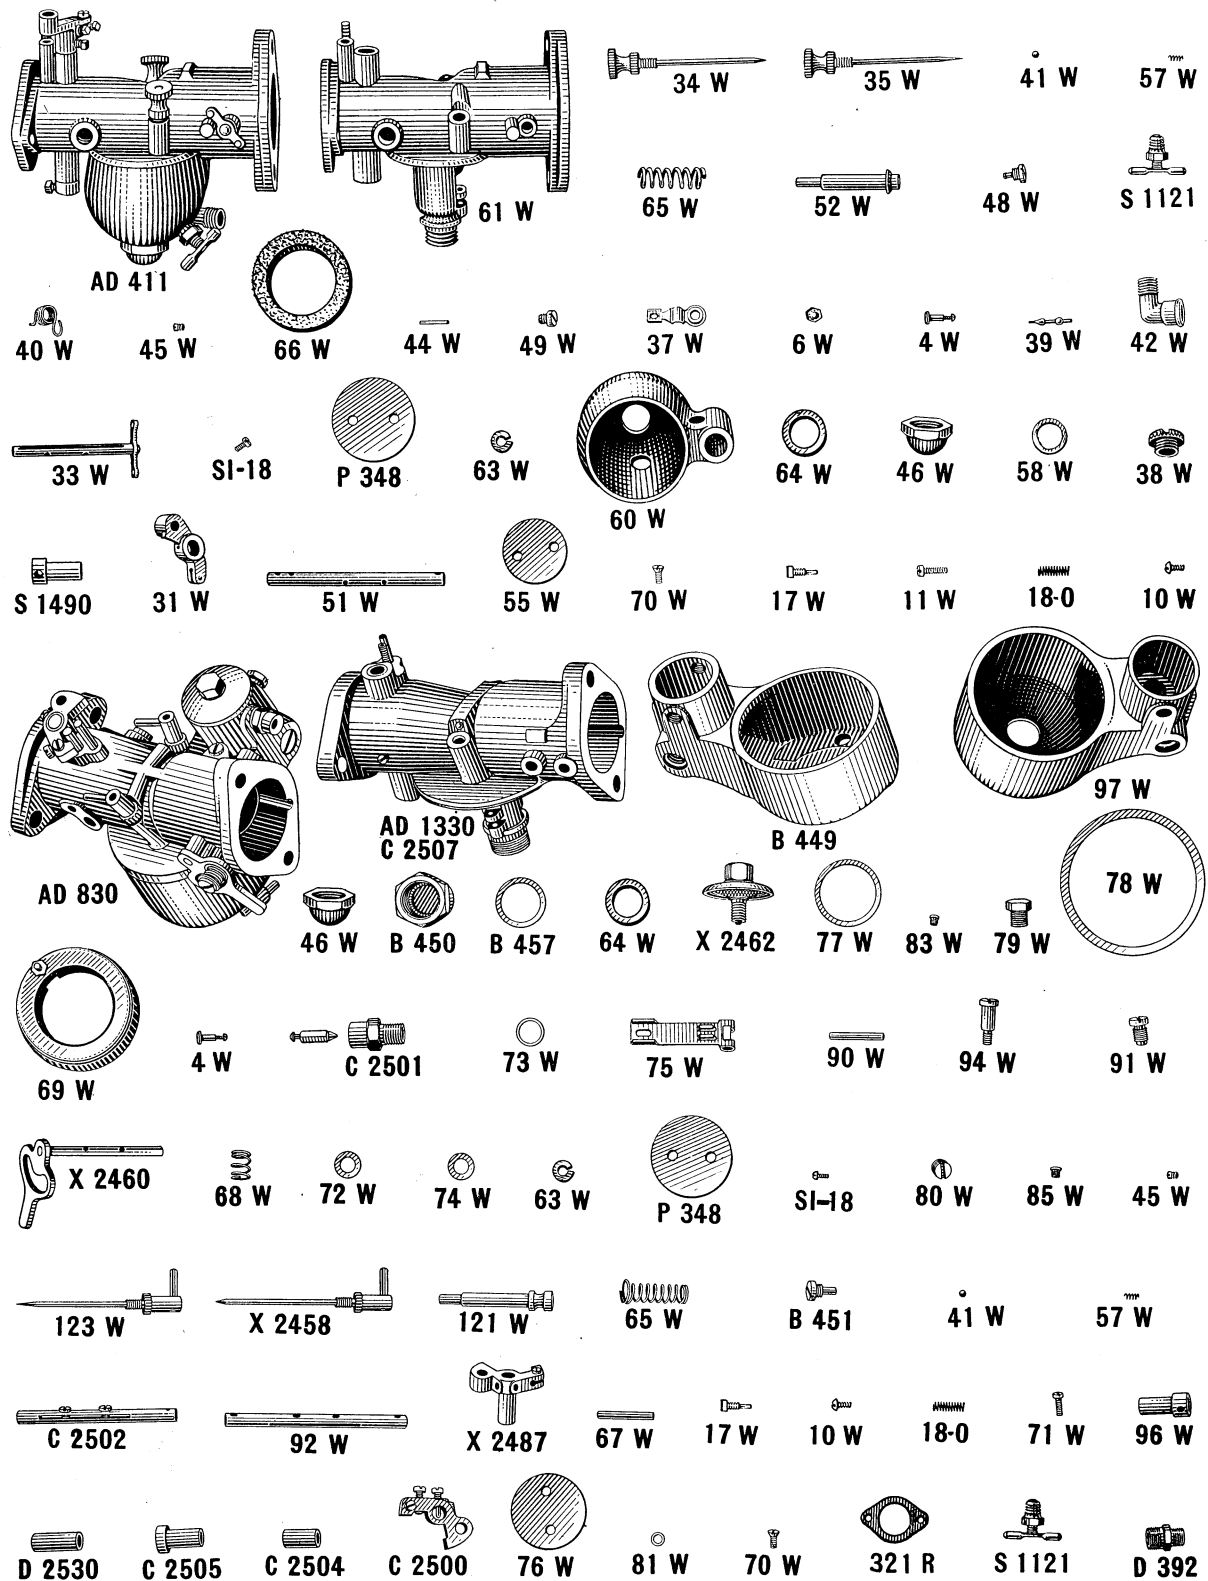

REPAIR PARTS FOR MODELS D AND DI TRACTORS

AIR CLEANER


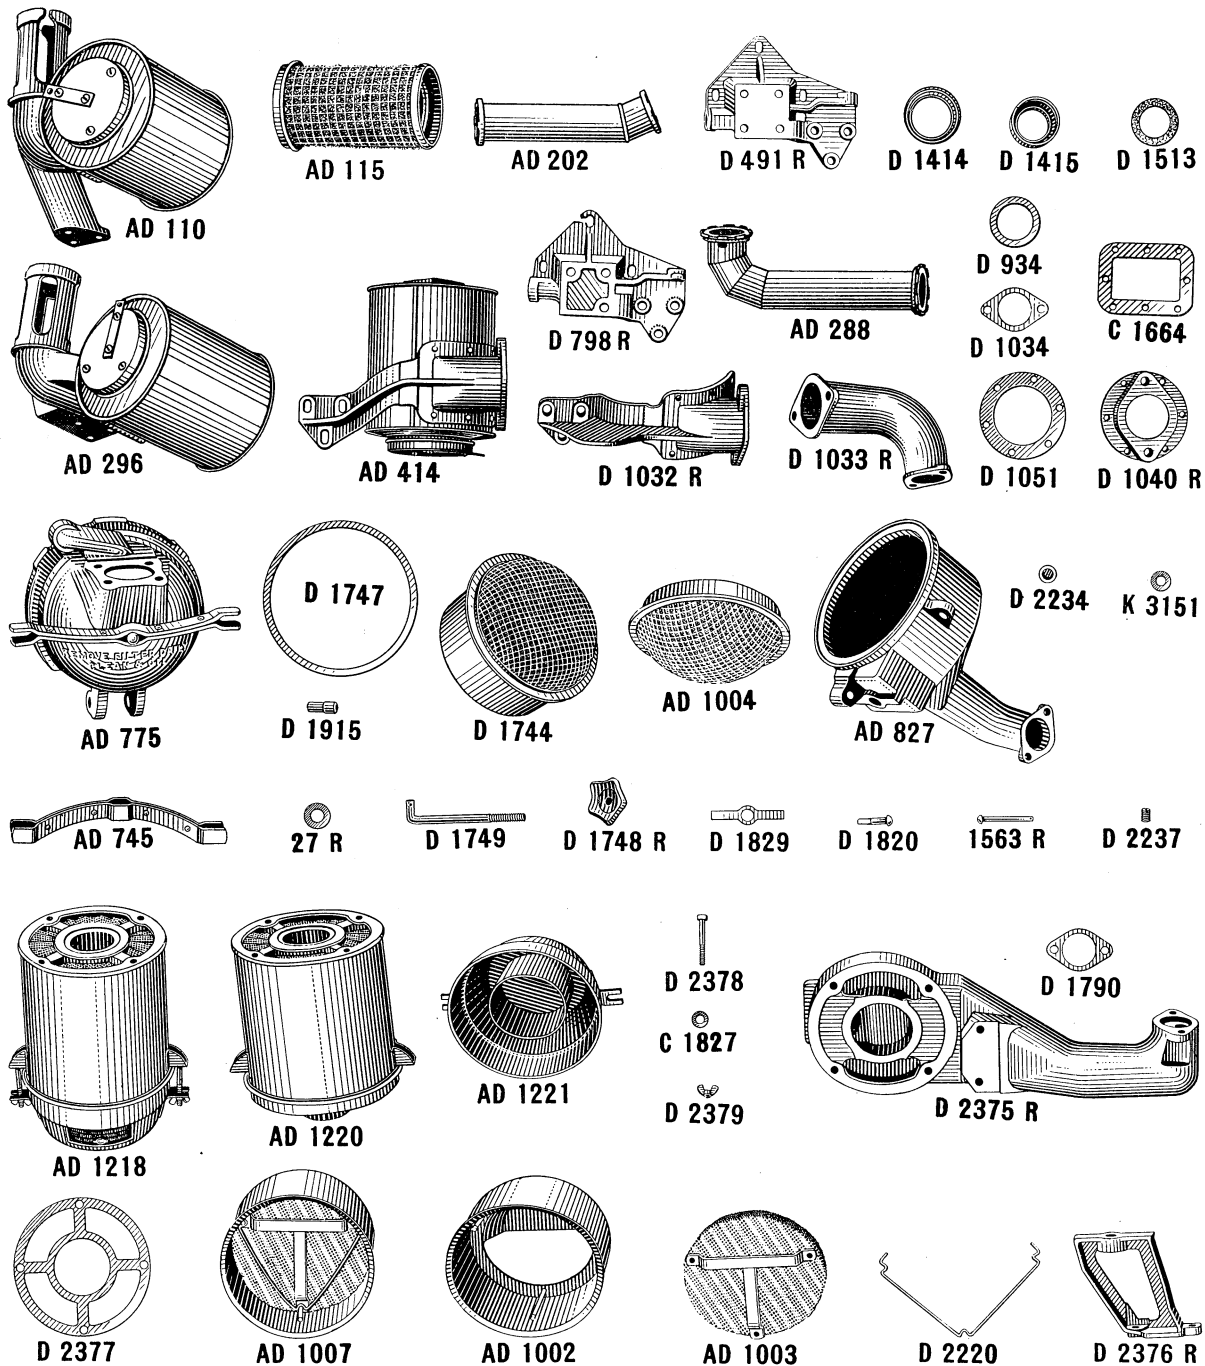



Plate No. 146

REPAIR PARTS FOR MODELS D AND DI TRACTORS

AUXILIARY AIR CLEANER AND STACK

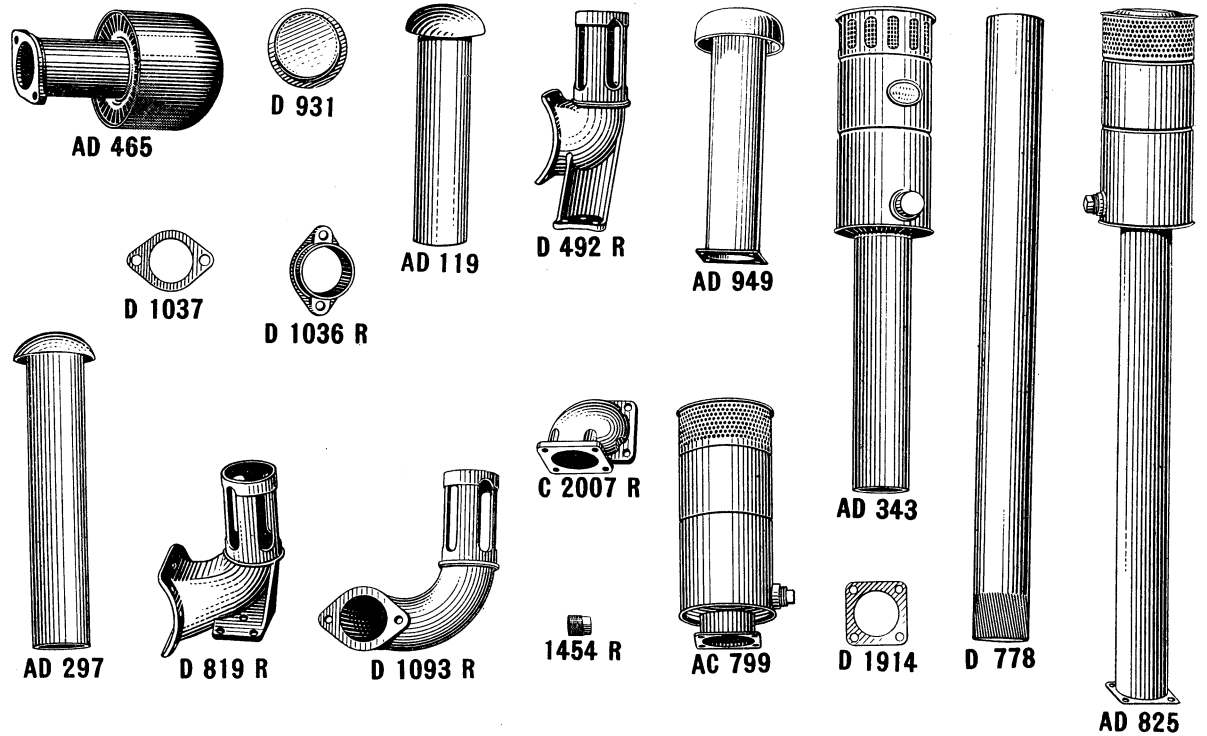


AD780—POWER SHAFT

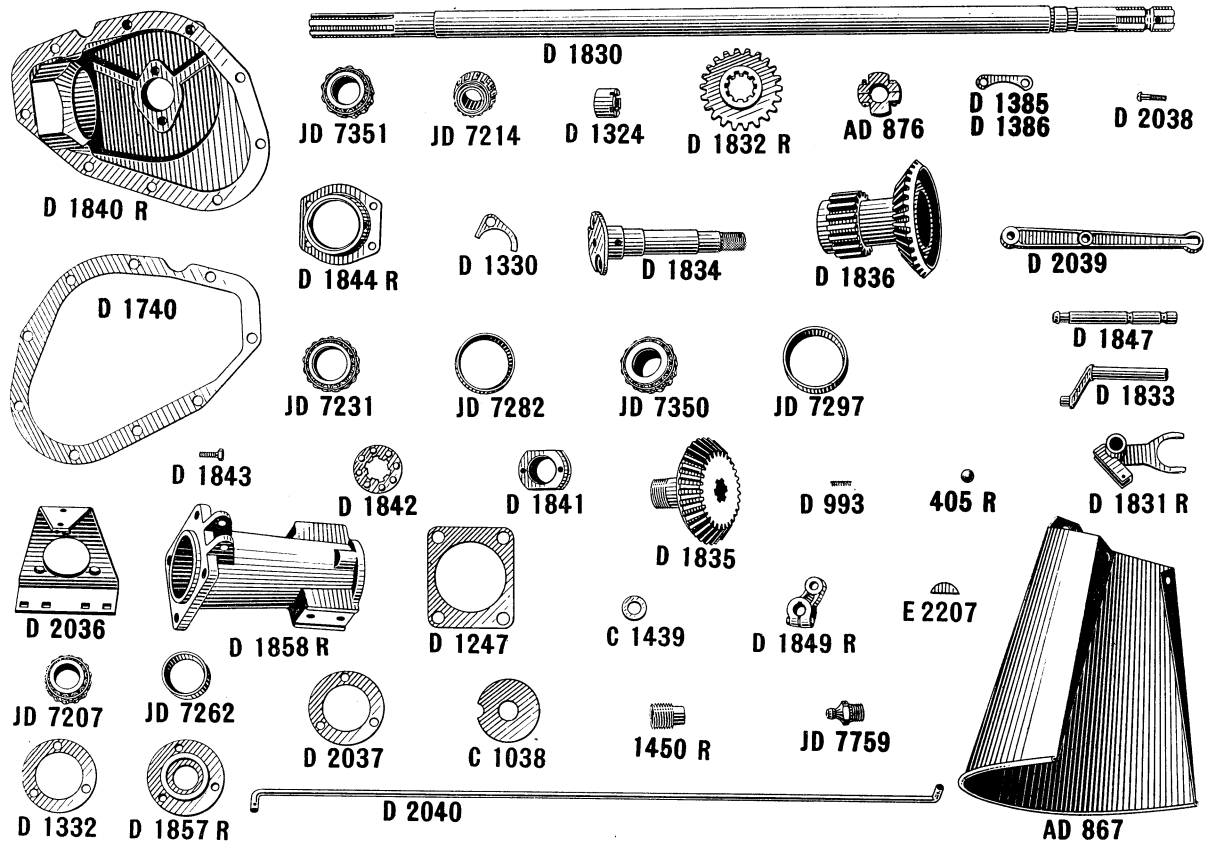


REPAIR PARTS FOR MODELS D AND DI TRACTORS

AD307—POWER SHAFT

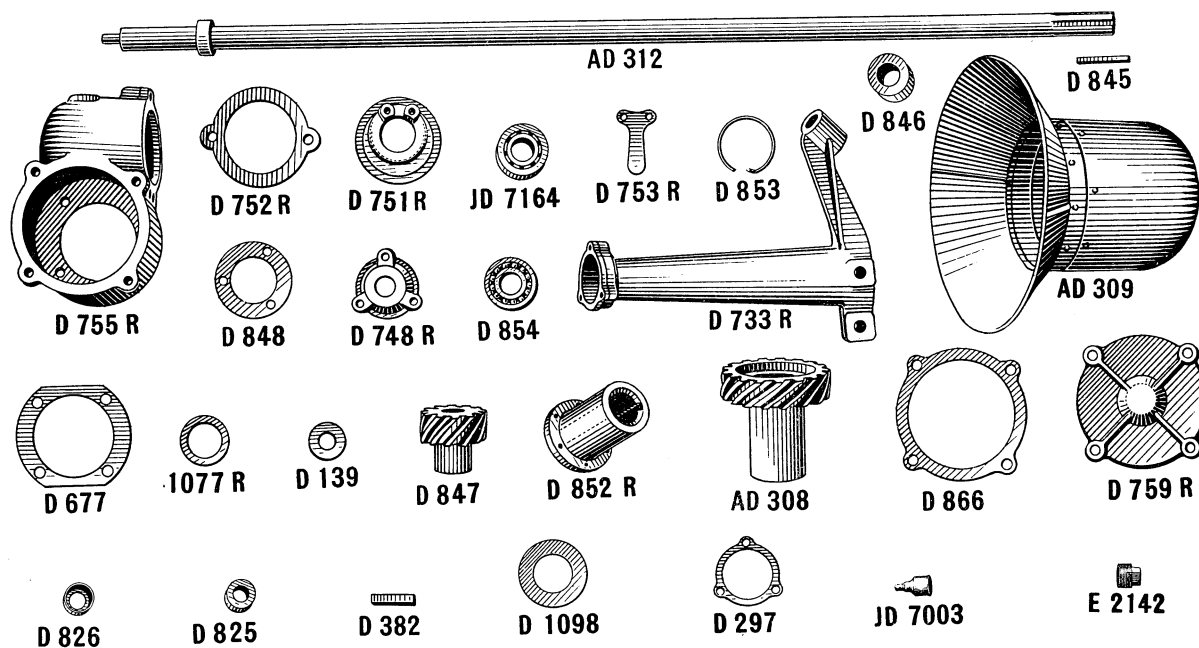

AD350—POWER SHAFT

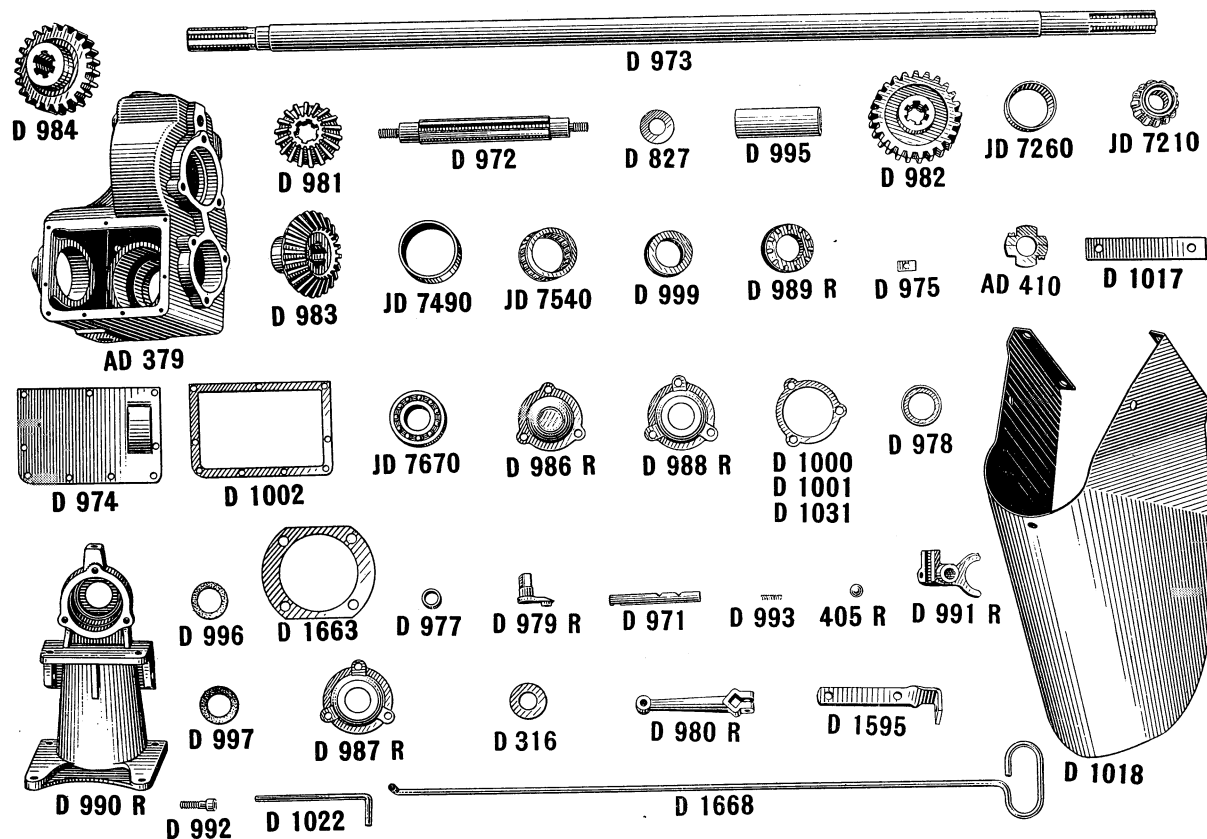

REPAIR PARTS FOR MODELS D AND DI TRACTORS

DI POWER CONTROL


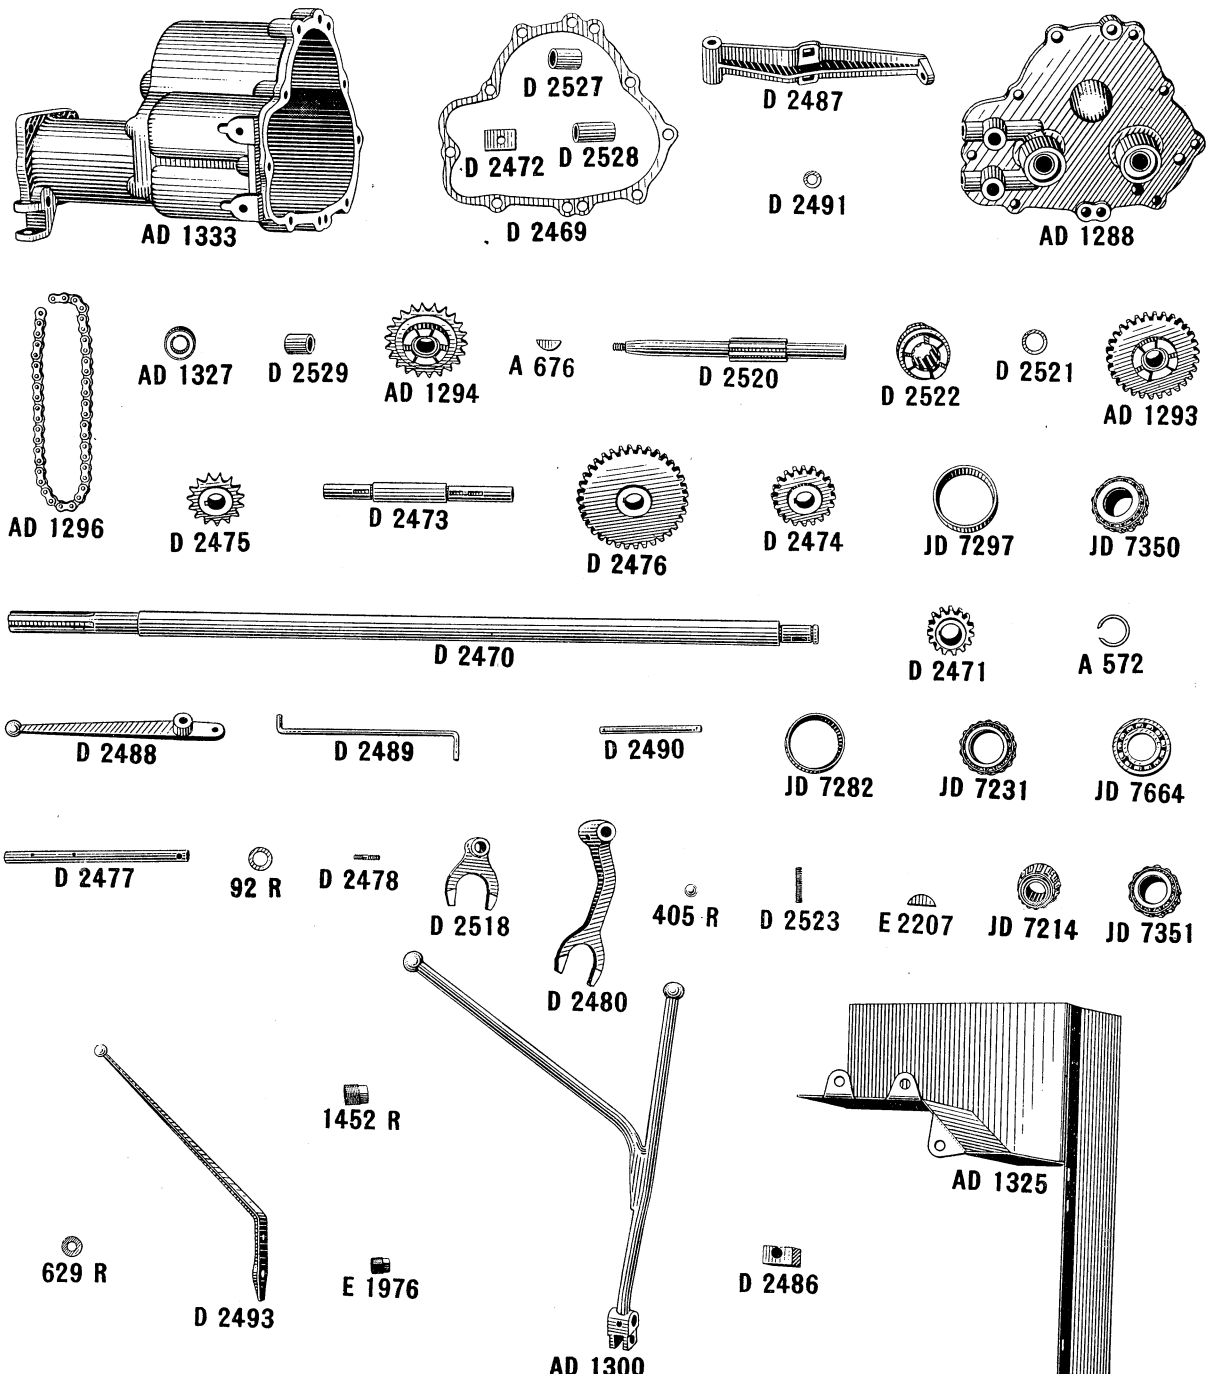



Plate No. 149

REPAIR PARTS FOR MODELS D AND DI TRACTORS

LIGHTING EQUIPMENT

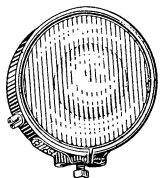


AA 832

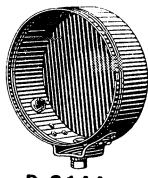

D 2144




D 2142

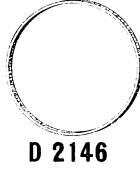

D 2146



D 2147

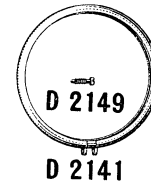


D 2149

D 2141



 D 2139



D 1100



D 1102



D 1101



D 2148



D 2145



2490 R



E 2094



A 1225



 
D 1116



E 2064




E 2057




D 2143



 D 1108



AA 835

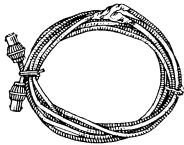

D 1117




AD 862



D 1666



D 1667

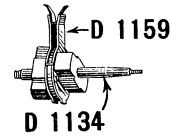

D 1159

D 1134



D 1124



D 1126




D 1154



AA 862



D 1114

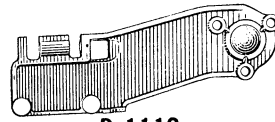

D 1112



D 1161



D 1160



D 1127



D 1156



D 1157



D 1120



1383 R



D 1137



D 1136



D 1131



D 1130



D 1153



D 1135



D 1129



D 1128



D 1125



D 1155



D 1132



D 1133



2364 R



D 1138



D 1140



D 1158



D 1150



D 1147



D 1146



D 1145



D 1151



D 1143



D 1148



D 1142



D 1141



D 1149



D 1152


Plate No. 150

INDEX


For E and EK Engines—1-1/2-, 3- and 6-H. P.

SUBJECT	Page	SUBJECT	Page
(Battery) Engine Parts.....	331	Igniter.....	330
Battery Parts.....	331	Illustrations.....	336
Casting List.....	335		
Connecting Rod and Piston.....	327	Magneto.....	330
Crankshaft.....	327	(Magneto) Engine Parts.....	329
Cylinder.....	326	Magneto Parts.....	330
Cylinder Head.....	326	Mixer (Fuel).....	328
Exhaust Rod.....	327	Movable Timer.....	331
Friction Clutch Pulley.....	329		
Fuel System.....	328	Piston and Connecting Rod.....	327
Governor.....	327	Plain Pulley.....	329
Hand Trucks—Engine.....	330	Stationary Timer.....	331
Hardware List.....	333	Type EK Engine Parts.....	332

E and EK
Engines

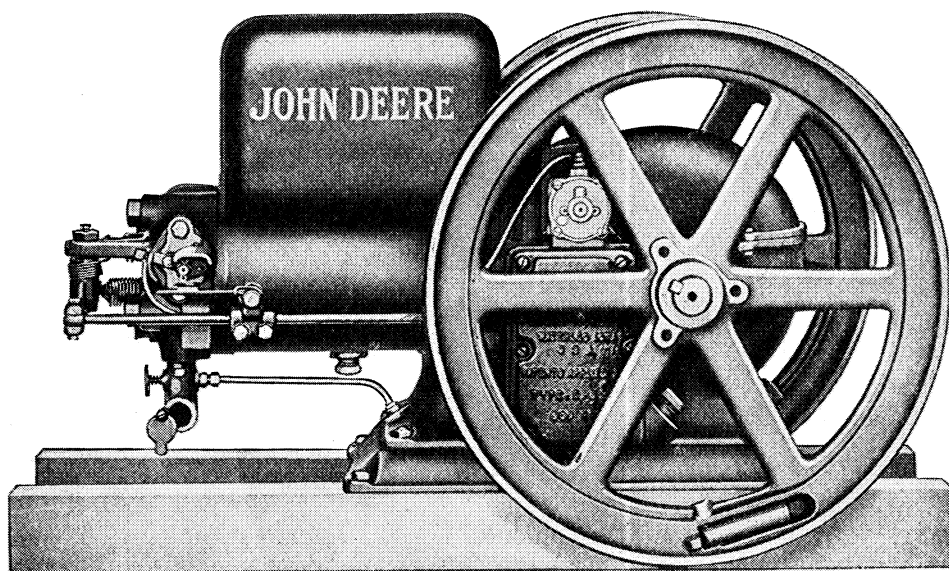

Magnetoh Side of Type E 3-H. P. Engine

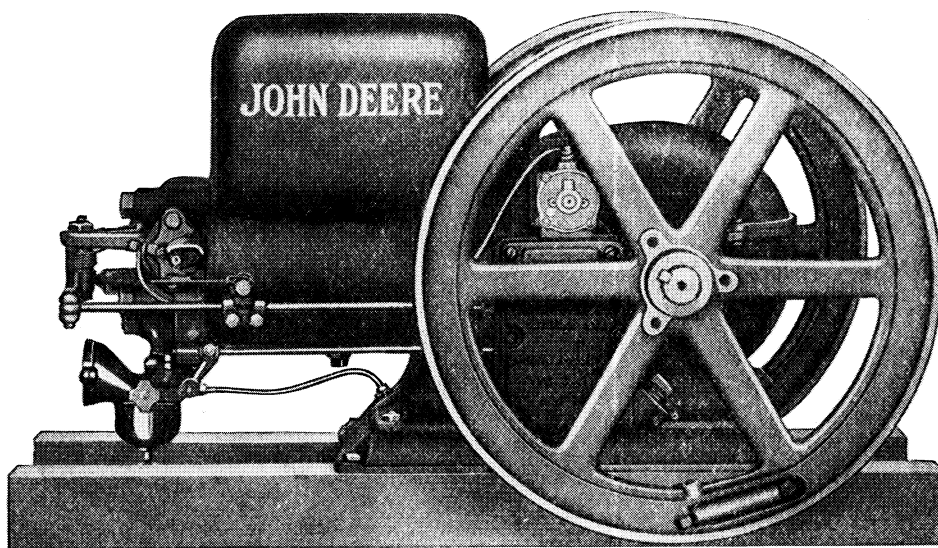

John Deere Type EK Engine

REPAIRS FOR MODELS E AND EK ENGINES

Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
CYLINDER			
AE29	1-1/2	Cover, Crank Case, E60R, with Oil Guard.....	151
AE85	1-1/2	Cylinder, E103R, with Studs, Main Bearings, Caps and Bushings.....	151
AE86	3	Cylinder, E77R, with Studs, Main Bearings, Caps and Bushings.....	152
AE171	6	Cylinder, E7R, with Studs, Main Bearings, Caps and Bushings.....	153
AE218	1-1 2	Bearing, Main (2 Halves).....	151
AE220	3	Bearing, Main (2 Halves).....	152
AE222	6	Bearing, Main (2 Halves).....	153
AE229	1-1/2	Cover, Crank Case, E127R, with Oil Guard and Ventilator after Serial No. 326571.....	151
C524	6	Priming Cup.....	153
E5R	6	Sub-base.....	153
E6R	6	Cover, Crank Case.....	153
E10R	6	Cap, Main Bearing.....	153
E53R	1-1/2	Cap, Main Bearing.....	151
E54R	1-1/2	Sub-base.....	151
E79R	3	Cover, Crank Case.....	152
E86R	3	Cap, Main Bearing.....	152
E92R	3	Sub-base.....	152
E128	1-1/2	Spacer, Ventilator. After Serial No. 326571.....	151
E1946	1-1/2	Cover Ventilator. After Serial No. 336571.....	151
E1947	1-1/2	Ventilator Valve (Leather). After Serial No. 326571.....	151
E2012	6	Gasket, Oil Drain.....	156
E2019	6	Gasket, Crank Case Cover.....	153
E2020	6	Gasket, Crank Case Bottom.....	153
E2031	6	Shim, Main Bearing, Thin.....	153
E2035	6	Shim, Main Bearing, Medium.....	153
E2037	6	Shim, Main Bearing, Thick.....	153
E2045	6	Stud, Cylinder Head, 3/4"x5-1/4".....	153
E2135	1-1/2	Gasket, Crank Case Bottom.....	151
E2136	3	Gasket, Crank Case Bottom.....	152
E2183	1-1/2	Gasket, Crank Case Cover.....	151
E2187	1-1/2	Guard, Oil.....	151
E2196	1-1/2	Shim, Main Bearing, Thick.....	151
E2198	1-1/2	Shim, Main Bearing, Medium.....	151
E2220	1-1/2-3-6	Washer, Packing, Cover Cap Screw.....	155
E2229	3	Stud, Cylinder Head, 5/8x4-5/8".....	152
E2230	3	Shim, Main Bearing, Thick.....	152
E2245	3	Shim, Main Bearing, Medium.....	152
E2247	3	Gasket, Crank Case Cover.....	152
E2258	1-1/2	Shim, Main Bearing, Thin.....	151
E2270	3	Shim, Main Bearing, Thin.....	152
K2002	1-1/2	Stud, Cylinder Head, 1/2"x3-1/8".....	151
K2003	1-1/2	Stud, Cylinder Head, 1/2"x2-1/2".....	151
629R	1-1/2-3	Washer, Crank Case Cover Screw.....	156
1705R	6	Washer, Crank Case Cover Screw.....	153
CYLINDER HEAD			
AE73	3	Head, Cylinder, E78R, with Valves and Springs.....	152
AE89	1-1/2	Head, Cylinder, E93R, with Valves and Springs.....	151
AE159	6	Head, Cylinder, E15R, with Valves and Springs.....	153
E15R	6	Head only, Cylinder.....	153
E78R	3	Head only, Cylinder.....	152
E93R	1-1/2	Head only, Cylinder.....	151
E1973	1-1/2	Valve, Intake and Exhaust.....	151
E1974	3	Valve, Intake and Exhaust.....	152
E1975	6	Valve, Intake and Exhaust.....	153
E2021	6	Gasket, Cylinder Head.....	153
E2221	1-1/2	Gasket, Cylinder Head.....	151
E2251	3	Gasket, Cylinder Head.....	152
K2006	1-1/2-3	Spring, Intake Valve.....	151
K2007	1-1/2-3	Spring, Exhaust Valve.....	151
K2025	3	Spring, Cushion, Intake Valve.....	152
K2073	6	Spring, Cushion, Intake Valve.....	153
K2136	6	Spring, Intake Valve.....	153
K3146	6	Spring, Exhaust Valve.....	153
K3147	6	Retainer, Exhaust Valve Spring.....	156
K3148	6	Pin, Exhaust Valve Spring.....	156

REPAIRS FOR MODELS E AND EK ENGINES

Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
CRANKSHAFT			
AE18	1-1/2	Crankshaft with Gear.....	151
AE60	3	Crankshaft with Gear.....	152
AE150	6	Crankshaft with Gear.....	154
E2049	6	Gear, Crankshaft.....	154
E2168	1-1/2	Gear, Crankshaft.....	151
E2207	1-1/2-3-6	Key, Crankshaft Gear.....	155
E2228	3	Gear, Crankshaft.....	152
PISTON AND CONNECTING ROD			
AE40	1-1/2	Connecting Rod, E49R, with Bearings.....	151
AE75	3	Connecting Rod, E50R, with Bearings.....	152
AE155	6	Connecting Rod, E3R, with Bearings.....	154
AE217	1-1/2	Bearing, Connecting Rod (2 Halves).....	151
AE219	3	Bearing, Connecting Rod (2 Halves).....	152
AE221	6	Bearing, Connecting Rod (2 Halves).....	154
D334	6	Set Screw, Piston Pin, 1/2"x2-1/4", Dog Point.....	154
E2R	6	Piston.....	154
E70R	1-1/2	Piston.....	151
E91R	3	Piston.....	152
E124R	1-1/2	Piston, 1/16" Oversize.....	151
E125R	3	Piston, 1/16" Oversize.....	152
E126R	6	Piston, 1/16" Oversize.....	154
E1954	1-1/2	Ring, Piston, 1/16" Oversize.....	151
E1955	3	Ring, Piston, 1/16" Oversize.....	152
E1956	6	Ring, Piston, 1/16" Oversize.....	154
E2011	6	Bushing, Piston Pin.....	154
E2032	6	Shim, Connecting Rod, Thin.....	154
E2036	6	Shim, Connecting Rod, Medium.....	154
E2038	6	Shim, Connecting Rod, Thick.....	154
E2075	1-1/2	Bushing, Piston Pin.....	151
E2076	3	Bushing, Piston Pin.....	152
E2169	1-1/2	Pin, Piston.....	151
E2197	1-1/2	Shim, Connecting Rod, Thick.....	151
E2199	1-1/2	Shim, Connecting Rod, Medium.....	151
E2231	3	Shim, Connecting Rod, Thick.....	152
E2246	3	Shim, Connecting Rod, Medium.....	152
E2259	1-1/2	Shim, Connecting Rod, Thin.....	151
E2271	3	Shim, Connecting Rod, Thin.....	152
K379R	1-1/2	Ring, Piston, 3-1/2"x1 1/4".....	151
K381R	3	Ring, Piston, 4-1/2"x5/16".....	152
K383R	6	Ring, Piston, 6"x5/16".....	154
K2024	3-6	Pin, Piston Pin Bushing used on 3-H. P. to Serial No. 240087.....	155
K2117	3	Pin, Piston.....	152
K2185	6	Pin, Piston.....	154
EXHAUST ROD			
E17R	6	Lever, Exhaust.....	153
E81R	3	Lever, Exhaust.....	152
E106R	1-1/2	Lever, Exhaust.....	151
E2023	6	Spring, Exhaust Lever.....	153
E2046	6	Pin, Exhaust Lever Pivot.....	153
E2048	6	Pin, Exhaust Lever to Rod.....	153
E2051	6	Rod, Exhaust.....	153
E2165	1-1/2	Rod, Exhaust.....	151
E2205	1-1/2-3	Pin, Exhaust Lever to Rod.....	155
E2224	3	Rod, Exhaust.....	152
E2292	1-1/2-3	Spring, Exhaust Lever.....	155
E2293	1-1/2-3	Cap Screw, Special Exhaust Lever, 5/8"x3-3/8".....	155
E2302	1-1/2-3-6	Oiler Cup.....	155
K2010	1-1/2-3	Screw, Exhaust Lever Adjusting.....	155
K2142	6	Screw, Exhaust Lever Adjusting.....	153
GOVERNOR			
AE24	1-1/2	Lever, Hookup, E66R, with Plate.....	151
AE66	3	Lever, Hookup, E85R, with Plate.....	152
AE162	6	Lever, Hookup, E20R, with Plate.....	154
AE232	1-1/2	Plunger, Governor with Oil Slinger (after Serial No. 326571).....	155
D469	1-1/2-3-6	Welsh Plug, Top of Hook-up Lever Shaft, 1-1/2- and 3-H. P. after Serial No. 265811.....	156
E8R	6	Gear, Cam Shaft.....	154

REPAIRS FOR MODELS E AND EK ENGINES

Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
GOVERNOR—Continued			
E9R	6	Shaft, Cam	154
E18R	6	Shaft, Governor	154
E19R	6	Cover, Governor	154
E56R	1-1/2-3	Shaft, Governor	155
E61R	1-1/2	Cover, Governor	151
E62R	1-1/2	Gear, Cam Shaft	151
E80R	3	Gear, Cam Shaft	152
E84R	3	Cover, Governor	152
E102R	1-1/2-3	Shaft, Cam	156
E109R	1-1/2-3-6	Weight, Governor	155
E133R	1-1/2	Weight, Governor (after Serial No. 326571)	155
E1979	6	Key, Cam Shaft Gear (after Serial No. 265316)	
E2018	6	Gasket, Governor Cover	154
E2024	6	Plunger, Governor	154
E2042	6	Shaft, Hookup Lever, 7/16"x9-1/8"	154
E2043	6	Bushing, Cam Shaft	154
E2044	6	Bushing, Governor Shaft	154
E2047	6	Shaft, Cam Follower	154
E2055	6	Follower, Cam	154
E2128	1-1/2-3	Gasket, Hookup Lever Shaft Hole (prior to Serial No. 265812)	155
E2171	1-1/2	Shaft, Hookup Lever, 7/16"x6-7/16"	151
E2175	1-1/2-3-6	Screw, Hookup Lever Adjusting	155
E2176	1-1/2-3-6	Screw, Speed Change	155
E2184	1-1/2	Gasket, Governor Cover	151
E2189	1-1/2-3-6	Washer, Governor Thrust, 1-7/16" O. D.x25/32" I. D.	155
E2203	1-1/2-3	Bushing, Governor and Cam Shaft	155
E2206	1-1/2-3	Plunger, Governor	155
E2207	1-1/2-3-6	Key, Cam Shaft Gear (used on 6-H. P. prior to Serial No. 265317)	155
E2220	1-1/2-3-6	Washer, Packing, Speed Change Nut	155
E2223	3	Shaft, Hookup Lever, 7/16"x7-7/16"	152
E2225	3	Shaft, Cam Follower	152
E2248	3	Gasket, Governor Cover	152
E2260	1-1/2-3	Follower, Cam	155
E2262	1-1/2	Shaft, Cam Follower	151
E2266	1-1/2-3-6	Nut, Speed Change	155
E2272	3	Spring, Cam Follower Spacer	155
E2295	1-1/2-3-6	Spring, Governor Plunger	155
E2296	1-1/2-3-6	Spring, Speed Change	155
K2342	1-1/2-3-6	Plate, Hookup Lever	155
1530R	1-1/2-3-6	Nut, Hex. Jam, Governor, 3/4" U. S. S., L. H. Thread	155
MIXER			
AE35	1-1/2-3	Valve, Needle	155
AE160	6	Valve, Needle	154
E12R	6	Body, Mixer	154
E89R	3	Body, Mixer	152
E2029	6	Seat, Needle Valve	154
E2160	1-1/2-3	Seat, Needle Valve	155
E2250	3	Gasket, Mixer to Cylinder Head	152
E2269	1-1/2-3	Air Shutter	155
K2396	1-1/2-3-6	Spring, Air Shutter	155
K2452	6	Air Shutter	154
K2480	1-1/2-3-6	Spring, Needle Valve	155
321R	6	Gasket, Mixer to Cylinder Head	154
FUEL SYSTEM			
AE16	1-1/2	Top, Fuel Tank, with Oil Pan	151
AE17	1-1/2	Tank, Fuel, with Drain and Plug	151
AE58	3	Top, Fuel Tank, with Oil Pan	152
AE59	3	Tank, Fuel, with Drain and Plug	152
AE102	3	Fuel Line, Complete	152
AE105	1-1/2	Fuel Line, Complete	151
AE120	1-1/2-3-6	Check Valve Body with Strainer	155
AE149	6	Top, Fuel Tank with Oil Pan	153
AE167	6	Fuel Line, Complete	153
AE169	6	Tank, Fuel, with Drain	153
AE230	1-1/2	Top Fuel Tank, with Oil Pan (after Serial No. 326571)	151
E97R	1-1/2-3-6	Plug, Filler, Wing, 3/4" Pipe Thread	155
E1976	1-1/2-3-6	Plug, Fuel Tank Drain, 3/8"	

REPAIRS FOR MODELS E AND EK ENGINES

Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
FUEL SYSTEM—Continued			
E2056	1-1/2-3-6	Flange, Fuel Drain (1-1/2-H. P., after Serial No. 250422, 3-H. P. after No. 252843).....	156
E2157	1-1/2-3-6	Nut, Solder Bushing, 1/4".....	155
E2158	1-1/2-3-6	Gland, Solder Bushing, 1/4".....	155
E2252	1-1/2-3-6	Bushing, Fuel Line.....	155
E2257	1-1/2-3	Flange, Fuel Drain (1-1/2-H. P. prior to Serial No. 250423, 3-H. P. prior to No. 252844).....	155
E2304	1-1/2-3-6	Check, Gas Valve.....	155
K2457	1-1/2-3-6	Nut, Compression, Fuel Line Cylinder Bushing.....	155
(MAGNETO) ENGINE PARTS			
AE30	1-1/2	Flywheel, E47R, with Crank.....	151
AE69	3	Flywheel, E110R, with Crank.....	152
AE70	1-1/2-3	Muffler.....	156
AE80	1-1/2-3	Crankshaft Extension.....	156
AE139	6	Muffler.....	153
AE164	6	Flywheel, E1R, with Crank.....	154
E11R	6	Flywheel, Pulley Side.....	154
E46R	1-1/2	Flywheel, Pulley Side.....	151
E65R	1-1/2	Spacer, Flywheel.....	151
E83R	3	Spacer, Flywheel.....	152
E111R	3	Flywheel, Pulley Side.....	152
E2014R	6	Crankshaft Extension.....	154
E2028	6	Skid.....	153
E2071	1-1/2-3-6	Set Screw, Headless, Crank to Flywheel, 1/4"x1-15/16".....	155
E2125	1-1/2-3-6	Funnel.....	156
E2127	1-1/2-3	Key, Flywheel, 3/8"x2-3/8" (Long).....	155
E2144	1-1/2	Skid.....	151
E2145	3	Skid.....	152
E2299	1-1/2-3-6	Crank, Starting, 1/4" Hole.....	155
E2301	1-1/2-3	Set Screw, Headless, Crank to Flywheel, 5/16"x1-3/4".....	155
K2191	6	Key, Flywheel.....	154
PLAIN PULLEY			
AE4	1-1/2-3	Pulley, E100R, 6"x5" Face, with Bolts.....	157
AE5	1-1/2-3	Pulley, E98R, 8"x5" Face, with Bolts.....	157
AE6	1-1/2-3	Pulley, E48R, 10"x5" Face, with Bolts.....	157
AE7	1-1/2-3	Pulley, E2134, 4-3/4"x4" Face, with Bolts.....	157
AE106	1-1/2-3	Pulley, E36R, 12"x5" Face, with Bolts.....	157
AE107	1-1/2-3	Pulley, E37R, 14"x5" Face, with Bolts.....	157
AE108	1-1/2-3	Pulley, E38R, 16"x5" Face, with Bolts.....	157
AE141	6	Pulley, E13R, 12"x6" with Set Screw.....	157
AK455	6	Pulley, K249R, 20"x8", with Set Screw.....	157
AK488	6	Pulley, K291R, 16"x8", with Set Screw.....	157
E2153	1-1/2	Washer, Belt Pulley Reinforcement.....	155
K2190	6	Key, Belt Pulley.....	157
FRICTION CLUTCH PULLEY			
AE142	6	Pulley, Friction Clutch, Complete, 12"x8".....	157
AE143	6	Pulley, Friction Clutch, Complete, 16"x8".....	157
AK152	6	Pulley, Friction Clutch, Complete, 20"x8".....	157
D136	6	Washer on Operating Shaft.....	157
D186	6	Pin, Operating Shaft, 1/4" Rd. x1/2".....	157
E114R	6	Rim, Pulley, 12x8".....	157
K276R	6	Finger, Clutch.....	157
K278R	6	Guard.....	157
K280R	6	Adjusting Nut.....	157
K285R	6	Rim, Pulley, 16"x8".....	157
K286R	6	Rim, Pulley, 20"x8".....	157
K295R	6	Sleeve.....	157
K297R	6	Hand Wheel.....	157
K299R	6	Collar.....	157
K2037	6	Grease Cup, No.0x1/4".....	157
K2190	6	Key, Belt Pulley, 5/8"x1/2"x3-3/8".....	157
K2852	6	Pin, Clutch Finger.....	157
K2853	6	Shaft, Clutch Operating.....	157
K2855	6	Key, Collar to Pulley, 1/2"x1/2"x13/16".....	157
K2856	6	Set Screw, Headless, 1/4"x1/2".....	157
K2858	6	Disk, Clutch.....	157

REPAIRS FOR MODELS E AND EK ENGINES

Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
HAND TRUCK FOR ENGINES			
AE82	1-1/2-3	Front Axle, Complete with E45R Turntable	157
AE83	1-1/2-3	Rear Axle, Complete with E43R Rear Bolster	157
AG54	6	Bolster	157
AG55	6	Rear Axle	157
AG56	6	Front Axle	157
D147	6	Washer, on Axles	157
E42R	1-1/2-3	Bolster, Front	157
E43R	1-1/2-3	Bolster, Rear	157
E44R	1-1/2-3	Wheel	157
E45R	1-1/2-3	Turntable	157
E2007	6	Plate, Bolster	157
E2131	1-1/2-3	Handle	157
E2133	1-1/2-3	Brace, Rear Axle	157
K3054	6	Tongue	157
M37	6	Wheel	157
1716R	6	Washer, on King Pin	157
MAGNETO			
AE36	1-1/2-3-6	Magneto only	155
C1197	1-1/2	Felt, Magneto Oil Seal (after Serial No. 326571)	155
E16R	6	Gear, Magneto Drive	153
E76R	1-1/2	Gear, Magneto Drive	155
E88R	3	Gear, Magneto Drive	155
E2185	1-1/2-3-6	Gasket, Magneto Cover Plate	155
E2213	1-1/2	Cable, Magneto	155
E2218	1-1/2-3-6	Plate, Magneto Cover	155
E2253	3-6	Cable, Magneto	155
MAGNETO PARTS			
E2302	1-1/2-3-6	Oiler Cup	155
1493R	1-1/2-3-6	Nut, Drive Shaft, 3/8" U. S. S.	155
HCT	1-1/2-3-6	Frame	155
HKZ	1-1/2-3-6	Key, Drive Shaft	155
HLS	1-1/2-3-6	Nut, Binding Post (Brass) 10/32"	155
HLW	1-1/2-3-6	Frame End	155
HMT	1-1/2-3-6	Strap, Magnet	155
HSF	1-1/2-3-6	Armature, Complete	155
KHM	1-1/2-3-6	Washer, Armature Thrust	155
NYH	1-1/2-3-6	Magnet	155
D2706	1-1/2-3-6	Screw, Frame End, 10/32"x1/2"	155
PGG	1-1/2-3-6	Screw, Magnet Strap, 8/32"x1/4"	155
PGP	1-1/2-3-6	Collector Brush with Spring	155
PGR	1-1/2-3-6	Ground Brush with Spring	155
PGW	1-1/2-3-6	Binding Post and Brush Holder with HLS	155
IGNITER			
AE25	1-1/2-3-6	Igniter, Complete	155
AE38	1-1/2-3-6	Electrode, Movable, with Point	155
AE88	1-1/2-3-6	Electrode, Stationary, with Point and Nuts	155
AE134	1-1/2-3-6	Body, Igniter, E108R, with Pin	155
E4R	6	Bracket, Igniter Trip	153
E99R	1-1/2-3	Bracket, Igniter Trip	155
E2057	1-1/2-3-6	Washer, on Stationary Electrode, 1/2" O. D. x9/32" I. D.	155
E2072	1-1/2-3-6	Pin, Igniter Torsion Spring, 3/16"x1/2"	155
E2163	1-1/2-3-6	Hammer, Igniter	155
E2227	1-1/2-3-6	Gasket, Igniter	155
E2234	1-1/2-3-6	Point, Igniter Spark	155
E2263	1-1/2-3-6	Igniter Trip	155
E2268	1-1/2-3-6	Spring, Igniter Trip Finger	155
E2274	1-1/2-3-6	Anvil, Igniter	155
E2275	1-1/2-3-6	Pin, Igniter Anvil	155
E2276	1-1/2-3-6	Spring, Igniter Main	155
E2282	1-1/2-3-6	Pin, Igniter Trip Finger	155
E2294	1-1/2-3-6	Spring, Igniter Torsion	155
E2298	1-1/2-3	Pin, Igniter Torsion Spring, 1/8"x1/2"	155
K2316	1-1/2-3-6	Mica Washers, Igniter (Set)	155
K2318	1-1/2-3-6	Terminal, Magneto Cable	155

REPAIRS FOR MODELS E AND EK ENGINES


Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
BATTERY PARTS			
AE109	1-1/2-3	Battery Spacer.....	156
AE111	1-1/2-3	Battery Box.....	156
AE114	1-1/2-3	Coil Box, with Contact Clips.....	156
E2068	1-1/2-3	Washer, Coil Box.....	155
E2097	1-1/2-3	Insulator, Spark Plug Cable.....	155
E2100	1-1/2-3	Coil.....	156
E2101	1-1/2-3	Cable, Spark Plug.....	156
E2102	1-1/2-3	Wire, Coil to Battery.....	156
E2102	1-1/2-3	Wire, Switch to Timer.....	156
E2103	1-1/2-3	Wire, Coil to Ground Connection.....	156
E2104	1-1/2-3	Insulator for Switch.....	156
E2105	1-1/2-3	Side Insulator for Battery.....	156
E2106	1-1/2-3	Bottom Insulator for Battery.....	156
E2118	1-1/2-3	Bottom Strip (Wood) Battery Box.....	156
E2119	1-1/2-3	Support, Battery Box.....	156
E2120	1-1/2-3	Cover, Battery Box.....	156
K2318	1-1/2-3	Terminal, Ground Connection.....	155
K2330	1-1/2-3	Switch.....	156
K2807	1-1/2-3	Wire, Battery to Switch.....	156
K2807	1-1/2-3	Battery, Connectors.....	156
1708R	1-1/2-3	Washer, Ground Connection.....	155
STATIONARY TIMER			
AE115	1-1/2	Stationary Timer Bracket, E32R, Complete.....	156
AE118	3	Stationary Timer Bracket, E30R, Complete.....	156
E2107	1-1/2-3	Timer Point.....	155
E2108	1-1/2-3	Timer Stud Cap.....	155
E2109	1-1/2-3	Timer Stud.....	155
K2316	1-1/2-3	Mica Washers (Set).....	155
1708R	1-1/2-3	Washer, under Timer Nut.....	155
MOVABLE TIMER			
AE116	1-1/2-3	Movable Timer Bracket, E35R, Complete.....	156
E2107	1-1/2-3	Timer Point.....	155
(BATTERY) ENGINE PARTS			
AE117	1-1/2	Cover, Crank Case, E33R, with Oil Guard.....	156
E29R	3	Cover, Crank Case.....	156
E31R	1-1/2-3	Plate, Spark Plug.....	156
E34R	1-1/2-3	Shaft, Cam.....	156
E2098	1-1/2-3	Safety Nipple, Spark Plug.....	156
E2227	1-1/2-3	Gasket, Spark Plug Plate.....	155
508R	1-1/2-3	Spark Plug.....	155

REPAIRS FOR MODEL EK ENGINES

Type EK Engine parts other than those listed below are same as used for Type E Engine.

Part Number	H. P. Size	NAME AND DESCRIPTION	Plate No.
AE186	1-1/2	Seat, Air Valve, E117R with Pin.....	156
AE187	1-1/2-3-6	Lever, Throttle, E23R with Pin.....	156
AE188	1-1/2	Head, Cylinder, E22R with Valves and Springs.....	156
AE193	3	Seat, Air Valve, E118R with Pin.....	156
AE198	6	Seat, Air Valve, E119R with Pin.....	156
E21R	3	Bracket, Control Shaft.....	156
E22R	1-1/2	Head, only, Cylinder.....	156
E24R	1-1/2-3	Lever, Control.....	156
E25R	1-1/2-3-6	Lever, Governor.....	156
E116R	6	Bracket, Control Shaft.....	156
E120R	1-1/2	Body, Carburetor.....	156
E121R	3	Body, Carburetor.....	156
E122R	6	Body, Carburetor.....	156
E123R	6	Lever, Control.....	156
E1982	1-1/2	Spacer, Control Shaft.....	156
E1983	1-1/2	Shaft, Control.....	156
E1984	1-1/2-3-6	Bowl, Carburetor.....	156
E1985	1-1/2-3-6	Gasket, Drain Valve.....	156
E1986	1-1/2	Gasket, Body to Cylinder Head.....	156
E1987	1-1/2-3-6	Spring, Throttle Stem.....	156
E1988	6	Spring, Air Valve.....	156
E1989	1-1/2-3	Spring, Air Valve.....	156
E1991	1-1/2-3-6	Drain Plug with Handle.....	156
E1992	1-1/2-3-6	Drain Valve.....	156
E1993	1-1/2-3-6	Staple, Throttle Valve.....	156
E1994	1-1/2-3-6	Body, Solder Bushing.....	156
E1995	6	Valve, Throttle.....	156
E1996	3	Valve, Throttle.....	156
E1997	1-1/2	Valve, Throttle.....	156
E1998	6	Air Valve.....	156
E1999	3	Air Valve.....	156
E2000	1-1/2	Air Valve.....	156
E2001	6	Shaft, Control.....	156
E2002	3	Shaft, Control.....	156
E2003	6	Stem, Throttle.....	156
E2004	1-1/2-3	Stem, Throttle.....	156
E2057	6	Washer, Air Valve Stem.....	155
K2480	1-1/2-3-6	Spring, Needle Valve.....	155
2532R	1-1/2-3-6	Washer, Speed Change Screw.....	155
17W	1-1/2-3-6	Screw, Throttle Stem.....	156


HARDWARE LIST FOR MODEL E AND EK ENGINES

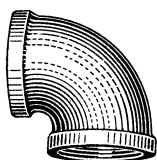**90° MALLEABLE
ELBOW**

Size	No.
1/4"	1472R

**PLAIN STEEL
WASHERS**


Size	No.
3/16"	2532R
7/16"	1704R
9/16"	1706R

 **SET-SCREWS—CUP POINTS**




Length		Diameter	
	1/4"	3/8"	1/2"
1/2"	1770R		
1-1/4"		1776R	1782R
1-3/4"		1778R	

**MACHINE BOLTS WITH SQUARE
HEAD AND SQUARE NUT**

Length		Diameter	
		3/8"	1/2"
1-1/4"	1613R		
1-1/2"	1620R		
1-3/4"	1615R		
2"	1616R	1624R	
2-1/4"	1610R		
2-1/2"		1625R	
3"		1629R	
3-1/2"		1935R with Hex. Nut	
3-3/4"		D571	

 
**COTTER KEYS**

Length		Diameter			
		3/32"	1/8"	3/16"	1/4"
1/2"	1730R				
5/8"			1732R		
3/4"			1733R		
1"				1741R	
1-1/4"				1742R	
1-1/2"				1743R	1745R
2"					1748R

   
HEXAGON NUTS**Plain****Semi-Finished****Jam****CARRIAGE BOLTS WITH
SQUARE NUT**

Length		Diameter		
		5/16"	3/8"	1/2"
1"	D322			
4"		1592R		
4-1/4"	E2089			
6-1/4"				E1980


U. S. S. Thread			S. A. E. Thread	
Size	Plain	S. F.	Jam S. F.	S. F.
No. 6-NC2	1499R			
No. 8-NC2	Brass E2094			
3/16"		E1990		
1/4"				G259
3/8"		1493R		
7/16"		1494R		
1/2"	1506R		1520R	
5/8"	1512R		1521R	
3/4"	1513R		1215R	

 HARDWARE LIST FOR MODEL E AND EK ENGINES**CAP SCREWS**


Length	Diameter				
	5/16"	3/8"	7/16"	1/2"	5/8"
3/4"	1666R	1669R			
1"		1670R	1675R		
1-1/4"		1671R		1683R	
1-1/2"		1672R		1684R	
2"		1673R		1685R	
2-1/4"				E2152	
2-1/2"		E2290	K2119		
3"				E2025	
3-1/4"					E2027

 **LOCK WASHERS**

Size	No.
1/4"	1729R
5/16"	1721R
3/8"	1722R
7/16"	1723R
1/2"	1724R
5/8"	1726R
3/4"	Thin E2126

 **RIVETS, O. H.**


Length	Diameter
	1/4"
1/2"	D432

 **MACHINE SCREWS**


Length	Diameter			
	6-32	8-32	1/4-20	5/16-18
1/2"			E2064	E2062
5/8"	1700R Countersunk Head	2490R Brass		
3/4"			E2063	

**NIPPLES, B. P., T. B. E.**

 
Size	No.
1/4" x 2-1/2"	1417R

**RIVETS, C. H.**

Length	Diameter
	3/16"
3/4"	E2303

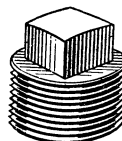**PLUGS, CAST-IRON, B. P.**

Size	No.
1/4"	1450R
1/2"	1452R
3/4"	E2142

 **PIPE CAPS**

Size	No.
1/4"	D345


CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODEL E AND EK ENGINES

In order to assist in the interpretation of repair orders, when a customer orders from the numbers on casting and these numbers do not appear in this repair list, this list is made up showing the number of casting forming a part of an assembly and showing the correct assembly to use for the repair.


For example, the number cast on the 1-1/2-H. P. Crank Case Cover is E60R, but the cover is furnished as a repair including oil guard, which changes the E60R to AE29.

Casting Number	H. P. Size	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
E1R	6	Flywheel with Crank.....	AE164	329	154
E3R	6	Connecting Rod with Bearings.....	AE155	327	154
E7R	6	Cylinder, with Studs, Main Bearings, Caps and Bushings.	AE171	326	153
E13R	6	Pulley, 12x6", with Set Screw.....	AE141	329	157
E20R	6	Lever, Hook-Up with Plate.....	AE162	327	154
E23R	1-1/2-3-6	Lever, Throttle with Pin (EK Engine only).....	AE187	332	156
E30R	3	Stationary Timer Bracket, Complete.....	AE118	331	156
E32R	1-1/2	Stationary Timer Bracket, Complete.....	AE115	331	156
E33R	1-1/2	Cover, Crank Case with Oil Guard.....	AE117	331	156
E35R	1-1/2-3	Movable Timer Bracket, Complete.....	AE116	331	156
E36R	1-1/2-3	Pulley, 12"x5" Face, with Bolts.....	AE106	329	157
E37R	1-1/2-3	Pulley, 14"x5" Face, with Bolts.....	AE107	329	157
E38R	1-1/2-3	Pulley, 16"x5" Face, with Bolts.....	AE108	329	157
E41R	1-1/2-3	Crankshaft Extension.....	AE80	329	156
E47R	1-1/2	Flywheel with Crank.....	AE30	329	151
E48R	1-1/2-3	Pulley, 10"x5" Face, with Bolts.....	AE6	329	157
E49R	1-1/2	Connecting Rod with Bearings.....	AE40	327	151
E50R	3	Connecting Rod with Bearings.....	AE75	327	152
E60R	1-1/2	Cover, Crank Case, with Oil Guard.....	AE29	326	151
E66R	1-1/2	Lever, Hook-Up, with Plate.....	AE24	327	151
E77R	3	Cylinder, with Studs, Main Bearings, Caps and Bushings.	AE86	326	152
E85R	3	Lever, Hook-Up with Plate.....	AE66	327	152
E98R	1-1/2-3	Pulley, 8"x5" Face, with Bolts.....	AE5	329	157
E100R	1-1/2-3	Pulley, 6"x5" Face, with Bolts.....	AE4	329	157
E103R	1-1/2	Cylinder, with Studs, Main Bearings, Caps and Bushings.	AE85	326	151
E108R	1-1/2-3-6	Body, Igniter with Pin.....	AE134	330	155
E110R	3	Flywheel with Crank.....	AE69	329	152
E117R	1-1/2	Seat, Air Valve with Pin (EK Engine only).....	AE186	332	156
E118R	3	Seat, Air Valve with Pin (EK Engine only).....	AE193	332	156
E119R	6	Seat, Air Valve with Pin (EK Engine only).....	AE198	332	156
E127R	1-1/2	Cover, Crank Case with Oil Guard and Ventilator.....	AE229	326	151
K249R	6	Pulley, 20"x8", with Set Screw.....	AK455	329	157
K291R	6	Pulley, 16"x18", with Set Screw.....	AK488	329	157


REPAIR PARTS FOR MODELS E AND EK ENGINES

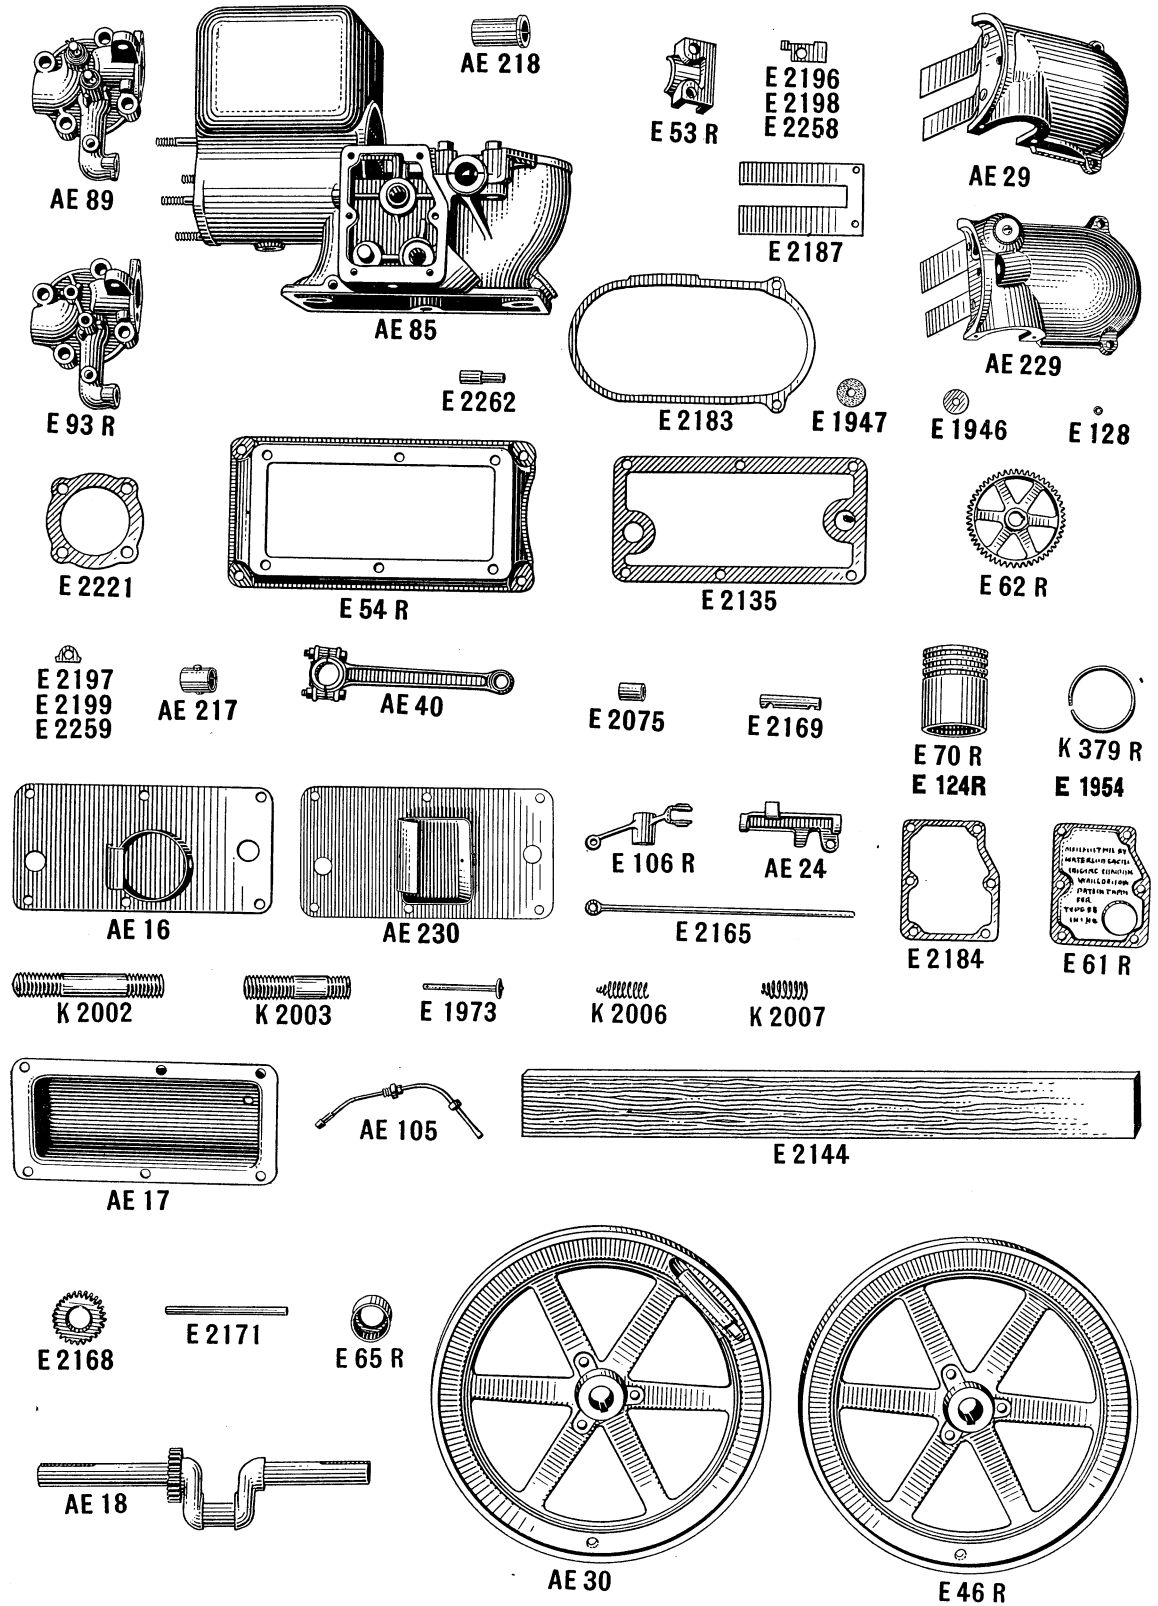

REPAIR PARTS FOR MODELS E AND EK ENGINES

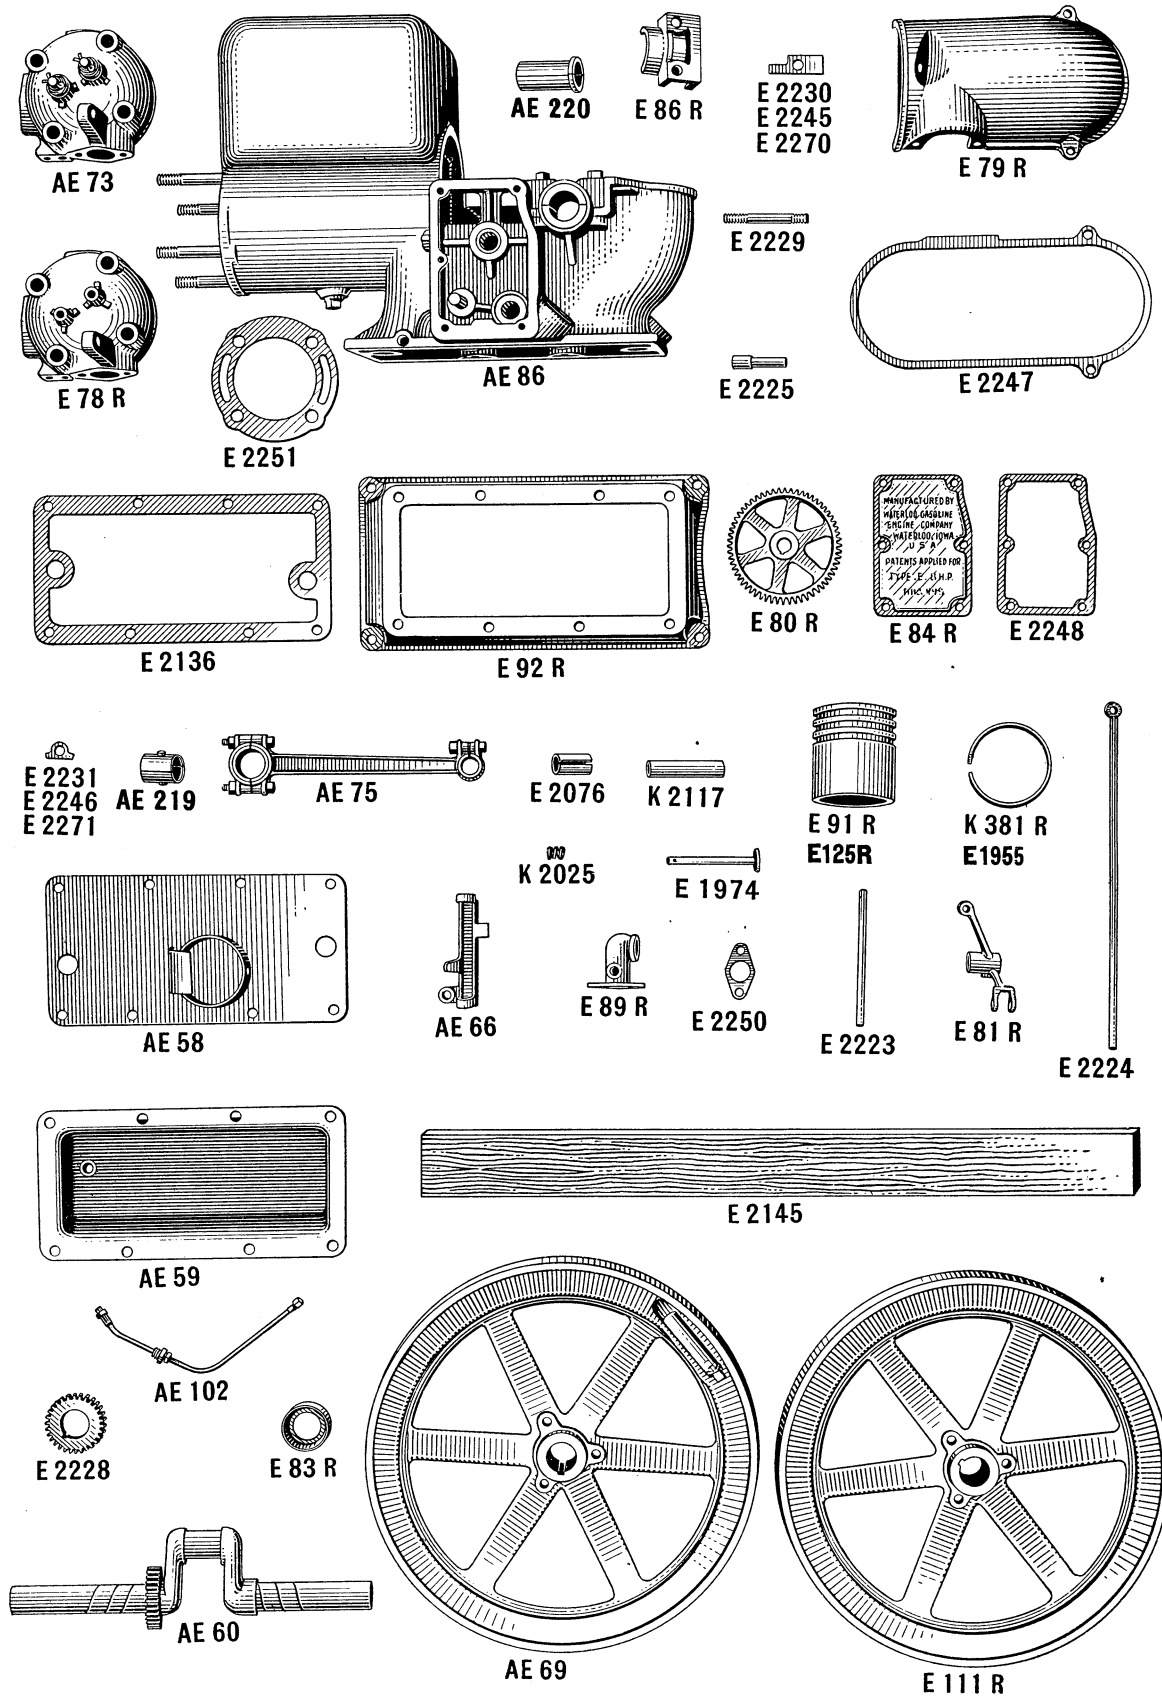

REPAIR PARTS FOR MODELS E AND EK ENGINES

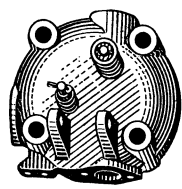

AE 159



E 2021



C 524




1705 R

E 2031
E 2035
E 2037

E 2045




E 10 R

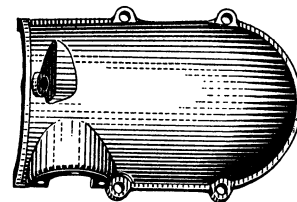

E 6 R




E 15 R

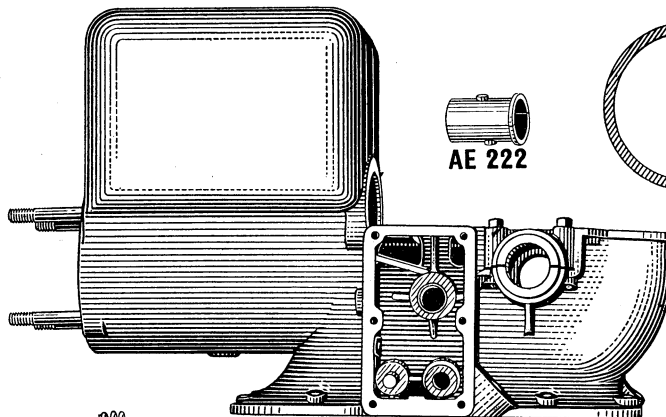

AE 171




AE 222

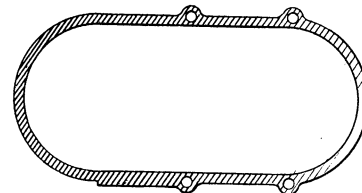

E 2019



E 1975

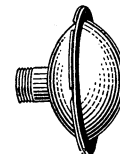

AE 139



K 3146




K 2136



K 2073



E 2051

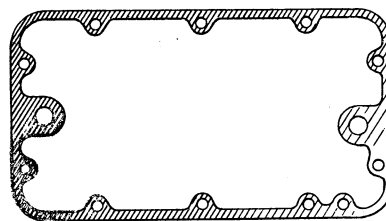

E 2020



E 17 R



K 2142



E 4 R



E 2048




E 2046




E 2023




E 16 R

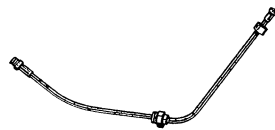


AE 167

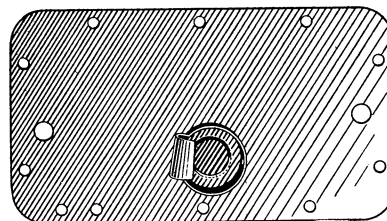


AE 149

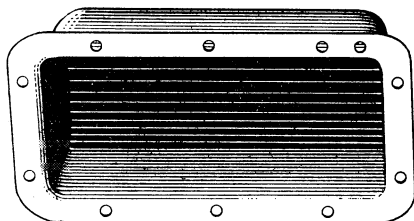

AE 169

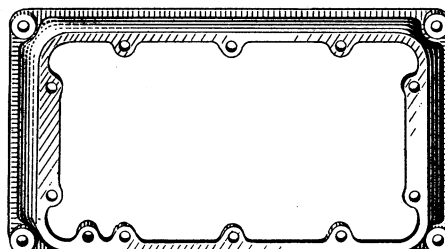

E 5 R

 

E 2028

REPAIR PARTS FOR MODELS E AND EK ENGINES


E 2032
E 2036
E 2038

AE 221


AE 155

E 2011

 
K 2185




E 2 R
E 125 R
E 2024

 

K 383 R
E 1956

 

E 19 R

 

E 2018



E 8 R



E 9 R



E 2043



E 18 R



AE 160



E 2029



321 R



K 2452



E 12 R



E 2047




E 2055



E 2042




AE 162

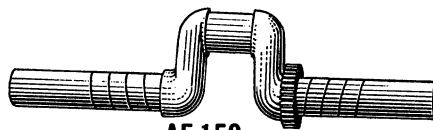


AE 150



 E 2049




E 2014 R

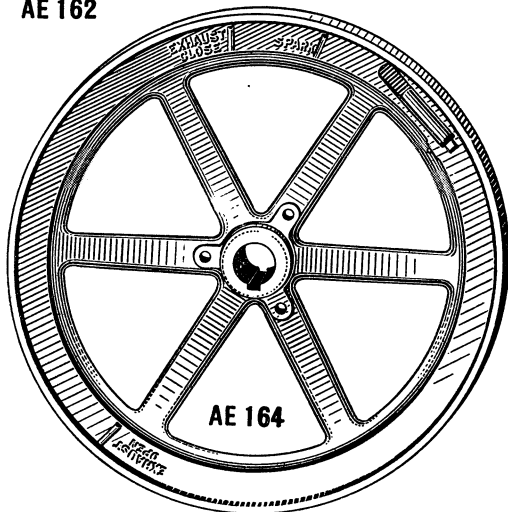

AE 164

K 2191

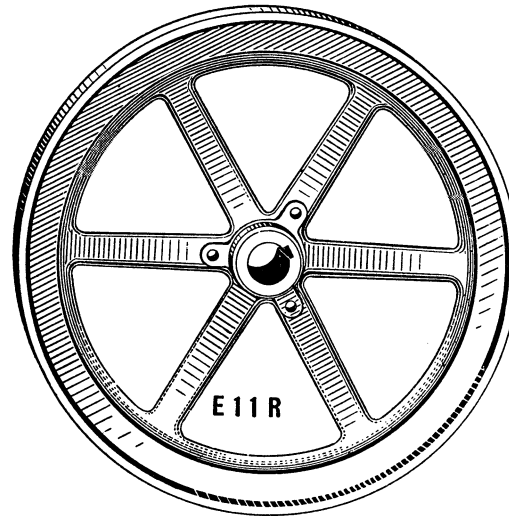

E 11 R

Plate No. 154

AE 36

NYH

HCT

E 88 R

E 76 R

AE 2185

E 2218

C 1197

HSF

KHM

1493 R

PGP

HLW

E 2298

HMT

E 2072

E 2275

E 2274

E 2213

HLS

PGR

PGG

PGW

HKZ

PGD

E 2227

AE 25

E 99 R

E 2263

E 2294

E 2268

E 2282

E 2276

E 2057

E 56 R

AE 38

AE 88

K 2316

K 2318

E 2203

E 2296

E 2176

E 2266

AE 232

E 2206

E 2295

E 2260

E 109 R

E 133 R

E 2207

E 2175

E 2189

E 2128

E 97 R

E 2257

E 2252

E 2157

E 2158

E 2304

AE 120

E 2272

508 R

E 2127

E 2299

E 2071

E 2301

E 2160

E 2269

AE 35

E 2293

E 2292

E 2205

E 2302

E 2109

E 2107

E 2108

E 2097

E 2153

E 2068

E 2220

1708 R

K 2024

K 2010

1530 R

K 2342

K 2396

K 2480

K 2457

Plate No. 155

REPAIR PARTS FOR MODELS E AND EK ENGINES


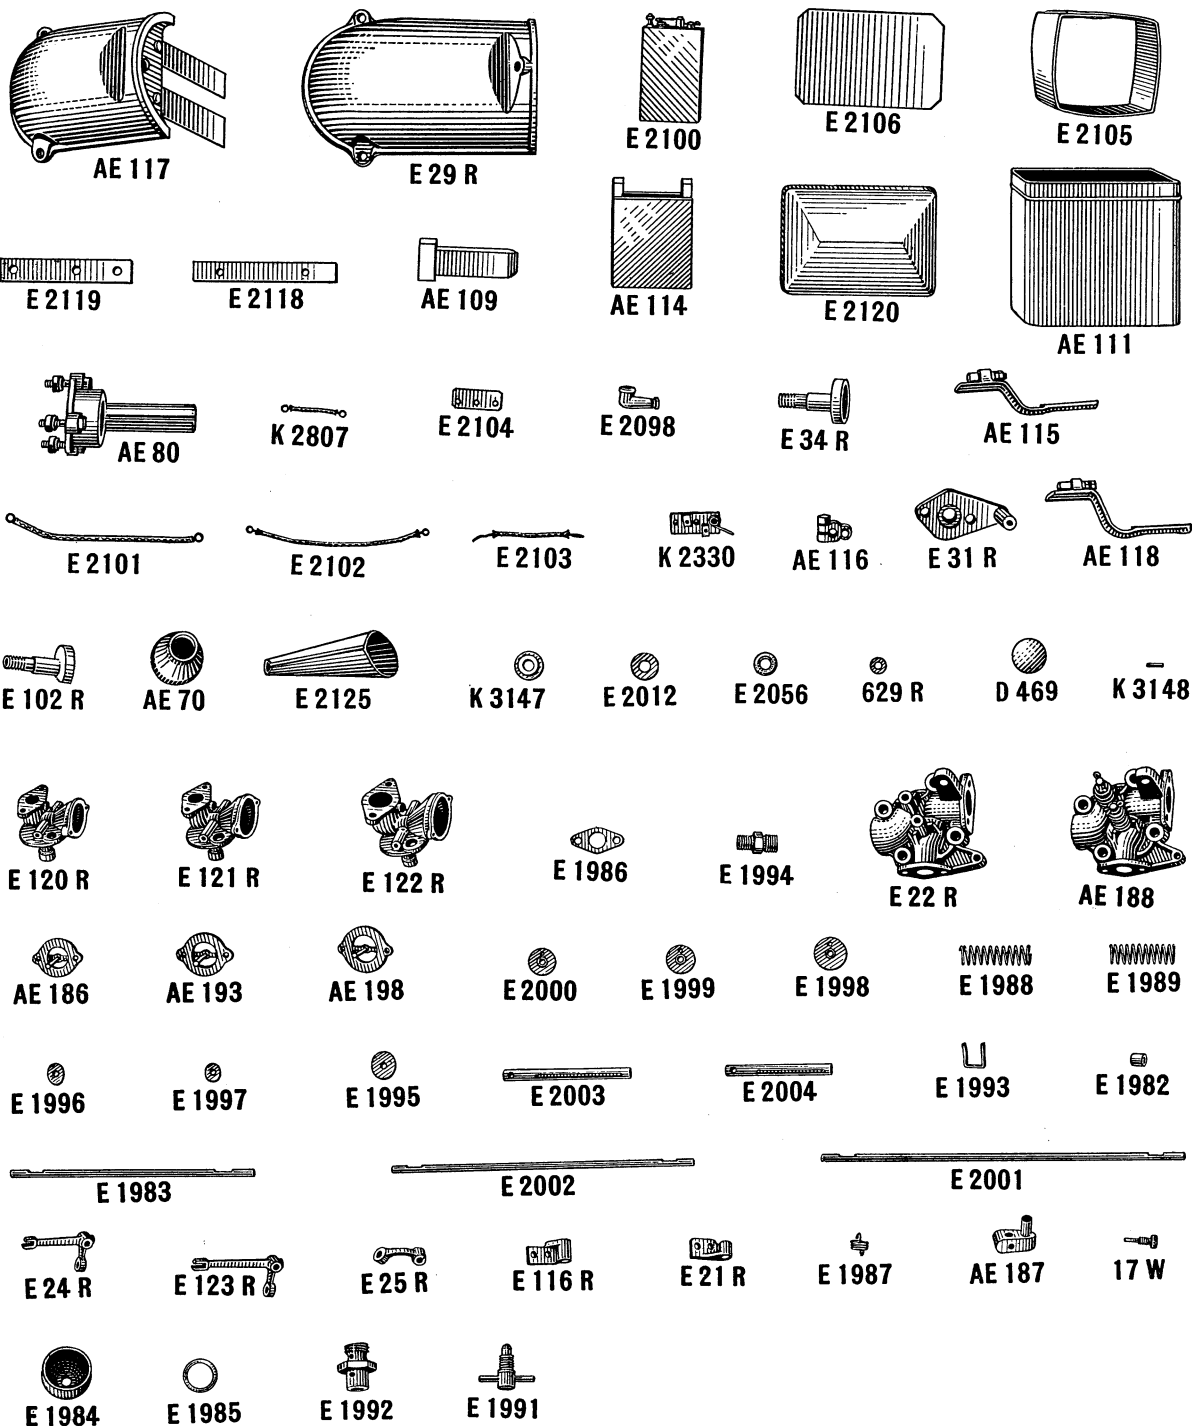


Plate No. 156


REPAIR PARTS FOR MODELS E AND EK ENGINES

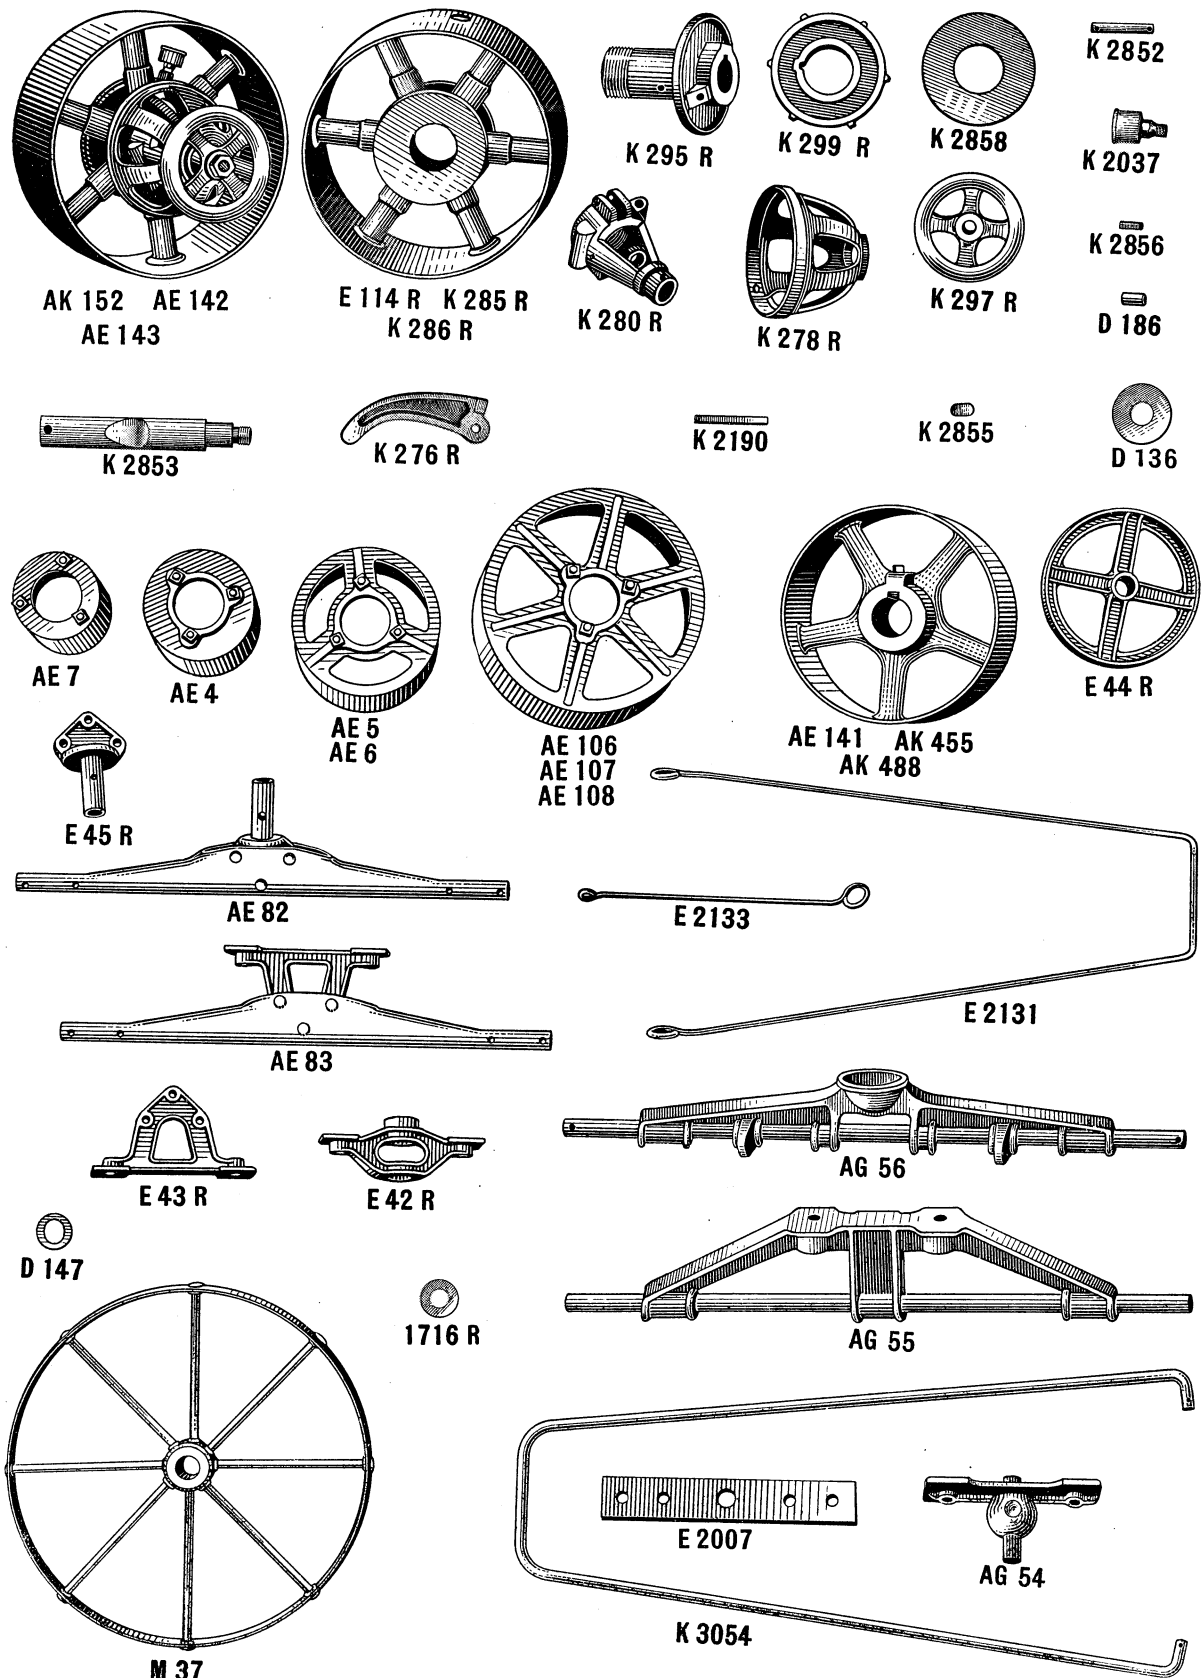


INDEX

For No. 111 and No. 113 Type W Engines

SUBJECT	Page	SUBJECT	Page
Air Cleaner and Stack.....	356	Gas Fuel System.....	356
Breather, Crank Case.....	347	Governor.....	346
Cam Followers.....	344	Governor Idler Gear.....	346
Cam Shaft.....	345	Hood.....	349
Carburetor.....	355	Lubricating System and Oil Pump.....	347
Casting Numbers.....	357	Magneto.....	352
Clutch Fork Bearing and Pulley		Magneto Ground.....	349
Brake.....	352	Magneto Parts.....	353
Clutch Parts.....	352	Manifold and Cylinder Head.....	346
Controls.....	346	Oil Filter, Cooler and Indicator.....	348
Cooling System.....	350	Oil Pipes and Fittings.....	348
Crank Case.....	344	Pistons, Connecting Rods, and	
Crank Case Ventilator.....	347	Crankshaft.....	344
Cylinder.....	345	Pulley.....	351
Cylinder Head, Valves and Manifold	346	Radiator Guard and Curtain.....	351
Engine.....	344	Tappets.....	345
Fan.....	351	Tools.....	356
Fuel System.....	349	Valves.....	346
		Water Feed.....	345
		Water Pump and Piping.....	350

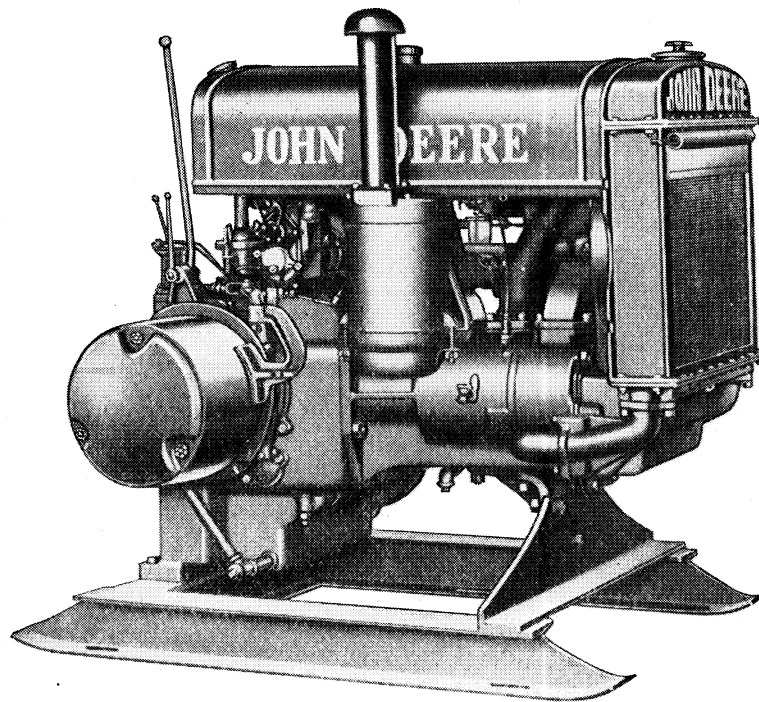

Type W No. 111 Stationary Engine

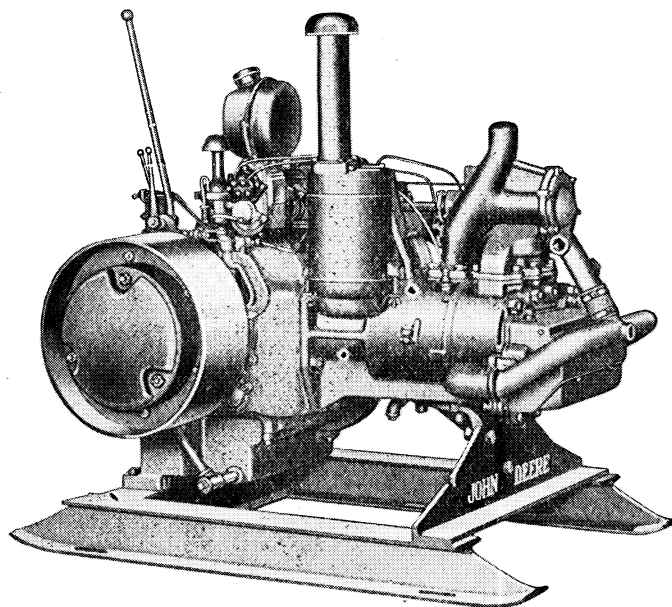

Type W No. 113 Stationary Engine

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
CRANK CASE				
AD948	Skid, Complete.....	1000-1097		
AD962	Gasket, Complete, Crank Case Cover.....	1000-	1098-	108
AD963	Crank Case with Studs.....	1000-1097		
AD1017	Skid, Complete.....	1000-	1098-	108
AD1054	Crank Case with Studs.....	1000-	1098-	
AD1223	Cover, with Breather Body, Crank Case.....	1000-	1098-	108
C2271	Stud, Skid to Case, 3/4"x2-1/2".....	1000-1097		108
D937	Washer, Front and Rear Covers.....	1000-	1098-	107
D2271R	Support, Front End.....	1000-	1098-	108
ENGINE				
AD635	Bushings, Main Bearing (2 Halves).....	1000-	1098-	109
AD703	Housing, D1985R, R. H., Main Bearing with Cap, Bolts and Nuts.....	1000-	1098-	109
AD733	Housing, D1725R, L. H., Main Bearing with Cap, Bolts and Nuts.....	1000-	1098-	109
AD852	Flywheel, D1970R, with Bolts and Dowel Pin.....	1000-	1098-	108
AD935	Spacer, Flywheel, with Oil Seal Washer.....	1000-	1098-	109
D299	Gasket, L. H., Main Bearing.....	1000-		109
D328	Cap Screw, R. H., Main Bearing to Case (Drilled).....	1000-	1098-	109
D1080	Screw, Flywheel, Locating.....	1000-	1098-	109
D1684	Bolt, Main Bearing (4 used per Bearing).....	1000-	1098-	109
D1717	Stud, Cylinder Head.....	1000-	1098-	110
D1783R	Cover, L. H., Main Bearing.....	1000-	1098-	109
D1791	Gasket, L. H., Main Bearing Cover.....	1000-	1098-	109
D1861	Felt, R. H., Main Bearing.....	1000-	1098-	109
D1964	Shim, Laminated, R. H., Main Bearing.....	1000-	1098-	109
D2009	Dowel Pin, Flywheel.....	1000-	1098-	108
D2052	Shim, Laminated, L. H., Main Bearing.....	1000-	1098-	109
D2124	Washer, Oil Seal in Flywheel Spacer.....	1000-	1098-	109
E2142	Plug, 3/4", Crank Case, Drain.....	1000-	1098-	109
E2142	Plug, 3/4", L. H., Main Bearing Housing.....	1000-	1098-	109
PISTONS, CONNECTING RODS, AND CRANKSHAFT				
AD644	Connecting Rod, D1601R, and Cap, with Piston Pin Bushing...	1000-	1098-	109
AD656	Connecting Rod, D1601R, Complete.....	1000-	1098-	
AD669	Connecting Rod Bolt with Nut and Cotter (4 used per Rod).....	1000-	1098-	109
AD838	Crankshaft, D1750R, with Gear, Bearing Inner Race and Balance.....	1000-	1098-	109
AD1334	Piston, with Rings, 6-3/4", .125 Oversize.....	1000-	1098-	110
AD1355	Piston, with Rings, 6-3/4", .045 Oversize.....	1000-	1098-	110
AD1356	Piston, with Rings, 6-3/4", .045 Oversize.....	1000-	1098-	110
AD1357	Piston, with Rings, 6-3/4", .090 Oversize.....	1000-	1098-	110
AD1358	Piston, with Rings, 6-3/4", High Altitude 4.24 Compression Ratio.....	1000-	1098-	110
D223	Pin, Piston.....	1000-	1098-	109
D334	Set Screw, Piston Pin, 1/2"x2-1/4" Drilled Head.....	1000-	1098-	109
D553	Bushing, Piston Pin.....	1000-	1098-	109
D762	Pin, Piston, .005 Oversize.....	1000-	1098-	109
D964	Ring, 6-3/4" Piston (5 used per Piston).....	1000-	1098-	110
D1163	Gear, Crankshaft.....	1000-	1098-	109
D1164	Key, Gear to Crankshaft.....	1000-	1098-	109
D1173	Ring, 6-3/4", .045 Oversize (5 used per Piston).....	1000-	1098-	110
D1174	Ring, 6-3/4", .090 Oversize (5 used per Piston).....	1000-	1098-	110
D1345	Ring, Oil Control, 6-3/4".....	1000-	1098-	110
D1429	Ring, Oil Control, 6-3/4", .045 Oversize.....	1000-	1098-	110
D1430	Ring, Oil Control, 6-3/4", .090 Oversize.....	1000-	1098-	110
D1965	Shim, Laminated, Connecting Rod.....	1000-	1098-	109
D2532	Ring, 6-3/4", .125 Oversize (5 used per Piston).....	1000-	1098-	110
CAM FOLLOWER				
D67R	Cam Follower.....	1000-	1098-	111
D349	Spacer, Cam Follower.....	1000-	1098-	111
D469	Welsh Plug, Cam Follower Shaft Hole.....	1000-	1098-	111
D795	Spring, Cam Follower Spacer.....	1000-	1098-	111
D1773	Shaft, Cam Follower.....	1000-	1098-	111
92R	Washer, Cam Follower Spacing.....	1000-	1098-	111
1452R	Pipe Plug, 1/2", Cam Follower Shaft Hole.....	1000-	1098-	111

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
TAPPETS				
AD84	Oiler Pipe.....	1000-	1098-	111
AD179	Tappet Lever, D88R, with Rivet.....	1000-	1098-	111
AD466	Tappet Case, D381R, with Plugs.....	1000-	1098-	111
AD622	Tappet Lever Spacer and Washer.....	1000-	1098-	111
D31R	Elbow, Tappet Case End.....	1000-	1098-	111
D169	Socket, Tappet Lever.....	1000-	1098-	111
D179	Nut, Packing, Feed Pipe.....	1000-	1098-	111
D193	Shaft, Tappet Lever.....	1000-	1098-	111
D285	Gasket, Tappet Case to Cylinder Head.....	1000-	1098-	111
D309	Gasket, Tappet Case Cover.....	1000-	1098-	111
D364	Stud, Tappet Case to Head.....	1000-	1098-	111
D376	Spring, Tappet Lever Spacer.....	1000-	1098-	111
D401R	Elbow, Governor Case End.....	1000-	1098-	111
D463	Welsh Plug, End of Shaft.....	1000-	1098-	111
D565	Gasket on Elbow, Tappet Case End.....	1000-	1098-	111
D683	Rivet, Tappet Lever.....	1000-	1098-	111
D1563	Cover, Tappet Case (Steel).....	1000-	1098-	111
D1776	Tappet Rod.....	1000-	1098-	111
D1785	Feed Pipe, Governor to Tappet Case.....	1000-	1098-	111
D2080	Packing Washer, Tappet Feed Pipe (8 used).....	1000-	1098-	111
E1976	Pipe Plug, Tappet Case, 3/8".....	1000-	1098-	111
K2052	Lead Washer, Tappet Oiler Cap Screw.....	1000-	1098-	111
WATER FEED				
AC431	Pipe with Gland, Water Feed (Long).....	1448-	1448-	111
AD104	Water Valve Body, Complete.....	1098-	1098-	111
AD238	Needle Valve, Water Feed.....	1098-	1098-	111
AD1024	Pipe with Gland, Water Feed.....	1098-1447	1098-1447	111
AD1279	Pipe with Gland, Water Feed (Short).....	1448-	1448-	111
AD1280	Cock, Drain.....	1448-	1448-	111
C1818	Bushing, Water Connection.....	1098-	1098-	111
D410	Nut, Packing, Water Needle Valve.....	1000-	1098-	111
D447	Check, Water Valve.....	1000-	1098-	111
D448R	Body, Water Valve.....	1000-	1098-	111
D450	Bushing, Water Valve.....	1000-1097		111
D452	Cap, Water Valve Body.....	1000-	1098-	111
D2291	Tee, Cylinder Drain and Water Feed Line.....	1000-	1098-	111
D2466	Tee, Water Line to Air Vent Cock Connection.....	1448-	1448-	111
E2149	Nut, Solder Bushing, Pipe to Body, 5/16".....	1000-	1098-	111
E2150	Gland, Solder Bushing, Water Feed Pipe, 5/16".....	1000-	1098-	111
CAM SHAFT				
AD98	Cam Shaft Gear, D37R, with Bolts.....	1000-	1098-	111
D6R	Bearing, Cam Shaft.....	1000-	1098-	111
D102R	Cam Shaft.....	1000-	1098-	111
D291	Gasket, Cam Shaft Bearing, Thick.....	1000-	1098-	111
D467	Washer, Cam Shaft Spacer.....	1000-	1098-	111
D534	Gasket, Cam Shaft Bearing, Thin.....	1000-	1098-	111
D744	Bolt, in Cam Gear, 1/2"x3" Drilled.....	1000-	1098-	111
56R	Woodruff Key, Cam Gear.....	1000-	1098-	111
1452R	Pipe Plug, 1/2", Cam Gear Sump Drain.....	1000-	1098-	111
CYLINDER				
AD788	Cylinder, D1716R, Complete with Studs.....	1000-	1098-	110
AD903	Cylinder, AD788, with Pistons, Rings and Gaskets.....	1000-	1098-	
C524	Priming Cup.....	1000-	1098-	110
D364	Stud, Water Pipe to Cylinder, 1/2"x2-3/16".....	1000-	1098-	110
D409	Stud, Front End Support, 3/4"x3-1/4".....	1000-	1098-	110
D1717	Stud for Cylinder Head, 3/4"x7-7/16".....	1000-	1098-	110
D1789	Gasket, Cylinder to Case.....	1000-	1098-	110
D2291	Tee, Water Outlet.....	1000-	1098-	111
E2142	Plug, 3/4", Cylinder Drain.....	1000-	1098-	110
1450R	Plug, 1/4", in Water Feed Opening.....	1000-	1098-	110

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
CYLINDER HEAD, VALVES AND MANIFOLD				
AD789	Cylinder Head, D1718R, with Valve Guides and Studs.....	1000-	1098-	110
AD1056	Cylinder Head, D1718R, Complete with Valves and Springs.....	1000-	1098-
D488	Stud, Manifold, 1/2"x2".....	1000-	1098-	110
D1719R	Guide, Valve.....	1000-	1098-	110
D1720	Lock Washer, Valve Stem (Use 2 with 1 D1721).....	1000-	1098-	110
D1721	Cap, Valve Spring.....	1000-	1098-	110
D1724	Spring, Valve.....	1000-	1098-	110
D1787	Gasket, Cylinder Head.....	1000-	1098-	110
D1788	Gasket, Manifold to Head.....	1000-	1098-	110
D1891R	Manifold.....	1000-	1098-	110
D2176R	Exhaust Flange.....	1000-	1098-	112
D2271R	Support, Front End.....	1000-	1098-	108
D2287	Valve, Exhaust and Inlet.....	1000-	1098-	110
264R	Lead Washer, Cylinder Head Stud (9 used per Head).....	1000-	1098-	110
GOVERNOR				
AC667	Weight, Governor (1 only) (2 used per Engine).....	1000-	1098-	113
AD483	Sleeve, Governor Shaft.....	1000-	1098-	113
AD878	Shaft, Governor Lever with Screws.....	1000-	1098-	113
C902	Pin, Governor Weight.....	1000-	1098-	113
D279	Key, Governor Drive Gear to Shaft, 3/16"x1-1/4".....	1000-	1098-	113
D279	Key, Magneto Drive Flange.....	1000-	1098-	113
D297	Gasket, Governor Bearing Housing to Case, Thick.....	1000-	1098-	113
D298	Gasket, Governor Case to Crank Case.....	1000-	1098-	113
D403	Key, Bevel Gear to Governor Shaft.....	1000-	1098-	113
D509	Gasket, Governor Bearing Housing to Case, and Fan Shaft Rear Bearing Housing to Case.....	1000-	1098-	113
D831R	Cover, Bearing Housing, L. H., Governor Shaft.....	1000-	1098-	113
D1185	Gear, Fan and Water Pump Drive, Spiral Bevel.....	1000-	1098-	113
D1298	Lever, Inside Governor.....	1000-	1098-	113
D1300	Thrust Bearing, Governor Fork.....	1000-	1098-	113
D1306	Washer, Governor Sleeve.....	1000-	1098-	113
D1367R	Housing, L. H., Governor Shaft.....	1000-	1098-	113
D1690R	Case, Governor.....	1000-	1098-	113
D1695R	Housing, R. H., Governor Shaft.....	1000-	1098-	113
D1696	Arm, Governor.....	1000-	1098-	113
D1827	Shaft, Governor.....	1000-	1098-	113
D1828	Spacer, L. H., Governor Bearing.....	1000-	1098-	113
D1863	Spacer, R. H., Governor Bearing.....	1000-	1098-	113
D1938	Snap Ring, Governor Bearing Retainer.....	1000-	1098-	113
D1939	Spring, R. H., Governor Bearing Tension.....	1000-	1098-	113
D1942	Felt Retainer, Governor Shaft, R. H.....	1000-	1098-	113
D1943	Felt Washer, Governor Shaft, R. H.....	1000-	1098-	113
D1944	Washer, Oil Seal, Governor Bearing.....	1000-	1098-	113
D1946R	Flange, Magneto Drive.....	1000-	1098-	113
D1958R	Gear, Governor Drive.....	1000-	1098-	113
D1962	Support, Governor Lever Shaft.....	1000-	1098-	113
D2191R	Housing, L. H., Governor and Fuel Pump Bracket.....	1000-	1098-	113
JD7655	Cup, Governor Shaft Bearing.....	1000-	1098-	113
JD7656	Cone, Governor Shaft Bearing.....	1000-	1098-	113
JD7657	Retainer with Balls, Governor Shaft Bearing.....	1000-	1098-	113
K2573	Thrust Washer, Governor Shaft.....	1000-	1098-	113
GOVERNOR IDLER GEAR				
AD99	Gear, D71R, Governor Idler with Bushing.....	1000-	1098-	113
AD174	Spindle, Idler Gear.....	1000-	1098-	113
D186	Dowel Pin, 1/4"x1/2".....	1000-	1098-	113
D490	Washer, Idler Gear Thrust.....	1000-	1098-	113
D554	Bushing, Idler Gear.....	1000-	1098-	113
CONTROLS				
A1197	Bushing, Clutch Lever Pin.....	1502-	1502-	114
AA794	Lever, Clutch, with Pivot Bushing.....	1000-	1098-	114
C247R	Trunnion, Speed Change.....	1000-	1098-	114
C916	Sleeve, Speed Change Spring.....	1000-	1098-	114
D87R	Lever, Spark and Speed Control.....	1000-	1098-	114

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
CONTROLS—Continued				
D157	End, Throttle, and Speed Rod	1000—	1098—	114
D393R	Yoke, Clutch Operating Rod	1000—	1098—	114
D559	Set Screw, Speed Control Fork	1000—	1098—	114
D1926	Rod, Carburetor Control	1000—	1098—	114
D1959R	Fork, Governor Speed Control	1000—	1098—	114
D1960	Spring, Speed Change	1000—	1098—	114
D1961	Crank, Governor Control	1000—	1098—	114
D1994	Pin, Clutch Rod Yoke, 5/8"x1-5/8"	1000—	1098—	114
D2031	Bolt, Clutch Lever Pivot	1000—	1098—	114
D2170	Rod, Spark Control	1000—	1098—	114
D2171	Rod, Speed Control	1000—	1098—	114
D2172	Rod, Clutch Operating	1000—	1098—	114
D2173R	Quadrant, Control	1000—	1098—	114
E2057	Washer, Throttle Rod	1000—	1098—	114
K2172	Spring, Control Lever Friction	1000—	1098—	114
CRANK CASE BREATHER				
AC762	Stack, Crank Case Breather	1000—	1098—	112
AD1223	Cover, with Breather Body, Crank Case	1000—	1098—	108
D1950	Spring, Clamp, Crank Case Breather	1000—	1098—	112
D1951	Felt Gasket, Filter, Crank Case Breather	1000—	1098—	112
D1952	Filter Core, Crank Case Breather	1000—	1098—	112
D1957	Felt Gasket, Cover, Crank Case Breather	1000—	1098—	112
D2120	Clamp, Crank Case Breather	1000—	1098—	112
K3151	Washer, Clamps, Breather Stack	1000—	1098—	112
CRANK CASE VENTILATOR				
A535	Packing, Ventilator Pipe	1198—	1198—	112
C1705	Gland, Ventilator Pipe Packing	1000—	1098—	112
D179	Nut, Ventilator Pipe Packing	1000—	1098—	112
D1916R	Elbow, Ventilator Pipe	1000—	1098—	112
D1917	Pipe, Ventilator, Governor Case to Air Cleaner	1000-1197	1098-1197	112
D2080	Packing Washer, Ventilator Pipe Intake End, 4 used, Discharge End, 6 used	1000-1197	1098-1197	112
D2380	Pipe, Ventilator, Governor Case to Air Cleaner	1198—	1198—	112
LUBRICATING SYSTEM AND OIL PUMP				
AD700	Strainer, C1670R, Complete	1000—	1098—	114
D14R	Body, Oil Pump	1000—	1098—	114
D38R	Gear, Oil Pump Drive	1000—	1098—	114
D162	Valve, Relief, Oil Pump Cover	1000—	1098—	114
D180	Nut, Relief Valve	1000—	1098—	114
D271	Screen, Oil Strainer	1000—	1098—	114
D301	Gasket, Cork, Oil Pump Body to Case	1000—	1098—	114
D302	Gasket, Oil Pump Gear Cover, .015", Thick	1000—	1098—	114
D308	Gasket, Strainer Flange	1000—	1098—	114
D317	Stud, Oil Pump Strainer	1000—	1098—	114
D403	Key, Drive Gear to Shaft, 3/16"x7/8"	1000—	1098—	114
D453	Washer, Relief Valve Pressure (3 used)	1000—	1098—	114
D465	Gasket, Oil Relief Valve Nut	1000—	1098—	114
D1075	Oil Pump Drive Shaft with Gear	1000—	1098—	114
D1076	Oil Pump Idler Shaft with Gear	1000—	1098—	114
D1671	Washer, Oil Strainer Flange, Lead (1 3/8" x 31/32")	1000—	1098—	114
D1995	Spring, Relief Valve	1000—	1098—	114
D2065R	Cover, Oil Pump Gear	1000—	1098—	114
D2081	Washer, Packing, Oil Discharge Elbow	1000-1097	1098—	114
D2277	Nipple, Oil Level Gauge, 3/4"x3-1/2"	1098—	1098—	114
D2278	Tee, Oil Level Gauge, 3/4"x3/4"x3/4"	1098—	1098—	114
D2279	Gauge Pipe, Oil Level, 3/4"x16"	1098—	1098—	114
D2280	Cap, Oil Level Gauge, 3/4"	1098—	1098—	114
D2281	Clip, Oil Level Gauge Pipe	1098—	1098—	114
D2282	Oil Level Gauge	1098—	1098—	114
E2142	Plug, Crank Case Drain	1098—	1098—	114

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
OIL FILTER, COOLER, AND INDICATOR				
AD1044	Element, Oil Filter, Inner.....	1098-	1098-	115
AD1045	Element, Oil Filter, Outer.....	1098-	1098-	115
D2001	Spring, Oil Filter Valve By-Pass.....	1000-	1098-	115
D2272	Gasket, Oil Filter to Case.....	1098-	1098-	115
D2275R	Body, Oil Indicator.....	1098-	1098-	115
D2276	Gasket, Oil Indicator.....	1098-	1098-	115
D2321	Pipe, Oil Cooler Mounting.....		1098-	115
D2322	Lock Nut, Nipple, Oil Cooler Mounting.....		1098-	115
D2323	Gasket, Oil Cooler to Crank Case.....		1098-	115
D2342	Cover, Oil Cooler.....		1098-	115
D2343	Base, Oil Cooler.....		1098-	115
D2344	Gasket, Oil Cooler.....		1098-	115
D2345	Body, Oil Cooler.....		1098-	115
D2346	Stud, Oil Cooler, Tie Rod (Brass) 3/8"x5-1/4".....		1098-	115
D2347	Gasket, Oil Cooler, Tie Rod (Copper).....		1098-	115
D2348	Nut, Oil Cooler, Tie Rod (Brass) 3/8".....		1098-	115
D2351	Plug, Oil Cooler, By-Pass (Brass) 9/16".....		1098-	115
D2352	Spring, Oil Cooler, By-Pass.....		1098-	115
D2353	Ball, Oil Cooler.....		1098-	115
D2354	Case, Oil Filter.....	1098-	1098-	115
D2355	Gasket, Case Retaining Nut.....	1098-	1098-	115
D2356	Nut, Case Retaining.....	1098-	1098-	115
D2357	Spring, Retaining Nut.....	1098-	1098-	115
D2359	Base, Oil Filter.....	1098-	1098-	115
D2360	Stud, Base Retaining Bar (Special).....	1098-	1098-	115
D2361	Ball, Blow Off.....	1098-	1098-	115
D2362	Screws, Blow Off Cover.....	1098-	1098-	115
D2363	Spring, Blow Off.....	1098-	1098-	115
D2364	Gasket, Oil Filter Case.....	1098-	1098-	115
D2386	Spring, Oil Indicator.....	1000-	1098-	115
D2425	Button, Coil Spring Centering.....	1000-	1098-	115
E1976	Pipe Plug, Oil Filter Drain, 3/8".....	1000-	1098-	
1450R	Pipe Plug, Oil Filter Drain, 1/4".....	1000-	1098-	115
1452R	Drain Plug, in Oil Filter Base, 1/2".....	1098-	1098-	115
OIL PIPES AND FITTINGS				
A374	Nut, Solder Bushing, Oil Filter to Indicator Pipe.....	1000-		116
A374	Nut, Solder Bushing, Oil Pump Discharge Pipe.....	1000-		116
A374	Nut, Solder Bushing, Cooler, Discharge Pipe.....		1098-	116
A374	Nut, Solder Bushing, Cooler, Intake Pipe.....		1098-	116
A374	Nut, Solder Bushing, R. H., Main Bearing Oil Pipe.....	1000-	1098-	116
A375	Nut, Solder Bushing, Governor Oil Pipe.....	1000-	1098-	116
A375	Nut, Solder Bushing, L. H., Main Bearing Oil Pipe.....	1000-	1098-	116
A465	Body, Solder Bushing, Oil Filter to Cooler Oil Line.....		1098-	116
AC431	Oil Pipe, Governor.....	1000-1448	1098-1448	116
AD828	Oil Pipe, R. H., Main Bearing.....	1000-	1098-	116
AD841	Pipe, Oil Pump Discharge.....	1000-1097		116
AD853	Oil Pipe, L. H., Main Bearing.....	1000-	1098-	116
AD993	Oil Indicator, Piston and Rod.....	1000-	1098-	115
AD1019	Oil Line Filter to Indicator.....	1098-	1098-	116
AD1020	Oil Line Pump Discharge.....	1098-	1098-	116
AD1034	Oil Line, Cooler, Intake.....		1098-	116
AD1035	Oil Line, Cooler, Discharge.....		1098-	116
C972	Oil Jet, Governor Case.....	1000-	1098-	116
D392	Solder Bushing, 5/16", L. H., Main Bearing Oil Pipe.....	1000-1448	1098-1448	116
D417	Elbow, 5/16", L. H., Main Bearing and Governor Oil Pipe.....	1000-	1098-	116
D456R	Elbow, Discharge Pipe, 3/8".....	1000-	1098-	116
D456R	Elbow, Oil Pump Discharge Line.....	1000-	1098-	116
D456R	Elbow, Filter to Indicator Line.....	1000-	1098-	116
D458	Nut, Packing, Oil Pump Discharge Pipe.....	1000-	1098-	116
D1935	Gland, Solder Bushing, Oil Pump Discharge Pipe.....	1000-	1098-	116
D1935	Gland, Solder Bushing, 3/8", Cooler, Intake Pipe.....	1000-	1098-	116
D1935	Gland, Solder Bushing, 3/8", Cooler, Discharge Pipe.....	1000-	1098-	116
D1936	Bushing, 3/8", R. H., Main Bearing Oil Pipe.....	1000-	1098-	116
D2321	Pipe, Oil Cooler Mounting.....		1098-	115

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
OIL PIPES AND FITTINGS—Continued				
E2150	Gland, Solder Bushing, L. H., Main Bearing Oil Pipe, 5/16"	1000—	1098—	116
E2150	Gland, Solder Bushing, Governor Oil Jet Pipe, 5/16"	1000—	1098—	116
MAGNETO GROUND				
AD993	Oil Indicator Piston and Rod, Complete	1098—	1098—	115
AD994	Bracket, Magneto Ground, Complete	1098—	1098—	115
AD995	Magneto Ground Plunger, Complete	1098—	1098—	115
D1340	Wire, Magneto Ground	1000—	1098—	115
D2001	Spring, Magneto Ground Plunger	1000—	1098—	115
D2208	Cap, Oil Indicator Rod	1098—	1098—	115
D2209	Bracket, Magneto Ground	1098—	1098—	115
D2211	Insulator, Magneto Ground (Hard Fiber)	1098—	1098—	115
D2212	Bushing, Magneto Ground Screws (Hard Fiber)	1098—	1098—	115
D2213	Screw, Magneto Ground to Oil Filter Body	1093—	1098—	115
D2215	Tip, Magneto Ground Plunger (part of AD995)	1093—	1098—	115
D2216	Clip, Magneto Ground Wire	1098—	1098—	115
D2275R	Body, Oil Indicator	1098—	1098—	115
2532R	Washer, on Magneto Ground to Oil Filter Body Screws	1098—	1098—	115
FUEL SYSTEM				
AA204	Valve, Gasoline, Shut-Off		1098—	117
AA335	Clamp, Fuel Filter Bowl	1000—1197		117
AA499	Fuel Filter	1000—		117
AA517	Bail, Fuel Filter	1198—		117
AA518	Nut, with Washer, Fuel Filter, Adjusting	1198—		117
AA519	Screen, Fuel Filter	1000—		117
AC102	Strainer Elbow, Gasoline	1098—		117
AC1079	Valve, Fuel Filter Body and Shut-Off	1000—		117
AC1080	Valve, Fuel Filter Shut-Off	1000—		117
AD543	Bracket with Cushions, Fuel Tank, Front	1000—		117
AD544	Bracket with Cushions, Fuel Tank, Rear	1000—		117
AD680	Three-Way Cock	1000—		117
AD709	Filler Cap, Gasoline and Fuel Tank	1000—	1098—	117
AD991	Fuel Line	1000—1097		117
AD1011	Fuel Tank	1098—		117
AD1012	Gasoline Line	1098—		117
AD1013	Fuel Line	1098—		117
AD1029	Gasoline Line		1098—	117
AD1030	Fuel Pump, Complete (parts for Fuel Pump not sold alone)	1000—	1098—	117
AD1031	Fuel Pump Shut-Off Cock	1000—	1098—	117
AD1032	Fuel Line		1098—	117
	(Also used on No. 111 Engine with Overpulley)			
AD1068	Gasoline Tank with Bracket		1098—	117
C1777	Sediment Bowl, Fuel Filter	1000—		117
C1778	Gasket, Cork, Fuel Filter	1000—		117
C2378	Body, Fuel Filter	1000—		117
D297	Gasket, Fuel Pump Bracket to Governor Case (Thick)		1098—	117
D417	Elbow, Fuel Line to Carburetor	1000—	1098—	117
D417	Elbow, Gasoline Line to Carburetor	1000—	1098—	117
D509	Gasket, Fuel Pump Bracket to Governor Case (Thin)		1098—	117
D1873	Clip, Fuel Tank Bracket	1000—		117
D2191R	Bracket, L. H., Governor Bearing Housing and Fuel Pump	1000—	1098—	117
D2314	Bracket, Gasoline Tank		1098—	117
D2316	Cam, Fuel Pump	1000—	1098—	117
D2318	Gasket, Fuel Pump to Bracket	1000—	1098—	117
E2149	Nut, Solder Bushing, Fuel Pipe	1000—	1098—	117
E2149	Nut, Solder Bushing, Gasoline Line	1000—	1098—	117
E2150	Gland, Solder Bushing, Fuel Pipe	1000—	1098—	117
E2150	Gland, Solder Bushing, Gasoline Line	1000—	1098—	117
1450R	Pipe Plug, Fuel Pump Bracket	1000—	1098—	117
HOOD				
AD1014	Hood, Complete	1098—		118
C980	Bolt (Special Head) Hood to Bracket	1000—		118
C1573	Clamp, Hood	1000—		118

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
COOLING SYSTEM				
A1247	Bracket, Heat Indicator.....	1502-		120
A1248	Bushing, Heat Indicator Tube.....	1502-		120
A1284	Bracket, Heat Indicator.....	1000-1501		120
AA883	Heat Indicator, Complete.....	1502-		120
AA952	Heat Indicator, Complete.....	1502-		120
AD86	Filler Cap, Radiator, Complete.....	1000-		120
AD97	Screw Head, D363R, and Stud, Filler Cap.....	1000-		120
AD112	Bottom Tank, D54R, with Studs, Radiator.....	1000-		120
AD860	Water Pipe, D1784R, Cylinder to Radiator.....	1000-		120
AD1022	Fan Shroud, Complete.....	1098-		120
AD1043	Core, Radiator, Complete.....	1098-		120
C1818	Bushing, Water Connection.....	1098-	1098-	120
D32R	Elbow, Radiator to Cylinder Head.....	1000-		120
D53R	Top Tank, Radiator.....	1000-		120
D126	Baffle, Filler Cap.....	1000-		120
D228	Strap, Radiator, Top, Side.....	1000-		120
D229	Strap, Radiator, Top, Rear.....	1000-		120
D230	Strap, Radiator, Bottom, Rear.....	1000-		120
D231	Strap, Radiator, Bottom and Top, Front.....	1000-		120
D294	Gasket, Elbow, to Cylinder Head.....	1000-	1098-	120
D295	Gasket, Top of Water Pipe, Cylinder to Radiator.....	1000-	1098-	120
D303	Gasket, Radiator, Top Tank.....	1000-		120
D304	Gasket, Radiator Bottom Tank.....	1000-		120
D305	Gasket, Elbow to Radiator.....	1000-		120
D319R	Cap, Radiator Filler.....	1000-		120
D362	Clamp Bar, Radiator Filler Cap.....	1000-		120
D473	Gasket, Radiator Filler Cap.....	1000-		120
D488	Stud, Radiator Bottom Tank.....	1000-		120
D1138	Nut, Heat Indicator Stud.....	1502-		120
D1786	Gasket, Bottom of Water Pipe, Cylinder to Radiator.....	1000-		120
D2283R	Side, Radiator.....	1098-		120
D2284	Strap, Rear Bottom.....	1098-		120
27R	Washer, Radiator Elbow and Upper Water Pipe Cap Screws.....	1098-		120
WATER PUMP AND PIPING				
AD220	Housing, Water Pump Shaft Rear Bearing with Felt Washer and Retainer.....		1098-	119
AD1025	Pump Body and Water Pipe, with Bushing and Studs.....		1098-	119
AD1063	Thermometer, Complete.....		1298-	119
D294	Gasket, Water Inlet Manifold to Cylinder Head.....	1000-	1098-	119
D297	Gasket, Pump Shaft Rear Bearing Housing (Thick).....		1098-	119
D398	Snap Ring, Water Pump Shaft Rear Bearing.....		1098-	119
D403	Key, Water Pump Impeller.....		1098-	119
D509	Gasket, Pump Shaft Rear Bearing Housing (Thin).....		1098-	119
D655	Felt Retainer, Rear Pump Shaft Bearing (2 used).....		1098-	119
D684	Felt Washer, Rear Pump Shaft Bearing (2 used).....		1098-	119
D1786	Gasket, Bottom of Water Pipe and Pump Body.....	1000-	1098-	119
D1941	Pinion, Water Pump Shaft Bevel.....	1000-	1098-	119
D2294	Shaft, Water Pump Drive.....		1098-	119
D2296	Bushing, Pump Shaft, Front.....		1098-	119
D2297	Packing, Water Pump (4 used).....		1098-	119
D2298R	Gland, Water Pump Packing.....		1098-	119
D2299R	Impeller, Water Pump.....		1098-	119
D2300R	Cover, Water Pump.....		1098-	119
D2301	Lock Nut, Water Regulator.....		1098-	119
D2302	Gasket, Water Pump Cover.....		1098-	119
D2303	Hose, Water Pump.....		1098-	119
D2304	Clamp, Water Pump Hose.....		1098-	119
D2305R	Manifold, Water Inlet.....		1098-	119
D2332R	Regulator Plug, Water.....		1098-	119
D2381	Set Screw in Water Pump Impeller.....		1098-	...
D2387	Bushing, Thermometer Attaching.....		1298-	119
D2420	Stud, Water Pump Packing.....		1098-	119
JD7677	Bearing, Water Pump Shaft, Rear.....		1098-	119
K2525	Plug, Water, Level Test, 1/8".....		1098-	119
1439R	Nipple, Water Pump Cover to Tee.....		1298-	119

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
WATER PUMP AND PIPING—Continued				
1460R	Tee, Water Outlet.....		1298—	119
1517R	Jam Nut on Water Pump Packing Gland Stud (2 used per Stud).....		1098—	
1523R	Jam Nut on Impeller Set Screw.....		1098—	
RADIATOR GUARD AND CURTAIN				
AD1495	Guard, Radiator, Complete.....	1000—		119
D454	Drive Screw, Curtain Roller.....	1000—		118
D1545	Strap, Radiator Curtain.....	1000—		118
D1885	Clips, Radiator Curtain Spring.....	1000—		118
D1886	Curtain, Radiator.....	1000—		118
D2635	Support Strap, Radiator Guard.....	1000—		119
372R	Spring, Radiator Curtain.....	1000—		118
629R	Washer, Radiator Curtain Roller.....	1000—		118
FAN				
AD49	Fan Spider, D92R, with Blades.....	1000—		113
AD796	Housing, D1366R, with Felt Washer and Retainer, Rear Fan Bearing.....	1000—		113
C1526	Spacer, Front Fan Bearing.....	1000—		113
C1530	Dust Shield, Front Fan Bearing.....	1000—		113
D297	Gasket, Rear Fan Bearing Housing to Case.....	1000—	1098—	113
D378	Spring, Fan Friction.....	1000—		113
D396R	Disk, Fan Drive.....	1000—		113
D398	Snap Ring, Rear Fan Bearing.....	1000—		113
D399	Facing, Fan Friction.....	1000—		113
D400	Key, Drive Disk.....	1000—		113
D403	Key, Bevel Pinion, 3/16"x7/8".....	1000—		113
D509	Gasket, Fan Shaft Bearing (Thin).....	1000—		113
D655	Felt Retainer, Fan Shaft Front and Rear Bearings.....	1000—		113
D684	Felt Washer, Fan Shaft, Front and Rear Bearings.....	1000—	1098—	113
D1691	Shaft, Fan.....	1000—		113
D1736	Felt Retainer, Front Fan Bearing, Small.....	1000—		113
D1737	Felt, Front Fan Bearing, Outer.....	1000—		113
D1866	Cover, Front Fan Bearing.....	1000—		113
D1868	Felt Retainer, Large, Front Fan Bearing.....	1000—		113
D1938	Snap Ring, Fan and Governor Bearing Retainer.....	1000—		113
D1939	Spring, Fan Bearing Tension.....	1000—		113
D1940	Dust Shield, Rear Fan Bearing.....	1000—		113
D1941	Pinion, Fan and Water Pump Drive Bevel.....	1000—	1098—	113
JD7655	Cup, Fan Shaft Front Bearing.....	1000—		113
JD7656	Cone, Fan Shaft Bearing.....	1000—		113
JD7657	Retainer with Balls, Fan Shaft Bearing.....	1000—		113
JD7759	Alemite Zerk Fitting, Front Fan Bearing 1/8", Alemite Model No. 1600.....	1000—		133
27R	Washer, Fan Shaft, Front.....	1000—		113
1707R	Washer, 5/8", Fan Friction Spring.....	1000—		
PULLEY				
AD908	Pulley Hub, D1706R, with Bushing and Pin.....	1000—		119
AD1067	Pulley Hub, D2306R, with Bushing and Pin (also used on No. 111 Engine with Overpulley).....		1098—	119
AD1214	Pulley Hub with Bushing (for use with Overpulley).....	1000-1097		119
C667	Snap Ring, Clutch Cone Stop.....	1000—	1098—	121
D359	Snap Ring, Bearing Retainer.....	1000—	1098—	121
D552	Bushing, Belt Pulley, Bronze.....	1000—	1098—	121
D651	Washer, Pulley Bearing.....	1000—	1098—	121
D917	Felt Retainer, Pulley Bearing.....	1000—	1098—	121
D918	Felt Washer, Pulley Bearing.....	1000—	1098—	121
D1927R	Dust Cover, Pulley, Outside.....	1000—	1098—	122
D1928	Stud, Pulley, Dust Cover.....	1000—	1098—	122
D2313R	Overpulley, 16".....	1000—	1098—	119
D2329R	Overpulley, 18".....	1000—	1098—	119
D2330R	Overpulley, 20".....	1000—	1098—	119
D2331R	Overpulley, 22".....	1000—	1098—	119

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
PULLEY—Continued				
JD7494	Outer Race, Pulley Bearing.....	1000—	1098—	121
JD7544	Roller Assembly, Pulley Bearing.....	1000—	1098—	121
JD7594	Inner Race, Pulley Bearing.....	1000—	1098—	121
CLUTCH PARTS				
A352	Spring, Clutch Release (3 used) (Also used on No. 111 Engine with Overpulley).....		1098—	122
A1197	Bushing, Clutch Lever Pivot.....	1502—	1502—	114
AA794	Lever, Clutch, with Pivot Bushing.....	1000—	1098—	114
AD749	Disk, A1754R, Clutch Driving, with Cap Screws.....	1000—		122
AD752	Disk, Clutch Facing, with Lining.....	1000—		122
AD917	Shield, Clutch, Dust, with Cap Screws.....	1000—	1098—	121
AD1027	Disk, Clutch Facing, with Linings (2 used) (also used on No. 111 Engine with Overpulley).....		1098—	122
C74R	Clutch Dog.....	1098—	1098—	122
C434	Link, Clutch Dog.....	1000—	1098—	122
C614	Facing, Clutch (Loose) (2 used).....	1000—	1098—	122
D141	Washer, Drive Disk to Crankshaft.....	1000—	1098—	122
D158	Pin, Clutch Cone Drive, 1/2"x2".....	1000—	1098—	122
D355	Pin, Clutch Dog.....	1000—	1098—	122
D377	Spring, Clutch Release.....	1000—		122
D459	Cap Screw, Dust Shield, 3/8"x1".....	1000—	1098—	121
D738	Shim Washer, Clutch Driving Disk.....	1000—	1098—	122
D1709	Bolt, Clutch, Operating.....	1000—		122
D1755R	Disk, Clutch Drive, Sliding.....	1000—		122
D1757R	Disk, Clutch, Adjusting.....	1000—		122
D1760	Facing, Clutch (Riveted Type) (2 used on 13" Pulley, 4 used on Overpulleys).....	1000—	1098—	122
D1929	Gasket, Clutch Dust Shield.....	1000—	1098—	121
D1968R	Cone, Clutch, Operating.....	1000—	1098—	122
D2307	Spring, Clutch, Operating Bolt (also used on No. 111 Engine with Overpulley).....		1098—	122
D2310	Disk, Clutch Drive, Sliding (2 used) (also used on No. 111 Engine with Overpulley).....		1098—	122
D2311R	Disk, Clutch, Adjusting (also used on No. 111 Engine with Overpulley).....		1098—	122
D2312	Bolt, Clutch, Operating (also used on No. 111 Engine with Overpulley).....		1098—	122
K2052	Lead Washer, Dust Shield Cap Screws.....	1000—	1098—	121
CLUTCH FORK BEARING AND PULLEY BRAKE				
AD1023	Brake, Pulley, with Lining.....	1098—	1098—	122
C171R	Fork, Clutch.....	1000—	1098—	122
C732	Welsh Plug, Lower End of Clutch Fork Shaft Bearing.....	1000—	1098—	122
D100R	Collar, Clutch, Bronze.....	1000—	1098—	122
D178	Pivot, Clutch Fork (Drilled Cap Screw).....	1000—	1098—	122
D293	Gasket, Clutch Fork Shaft Bearing.....	1000—	1098—	122
D723	Gasket, Clutch Fork, Cover.....	1000—	1098—	121
D1342R	Bearing, Clutch Fork.....	1000—	1098—	122
D1343	Shaft, Clutch Fork, Spline.....	1000—	1098—	122
D1932	Lining, Pulley Brake.....	1000—	1098—	122
D1997	Spring, Clutch Fork.....	1000—	1098—	122
D2162R	Cover, Clutch Fork.....	1000—	1098—	121
MAGNETO				
AA1084	Porcelain, for AC600, No. 2 Spark Plug, 7/8".....			141
AC600	Spark Plug, 7/8".....	1000—	1098—	141
AD26	Wire, R. H., Spark Plug.....	1000—		141
AD27	Wire, L. H., Spark Plug.....	1000—		141
AD597	Magneto, Complete, with Arm.....	1000—	1098—	141
AD1036	Wire, R. H., Spark Plug.....		1098—	141
AD1037	Wire, L. H., Spark Plug.....		1098—	141
C2331	Porcelain, for AC600, C4 and 3X Plugs, 7/8".....			141
D225	Arm, Magneto Control.....	1000—	1098—	141
D316	Washer, Magneto Bracket.....	1000—	1098—	141
D369	Wood Clamp, Spark Plug Wire (3 used).....	1000—	1098—	141

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
MAGNETO—Continued				
D403	Key, Magneto Drive Flange, 3/16"x7/8"	1000—	1098—	141
D465	Gasket, Spark Plug	1000—	1098—	141
D1733R	Bracket, Magneto	1000—	1098—	141
D1918	Support, Spark Plug Wires (Wood) (Large Hole)	1000—	1098—	141
D1945	Dust Shield, Magneto Drive Flange	1000—	1098—	141
D1946R	Flange, Magneto Drive	1000—	1098—	141
D2260	Collar, Magneto Drive	1000—	1098—	141
132R	Clamp, Timing Plate	1000—	1098—	141
135R	Hood, Magneto	1000—	1098—	141
629R	Washer, Slotted Hole, in Magneto Bracket	1000—	1098—	141
2152R	Plate, Magneto Timing	1000—	1098—	141
MAGNETO PARTS				
43	Screw for Top and Side Covers	1000—	1098—	141
74	Nut, Plain, Armature Shaft	1000—	1098—	142
180	Screw and Washer, Primary Lead	1000—	1098—	143
224	Lock Washer for 225, 227, 5631	1000—	1098—	141
225	Screw, Distributor Bearing with Lock Washer	1000—	1098—	143
227	Screw, with Lock Washer, Distributor Block	1000—	1098—	143
293	Shim Washer under Breaker Bar	1000—	1098—	143
1638	Bearing Holder Screw (Short)	1000—	1098—	143
1979	Screw, for 8097, 8104, and 8445, to Breaker Base	1000—	1098—	142
2710	Thumb Nut, for Distributor Block	1000—	1098—	143
3107	Screw, with Lock Washer, Primary Lead	1000—	1098—	143
3378	Screw, with Lock Washer for Ground Clip	1000—	1098—	143
3399	Woodruff Key, for Distributor Pinion	1000—	1098—	143
3494	Steel Shim for Rotor (.003" Thick)	1000—	1098—	141
3495	Steel Shim for Rotor (.005" Thick)	1000—	1098—	141
3496	Steel Shim for Rotor (.007" Thick)	1000—	1098—	141
3703	Screw, with Washer, High Tension, Winding	1000—	1098—	142
3794	Lock Washer, for 3378, 3796, 1979, 9588, 180, 3107	1000—	1098—	
3796	Screw, Breaker Bar Spring to Breaker Bar	1000—	1098—	143
4212	Lock Washer for Cam Screw	1000—	1098—	142
4555	Strap, with Screw, Primary Lead	1000—	1098—	143
5631	Screw, with Lock Washer, Short, Distributor Block	1000—	1098—	143
7600	Drain Screen (Round)	1000—	1098—	141
8001	Magnets (Pair)	1000—	1098—	142
8053	Bearing Holder with Bearing Drive End	1000—	1098—	143
8097	Finger Spring	1000—	1098—	143
8104	Buffer Spring	1000—	1098—	143
8285	Thrust Button with Spring, Center of Distributor Block	1000—	1098—	143
8338	Wick and Spring, Distributor Bearing	1000—	1098—	
8408	Ground Clip	1000—	1098—	143
8445	Breaker Bar Spring	1000—	1098—	143
8460	Screw, Breaker Base, Fastening	1000—	1098—	142
8559	Distributor Pinion	1000—	1098—	143
8695	Safety Gap Holder	1000—	1098—	143
8707	Distributor Gear and Shaft	1000—	1098—	143
8873	Ground Stud	1000—	1098—	143
8888	Cam Screw	1000—	1098—	143
9228	Holder with Wick	1000—	1098—	143
9366	Distributor Disk, Complete	1000—	1098—	143
9432	Cam, L. H.	1000—	1098—	143
9433	Collector Brush with Spring	1000—	1098—	143
9588	Lock Screw, Contact Screw Bracket	1000—	1098—	143
9603	Primary Lead	1000—	1098—	143
10048	Nut, Breaker Box Cover or Ground Stud	1000—	1098—	143
14249	Bearing Holder with Bearing	1000—	1098—	143
14264	Primary Lead Strap with Screw	1000—	1098—	143
14566	Distributor Bearing with Wick	1000—	1098—	143
14724	Field Pole Cover	1000—	1098—	143
14752	Field Pole Structure	1000—	1098—	143
14757	Breaker Box Cover, Complete	1000—	1098—	143
14791	Insulation, Contact Screw Bracket	1000—	1098—	143
14846	Bushing, Bracket Insulation	1000—	1098—	142
14847	Washer, Bracket Insulation	1000—	1098—	142
16774	Screw for Bearing Holder (Long)	1000—	1098—	143

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
MAGNETO PARTS—Continued				
17537	Contact Screw with Point.....	1000—	1098—	141
18333	Screw, Safety Gap Holder.....	1000—	1098—	143
18832	Cam Wiper.....	1000—	1098—	141
19109	Screw, Contact Bracket, Fastening.....	1000—	1098—	142
26334	Washer, Armature Shaft (Tongued).....	1000—	1098—	142
27196	Shim, Fiber, Distributor Gear.....	1000—	1098—	141
27397	Washer, Fiber, Retaining (for 27398).....	1000—	1098—	143
27398	Felt Washer, Breaker Base.....	1000—	1098—	143
27422	Breaker Base (replaces 14677).....	1000—	1098—	143
28400	Rotating Pole Structure.....	1000—	1098—	143
28463	Spark Gap Protector (replaces 14428).....	1000—	1098—	143
28539	Washer, Felt, for Back Plate (fits over Armature End).....	1000—	1098—	141
29381	Dowel Pin for Back Plate.....	1000—	1098—	141
33158	Felt Gasket for Distributor Block and Breaker Base.....	1000—	1098—	143
35238	Distributor Block.....	1000—	1098—	143
36034	High Tension Winding.....	1000—	1098—	143
36035	Oil Hole Cover with Gasket.....	1000—	1098—	141
36046	Side Plate with Gasket.....	1000—	1098—	141
36048	Top Cover with Gasket.....	1000—	1098—	141
36051	Gasket for Side Plate.....	1000—	1098—	141
36052	Gasket for Top Cover (Impulse End).....	1000—	1098—	141
36063	Gasket for Top Cover (Distributor End).....	1000—	1098—	141
36066	Breaker Bar, Complete, with Point.....	1000—	1098—	141
36164	Condenser.....	1000—	1098—	143
37489	Baffle, Micanite.....	1000—	1098—	143
50089	Housing and Back Plate.....	1000—	1098—	142
50119	Gasket for Distributor Block.....	1000—	1098—	141
50639	Washer, Oil Drain.....	1000—	1098—	141
52252	Frame, Complete, with Oilers.....	1000—	1098—	141
55056	Contact Screw Bracket, with Point.....	1000—	1098—	141
C1335	Woodruff Key for Drive End.....	1000—	1098—	143
D2003	Lock Washer for 3703 and 8460.....	1000—	1098—	143
D2716	Brass Washer for Ground Stud.....	1000—	1098—	143
D2720	Lock Washer for Ground Stud.....	1000—	1098—	143
D2727	Woodruff Key, Cam.....	1000—	1098—	143
E2302	Oiler for Back Plate.....	1000—	1098—	142
IMPULSE STARTER, ROTATING UNIT				
AD302	Rotating Unit, Complete.....	1000—	1098—	142
18637	Magneto Member, fits Armature Shaft.....	1000—	1098—	142
18640	Washer (Special) for Coupling.....	1000—	1098—	141
20624	Lock Washer for 18404.....	1000—	1098—	143
27810	Cushion Spring (Short).....	1000—	1098—	141
27974	Compression Spring (Long).....	1000—	1098—	141
28531	Cam Member.....	1000—	1098—	142
IMPULSE STARTER, STATIONARY UNIT				
AD592	Stationary Unit, Complete.....	1000—	1098—	142
1212	Cover Screw, Bottom, with Lock Washer.....	1000—	1098—	142
1672	Lock Washer for 1212, 18609 and 3258.....	1000—	1098—	142
2139	Screw with Lock Washer, Pawl Stop.....	1000—	1098—	142
3033	Lock Washer for 2139.....	1000—	1098—	142
3040	Spring, Oil Cover.....	1000—	1098—	142
8976	Flat Washer for 2139.....	1000—	1098—	142
13746	Lock Washer for 29529.....	1000—	1098—	142
18605	Cover, Housing with Felt.....	1000—	1098—	142
18608	Felt Washer, Housing Cover.....	1000—	1098—	142
18609	Head Screw with Lock Washer, Top Cover Plate.....	1000—	1098—	142
18610	Pawl.....	1000—	1098—	142
18615	Plunger.....	1000—	1098—	142
18616	Pawl Pivot.....	1000—	1098—	142
18617	Spring, Plunger.....	1000—	1098—	142
18618	Plunger Washer.....	1000—	1098—	141
18619	Bearing, Plunger.....	1000—	1098—	142
18620	Plug, Opposite Plunger Bearing.....	1000—	1098—	142

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
	IMPULSE STARTER, STATIONARY UNIT—Continued			
18633	Pawl Lever, Complete.....	1000—	1098—	142
18644	Spacer, Pawl Lever.....	1000—	1098—	142
18656	Pawl Stop.....	1000—	1098—	142
19124	Pin, Oil Cover.....	1000—	1098—	142
27981	Screw Plug, Inspection Hole.....	1000—	1098—	142
29347	Lock Washer, Inspection Hole Screw Plug.....	1000—	1098—	142
29529	Cap Screw, Starter Housing to Magneto.....	1000—	1098—	141
50089	Housing and Back Plate.....	1000—	1098—	142
	AD830 CARBURETOR			
AD830	Carburetor, Complete.....	1000—	1098—	145
AD1330	Body with Bushings.....	1599—	1599—	145
B449	Bowl, Casting.....	1599—	1599—	145
B450	Nut, Bowl, Retainer.....	1599—	1599—	145
B451	Idle Plug.....	1000—	1098—	145
B457	Gasket, Bowl Retaining Nut.....	1599—	1599—	145
C2500	Throttle Lever.....	1000—	1098—	145
C2501	Float Valve and Seat.....	1000—	1098—	145
C2502	Shaft, Throttle.....	1000—	1098—	145
C2504	Bushing, Throttle Shaft (Upper).....	1000—	1098—	145
C2505	Bushing, Throttle Shaft (Lower).....	1000—1599	1098—1599	145
C2507	Body and Bushing, Carburetor.....	1000—1599	1098—1599	145
D392	Bushing, Fuel Line.....	1000—	1098—	145
D2530	Bushing, Throttle Shaft (Lower).....	1599—	1599—	145
P348	Choker Disk.....	1000—	1098—	145
18-0	Spring, Throttle Stop Pin.....	1000—	1098—	145
SI-18	Screw, Choker, Disk.....	1000—	1098—	145
S1121	Drain Cock.....	1000—	1098—	145
4W	Float Washer and Screw.....	1000—	1098—	145
10W	Clamp Screw, Throttle Lever, Adjusting.....	1000—	1098—	145
17W	Retainer Screw, Throttle Lever and Bushing.....	1000—	1098—	145
41W	Friction Ball.....	1000—	1098—	145
45W	Screw Plug, Drilled Hole.....	1000—	1098—	145
46W	Nut, Bowl, Retaining.....	1000—1599	1098—1599	145
57W	Spring, Friction Ball.....	1000—	1098—	145
63W	Lock Washer, Choker Disk Screw.....	1000—	1098—	145
64W	Gasket, Bowl Nut.....	1000—1599	1098—1599	145
65W	Spring, Nozzle, Retainer.....	1000—	1098—	145
67W	Stop Pin, Throttle Lever.....	1000—	1098—	145
68W	Spring, Friction, Choker Lever.....	1000—	1098—	145
69W	Cork Float with Washer.....	1000—	1098—	145
70W	Screw, Throttle Disk.....	1000—	1098—	145
71W	Adjusting Screw, Throttle Lever.....	1000—	1098—	145
72W	Washer, Choker Lever Friction Spring.....	1000—	1098—	145
73W	Gasket, Float Valve Seat.....	1000—	1098—	145
74W	Washer, Choker, Friction.....	1000—	1098—	145
75W	Lever, Float.....	1000—	1098—	145
76W	Disk, Throttle.....	1000—	1098—	145
77W	Gasket, Strainer.....	1000—	1098—	145
78W	Gasket, Bowl.....	1000—	1098—	145
79W	Pipe Plug, Hexagon Head.....	1000—	1098—	145
80W	Pipe Plug, Headless.....	1000—	1098—	145
81W	Lock Washer, Throttle Disk Screws.....	1000—	1098—	145
83W	Drill Plug, 7/32".....	1000—	1098—	145
85W	Drill Plug, 1/4".....	1000—	1098—	145
90W	Pin, Float Pivot.....	1000—	1098—	145
91W	Screw, Float, Bearing.....	1000—	1098—	145
94W	Screw, Choker, Friction.....	1000—	1098—	145
97W	Bowl, Casting.....	1000—1599	1098—1599	145
121W	Nozzle.....	1000—	1098—	145
123W	Idle Needle.....	1000—	1098—	145
X2458	Load Needle.....	1000—	1098—	145
X2460	Choker Lever and Shaft.....	1000—	1098—	145
X2462	Strainer, Complete.....	1000—	1098—	145
321R	Gasket, Carburetor to Manifold.....	1000—	1098—	145

REPAIRS FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		No. 111 Type W	No. 113 Type W Special Pumping	
AIR CLEANER AND STACK				
AD745	Cover Bail, Air Cleaner	1000-1197	1098-1197	146
AD775	Cover D1913R, with Bail, Air Cleaner	1098-1197	1098-1197	146
AD827	Container, D1912R, with Filter Core Gasket	1098-1197	1098-1197	146
AD949	Air Stack	1000-	1098-	147
AD1002	Body, Air Cleaner	1098-1197	1098-1197	146
AD1003	Screen, Air Cleaner	1098-1197	1098-1197	146
AD1004	Filter Core, Air Cleaner	1098-1197	1098-1197	146
AD1218	Air Cleaner, Complete	1098-1197	1098-1197	146
AD1220	Body, Air Cleaner	1198-	1198-	146
AD1221	Cup, Air Cleaner	1198-	1198-	146
C1827	Washer, Cup, Retaining Bolt	1198-	1198-	146
D1747	Gasket, Filter Core	1000-1197	1098-1197	146
D1748R	Hand Wheel, Bail Tightener	1000-1197	1098-1197	146
D1749	Bolt, Cover, Swivel	1000-1197	1098-1197	146
D1790	Gasket, Air Cleaner to Carburetor	1000-	1098-	146
D1829	Gasket, Air Cleaner to Cylinder	1000-1197	1098-1197	146
D1914	Gasket, Air Stack Flange to Air Cleaner	1000-1197	1098-1197	147
D2220	Retainer, Air Cleaner Screen	1098-1197	1098-1197	146
D2375R	Support, Air Cleaner	1198-	1198-	146
D2376R	Bracket, Air Cleaner Support	1198-	1198-	146
D2377	Gasket, Air Cleaner	1198-	1198-	146
D2378	Bolt, Cup, Retaining	1198-	1198-	146
D2379	Wing Nut, Cup, Retaining	1198-	1198-	146
K3151	Washer, Air Cleaner Cover Pin	1000-1197	1098-1197	146
27R	Washer, Air Cleaner Clamp Bolt	1000-1197	1098-1197	146
1563R	Pin, Air Cleaner Cover to Body (Drilled)	1000-1197	1098-1197	146
TOOLS				
D586	Gauge, Magneto Breaker Contact Points	1000-	1098-	116
D1083	Socket Wrench for Connecting Rod and Main Bearing Nut	1000-	1098-	116
D2063	Flywheel Bolt Wrench	1000-	1098-	116
D2064	Flywheel Bolt Wrench Extension	1000-	1098-	116
GAS FUEL SYSTEM				
A258	Solder Bushing, Carburetor	1098-	1098-	116
A258	Solder Bushing, Regulator	1098-	1098-	116
AD1305	Carburetor, Gas Fuel	1098-	1098-
AD1306	Regulator without Primer	1098-	1098-
AD1307	Nipple, Restriction, Complete	1098-	1098-
AD1308	Hood, Gas Fuel, Complete	1098-	1098-
AD1359	Piston with Rings, 6-3/4", 5.5 Compression Ratio	1098-	1098-	110
D392	Solder Bushing, Fuel Regulator	1000-	1098-	116
D417	Elbow, Regulator	1098-	1098-	116
D831	Cover, Governor Shaft, L. H., Bearing Housing	1098-	1098-	113
D2497	Inlet, Manifold	1098-	1098-
D2498	Exhaust, Manifold	1098-	1098-
E2149	Nut, Solder Bushing, Regulator Connection	1098-	1098-	116
E2149	Nut, Solder Bushing, Carburetor Connection	1098-	1098-	116
E2150	Gland, Solder Bushing, Regulator Connection	1098-	1098-	116
E2150	Gland, Solder Bushing, Carburetor Connection	1098-	1098-	116

CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODELS NO. 111 AND NO. 113 TYPE W ENGINES





Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
D37R	Gear with Bolts, Cam Shaft.....	AD98	345	111
D54R	Bottom Tank with Studs, Radiator.....	AD112	350	120
D71R	Gear with Bushing, Governor, Idler.....	AD99	346	113
D88R	Tappet Lever with Rivet.....	AD179	345	111
D92R	Fan Spider with Blades.....	AD49	351	113
D281R	Tappet Case with Plugs.....	AD466	345	111
D319R	Filler Cap, Radiator, Complete.....	AD86	350	120
D363R	Screw Head and Stud, Filler Cap.....	AD97	350	120
D654R	Housing, Water Pump Shaft, Rear Bearing, with Felt Washer and Re- tainer.....	AD220	350	119
D1366R	Housing with Felt Washer and Retainer, Rear Fan Bearing.....	AD796	351	113
D1601R	Connecting Rod and Cap with Piston Pin Bushing.....	AD644	344	109
D1670R	Strainer, Oil Pump.....	AD700	347	114
D1706R	Pulley Hub with Bushing and Pin.....	AD908	351	119
D1706R	Pulley Hub with Bushing.....	AD1214	351	119
D1716R	Cylinder, Complete, with Studs.....	AD788	345	110
D1718R	Cylinder Head with Valve Guides and Studs.....	AD789	346	110
D1725R	Housing, L. H., Main Bearing with Caps, Bolts and Nuts.....	AD733	344	109
D1750R	Crankshaft with Gear, Bearing, Inner Race and Balance.....	AD838	344	108
D1754R	Disk, Clutch, Driving, with Cap Screws.....	AD749	352	122
D1784R	Water Pipe, Cylinder, to Radiator.....	AD860	350	120
D1912R	Container with Core Gasket, Air Cleaner.....	AD827	356	146
D1913R	Cover with Bail, Air Cleaner.....	AD775	356	146
D1970R	Flywheel, with Bolts and Dowel Pin.....	AD852	344	108
D1985R	Housing, R. H., Main Bearing with Caps, Bolts and Nuts.....	AD703	344	109
D2123R	Flywheel Spacer with Oil Seal Washer.....	AD935	344	109
D2166R	Crank Case, Complete, with Studs.....	AD963	344
D2270R	Crank Case, Complete, with Studs.....	AD1054	344
D2289R	Pulley Brake with Lining.....	AD1023	352	122
D2295R	Pump Body and Water Pipe with Bushings and Studs.....	AD1025	350	119
D2306R	Pulley Hub with Bushing and Pin.....	AD1067	351	119























**Illustrations of repair parts for the
Type W Engines are grouped with
Model D Tractor Repair Parts. See
pages 280 to 323 inclusive.**

SERVICE TOOL EQUIPMENT

Part Number	NAME AND DESCRIPTION	Plate No.
SERVICE TOOL EQUIPMENT		
A1045	Wrench, Rear Axle Bearing, Adjusting	158
AA511	Reamers, Valve Seat, Combination Set (all Series of Models A and B Tractors).....	158
AA533	Expansion Reamer, Piston Pin (all Series Model A Tractors).....	158
AA889	Lead Hammer	158
AA890	Expander, Piston Ring.....	158
AA891	Compressor, Piston Ring.....	158
AB439	Expansion Reamer, Piston Pin (all Series Model B Tractors).....	158
AD625	Expansion Reamer, Piston Pin (Model D Tractors and Type W Engines).....	158
AD978	Reamers, Valve Seat, Combination Set (Models D and GP Tractors and Type W Engines).....	158
AD981	Reamer, Valve Seat (Model D Tractors and Type W Engines).....	158
C1236	Compressor, Valve Spring (Model GP Tractor).....	158
D906	Wrench, Carburetor (9/16"x5/8").....	158

Part Number	NAME AND DESCRIPTION	Magneto Used On	Plate No.
MAGNETO SERVICE TOOL EQUIPMENT			
A743	Cupped Washer, Inserting Tool.....	R-2	159
A744	Wood Washer, Inserting Tool.....	R-2	159
A745	Collector Ring Driver.....	R-2	159
A746	Contact Point Setting Gauge.....	R-2	159
A747	Armature Clamp.....	R-2 RV	159
A748	Impulse Coupling Wrench.....	R-2 RV	159
A749	Wood Washer Facing Tool.....	R-2	159
A750	Inner Race Driver.....	RV	159
A751	Outer Race Driver.....	RV	159
A752	Plate to Hold End Cap.....	RV	159
A753	Tool to Press Out Distributor Race.....	RV	159
A754	Tool to Press On Distributor Race.....	RV	159
A755	Adapter for Pulling Rotor Inner Race (Nut End).....	RV	159
A756	Adapter for Pulling Rotor Inner Race (Gear End).....	RV	159
A757	Cam Puller Sleeve.....	Split.	159
A758	Cam Puller Sleeve Pins.....	Split.	159
A759	1 Lb. Can Grease.....	Split. R-2 RV	159
A760	1 Pt. Can Gasket Cement.....	Split. R-2 RV	159
A761	1 Pt. Can Insulating Compound.....	Split. R-2	159
A762	1 Pt. Can Gun Metal Black Paint.....	Split. R-2	159
A763	1 Pt. Can Clear Lacquer.....	Split. R-2 RV	159
A764	No. 3 Rawhide Mallet.....	Split. R-2 RV	159
A1098	Contact Point Wrench.....	RV	159
A1099	Hardened Spacer Collar.....	RV	159
AA443	Collector Ring Puller, Complete.....	R-2	159
AA444	Spring Coiling Tool.....	R-2 RV	159
AA445	Impulse Coupling Puller.....	R-2 RV	159
AA446	Impulse Coupling Nut Wrench.....	R-2 RV	159
AA447	Outer Bearing Race Puller, Complete.....	RV	159
AA448	Inner Bearing Race Puller, Complete.....	RV	159
AA449	Cam and Bearing Puller (2 Jaw).....	Split.	159
AA450	Snap Ring Pliers.....	R-2 RV	159
AA451	Magnet Keepers (Set).....	Split. R-2 RV	159
AA709	Charging Block.....	RV	159

        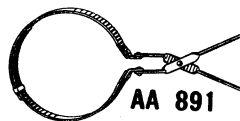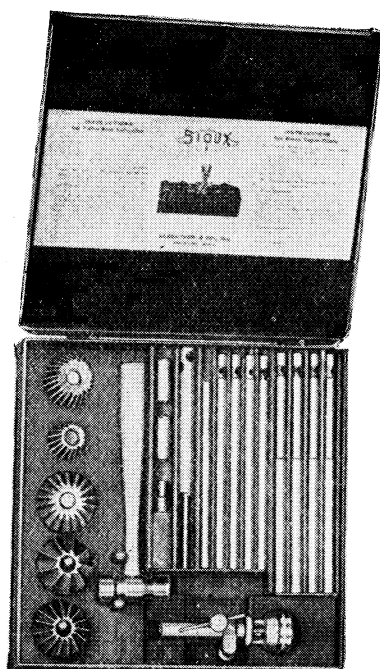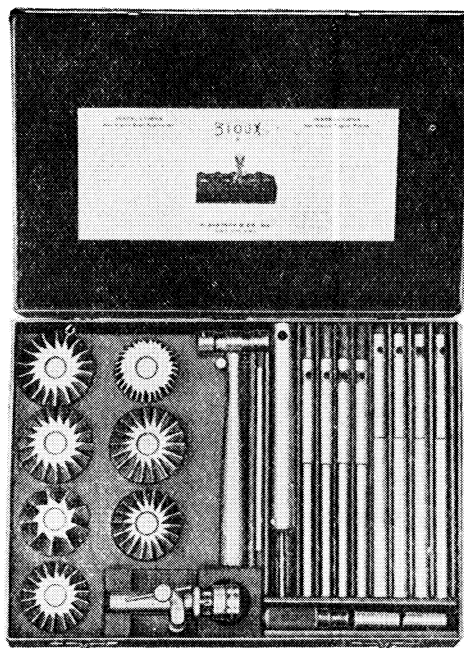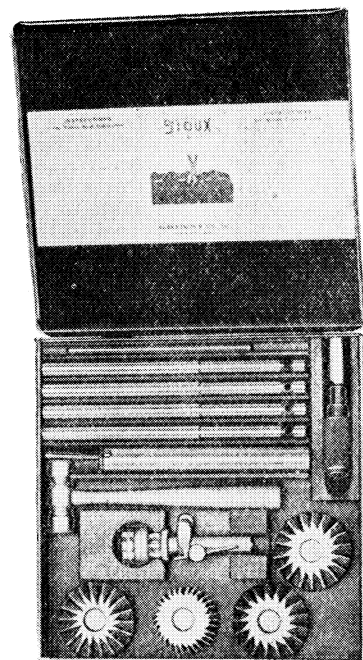MAGNETO SERVICE TOOL EQUIPMENT**AA 890****AA 891****AA 889****A 1045****D 906****C 1236****AA 533****AB 439****AD 625****AA-511****AD-978****AD-981****Plate No. 158**

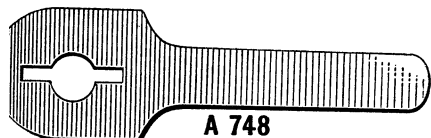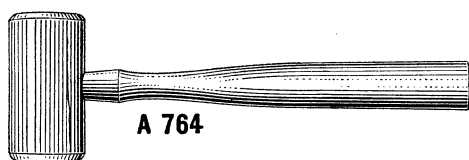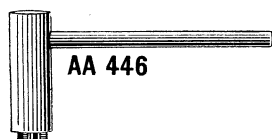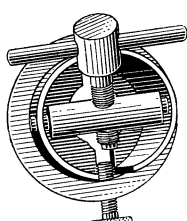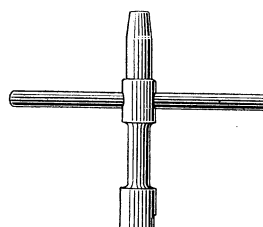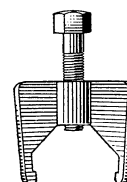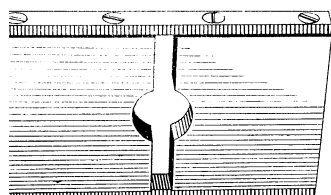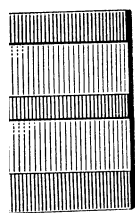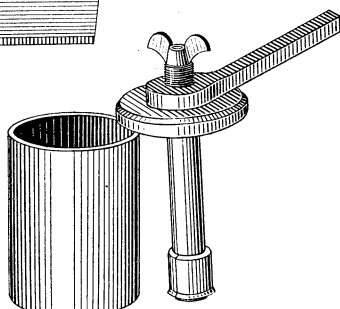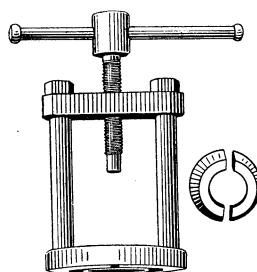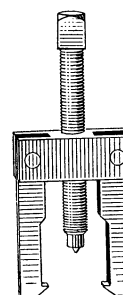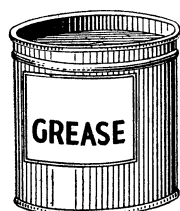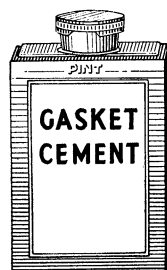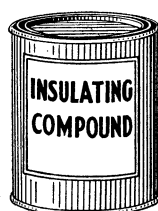MAGNETO SERVICE TOOL EQUIPMENT**A 743****A 744****A 745****A 746****A 747****A 748****A 749****A 750****A 751****A 752****A 753****A 754****A 756****A 755****A 757****A 758****A 764****AA 450****A 1098****A 1099****AA 446****AA 443****AA 444****AA 445****AA 709****AA 451****AA 447****AA 448****AA 449****A 759****A 760****A 761****A 762****A 763**

NUMERICAL INDEX

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A									
A5R	16	A129	6	A263	15	A369	7	A488	39
A9R	23	A130	6	A264	16		12	A489	115
A10R	16	A131	6	A272	13		13	A490	40
	40	A133	18	A274	6		14	A491R	21
A11R	15		19	A275	21		87	A492	21
A12R	40	A134	22		175		90	A495R	34
			19	A283	21	A370	92		9
A17R	40	A135	13	A284	5	A371	12	A496	9
A18R	13	A136	7	A285	12	A374	10	A497	13
A19R	40	A139	6	A286	12		162	A499	7
A20R	13	A140	9		90		243	A500	24
A21R	13		29	A288	21		348		102
		A141	13	A289	21	A375	348	A505	23
A22R	40	A142	14	A301	22	A377	21	A506	23
A23R	40	A144	12	A302	5	A378	14		100
A25R	9	A147	14	A303	5	A382	12	A507	23
A27R	9		29	A307	10	A384	6		100
A28R	5		92	A309	33		11	A508R	40
			107		110	A386	6	A509	19
A29R	40	A149	19		111	A388	9	A510	19
A30R	40	A150	15	A310	33	A389	22	A514	19
A31R	40				93	A391	11	A515	9
A35R	6	A151	19		110	A393	12		242
A36R	6		96	A311	111		90	A516	9
		A152	19	A312	33	A394	21		242
A41R	7	A155	5	A313	34		175	A518	9
A42R	7	A156	9		33	A395	12	A519	242
A43R	7	A159	14		34	A396	21		88
	24				110	A399	5		242
A45R	7	A166	15		111	A401	5		
A46R	9	A169	15	A316	269			A520	9
		A170	12	A317	34	A403	7		88
A51R	11	A172	6		35	A404	6		242
A52R	11		86		101	A405	6	A521	9
A53R	40	A173	6		178	A406	16		29
A54R	40			A318	272	A407	18		88
A55R	11	A174	9	A319	35		12		107
			242	A320	5	A408	9	A522	242
A56R	21	A175	28		112	A411	16		88
A57R	40	A176	6	A321	35	A412	16		242
A58R	8	A177	9		19	A413	18	A523	9
A59R	22	A178	6	A324	96		19		88
A60R	23		86	A326	36	A415	15		242
	101	A179	9		113			A524R	5
A68R	40	A181	8	A327	37	A418	13		
A69R	14	A182	11		274	A420	13	A525R	28
A72R	40	A183	8	A329	37	A422	9	A526R	28
A73R	7				113	A423	5	A527	28
A74R	7	A184	7		274	A424	5	A531R	11
	12	A187	16	A330	23			A532	11
A76R	16	A188	5		37	A425	6		90
	249	A189	11	A333	37	A426	6		
A77	16	A191	5		113	A428	7	A534	8
A78R	13			A334	23	A429	7	A535	8
A79R	40	A192	11		100	A432	11		241
A80R	8	A198	13	A335	101			A539	15
	87	A202	15	A336	101	A433	11	A540	14
		A211	23		100	A434	11	A542	15
A81R	20	A212	23	A337	23	A435	21		
	98	A215	20		38	A437	7	A543	15
A82R	13		98	A341	38	A438	14	A544	15
A85R	40	A216	23	A343	115	A439	7	A545	15
A88R	19	A217	23	A345	115	A441	19	A546R	15
A89R	19	A222	23	A348	10	A442	10	A547	14
			101		39		89		
A94	14	A230	11		19	A443	10	A548R	14
A101	12		90		18	A444	28	A549	14
A102	40	A234	6		19		187	A550	14
A103	5	A235	7		96	A445	11	A551	28
A104	6	A239	13		97	A446	11	A552	28
		A241	8		252	A447	28		106
A105	6		18	A350	13		187	A554	29
A107	40		87		92	A448	11	A556R	14
	260	A242	15	A351	13	A454	6	A557	14
A110	22			A352	13			A558	29
A113	14	A244	7		352	A461	236		106
			8	A353	13	A464	7	A559	29
A114	15	A245	6	A354	9	A465	10		106
A115R	14	A253	6		29		243		
A118	8	A256	5		107	A470	348	A561	29
A119	6	A257	21		242		24	A562	29
	14			A355	6		102	A564	29
	86	A258	243	A356	8	A471	24	A565R	29
A120	14		356	A357	8		102	A567	29
A124	15	A259	10	A360	21	A473	16		
A125	6		162		175		33	A568	29
A126	6	A260	6	A363	16	A486	16	A569	29
	86	A261	12			A487	6	A570R	40
A128	8	A262	12	A365	14		86	A571	29
					93				

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A572	29	A643	30	A700	25	A722	25	A817R	30
	106	A644	107		26		26	A818	107
	266		30		102		102	A819	30
A574	29	A645	107		103		104	A821	30
	106		30	A701	182	A723	182	A824	36
A575	29		107		25		25		40
	106	A646R	26		26		26	A825	13
A577	28		30		102		102		92
A579R	12	A647	107		103		104	A828R	40
A580	15		30	A702	182	A724	182	A829	16
		A648	25		26	A726	25	A830R	40
A581	15		107		102	A727	12	A832	27
A582	15	A649R	30		103	A731	5		
A583	15		107		182	A732	30	A836	15
A584	7	A650	40			A733	40	A837	14
	87		107	A703	25			A840	17
A585	35				26	A734	37	A841	12
		A652	113		102		113	A842R	12
A586	8	A653	359		103	A743	359		
	87		107		182	A744	359	A844	12
A587R	40	A654	359	A704	25	A745	359	A845R	40
A588	6		107		26	A746	359	A846	12
A594R	40	A655	102		103			A850R	23
A595	35		107		182	A747	359		100
	40					A748	359		
A596	13	A659	359			A749	359	A871	33
	14		107	A705	25	A750	359		34
A597	13	A660R	26		26	A751	359		110
A598	13		102		103			A875	21
A599	14	A661	182		103	A752	359		99
A600	14		107		182	A753	359		21
		A662R	25	A706	25	A754	359	A876	20
A601	7	A663	26		26	A755	359		97
A602	7		102		103	A756	359	A877	20
	13	A664	182		103				21
A603	13	A665	359		182	A757	359		97
A604	13	A666	359			A758	359		99
A605	13		107	A707	25	A759	359	A879R	116
	92	A668	26		26	A760	359		
			102		104	A761	359	A880	20
A606R	13	A669	182		104				97
A607	13		107		25	A762	359	A881	20
	92			A708	26	A763	359		97
A608	13	A670	26		102	A764	359	A882	20
	29		107		104	A765	25		97
	92	A671	104		182	A766	25	A886	97
	107	A672	26		102		26	A887	20
A609	16	A674	102	A709	25		102		97
A610	16	A675	104		26		104		
	18		182		102		182	A890	20
		A676	97		104	A767	25		97
A611	16		30		182		26	A891	22
	18		97				32		99
A612	16		252	A710	25		103	A892	22
	18		266		26		104		99
A616R	6	A679	102		104		109	A893	22
A617	6		104		182		183		99
A618	23	A680	25	A711	25	A768	25	A894	25
	101		107				26		26
		A684R	26				103		103
A619	23	A685	104	A712	25		104		104
	101		95		26		183		183
A621	29				104	A769	25	A902R	5
	107	A686	182		104		26	A903	5
A622R	29		95		182		103	A904	8
A623	29	A687	25	A713	25		104	A906	14
A624	33		95	A714	25		183	A907	15
		A688	28				25		
A625R	29		187	A715	25	A770	25		
A626	29		26		26		26	A908	8
A627R	29	A690	102		104		103		13
A628	29		182		104		104	A909R	14
A630	29	A692	25		182		183	A910R	40
			26		25	A772	7	A911R	40
			102	A716	26			A912R	40
A631	29		103		102	A774R	29		
A632	29		182		104		106	A913	13
	107				182	A775R	29	A916	13
A633	29	A693	25	A717	25		106	A917	13
A634	33		182		26			A918	13
	111	A694	102		104	A776	21	A919	29
A635	30		182		182		99		
		A695	25		104	A777	20	A920R	40
A636	40		26		25		98	A921R	40
	116		102	A718	26	A782	10	A922	16
A637	30		103		102	A792R	24	A923	16
	107		182		104		101	A925	12
A638	30				182	A800	30		
	107	A698	25	A719	25	A805	107	A927	12
A639	30		26			A808	11	A928	23
	107		102	A720	25	A810	16	A929R	23
A640	30		103	A721	25			A931R	11
	107		182		26	A811	15	A932	11
		A699	25		102	A812	15		
A641	30				104	A813R	16	A933	6
A642	30				182	A815R	16		11
	107					A816R	30		

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A934	22	A1049	22	A1160	15	A1226	31	A1343	23
A936	22	A1050R	41	A1161R	41	A1227	32	A1344	23
A937R	22	A1051R	21	A1162	19	A1228	109	A1357	18
A938	22	A1052	21	A1163	19	A1229	32	A1358	18
		A1053	37				109	A1359	24
A939	22		113	A1168	19	A1230	35		
	254			A1169	19		112	A1363R	19
A940	22	A1055R	19	A1170R	41				97
A942R	8	A1056	19	A1171	7	A1231	32	A1364	19
	13	A1057	24	A1172	7		109		97
	87	A1062	17			A1232	32	A1365	19
A943	22	A1066	41	A1174R	7	A1233	109	A1366	19
A944R	8			A1175	7		12	A1367	97
	87	A1078	24	A1176	12	A1234	32		41
		A1079	24	A1177	12			A1368	19
A945	8	A1080	24	A1178	12				97
A946R	22	A1081	24			A1235R	20	A1369R	19
	99	A1084R	18	A1180R	12		98	A1370R	41
A947R	8		95	A1181	12	A1236R	20	A1371R	19
A948	8			A1182	12		98		97
A949	8	A1085R	18	A1183	7	A1241	7	A1372	19
			95	A1184	8	A1242	29		
A950R	20	A1090R	18	A1185	8		106	A1373R	19
A951	33		95	A1186	7	A1247	11		97
	110	A1091	16	A1187	8		90	A1374	19
A952R	20	A1098	359	A1188	8		244		97
A955	20	A1099	359	A1189	8		350	A1375	19
A956	22								97
		A1100R	41	A1190	8	A1248	11	A1376	20
A958	8		116	A1193	7		90		97
	87	A1101	20	A1196	9		244	A1377	20
A959R	41		97	A1197	8		350		
A963	24	A1102	25		13	A1252	10	A1378	41
A968	24		26		87	A1253	35		116
A969	24		103		241	A1258	23	A1381	41
			104		346	A1259	23	A1382	12
A970	28		183	A1198R	41				90
A971	28		103		116	A1260	23	A1386	41
A972	41	A1103	25			A1265	18	A1387	41
A975	18		104	A1200	32	A1266	18		
A976R	18		183	A1201	109	A1267	18	A1401	14
			104		32	A1272R	41	A1402	14
A981	18	A1104	25	A1202	109			A1403	14
	96		26		32	A1277R	41	A1404	14
A982	18		103	A1203	109	A1278	9	A1405	14
A983	18		104		32	A1279R	9		
	96		183	A1204	109	A1280	9	A1406	14
A984R	41	A1105	31		32	A1281	16	A1408	15
A985	18		108	A1205	109	A1282R	41	A1409	15
	19	A1108	36		32	A1283	16	A1410	15
	96	A1110	5	A1206	109	A1284	11	A1411	15
		A1112	29		32		90	A1412	15
A986	18	A1113	29	A1207	109		244	A1413R	15
	19		29		32		350	A1414	29
	39			A1208	109	A1286	23	A1415	37
	96	A1114	29		32	A1289R	41	A1416	13
A987	18	A1116	29	A1209	109		116		
A988R	18	A1123	41		32	A1290	7	A1417R	41
	19	A1128R	41	A1210	109	A1291	7	A1418	14
	96				32	A1293	16	A1419	33
A989	18			A1211	109	A1297R	20	A1425R	41
A996	24	A1129	21		32		97	A1426R	41
		A1130	21	A1212	109	A1298	95		
		A1131	20		32			A1427R	30
A997	24	A1132	20	A1213	109	A1300R	20	A1428R	107
A999	23				32	A1307R	23		30
A1000	23	A1133	37	A1214	109		100	A1429R	107
A1001	23	A1134	24		32	A1308	41		30
A1002	23		102	A1215	109	A1309	16	A1430R	107
		A1141R	41		32	A1310	16	A1431	30
A1003R	6	A1142	6	A1216	109				107
A1004	6	A1143R	6		32	A1311	16		
A1006	41			A1217	109	A1313	16	A1432	30
A1010	7	A1144	9		32	A1316	23		107
A1013	10	A1146R	41	A1218	109		101	A1433	30
		A1147	5		32	A1317	35		107
A1014	10	A1148R	9		35		112	A1434	30
A1020	23	A1149	9	A1219	109	A1318	41		107
	100				31			A1435	30
A1025	39	A1150R	9		108	A1321	18		107
A1031	29	A1151	9	A1220	31	A1322R	18		
A1032	29	A1152	9		108	A1323	96	A1437	30
		A1153	15	A1221	32		41		107
		A1154	15	A1222	32	A1324	23	A1438	30
A1033	29			A1223	32		16	A1439	30
A1034	8	A1155R	15	A1224	36	A1325	94		107
A1035	7	A1156	15				23	A1440	30
A1036R	7	A1157	15	A1225	31	A1326	23		107
A1037	8	A1158	15		108	A1327	23	A1441	30
		A1159	15		191	A1341	23		
A1044R	9				267	A1342	23		107
A1045	359								
A1046	25								
	183								
A1047R	41								
A1048	22								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A1442R	41	AA359	8	AA428	26	AA559	16	AA787	21
A1444	30		160		103	AA564	12	AA789	28
	107		241		104			AA790	28
A1445R	30	AA360	8		183	AA565	11	AA791	28
	107	AA361	28			AA567	22	AA792	14
A1446	30			AA429	26		99		
	107	AA362	28		183	AA568	22	AA793	14
A1447	30	AA363	11	AA431	11	AA569	20	AA794	8
	107	AA371	13	AA432	31	AA577	10		13
		AA376	10	AA435	11				87
A1448	34	AA377	6	AA436	6				91
	110					AA578	27		346
A1449	30	AA379	23	AA437	6	AA579	28		352
	107	AA380	22	AA443	359	AA580	27	AA795	11
A1450	30		175	AA444	359	AA581	27		90
	107		254	AA445	359	AA582	18	AA796	11
A1451	34	AA381	21	AA446	359				90
A1452	30	AA382	5			AA583	18	AA797	14
	107	AA385	17	AA447	359	AA584	18		
				AA448	359	AA586	18	AA798	14
A1453	30	AA392	28	AA449	359		19	AA802	10
	107	AA393	28	AA450	359		96	AA804	5
		AA394	28	AA451	359	AA587	7	AA807	19
			187			AA588	13	AA811	19
		AA395	28	AA452	29				
			187		31	AA591	24	AA813	7
AA		AA396	11	AA454	10	AA592	24	AA814	7
					89	AA595	24	AA817	12
		AA397	5	AA456	10	AA596	24	AA818	12
AA200	27	AA399	18	AA459	28	AA598	23	AA819	10
AA201	24		171		106				
AA204	10	AA401	30	AA461	10			AA823	5
	349	AA402	30			AA599	10	AA824	9
AA205	12	AA404	30	AA462	10	AA601	11	AA825	32
AA217	14		107	AA463	5	AA603	10		109
				AA464	6	AA604	10	AA826	32
AA219	27	AA408	30	AA465	6	AA605	23		109
AA227	6		107	AA467	24			AA827	32
AA229	7	AA414	25		101	AA607	23		109
AA231	12		26			AA610	18		
AA232	13		103	AA468	24		23	AA828	32
			104		101	AA612	20		109
AA235	13		183	AA472	7	AA616	16	AA829	32
AA237	5	AA415	25	AA474	28	AA618	5		109
AA239	5		26	AA475	10			AA830	32
AA242	5		103	AA477	24				109
AA244	5		104			AA623	10	AA831	32
			183	AA478	24	AA624	10		109
AA246	5	AA416	25	AA480	31	AA625	29	AA832	31
AA248	22		26	AA483	17	AA631	20		108
AA249	22		103	AA488	31	AA632	21		191
AA253	11		104	AA498	31				267
AA255	7		183			AA633	20		
		AA417	25	AA499	10	AA648	20	AA833	31
AA266	10		26		89		97	AA834	31
AA267	10		103		162	AA649	97		32
AA268	12		104		243	AA650	97		108
AA270	10		183		349	AA661	16	AA835	31
	89			AA503	15				108
AA271	10	AA418	25	AA504	16	AA663	20		267
			26	AA505	16		98	AA836	31
AA272	10		103				172		108
AA280	10		104	AA506	16		173	AA837	31
AA281	10		183		96		254		108
AA282	10	AA419	25	AA508	5	AA664	18		
AA283	9		26	AA509	16	AA665	16	AA838	32
			103	AA511	359	AA666	16	AA839	32
AA286	5		104	AA517	10		94		108
AA295	22		183		89	AA670	9		109
AA296	20	AA421	25		162			AA840	5
AA299	7		183		243	AA692	24	AA843	5
AA300	7				349	AA693	24	AA847	21
		AA422	25			AA700	18		98
AA314	19		26	AA518	10		95		
AA318	23		103		89	AA701	18	AA858	24
AA319	19		104		162		95	AA862	32
	23		183		243	AA702	7		267
AA320	5	AA423	25		349	AA709	359	AA883	11
			26	AA519	10				90
AA325	11		103		89				244
AA329	12		104		162	AA729	20		350
AA331	16		183		243		97	AA886	11
AA335	10				349	AA730	20	AA887	28
	89	AA424	25	AA520	16		97	AA888	7
	162		26	AA523	12	AA737	5		
	243		103	AA524	12	AA741	5		
	349		104			AA743	27	AA889	359
			183	AA525	11			AA890	359
AA345	16	AA425	25	AA526	11	AA744	27	AA891	17
AA348	28		26	AA533	359	AA755	21	AA899	24
AA352	19		103	AA534	6	AA756	22	AA901	24
AA353	19		104	AA535	6	AA757	13		
AA354	23		183				14	AA902	24
		AA426	25	AA551	8	AA758	13	AA905	23
AA357	9	AA427	26	AA553	13		14	AA907	24
	88			AA556	14			AA908	24
	242								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
AA917.....	17	AB227.....	89	AB380.....	27	AB632.....	96	AC166.....	154
AA933.....	94	AB228.....	89		103	AB635.....	94	AC171.....	175
AA934.....	17	AB229.....	90		104	AB636.....	93	AC174.....	184
	9	AB230.....	90	AB383.....	27			AC176.....	166
AA945.....	17	AB232.....	88		103	AB639.....	85	AC177.....	155
AA952.....	11	AB233.....	88		104	AB641.....	97		
				AB384.....	27	AB642.....	98	AC178.....	163
	90	AB235.....	100		103	AB643.....	89	AC181.....	157
	244	AB237.....	105		104	AB644.....	100	AC183.....	162
	350	AB238.....	105					AC185.....	172
AA956.....	23	AB239.....	105	AB385.....	103	AB649.....	105	AC188.....	173
AA958.....	6	AB241.....	98	AB386.....	27	AB655.....	101		
					103	AB656.....	101	AC193.....	155
AA970.....	20	AB243.....	99		104	AB659.....	101	AC194.....	155
AA971.....	22	AB244.....	97	AB388.....	105	AB667.....	95	AC197.....	172
AA973.....	23	AB246.....	85	AB389.....	105			AC201.....	158
AA974.....	23	AB250.....	85	AB390.....	105	AB676.....	96		
AA976.....	101	AB251.....	85			AB677.....	96	AC205.....	162
	19			AB403.....	90	AB678.....	96		243
		AB253.....	85	AB408.....	99	AB679.....	96	AC208.....	172
AA977.....	19	AB256.....	91	AB410.....	99	AB688.....	98	AC210.....	189
AA987.....	24	AB259.....	91	AB411.....	20			AC212.....	168
AA1002.....	16	AB260.....	91		97	AB689.....	28	AC213.....	168
AA1017.....	5	AB262.....	92	AB415.....	98		106		
AA1021.....	24					AB690.....	93	AC226.....	159
		AB264.....	87	AB417.....	90	AB705.....	85	AC227.....	162
AA1022.....	24	AB265.....	93	AB419.....	89	AB706.....	24	AC228.....	189
AA1025.....	23	AB271.....	86	AB427.....	98		102	AC229.....	166
AA1027.....	24	AB273.....	86	AB428.....	99	AB707.....	27	AC237.....	166
AA1028.....	24	AB277.....	96	AB429.....	97		104		
AA1032.....	23			AB437.....	97	AB718.....	94	AC242.....	178
		AB279.....	96	AB439.....	359	AB736.....	101	AC243.....	178
		AB282.....	96	AB451.....	99	AB737.....	101	AC251.....	156
AA1034.....	24	AB284.....	9	AB452.....	97	AB740.....	101	AC255.....	154
AA1035.....	24		88	AB468.....	86	AB742.....	101	AC256.....	156
AA1043.....	20	AB286.....	88						
	97	AB287.....	88	AB473.....	95	AB743.....	101	AC257.....	156
AA1046.....	20			AB474.....	21	AB748.....	91	AC260.....	190
AA1047.....	6	AB288.....	88		98	AB750.....	91	AC272.....	168
		AB289.....	88	AB475.....	94	AB770.....	100	AC274.....	157
AA1050.....	7	AB290.....	88	AB476.....	86	AB771.....	97	AC276.....	156
AA1051.....	17	AB291.....	88	AB484.....	87				158
	94	AB292.....	9			AB774.....	101	AC282.....	177
AA1052.....	17		88	AB486.....	100	AB775.....	105	AC283.....	158
AA1056.....	17		242	AB496.....	99	AB777.....	96	AC284.....	179
	94			AB511.....	85	AB778.....	96	AC285.....	179
		AB294.....	87	AB514.....	85	AB782.....	101	AC286.....	177
AA1058.....	17	AB295.....	87	AB515.....	85				
	94	AB296.....	90		88	AB784.....	101	AC300.....	180
AA1067.....	16	AB297.....	90			AB785.....	101	AC301.....	180
AA1075.....	16	AB299.....	101	AB517.....	85	AB788.....	101	AC305.....	180
AA1078.....	17			AB518.....	12	AB805.....	97	AC306.....	180
AA1079.....	19	AB310.....	86		91	AB806.....	94	AC335.....	17
		AB311.....	86	AB519.....	106				170
		AB312.....	92	AB520.....	85	AB819.....	102		
AA1084.....	24	AB313.....	92	AB543.....	85	AB820.....	102	AC344.....	158
	102	AB318.....	90			AB822.....	105	AC346.....	173
	257			AB544.....	90	AB823.....	95	AC350.....	168
	352	AB319.....	85	AB545.....	105	AB827.....	102	AC351.....	177
AA1087.....	17	AB320.....	85	AB546.....	93				
AA1088.....	17	AB322.....	86	AB549.....	96	AB828.....	102	AC352.....	22
AA1103.....	31	AB323.....	89	AB552.....	101	AB834.....	95		100
	107	AB324.....	89			AB846.....	108		175
AA1104.....	31			AB560.....	93			AC371.....	173
	107	AB325.....	87	AB565.....	92			AC374.....	178
		AB326.....	9	AB566.....	92			AC375.....	178
AA1105.....	31		88	AB567.....	96			AC386.....	189
	107	AB327.....	105	AB568.....	96				
AA1108.....	31	AB330.....	96			AC			
	107		101	AB570.....	96	AC7.....	168	AC387.....	190
AA1111.....	31	AB331.....	105	AB573.....	91	AC48.....	172	AC388.....	190
AA1121.....	15			AB579.....	100	AC49.....	165	AC391.....	190
AA1123.....	13	AB332.....	105	AB580.....	100	AC71.....	167	AC397.....	168
		AB336.....	24	AB583.....	91			AC398.....	168
			102			AC72.....	167	AC401.....	170
AA1124.....	14	AB338.....	92	AB585.....	92	AC73.....	167	AC408.....	174
AA1129.....	24		93	AB590.....	90	AC79.....	166	AC416.....	174
AA1130.....	24	AB339.....	107	AB592.....	85	AC80.....	156	AC427.....	175
		AB344.....	107	AB594.....	91	AC81.....	156	AC428.....	175
				AB599.....	87				
		AB345.....	107			AC102.....	162	AC429.....	175
		AB347.....	107	AB606.....	89		243	AC431.....	162
		AB354.....	90	AB609.....	10		349		243
		AB355.....	85		89	AC116.....	162		345
		AB356.....	85	AB610.....	90	AC119.....	21		348
				AB611.....	89		98	AC432.....	179
AB209.....	86	AB357.....	89	AB612.....	89		173	AC434.....	161
AB210.....	102	AB358.....	98				254	AC435.....	164
AB212.....	99	AB360.....	93	AB613.....	89	AC123.....	163		
AB213.....	99	AB361.....	94	AB614.....	85	AC125.....	154	AC436.....	169
AB214.....	22	AB375.....	95	AB616.....	105			AC437.....	169
	99			AB618.....	97	AC130.....	166	AC438.....	158
		AB378.....	98	AB624.....	101	AC149.....	168	AC439.....	173
AB218.....	99	AB379.....	27			AC150.....	168	AC441.....	158
AB221.....	90		103	AB625.....	101	AC161.....	154		179
AB225.....	89		104	AB628.....	101	AC162.....	154		
AB226.....	89								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
AC445	9	AC745	188	AC971	157	AD41	162	AD289	244
AC446	161	AC747	188	AC977	165		243	AD290	161
AC451	166	AC752	169			AD44	162		242
AC454	161	AC753	169	AC988	162		243	AD292	246
	169	AC760	164	AC999	187		244	AD296	263
				AC1019	173	AD45	244	AD297	264
AC456	155	AC762	160		175				
AC457	154		241	AC1021	154	AD49	245	AD298	236
AC458	167		347	AC1032	179		351	AD299	236
AC478	187	AC763	155			AD51	244	AD300	239
AC491	163	AC764	155	AC1033	179	AD53	238	AD302	259
		AC765	239	AC1037	177	AD60	238		354
AC494	163	AC768	162	AC1054	180	AD64	238	AD303	260
AC503	169			AC1059	190				
AC504	169	AC769	162		191	AD76	236		
AC513	21	AC770	162	AC1062	21	AD77	244	AD305	236
	173	AC771	163		173	AD78	162	AD308	264
AC520	159	AC772	163		254		244	AD309	264
		AC774	173			AD81	254	AD312	264
AC559	169			AC1065	177	AD84	239	AD314	249
AC561	179	AC775	175	AC1067	175		345		
AC562	179	AC777	164	AC1070	95			AD315	249
AC564	156	AC779	164		170	AD86	163	AD319	250
		AC781	177	AC1079	10		244	AD320	162
AC566	156	AC782	164		89		350		244
AC567	156				162	AD87	278	AD337	236
AC570	169	AC785	163		243	AD92	248	AD338	236
AC579	193	AC786	163		349	AD93	248		
	268	AC787	162	AC1080	10	AD97	162	AD339	236
AC582	177	AC788	163		89		163	AD341	256
		AC789	168		162		244	AD343	189
AC583	177		189		244		350		264
AC591	171			AC1088	21	AD98	238	AD344	256
AC592	171	AC790	177		98		345	AD346	246
AC594	190	AC799	264		173	AD99	240		
		AC802	179	AC1093	188		346	AD348	239
AC600	24	AC803	175	AC1095	188	AD100	249	AD349	239
	102	AC810	179	AC1096	188	AD101	237	AD351	250
	157					AD102	237	AD352	246
	179	AC811	179	AC1097	188		155		
	257	AC817	169		237		250	AD357	250
AC602	352	AC818	169	AC1103	170			AD365	256
AC603	178	AC821	179	AC1106	169			AD366	249
AC610	179	AC822	179	AC1107	169	AD103	239	AD367	247
AC611	185			AC1108	169	AD104	238	AD368	246
	159	AC826	178				345		
AC612	160	AC827	179	AC1110	169	AD107	260	AD370	257
AC619	156	AC828	179	AC1111	169	AD110	263	AD371	257
AC620	156	AC830	173	AC1112	155	AD112	244	AD379	265
AC623	159	AC847	21	AC1113	155		350	AD380	246
AC625	159		173	AC1114	155			AD382	237
		AC850	179	AC1115	155	AD113	253		
AC631	173	AC851	158	AC1116	155	AD115	188	AD383	236
AC639	155	AC854	158	AC1117	155		263	AD391	238
AC640	167	AC855	169	AC1118	155	AD116	257	AD393	245
AC644	177	AC857	184	AC1166	162	AD117	236	AD399	239
AC645	154					AD119	264		245
		AC861	178	AC1167	189	AD122	257	AD400	251
AC646	154	AC873	179	AC1168	188	AD123	257	AD401	249
AC649	17	AC874	179	AC1169	188	AD162	256		
	95	AC885	21	AC1170	188	AD170	242	AD408	256
	170		98	AC1176	179	AD174	240	AD409	256
AC651	251	AC886	173				346	AD410	265
AC652	173		156	AC1178	184				
AC653	154	AC887	156	AC1179	184	AD179	239	AD411	262
	154	AC888	156	AC1180	179		345	AD414	263
		AC895	171			AD200	249	AD416	257
AC657	158	AC896	171			AD202	263	AD417	257
AC663	189	AC901	156			AD209	236		
AC665	170					AD211	256	AD436	251
AC667	7	AC909	163	AD				AD452	174
	158	AC912	168			AD216	249		254
	239	AC918	17			AD220	245	AD465	264
	346		170	AD7	239		350	AD466	239
AC669	158	AC922	171	AD10	259	AD221	245		345
		AC923	171	AD11	260	AD222	245		
				AD13	244	AD232	257		
AC684	169	AC932	162	AD14	249			AD470	247
AC694	156	AC933	165			AD233	257	AD474	256
AC699	166	AC934	154	AD15	244	AD238	345	AD477	253
AC720	191		160	AD24	252	AD241	239	AD483	239
AC723	164	AC953	163	AD25	247	AD248	251		346
		AC954	161	AD26	257	AD253	253	AD486	252
			242		352				
AC725	186			AD27	257	AD269	249	AD488	257
AC730	164	AC955	188		352	AD273	256	AD489	257
AC731	162		189			AD274	253	AD495	257
AC733	175	AC956	188	AD31	249	AD275	253	AD496	257
AC734	175	AC958	163	AD32	236	AD276	253	AD530	248
		AC959	159	AD33	236				
AC735	175	AC963	162	AD34	238	AD277	253	AD531	248
AC736	175			AD35	237	AD278	244	AD536	254
AC737	175					AD282	253	AD541	244
AC738	179	AC964	162			AD287	261	AD543	244
AC741	188	AC965	162	AD36	246	AD288	263		349
		AC970	157	AD38	250				

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
AD544	244 349	AD825	189 264 263	AD1013	244 349 244	AD1311	251 251 267	AE107	329 329
AD545	245	AD827	356	AD1014	349	AD1322	267	AE108	331
AD592	260 354	AD828	243 348	AD1017	344	AD1327	267	AE109	331
AD597	35 257	AD829	157 239	AD1019	348	AD1330	262	AE111	331
AD600	352	AD830	262 355	AD1020	348	AD1333	267	AE114	331
AD621	237 254			AD1022	350	AD1334	237	AE115	331
AD622	239 345	AD832	246	AD1023	247		334	AE116	331
AD625	359	AD833	161 242	AD1024	345	AD1343	251	AE117	331
AD634	237	AD838	237	AD1025	350	AD1350	250	AE118	328
AD635	236 344	AD840	237 344	AD1027	352	AD1352	237	AE120	330
AD639	239	AD841	189 264	AD1029	349	AD1353	237	AE120	329
AD640	257		243	AD1030	349	AD1354	237	AE121	329
AD644	237 344	AD843	257	AD1031	349			AE122	329
AD647	237	AD852	236 344	AD1032	349	AD1355	237	AE123	329
AD656	237 344	AD853	243 348	AD1034	348	AD1356	237	AE124	327
AD658	247	AD860	245 350	AD1035	348		344	AE125	329
AD661	236	AD862	267	AD1036	352	AD1357	237	AE126	327
AD662	247			AD1037	352	AD1358	237	AE127	329
AD668	237	AD867	266	AD1043	350	AD1359	356	AE128	329
AD669	237	AD874	238	AD1044	348			AE129	328
AD671	344	AD876	266	AD1045	348	AD1360	241	AE130	328
AD671	237	AD878	240	AD1054	344	AD1368	249	AE131	326
AD680	10 89	AD879	239	AD1056	346	AD1371	249	AE132	332
	162			AD1063	350	AD1389	251	AE133	332
	244	AD883	161	AD1067	351	AD1390	251	AE134	332
AD690	249	AD884	242	AD1068	349	AD1430	252	AE135	332
AD696	252	AD894	157	AD1203	239	AD1431	252	AE136	332
AD700	241 347	AD900	239 157	AD1214	351	AD1441	251	AE137	327
		AD901	21 254	AD1218	263	AD1443	251	AE138	326
AD703	236	AD902	238	AD1220	356	AD1450	251	AE139	326
AD706	344	AD903	238	AD1221	263	AD1451	251	AE140	327
AD709	247	AD908	345	AD1222	356	AD1456	250	AE141	326
	10	AD915	351	AD1223	344	AD1459	252	AE142	327
	89	AD917	236	AD1225	347	AD1462	251	AE143	326
	162		247		242	AD1469	245	AE144	326
	244		352	AD1226	243	AD1471	251	AE145	328
AD721	253	AD918	160	AD1227	243	AD1472	251	AE146	327
AD733	236 344	AD922	241 11	AD1228	243	AD1473	251	AE147	327
			163	AD1229	243	AD1475	253	AE148	327
AD736	248	AD935	245	AD1230	243	AD1495	351	AE149	327
AD744	244		236	AD1231	243			AE150	327
AD745	263	AD936	240	AD1234	249	AE		AG	
AD749	356	AD942	247	AD1235	236	AE4	329	AG54	330
AD752	247 352	AD948	344	AD1239	249	AE5	329	AG55	330
		AD949	356	AD1240	249	AE6	329	AG56	330
AD753	254	AD962	344	AD1242	249	AE7	329	AK	
AD755	254	AD963	344	AD1248	249	AE16	328	AK152	329
AD758	256			AD1251	249	AE17	328	AK455	329
AD762	257	AD972	251	AD1252	249	AE18	327	AK488	329
AD763	257	AD978	359	AD1256	249	AE24	327	B	
		AD981	359	AD1258	249	AE25	330	B2	85
AD768	257	AD990	254	AD1259	249	AE29	326	B3	85
AD774	248	AD991	349	AD1265	249	AE30	329	B4	85
AD775	263			AD1268	249	AE35	328	B5R	116
	356	AD993	348	AD1275	249	AE36	330	B7	85
AD778	236		349	AD1276	249	AE38	330	B9	114
AD787	249	AD994	349	AD1279	250	AE40	327	B10	98
		AD995	349	AD1280	345	AE58	328	B11	36
AD788	238	AD996	256		345	AE59	328		112
AD789	345	AD997	256	AD1288	266	AE60	327	B17R	116
	238			AD1293	266	AE66	329	B25R	95
AD790	346	AD1002	263	AD1294	266	AE69	329	B29	99
AD793	238		356	AD1296	266			B30	99
AD796	245 351	AD1003	263	AD1298	23	AE70	329	B31	99
		AD1004	263		101	AE73	326	B32	22
AD806	244		356	AD1299	23	AE75	327	B33	99
AD810	244	AD1007	263		101	AE80	330	B34	99
AD813	245	AD1009	244	AD1300	256	AE82	330	B35	99
AD819	162			AD1305	267	AE83	330	B36R	116
	244	AD1011	244	AD1306	356	AE85	326		41
AD821	173 253	AD1012	244 349 349	AD1307	356	AE86	326		
				AD1308	356	AE88	330		
				AD1310	251	AE89	326		
						AE102	328		
						AE105	328		
						AE106	329		

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
B37.....	22	B157.....	93	B242.....	88	B321.....	93	B400.....	90
B38.....	100	B158.....	91	B243.....	9	B322.....	93	B401.....	90
B40.....	87	B159R.....	116	B244.....	88	B323.....	93	B402.....	90
B41.....	90	B160.....	91	B245.....	9	B324.....	93	B403R.....	116
B44.....	89	B161.....	91	B246.....	88	B325.....	93	B404.....	90
B52R.....	85	B162R.....	91	B247.....	9	B327.....	93	B406.....	90
B53.....	85	B163.....	115	B250.....	88	B328.....	93	B408.....	92
B54.....	88	B164.....	91	B251.....	9	B329.....	93	B409.....	94
B55R.....	116	B165R.....	116	B252.....	88	B330.....	92	B412.....	91
B59.....	88	B166.....	92	B253R.....	88	B331R.....	92	B413.....	85
B60.....	88	B167R.....	92	B254.....	9	B332.....	93	B415.....	86
B66R.....	101	B168.....	92	B255R.....	88	B333R.....	93	B419.....	106
B67.....	101	B169.....	92	B256.....	9	B334.....	115	B420R.....	106
B68.....	101	B170.....	31	B257.....	88	B335.....	93	B421.....	89
B70.....	101	B171R.....	92	B258.....	9	B336.....	93	B422.....	89
B71.....	101	B172R.....	92	B259.....	88	B337.....	93	B423.....	89
B72.....	101	B173.....	92	B264.....	88	B338.....	93	B424.....	90
B73R.....	86	B174.....	87	B268.....	88	B339.....	93	B425.....	89
B74.....	86	B175R.....	87	B272R.....	243	B340.....	93	B426.....	108
B76R.....	105	B177.....	87	B273.....	10	B341.....	92	B427.....	91
B77.....	105	B178.....	20	B274.....	88	B343.....	93	B428R.....	89
B78.....	105	B179.....	87	B275.....	243	B344.....	116	B430.....	9
B80.....	106	B180.....	94	B276.....	10	B345R.....	94	B431.....	89
B88R.....	116	B181.....	94	B277.....	88	B346.....	94	B432.....	7
B89.....	21	B182.....	87	B279R.....	88	B347R.....	85	B433.....	87
B100R.....	98	B183.....	87	B280.....	35	B349.....	86	B434.....	88
B101.....	116	B184.....	93	B281.....	112	B350R.....	86	B435R.....	88
B102.....	99	B185.....	93	B282R.....	7	B351.....	86	B436.....	88
B103R.....	98	B187.....	94	B283R.....	87	B353.....	106	B438.....	9
B104.....	98	B188.....	94	B284.....	87	B354R.....	85	B439.....	88
B105.....	100	B189.....	94	B286.....	87	B355.....	86	B440.....	110
B106.....	100	B190.....	94	B287R.....	87	B356.....	86	B449.....	27
B107.....	99	B191R.....	94	B288.....	87	B357R.....	86	B450.....	105
B108R.....	99	B192.....	94	B289.....	91	B358R.....	86	B451.....	262
B109.....	111	B193.....	94	B290R.....	7	B359.....	108	B452.....	355
B110.....	100	B194.....	96	B291.....	87	B366.....	86	B453.....	27
B111.....	22	B195R.....	86	B292.....	7	B367.....	86	B456.....	105
B112.....	100	B196.....	86	B293.....	24	B368.....	86	B457.....	105
B113.....	20	B198R.....	86	B294.....	87	B369.....	86	B459.....	105
B114.....	38	B199R.....	86	B295.....	102	B370R.....	116	B460.....	105
B115.....	114	B200.....	86	B296.....	87	B371.....	92	B462.....	88
B116.....	113	B201R.....	86	B298.....	91	B372.....	115	B463R.....	116
B117.....	116	B202.....	86	B299.....	91	B373.....	92	B464R.....	108
B118.....	85	B203.....	86	B300.....	91	B374.....	92	B465R.....	24
B119.....	85	B204.....	86	B301.....	41	B375.....	92	B466.....	102
B120.....	85	B205.....	86	B302.....	116	B376R.....	92	B467.....	108
B121.....	85	B206.....	86	B303.....	12	B377.....	92	B468R.....	108
B122.....	85	B207.....	86	B304.....	91	B378.....	92	B469.....	108
B123.....	85	B208.....	86	B305.....	91	B379.....	111	B470R.....	108
B124R.....	110	B209R.....	86	B306R.....	12	B380.....	92	B471.....	108
B125.....	116	B210.....	86	B307.....	91	B381R.....	85	B473.....	108
B126.....	85	B211R.....	116	B308.....	12	B382R.....	92	B474.....	34
B127.....	85	B212.....	86	B309.....	91	B383.....	92	B475.....	108
B128.....	85	B213.....	86	B310.....	91	B384.....	92	B476.....	108
B129R.....	116	B214.....	86	B311.....	108	B385.....	92	B477.....	108
B130.....	85	B215.....	86	B312.....	12	B386.....	92	B479.....	108
B131R.....	85	B216.....	86	B313.....	91	B387.....	92	B482.....	108
B132.....	85	B217.....	86	B314R.....	91	B388R.....	92	B483R.....	108
B133R.....	116	B218R.....	116	B315.....	106	B389.....	22	B484.....	108
B135.....	110	B219.....	96	B316.....	106	B390R.....	100	B485.....	108
B136R.....	116	B220.....	96	B317.....	106	B391.....	8	B487.....	108
B137R.....	91	B221.....	96	B318.....	106	B392R.....	8	B488.....	108
B139.....	91	B222.....	96	B319.....	106	B393.....	87	B489.....	108
B140.....	91	B223.....	96	B320.....	106	B394R.....	22	B490.....	108
B141.....	91	B224.....	96	B321.....	106	B395R.....	90	B491.....	108
B142.....	91	B225.....	96	B322.....	106	B396R.....	90	B492.....	108
B143.....	91	B226.....	96	B323.....	106	B397.....	90	B493.....	108
B144.....	91	B227.....	96	B324.....	106	B398.....	90	B494.....	108
B145R.....	91	B228.....	96	B325.....	106	B399.....	90	B495.....	108
B146.....	91	B229.....	96	B326.....	106	B400.....	90	B496.....	108
B147.....	91	B230.....	96	B327.....	106	B401.....	90	B497.....	108
B148R.....	93	B231.....	96	B328.....	106	B402.....	90	B498.....	108
B152.....	93	B232.....	115	B329.....	106	B403R.....	90	B499.....	108
B153.....	93	B233.....	96	B330.....	106	B404.....	90	B500.....	108
B154.....	108	B234.....	96	B331R.....	106	B405.....	90	B501.....	108
B155.....	93	B235.....	96	B332.....	106	B406.....	90	B502.....	108
B156.....	111	B236R.....	114	B333R.....	106	B407.....	90	B503.....	108
B157.....	93	B237R.....	97	B334.....	106	B408.....	90	B504.....	108
B158.....	93	B238.....	97	B335.....	106	B409.....	90	B505.....	108
B159.....	93	B239.....	93	B336.....	106	B410.....	90	B506.....	108
B160.....	93	B240.....	93	B337.....	106	B411.....	90	B507.....	108
B161.....	93	B241R.....	88	B338.....	106	B412.....	90	B508.....	108
B162R.....	93	B242.....	88	B339.....	106	B413.....	90	B509.....	108
B163.....	93	B243.....	88	B340.....	106	B414.....	90	B510.....	108
B164.....	93	B244.....	88	B341.....	106	B415.....	90	B511.....	108
B165R.....	93	B245.....	88	B342.....	106	B416.....	90	B512.....	108
B166.....	93	B246.....	88	B343.....	106	B417.....	90	B513.....	108
B167R.....	93	B247.....	88	B344.....	106	B418.....	90	B514.....	108
B168.....	93	B248.....	88	B345R.....	106	B419.....	90	B515.....	108
B169.....	93	B249.....	88	B346.....	106	B420.....	90	B516.....	108
B170.....	93	B250.....	88	B347R.....	106	B421.....	90	B517.....	108
B171R.....	93	B251.....	88	B348.....	106	B422.....	90	B518.....	108
B172R.....	93	B252.....	88	B349.....	106	B423.....	90	B519.....	108
B173.....	93	B253R.....	88	B350R.....	106	B424.....	90	B520.....	108
B174.....	93	B254.....	88	B351.....	106	B425.....	90	B521.....	108
B175R.....	93	B255R.....	88	B352.....	106	B426.....	90	B522.....	108
B177.....	93	B256.....	243	B353.....	106	B427.....	90	B523.....	108
B178.....	93	B257.....	243	B354R.....	106	B428.....	90	B524.....	108
B179.....	93	B258.....	243	B355.....	106	B429.....	90	B525.....	108
B180.....	93	B259.....	243	B356.....	106	B430.....	90	B526.....	108
B181.....	93	B260.....	243	B357R.....	106	B431.....	90	B527.....	108
B182.....	93	B261.....	243	B358R.....	106	B432.....	90	B528.....	108
B183.....	93	B262.....	243	B359.....	106	B433.....	90	B529.....	108
B184.....	93	B263.....	243	B360.....	106	B434.....	90	B530.....	108
B185.....	93	B264.....	243	B361.....	106	B435.....	90	B531.....	108
B187.....	93	B265.....	243	B362.....	106	B436.....	90	B532.....	108
B188.....	93	B266.....	243	B363.....	106	B437.....	90	B533.....	108
B189.....	93	B267.....	243	B364.....	106	B438.....	90	B534.....	108
B190.....	93	B268.....	243	B365.....	106	B439.....	90	B535.....	108
B191R.....	93	B269.....	243	B366.....	106	B440.....	90	B536.....	108
B192.....	93	B270.....	243	B367.....	106	B441.....	90	B537.....	108
B193.....	93	B271.....	243	B368.....	106	B442.....	90	B538.....	108
B194.....	93	B272.....	243	B369.....	106	B443.....	90	B539.....	108
B195R.....	93	B273.....	243	B370.....	106	B444.....	90	B540.....	108
B196.....	93	B274.....	243	B371.....	106	B445.....	90	B541.....	108
B198R.....	93	B275.....	243	B372.....	106	B446.....	90	B542.....	108
B199R.....	93	B276.....	243	B373.....	106	B447.....	90	B543.....	108
B200.....	93	B277.....	243	B374.....	106	B448.....	90	B544.....	108
B201R.....	93	B278.....	243	B375.....	106	B449.....	90	B545.....	108
B202.....	93	B279.....	243	B376.....	106	B450.....	90	B546.....	108
B203.....	93	B280.....	243	B377.....	106	B451.....	90	B547.....	108
B204.....	93	B281.....	243	B378.....	106	B452.....	90	B548.....	108
B205.....	93	B282.....	243	B379.....	106	B453.....	90	B549.....	108
B206.....	93	B283.....	243	B380.....	106	B454.....	90	B550.....	108
B207.....	93	B284.....	243	B381.....	106	B455.....	90	B551.....	108
B208.....	93	B285.....	243	B382.....	106	B456.....	90	B552.....	108
B209R.....	93	B286.....	243	B383.....	106	B457.....	90	B553.....	108
B210.....	93	B287.....	243	B384.....	106	B458.....	90	B554.....	108
B211R.....	93	B288.....	243	B385.....	106	B459.....	90	B555.....	108
B212.....	93	B289.....	243	B386.....	106	B460.....	90	B556.....	108
B213.....	93	B290.....	243	B387.....	106	B461.....	90	B557.....	108
B214.....	93	B291.....	243	B388.....	106	B462.....	90	B558.....	108
B215.....	93	B292.....	243	B389.....	106	B463.....	90	B559.....	108
B216.....	93	B293.....	243	B390.....	106	B464.....	90	B560.....	108
B217.....	93	B294.....	243	B391.....	106	B465.....	90	B561.....	108
B218R.....	93	B295.....	243	B392.....	106	B466.....	90	B562.....	108
B219.....	93	B296.....	243	B393.....	106	B467.....	90	B563.....	108
B220.....	93	B297.....	243	B394.....	106	B468.....	90	B564.....	108
B221.....	93	B298.....	243	B395.....	106	B469.....	90	B565.....	108
B222.....									

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
B489	31	B551	20	B708	92	B822	101	C243R	200
	108		98	B709	92	B829R	100	C246R	156
B490R	31	B552	98	B710	92	B835	102	C247R	159
	108	B553	113	B711	92				241
B491R	31	B557	98	B713R	117	B836	102		346
	108			B714R	117	B837	102	C248R	156
B492	108	B559	98			B838	102	C250R	157
B494	108	B562	110	B715	96	B839	102		
			269	B716R	117	B840	102		
B495	86	B563	106	B717	96			C251	157
B496R	95	B565	98	B718	96	B841	101	C253R	200
B497	37		99	B719R	96	B842	98	C255R	201
	113	B567	86			B843R	87	C256R	163
B500	95			B721	96	B844	87	C257R	163
B504	86	B568	33	B723	96	B845	101		
			110	B724	91			C258R	163
		B569	87	B729R	117	B846	113	C259R	163
B505	86	B571	91	B730	94	B847	101	C261R	86
B507	26	B572R	116			B848	113		159
	27	B573	100	B731	94		273	C264R	18
	103			B732	13	B855	105		96
	104	B574R	116		101	B860	101	C265R	171
	184	B575R	98	B733	94				188
B508	27	B576	112	B734R	17	B861	101	C271	172
	34	B578	95		117	B862	101	C272	172
	103	B584	113	B735R	91	B866	96	C275R	175
	104					B867	96	C276R	175
B509	27	B586	106	B736	91	B868	96	C284R	19
	103	B587	106	B737	91				96
	104	B588	106	B738	91	B870R	91		190
B510	26	B593	94	B739	91	B876	108		191
	27	B594	27	B740R	91				
	103		103					C291R	90
	104		104	B741	91			C292R	201
	184	B595	27	B744R	92			C293R	201
B514	27		103	B746R	92			C294R	201
	103		104	B748R	93			C295R	201
	104	B596	106	B749	91				
	184	B597R	116			C9R	166		
B515	27	B599	106	B752	87	C20R	168	C296R	168
	103	B601	85		91	C24R	169	C297R	201
	104			B753R	117	C27R	167	C299	157
	184	B603R	116	B754	100	C32R	200	C300R	201
B516	27	B605	98	B757R	117			C301R	201
	103	B610R	116	B758R	90	C33R	200		
	104	B611	93			C35R	154	C302R	173
B517	27	B619R	116	B760	90	C37R	156	C303R	201
	103			B761	88	C74R	13	C304R	201
	104	B620	93	B764	96		166	C305	156
B518	26	B630	102	B765	101		247	C306R	201
	27	B633	95	B767R	117		352		
	103	B634R	95			C84R	200	C307R	164
	104	B635	95	B768R	117			C308	158
	184			B769R	94	C85	167		165
		B636R	117	B772R	86	C98R	167	C310R	165
B519	26	B637R	117	B773R	117	C107R	167	C311R	158
	27	B638	97	B776R	117	C112R	175		
	103	B639R	19			C116	166	C312R	165
	104		96	B777	113			C315	189
	184		97	B778R	106	C126R	200	C321R	175
B520	26	B642R	97	B780	100	C127R	200	C322R	175
	27			B781	100	C132R	200	C324R	201
	103	B643R	97	B782R	100	C133R	200		
	104	B644	102					C325R	175
	184	B650	91	B786	100	C138R	154	C326R	176
B521	27	B651	97	B787	100	C139	167	C327	172
	103	B657	96	B788	100	C142R	166	C328	172
	104			B789	100	C148R	200	C329	175
B522	27	B658	95	B790	87	C149R	200	C331R	175
	103	B660R	117						
	104	B661R	98	B791	87	C150	155	C332R	164
B523	27	B669R	117	B797	89	C154R	189	C333R	201
	103	B670	94	B798R	117	C167R	41	C334R	41
	104			B801R	117				201
		B671	94	B803	100		200	C336R	201
B524	27	B672	94			C168R	161	C337R	175
	103	B674R	94	B804	100	C169R	161		
	104	B676R	117	B805	100			C338R	175
B525	27	B678R	96	B807	100	C171R	166	C340R	168
	103			B808	100		247	C341R	201
	104	B679R	95	B809	98		352	C342R	201
B531	93	B680	101			C172R	166	C343R	189
B532	92	B683	101	B810	98	C178R	200		
B533R	116	B686	97	B811R	98	C179R	200	C344R	201
		B687R	97	B812	100	C184R	166	C345R	201
B543R	116			B813R	98			C346R	189
B545	99	B688R	117	B814	98	C207	167	C349R	190
B547	20	B689	97			C210R	200	C350R	201
	97	B690	97	B815	98	C211R	200		
B548R	20	B694R	117	B816	98	C225R	200	C353R	201
	98	B700R	85	B817	20	C226R	200	C354R	171
								C360R	172
B549	20	B701	85	B818	98	C228	167	C361R	169
	98	B705	93	B819	101	C232	175		
B550	20	B706	92				254	C362R	169
	98	B707R	117	B820	101	C237R	173	C363R	158
				B821	101	C241R	200		
						C242R	200		180

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C364R	169	C591	167	C806	33	C985	38	C1118	184
C365R	201	C594	168		110		39	C1119	184
C366R	161	C595	169		111		115		186
	170	C596	172		195		176	C1120	184
		C597	169		269		199		186
C367R	170	C598	154	C826	154		275	C1121	184
C368R	170				178	C986	198		186
C369R	170	C602	154		256	C989	176		
C373R	201	C603	166			C994	159	C1122	184
C376R	201	C604	161	C834	34	C998	7	C1123	184
		C609	158		166		87	C1125	184
		C614	13		194		158		186
C377R	201		166		22			C1126	184
C381R	165		247	C838	100	C1001	154		186
C383R	201		352		176	C1002	156	C1127	184
C384R	189				254	C1003	156		186
C385R	188				22	C1004	164		
		C616	164	C840	100	C1005	157	C1128	184
		C617	164		176			C1129	184
C387R	169	C618	154		254	C1006	156	C1130	184
C388R	201	C619	167			C1009	156		186
C389R	201	C620	169			C1012	156	C1131	184
C390R	201			C882	156	C1015	155		186
C391R	41				195	C1016	180	C1132	184
	201	C624	156	C900	159				186
		C629	162	C902	7				
C397R	169	C636	172		87	C1018	159		
	201	C643	166		158	C1019	154	C1133	184
C398R	189	C656	172		239		159	C1134	184
C399R	169				346	C1020	176		186
C401	161	C657	167	C906	159	C1021	176	C1135	185
C404	13	C658	167	C909	176	C1023	164	C1136	185
	166	C660	173	C910	188				186
		C662	157			C1024	176	C1137	185
		C663				C1027	17		186
C413	170						171		
C420	156	C666	167	C912	159	C1028R	172	C1138	185
C422	167	C667	166		241	C1029	17		186
C423	172		246	C915	176	C1030	95	C1139	185
C424	180		351	C916	159		171		186
		C672	168		241			C1140	185
C434	166	C673	154		346			C1144	185
	247	C674	161	C918	176	C1031	86		186
	352			C921	155		169	C1145	185
C437	168	C677	21			C1032	178		186
C440	159		98	C924	159	C1033	188		
C443	167		174	C925	159	C1038	154	C1146	185
C447	159		254	C927	159		266		186
		C678	176	C928	164	C1052	179	C1148	185
C457	167	C684	198	C932	166				186
C462	168	C686	167			C1053	179	C1149	185
C470	169	C690	154	C933	179	C1054	179		186
C471	180			C934	176	C1055	171	C1150	

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C1220.....	31	C1328.....	180	C1411.....	189	C1527.....	165	C1638R.....	176
	94		184	C1412.....	189	C1528.....	165	C1639.....	176
	100	C1329.....	180	C1413.....	189	C1529.....	165	C1640.....	170
	108		184	C1414.....	189	C1530.....	165	C1641.....	172
	176	C1330.....	27	C1415.....	189		245	C1642.....	172
	190		103				351		
	249		104	C1416.....	189	C1533.....	16	C1643.....	172
	255		184	C1419.....	190		168	C1645R.....	201
C1224.....	19	C1331.....	26	C1420.....	190			C1646R.....	17
	31		180	C1421.....	190	C1534.....	191		95
	96		184	C1422.....	190	C1535.....	191		171
	108	C1332.....	180			C1536.....	191	C1647.....	35
	172		184	C1423.....	190	C1537.....	172		112
C1225.....	157	C1333.....	26	C1424.....	190	C1538.....	170		196
C1228.....	171		181	C1425.....	190			C1648.....	179
C1229.....	171		184	C1426.....	190	C1539.....	34		
				C1427.....	190		173	C1661.....	199
C1231.....	22	C1334.....	26				195	C1664.....	189
	100		27	C1428.....	190	C1547.....	170		263
	176		103	C1429.....	190	C1548.....	171	C1665.....	159
	255		104	C1430.....	190	C1549.....	171	C1667R.....	201
C1234.....	176		181	C1431.....	190	C1550.....	171	C1671.....	173
C1235.....	171		184	C1432.....	190				
C1236.....	359	C1335.....	26			C1551.....	171	C1672.....	174
C1238.....	174		27	C1433.....	190	C1554.....	170	C1673.....	174
			31	C1434.....	190	C1556.....	171	C1675.....	173
C1242.....	100		103	C1435.....	190	C1561.....	191	C1676R.....	201
	176		104	C1436.....	190	C1562.....	191	C1677.....	160
	255		108	C1438.....	8				
C1244.....	154		181		87	C1563.....	192	C1679.....	160
C1245.....	154		259		190	C1564.....	192	C1680.....	171
C1246.....	167		354			C1567.....	191	C1682.....	177
	189	C1336.....	26	C1439.....	190	C1568.....	191	C1697R.....	170
C1248.....	22		181		266	C1569.....	191	C1698.....	179
	172	C1337.....	181	C1440.....	190				
		C1338.....	181	C1441.....	190	C1570.....	32	C1699.....	179
C1249.....	172			C1442.....	191		192	C1700R.....	201
C1251.....	169	C1339.....	181	C1444.....	191	C1571.....	192	C1701R.....	157
C1252.....	179		181			C1572.....	28	C1703R.....	188
C1267.....	171	C1341.....	181	C1446.....	191		106	C1705.....	8
C1269.....	189	C1342.....	181	C1449.....	191		192		88
		C1343.....	181	C1453.....	169	C1573.....	11		160
C1270.....	173	C1344.....	181	C1454.....	169		90		241
C1271.....	173			C1455.....	175		163		347
C1272.....	195	C1345.....	181				244		
C1273.....	195	C1346.....	181	C1456.....	175		349	C1706.....	160
C1274R.....	201	C1347.....	181	C1458.....	197	C1574.....	185	C1707.....	155
		C1348.....	181	C1468.....	162		186	C1708.....	160
C1275R.....	175	C1349.....	181	C1469.....	165			C1709.....	157
C1276.....	174			C1473.....	169	C1576.....	191	C1716.....	17
C1277.....	190	C1350.....	181			C1578.....	35		95
C1280R.....	157	C1351.....	181	C1474.....	169		196		170
C1284.....	190	C1352.....	181	C1475.....	169	C1579.....	189		
		C1353.....	181	C1476.....	168	C1586.....	191	C1718R.....	170
C1287.....	172	C1355.....	181	C1477.....	169	C1591.....	28	C1720.....	155
C1288.....	175			C1478.....	169		189	C1721.....	155
C1294.....	17	C1356.....	181			C1592.....	31	C1723.....	157
	171	C1357.....	181	C1479.....	6		109	C1729.....	164
C1295.....	17	C1358.....	181		17		156		
	171	C1359.....	181		95		199	C1732.....	21
C1300.....	24	C1360.....	181		99	C1593.....	170		99
	102				169	C1595.....	159	C1733R.....	174
	180	C1361.....	181	C1480.....	155		241	C1734R.....	201
C1302.....	180	C1362.....	181	C1483.....	164	C1596R.....	201	C1735R.....	166
C1303.....	180	C1363.....	181	C1484.....	164	C1597R.....	170	C1736R.....	166
C1304.....	180		184	C1490.....	9				
C1305.....	180	C1364.....	158		161	C1598R.....	170	C1737R.....	201
C1306.....	180	C1365.....	181	C1493.....	154	C1600.....	157	C1738.....	166
				C1494.....	169		180	C1739.....	166
C1307.....	180	C1366.....	181		241	C1603.....	180	C1740R.....	201
C1308.....	180	C1367.....	181	C1495.....	191	C1604.....	156	C1741R.....	201
C1309.....	180	C1368.....	181	C1496.....	191	C1605.....	156		
C1311.....	180	C1369.....	181	C1497.....	191			C1743R.....	154
C1312.....	180	C1371.....	171			C1606.....	156	C1745.....	154
				C1498.....	174	C1610R.....	177	C1748.....	154
C1313.....	180	C1372.....	172	C1503.....	189	C1611R.....	177		194
C1314.....	180	C1373.....	176	C1504.....	168	C1612R.....	177		195
C1315.....	180	C1375.....	168	C1510.....	170	C1613R.....	177	C1749.....	160
C1316.....	180	C1378.....	172	C1513.....	171			C1751.....	188
C1317.....	180					C1616.....	177		
		C1381.....	175	C1514.....	171	C1617.....	177	C1753.....	188
C1318.....	180	C1382.....	175	C1515.....	171	C1618R.....	177	C1756.....	180
C1319.....	180	C1385.....	198	C1516.....	171	C1619.....	177	C1759.....	171
C1320.....	40	C1388.....	175	C1517.....	17	C1620R.....	167	C1761.....	155
	116	C1390.....	175					C1763.....	155
	180			C1519.....	95	C1621.....	167		
	200	C1391.....	175		167	C1622.....	167	C1764.....	155
	277	C1392.....	175			C1623.....	167	C1765.....	192
C1321.....	180	C1394.....	190	C1520.....	167	C1626R.....	157	C1769.....	192
C1322.....	180	C1399.....	200	C1521.....	175	C1627R.....	156	C1772.....	155
					236				
C1324.....	180	C1404.....	155	C1522.....	164	C1628R.....	156		
C1325.....	180	C1405.....	155	C1525.....	165	C1629R.....	188	C1774.....	155
C1326.....	180	C1410.....	189	C1526.....	165	C1631.....	180	C1776.....	192
C1327.....	180				245	C1635.....	191		
	184				351	C1637R.....	176		

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C1777.....	11	C1898.....	181	C2014.....	198	C2176.....	178	C2279.....	160
	89	C1899.....	181	C2015.....	197	C2177.....	178	C2280.....	160
	163	C1900R.....	201			C2178.....	178		166
	244	C1901R.....	201	C2016.....	197			C2281.....	176
	349	C1902.....	170	C2017.....	160	C2179.....	191	C2282.....	160
C1778.....	11	C1908R.....	157	C2020R.....	201	C2180.....	191	C2283R.....	160
	89			C2021.....	174	C2181.....	191		
	163	C1909R.....	201	C2022R.....	173	C2182.....	19	C2284.....	160
	244	C1910R.....	164				23	C2285.....	160
	349	C1911R.....	164	C2023R.....	176		172	C2286.....	160
C1783.....	158	C1912.....	172	C2024R.....	176	C2183.....	177	C2290.....	164
		C1916R.....	170	C2025.....	176			C2291.....	164
C1785.....	177			C2027.....	176	C2184.....	177		
	256	C1919.....	170	C2036.....	179	C2185.....	177	C2292.....	164
C1787.....	191	C1920.....	170			C2186.....	177	C2293.....	164
C1788.....	191	C1921.....	170	C2037.....	179	C2187.....	178	C2294.....	164
C1789R.....	191	C1922R.....	201	C2040.....	178	C2188.....	178	C2295.....	201
C1790.....	191	C1924.....	155	C2041.....	178			C2296.....	165
				C2042R.....	178	C2189.....	178		
C1791R.....	157	C1925.....	155	C2043R.....	178	C2190.....	178	C2299.....	157
C1793.....	154	C1929.....	163			C2191.....	178	C2300.....	157
C1794.....	155	C1934.....	163	C2045.....	178	C2192.....	178	C2304.....	180
C1795R.....	201	C1935.....	163	C2046.....	178	C2193.....	178	C2305.....	180
C1796.....	181	C1936.....	163	C2047.....	178			C2306.....	180
				C2050.....	179	C2194.....	178		
C1797.....	181	C1940.....	164	C2051.....	179	C2195.....	178	C2307.....	178
C1798.....	181	C1942.....	164			C2199R.....	18	C2308.....	174
C1799.....	164	C1944.....	165	C2053R.....	158		95	C2309.....	99
C1808R.....	154	C1945R.....	165	C2054.....	158		171	C2310.....	174
C1812.....	164	C1946.....	165	C2055.....	158	C2200.....	158	C2312.....	201
				C2056R.....	160	C2201.....	158		176
				C2057R.....	158				
C1813.....	164	C1947.....	165		180	C2202.....	158	C2313.....	176
C1814.....	164	C1948.....	165			C2203.....	158	C2314.....	176
C1815.....	166	C1952.....	172	C2058.....	158	C2204.....	158	C2315R.....	176
C1818.....	161	C1953.....	172	C2059.....	158	C2205.....	165	C2316.....	176
	345	C1955.....	154	C2060R.....	158	C2206.....	158	C2317.....	176
	350			C2061.....	158				
C1821R.....	201	C1964.....	179	C2062.....	160	C2207.....	156	C2318.....	176
		C1965.....	179			C2208.....	158	C2319R.....	176
C1822R.....	201	C1966.....	179	C2063.....	160	C2209.....	158	C2320.....	176
C1823.....	6	C1967.....	179	C2064.....	158	C2211.....	158	C2321.....	15
	157	C1974.....	178	C2067.....	158	C2212.....	158		176
C1825.....	188			C2068.....	158			C2324.....	176
C1827.....	178	C1975R.....	178	C2069.....	158	C2213.....	159		
	188	C1976.....	178			C2214.....	159	C2325.....	22
	263	C1977R.....	178	C2070.....	158	C2215.....	196		176
	356	C1978.....	178	C2071.....	158	C2216.....	159	C2326.....	22
C1828.....	160	C1979.....	178	C2072.....	93	C2218.....	182		176
	188				115			C2327.....	22
C1829.....	160	C1980.....	23		158	C2219.....	159		176
C1831.....	179		101		199	C2220.....	22	C2328R.....	175
C1833.....	160		178	C2073.....	160		164	C2329R.....	175
C1840.....	171	C1981.....	178	C2086.....	179	C2221.....	164		
C1841.....	186		256			C2222.....	164	C2331.....	24
			274	C2087.....	179	C2223.....	64		102
C1842.....	186	C1982R.....	23	C2088.....	176				180
C1843.....	186		101	C2089.....	164	C2226.....	160		257
C1844.....	186		178	C2090.....	172	C2227.....	160		352
C1845.....	186		256	C2091.....	172	C2228.....	160	C2347.....	191
C1846.....	186	C1983.....	178			C2229.....	160	C2348.....	192
			256	C2092.....	172	C2230.....	188	C2351.....	201
C1847.....	186	C1984R.....	178	C2093.....	172			C2352.....	191
C1848.....	186			C2094.....	172	C2234R.....	201		
C1849.....	186	C1985.....	23	C2095.....	172	C2235.....	188	C2353.....	191
C1850.....	186		101	C2096.....	177	C2238.....	188	C2354.....	191
C1852.....	186		178			C2239.....	108	C2355.....	191
			256	C2109.....	157		188	C2357.....	190
C1853.....	186	C1987R.....	188	C2110.....	157	C2240.....	188		191
C1854.....	186	C1988R.....	160	C2118.....	190			C2358.....	190
C1855.....	186	C1989R.....	188	C2130.....	158	C2241.....	188		191
C1856.....	186	C1991.....	181	C2131.....	168	C2242.....	196		
C1857.....	186					C2243.....	188	C2359.....	190
		C1992.....	181	C2132.....	168	C2244.....	165		191
C1858.....	186	C1993.....	181	C2133.....	168		188	C2360.....	190
C1859.....	186	C1994.....	181	C2134.....	168	C2245.....	160		191
C1861.....	186	C1995.....	181	C2135.....	201			C2361R.....	190
C1862.....	186	C1996.....	181	C2136.....	170	C2246R.....	160		191
C1863.....	186					C2247.....	160	C2367.....	174
		C1997.....	181	C2137.....	170	C2254.....	163	C2370R.....	176
C1864.....	186	C1998.....	181	C2138.....	172	C2257.....	164		
C1865.....	164	C1999.....	181	C2144.....	155	C2266.....	160	C2371.....	176
C1866.....	181	C2000R.....	7	C2147.....	17			C2372.....	176
C1867.....	181		157		171	C2267.....	160	C2378.....	11
C1868.....	181		239	C2148.....	18	C2268.....	161		90
		C2001R.....	168		91	C2269.....	161		163
C1869.....	186				171	C2270.....	161		244
C1871.....	34	C2002R.....	201			C2271.....	22		349
	194	C2004R.....	167	C2149R.....	168		178	C2379.....	160
C1875.....	176	C2005R.....	172	C2167.....	165		344		166
C1876R.....	176	C2006R.....	172	C2168.....	201			C2380.....	182
C1877R.....	176	C2007R.....	189	C2170.....	173	C2272.....	179		
			264	C2172.....	161	C2273.....	179	C2381.....	180
C1878R.....	201					C2276.....	179	C2390.....	155
C1893R.....	170	C2010.....	167	C2173.....	161	C2277.....	167	C2395.....	182
C1894.....	179	C2011.....	177	C2175.....	87	C2278.....	160	C2396.....	182
C1897.....	181	C2013.....	177		102			C2397.....	182
					161				

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C2398.....	182	D35R.....	241	D136.....	19	D194.....	247	D298.....	240
C2399.....	188	D36R.....	240		167	D195.....	249	D299.....	346
C2405.....	188		257		168	D196.....	253		236
C2406.....	188				190	D197.....	249	D300.....	344
C2414.....	170	D37R.....	278		191	D198R.....	278	D301.....	236
			357		253				242
C2415.....	170	D38R.....	256		256	D200.....	236		347
C2417.....	155		242		329	D202.....	166		
C2421.....	161	D41R.....	251	D138.....	248	D203.....	247	D302.....	161
C2424.....	188					D208R.....	248		242
C2425.....	188	D42R.....	238	D139.....	253	D209.....	241		242
		D46R.....	253		256			D303.....	347
C2427R.....	189	D47R.....	278		264	D212.....	241		245
C2429.....	188	D49R.....	249	D140.....	249	D213.....	239	D304.....	350
C2430.....	170	D50R.....	247	D141.....	166	D214.....	239		245
C2431.....	170				247	D215.....	241	D305.....	350
C2435.....	180	D51R.....	247		248	D216.....	241		164
	184	D52R.....	278		352				245
		D53R.....	245	D143.....	249	D217.....	253	D306.....	350
C2436.....	182		350	D144.....	250	D218.....	255		238
	184	D54R.....	357			D219.....	255	D307.....	248
C2437.....	182		278	D147.....	176	D220.....	248	D308.....	242
	184	D55R.....	245		249	D221.....	241		347
C2500.....	185				252			D309.....	239
	262	D58R.....	255		256	D223.....	237		345
	355	D59R.....	240		330		344	D310.....	161
C2501.....	27	D60R.....	240	D156.....	22	D224.....	241		242
	105	D61R.....	255		173	D225.....	258	D311.....	246
	185	D62R.....	278		177		352		
	187				253	D228.....	245	D316.....	178
	262	D63R.....	250		255		350		180
C2502.....	355	D64R.....	247	D157.....	8	D229.....	245		252
	27	D66R.....	247		87		350		258
	105	D67R.....	239		160				265
	185		344		241	D230.....	245		352
	187	D69R.....	240		347		350	D317.....	242
	262			D158.....	247	D231.....	245		347
	355	D71R.....	278		352		350	D319R.....	11
			357	D160.....	238	D233.....	18		90
C2503.....	185	D74R.....	250				95		163
	187	D76R.....	255	D161.....	247		171		164
C2504.....	27	D79R.....	247	D162.....	161		251		244
	185	D80R.....	163		242	D236.....	244		245
	187		244		347	D237.....	247		350
	262			D163.....	236			D322.....	272
C2505.....	355	D81R.....	244		253	D243.....	248		333
	27	D82R.....	163	D164.....	242	D244.....	248		
	185		244			D245.....	248	D323.....	272
	187	D83R.....	247	D168.....	245	D246.....	245	D324.....	272
	355	D87R.....	160	D169.....	239	D247.....	241	D327R.....	254
C2506.....	27		241		345	D249.....	257	D328.....	194
	185		346	D170.....	240	D250.....	257		236
	187	D88R.....	278	D171.....	240	D251.....	257		249
C2507.....									

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
D351.....	239	D399.....	165	D454.....	35	D488.....	90	D574.....	18
D352.....	240		245		112		94		171
D353.....	253		351		245		97		252
		D400.....	165		351		106	D575.....	18
D355.....	13		245	D456R.....	161		157		171
	166		351		162		164		252
	247				242		238	D576.....	171
	277	D401R.....	161		243		346		252
	352		239		348	D489.....	238	D577.....	171
D356.....	247		345	D457.....	243	D490.....	167		252
D357.....	247	D402.....	250	D458.....	10		240	D578.....	171
D358.....	248	D403.....	9		161		346		252
D359.....	166		12		243	D491R.....	258		
	168		91		348		264	D579.....	171
	246		159						252
	351		165	D459.....	33	D492R.....	264	D582.....	21
	249		177		86	D498.....	196		254
			180		89		256	D583.....	21
D362.....	11		240		106		273		174
	90		242		111	D499.....	246		254
	163		245		247	D505.....	258	D584R.....	21
	164		346		352				174
	244		351	D460.....	238	D506.....	276		254
	245		353	D461.....	254	D507.....	276	D585.....	35
	350	D409.....	17	D462.....	257	D508.....	33		196
D363R.....	201		95	D463.....	5		269		272
	278		236		85		270		
	357		238		154		271	D586.....	264
D364.....	238		251		239	D509.....	240		356
	239		253		247		246	D591.....	273
	345		345		345		346	D595.....	36
D365R.....	248	D410.....	157	D465.....	9		349		37
D369.....	180		238		24		351		112
	258		345		102	D510.....	264		197
	352				157				273
		D411.....	18		161	D516.....	257	D597.....	198
D370.....	257		95		180	D517.....	257		274
D371.....	245		171		242	D518.....	257	D600.....	171
D372.....	240		196		258	D519.....	257		252
D375.....	248		251		347	D522.....	257		
			272		353			D601.....	171
D376.....	7	D412.....	241			D524R.....	255		252
	239	D414.....	159	D466.....	33	D526.....	249	D602.....	274
	345	D417.....	89		34	D528.....	38	D603.....	40
D377.....	29		162		113		39		116
	106		243		195		115		200
	166		348		269		199		267
	247		349	D467.....	22		275		277
	352		356		100		276	D614.....	257
D378.....	165	D420.....	248		238	D530.....	18		
	245				345		251	D616.....	37
	351	D421.....	252	D468.....	163	D531.....	18		113
D379.....	161	D423.....	252		244		251		274
	164	D424.....	252	D469.....	31			D617.....	241
	242	D426.....	159		108	D532.....	251	D618.....	241
	245		236		191	D534.....	238	D619.....	34
D380.....	9	D430.....	39		239		345		248
	161		115		327	D544.....	35	D620R.....	248
			199		344		36		
D381.....	241		276	D470.....	255		112	D621.....	249
D382.....	248		277				196	D622.....	196
	264			D473.....	11		197		248
D384.....	247	D431.....	115		90		273		249
D385.....	166		276		164	D552.....	166		271
	247	D432.....	39		245		246	D625.....	5
D390.....	246		115		350		351		16
			276	D474.....	33	D553.....	237		94
D391.....	256		334		34		344		154
D392.....	10	D434.....	115		111				157
	11	D435.....	276		194	D554.....	240		159
	27	D436.....	39		270		346		236
	89		115	D475.....	33	D555.....	173	D626.....	154
	105		199		34		249	D627.....	255
	162		276		110	D556.....	242		
	185				111	D557.....	255	D628R.....	278
	187	D437.....	39		194	D558.....	277	D629R.....	250
	243	D439.....	276		269			D630.....	278
	263	D443.....	39	D476.....	196	D559.....	241	D631.....	278
	355		115	D477.....	196		272	D632.....	253
D393R.....	8		200		272		347		
	13	D447.....	238		273	D563.....	196	D634R.....	253
	160		345				272	D635.....	21
	241	D448R.....	238	D478.....	39	D564.....	164		99
	252		345		115		245		172
	347	D449.....	157		200	D565.....	239		174
D394.....	246		238		276		345		254
D395.....	182	D450.....	238	D479.....	39	D566.....	163	D639R.....	278
			345		115		244	D642.....	242
D396R.....	165	D451.....	157		200			D643.....	242
	245		238		276	D567R.....	256		
	351		254	D484.....	253	D570.....	256	D644.....	242
D397.....	275	D452.....	238	D485R.....	255	D571.....	273	D646.....	242
D398.....	240		345	D486.....	20		333	D648.....	257
	245	D453.....	9		253	D572.....	164	D649.....	257
	350		160		255		244		
	351		161	D487.....	247	D573.....	252		
			242						
			347						

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
D651.....	166 168 246 351	D768R.....	255	D872.....	163	D986R.....	265	D1100.....	192
		D769.....	252	D873.....	163	D987R.....	265	D1101.....	267
		D770.....	252	D874.....	163			D1102.....	192
		D771R.....	252			D988R.....	265	D1103.....	267
		D772.....	252	D875.....	163	D989R.....	265	D1104.....	192
D652.....	246	D773.....	252	D882.....	39	D990R.....	265	D1105.....	267
D653R.....	278	D774.....	252		115	D991R.....	265	D1106.....	31
D654R.....	278	D775.....	252	D888.....	37	D992.....	265		109
	357	D776R.....	278		39		269		192
D655.....	165	D777.....	253		273			D1112.....	267
	246			D895.....	274				267
	350	D778.....	264		238	D993.....	29		
	351	D782.....	236	D896.....	238		106	D1114.....	109
D659.....	156	D789.....	167	D897.....	178		167		192
	246		248		256		265	D1116.....	267
		D792.....	244	D898.....	256	D995.....	265		192
D660R.....	278	D793.....	9	D901.....	194	D996.....	265	D1117.....	268
D661R.....	246		88	D902.....	269	D997.....	265	D1120.....	268
D663R.....	255		161		256	D999.....	265	D1124.....	32
D664R.....	255		242	D906.....	359				109
D665.....	255	D794.....	9	D914R.....	246	D1000.....	265		192
			88	D915R.....	247	D1001.....	265		268
D666.....	255		161	D916.....	111	D1002.....	265	D1125.....	192
D667.....	248		242		247	D1003R.....	257		268
D670R.....	278	D795.....	239		269			D1126.....	192
D671.....	248		344		270	D1013.....	265		268
D673R.....	248	D796.....	241	D917.....	166	D1017.....	265	D1127.....	192
		D798R.....	258		246	D1018.....	265		268
D675R.....	248	D799.....	248	D918.....	351			D1128.....	192
D676R.....	246					D1020R.....	251		268
D677.....	265	D802.....	256		166	D1021.....	251	D1129.....	192
D678.....	13	D803.....	256	D922.....	246	D1022.....	265		268
	167	D815R.....	161	D923.....	351	D1024.....	274	D1130.....	192
	190		201	D924R.....	255				268
D679.....	248		242	D929R.....	239	D1026R.....	278	D1131.....	192
	175	D818.....	162		239	D1029.....	269		268
	191		243	D931.....	264	D1031.....	265	D1132.....	192
	249	D819R.....	264	D933.....	250	D1032R.....	264		268
D681R.....	278			D934.....	264	D1033R.....	264	D1133.....	38
D683.....	239	D823R.....	240	D936.....	257				192
	345		258	D937.....	236	D1034.....	28	D1134.....	268
D684.....	165	D824R.....	240		252		106		
	246	D825.....	165		344		175	D1135.....	192
	350		177				188		268
	351		240	D938.....	18	D1036R.....	264	D1136.....	192
D687.....	237		255		95	D1037.....	188		268
D688.....	237	D826.....	165	D940.....	252	D1040R.....	188	D1137.....	192
			240	D941.....	276		264		268
D695.....	200		265	D942.....	271	D1044.....	251	D1138.....	11
	277	D827.....	95		33				90
D698.....	256		178	D944.....	195	D1050.....	21		192
D699.....	256		240		269		254	D1140.....	268
D703.....	257		256	D946R.....	238	D1051.....	188		
D710.....	257		265	D947R.....	249		264	D1141.....	192
		D829.....	240	D948.....	249	D1053R.....	278		268
D713.....	252	D830R.....	240	D950.....	248	D1054R.....	236	D1142.....	192
D722.....	240	D831R.....	240	D951.....	248				268
	246		346			D1056.....	252	D1143.....	192
D723.....	352	D832.....	240	D958.....	252	D1075.....	242		268
D726R.....	252				257		347	D1144.....	192
D727R.....	250	D833R.....	278	D959.....	252	D1076.....	242		198
		D836.....	236		257		347	D1145.....	274
D728R.....	250	D837.....	236	D960.....	96	D1078.....	18		268
D730.....	252	D842R.....	240	D961.....	240		95	D1146.....	192
D731R.....	278	D843.....	20	D962R.....	278		171		268
D733R.....	265		236			D1079.....	252	D1147.....	192
D738.....	247		253	D964.....	237		276		268
	352	D844.....	20	D965R.....	344	D1080.....	5	D1148.....	192
			253	D966.....	278		85		268
D743.....	177	D845.....	265	D967.....	245		154	D1149.....	192
	255	D846.....	265	D971.....	246		236		268
D744.....	238	D847.....	265		265		344	D1150.....	193
D745.....	345	D848.....	265	D972.....	265	D1081.....	249		268
	273			D973.....	265	D1082R.....	201	D1151.....	193
D748R.....	265	D849.....	21	D974.....	265	D1083.....	28		268
D751R.....	265		254	D975.....	265		189	D1152.....	193
		D852R.....	265	D977.....	265		264		268
D752R.....	265	D853.....	265			D1086.....	13	D1153.....	193
D755R.....	265	D854.....	265	D978.....	265		272		268
D759.....	256			D979R.....	265			D1154.....	193
		D866.....	265	D980R.....	265	D1088.....	270		268
D762.....	237	D869.....	163	D981.....	265	D1091.....	272	D1155.....	193
	344			D982.....	265	D1093R.....	264		268
D763.....	244	D870.....	163			D1098.....	265	D1156.....	193
D764.....	250	D871.....	163	D983.....	265				268
D765R.....	278			D984.....	265			D1157.....	268
D766.....	250			D985R.....	278				268

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
D1158	32 109 193 268	D1415	188 264	D1701	20 173 253	D1772	238	D1866	12 246 351
D1159	93 268	D1416	39 115 200	D1702R	253	D1773	239	D1868	12 246 351
D1160	192 268		277	D1703	255	D1774	248	D1871	272
		D1427	237	D1706R	278	D1775	252	D1873	244
		D1428	237	D1707R	357	D1776	239		349
D1161	193	D1429	237		246	D1777	248		
	268		344	D1708R	247	D1779	256	D1876R	255
D1162	278	D1430	237	D1709	247	D1780R	250	D1877R	255
D1163	237		344	D1710	352	D1781R	248	D1879	41
	344	D1440	157	D1716	241	D1783R	236		278
D1164	29	D1441	157		278		344	D1881	98
	156	D1442	157	D1717	357	D1784R	278		173
	237	D1443R	157		344		357		253
D1165	344	D1458R	157		345	D1785	239	D1884	245
	251		252	D1718R	278		349		
D1166	251	D1459R	252		357	D1786	245	D1885	245
D1169	247	D1513	188	D1719R	350		350		351
D1173	237		264		238	D1787	238	D1886	245
	344	D1520	39	D1720	346		346		351
D1174	237		115		12	D1788	238	D1887	165
	344		200		91		346		245
		D1523	277		238	D1789	238		20
D1176	237	D1524	254	D1721	346		345	D1888	173
D1185	240		254		157	D1790	188		253
	346	D1527	239	D1723	238		264	D1891R	238
D1186	246	D1535R	255		346	D1791	356		346
D1187	240	D1536R	255	D1724	238		236		
		D1542	250		346	D1796	344	D1898	22
D1203R	255	D1545	245	D1725R	278		23		177
D1205R	278		351		357		101		253
D1206R	278	D1550	35	D1733R	258		178	D1899R	255
D1218R	278	D1551	21	D1736	353	D1797	256		241
D1229R	248	D1559	256		246		23	D1908	258
		D1563	239		351		101	D1909R	246
D1237R	257		345	D1737	246		178	D1910	236
D1246	236	D1564	269		351	D1798	256		
D1247	236		269	D1739	236		257	D1912R	278
	266	D1591	252		248	D1799	257		357
D1250	20	D1592	39	D1740	236	D1818	257	D1913R	279
	173		115		248	D1819	257		357
D1255	255		200	D1744	266	D1820	188	D1914	189
		D1593	277		264		264		264
D1257	236	D1594	252	D1747	264	D1821	277	D1915	241
	255	D1595	252		356		19		264
D1258	248		265	D1748R	188	D1827	240	D1916R	347
D1269	249	D1596	249		264		346		
D1283	18 95 252	D1597	239	D1749	356	D1828	159	D1917	241
		D1600	278		264		240		347
D1288	257	D1601R	278		356	D1829	346	D1918	258
D1289	257	D1606R	357	D1750R	278		264		353
D1290	252		278		357	D1830	356	D1919R	201
	257	D1617	274	D1754R	278		266	D1920	201
D1298	240	D1624	277		357	D1831R	266		279
	346	D1661	165	D1755R	247		266	D1922	7
D1300	240		199		352	D1832R	266		157
	346	D1662	276	D1760	247	D1833	266		239
			276		352	D1834	266	D1923	7
D1306	240	D1663	266	D1761	247	D1835	266		157
	346	D1666	268		352	D1836	266	D1924R	7
D1324	266		193	D1762	277		163		157
D1330	266	D1667	268	D1766R	276	D1837	244		239
D1332	266		193		22	D1840	266	D1925	7
D1340	349	D1668	265		100	D1841	266		157
		D1670R	278	D1767	255	D1842	266	D1926	239
D1342R	247		357		36	D1843	266		241
	352	D1671	242		113		271	D1927R	347
D1343	247		347		172	D1844R	266		246
	352	D1673R	22		177	D1847	266	D1928	246
D1345	237		255		198	D1849R	266		351
	344	D1674R	22	D1768	274	D1851	244	D1929	247
D1366R	278		255		22	D1856	11		352
	357	D1684	236		100		90	D1930	276
D1367R	240		344	D1769R	255		165		13
	346	D1685	248		22		245	D1932	247
			100		255	D1857R	266		352
D1376	236	D1686R	278	D1771	22		266	D1935	10
D1385	266	D1690R	240		100	D1858R	266		162
D1386	266		346		114	D1861	237		243
D1391R	253	D1691	246		177		344		348
D1392	255		351		198	D1863	240	D1936	243
		D1695R	240		275		346		348
D1411	257		346			D1865	6		
D1414	188	D1696	240				157		
	264		346						

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
D1938.....	12 240 246 346 351	D1994.....	8 87 160 241 253 347	D2102.....	11 164 245	D2212.....	349 349 256	D2342.....	348 348 348
D1939.....	12 240 246 346 351	D1995.....	161 242 347	D2106.....	95 251	D2215.....	349 349 174	D2343.....	348 348 348
D1940.....	246 351	D1997.....	166 247	D2110.....	17 251	D2216.....	349 174	D2344.....	348 348 348
D1941.....	246 350 351	D1998.....	255 245	D2119.....	160 241	D2217.....	174 196 264	D2345.....	348 348 348
D1942.....	240 346	D2000.....	10 12	D2120.....	8 160 241	D2218.....	174 196 264	D2346.....	348 348 348
D1943.....	240 346	D2001.....	10 12 162	D2121.....	18 95 171	D2219.....	196 264 356	D2347.....	348 348 348
D1944.....	240 346	D2002.....	162 242	D2122.....	11 90 163	D2220.....	356 188 264	D2348.....	348 348 348
D1945.....	180 258 353	D2003.....	277 354	D2123R.....	244 279 357	D22234.....	188 264 188	D2349.....	348 348 348
D1946R.....	240 258 346 353	D2004.....	162 243	D2124.....	5 237 344	D2237.....	264 188 264	D2350.....	348 348 348
D1947.....	279	D2005.....	242 5	D2125R.....	241 246	D2240.....	279 256 256	D2351.....	348 348 348
D1949.....	160 241	D2009.....	85 155	D2134.....	192 268	D2245.....	256 256 256	D2352.....	348 348 348
D1950.....	8 19 96	D2026.....	241 241	D2139.....	31 109 192	D2248.....	256 256 256	D2353.....	348 348 348
D1951.....	160 241 347	D2027R.....	241 241	D2141.....	31 109 192	D2249.....	256 256 256	D2354.....	348 348 348
D1952.....	8 160 241 347	D2029.....	241 256	D2142.....	31 109 192	D2250.....	256 256 256	D2355.....	348 348 348
D1957.....	8 160 241 347	D2030.....	8 87 91	D2143.....	31 109 192	D2251R.....	256 256 256	D2356.....	348 348 348
D1958R.....	240 346	D2031.....	87 91 160	D2144.....	31 109 192	D2252.....	256 256 256	D2357.....	348 348 348
D1959R.....	241 347	D2032.....	271 241	D2145.....	31 109 192	D2255R.....	279 258 353	D2358.....	348 348 348
D1960.....	241 347	D2033R.....	241 266	D2146.....	31 109 192	D2260.....	258 353 256	D2359.....	348 348 348
D1961.....	241 347	D2036.....	266 266	D2147.....	31 109 192	D2263.....	256 256 256	D2360.....	348 348 348
D1962.....	240 346	D2037.....	266 266	D2148.....	31 109 192	D2264.....	257 257 101	D2361.....	348 348 348
D1964.....	237 344	D2038.....	266 266	D2149.....	31 109 192	D2265R.....	257 257 101	D2362.....	348 348 348
D1965.....	237 344	D2039.....	266 266	D2150.....	31 109 192	D2266.....	101 256 357	D2363.....	348 348 348
D1968R.....	247 352	D2040.....	266 237	D2151.....	31 109 192	D2270R.....	357 344 346	D2364.....	348 348 348
D1969.....	31 108 253	D2048.....	237 237	D2152.....	31 109 192	D2271R.....	346 346 346	D2365.....	252 256 171
D1970R.....	279 357	D2049.....	237 237	D2153.....	31 109 192	D2272.....	348 348 348	D2366.....	252 256 171
D1983.....	241	D2052.....	344 244	D2154.....	31 109 192	D2273.....	348 348 348	D2367.....	252 256 171
D1985R.....	279 357	D2054.....	244 201	D2155.....	31 109 192	D2274.....	348 348 348	D2368.....	252 256 171
D1987R.....	161 279 201	D2056R.....	201 279	D2156.....	31 109 192	D2275R.....	348 348 348	D2369.....	252 256 171
D1989R.....	162 242	D2059.....	241 241	D2157.....	31 109 192	D2276.....	348 348 348	D2370.....	252 256 171
D1991.....	162 242	D2060.....	241 279	D2158.....	31 109 192	D2277.....	347 347 347	D2371.....	252 256 171
D1992.....	162 242	D2061.....	279 239	D2159.....	31 109 192	D2278.....	347 347 347	D2372.....	252 256 171
D1993.....	162 242	D2062.....	239 189	D2160.....	31 109 192	D2279.....	347 347 347	D2373.....	252 256 171
		D2063.....	189 264	D2161.....	31 109 192	D2280.....	347 347 347	D2374.....	252 256 171
		D2064.....	264 356	D2162R.....	352 357	D2281.....	347 347 347	D2375.....	252 256 171
		D2065R.....	161 242	D2166R.....	352 357	D2282.....	347 347 347	D2376.....	252 256 171
		D2067.....	111 271	D2170.....	347 347	D2283R.....	350 350 350	D2377.....	252 256 171
		D2079.....	238 239	D2171.....	347 347	D2284.....	350 346 279	D2378.....	252 256 171
		D2080.....	241 345	D2172.....	347 347	D2285R.....	346 279 357	D2379.....	252 256 171
		D2081.....	10 161	D2173R.....	347 347	D2286.....	348 348 348	D2380.....	252 256 171
		D2082.....	242 347	D2176.....	346 18	D2287.....	346 279 357	D2381.....	252 256 171
		D2083.....	242 347	D2177.....	21 95	D2288R.....	346 279 357	D2382.....	252 256 171
		D2084.....	242 347	D2178.....	99 170	D2289R.....	346 279 357	D2383.....	252 256 171
		D2085.....	242 347	D2179.....	251 252	D2290.....	346 279 357	D2384.....	252 256 171
		D2086.....	242 347	D2180.....	251 252	D2291.....	346 279 357	D2385.....	252 256 171
		D2087.....	242 347	D2181.....	251 252	D2292.....	346 279 357	D2386.....	252 256 171
		D2088.....	242 347	D2182.....	251 252	D2293.....	346 279 357	D2387.....	252 256 171
		D2089.....	242 347	D2183.....	251 252	D2294.....	346 279 357	D2388.....	252 256 171
		D2090.....	242 347	D2184.....	251 252	D2295R.....	346 279 357	D2389.....	252 256 171
		D2091.....	242 347	D2185.....	251 252	D2296.....	346 279 357	D2390.....	252 256 171
		D2092.....	242 347	D2186.....	251 252	D2297.....	346 279 357	D2391.....	252 256 171
		D2093.....	242 347	D2187.....	251 252	D2298R.....	346 279 357	D2392.....	252 256 171
		D2094.....	242 347	D2188.....	251 252	D2299R.....	346 279 357	D2393.....	252 256 171
		D2095.....	242 347	D2189.....	251 252	D2300R.....	346 279 357	D2394.....	252 256 171
		D2096.....	242 347	D2190.....	251 252	D2301.....	346 279 357	D2395.....	252 256 171
		D2097.....	242 347	D2191.....	251 252	D2302.....	346 279 357	D2396.....	252 256 171
		D2098.....	242 347	D2192.....	251 252	D2303.....	346 279 357	D2397.....	252 256 171
		D2099.....	242 347	D2193.....	251 252	D2304.....	346 279 357	D2398.....	252 256 171
		D2100.....	242 347	D2194.....	251 252	D2305R.....	346 279 357	D2399.....	252 256 171
		D2101.....	242 347	D2195.....	251 252	D2306R.....	346 279 357	D2400.....	252 256 171
		D2102.....	242 347	D2196.....	251 252	D2307.....	346 279 357	D2401.....	252 256 171
		D2103.....	242 347	D2197.....	251 252	D2308.....	346 279 357	D2402.....	252 256 171
		D2104.....	242 347	D2198.....	251 252	D2309.....	346 279 357	D2403.....	252 256 171
		D2105.....	242 347	D2199.....	251 252	D2310.....	346 279 357	D2404.....	252 256 171
		D2106.....	242 347	D2200.....	251 252	D2311R.....	346 279 357	D2405.....	252 256 171
		D2107.....	242 347	D2201.....	251 252	D2312.....	346 279 357	D2406.....	252 256 171
		D2108.....	242 347	D2202.....	251 252	D2313R.....	346 279 357	D2407.....	252 256 171
		D2109.....	242 347	D2203.....	251 252	D2314.....	346 279 357	D2408.....	252 256 171
		D2110.....	242 347	D2204.....	251 252	D2315.....	346 279 357	D2409.....	252 256 171
		D2111.....	242 347	D2205.....	251 252	D2316.....	346 279 357	D2410.....	252 256 171
		D2112.....	242 347	D2206.....	251 252	D2317.....	346 279 357	D2411.....	252 256 171
		D2113.....	242 347	D2207.....	251 252	D2318.....	346 279 357	D2412.....	252 256 171
		D2114.....	242 347	D2208.....	251 252	D2319.....	346 279 357	D2413.....	252 256 171
		D2115.....	242 347	D2209.....	251 252	D2320.....	346 279 357	D2414.....	252 256 171
		D2116.....	242 347	D2210.....	251 252	D2321.....	346 279 357	D2415.....	252 256 171
		D2117.....	242 347	D2211.....	251 252	D2322.....	346 279 357	D2416.....	252 256 171
		D2118.....	242 347	D2212.....	251 252	D2323.....	346 279 357	D2417.....	252 256 171
		D2119.....	242 347	D2213.....	251 252	D2324.....	346 279 357	D2418.....	252 256 171
		D2120.....	242 347	D2214.....	251 252	D2325.....	346 279 357	D2419.....	252 256 171
		D2121.....	242 347	D2215.....	251 252	D2326.....	346 279 357	D2420.....	252 256 171
		D2122.....	242 347	D2216.....	251 252	D2327.....	346 279 357	D2421.....	252 256 171
		D2123.....	242 347	D2217.....	251 252	D2328.....	346 279 357	D2422.....	252 256 171
		D2124.....	242 347	D2218.....	251 252	D2329.....	346 279 357	D2423.....	252 256 171
		D2125.....	242 347	D2219.....	251 252	D2330.....	346 279 357	D2424.....	252 256 171
		D2126.....	242 347	D2220.....	251 252	D2331R.....	346 279 357	D2425.....	252 256 171
		D2127.....	242 347	D2221.....	251 252	D2332R.....	346 279 357	D2426.....	252 256 171
		D2128.....	242 347	D2222.....	251 252			D2427.....	252 256 171
		D2129.....	242 347	D2223.....	251 252			D2428.....	252 256 171
		D2130.....	242 347	D2224.....	251 252			D2429.....	252 256 171
		D2131.....	242 347	D2225.....	251 252			D2430.....	252 256 171
		D2132.....	242 347	D2226.....	251 252			D2431.....	252 256 171
		D2133.....	242 347	D2227.....	251 252			D2432.....	252 256 171
		D2134.....	242 347	D2228.....	251 252			D2433.....	252 256 171
		D2135.....	242 347	D2229.....	251 252			D2434.....	252 256 171
		D2136.....	242 347	D2230.....	251 252			D2435.....	252 256 171
		D2137.....	242 347	D2231.....	251 252			D2436.....	252 256 171
		D2138.....	242 347	D2232.....	251 252			D2437.....	252 256 171
		D2139.....	242 347	D2233.....	251 252			D2438.....	252 256 171
		D2140.....	242 347	D2234.....	251 252			D2439.....	252 256 171
		D2141.....	242 347	D2235.....	251 252			D2440.....	252 256 171
		D2142.....	242 347	D2236.....	251 252			D2441.....	252 256 171
		D2143.....	242 347	D2237.....	251 252			D2442.....	252 256 171
		D2144.....	242 347	D2238.....	251 252				

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
D2446	252	D2570R	279	E6R	326	E122R	332	E2056	329
D2447	18	D2571	256	E7R	335	E123R	332	E2057	8
	95	D2572	256	E8R	327	E124R	327		87
	252	D2573	256	E9R	328	E125R	327		88
D2452	250	D2574	256	E10R	326				160
						E126R	327		192
D2453	248	D2575	2	E11R	329	E127R	335		241
D2454	250		273	E12R	328	E128	326		268
D2456	250	D2576	256	E13R	335	E133R	328		330
D2457R	250	D2584R	279	E15R	326	E1946	326		332
D2459R	279	D2585	253	E16R	330				347
		D2586	253			E1947	326		
D2460	251			E17R	327	E1954	327	E2062	198
D2461	251	D2587	253	E18R	328	E1955	327		334
D2462	277	D2588	253	E19R	328	E1956	327	E2063	35
D2463	255	D2589	253	E20R	335	E1973	326		198
D2464	255	D2590	253	E21R	332				334
		D2591R	279			E1974	326	E2064	35
D2466	345			E22R	332	E1975	326		112
D2467R	279	D2592	253	E23R	335	E1976	5		268
	345	D2593	39	E24R	332				274
D2468R	279		115	E25R	332				334
D2469	267	D2594	277	E29R	331			E2065	274
D2470	267		20					E2068	331
			97	E30R	335				
D2471	267		253	E31R	331	E1979	328	E2071	329
D2472	267	D2595	20	F32R	335	E1980	333	E2072	15
D2473	267		97	E33R	335				330
D2474	267		253	E34R	331	E1982	332	E2075	327
D2475	267	D2596	20			E1983	332	E2076	327
			97	E35R	335	E1984	332	E2089	333
D2476	267		253	E36R	335	E1985	332		
D2477	267			E37R	335	E1986	332	E2094	192
D2478	267	D2597	253	E38R	335				268
D2480	267	D2598	253	E41R	335	F1987	332		276
			257			E1988	332		333
D2482	279	D2599	253	E42R	330	F1989	332	E2095	270
D2483	279	D2600	257	E43R	330	E1990	333	E2097	331
D2486	267		253	E44R	330	E1991	332	E2098	331
D2487	267	D2601	257	E45R	330			E2100	331
D2488	267		253	E46R	329	E1992	332		
			257			E1993	332	E2101	331
D2489	267	D2602	253	E47R	335	E1994	89	E2102	331
D2490	267			E48R	335			E2103	331
D2491	267	D2603	272	E49R	335	E1995	332	E2104	331
D2493	267	D2604	253	E50R	335	E1996	332	E2105	331
D2494R	256	D2605	253	E53R	326				
		D2606	20			F1997	332	E2106	331
D2495	257		97	E54R	326	E1998	332	E2107	331
	267		253	E56R	328	F1999	332	E2108	331
D2496	272	D2607	253	E60R	335	F2000	332	E2109	331
D2497	356	D2608	20	E61R	328	E2001	332	E2118	331
D2498	356		97	E62R	328				
D2512R	279		253	E65R	329	F2002	332	E2119	331
		D2609	20	E66R	335	E2003	332	E2120	331
D2515	252		97	E70R	327	E2004	332	E2125	189
D2518	267		253	E76R	330	F2007	330		329
D2520	267	D2610	253	E77R	335	E2011	327	E2126	334
D2521	267	D2611	253					E2127	329
D2522	267			E78R	326	E2012	326		
		D2612	253	E79R	326	F2014	329	E2128	328
D2523	267	D2613	253	E80R	328	F2018	328	E2131	330
D2526	17		257	E81R	327	E2019	326	E2133	330
	95	D2614	271	E83R	329	E2020	326	E2135	326
	251	D2615	253					E2136	326
D2527	267	D2616	253	E84R	328	E2021	326		
D2528	267			E85R	335	F2023	327	E2142	5
D2529	267	D2618R	279	E86R	326	F2024	328		6
		D2622R	279	E88R	330	E2025	34		31
D2530	27	D2623R	279	E89R	328				85
	263	D2627	252			E2027	33		86
	355	D2629	18	E91R	327				108
D2532	237		95	E92R	326				164
	344		251	E93R	326				170
	348		252	E97R	328				190
D2535	250			E98R	335			E2144	85
D2539	250	D2630	253			E2028	329		329
D2540	250	D2635	351	E99R	330	F2029	328	E2145	329
		D2706	330	E100R	335	E2031	326	E2149	10
D2543	248	D2716	259	E102R	328	E2032	327		11
D2544	274		354	E103R	335	E2035	326		89
D2545	23	D2720	259	E106R	327				90
	101		354			E2036	327		157
	256			E108R	335	E2037	326		162
	277	D2727	259	E109R	328	E2038	327		163
D2546	252		354	E110R	335	E2042	328	E2150	10
D2547	252			E111R	329	E2043	328		11
				E114R	329				89
D2549R	279					E2044	328		90
D2550	250			E116R	332	E2045	326		157
D2566R	279			E117R	335	E2046	327		162
D2568R	279			E118R	335	E2047	328		163
D2569	31			E119R	335	E2048	327		
	109	E1R	335	E120R	332			E2049	327
	192	E2R	327			E2051	327	E2152	195
		E3R	335						271
		E4R	330			E2055	328		334
		E5R	326	E121R	332				

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
E2153.....	329	F2293.....	327	JD7249.....	250	JD7484.....	249	JD7759.....	5
E2157.....	89	F2294.....	330	JD7250.....	6	JD7489.....	13		8
	329	F2295.....	328		156	JD7490.....	266		16
E2158.....	89	E2296.....	178		159	JD7494.....	166		19
	329		328		165		246		20
E2160.....	328	F2298.....	336	JD7251.....	177		352		21
				JD7253.....	165	JD7501.....	15		22
E2163.....	330	F2299.....	329		22				23
E2165.....	327	F2301.....	329		100	JD7502.....	15		31
E2168.....	327	E2302.....	259		177		91		85
E2169.....	327		327		255	JD7527.....	93		92
E2171.....	328		330	JD7260.....	167	JD7528.....	93		94
			354		266	JD7529.....	248		96
E2175.....	328	F2303.....	334			JD7534.....	249		97
E2176.....	328	E2304.....	329	JD7262.....	174			JD7760.....	98
E2183.....	326				254	JD7538.....	93		19
E2184.....	328			JD7264.....	266	JD7539.....	13		20
E2185.....	330			JD7266.....	100		15		98
					21	JD7540.....	266		250
E2187.....	326				174	JD7544.....	166	JD7777.....	250
E2189.....	98				254		246	JD7792.....	166
	256	G259.....	333	JD7267.....	190		352		173
	328			JD7269.....	190	JD7551.....	15		
E2196.....	326				191		189	JD7904.....	15
E2197.....	327								
E2198.....	326			JD7270.....	21	JD7552.....	15		
					99		90		
E2199.....	327	H34.....	255		174		189		
E2203.....	328				175	JD7559.....	13		
E2205.....	327				254		15	K249R.....	335
E2206.....	328			JD7272.....	94			K276R.....	329
E2207.....	9			JD7275.....	16	JD7579.....	248	K278R.....	329
	88				167	JD7584.....	249	K280R.....	329
	161	JD1200.....	251	JD7282.....	266	JD7594.....	166	K285R.....	329
	266	JD1202.....	170		267		246		
	267	JD1208.....	174	JD7286.....	190		352	K286R.....	329
	327	JD1212.....	170					K291R.....	335
	328	JD1214.....	17	JD7292.....	94	JD7649.....	14	K295R.....	329
					170	JD7655.....	7	K297R.....	329
E2213.....	330	JD1215.....	95		175		12	K299R.....	329
E2218.....	330	JD1217.....	17		170		87		
E2220.....	326	JD1219.....	251	JD7295.....	174		91	K379R.....	327
	328	JD1221.....	95	JD7297.....	177		240	K381R.....	327
E2221.....	326	JD1224.....	95		266		346	K383R.....	327
E2223.....	328				267		351	K2002.....	326
		JD1225.....	17	JD7298.....	250			K2003.....	326
E2224.....	327	JD2200.....	254			JD7656.....	8		
E2225.....	328	JD7003.....	246	JD7299.....	250		12	K2006.....	326
E2227.....	330		253	JD7350.....	177		87	K2007.....	326
	331		265		266		91	K2010.....	327
E2228.....	327	JD7008.....	250	JD7351.....	267		240	K2019.....	23
E2229.....	18	JD7100.....	254		266		351	K2024.....	101
	96			JD7353.....	267				327
	326	JD7164.....	265		170	JD7657.....	8	K2025.....	326
		JD7205.....	22				12	K2037.....	329
E2230.....	326		100	JD7354.....	159		87	K2049.....	161
E2231.....	327		177		165		91	K2052.....	29
E2234.....	330	JD7207.....	255	JD7354.....	93		240		106
E2244.....	16	JD7210.....	266	JD7356.....	99		346		239
	31	JD7214.....	167		159		351		247
	94		266		177	JD7658.....	240		345
	108		267	JD7358.....	190	JD7663.....	22	K2069.....	352
E2245.....	159				6	JD7664.....	14		159
	326	JD7216.....	21		156		29		246
			99		159		92	K2073.....	326
E2246.....	327		174		165		106	K2080.....	6
E2247.....	326		254		177		267	K2117.....	327
E2248.....	328	JD7219.....	174	JD7361.....	16	JD7665.....	14	K2119.....	33
E2250.....	328		254	JD7364.....	100	JD7670.....	266		34
E2251.....	326	JD7220.....	21						334
		JD7222.....	99	JD7365.....	94	JD7672.....	14	K2136.....	326
E2252.....	329			JD7366.....	94	JD7673.....	14		
E2253.....	330	JD7223.....	190	JD7367.....	15	JD7675.....	168	K2142.....	327
E2257.....	329				93	JD7677.....	93	K2172.....	160
E2258.....	326	JD7224.....	21	JD7374.....	170		350		241
E2259.....	327		99	JD7376.....	250				347
			174			JD7678.....	92	K2185.....	327
E2260.....	328		254	JD7379.....	15	JD7679.....	106	K2190.....	329
E2262.....	328	JD7225.....	167	JD7381.....	16		22		
E2263.....	330	JD7226.....	99	JD7401.....	159		248	K2191.....	329
E2266.....	328		175		165	JD7680.....	15	K2198.....	98
E2268.....	330		254	JD7402.....	99		248		99
			266		159				157
E2269.....	328	JD7231.....	267		177	JD7691.....	168	K2316.....	330
E2270.....	326		190	JD7404.....	93	JD7751.....	28		331
E2271.....	327	JD7236.....					106	K2318.....	330
E2272.....	31		94	JD7405.....	15		264	K2330.....	331
	108	JD7242.....	170		93	JD7752.....	182		331
	328		175	JD7408.....	94			K2342.....	328
E2274.....	330			JD7411.....	15			K2371.....	191
		JD7245.....	16	JD7412.....	16			K2396.....	328
E2275.....	330	JD7246.....	94	JD7479.....	248			K2452.....	328
E2276.....	330		174					K2457.....	329
E2282.....	330	JD7247.....	174						
E2290.....	194	JD7248.....	250						
	334								
E2292.....	327								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
K2480	328	321R	6	1492R	37	1613R	36	1670R	33
K2525	332		86		38		112		34
	19		105		109		113		110
	22		157		113		196		111
	85		185		114		197		187
	97		187	1493R	37		273		194
	99		261		38	1614R	35		195
	157		262		113		36		196
	162		328		114		112		
K2573	10		355		199		197	1671R	33
	88	327R	12		330		273		34
	167		90	1494R	37		35		110
	172	372R	165		38	1615R	36		111
	240		245		114		197		194
	243		351		333		273		195
	346						333	1672R	34
K2594	160			1495R	198	1616R	333		110
K2807	331	405R	29		199				194
			106		275	1618R	273		196
K2852	329		266		276	1619R	112		333
K2853	329		267	1499R	333		197	1673R	196
K2855	329	485R	238	1506R	37	1620R	36		334
K2856	329	508R	258		38		112	1674R	33
K2858	329		331		113		113		110
					114		273		111
K3054	330				198		333		194
K3083	5	629R	7		199				270
	14		8		274	1621R	35	1675R	334
	85		12	1507R	38		36		
	93		24	1508R	114		197	1676R	33
K3090	246		28		275		273		34
K3146	326		87			1622R	35		110
K3147	326		90	1511R	114		36		111
			102	1512R	37		112		271
K3148	326		154		38		113	1677R	110
K3151	8		160		114		197	1679R	111
	32		178		198		273	1682R	33
	88		185		199				34
	106		267		275	1623R	36		111
	160		326	1513R	37		112		194
	193		351		38		196		195
	241		353		113		197		269
	257				114		273		270
		684R	175		198	1624R	197	1683R	33
			249		199		271		34
		764R	255	1514R	37		273		110
		802R	273		114		333		111
		944R	273		199				194
M21	36				275	1625R	36		195
	112			1515R	37		196		270
	197				114		197		334
	273	1077R	264		275		273		
M23	116	1146R	265				333	1684R	33
	200		167	1516R	38	1626R	196		34
M25	196	1215R	248		114	1628R	197		110
M37	330		115		199				111
			155	1517R	275	1629R	333		194
			333		39	1634R	35	1685R	195
		1304R	168		112		112		34
			199	1518R	115	1635R	333		111
					351	1636R	36		194
14R	157	1383R	193	1520R	38		112		195
27R	19		268		276	1637R	273	1686R	334
	97	1417R	334		39		35		195
	164	1439R	350		115	1638R	273		269
	166				198	1639R	36	1688R	271
	178				199	1640R	35		110
	189	1450R	8		274		36	1700R	269
	246		12	1521R	39		112		334
	351		31		115		273	1704R	333
	356		91		115	1642R	273	1705R	18
56R	94		108		199	1651R	273		96
	190		157		275				159
	237		162	1523R	333	1666R	33		179
	238		167	1530R	351		34		326
	345		170	1535R	328		110	1706R	172
79R	248		243		274		111		333
86R	238		334	1561R	275		194	1707R	246
		1452R	5		200	1667R	33		351
			11	1563R	276		110	1708R	331
92R	239		31		189		111		
	267		85	1580R	264		269	1713R	191
	344		90	1584R	356		270	1716R	330
107R	106		106					1719R	177
	108		108			1668R	33		255
	258		162				34	1721R	40
	353		236	1592R	277				116
	258		334	1598R	196	1669R	33		200
135R	353	1454R	159		272		34		277
	258		189	1610R	112		110	1722R	40
264R	238	1460R	351		333		194		116
	346	1472R	333		333		195		187
				1611R	35		196		200
293R	240				36				277
294R	5	1476R	166		112				
	23	1483R	159		197				
	100				198				
	154				273				
	157								
	244								
	255								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
1723R	40 116 277 334	1881R	40 116 277	2490R	192 268 274	28531	260 354 260	8695	258 353
1724R	40 116 200 277	1882R	40 116 200 277	2532R	334 332 333	29347	260 355 260	8707	258 353
1725R	116	1892R	36 113	2568R	37 113	29529	355 260	8871	258
1726R	40 116 200 277 334	1893R	36 198 272 274	71W	193	50089	260 355	8873	258 353
1727R	277	1894R	274	MODEL D, W AND W _{sp} MAGNETO Impulse Starter		Magnetto Parts		8888	258
1728R	40 116 200 277	1903R	198 274			43	258 354	8905	258
1729R	40 116 200 277	1922R	113 198	1212	260 354	74	258 353	9228	258
1730R	40 116 200 277	1927R	113 198	1672	260 354	180	258 353	9366	258
1731R	40 116 200 277	1928R	113 198 274	2139	260 354	224	258 353	9432	258 353
1732R	40 116 200 277	1929R	197 198 274	3033	260 354	225	258 353	9433	259
1733R	40 116 200 277	1930R	36 113 198	3040	260 354	227	258 353	9588	259
1735R	40 116 200 277	1931R	113 198	3258	260 259	293	258 353	9603	259
1736R	40 116 200 277	1932R	36 113 274	3782	260 259	2979	258 353	9968	259
1737R	40 116 200 277	1935R	35 36 113 198	8976	354 260 354	1638	258 353	10048	259 353
1738R	40 116 200 277	1938R	36	13746	260 354	2710	258 353	14249	259
1741R	40 116 200 277	1939R	113	16769	260 354	2918	258 353	14264	259
1742R	40 116 200 277	1940R	198	18404	259	3107	258 353	14566	259
1743R	40 116 200 277	1944R	274	18495	260	3378	258 353	14724	259
1744R	40 116 200 277	1959R	198	18605	260 354	3396	258 353	14752	259
1745R	40 116 200 277	1970R	198	18608	260 354	3398	258 353	14757	259
1746R	40 116 200 277	1971R	37 113 274	18609	260 354	3399	258 353	14761	259
1747R	40 116 200 277	2152R	258 353	18610	260 354	3494	258 353	14762	259
1748R	40 116 200 277	2166R	237 200	18612	260 354	3495	258 353	14791	259
1749R	40 116 200 277	2188R	164 238	18615	260 354	3496	258 353	14846	259
1750R	40 116 200 277	2205R	40 116 200	18616	260 354	3496	258 353	14847	259
1751R	40 116 200 277	2215R	40 116 200	18617	260 354	3703	258 353	14874	259
1752R	40 116 200 277	2226R	93 160	18618	260 354	3782	258 353	16774	259
1753R	40 116 200 277	2234R	271 272	18619	260 354	3794	258 353	17537	259
1754R	40 116 200 277	2270R	196 196	18620	260 354	3796	258 353	18333	259
1755R	40 116 200 277	2313R	167 248	18633	260 355	4130	258 353	18832	259
1756R	40 116 200 277	2323R	113 37	18637	260 354	4212	258 353	19109	259
1757R	40 116 200 277	2324R	113 37	18640	260 354	4555	258 353	20232	259
1758R	40 116 200 277	2326R	37 113 198	18644	260 355	5631	258 353	26334	259
1759R	40 116 200 277	2334R	37 113 198	18656	260 355	7600	258 353	27130	259
1760R	40 116 200 277	2336R	274 92	18661	260 260	8001	258 353	27155	259
1761R	40 116 200 277	2338R	274 277	18662	260 260	8053	258 353	27196	259
1762R	40 116 200 277	2364R	32 193 267	18663	260 260	8070	258 353	27397	259
1763R	40 116 200 277	2387R	245 245	18664	260 260	8097	258 353	27398	259
1764R	40 116 200 277	2389R	245 245	18665	260 260	8104	258 353	27406	259
1765R	40 116 200 277	2392R	113 198	18666	260 260	8112	258 353	27408	259
1766R	40 116 200 277	2393R	274 37	18667	260 260	8122	258 353	27421	259
1767R	40 116 200 277	2394R	113 198	18687	260 260	8285	258 353	27422	259
1768R	40 116 200 277	2395R	274 37	18688	260 260	8338	258 353	28400	259
1769R	40 116 200 277	2396R	274 37	19124	260 355	8408	258 353	28438	259
1770R	40 116 200 277	2397R	274 37	19327	260 260	8445	258 353	28439	259
1771R	40 116 200 277	2398R	274 37	20624	260 354	8460	258 353	28444	259
1772R	40 116 200 277	2399R	274 37	27421	260 260	8461	258 353	28463	259
1773R	40 116 200 277	2400R	274 37	27810	260 354	8559	258 353	28539	259
1774R	40 116 200 277	2401R	274 37	27974	260 354	8560	258 353	29381	259
1775R	40 116 200 277	2402R	274 37	27981	260 355	8561	258 353	29382	259
1776R	40 116 200 277	2403R	274 37	28527	260 260	8562	258 353	29383	259

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
33158	259	B452	105	SI-18	27	31W	261	67W	28
	354	B453	105		105		262		105
35238	259	B456	105		185	33W	261		185
	354	B457	27		187		262		187
			105		260				263
36034	259		262		261	34W	261		355
	354		355		262				
36035	259	B459	105		263	35W	262	68W	28
	354				355		261		105
36046	259	B460	105	UW	261		262		185
	354	B855	105	WD322	260	36W	261		187
36048	259	BW	261	WD323	260	37W	261		263
	354	C2500	185	WD329	261		262		355
36051	259		262			38W	261	69W	28
	354		355	WD330	261		262		105
		C2501	27	WD332	261				185
36052	259		105	WD333	261	39W	261		187
	354		185	X100A	261		262		263
36063	259		187	X1814	261	40W	261		355
	354		262				262	70W	28
36066	259		355	X1882	261	41W	27		105
	354			X1940	261		105		185
36164	259	C2502	27	X2458	27		185		187
	354		105		105		187		261
	354		185		186		261		262
37489	259		187		187		262		263
	354		262		263		263		355
			355	X2460	355	42W	355	71W	28
50089	259	C2503	185		27		261		105
	354		187		105	43W	262		185
50119	259	C2504	27		186		261		187
	354		185		187				263
50639	259		187		263	44W	261		355
	354		262	X2461	355		262	72W	28
52252	259		355		27	45W	28		105
	354				105		105		185
55056	259	C2505	27		186		185		187
	354		185		187		187		263
			187	X2462	27		261		355
			262		105		262	73W	28
			355		186		263		105
		C2506	27		187	46W	355		185
			185		263		28		187
			187		355		187		263
		C2507	263	X2487	186		261	74W	355
			355		263		262		28
		C2508	185	XW	261		263		105
		D392	27	18-O	27		355		185
			105		105	47W	261		187
			263		185	48W	261		263
		D2530	27		187		262	75W	355
			263		261				28
			355		262				105
		EW	261		263	49W	262		185
					355	50W	262		187
		FW	261	18-P	261	51W	262		263
		HW	261			52W	262		355
		JW	261	4W	27	55W	262	76W	28
		KW	261		105				185
		MW	261		185				187
					187	57W	28		263
		NW	261		261		105		355
		P348	27		262		185	77W	28
A832	27		185		263		187		105
AA200	27		187		355		262		185
AA219	27		260	5W	261		263		187
AA578	27		261	6W	261		355		263
AA580	27		262		262	58W	262		355
			263	8W	261	59W	262		
AA581	27		355	10W	27	60W	262	78W	28
AA743	27		260		105	61W	262		105
AA744	27	S82	185		185				185
AB237	105	S83	260		187				187
AB331	105	S87	260		261	63W	28		263
					262		105		355
AB332	105	S359	260		263		185	79W	28
AC174	184	S1121	27		355		262		105
AC610	185		105				263		185
AC725	186		185				355		187
AC999	187		187	11W	261		28		263
			260		262	64W	185		355
AD107	260		262	12W	261		187	80W	28
AD287	261		263	15W	261		262		105
AD411	262		355	16W	261		263		185
AD830	262	S1276	260	17W	27		355		187
AD1330	262	S1392	260		105	65W	28		263
		S1480	260		185		105	81W	355
					187		185		28
B449	27	S1490	260		261		187		105
	262		261		262		263		185
	355		262		332		355		187
B450	27	S29D	260		355		263		263
	105					66W	262		355
	262								
	355			20W	261				
B451	105			21W	261				
	262			30W	261				
	355								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
83W	28 105 186 187 263 355	90W	28 105 186 187 263 355	92W	186 263	95W	28 186 187	123W	263 355
				93W	186 187			321R	28 105
				94W	28 105	96W	186 263		185
85W	28 105 186 187 263 355	91W	28 105 186 187 263 355		186 187 263 355	97W	28 186 187 263 355		187 261 262 263
						121W	263 355		

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

MEMORANDUM

MEMORANDUM

JOHN DEERE TRACTOR CO.

REPAIR CATALOG

No. 45-R

FOR

JOHN DEERE

TRACTORS

AND

ENGINES

EFFECTIVE AUGUST 15, 1936

JOHN DEERE TRACTOR CO.

WATERLOO, IOWA, U. S. A.

SUPERSEDES ALL PREVIOUS EDITIONS

JOHN DEERE TRACTOR CO.

Supplement to
REPAIR CATALOG
No. 45-R

FOR

JOHN DEERE
TRACTORS

AND

ENGINES

RECEIVED
APR 23 1938
PATENT DEPT.

EFFECTIVE MARCH 15, 1938

Copyright, 1938

by

JOHN DEERE TRACTOR CO.

WATERLOO, IOWA, U. S. A.

File with Repair Catalog No. 45-R



JOHN DEERE TRACTOR CO.

Supplement to

REPAIR CATALOG

No. 45-R

FOR

JOHN DEERE
TRACTORS

AND
ENGINES

EFFECTIVE MARCH 15, 1938

JOHN DEERE TRACTOR CO.

WATERLOO, IOWA, U. S. A.

Instructions for Ordering Parts

First. Always give serial number of tractor, engine or power lift when ordering repairs.

Second. Give number and name of each part ordered. If in doubt as to correct name and number, send dimensioned sketch or return broken parts, charges prepaid.

Third. Orders for parts should be written separately from correspondence.

Fourth. State whether shipments are to be forwarded by Freight, Express, or Parcel Post. Telegraph orders will be shipped Express or Parcel Post unless otherwise instructed.

NUMERICAL TELEGRAPHIC CODE

The following code may be used to transmit numerals in telegrams.

Each numeral is designated by a letter as follows:

1	2	3	4	5	6	7	8	9	0
Q	U	I	C	K	T	R	A	D	E

Use the letter X to separate prefix or suffix letters from the code letters.

Example: Express 10 AD-315, 20 X-429

Telegram will read: Express ten ADXIQR twenty XXCUD


The telegraph companies count a group of five letters or less as one word, and six to ten letters as two words. When a straight message can be transmitted in ten words or less, do not use code. It should rarely be necessary to use code words in a day letter or night letter, although this is permissible.

INDEX

For Model "AO" Streamlined Tractor

AO
Streamlined

SUBJECT	Page	SUBJECT	Page
Air Cleaner.....	19	Hardware List.....	20-25
Brakes, Differential.....	12	Hood.....	7
Breather, Crank Case.....	6	Illustrations of Parts.....	26
Cam Followers.....	5	Lubricating System and Oil Pump... 6	
Cam Shaft.....	4	Magneto.....	15
Carburetor.....	18	Magneto Parts.....	15-18
Casting Numbers.....	25	Manifold.....	4
Clutch Fork Bearing and Pulley Brake.....	9	Muffler.....	5
Clutch Parts.....	9	Oil Filter and Indicator.....	6
Connecting Rods.....	4	Oil Pipes and Fittings.....	7
Controls.....	6	Overdrive Gear and Shaft and First Reduction Gear.....	10
Cooling System.....	8	Overdrive Idler Gear.....	10
Countershaft.....	11	Pistons, Connecting Rods and Crank- shaft.....	4
Cowl and Fenders.....	15	Platform.....	14
Crank Case Ventilator.....	6	Power Shaft Parts.....	19
Crankshaft.....	4	Pulley.....	9
Cylinder.....	4	Radiator Guard, Curtain, Shutter and Shutter Controls.....	8
Cylinder Head, Manifold and Valves.. 4		Seat.....	14
Differential.....	11	Sliding Gear Shaft.....	10
Drawbar.....	14	Steering Parts.....	14
Engine.....	3	Tappets.....	5
Fan.....	8	Tool Box and Tools.....	19
Fenders.....	15	Transmission Case.....	3
Final Drive.....	11	Valves.....	4
Front Axle and Front End Support... 13		Wheel Equipment, Rear.....	12
Front Wheels and Front Wheel Equipment.....	13	Wheels, Rear.....	12
Fuel System.....	7		
Gear, Overdrive and First Reduction.. 10			
Gear Shift.....	10		
Gear Shift, Overdrive.....	10		
Governor.....	5		

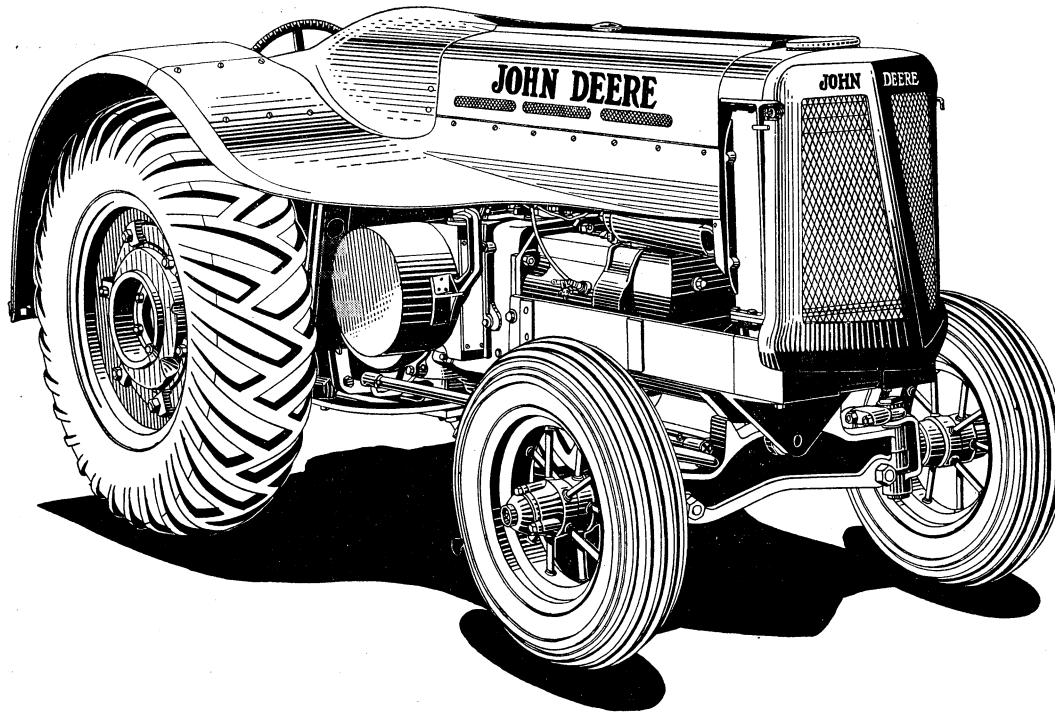

John Deere Model "AO" Streamlined Tractor

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
TRANSMISSION CASE			
A284	Stud, L. H. Main Bearing	AO-1000-	1
A399	Gasket, Transmission Case Cover	AO-1000-	1
AA741	Cover, A1123R, with Gear Shift Interlock (Underdrive) Transmission Case	AO-1000-	1
AA823	Cover, Transmission Case, with Gear Shift Interlock	AO-1000-	1
AA843	Case, A1141R, Transmission, Main	AO-1000-	1
C719	Stud, Cylinder to Case	AO-1000-	1
D463	Welch Plug, Transmission Cover	AO-1000-	1
E2142	Pipe Plug, Transmission Case Drain	AO-1000-	1
E2142	Pipe Plug, Crank Case Drain	AO-1000-	1
JD7759	Alemite Zerk Fitting, No. 1610, Steering Shaft Lower Bushing	AO-1000-	10
K3083	Stud, Gear Cover to Case	AO-1000-	1
294R	Stud, Steering Housing to Case	AO-1000-	1
1452R	Pipe Plug, Power Shaft Shifter Hole	AO-1000-	1
ENGINE			
A191	Bolt, R. H. Main Bearing	AO-1000-	1
A256	Bolt, L. H. Main Bearing	AO-1000-	1
A302	Shim, L. H. Main Bearing, Laminated	AO-1000-	1
A424	Gasket, L. H. Main Bearing Cover	AO-1000-	1
A902	Cover, Crank Case	AO-1000-	1
A903	Gasket, Crank Case Cover	AO-1000-	1
A1147	Gasket, L. H. Main Bearing Housing	AO-1000-	1
A1671	Shim, R. H. Main Bearing, Laminated	AO-1000-	1
A1672R	Cover, L. H. Main Bearing	AO-1000-	1
AA244	Spacer, Flywheel with D2124 Cork Washer	AO-1000-	1
AA397	Bushing, L. H. Main Bearing (2 Halves)	AO-1000-	1
AA1305	Flywheel, A1662R, with Bolts and Driving Pin	AO-1000-	1
AA1309	Main Bearing Housing, A1663R, with Cap, R. H.	AO-1000-	1
AA1310	Main Bearing Housing, A1664R, with Cap, L. H.	AO-1000-	1
AA1349	Bushing, R. H. Main Bearing (2 Halves)	AO-1000-	1

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
ENGINE—Continued			
C981	Bolt, Flywheel	AO-1000-	1
D1080	Screw, Flywheel Locating	AO-1000-	1
D2009	Pin, Flywheel Spacer Driving	AO-1000-	1
D2124	Cork Washer, Flywheel Spacer	AO-1000-	1
E2142	Pipe Plug, Crank Case Oil Drain	AO-1000-	1
E2142	Pipe Plug, L. H. Main Bearing Housing	AO-1000-	1
PISTONS, CONNECTING RODS, CRANKSHAFT			
A103	Crankshaft Gear	AO-1000-	1
A303	Shim, Connecting Rod, Laminated	AO-1000-	1
A319	Lock Screw, Piston Pin (Set Screw Type)	AO-1000-1061	1
A1507	Snap Ring, Piston Pin	AO-1062-	1
AA382	Connecting Rod Bolt with Nut and Cotter	AO-1000-	1
AA463	Connecting Rod, A107, Complete	AO-1000-	1
AA463	"Exchange" Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange" Rods that are not accompanied with Old Rod will be filled with New Rods and billed at full price.		
AA840	Piston, with Rings (Std.) (Set Screw Type)	AO-1000-1061	1
AA1303	Crankshaft, A1660R, with Gear	AO-1000-	1
AA1381	Piston, with Rings (Std.) (Snap Ring Type)	AO-1062-	1
AA1422	Piston Ring (Set of 10)	AO-1000-	1
AA1572	Piston with Rings (.045" Oversize) (Set Screw Type)	AO-1000-1061	1
AA1573	Piston with Rings (.045" Oversize) (Snap Ring Type)	AO-1062-	1
AA1574	Piston Ring (.045" Oversize) (Set of 10)	AO-1000-	1
AA1607	Ring, Oil Control	AO-1000-	1
AA1620	Pin, Piston (Set Screw Type) (Set of 2)	AO-1000-1061	1
AA1621	Pin, Piston (Snap Ring Type) (Set of 2)	AO-1062-	1
AA1622	Pin, Piston (.005" Oversize) (Set Screw Type) (Set of 2)	AO-1000-1061	1
AA1623	Pin, Piston (.005" Oversize) (Snap Ring Type) (Set of 2)	AO-1062-	1
AA1626	Bushing, Piston Pin	AO-1000-	1
D342	Woodruff Key in Crankshaft Gear	AO-1000-	1
CYLINDER			
A426	Gasket, Cylinder to Case	AO-1000-	2
AA437	Cylinder, A732R, with Studs	AO-1000-	2
AA535	Cylinder Block, with Pistons and Gaskets	AO-1000-1061	2
AA1312	Cock, Compression Relief	AO-1000-	2
AA1481	Cylinder Block, with Pistons, Gaskets, etc.	AO-1062-	2
C719	Stud, Cylinder to Case	AO-1000-	1
C1823	Stud, Cylinder Head	AO-1000-	2
CYLINDER HEAD, MANIFOLD, VALVES			
A35R	Guide, Valve	AO-1000-	2
A125	Stud, Manifold, Medium, 7/16"x5-5/8"	AO-1000-	2
A130	Lock Washer (Half) Valve Stem	AO-1000-	2
A245	Cap, Valve Spring	AO-1000-	2
A356	Spring, Valve	AO-1000-	2
A404	Gasket, Cylinder Head	AO-1000-	2
A405	Gasket, Manifold	AO-1000-	2
A454	Valve, Intake	AO-1000-	2
A588	Valve, Exhaust	AO-1000-	2
A933	Pipe, Cylinder Head Water Inlet	AO-1000-	2
A1003R	Manifold	AO-1000-	2
A1004	Stud, Manifold, Left, 7/16"x6-1/2"	AO-1000-	2
AA464	Cylinder Head, A587R, with Valve Guides	AO-1000-	2
AA465	Cylinder Head, A587R, with Valves and Springs	AO-1000-	2
AA1615	Sleeve, Push Rod (Set of 2)	AO-1000-	2
AA1652	Lead Washer, Cylinder Head Stud	AO-1000-	2
B359	Stud, Manifold, Short, 7/16"x4-3/4"	AO-1000-	2
B504	Stud, Manifold, Long, 7/16"x5-7/8"	AO-1000-	2
E2142	Plug, Cylinder Head Drain	AO-1000-	2
921R	Gasket, Carburetor to Manifold	AO-1000-	2
CAM SHAFT			
A119	Stud, Cam Shaft Gear	AO-1000-	2
A253	Plate, Cam Shaft Gear Locking	AO-1000-	2
A355	Spring, Cam Shaft Thrust	AO-1000-	2
A425	Gasket, Cam Shaft Bearing Housing	AO-1000-	2
A487	Cap Screw, Cam Shaft Gear Lock Plate	AO-1000-	2

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CAM SHAFT—Continued			
A1142	Cam Shaft.....	AO-1000—	2
AA227	Housing, A31R, with Bearing Cup, Cam Shaft, Left.....	AO-1000—	2
AA1047	Gear, Cam Shaft, with Stud and Nut.....	AO-1000—	2
JD7250	Cup, Cam Shaft Bearing.....	AO-1000—	2
JD7358	Cone, Cam Shaft Bearing.....	AO-1000—	2
CAM FOLLOWERS			
A178	Support, Cam Follower Guide.....	AO-1000—	2
A1595R	Guide, Cam Follower.....	AO-1000—	2
AA958	Cam Follower.....	AO-1000—	2
TAPPETS			
A105	Lever, Tappet.....	AO-1000—	2
A172	Nut, Tappet Oiler Pipe Packing.....	AO-1000—	2
A173	Nut, Tappet Lever Stud.....	AO-1000—	2
A176	Stud, Tappet Lever Bracket.....	AO-1000—	2
A234	Spacer, Tappet Lever Shaft.....	AO-1000—	2
A260	Washer, Tappet Lever Shaft.....	AO-1000—	2
A403	Gasket, Tappet Lever Cover.....	AO-1000-1422	2
A437	Washer, Tappet Lever Bracket Stud.....	AO-1000—	2
A439	Packing Washer, Tappet Oiler Pipe (12 used).....	AO-1000—	2
A601	Shaft, Tappet Lever.....	AO-1000—	2
A602	Snap Ring, Tappet Lever Shaft.....	AO-1000—	2
A772	Nut, Tappet Lever Cover (Acorn).....	AO-1000—	2
A1193	Pipe, Tappet Lever Oiler.....	AO-1000-1422	2
A1290	Rod, Tappet.....	AO-1000—	2
A1291	Adjusting Screw, Tappet Lever.....	AO-1000—	2
A1574	Bushing, Tappet Oiler Pipe.....	AO-1000—	2
A1575	Gasket, Tappet Lever Cover.....	AO-1423—	2
A1819	Pipe, Tappet Lever Oiler.....	AO-1423—	2
AA229	Cover, Tappet Lever with Oil Trough.....	AO-1000—	2
AA1652	Lead Washer, Tappet Lever Stud.....	AO-1000—	2
D376	Spring, Tappet Lever Spacer.....	AO-1000—	2
MUFFLER			
AA1286	Muffler, Complete.....	AO-1000—	3
GOVERNOR			
A41R	Housing, Left Governor Bearing.....	AO-1000—	3
A73R	Gear, Governor Drive.....	AO-1000—	3
A369	Snap Ring, Governor Shaft.....	AO-1000—	3
A428	Gasket, Left Governor Bearing Housing (Thick).....	AO-1000—	3
A584	Spring, Governor Bearing.....	AO-1000—	3
A1171	Gasket, L. H. Governor Bearing (Thin).....	AO-1000—	3
A1172	Shaft, Governor.....	AO-1000—	3
A1174R	Gear, Fan Drive Bevel.....	AO-1000—	3
A1175	Shaft, Governor Lever.....	AO-1000—	3
A1183	Gasket, Governor Case.....	AO-1000—	3
A1241R	Arm, Governor.....	AO-1000—	3
AA813	Case, Governor, A1170R, with Lever Shaft Bushing.....	AO-1000—	3
AA814	Sleeve, Governor Shaft.....	AO-1000—	3
AC667	Weight, Governor.....	AO-1000—	3
B271	Lever, Inside Governor.....	AO-1000—	3
B274	Clamp, Speed Change Spring.....	AO-1000—	3
B276	Snap Ring, Governor Bearing.....	AO-1000—	3
B280	Washer, Governor Bearing Spring.....	AO-1000—	3
B281	Flange, Magneto Drive.....	AO-1000—	3
B432	Bushing, Governor Lever Shaft (Upper).....	AO-1000—	3
C902	Governor Weight Pin.....	AO-1000—	3
C998	Bearing, Governor Thrust.....	AO-1000—	3
D342	Woodruff Key, in Governor Drive Gear and Magneto Flange.....	AO-1000—	3
D342	Woodruff Key, Fan Drive Bevel Gear.....	AO-1000—	3
JD7655	Cup, Governor Shaft Bearing, L. H. and R. H.....	AO-1000—	3
JD7656	Cone, Governor Shaft Bearing, L. H. and R. H.....	AO-1000—	3
JD7657	Balls and Retainer, Governor Shaft Bearing, L. H. and R. H.....	AO-1000—	3

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CONTROLS			
A80R	Lever, Speed Control, Hand.....	AO-1000-	3
A241	Washer, Speed Control Shaft, Upper.....	AO-1000-	3
A586	Washer, Speed Control Shaft, Lower.....	AO-1000-	3
A908	Rod, Clutch Operating.....	AO-1000-	3
A944R	Bracket, Speed Control Shaft.....	AO-1000-	3
A958	End, Speed Control Rod.....	AO-1000-	3
A1188	Rod, Carburetor Throttle.....	AO-1000-	3
A1197	Bushing, Clutch Lever Pivot.....	AO-1000-	3
A1680R	Bracket, Clutch Lever.....	AO-1000-	3
A1681	Bolt, Clutch Operating Hand Lever Pivot.....	AO-1000-	3
A1682	Link, Clutch Lever Spring.....	AO-1000-	3
A1735	Shaft, Speed Control.....	AO-1000-	3
A1736	Support, Steering Shaft Rear.....	AO-1000-	3
A1737	Rod, Speed Control.....	AO-1000-	3
A1785	Spring, Control Lever (Radiator Shutter).....	AO-1000-	6
AA1320	Lever, Clutch Operating Hand, with Pivot Bushing.....	AO-1000-	3
B273	Spring, Speed Change, Flat.....	AO-1000-	3
B274	Clamp, Speed Change Spring.....	AO-1000-	3
C485	Clip, Brake Lever Spring.....	AO-1000-	3
C1224	Spring, Brake Pedal.....	AO-1000-	3
C1438	Spring, Speed Control Shaft.....	AO-1000-	3
D157	End, Throttle Rod.....	AO-1000-	3
D393R	Yoke, Clutch Operating Rod.....	AO-1000-	3
D1994	Pin, Clutch Operating Rod Yoke.....	AO-1000-	3
D1994	Pin, Clutch Operating Hand Lever to Rod.....	AO-1000-	3
E2057	Washer, on Speed Control Rod.....	AO-1000-	3
E2057	Washer, on Throttle Rod.....	AO-1000-	3
K3151	Washer, Speed Control.....	AO-1000-	3
CRANK CASE BREATHER			
AA551	Breather Stack, Complete.....	AO-1000-	3
D1951	Gasket, Filter Core.....	AO-1000-	3
D1952	Core, Breather Filter.....	AO-1000-	3
CRANK CASE VENTILATOR			
A535	Packing, Ventilator Pipe.....	AO-1000-	3
A1190	Pipe, Ventilator.....	AO-1000-	3
C1705	Packing Nut, Ventilator Pipe.....	AO-1000-	3
LUBRICATING SYSTEM—OIL PUMP			
A1596	Gear, Oil Pump Top Drive.....	AO-1000-	4
A1597R	Bearing, Oil Pump Top Drive Gear.....	AO-1000-	4
A1598	Gasket, Oil Pump Drive Gear Bearing.....	AO-1000-	4
A1599	Shaft, Oil Pump Drive.....	AO-1000-	4
AB284	Strainer, Screen, Complete, Oil Pump.....	AO-1000-	4
B241R	Body, Oil Pump.....	AO-1000-	4
B243	Gear, Oil Pump Drive Bottom.....	AO-1000-	4
B244	Shaft, Oil Pump Idler Gear.....	AO-1000-	4
B245	Gear, Oil Pump Idler.....	AO-1000-	4
B246	Gasket, Oil Pump Cover.....	AO-1000-	4
B247	Cover, Oil Pump.....	AO-1000-	4
B250	Coupling, Oil Pump Drive Shaft.....	AO-1000-	4
B251	Gasket, Oil Pump Body to Case.....	AO-1000-	4
E2207	Key, Oil Pump Drive Shaft.....	AO-1000-	4
OIL FILTER AND INDICATOR			
A518	Stud, Oil Filter.....	AO-1000-	4
A519	Gasket, Oil Filter Bottom.....	AO-1000-	4
A520	Nut, Oil Filter Bottom.....	AO-1000-	4
A521	Gasket, Oil Filter Bottom Nut.....	AO-1000-	4
A522	Bottom, Oil Filter.....	AO-1000-	4
A523	Spring, Oil Filter Bottom.....	AO-1000-	4
A1149	Gasket, Oil Filter Head to Filter Body.....	AO-1000-	4
A1151	Gasket, Oil Filter Head Cover.....	AO-1000-	4
A1152	Body, Oil Filter.....	AO-1000-	4
A1196	Clip, Oil Pressure Regulating Valve Relief Spring.....	AO-1000-	4
A1278	Bushing, Filter Head Cover, Oil Pressure Regulating Valve.....	AO-1000-	4
A1279R	Head, Oil Filter.....	AO-1000-	4
A1280	Spring, Oil Pressure Regulating Valve (Coil).....	AO-1000-	4
A1713	Clamp, Oil Indicator.....	AO-1000-	4
AA357	Oil Filter Element.....	AO-1000-	4
AA824	Leaf Spring with Centering Button, Oil Pressure Regulating Valve.....	AO-1000-	4

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
OIL FILTER AND INDICATOR—Continued			
AA861	Cover, with Bushing and Relief Spring, Oil Filter Head.....	AO-1000-	4
AA1730	Gauge, Complete, Oil Indicator.....	AO-1000-	4
AB326	Leaf Spring with Centering Button, Oil Filter.....	AO-1000-	4
B430	Button, Oil Filter By-Pass Valve Leaf Spring.....	AO-1000-	4
B438	Clip, Oil Filter Leaf Spring.....	AO-1000-	4
B439	Spring, Filter Head By-Pass (Coil).....	AO-1000-	4
D2427	Screw, Pressure Regulating.....	AO-1000-	4
K2573	Washer, Oil Filter Bottom Nut.....	AO-1000-	4
OIL PIPES AND FITTINGS			
A374	Nut, Solder Bushing, Governor Oil Line.....	AO-1000-	4
A465	Body, Solder Bushing, Oil Gauge Line.....	AO-1000-	4
A1252	Bushing, Solder, Oil Gauge Line to Governor Case.....	AO-1000-	4
AA802	Oil Line, Pump Discharge.....	AO-1000-	4
AA819	Oil Line, Governor.....	AO-1000-	4
AA1282	Oil Line, R. H. Main Bearing.....	AO-1000-	4
AA1283	Oil Line, L. H. Main Bearing.....	AO-1000-	4
AA1284	Oil Line, Indicator.....	AO-1000-	4
B258	Nut, Solder Bushing, 1/2", Oil Pump Discharge Line.....	AO-1000-	4
B259	Gland, Solder Bushing, 1/2", Oil Pump Discharge Line.....	AO-1000-	4
D392	Body, Solder Bushing, Main Bearing Oil Lines.....	AO-1000-	4
D392	Body, Solder Bushing, Indicator Oil Line.....	AO-1000-	4
D417	Elbow, Oil Line, Governor Case to Indicator.....	AO-1000-	4
D793	Body, Crankcase Oil Level Cock.....	AO-1000-	4
D794	Plug, Crankcase Oil Level Cock.....	AO-1000-	4
D1935	Gland, Solder Bushing, on Governor Oil Line.....	AO-1000-	4
D2440	Body, Solder Bushing, Oil Pump Discharge Line.....	AO-1000-	4
E2149	Nut, Solder Bushing, Main Bearing Oil Lines.....	AO-1000-	4
E2149	Nut, Solder Bushing, Indicator Oil Line.....	AO-1000-	4
E2150	Gland, Solder Bushing, Main Bearing Oil Lines.....	AO-1000-	4
E2150	Gland, Solder Bushing, Indicator Oil Line.....	AO-1000-	4
1469R	Oil Indicator Pipe Coupling.....	AO-1000-	...
FUEL SYSTEM			
A1013	Cushion, Fuel Tank Front Support.....	AO-1000-	4
A1014	Cushion, Fuel Tank Rear Support.....	AO-1000-	4
AA270	Strap, Fuel Tank.....	AO-1000-	4
AA335	Clamp, Fuel Filter Bowl.....	AO-1000-	4
AA454	Gasoline Strainer, Complete.....	AO-1000-	4
AA499	Filter, Fuel.....	AO-1000-	4
AA517	Bail, Fuel Filter Bowl.....	AO-1000-	4
AA518	Nut with Washer, Fuel Filter Adjusting.....	AO-1000-	4
AA519	Screen, Fuel Filter.....	AO-1000-	4
AA623	Gasoline Line.....	AO-1000-	4
AA624	Fuel Line.....	AO-1000-	4
AA1322	Tank, Fuel with Caps.....	AO-1000-	4
AA1324	Support, Fuel Tank, Front, with Cushion.....	AO-1000-	4
AA1325	Support, Fuel Tank, Rear, with Cushion.....	AO-1000-	4
AB609	Three-Way Cock.....	AO-1000-	4
AC1079	Body, Fuel Filter with Valve.....	AO-1000-	4
AC1080	Valve, Fuel Filter.....	AO-1000-	4
AD709	Cap, Easy-On Filler.....	AO-1000-	4
C1777	Bowl, Fuel Filter Glass.....	AO-1000-	4
C1778	Gasket, Fuel Filter Cork.....	AO-1000-	4
C2378	Body, Fuel Filter.....	AO-1000-	4
D392	Body, Solder Bushing, Fuel Line.....	AO-1000-	4
D2122	Packing Washer.....	AO-1000-	4
E2149	Nut, Solder Bushing, on Gasoline Line.....	AO-1000-	4
E2149	Nut, Solder Bushing, on Fuel Line.....	AO-1000-	4
E2150	Gland, Solder Bushing, on Fuel Line.....	AO-1000-	4
E2150	Gland, Solder Bushing, on Gasoline Line.....	AO-1000-	4
HOOD			
A1631	Bracket, Hood Clip, R. H.....	AO-1000-	5
A1632	Bracket, Hood Clip, L. H.....	AO-1000-	5
A1684	Hinge, Front Half, Cowl.....	AO-1000-	5
A1714	Strip, Dash Reinforcing.....	AO-1000-	...
AA1328	Hood, Complete.....	AO-1000-	5
AA1340	Dash and Tool Box, Complete.....	AO-1000-	5
C1573	Clip, Hood.....	AO-1000-	5

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
COOLING SYSTEM			
A51R	Tank, Radiator Bottom	AO-1000-	5
A192	Strap, Radiator	AO-1000-	5
A432	Gasket, Radiator Core, Top and Bottom	AO-1000-	5
A433	Gasket, Cylinder Water Pipe Outlet	AO-1000-	5
A434	Gasket, Radiator Water Inlet	AO-1000-	5
A446	Hose, Upper Water Pipe	AO-1000-	5
A448	Clamp, Lower Water Pipe Hose	AO-1000-	5
A448	Clamp, Upper Water Pipe Hose	AO-1000-	5
A931R	Elbow, Radiator Water Inlet	AO-1000-	5
A932	Hose, Lower Water Pipe	AO-1000-	5
A933	Pipe, Radiator Bottom Outlet	AO-1000-	5
A933	Pipe, Cylinder Head Inlet	AO-1000-	5
A1627R	Tank, Radiator Top	AO-1000-	5
A1628R	Side, Radiator, Right	AO-1000-	5
A1629R	Side, Radiator, Left	AO-1000-	5
A1634	Gasket, Retainer	AO-1000-	5
A1635R	Lever, Cam, Radiator Cap	AO-1000-	5
A1636	Pin, Cam Lever Pivot, Radiator Cap	AO-1000-	5
A1637	Stud, Filler Cap	AO-1000-	5
A1638R	Clamp Bar, Radiator Filler Cap	AO-1000-	5
A1712	Clamp, Heat Indicator	AO-1000-	5
AA396	Core, Radiator	AO-1000-	5
AA565	Pipe, Upper Water	AO-1000-	5
AA1301	Radiator Cap, with Baffle and Gasket	AO-1000-	5
AA1342	Heat Indicator	AO-1000-	5
B112	Nut, Filler Cap Stud	AO-1000-	5
D473	Gasket, Radiator Filler Cap	AO-1000-	5
RADIATOR GUARD, CURTAIN, SHUTTER AND SHUTTER CONTROLS			
A80R	Lever, Shutter Control	AO-1000-	6
A182	Roller, Radiator Curtain	AO-1000-1214	6
A189	Clip, Radiator Curtain	AO-1000-1214	6
A241	Washer, on Shutter Control Shaft	AO-1000-	6
A586	Washer, on Shutter Control Shaft	AO-1000-	6
A1225	Clip, Shutter Control Rod	AO-1000-	6
A1785	Spring, Radiator Shutter Control Lever	AO-1000-	6
A1796	Shaft, Shutter Control	AO-1000-	6
A1797	Rod, Shutter Control	AO-1000-	6
A1853	Washer, on Bell Crank and Stud	AO-1000-	6
A1854	Rivet, Bell Crank to Operating Link	AO-1000-	6
A1855	Rivet, Operating Bar to Shutter	AO-1000-	6
A1856	Spring, Shutter	AO-1000-	6
A1857	Link, Bell Crank Operating	AO-1000-	6
AA325	Curtain, Radiator	AO-1000-1214	6
AA1293	Guard, Radiator	AO-1000-1214	6
AA1429	Guard, Radiator	AO-1215-	6
AA1444	Shutter, Radiator	AO-1000-	6
AA1521	Bell Crank, Bracket and Stud	AO-1000-	6
AA1522	Bell Crank and Bushing	AO-1000-	6
AA1523	Shutter Blade and Pivot Pin	AO-1000-	6
AA1524	Operating Bar and Stud	AO-1000-	6
AA1527	Frame and Bearing Bar	AO-1000-	6
AA1528	Top Tie Bar and Bearing Bar	AO-1000-	6
B423	Spring, Radiator Curtain Roller	AO-1000-1214	6
D157	End, Shutter Control Rod	AO-1000-	6
372R	Spring, Radiator Curtain	AO-1000-1214	6
629R	Washer, Roller on Radiator Curtain	AO-1000-1214	6
629R	Washer, Control Lever Spring	AO-1000-	6
FAN			
A281	Washer, Fan Bearing Packing	AO-1000-	6
A286	Retainer, Fan Bearing Packing	AO-1000-	6
A369	Snap Ring, Fan Shaft Rear End	AO-1000-	6
A393	Packing, Fan Bearing, Rear	AO-1000-	6
A846	Spring, Fan Bearing Take-Up	AO-1000-	6
A927	Support, Fan Shaft	AO-1000-	6
A1177	Pinion, Fan Drive Bevel	AO-1000-	6
A1178	Shaft, Fan	AO-1000-	6

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FAN—Continued			
A1180R	Housing, Fan Shaft Rear Bearing	AO-1000-	6
A1181	Gasket, Fan Shaft, Rear Bearing Housing (.015" Thick)	AO-1000-	6
A1182	Gasket, Fan Shaft, Rear Bearing Housing (.006" Thick)	AO-1000-	6
A1382	Washer, Fan Shaft Support (1-1/2" Outside Diameter, 17/32" Inside Diameter)	AO-1000-	6
AA523	Fan Blades with Hub, Complete	AO-1000-	6
AA818	Housing, Front Fan Bearing, with Support Tube	AO-1000-	6
AA1299	Shroud, Fan	AO-1000-	5
AB518	Felt Washer, Front Fan Bearing	AO-1000-	6
B293	Packing, Fan Shaft Support Tube	AO-1000-	6
B296	Washer, Fan Shaft Bearing Packing Retainer	AO-1000-	6
B298	Retainer, Fan Shaft Bearing Felt Washer	AO-1000-	6
D403	Key, Fan Drive Bevel Pinion	AO-1000-	6
D1720	Lock Washer (Half) Fan Shaft	AO-1000-	6
JD7655	Cup, Front and Rear Bearing	AO-1000-	6
JD7656	Cone, Front and Rear Bearing	AO-1000-	6
JD7657	Ball Assembly, Front and Rear Bearing	AO-1000-	6
1450R	Pipe Plug in Fan Bearing Housing	AO-1000-	6
PULLEY			
A370	Snap Ring, Belt Pulley Gear	AO-1000-	7
A371	Snap Ring, Belt Pulley Bearing	AO-1000-	7
A726	Bushing, Belt Pulley (Bronze)	AO-1000-	7
A1642	Gear, Belt Pulley	AO-1000-	7
A1646	Washer, Belt Pulley Bearing	AO-1000-	7
A1647	Retainer, Belt Pulley Bearing	AO-1000-	7
A1648	Drive Screw (3 used)	AO-1000-	7
AA1315	Belt Pulley, A1640R, with Sleeve, Gear and Bushing	AO-1000-	7
D403	Key, Belt Pulley	AO-1000-	7
JD7487	Outer Race and Roller, Complete, Belt Pulley	AO-1000-	7
JD7587	Inner Race, Pulley Bearing	AO-1000-	7
CLUTCH PARTS			
A1197	Bushing, Clutch Lever Pivot	AO-1000-	3
A1606	Shroud, Clutch	AO-1000-	7
A1641R	Sleeve, Clutch Operating	AO-1000-	7
A1643	Drive Pin, Clutch Cone	AO-1000-	7
A1644	Cam, Clutch Operating	AO-1000-	7
A1645	Bolt, Clutch Operating	AO-1000-	7
A1649R	Disk, Clutch Adjusting	AO-1000-	7
A1650	Washer, Clutch Driving Disk	AO-1000-	7
A1651	Spring, Clutch Release	AO-1000-	7
A1652	Cover, Clutch Dust	AO-1000-	7
A1661R	Disk, Clutch Driving	AO-1000-	7
A1680R	Bracket, Clutch Lever	AO-1000-	3
A1682	Spring Link, Clutch Lever	AO-1000-	3
B738	Bolt Pin, Clutch Operating	AO-1000-	7
B739	Link Pin, Clutch Operating	AO-1000-	7
B741	Cam Washer, Clutch Operating	AO-1000-	7
C614	Facing, Clutch	AO-1000-	7
CLUTCH FORK BEARING AND PULLEY BRAKE			
A78R	Fork, Clutch	AO-1000-	7
A82R	Collar, Clutch	AO-1000-	7
A602	Snap Ring, Clutch Fork Shaft	AO-1000-	7
A1653	Shaft, Clutch Fork	AO-1000-	7
A1654R	Bearing, Clutch Fork Shaft	AO-1000-	7
A1655	Bearing Cover, Clutch Fork Shaft	AO-1000-	7
A1656	Gasket, Clutch Fork Shaft Bearing	AO-1000-	7
A1657	Spring, Clutch Fork	AO-1000-	7
AA1318	Brake, A1658R, Pulley, with Lining	AO-1000-	7
C732	Welch Plug in Clutch Fork Bearing	AO-1000-	7
D178	Pivot, Clutch Fork	AO-1000-	7
D1086	Set Screw, Pulley Brake Adjusting	AO-1000-	7
D1932	Lining, Pulley Brake	AO-1000-	7

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
GEAR SHIFT			
A147	Key Washer, Gear Shift Lever	AO-1000-	7
A596	Yoke, Gear Shifter	AO-1000-	7
A597	Spring, Gear Shifter Pawl	AO-1000-	7
A598	Pawl, Gear Shifter	AO-1000-	7
A913	Interlock, Gear Shift	AO-1000-	7
A916	Lever, Gear Shift	AO-1000-	7
A917	Arm, Gear Shifter	AO-1000-	7
A918	Shaft, Shifter	AO-1000-	7
A1416	Shaft, Shifter (Underdrive)	AO-1000-	7
AA553	Gear Shifter, Low and Reverse, A910R, with Yoke	AO-1000-	7
AA588	Gear Shifter, Second Speed, A1015R, with Yoke	AO-1000-	7
AA1123	Gear Shifter, Second Speed, A1417R, with Yoke (Underdrive)	AO-1000-	7
D678	Screw, Gear Shift Adjusting	AO-1000-	7
SLIDING GEAR SHAFT			
A94	Pinion, First Speed Sliding	AO-1000-	8
A365	Snap Ring, Sliding Gear Shaft, L. H., Bearing Outer Race	AO-1000-	8
A378	Snap Ring, Sliding Gear Shaft, L. H., Bearing Inner Race	AO-1000-	8
A540	Shaft, Sliding Gear	AO-1000-	8
A549	Gasket, Sliding Gear Shaft and Countershaft, L. H., Bearing Cover	AO-1000-	8
A550	Cover, Sliding Gear Shaft, Left Bearing	AO-1000-	8
A600	Pinion, Sliding Gear Shaft Drive (20 Teeth)	AO-1000-	8
A837	Pinion, Drive, Sliding Gear Shaft (17 Teeth) (Overdrive)	AO-1000-	8
A906	Pinion, Second Speed Sliding (23 Teeth)	AO-1000-	8
A1405	Pinion, Sliding Gear Shaft Drive (20 and 26 Teeth) (Underdrive)	AO-1000-	8
A1406	Pinion, High Speed Sliding (Underdrive)	AO-1000-	8
JD7665	Bearing, Sliding Gear Shaft, L. H.	AO-1000-	8
JD7673	Bearing, Sliding Gear Shaft, R. H.	AO-1000-	8
OVERDRIVE GEAR SHIFT			
A115R	Lever, Overdrive Shifter	AO-1000-	8
A147	Key Washer, Overdrive Shifter	AO-1000-	8
A596	Yoke, Overdrive Shifter	AO-1000-	8
A599	Pin, Reverse Lockout	AO-1000-	8
A1418	Yoke, Underdrive Shifter	AO-1000-	8
AA793	Shifter, Overdrive, A911R, with Yoke and Lockout Pin	AO-1000-	8
AA1124	Shifter, Underdrive, A911R, with Yoke	AO-1000-	8
AA1291	Handle, Overdrive Shifter with Shaft	AO-1000-	8
OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR			
A69R	Cover, Overdrive, R. H. Bearing	AO-1000-	8
A119	Stud, Overdrive, R. H. Bearing Cover	AO-1000-	8
A120	Dowel Pin, First Reduction Gear Cover	AO-1000-	8
A159	Spacer, First Reduction Gear	AO-1000-	8
A438	Gasket, Overdrive, R. H. Bearing Cover	AO-1000-	8
A547	Gasket, Overdrive Gear and Shaft, L. H. Bearing Cover	AO-1000-	8
A548R	Cover, Overdrive Gear and Shaft, L. H. Bearing	AO-1000-	8
A557	Gasket, First Reduction Gear Cover	AO-1000-	8
A1401	Snap Ring, First Reduction Gear Cover (Underdrive)	AO-1000-	8
A1402	Snap Ring, Overdrive Gear and Shaft, L. H. Bearing (Underdrive)	AO-1000-	8
A1403	Spacer, First Reduction Gear (Underdrive)	AO-1000-	8
AA797	Gear, and Shaft, with R. H. Bearing Cover (Overdrive)	AO-1000-	8
AA798	Gear, Drive, Sliding Gear Shaft with R. H. Bearing Cover (28 Outside Teeth, 17 Inside Teeth) (Overdrive)	AO-1000-	8
AA1272	First Reduction Gear with Spider, Riveted	AO-1000-	8
AA1274	Cover, with Dust Shroud, First Reduction Gear	AO-1000-1548	8
AA1553	Gear, Sliding Gear Shaft Drive (Underdrive) (with Nut)	AO-1000-	8
AA1683	Cover, with Dust Shroud, First Reduction Gear	AO-1549-	8
C535	Nut, Overdrive Gear and Shaft End	AO-1000-	8
JD7649	Bearing, Overdrive Gear and Shaft, L. H. End (Underdrive)	AO-1000-	8
JD7664	Bearing, Overdrive Gear and Shaft, R. H. End	AO-1000-	8
JD7672	Bearing, Overdrive Gear and Shaft, L. H. End	AO-1000-	8
K3083	Stud, First Reduction Gear Cover to Transmission Case	AO-1000-	8
OVERDRIVE IDLER GEAR			
A114	Gear, Countershaft Idler (17 and 25 Teeth)	AO-1000-	9
A166	Washer, Bearing Locating	AO-1000-	9
A539	Spacer, Overdrive Idler Gear	AO-1000-	9

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
OVERDRIVE IDLER GEAR—Continued			
A812	Spacer, Idler Gear Locating	AO-1000-	9
A836	Gear, Idler, Countershaft (17 and 28 Teeth) (Overdrive)	AO-1000-	9
A1154	Washer, Idler Gear Thrust	AO-1000-	9
A1408	Gear, Overdrive Idler (19 and 25 Teeth) (Underdrive)	AO-1000-	9
A1409	Spacer, Overdrive Idler Gear Bearing (Underdrive)	AO-1000-	9
A1410	Washer, Idler Gear Thrust (Underdrive)	AO-1000-	9
JD7501	Roller Assembly, Overdrive Idler, R. H.	AO-1000-	9
JD7539	Roller Assembly, Overdrive Idler, L. H.	AO-1000-	9
JD7551	Inner Race, Overdrive Idler, R. H.	AO-1000-	9
JD7559	Inner Race, Overdrive Idler, L. H.	AO-1000-	9
JD7904	Bearing, Countershaft Idler Gear, 2 used (Underdrive)	AO-1000-	9
COUNTERSHAFT			
A124	Stud, Countershaft, R. H. Bearing	AO-1000-	9
A581	Pinion, Differential Driving (17 Teeth)	AO-1000-	9
A582	Gear, First Speed, Countershaft (27 Teeth)	AO-1000-	9
A583	Spacer, Countershaft Gear	AO-1000-	9
A907	Gear, Second Speed, Countershaft (22 Teeth)	AO-1000-	9
A1153	Countershaft	AO-1000-	9
A1156	Gasket, Countershaft, R. H. Bearing Housing (Thin)	AO-1000-	9
A1157	Gasket, Countershaft, R. H. Bearing Housing (Thick)	AO-1000-	9
A1158	Shim, Countershaft, R. H. Bearing Housing (Steel, Thin)	AO-1000-	9
A1159	Shim, Countershaft, R. H. Bearing Housing (Steel, Thick)	AO-1000-	9
A1160	Snap Ring, Countershaft, L. H. Bearing	AO-1000-	9
A1411	Pinion, Differential Driving (17 Teeth) (Underdrive)	AO-1000-	9
A1522	Washer, Countershaft, L. H. Bearing Retaining (Underdrive)	AO-1000-	9
AA806	Housing, A1155R Countershaft, R. H. Bearing, with Cup	AO-1000-	9
AA1122	Housing, A1413R Countershaft, R. H. Bearing, with Cup (Underdrive)	AO-1000-	9
AA1234	Countershaft, with Dowel Pin (Underdrive)	AO-1000-	9
E2072	Dowel Pin, Countershaft (Underdrive)	AO-1000-	9
JD7367	Cone, Countershaft, R. H. Bearing	AO-1000-	9
JD7379	Cone, Countershaft, L. H. Bearing	AO-1000-	9
JD7405	Cup, Countershaft, R. H. Bearing	AO-1000-	9
JD7411	Cup, Countershaft, L. H. Bearing	AO-1000-	9
JD7552	Inner Race, Countershaft, R. H. Bearing	AO-1000-	9
2214R	Nut, Countershaft (Underdrive)	AO-1000-	9
DIFFERENTIAL			
A11R	Quill, Differential Bearing	AO-1000-	9
A150	Shaft, Differential Bevel Pinion	AO-1000-	9
A169	Pinion, Differential Bevel	AO-1000-	9
A202	Washer, Differential Thrust	AO-1000-	9
A263	Cover, Differential Shaft, R. H. Bearing	AO-1000-	9
A363	Snap Ring, Differential Shaft, R. H. Bearing	AO-1000-	9
A406	Shim, Differential Quill, (Vellumoid, Thin)	AO-1000-	9
A486	Pinion, Differential Bevel Gear and Spur	AO-1000-	9
A610	Shim, Differential Bearing Quill (Steel, Thick)	AO-1000-	9
A611	Shim, Differential Bearing Quill (Steel, Thin)	AO-1000-	9
A612	Shim, Differential Bearing Quill (Vellumoid, Thick)	AO-1000-	9
AA331	Differential Gear with Shaft	AO-1000-	9
AA345	Differential, Complete	AO-1000-	9
JD7275	Cup, Differential Bearing	AO-1000-	9
JD7361	Cone, Differential Bearing	AO-1000-	9
FINAL DRIVE			
A5R	Spacer, Rear Axle Bearing	AO-1000-	10
A76R	Nut, Rear Axle Shaft	AO-1000-	10
A411	Gasket, Rear Axle Housing to Case	AO-1000-	10
A412	Gasket, Rear Axle Housing to Cover	AO-1000-	10
A829	Washer, Rear Axle Oil Seal	AO-1000-	10
A1281	Retainer, Rear Axle Felt	AO-1000-	10
A1389	Gear, Final Drive	AO-1000-	10
A1686R	Cover, Rear Axle Housing	AO-1000-	10
AA520	Oil Seal, Rear Axle Inner Bearing	AO-1000-	10
AA665	Felt Washer, Rear Axle	AO-1000-	10
AA1266	Housing, A1600R, with Bearing Cups and Oil Seal, Rear Axle	AO-1000-	10
AA1270	Shaft, Rear Axle, R. H.	AO-1000-	10
AA1271	Shaft, Rear Axle, L. H.	AO-1000-	10

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FINAL DRIVE—Continued			
C1533	Dowel Pin, Rear Axle Housing to Transmission Case	AO-1000-	10
D625	Pipe Plug, Rear Axle Housing Drain	AO-1000-	10
E2244	Pipe Plug, Rear Axle Housing Oil Filler	AO-1000-	10
JD7245	Cone with Rollers, Rear Axle Bearing	AO-1000-	10
JD7296	Cup, Rear Axle Bearing	AO-1000-	10
JD7759	Oil Fitting, Alemite Hydraulic, No. 1610	AO-1000-	10
REAR WHEELS			
AA917	Rim, Demountable, for A1272R and B694R Cast Wheels and 11.25x24" or 12.75x24" Low Pressure Rubber Tires	AO-1000-	12
AA933	Drive Wheel, Cast, A1272R, with Demountable Rim, for 11.25x24" or 12.75x24" Low Pressure Rubber Tires	AO-1000-	12
AA1087	Drive Wheel, Cast, A1272R, with Studs and Nuts, for 11.25x24" or 12.75x24" Low Pressure Rubber Tires	AO-1000-	12
AB823	Drive Wheel, Cast, B694R, with Studs and Nuts, for 12.75x24" Low Pressure Rubber Tires	AO-1000-	12
AB834	Drive Wheel, Cast, B694R, with Demountable Rim, for 12.75x24" Low Pressure Rubber Tires	AO-1000-	12
C1716	Bolt, Rear Wheel	AO-1000-	11
D409	Stud, Rim Clamp to Drive Wheel, 3/4"x3-1/2"	AO-1000-	12
D2526R	Clamp, Rim, for AA1087 Cast Drive Wheel	AO-1000-	12
JD1217	Drive Wheel, 42-3/4"x10" Flat Tire	AO-1000-	11
REAR WHEEL EQUIPMENT			
A1062	Support, Drive Wheel to Road Band Support	AO-1000-	12
A1298	Lug, Spud	AO-1000-	11
AC649	Lug, Cast, Cone	AO-1000-	11
AC918	Road Band with Support	AO-1000-	12
C368R	Lug, Cast, R. H.	AO-1000-	11
C369R	Lug, Cast, L. H.	AO-1000-	11
C744	Washer, Drive Wheel to Road Band Support Bolt	AO-1000-	12
C1027	Extension Rim, Drive Wheel, 6"	AO-1000-	11
C1030	Clip, Drive Wheel Extension Rim	AO-1000-	11
C1294	Grouser, Meadow (Channel), R. H.	AO-1000-	11
C1295	Grouser, Meadow (Channel), L. H.	AO-1000-	11
C1517	Bolt, Sand Lug	AO-1000-	11
C1646R	Lug, Button	AO-1000-	11
C2147	Support for AC918 Road Band	AO-1000-	12
C2199R	Sand Lug	AO-1000-	11
D233	Lug, Spade, 4" High	AO-1000-	11
D411	Bolt, Spade Lug	AO-1000-	11
D411	Bolt, Road Band Support to Drive Wheel	AO-1000-	11
D411	Bolt, Road Band Support to Road Band	AO-1000-	11
D530	Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H.	AO-1000-	11
D531	Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H.	AO-1000-	11
D574	Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H.	AO-1000-	11
D575	Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H.	AO-1000-	11
D576	Grouser (4"x3"x3/8"x16"), R. H.	AO-1000-	11
D577	Grouser (4"x3"x3/8"x16"), L. H.	AO-1000-	11
D578	Grouser (4"x3"x3/8"x22"), R. H.	AO-1000-	11
D579	Grouser (4"x3"x3/8"x22"), L. H.	AO-1000-	11
D938	Washer, Spade Lug—Sand Lugs	AO-1000-	11
D938	Washer, Support to Support Bolts	AO-1000-	11
D1078	Lug, Spade (5" High)	AO-1000-	11
D1283	Lug, Spade, A-Shape (5" High)	AO-1000-	11
D2121	Lug, Spade, Heavy Duty (5" High)	AO-1000-	11
D2447	Lug, Spade, Heavy Duty (4" High)	AO-1000-	11
D2629	Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter)	AO-1000-	11
1706R	Washer, Button Lug	AO-1000-	11
DIFFERENTIAL BRAKES			
A134	Pin, Brake Adjusting	AO-1000-	13
A149	Roller, Brake Shoe	AO-1000-	13
A151	Screw, Brake Adjusting	AO-1000-	13
A152	Shaft, Brake Lever	AO-1000-	13
A321	Cam, Brake	AO-1000-	13
A345	Pin, Brake Shoe Roller	AO-1000-	13
A348	Spring, Brake Shoe	AO-1000-	13
A413	Gasket, Brake Housing to Transmission Case	AO-1000-	13

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
DIFFERENTIAL BRAKES—Continued			
A441	Lining, Brake Shoe.....	AO-1000-	13
A510	Guard, Brake Shaft Dust (Outer).....	AO-1000-	13
A1162	Pinion, Brake Shaft.....	AO-1000-	13
A1163	Bushing, Brake Shaft (Outer).....	AO-1000-	13
A1168	Washer, Brake Shaft Pinion.....	AO-1000-	13
A1169	Bushing, Brake Shaft (Inner).....	AO-1000-	13
A1610R	Pedal, Brake, Right.....	AO-1000-	13
A1611R	Pedal, Brake, Left.....	AO-1000-	13
AA314	Brake Shoe with Lining.....	AO-1000-	13
AA807	Brake Drum with Shaft, Right.....	AO-1000-	13
AA811	Oil Cup, Outer Brake Shaft Bearing.....	AO-1000-	13
AA1277	Brake Housing, A1608R, R. H., with Bushing and Oiler.....	AO-1000-	13
AA1278	Brake Housing, A1609R, L. H., with Bushing and Oiler.....	AO-1000-	13
AA1281	Brake Drum with Shaft, Left.....	AO-1000-	13
B639R	Latch, Brake.....	AO-1000-	13
C485	Clip, Brake Lever Spring.....	AO-1000-	13
C1224	Spring, Brake Pedal.....	AO-1000-	13
D136	Washer, Brake Shaft.....	AO-1000-	13
FRONT AXLE AND FRONT END SUPPORT			
A955	Pin, Front Axle Pivot.....	AO-1000-	13
A1674R	Front Axle.....	AO-1000-	13
A1678R	Support, Front End.....	AO-1000-	13
AA1285	Radius Rod, with Pivot.....	AO-1000-	13
AD1381	Knuckle, Front Wheel, with Bushings, Studs and Dust Excluders.....	AO-1000-	13
B817	Pin, Front Axle Pivot Pin to Front End Support.....	AO-1000-	13
D486	Bushing, Radius Rod Pivot.....	AO-1000-	13
D843	Stud, Radius Rod Pivot.....	AO-1000-	13
D844	Washer, Radius Rod Pivot.....	AO-1000-	13
D1250	Washer, Spindle Pin.....	AO-1000-	13
D1881	Dust Cap, Knuckle.....	AO-1000-	13
D1888	Bushing, Front Wheel Knuckle (4 used).....	AO-1000-	13
D1898	Stud, Steering Arm (4 used).....	AO-1000-	13
JD7759	Alemite Zerk Fitting, Front Axle, 1/8", No. 1610.....	AO-1000-	13
JD7760	Alemite Zerk Fitting, No. 1612, in Radius Rod Pivot.....	AO-1000-	13
FRONT WHEELS AND FRONT WHEEL EQUIPMENT			
A1556	Gasket, Front Wheel Hub Cap (Disk Wheel).....	AO-1389-	14
A1828	Hook Bolt, for Front Wheel Weight.....	AO-1000-	14
AA663	Felt Washer, Front Wheel.....	AO-1000-	14
AA1395	Hub, Front Wheel (Disk Type).....	AO-1389-	14
AA1407	Hub Cap, with Alemite Fitting (Disk Wheel).....	AO-1389-	14
AC119	Hub Cap with Oil Fitting.....	AO-1000-	14
AC1062	Front Wheel, with Bearing Cups and Hub Cap, for 6.00x16" Low Pressure Rubber Tires.....	AO-1000-	14
AD452	Nut, Front Wheel Bearing.....	AO-1000-	14
AD900	Front Wheel, with Hub Cap and Bearing Cups.....	AO-1000-	14
C677	Gasket, Front Wheel Hub Cap.....	AO-1000-	14
D582	Rim, Front Wheel Extension (5" Wide).....	AO-1000-	14
D583	Clamp, Front Wheel Extension Rim to Wheel.....	AO-1000-	14
D584R	Washer, Front Wheel Extension Rim Clamp.....	AO-1000-	14
D635	Felt Retainer, Front Wheel.....	AO-1000-	14
D827	Washer, on Hook Bolt.....	AO-1000-	14
D849	Band, Front Wheel Guide (Half) (4") (2 used per Wheel).....	AO-1000-	14
D1050	Band, Front Wheel Guide (Half) (3-1/2" High) (2 used per Wheel).....	AO-1000-	14
D1524	Guide Band, Front Wheel (2-1/2" High).....	AO-1000-	14
D1551	Clamp, Front Wheel Weight.....	AO-1000-	14
JD15	Bolt, Front Wheel Hub, Disk Type.....	AO-1389-	14
JD1232	Front Wheel Disk and Rim, for 6.00x16" Low Pressure Rubber Tires.....	AO-1389-	14
JD7216	Cone, with Rollers, Front Wheel, Outside Bearing.....	AO-1000-	14
JD7224	Cone, with Rollers, Front Wheel, Inside Bearing.....	AO-1000-	14
JD7266	Cup, Front Wheel, Outside Bearing.....	AO-1000-	14
JD7270	Cup, Front Wheel, Inside Bearing.....	AO-1000-	14
JD7759	Alemite Zerk Fitting, No. 1610, Front Wheels.....	AO-1000-	14
27R	Washer, on Weight to Wheel Bolts.....	AO-1000-	14

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
STEERING PARTS			
A934	Tube, Vertical Steering Shaft.....	AO-1000-	15
A936	Bushing, Steering Gear Shaft, Lower.....	AO-1000-	15
A940	Arm, Steering Gear.....	AO-1000-	15
A946R	Bracket, Steering Shaft Bearing.....	AO-1000-1214	3
A1676	Tie Rod.....	AO-1000-	15
A1677	Steering Arm, R. H.....	AO-1000-	15
A1730R	Housing, Steering Worm.....	AO-1000-	15
A1731	Gasket, Steering Worm Housing, Thin.....	AO-1000-	15
A1732	Gasket, Steering Worm Housing, Thick.....	AO-1000-	15
A1733R	Housing, Steering Gear.....	AO-1000-	15
A1734	Gear, Steering Worm.....	AO-1000-	15
A1736	Support, Steering Shaft, Rear.....	AO-1000-	3
A1795R	Bracket, Steering Shaft Bearing.....	AO-1215-	3
AA380	Steering Wheel.....	AO-1000-	15
AA567	Steering Shaft with Steering Worm.....	AO-1000-	15
AA971	Drag Link, Complete.....	AO-1000-	15
AA1605	Shaft, Steering Gear Vertical.....	AO-1000-	15
AB214	Bearing, B36R, with Bushing, Steering Shaft, Upper.....	AO-1000-	3
B37	Bearing, Steering Shaft, Upper.....	AO-1000-	3
C838	Ball Stud Bearings, Drag Link and Tie Rod.....	AO-1000-	15
C840	Screw Plug, Drag Link and Tie Rod.....	AO-1000-	15
C977	Adjusting Screw, Steering Gear Shaft.....	AO-1000-	15
C1109	End, Tie Rod.....	AO-1000-	15
C1220	Dowel Pin, Steering Housing.....	AO-1000-	15
D156	Taper Bolt, Steering Knuckle Pivot Pin.....	AO-1000-	13
D342	Key, Steering Wheel.....	AO-1000-	15
D1674R	Steering Arm, L. H.....	AO-1000-	15
D1701	Spindle Pin.....	AO-1000-	13
D1766R	Adjusting Nut, Steering Worm.....	AO-1000-	15
D1768	Washer, Oil Seal and Steering Worm Adjusting Nut.....	AO-1000-	15
D1771	Nut, Steering Wheel to Shaft.....	AO-1000-	15
D1898	Stud, Steering Arm (4 used).....	AO-1000-	13
JD7205	Cone with Rollers, Steering Worm.....	AO-1000-	15
JD7253	Cup, Steering Worm Bearing.....	AO-1000-	15
JD7759	Alemite Zerk Fitting, No. 1610, Steering Worm Housing and Vertical Shaft, Lower Bushing.....	AO-1000-	15
JD7759	Alemite Zerk Fitting, No. 1610, in Drag Link and Tie Rod.....	AO-1000-	15
294R	Stud, Steering Housing to Case, 1/2"x1-11/16".....	AO-1000-	15
DRAWBAR			
A334	Nut, Drawbar Clevis (Special).....	AO-1000-	15
A507	Pin, Drawbar Roller.....	AO-1000-	15
A850R	Roller, Drawbar.....	AO-1000-	15
A1739	Clevis, Drawbar.....	AO-1000-	15
A1740	Pin, Drawbar Indexing.....	AO-1000-	15
A1741	End, Drawbar.....	AO-1000-	15
A1746	Brace, Drawbar Support.....	AO-1000-	15
AA1353	Drawbar, Complete.....	AO-1000-	15
AA1355	Support, Drawbar, with Brake Lever Pivot.....	AO-1000-	15
B111	Washer, on Drawbar to Front Support Bolt.....	AO-1000-	15
SEAT			
A333	Nut, Seat Spring Bolt, Special.....	AO-1000-	15
A618	Spring, Seat.....	AO-1000-	15
A619	Bolt, Seat Spring (9" Long).....	AO-1000-	15
A1687	Channel, Seat Support.....	AO-1000-	15
AD1606	Seat.....	AO-1000-	15
B845	Stop Strap, Seat Channel.....	AO-1000-	15
B847	Strap, Seat Spring Bolt.....	AO-1000-	15
C1980	Pin, Channel Seat Support.....	AO-1000-	15
C1982R	Washer, Seat Spring.....	AO-1000-	15
C1985	Spacer, Seat Clamp.....	AO-1000-	15
D1797	Nut, Seat Clamp.....	AO-1000-	15
PLATFORM			
A1689	Support, Platform, R. H.....	AO-1000-	16
A1690	Support, Platform, L. H.....	AO-1000-	16
A1691	Cross Angle, Fender.....	AO-1000-	16
AA1330	Platform with Support and Cross Angle.....	AO-1000-	16

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
COWL AND FENDERS			
A1692	Dust Shield, R. H.	AO-1000-	17
A1693	Dust Shield, L. H.	AO-1000-	17
A1694	Dust Shield Extension, R. H.	AO-1000-	17
A1695	Dust Shield Extension, L. H.	AO-1000-	17
A1711	Nut, Wing, for Cowl Fastener	AO-1000-	16
A1723	Cushion, Cowl	AO-1000-	16
A1724	Pin, Cowl Hinge	AO-1000-	16
A1726	Fastener, Cowl	AO-1000-	16
A1728	Hinge, Cowl, Rear Half	AO-1000-	16
A1874	Bracket, Citrus Fender	AO-1000-	16
A1879	Brace, Citrus Fender, R. H.	AO-1000-	16
A1887	Brace, Citrus Fender, L. H.	AO-1000-	16
A1953	Spacer, Citrus Fender Rear Bracket	AO-1000-	16
AA1331	Fender, with Brace, R. H.	AO-1000-	17
AA1332	Fender, with Brace, L. H.	AO-1000-	17
AA1337	Brace, Fender, R. H. Front, with Strut	AO-1000-	17
AA1338	Brace, Fender, L. H. Front, with Strut	AO-1000-	17
AA1343	Guard and Front Support, Pulley	AO-1000-	17
AA1344	Guard and Front Support, Flywheel	AO-1000-	17
AA1345	Cowl, Complete	AO-1000-	16
AA1346	Channel with Hinge Half, Cowl	AO-1000-	16
AA1347	Cowl Angle with Fastener	AO-1000-	16
AA1366	Lock, Citrus Fender Flywheel Guard	AO-1000-	16
AA1564	Citrus Fender, R. H., with Pulley Guard	AO-1000-	16
AA1565	Citrus Fender, L. H., with Flywheel Guard	AO-1000-	16
AA1569	Bottom Brace with End, Citrus Fender, R. H.	AO-1000-	16
AA1570	Bottom Brace with End, Citrus Fender, L. H.	AO-1000-	16
D2379	Wing Nut, on Citrus Fender, Pulley Guard to Front Support Bolts	AO-1000-	16
K3151	Washer, on L. H. Dust Shield to Tool Box Bolt	AO-1000-	17
K3151	Washer, L. Fender Side Sheet to Front Brace R. Dust Shield Bolts	AO-1000-	17
K3151	Washer, R. Fender Side Sheet to Front Brace and Support Bolts	AO-1000-	17
K3151	Washer, R. Fender Side Sheet to Platform Support Bolts	AO-1000-	17
K3151	Washer, L. Fender Side Sheet to Platform Support Bolts	AO-1000-	17
K3151	Washer, on Citrus Fender Pulley Guard to Front Support Bolts	AO-1000-	17
27R	Washer, Fender Side to Platform Support Bolt, R. H. and L. H.	AO-1000-	16
27R	Washer, Fender Crown to Platform Cross Angle Bolt, R. H. and L. H.	AO-1000-	16
629R	Washer, on Cowl Fastening Screw	AO-1000-	16
MAGNETO			
A470	Clamp, Spark Plug Cable	AO-1000-	18
A471	Clip, Spark Plug Cable	AO-1000-	18
A500	Gasket, Magneto to Governor Case	AO-1000-	18
AA478	Cable, Spark Plug, Complete, L. H.	AO-1000-1524	18
AA858	Cable, Spark Plug, Complete, R. H.	AO-1000-1524	18
AA1084	Insulator, Spark Plug, Porcelain (for AC600 No. 2 Plug Only)	AO-1000-	18
AA1677	Cable, Spark Plug, R. H.	AO-1525-	18
AA1678	Cable, Spark Plug, L. H.	AO-1525-	18
AB336	Conduit, Spark Plug Cable	AO-1000-	18
AB706	Magneto	AO-1000-1524	18
AC600	Spark Plug	AO-1000-	18
AD1400	Magneto	AO-1525-	18
B281	Flange, Magneto Drive	AO-1000-	3
B465R	Clamp, Spark Plug Cable Conduit	AO-1000-	18
C1300	Nipple, Spark Plug Cable, Rubber	AO-1000-1524	18
D465	Gasket, Spark Plug	AO-1000-	18
D2808	Gauge, Magneto Contact Point	AO-1525-	18
629R	Washer, Magneto to Governor Case	AO-1000-	18
MAGNETO PARTS (FOR AD1400 MAGNETO)			
AD1510	Center Brush	AO-1525-	19
AD1523	Distributor Block, Complete	AO-1525-	19
AD1524	Distributor Brush with Spring	AO-1525-	19
AD1525	Front Cover, Gasket and Dowel Pin	AO-1525-	19
AD1526	Wire, Condenser Lead	AO-1525-	19
AD1527	Coil, Complete with Primary and Ground Leads	AO-1525-	19
AD1528	Lead Wire, Coil to Ground	AO-1525-	19
AD1529	Wire, Primary Lead	AO-1525-	19
AD1530	Wire, Breaker Lead	AO-1525-	19
AD1531	Impulse Drive Member	AO-1525-	19
AD1532	Housing, Magneto	AO-1525-	19

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
MAGNETO PARTS (FOR AD1400 MAGNETO)—Continued			
AD1533	Cam Wiper and Bracket.....	AO-1525-	19
AD1534	Distributor Rotor.....	AO-1525-	19
AD1535	Breaker Bar, Complete.....	AO-1525-	19
AD1536	Point, Stationary Contact, with Bracket and Breaker Bar Fulcrum Pin..	AO-1525-	19
AD1537	Distributor Bearing.....	AO-1525-	19
AD1538	Condenser.....	AO-1525-	19
AD1539	Rotor Bearing.....	AO-1525-	19
AD1540	Rotor Assembly.....	AO-1525-	19
AD1541	Shell, Impulse Coupling, with Spring Locating Pin.....	AO-1525-	19
AD1542	Spring, Impulse Coupling, with Felt.....	AO-1525-	19
AD1543	Plate, with Impulse Stop Pin.....	AO-1525-	19
B1085	Washer, Contact Bracket.....	AO-1525-	19
B1092	Screw, Timing Slot.....	AO-1525-	19
B1093	Screw, Distributor Shaft.....	AO-1525-	19
B1093	Screw, Rotor and Distributor Gears.....	AO-1525-	19
C1324	Lock Washer, Breaker Bar Spring Screw.....	AO-1525-	19
C1335	Key, Rotor Shaft.....	AO-1525-	19
C1350	Lock Washer, Timing Slot Screw.....	AO-1525-	19
C1350	Lock Washer, Condenser Lead.....	AO-1525-	19
C1350	Lock Washer, Distributor Block Screw.....	AO-1525-	19
C1350	Lock Washer, Breaker Bar Terminal Screw.....	AO-1525-	19
C1350	Lock Washer, Coil Clamp Screw.....	AO-1525-	19
C1350	Lock Washer, Ground Stud.....	AO-1525-	19
C1350	Lock Washer, Front Cover Screw.....	AO-1525-	19
D1145	Screw, Front Cover.....	AO-1525-	19
D2213	Screw, Front Bearing Plate.....	AO-1525-	19
D2660	Thumb Nut, Distributor Block.....	AO-1525-	19
D2661	Coil Spring, Distributor Block, High Tension Contact.....	AO-1525-	19
D2662	Gasket, Distributor Block.....	AO-1525-	19
D2663	Gasket, Front Cover.....	AO-1525-	19
D2664	Dowel Pin, Front Cover.....	AO-1525-	19
D2666	Snap Ring, Impulse Pawl.....	AO-1525-	19
D2667	Felt, Impulse Drive Member.....	AO-1525-	19
D2669	Oil Hole Plug.....	AO-1525-	19
D2670	Cover, Timing Slot.....	AO-1525-	19
D2671	Gasket, Timing Slot.....	AO-1525-	19
D2673	Felt Washer, Rotor Bearing, Impulse End.....	AO-1525-	19
D2674	Retainer, Felt Washer Rotor Bearing.....	AO-1525-	19
D2675	Screw, Rear Bearing Oil Hole Plug.....	AO-1525-	19
D2676	Disk, Safety Gap.....	AO-1525-	19
D2677	Adjusting Plate, Breaker Bar.....	AO-1525-	19
D2678	Terminal Bracket, Breaker Bar Spring.....	AO-1525-	19
D2679	Insulation, Breaker Stud.....	AO-1525-	19
D2680	Gear, Distributor.....	AO-1525-	19
D2681	Collar, Distributor Gear Spacing.....	AO-1525-	19
D2682	Distributor Cam and Shaft.....	AO-1525-	19
D2683	Clamp, Coil.....	AO-1525-	19
D2684	Insulator, Coil (Top).....	AO-1525-	19
D2685	Insulator, Coil (Bottom).....	AO-1525-	19
D2686	Insulator, Coil Lead.....	AO-1525-	19
D2687	Insulation, Ground Terminal Connector.....	AO-1525-	19
D2688	Connection Clip, Ground Outside.....	AO-1525-	19
D2689	Terminal Connector, Ground.....	AO-1525-	19
D2690	Pinion, Rotor.....	AO-1525-	19
D2691	Plate, Front Bearing.....	AO-1525-	19
D2692	Screw, Distributor Bearing Oil Hole.....	AO-1525-	19
D2693	Sealing Cap, Main Bearing.....	AO-1525-	19
D2694	Shim, Rotor Bearing, .002".....	AO-1525-	19
D2695	Shim, Rotor Bearing, .003".....	AO-1525-	19
D2696	Button Centering, Impulse Spring.....	AO-1525-	19
D2697	Magnet.....	AO-1525-	19
D2698	Cap, Magnet Screw.....	AO-1525-	19
D2699	Screw, Distributor Block.....	AO-1525-	19
D2700	Screw, Breaker Bar Spring.....	AO-1525-	19
D2701	Screw, Contact Bracket Pivot.....	AO-1525-	19
D2702	Screw, Connector Plate.....	AO-1525-	19
D2702	Screw, Contact Bracket Holding (Short).....	AO-1525-	19
D2703	Screw, Contact Bracket Holding (Long).....	AO-1525-	19
D2704	Screw, Breaker Base Plate.....	AO-1525-	19

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
MAGNETO PARTS (FOR AD1400 MAGNETO)—Continued			
D2705	Screw, Breaker Terminal	AO-1525-	19
D2707	Screw, Coil Clamp	AO-1525-	19
D2708	Stud, Ground Terminal	AO-1525-	19
D2709	Screw, Stop Pin Plate	AO-1525-	19
D2710	Screw, Magnet	AO-1525-	19
D2712	Washer, Insulating, Breaker Bar Terminal Screw	AO-1525-	19
D2713	Washer, Breaker Bar Terminal Screw	AO-1525-	19
D2714	Washer, Distributor Gear	AO-1525-	19
D2714	Washer, Rotor Pinion	AO-1525-	19
D2715	Washer, Insulating, Ground Stud Outside	AO-1525-	19
D2716	Washer, Ground Stud	AO-1525-	19
D2717	Washer, Notched Impulse Coupling Nut	AO-1525-	19
D2718	Pawl, Impulse Coupling	AO-1525-	19
D2719	Washer, Impulse Stop Lever	AO-1525-	19
D2720	Lock Washer, Front Bearing Plate Screw	AO-1525-	19
D2720	Lock Washer, Distributor Shaft Screw	AO-1525-	19
D2720	Lock Washer, Ground Terminal Screw	AO-1525-	19
D2720	Lock Washer, Pinion Gear Screw	AO-1525-	19
D2721	Lock Washer, Impulse Shaft	AO-1525-	19
D2722	Lock Washer, Magnet Screw	AO-1525-	19
D2723	Nut, Breaker Bar Terminal	AO-1525-	19
D2723	Nut, Condenser Lead Wire	AO-1525-	19
D2724	Nut, Breaker Terminal	AO-1525-	19
D2725	Hex. Nut, Ground Terminal	AO-1525-	19
D2726	Hex. Nut, Impulse Starter	AO-1525-	19
D2727	Key, Distributor Gear	AO-1525-	19
D2727	Key, Pinion Gear	AO-1525-	19
MAGNETO PARTS (FOR AB706 MAGNETO)			
A692	Insulating Strip, Distributor Bearing	56577-	20
A695	Gasket, Brush Holder	56577-	20
A698	Nut, Primary Lead	56577-	20
A698	Nut, Stationary Contact Support Screw	56577-	20
A700	Snap Ring, Distributor Shaft	56577-	20
A701	Screw, Bridge Clamp	56577-	20
A702	Cork Washer, Distributor Bearing Oil Seal	56577-	20
A702	Cork Washer, Rotor Shaft Bearing	56577-	20
A703	Retainer, Distributor Bearing Oil Seal Washer	56577-	20
A704	Flat Washer, Distributor Bearing	56577-	20
A705	Screw, Distributor Rotor	56577-	20
A705	Screw, Breaker Bar Clip	56577-	20
A706	Snap Ring, Distributor Bearing Cup	56577-	20
A707	Spacer, Distributor Bearing Cup	56577-	20
A708	Lock Nut, Stationary Contact Screw and Point	56577-	20
A709	Screw, Stationary Contact Support	56577-179114	20
A710	Support, Stationary Contact	56577-179114	20
A712	Insulator, Stationary Contact Support	56577-179114	20
A715	Pin, Breaker Arm Fulcrum	56577-	20
A716	Insulating Strip, Rotor Bearing	56577-	20
A717	Insulating Washer, Rotor Bearing	56577-	20
A718	Terminal, Primary Lead Wire	56577-	20
A719	Shell, Impulse Coupling	136200-	20
A721	Retainer, Rotor Shaft Bearing Cork Washer	56577-	20
A722	Gear, Rotor	56577-	20
A723	Key, Woodruff, Distributor Shaft	56577-	20
A766	Lock Washer, Breaker Bar Clip Screw	56577-	20
A766	Lock Washer, Stationary Contact Support Screw	56577-	20
A766	Lock Washer, Primary Lead Nut	56577-	20
A766	Lock Washer, Distributor Rotor Screw	56577-	20
A766	Lock Washer, Condenser Screw	56577-	20
A767	Lock Washer, Frame Cover Screw	56577-	20
A767	Lock Washer, Brush Holder Screw	56577-	20
A768	Lock Washer, End Cap Screw	56577-	20
A768	Lock Washer, Bridge Clamp Screw	56577-	20
A769	Screw, End Cap	56577-	20
A770	Gasket, End Cap	56577-	20
A894	Pin, Rotor Gear	56577-	20

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
MAGNETO PARTS (FOR AB706 MAGNETO)—Continued			
A1102	Rivet, Stationary Contact Support.....	56577-	20
A1103	Insulator, Stationary Contact Support Rivet.....	56577-	20
A1104	Insulator, Stationary Contact Support Screw.....	56577-	20
AA414	Brush Holder, less Brush.....	56577-	20
AA415	Distributor Brush with Spring.....	56577-	20
AA415	Collector Brush with Spring.....	56577-	20
AA416	Bridge Clamp with Rivet.....	56577-	20
AA417	Coil Assembly.....	56577-	20
AA418	Breaker Bar Assembly with Contact Point.....	56577-	20
AA419	Distributor Bearing, Complete.....	56577-	20
AA419	Rotor Shaft Bearing, Complete.....	56577-	20
AA422	Distributor Shaft with Gear.....	56577-	20
AA423	Stationary Contact Screw with Point and Nut.....	56577-	20
AA424	End Cap Assembly.....	56577-179114	20
AA425	Condenser with Lead Wire.....	56577-	20
AA428	Primary Lead Wire with Terminals.....	56577-	20
AA1624	Rubbing Block Wick and Retainer.....	56577-	20
AB379	Brush, Collector with Spring.....	56577-	20
AB380	Distributor Shaft with Gear.....	56577-	20
AB383	Rotor Assembly with Gear, but without Bearings.....	56577-	20
AB384	Frame Assembly with Lead Wire.....	56577-	20
AB386	Impulse Coupling Shell with Spring Clip.....	56577-	20
AB707	Impulse Drive Member with Pawls.....	56577-136199	20
AB1084	End Cap Assembly.....	179115-	20
AB1085	Impulse Drive Member with Pawls.....	136200-	20
B507	Screw, Frame Cover.....	56577-	20
B508	Cover, Frame Top.....	56577-	20
B509	Gasket, Frame Top Cover (Cork).....	56577-	20
B510	Screw, Brush Holder.....	56577-	20
B514	Screw, Condenser.....	56577-	20
B515	Oil Seal Cork, Armature to Frame.....	56577-	20
B516	Nut, Impulse Coupling.....	56577-136199	20
B517	Spring, Impulse Coupling.....	56577-	20
B518	Holder, Oil Wick.....	56577-	20
B519	Wick, Cam Oiler.....	56577-	20
B520	Lock Washer, Cam Oil Wick Holder.....	56577-	20
B521	Clip, Impulse Coupling Spring.....	56577-	20
B522	Rivet, Impulse Coupling Spring Clip.....	56577-	20
B523	Shim, Rotor Bearing (Copper, .002" Thick).....	56577-	20
B524	Shim, Rotor Bearing (Copper, .004" Thick).....	56577-	20
B525	Shim, Rotor Bearing (Copper, .006" Thick).....	56577-	20
B594	Stop Screw, Impulse.....	56577-	20
B595	Rivet, Impulse Pawl.....	56577-	20
B977	Support, Stationary Contact.....	179115-	20
B978	Insulator, Stationary Contact Support.....	179115-	20
B979	Screw, Stationary Contact Support.....	179115-	20
B980	Nut, Impulse Coupling.....	136200-	20
C1330	Wire, Impulse Lock.....	56577-	20
C1333	Drive Spring, Impulse Coupling.....	136200-	20
C1334	Pawl, Impulse Drive Member.....	56577-	20
C1335	Woodruff Key, Impulse Coupling.....	56577-	20
CARBURETOR		Serial Number	
A832	Idle Plug.....	AO-1000-	21
A1830	Plug Screw for Drilled Holes.....	AO-1000-	21
AA578	Throttle Lever Assembly.....	AO-1000-	21
AA580	Carburetor, Complete.....	AO-1000-	21
AA744	Body, Carburetor, with Bushing.....	AO-1000-	21
B449	Bowl Casting.....	AO-1000-	21
B450	Nut, Bowl Retaining.....	AO-1000-	21
B457	Gasket, Bowl Retaining Nut.....	AO-1000-	21
C2501	Float Valve and Seat Assembly.....	AO-1000-	21
C2502	Shaft, Throttle.....	AO-1000-	21
C2504	Bushing, Throttle Shaft, Upper.....	AO-1000-	21
D392	Body, Solder Bushing, Fuel Pipe.....	AO-1000-	21
D2530	Throttle Shaft Bushing, Lower.....	AO-1000-	21
P348	Choker Disk, Air Valve.....	AO-1000-	21

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CARBURETOR—Continued			
S1121	Drain Cock.....	AO-1000-	21
S1-18	Screw, Choker Disk.....	AO-1000-	21
X2458	High Speed Needle.....	AO-1000-	21
X2460	Choker Lever and Shaft Assembly.....	AO-1000-	21
X2461	Idle Needle.....	AO-1000-	21
X2462	Strainer, Complete.....	AO-1000-	21
18-O	Spring, Throttle Stop.....	AO-1000-	21
4W	Screw and Washer Float.....	AO-1000-	21
10W	Clamp Screw, Throttle Lever Adjusting Screw.....	AO-1000-	21
17W	Screw, Throttle Lever.....	AO-1000-	21
41W	Friction Ball, Needle Valve.....	AO-1000-	21
45W	Plug Screw for Drilled Holes.....	AO-1000-	21
57W	Spring, Friction Ball.....	AO-1000-	21
63W	Lock Washer, Choker Disk Screw.....	AO-1000-	21
65W	Spring, Nozzle Retaining.....	AO-1000-	21
67W	Stop Pin, Throttle Lever.....	AO-1000-	21
68W	Spring, Choker Lever Friction.....	AO-1000-	21
69W	Cork Float.....	AO-1000-	21
70W	Screw, Throttle Disk.....	AO-1000-	21
71W	Adjusting Screw, Throttle Lever.....	AO-1000-	21
72W	Washer, Choker Lever Friction Spring.....	AO-1000-	21
73W	Gasket, Float Valve Seat.....	AO-1000-	21
74W	Washer, Choker Friction.....	AO-1000-	21
75W	Lever, Float.....	AO-1000-	21
76W	Disk, Throttle.....	AO-1000-	21
77W	Gasket, Strainer.....	AO-1000-	21
78W	Gasket, Bowl.....	AO-1000-	21
79W	Pipe Plug, Hex. Head.....	AO-1000-	21
80W	Pipe Plug, Headless.....	AO-1000-	21
81W	Lock Washer, Throttle Disk Screw.....	AO-1000-	21
83W	Drill Plug (7/32", -32).....	AO-1000-	21
85W	Drill Plug (1/4", -28).....	AO-1000-	21
90W	Pin, Float Pivot.....	AO-1000-	21
91W	Screw, Float Bearing.....	AO-1000-	21
94W	Screw, Choker Friction Spring.....	AO-1000-	21
95W	Nozzle.....	AO-1000-	21
321R	Gasket, Carburetor to Manifold.....	AO-1000-	21
AIR CLEANER			
A447	Clamp, Air Cleaner Elbow Hose.....	AO-1000-	18
A971	Hose, Air Cleaner Elbow to Carburetor.....	AO-1000-	18
A1269	Gasket, Air Cleaner.....	AO-1000-	18
A1401	Snap Ring, Air Cleaner Bracket Intake Plate.....	AO-1000-	18
A1782	Air Cleaner Bracket Intake Plate (Fits AO-1000- with AA1289).....	AO-1226-	18
A1966	Baffle Lock Ring.....	AO-1000-	18
A1967	Filter Lock Ring.....	AO-1000-	18
AA929	Air Cleaner Complete, United.....	AO-1000-	18
AA1287	Elbow, Carburetor Air Inlet with Pipe.....	AO-1000-	18
AA1289	Bracket, Air Cleaner, Complete.....	AO-1000-	18
AA1674	Air Cleaner Body.....	AO-1000-	18
AA1675	Baffle with Handle.....	AO-1000-	18
AA1676	Oil Cup and Clip Assembly.....	AO-1000-	18
C1572	Wing Nut.....	AO-1000-	18
D1034	Gasket, Elbow to Carburetor.....	AO-1000-	18
TOOL BOX AND TOOLS			
A577	Socket Wrench for Spade Lug and Flywheel Bolt Nuts.....	AO-1000-	22
C1591	Socket for Cylinder Head Nuts.....	AO-1000-	22
D1083	Socket Wrench for Connecting Rod Bolt Nuts.....	AO-1000-	22
JD7751	Grease Gun No. 6556.....	AO-1000-	22
POWER SHAFT PARTS			
A175	Shaft, Power Shaft Shifter.....	AO-1000-	22
A551	Shifter, Power Shaft Gear.....	AO-1000-	22
A552	Arm, Power Shaft Shifter.....	AO-1000-	22
A554	Gear, Power Shaft Bevel (17 Teeth).....	AO-1000-	22
A558	Bushing, Power Shaft Bevel Gear, Bronze.....	AO-1000-	22
A559	Washer, Power Shaft Bevel Gear, Thrust.....	AO-1000-	22
A561	Washer, Power Shaft Bevel Gear, Retaining.....	AO-1000-	22

REPAIRS FOR MODEL "AO" STREAMLINED TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
POWER SHAFT PARTS—Continued			
A562	Snap Ring, Power Shaft Bevel Gear.....	AO-1000-	22
A564	Bushing, Power Shaft Drive Shaft.....	AO-1000-	22
A565R	Cover, Power Shaft Right Bearing.....	AO-1000-	22
A567	Shim, Power Shaft Right Bearing Cover, Thin.....	AO-1000-	22
A568	Shim, Power Shaft Right Bearing Cover, Thick.....	AO-1000-	22
A571	Shaft, Power.....	AO-1000-	22
A572	Snap Ring, Power Shaft Rear End.....	AO-1000-	22
A574	Gasket, Power Shaft Stuffing Box.....	AO-1000-	22
A574	Gasket, Power Shaft Guard.....	AO-1000-	22
A575	Packing, Power Shaft Rear End (3 used).....	AO-1000-	22
A774R	Stuffing Box, Power Shaft Rear End.....	AO-1000-	22
A775	Gland, Power Shaft Rear End Packing.....	AO-1000-	22
A919	Lever, Power Shaft Shifter Hand.....	AO-1000-	22
A1031	Gear, Power Shaft Sliding.....	AO-1000-	22
A1032	Pinion, Power Shaft Bevel Drive.....	AO-1000-	22
A1033	Shaft, Power Shaft Drive.....	AO-1000-	22
A1112	Gear, Power Shaft Bevel (19 Teeth) (Underdrive).....	AO-1000-	22
A1113	Shaft, Power Shaft Drive (Underdrive).....	AO-1000-	22
A1114	Pinion, Power Shaft Bevel Drive (16 Teeth) (Underdrive).....	AO-1000-	22
A1116	Shifter, Power Shaft (Underdrive).....	AO-1000-	22
A1242	Guard, Power Shaft End.....	AO-1000-	22
A1414	Shaft, Power Shaft Shifter (Underdrive).....	AO-1000-	22
A1415	Gear, Power Shaft Sliding (13 Teeth) (Underdrive).....	AO-1000-	22
AD1770	Lead Washer, Cap Screw, Power Shaft Drive Shaft, R. H. Bearing Cover.....	AO-1000-	22
D377	Spring, Power Shaft Shifter Hand Lever.....	AO-1000-	22
D993	Spring, Power Shaft Shifter Yoke.....	AO-1000-	22
D1164	Woodruff Key, Power Shaft Drive Shaft Pinion.....	AO-1000-	22
D1164	Woodruff Key, Power Shaft Bevel Drive Pinion (Underdrive).....	AO-1000-	22
JD7664	Bearing, Power Shaft, Rear.....	AO-1000-	22
JD7664	Bearing, Power Shaft Drive Shaft, R. H.....	AO-1000-	22
405R	Ball, Power Shaft Shifter.....	AO-1000-	22

HARDWARE LIST FOR MODEL "AO" STREAMLINED TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS					
1684R	A11R	Differential Bearing Quill to Case.....	1/2"x1-1/2"	3
1670R	A41R	In Left Governor Bearing Housing to Case.....	3/8"x1"	5
D942	A51R	Radiator to Front End.....	5/8"x2-1/4"	2
A310	A69R	Sliding Gear Shaft Right Bearing Cover to Case (Drilled).....	7/16"x1-1/4"	2
D474	A178	In Cam Follower Guide Support.....	1/2"x1-3/4"	3
A487	A253	Cam Shaft Lock Plate to Gear.....	.375-.372x1"	2
1669R	A550	Sliding Gear Shaft and Countershaft Bearing Cover to Case.....	3/8"x3/4"	6
D459	A565R	Power Shaft Right Bearing Cover to Case (Drilled).....	3/8"x1"	2
1670R	A774R	Power Shaft Stuffing Box to Cover.....	3/8"x1"	3
1670R	A902	Crank Case Cover to Case.....	3/8"x1"	7
1671R	A918	Gear Shift Lock Screw.....	3/8"x1-1/4"	1
1683R	A927	Fan Shaft Support to Front End.....	1/2"x1-1/4"	2
1683R	A931R	Water Pipe to Radiator.....	1/2"x1-1/4"	2
A871	A944R	In Speed Control Shaft Bracket.....	5/16"x1-1/4"	2
C806	A1152	Oil Filter Body to Head.....	5/16"x9/16"	3
1670R	A1180	Fan Shaft Rear Bearing to Governor Case.....	3/8"x1"	3
D916	A1597R	Oil Pump Drive Gear Bearing to Cam Follower Guide (Drilled).....	3/8"x3/4"	2
1669R	A1655	Clutch Fork Shaft Bearing to First Reduction Gear Cover.....	3/8"x3/4"	2
D475	A1661R	Clutch Driving Disk Washer to Crankshaft.....	5/8"x1-1/2"	1
1667R	A1672R	Left Main Bearing Cover to Left Main Bearing Housing.....	5/16"x1"	2
A309	A1672R	Left Main Bearing Cover to Left Main Bearing Housing.....	5/16"x1-3/4"	3

HARDWARE LIST FOR MODEL "AO" STREAMLINED TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
CAP SCREWS—Continued					
A313	A1678R	Front End to Cylinder.....	5/8"x1-3/4"	2
A951	A1678R	Front End to Cylinder.....	5/8"x2"	2
A951	A1678R	Front End to Case.....	5/8"x2"	4
B568	A1678R	Front End to Cylinder (Special Head).....	5/8"x3-3/4"	2
A313	A1680	Clutch Lever Bracket to Rear Axle Housing.....	5/8"x1-3/4"	3
1676R	A1686R	Rear Axle Housing Cover to Housing.....	7/16"x1-1/4"	15
C834	A1692R	Dust Shield to Cover (Drilled).....	5/16"x9/16"	4
1682R	A1692R	Right Dust Shield and Fender Reinforcement to First Reduction Gear Cover.....	1/2"x1"	2
1682R	A1693	Left Dust Shield to Transmission Case.....	1/2"x1"	2
1671R	A1726	On Cowl Fastening.....	3/8"x1-1/4"	1
1683R	A1733	In Steering Worm Housing.....	1/2"x1-1/4"	4
A1758	A1879	L. Citrus Fender Brace to Crankcase.....	5/8"x3-1/4"	1
1670R	AA227	Cam Shaft Bearing Housing to Case.....	3/8"x1"	2
1670R	AA580	Carburetor to Manifold.....	3/8"x1"	1
1683R	AA565	Upper Water Pipe to Cylinder.....	1/2"x1-1/4"	4
1683R	AA813	Governor Case to Case.....	1/2"x1-1/4"	5
1684R	AA813	Governor Case to Case.....	1/2"x1-1/2"	2
1669R	AA818	Front Fan Bearing Housing to Support.....	3/8"x3/4"	2
1670R	AA823	Transmission Case Cover to Case.....	3/8"x1"	5
A1271	AA929	Air Cleaner to Bracket.....	5/16"x3"	4
A871	AA934	Oil Filter Cover to Head (Full Length Thread).....	5/16"x1-1/4"	2
1668R	AA934	Oil Filter Cover to Head.....	5/16"x1-1/2"	1
A313	AA1266	Rear Axle Housing to Case.....	5/8"x1-3/4"	12
1676R	AA1274	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7
B155	AA1274	First Reduction Gear Cover to Case.....	7/16"x4-1/4"	1
C1871	AA1277	Right Brake Housing to Case.....	1/2"x1-7/8"	2
1684R	AA1278	Left Brake Housing to Case.....	1/2"x1-1/2"	2
1670R	AA1287	Carburetor Intake Elbow to Carburetor.....	3/8"x1"	1
1683R	AA1289	Air Cleaner Bracket to Radiator Top Tank.....	1/2"x1-1/4"	3
A312	AA1309	Right Main Bearing to Case (Drilled).....	5/8"x1-1/2"	2
A1673	AA1309	Right Main Bearing to Case (Drilled).....	5/8"x2"	2
D475	AA1310	Left Main Bearing to Case.....	5/8"x1-1/2"	3
D475	AA1330	Platform to Rear Axle Housing.....	5/8"x1-1/2"	4
D2461	AA1355	Drawbar Support to Rear Axle Housing.....	3/4"x2"	3
A871	AA1407	Hub Cap to Hub (Disk Type Wheel).....	5/16"x1-1/4"	6
1672R	AB706	Magneto to Governor Case.....	3/8"x1-1/2"	2
1671R	AC119	Hub Cap to Hub (Spoke Type Wheel).....	3/8"x1-1/4"	6
1671R	AD452	In Front Wheel Knuckle Nut.....	3/8"x1-1/4"	2
1683R	B241R	Oil Pump Body to Case.....	1/2"x1-1/4"	3
1670R	B247	Oil Pump Cover to Body.....	3/8"x1"	4
1670R	B273	Spring to Governor Arm.....	3/8"x1"	1
1685R	B639	Brake Latch to Brake Housing—Right.....	1/2"x2"	1
1685R	B639	Brake Latch to Brake Housing—Left.....	1/2"x2"	1
1671R	D2427	Clamp for Oil Filter Adjusting Screw.....	3/8"x1-1/4"	1
SET SCREWS—SQUARE HEAD—CUP POINT					
A318	A1416	For Gear Shift Shaft.....	1/2"x3-1/4"	1
SET SCREWS—SQUARE HEAD—DOG POINT					
D1086	A1658R	Pulley Brake Adjusting Screw.....	1/2"x2-1/4"	1
A320	A1735	In Speed Control Bracket.....	5/16"x3/4"	1
A320	A1735	In Speed Control Lever.....	5/16"x3/4"	1
A320	A1796	In Shutter Control Bracket.....	5/16"x3/4"	1
SET SCREWS—SQUARE HEAD—CONICAL POINT					
A1253	A1241R	In Governor Arm.....	3/8"x1-3/8"	1
MACHINE SCREWS—ROUND HEAD					
E2064	A1175	Inside Governor Lever to Shaft.....	1/4"x20-1/2"	2
E2162	A1655	Clutch Fork Shaft Bearing Cover to First Reduction Gear Cover.....	1/4"x20-5/8"	4
E2064	AA824	Oil Filter Leaf By-Pass to Oil Filter Head.....	1/4"x20-1/2"	2
DRIVE SCREWS—ROUND HEAD					
D454	A1604	In Serial No. Plate.....	No. 7x3/8"	2
A1648	A1640R	In Pulley Rim to Hold Clutch Dust Cover.....	No. 4x3/16"	3
D454	AA325	In Radiator Curtain.....	No. 7x3/8"	4

HARDWARE LIST FOR MODEL "AO" STREAMLINED TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CARRIAGE BOLTS WITH HEX. NUTS					
C1647	C1573	In Hood Clip to Hood Clip Bracket.....	3/8"x1-1/4"	2
C980	C1573	In Hood Clip to Fuel Tank Rear Support.....	3/8"x1-1/2"	2
D585	D583	In Front Wheel Rim Clamp to Rim.....	1/2"x3"	8
D1550	D1551	In Weight Clamp to Front Wheel Weight.....	5/8"x3"	12
CARRIAGE BOLTS WITHOUT NUTS					
A317	AD1606	Seat to Seat Support.....	5/8"x2-1/2"	1
C1517	C2199	Sand Lug to Wheel.....	3/4"x2-1/4"	48
MACHINE BOLTS WITH SQUARE NUTS					
1615R	A115R	In Overdrive Shifter Lever.....	3/8"x1-3/4"	1
D595	A192	In Radiator Straps.....	5/16"x7/8"	8
1611R	A192	In Radiator Sides.....	5/16"x1-1/8"	14
B848	A618	Seat Spring Bolt Strap to Rear Axle Housing.....	5/8"x3-1/4"	1
1615R	A917	In Gear Shifter Arm.....	3/8"x1-3/4"	1
1638R	A1741R	Drawbar End to Drawbar.....	5/8"x2-1/2"	2
1622R	A1879	R. Citrus Fender Brace to R. Citrus Fender Bottom Brace.....	1/2"x1-1/2"	1
1624R	A1879	R. Citrus Fender Brace to Front End.....	1/2"x2"	1
1622R	A1887	L. Citrus Fender Brace to L. Citrus Fender Bottom Brace.....	1/2"x1-1/2"	1
1613R	AA270	In Fuel Tank Strap.....	3/8"x1-1/4"	2
1622R	AA1286	In Muffler to Manifold.....	1/2"x1-1/2"	2
D571	AA1286	In Muffler to Manifold.....	1/2"x3-3/4"	2
M21	AA1299	Fan Shroud to Radiator Sides.....	3/8"x3/4"	6
1622R	AA1325	On Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	2
1614R	AA1331	R. H. Center Brace to Platform Support.....	3/8"x1"	1
1621R	AA1331	R. H. Crown End Sheet to Fender Cross Angle.....	1/2"x1-1/4"	3
1622R	AA1331	On R. H. Fender Crown Sheet to Platform Cross Angle.....	1/2"x1-1/2"	1
1621R	AA1332	L. H. Crown Sheet to Fender Cross Angle.....	1/2"x1-1/4"	3
1614R	AA1332	L. H. Center Brace to Platform Support.....	3/8"x1"	1
1622R	AA1332	On L. H. Fender Crown Sheet to Platform Cross Angle.....	1/2"x1-1/2"	1
1614R	AA1337	R. H. Front Brace to Platform Support.....	3/8"x1"	1
1614R	AA1338	L. H. Front Brace to Platform Support.....	3/8"x1"	1
B846	B845	Seat Channel Stop Strap to Rear Axle Housing.....	5/8"x4-3/4"	1
1622R	C1646R	In Button Lug.....	1/2"x1-1/2"	48
D544	D1524	Front Wheel Guide Band to Wheel.....	1/2"x1"	16
MACHINE BOLTS WITH HEX. NUTS					
D1767	A1730R	Steering Worm Adjusting Nut Clamp Bolt.....	1/2"x3"	1
1935R	A1736	Steering Shaft Rear Support to Clutch Lever Bracket.....	1/2"x3-1/2"	1
A1829	A1827R	Front Wheel Weight to Wheel.....	1/2"x4-3/4"	6
1938R	AB214	Steering Shaft Bearing to Steering Shaft Bracket.....	1/2"x4-1/2"	1
1971R	AD984	Wheel Weight to Wheel.....	3/4"x6"	4
MACHINE BOLTS WITHOUT NUTS					
A734	A192	Sides and Rear Strap to Radiator Top Tank.....	5/16"x7/8"	22
A619	A618	Seat Spring Bolt.....	5/8"x9"	1
A734	A1678R	Citrus Fender Pulley Guard to Front Support.....	5/16"x7/8"	1
D616	AA1353	Drawbar Support Brace to Drawbar Support Assembly.....	3/4"x2-3/4"	1
A1742	AA1353	Drawbar to Front Support.....	3/4"x3-1/4"	1
A327	AD1470	Wheel Weight to Wheel.....	3/4"x4-3/4"	4
STOVE BOLTS—ROUND HEAD— SQUARE NUTS					
A1858	A1692	R. H. Dust Shield to R. H. Dust Shield Extension.....	5/16"x1"	1
A1858	A1693	L. H. Dust Shield to Tool Box.....	5/16"x1"	1
A1858	A1874	Rear Citrus Fender Bracket to Fender Crown Sheets.....	5/16"x1"	4
C2392	A1875	Hinge Reinf. to Citrus Fender Pulley Guard.....	1/4" x5/8"	2
A1858	AA1331	R. H. Fender Side Sheet to Brace and R. H. Dust Shield.....	5/16"x1"	4
A1858	AA1331	R. H. Fender Side Sheet to Platform Support.....	5/16"x1"	5
A1858	AA1332	L. H. Fender Side Sheet to Brace and L. H. Dust Shield.....	5/16"x1"	4
A1858	AA1332	L. H. Fender Side Sheet to Platform Support.....	5/16"x1"	5
A1858	AA1337	R. H. Center Brace to R. H. Fender Center Sheet.....	5/16"x1"	2
A1858	AA1337	R. H. Center Brace to R. H. Fender Crown Sheet.....	5/16"x1"	2

HARDWARE LIST FOR MODEL "AO" STREAMLINED TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
STOVE BOLTS—ROUND HEAD— SQUARE NUTS—Continued					
A1858	AA1338	L. H. Center Brace to L. H. Fender Center Sheet	5/16"x1"	2
A1858	AA1338	L. H. Fender Center Brace to L. H. Crown Sheet	5/16"x1"	2
A1858	AA1340	Dash to Fender Side Sheets	5/16"x1"	4
A1858	AA1343	Pulley Guard to R. H. Fender Crown Sheet	5/16"x1"	2
A1858	AA1343	Pulley Guard to Rear Fender Front Brace	5/16"x1"	3
A1858	AA1343	Pulley Guard to Hood	5/16"x1"	7
A1858	AA1344	Flywheel Guard to Hood	5/16"x1"	7
A1858	AA1344	Flywheel Guard to L. H. Front Brace	5/16"x1"	3
A1858	AA1344	Flywheel Guard to L. H. Fender Crown Sheet	5/16"x1"	2
C2392	AA1571	Hinge Reinf. to Citrus Fender Flywheel Guard	1/4"x5/8"	2
2394R	B465R	Spark Plug Cable Clamp to Conduit Shield	1/4"x20"x1-1/4"	1
STOVE BOLTS—ROUND HEAD— WITHOUT NUT					
2568R	A470	Spark Plug Cable Clamp to Conduit	5/16"x1-1/2"	1
A1935	A1874	R. Citrus Fender to Citrus Fender Brackets	5/16"x1"	9
A1935	A1874	L. Citrus Fender to Citrus Fender Brackets	5/16"x1"	9
D2319	AA1293	Radiator Guard to Radiator Side	5/16"x3/4"	4
D2319	AA1343	Pulley Guard Front Support to Radiator Side	5/16"x3/4"	2
D2319	AA1344	Flywheel Guard Front Support to Radiator Side	5/16"x3/4"	2
B497	B465R	Spark Plug Cable Conduit Clamp to Fanshaft Tube	5/16"x1-3/4"	1
HEXAGON NUTS					
1504R	A119	On Overdrive R. H. Bearing Stud	3/8"	2
1512R	A152	On Brake Lever Shaft	5/8"	2
1513R	A327	On Drive Wheel Weight Bolts	3/4"	4
A337	A601	On Tappet Lever Adjusting Screw	3/8"	4
1512R	A734	On Front End to Case to Support Screws	5/8"	1
1514R	A908	On Clutch Operating Rod	9/16"	1
D1771	A938	On Steering Shaft	3/4"	1
1505R	A1003R	On Manifold Studs	7/16"	4
1513R	A1062	On Wheel Support to Wheel Bolts	3/4"	12
1505R	AA806	On Countershaft R. H. Bearing Housing to Case Stud	7/16"	4
1503R	A1188	On Throttle Lever Stop Screw	5/16"	2
1504R	A1241R	On Governor Arm Set Screw	3/8"	1
1513R	A1298	In Spud Lugs	3/4"	48
1518R	A1566	On Steering Arm Stud	5/8"	4
1503R	A1628R	On R. H. and L. H. Radiator Guard Bracket	5/16"	4
1506R	A1730R	On Steering Gear Housing Stud	1/2"	1
1503R	A1737	On Speed Control Rod End	5/16"	1
1512R	A1828	On Hook Bolt	5/8"	6
1512R	AA437	On Cylinder Flange Studs	5/8"	6
1512R	AA464	On Cylinder Head Studs	5/8"	9
1504R	AA1047	On Cam Shaft Gear Stud	3/8"	2
1505R	AA1274	On First Reduction Gear Cover Stud	7/16"	1
1515R	AA1285	On Radius Rod Pivot Stud	7/8"	1
1516R	AA1285	On Radius Rod	1"	2
1512R	AA1310	On L. H. Main Bearing to Case Stud	5/8"	1
1506R	AA1318	On Pulley Brake Adjusting Set Screw	1/2"	1
1513R	AA1355	On Drawbar Support Brace to Drawbar Bolt	3/4"	1
1513R	AC649	On Cast Cone Lugs	3/4"	48
A333	AD1606	On Seat Spring Bolt (Square Grip Nut)	5/8"	1
1504R	B273	On Spring to Governor Arm Screw	3/8"	1
1512R	B738	On Clutch Lever Pivot Bolt	5/8"	1
1513R	C981	On Flywheel Bolts	3/4"	2
1513R	C1517	On Sand Lug Bolts	3/4"	48
1503R	D156	On Spindle Taper Bolt	5/16"	2
1513R	D411	On Spade Lug Bolts	3/4"	48
1513R	D411	On Support to Support Bolts	3/4"	12
1513R	D2185	On Drive Wheel Weight Bolts	3/4"	6
1512R	JD1217	On Drive Wheel Bolts	5/8"	12
HEXAGON NUTS—CASTELLATED					
A336	A191	On Main Bearing Bolts	5/8"	4
A336	A256	On Main Bearing Bolts	5/8"	4
C1104	A938	On Steering Gear Shaft	7/8"	2
B112	A1637	On Filler Cap Stud	3/4"	1
A335	A1645	On Clutch Operating Bolts	1/2"	3
D336	AA382	On Connecting Rod Bolts	9/16"	4
C535	AA797	On Overdrive Gear Shaft	1"	1
C535	AA807	On Brake Shaft	1"	2

HARDWARE LIST FOR MODEL "AO" STREAMLINED TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
HEX. JAM NUTS					
D2781	A105	On Tappet Lever Stud	1/2"	2
D528	A118	On Throttle Rod End	1/4"	1
D2782	A938	On Steering Gear Shaft Adjusting Screw	5/8"	1
D2781	A1416	On Gear Shift Shaft Set Screw	1/2"	1
C985	A1676	On Tie Rod	7/8"	2
D2780	A1726	On Cowl Fastening	3/8"	1
D528	A1797	On Shutter Control Rod End	1/4"	1
D2781	B639	On Brake Latch to Brake Housing Screw, R. H.	1/2"	1
D2781	B639	On Brake Latch to Brake Housing Screw, L. H.	1/2"	1
SQUARE NUTS					
A334	AA1353	On Drawbar to Front Support Bolt (Special)	3/4"	1
RIVETS—R. I. HEAD					
A348	A150	In Differential Bevel Pinion Shaft	5/16"x2-1/2"	3
D437	A596	Shifter to Yoke	3/8"x1-1/2"	6
D436	A913	Gear Shifter Interlock to Transmission Case Cover	3/8"x1-1/8"	2
B817	A955	In Front Axle Pivot Pin	3/8"x3-1/8"	1
D478	A1725	Cowl Hinge Front Half to Hood	3/16"x3/8"	5
D478	A1726	Cowl to Cowl Angle	3/16"x3/8"	7
D478	A1726	Cowl to Cowl Channel	3/16"x3/8"	8
D443	A1739	Clevis to Drawbar	1/2"x1-7/8"	2
B373	AA1272	In Gear Retaining Washer on First Reduction Gear Spider	5/16"x1-1/4"	3
B372	AA1330	Platform Support to Platform	5/16"x1"	8
B372	AA1331	Fender Cross Angle to Platform	5/16"x1"	6
D430	AA1331	R. H. Fender Center Brace to R. H. Side and Crown Sheet	3/16"x5/8"	6
D430	AA1332	L. H. Fender Center Brace to L. H. Side and Crown Sheet	3/16"x5/8"	6
D478	AA1343	Citrus Fender Stop to Pulley Guard	3/16"x3/8"	2
D478	AA1344	Citrus Fender Stop to Flywheel Guard	3/16"x3/8"	2
D430	AA1566	Through Citrus Fender Sheets, Hinge Halves to Hinge Reinforcements	3/16"x5/8"	13
B372	AA1566	Through Citrus Fender Hinge Halves, Sheet and Hinge Reinforcement	5/16"x1"	1
B372	AA1566	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcements and Bottom Brace Ends	5/16"x1"	2
D430	AA1567	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcements	3/16"x5/8"	13
B372	AA1567	Through Citrus Fender Hinge Halves, Sheet and Hinge Reinforcement	3/16"x1"	1
B372	AA1567	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcement and Bottom Brace Ends	5/16"x1"	2
D430	AA1569	Citrus Fender Pulley Guard to Bottom Brace	3/16"x5/8"	8
D430	AA1569	Through Right Citrus Fender to Bottom Brace	3/16"x5/8"	10
D430	AA1569	Citrus Fender Flywheel Guard to Bottom Brace	3/16"x5/8"	8
D430	AA1569	Left Citrus Fender to Bottom Brace	3/16"x5/8"	10
D479	B438	Oil Relief Spring to Oil Filter Head Cover	1/4"x3/4"	1
D478	C1573	Hood Clips to Hood	3/16"x3/8"	8
D432	C1573	Hood Clip Bracket to Fan Shroud	1/4"x1/2"	4
RIVETS—BRASS					
AD1771	A1013	Cushion to Fuel Tank Front Support (Box of 100)	9/64"x5/16"	4
AD1772	A1014	Cushion to Fuel Tank Rear Support (Box of 100)	9/64"x7/16"	4
AD1773	AA314	Facing to Brake Shoe (Box of 100)	3/16"x5/16"	32
AD1772	AA1318	Pulley Brake Lining to Brake (Box of 100)	9/64"x7/16"	6
A1854	AA1522	Bell Crank to Operating Link		1
A1855	AA1524	Operating Bar to Shutter		16

LOCK WASHERS

Size	No.
1/4"	1729R
5/16"	1721R
3/8"	1722R
7/16"	1723R
1/2"	1724R
5/8"	1726R
3/4"	1728R
1"	1882R

COTTER KEYS


Length	Diameter			
	3/32"	1/8"	3/16"	1/4"
1/2"	1730R			
5/8"	1732R			
3/4"	1733R			
1"	1731R	1735R	1741R	
1-1/4"	1742R			
1-1/2"	1737R		1743R	1745R
2"	1738R		1748R	
3-1/2"				

**CASTINGS SOLD ONLY AS ASSEMBLIES FOR STREAMLINED
MODEL "AO" TRACTOR**





Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A10R	Differential, Complete	AA345	11
A10R	Differential Gear with Shaft	AA331	11	9
A30R	Gear, Cam Shaft with Stud and Nut	AA1047	5	2
A31R	Housing, with Bearing Cup, Cam Shaft—Left	AA227	5	2
A85R	Spacer, Flywheel with Cork	AA244	3	1
A587R	Cylinder Head with Valve Guides	AA464	4	2
A587R	Cylinder Head with Valves	AA465	4
A732R	Cylinder with Studs	AA437	4	2
A732R	Cylinder with Pistons and Gaskets	AA535	4
A845R	Pipe, Upper Water Complete	AA565	8	5
A910R	Gear Shifter, Low and Reverse	AA553	10	7
A911R	Shifter, Overdrive with Yoke	AA793	10	8
A912R	Cover, Transmission Case with Gear Shift Interlock	AA823	3	1
A959R	Elbow, Carburetor Air Inlet with Pipe	AA1287	19	18
A1015R	Gear Shifter, Second Speed	AA538	10	7
A1123R	Cover, Transmission Case with Gear Shift Interlock	AA741	3	1
A1141R	Case, Transmission, Main	AA843	3
A1155R	Housing, Countershaft, R. H. Bearing, with Cup	AA806	11	9
A1170R	Case, Governor, with Lever Shaft Bushing	AA813	5	3
A1277R	Cover, with Bushing, Oil Filter Head	AA861	7	4
A1413R	Housing, Countershaft, R. H. Bearing with Cup (Underdrive)	AA1122	11	9
A1555R	Hub Cap with Oil Fitting, Front Wheel	AA1407	13	14
A1600R	Housing, with Bearing Cups and Oil Seal, Rear Axle	AA1266	11	10
A1603R	First Reduction Gear with Spider, Riveted	AA1272	10	8
A1605R	Cover with Dust Shroud, First Reduction Gear	AA1274	10	8
A1608R	Brake Housing, R. H., with Bushing and Oiler	AA1277	13	13
A1609R	Brake Housing, L. H., with Bushing and Oiler	AA1278	13	13
A1633R	Cap, Radiator, Complete	AA1301	8	5
A1640R	Belt Pulley, with Sleeve, Gear and Bushing	AA1315	9	7
A1658R	Brake with Lining, Pulley	AA1318	9	7
A1662R	Flywheel with Bolts	AA1305	3	1
A1663R	Main Bearing Housing with Cap, R. H.	AA1309	3	1
A1664R	Main Bearing Housing with Cap, L. H.	AA1310	3	1
A1781R	Bracket, Air Cleaner, Complete	AA1289	19	18
B36R	Bearing with Bushing, Steering Shaft, Upper	AB214	14	3
B290R	Housing, Fan Shaft, Front Bearing with Tube	AA818	9	6
C167R	Hub Cap with Oil Fitting, Front Wheel	AC119	13	14

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR


TRANSMISSION CASE

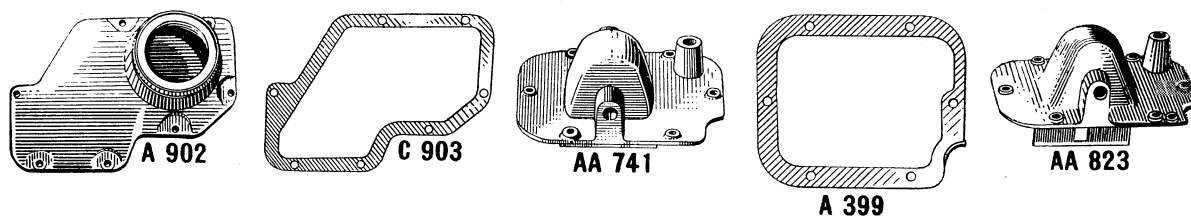

ENGINE, PISTON, CONNECTING RODS, CRANKSHAFT

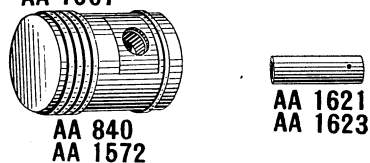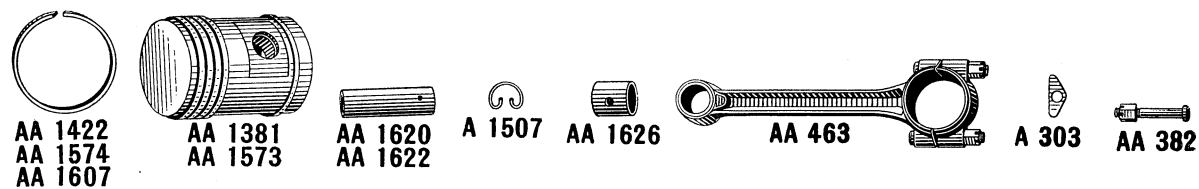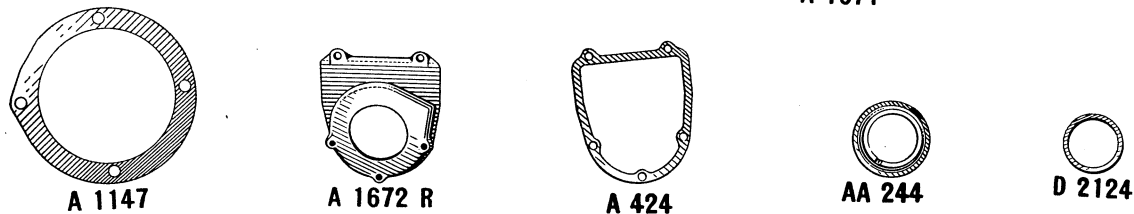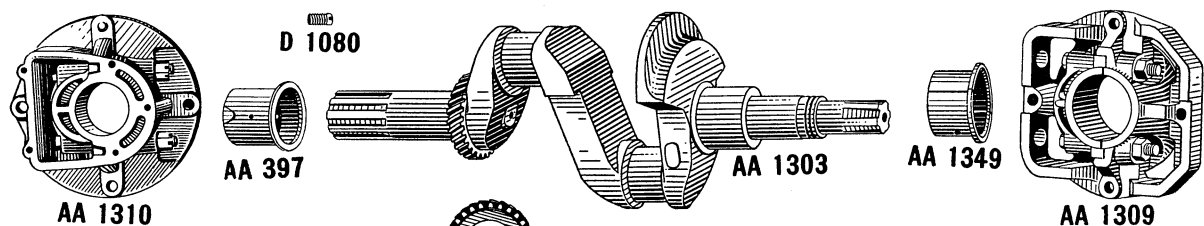


A 319

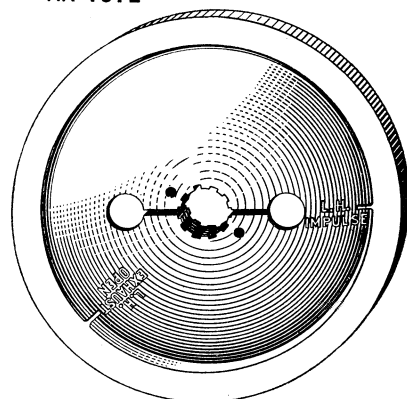


REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

CYLINDER HEAD, VALVES AND MANIFOLD



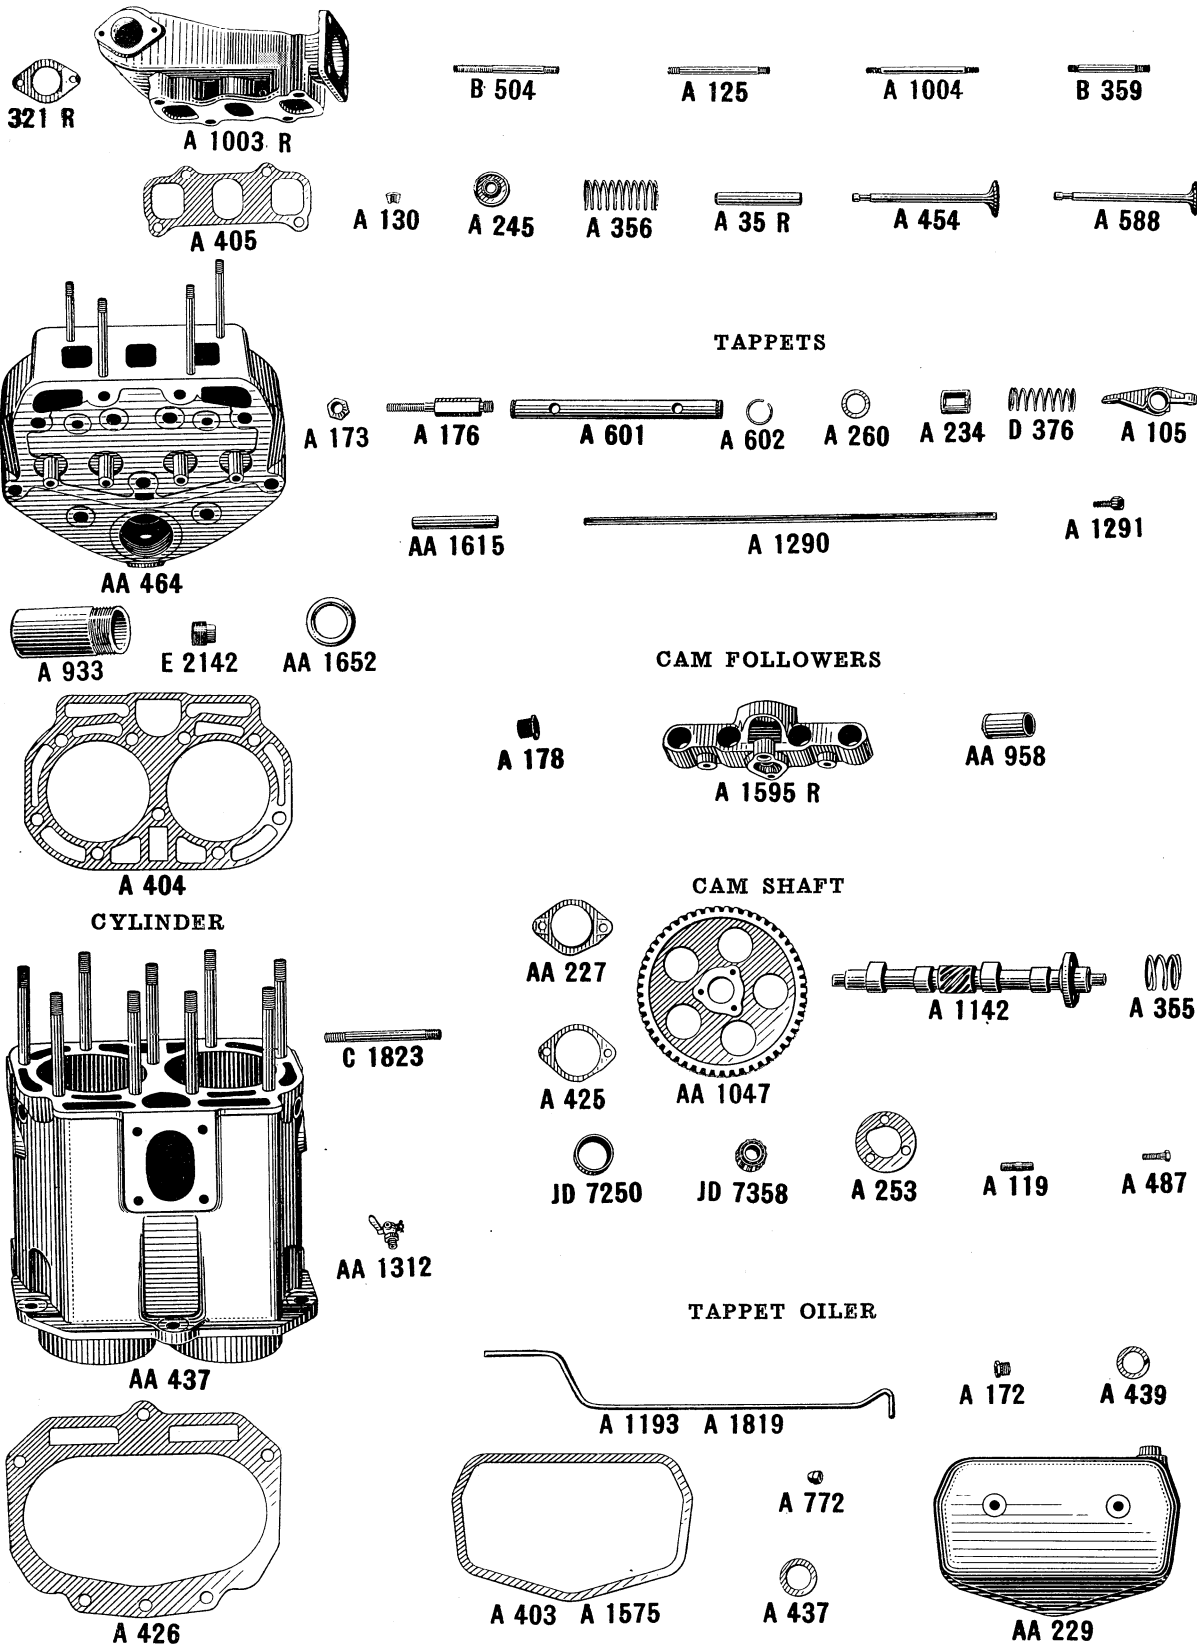


REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

GOVERNOR

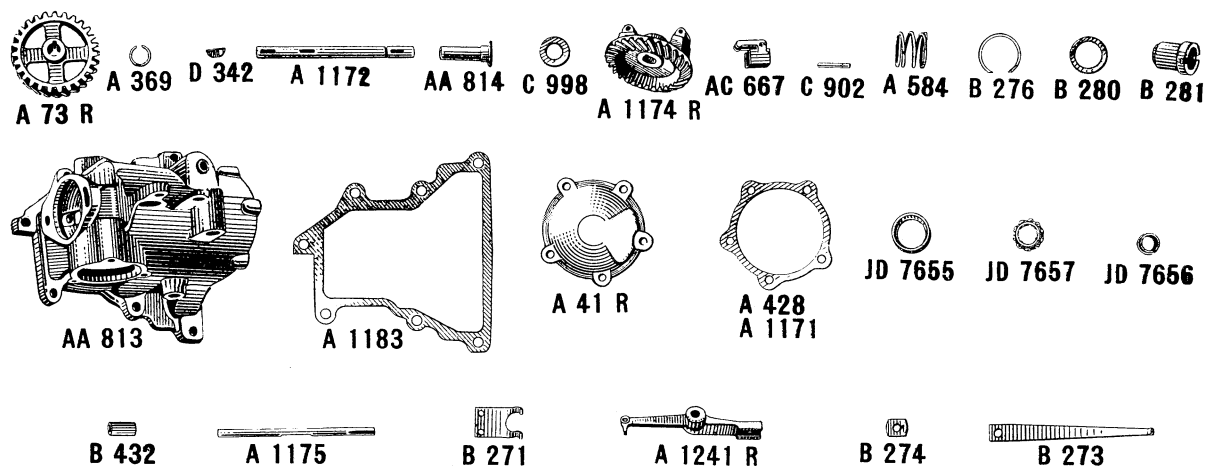

CONTROLS

 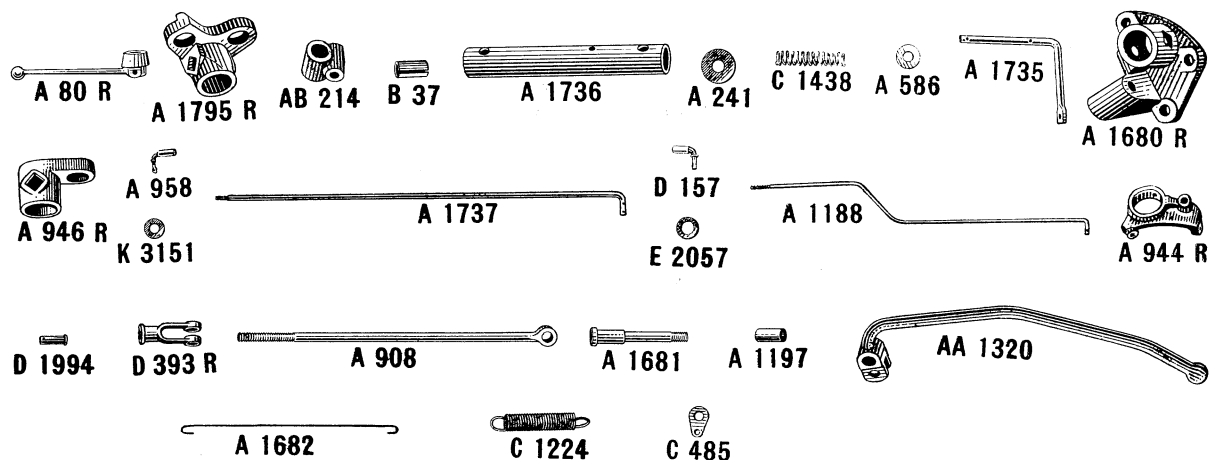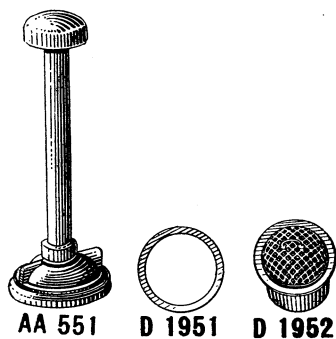
MUFFLER AND SPARK
ARRESTERCRANK CASE
BREATHER

CRANK CASE VENTILATOR




REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR


LUBRICATING SYSTEM AND OIL PUMP

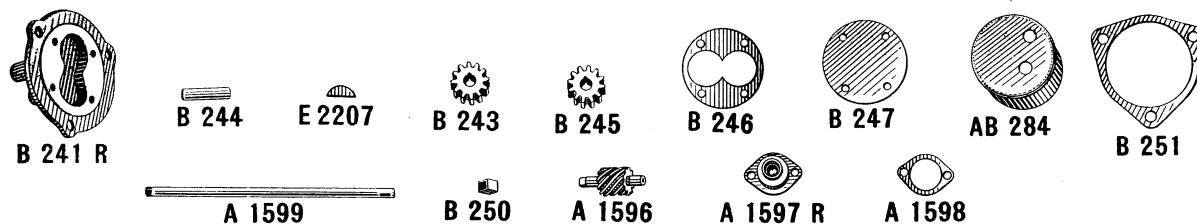


OIL FILTER AND INDICATOR

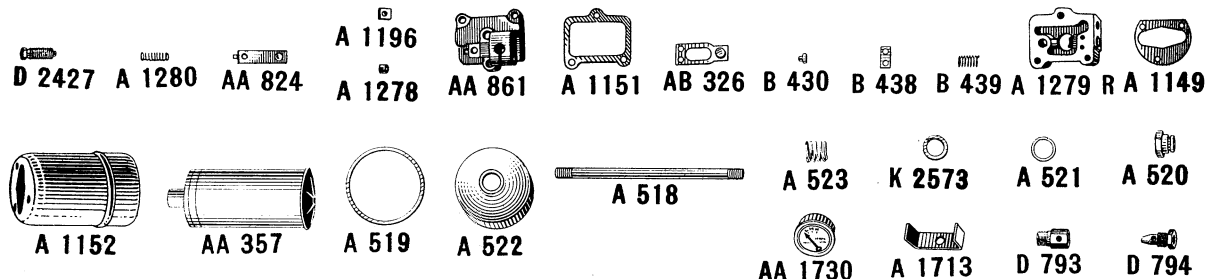

OIL PIPES AND FITTINGS

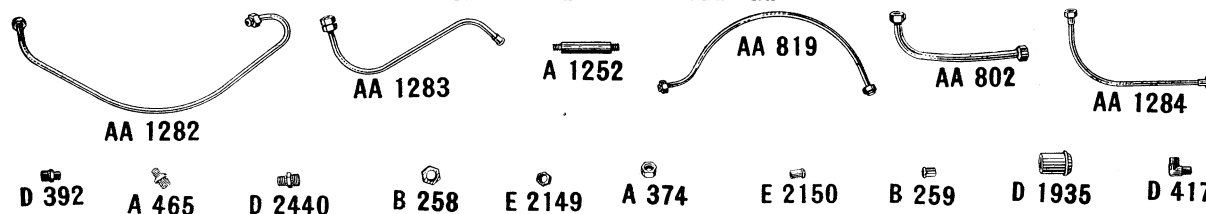

FUEL SYSTEM

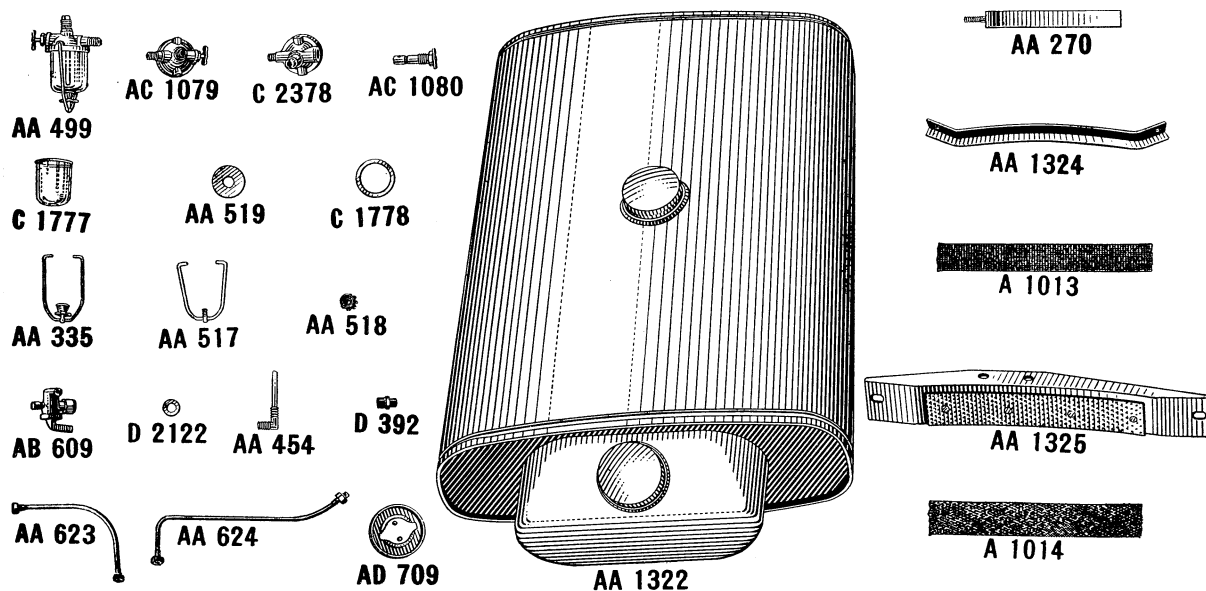

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR


COOLING SYSTEM



AA 1342



A 1712

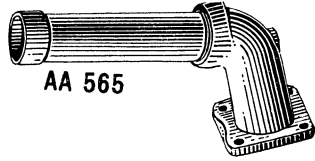


AA 565



A 433



 A 932



A 446



 
A 933



A 448



A 931 R



A 434



 
A 1635 R



A 1636



A 1637




AA 1301



A 1638 R



 
B 112




D 473




A 1634

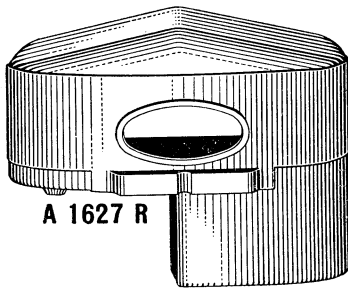


A 1627 R

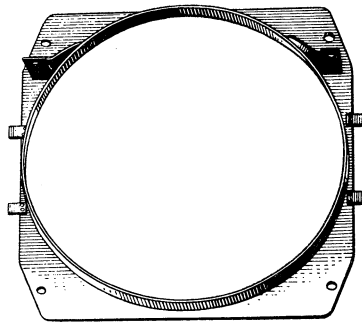


AA 1299

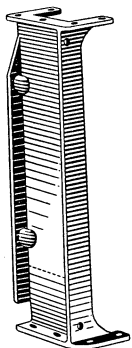


A 1629 R

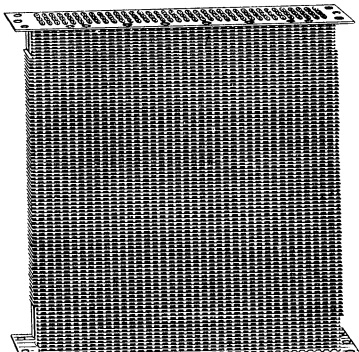


AA 396

 


A 1628 R

 

A 432

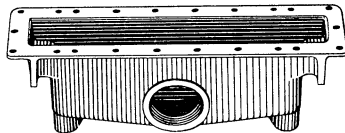


A 51 R


 


A 192


HOOD

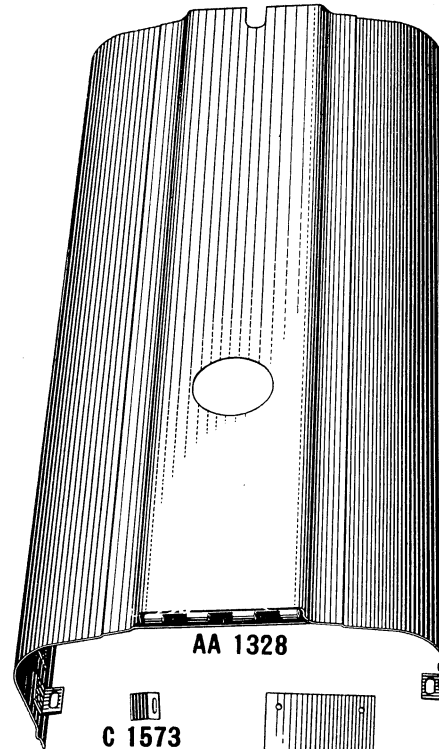

AA 1328

  C 1573
A 1631
A 1632


A 1684

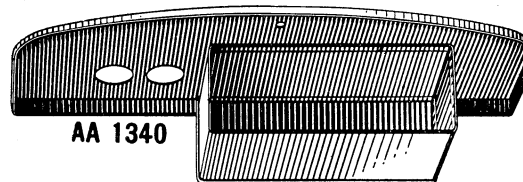

AA 1340

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

RADIATOR GUARD, CURTAIN, SHUTTER AND SHUTTER CONTROL

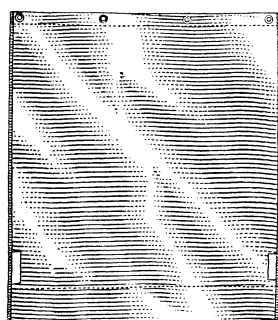

AA 325



A 182



B 423



629 R



A 189



372 R



A 80 R



A 1796



A 1785



A 586



AA 1528



A 1856



A 1853



AA 1522



AA 1521




AA 1524



A 1857




A 1854

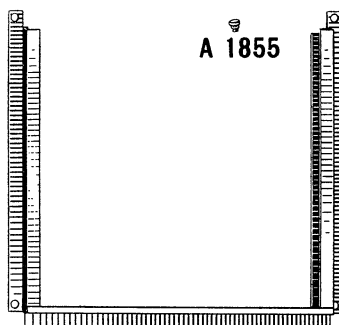


A 1855

 AA 1527



AA 1523

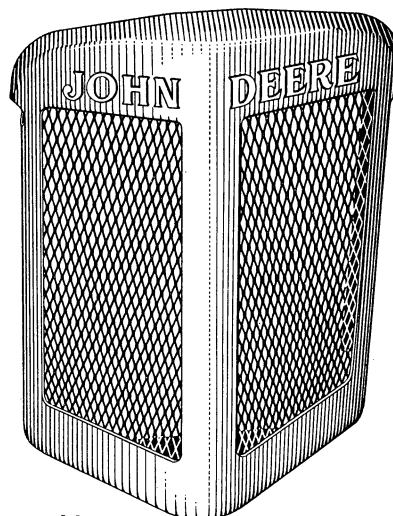

AA 1293

AA 1429



D 157




A 1225



A 241

A 1797

FAN

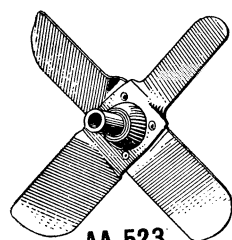

AA 523



D 1720



A 1178



B 298



AB 518



B 296



A 846



A 286



A 393



A 281



D 403



 
A 1177



A 369



1450 R



AA 818



B 293




A 1180 R



A 1181

A 1182

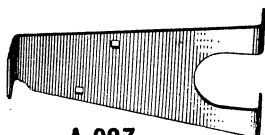

A 927



A 1382



JD 7656



JD 7657




JD 7655


Plate No. 6

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR


PULLEY

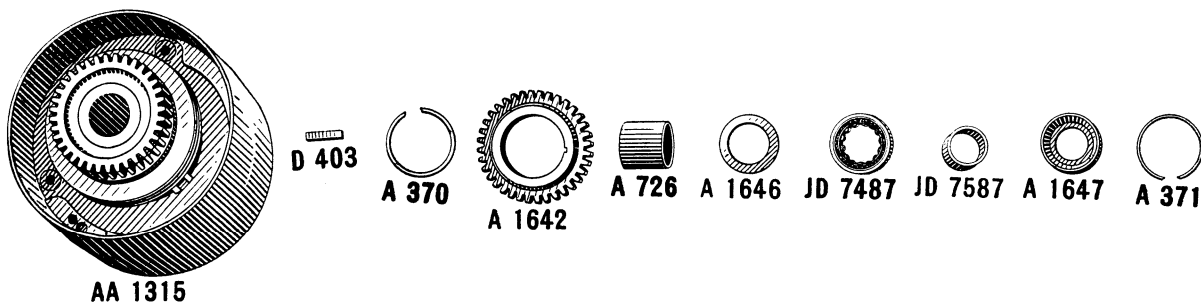

CLUTCH PARTS

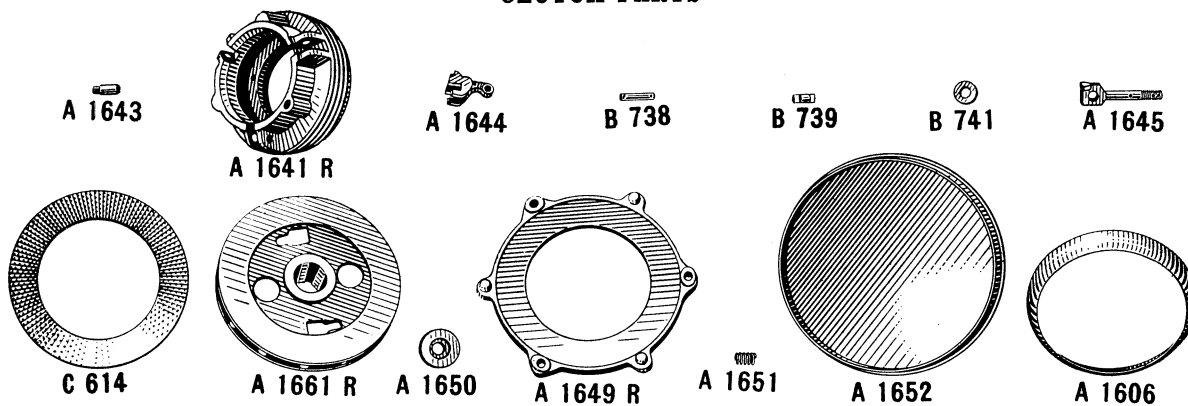

CLUTCH FORK BEARING AND PULLEY BRAKE

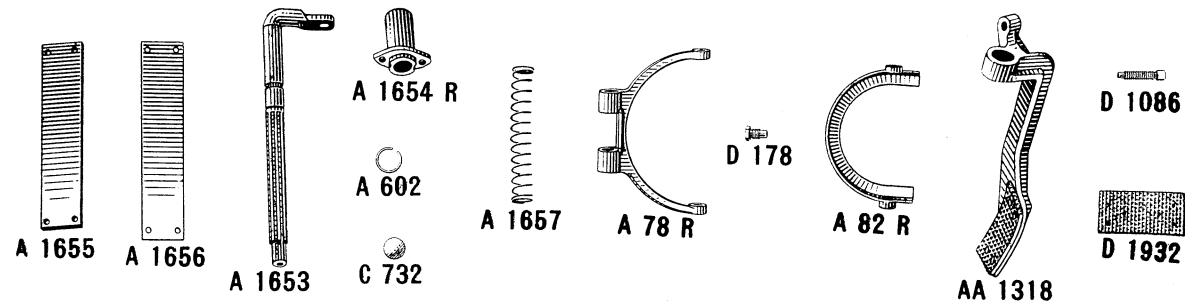

GEAR SHIFT







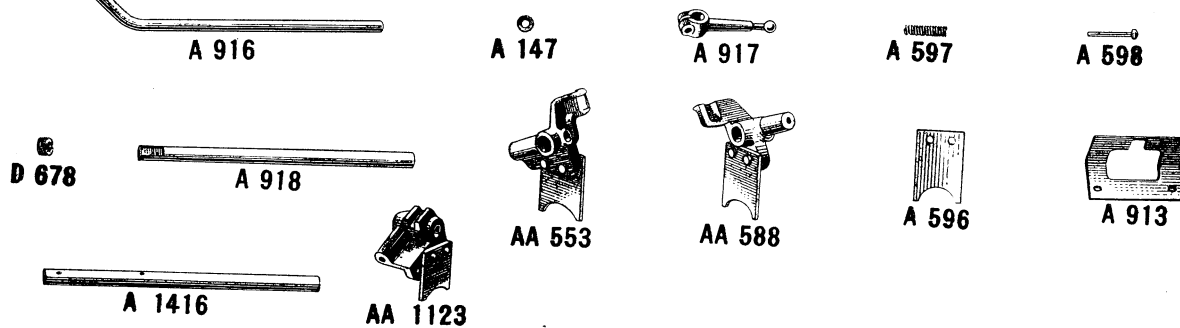


Plate No. 7


REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR**SLIDING GEAR SHAFT****OVERDRIVE GEAR SHIFT****OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR**

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

OVERDRIVE IDLER GEAR AND COUNTERSHAFT

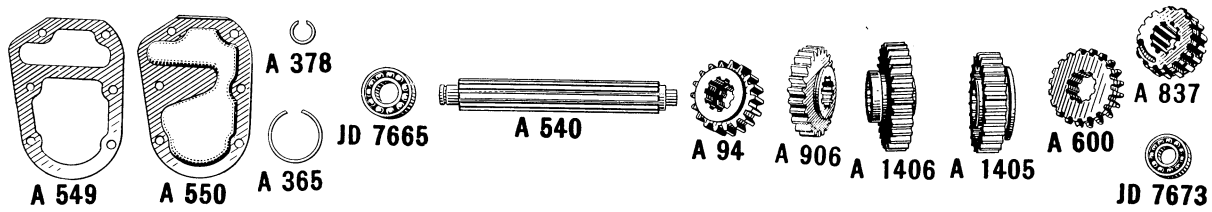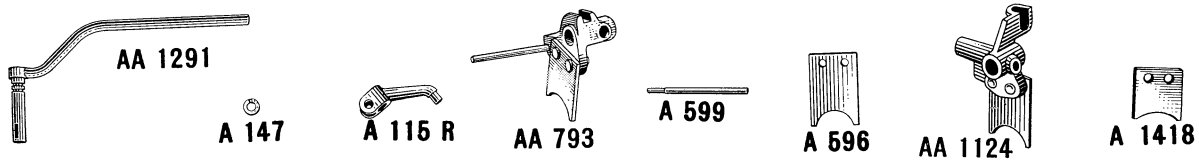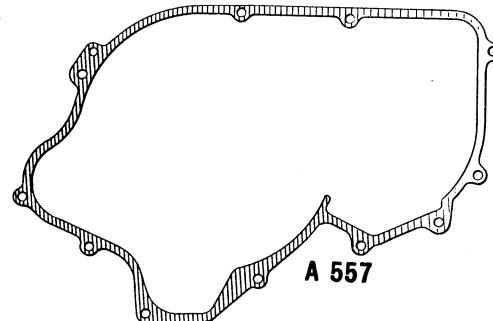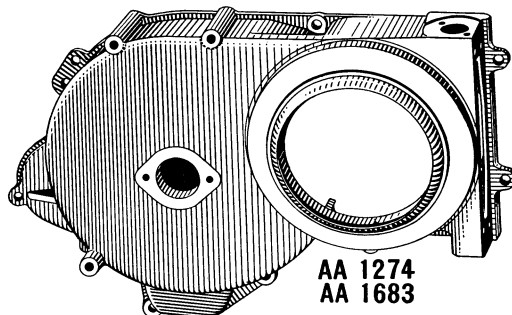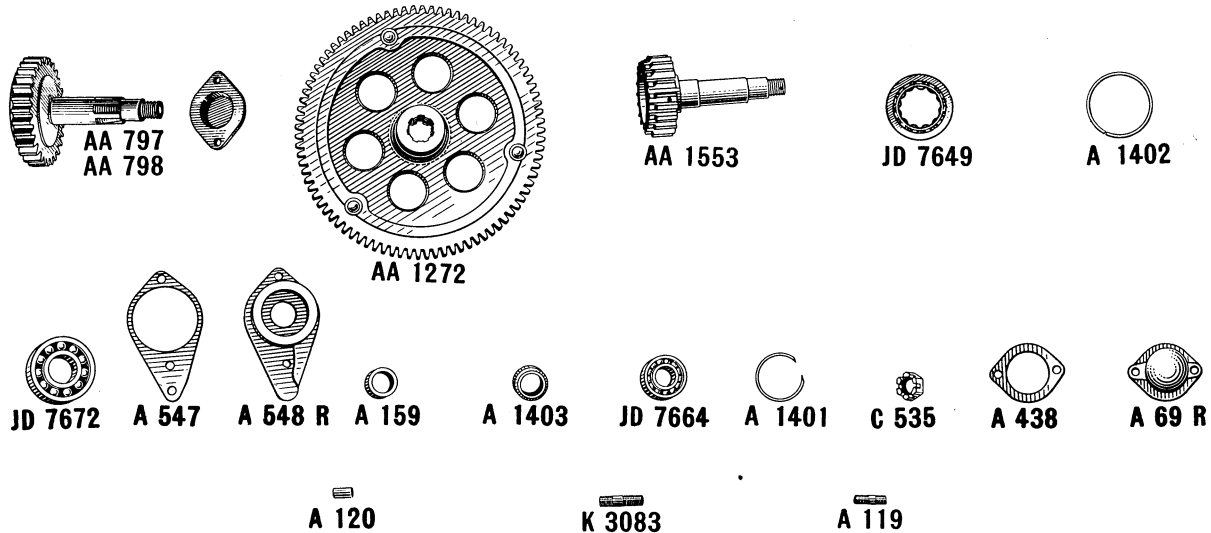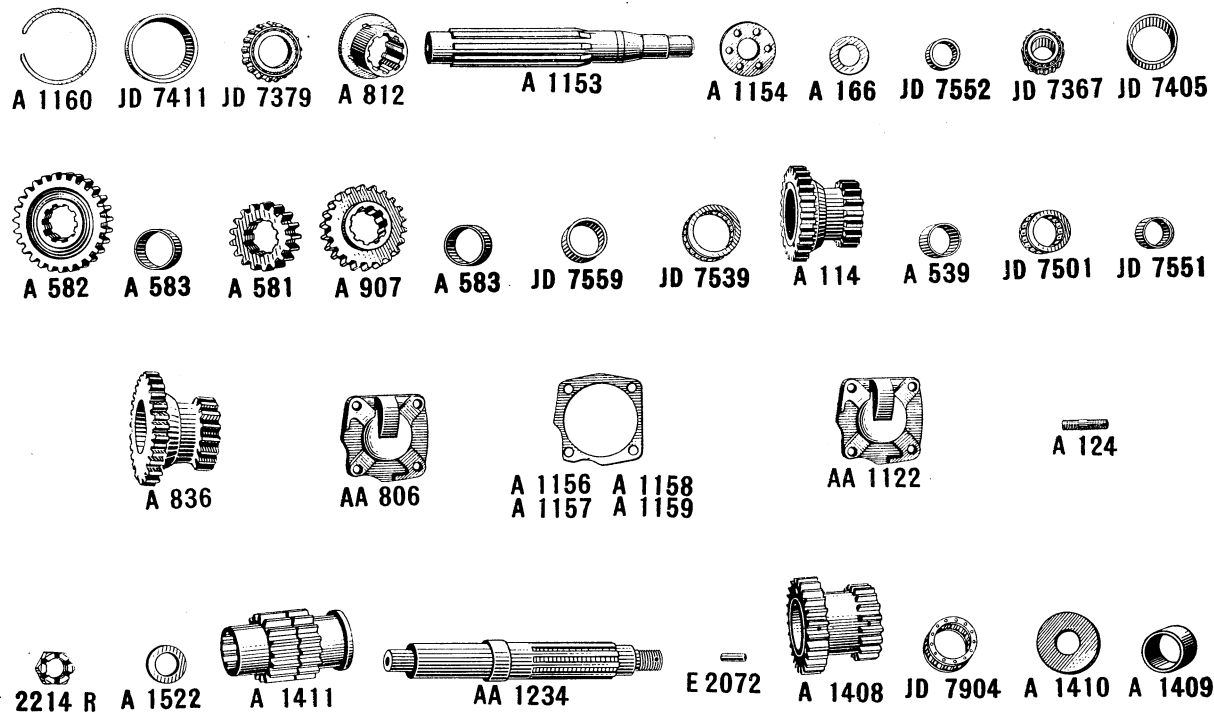

DIFFERENTIAL

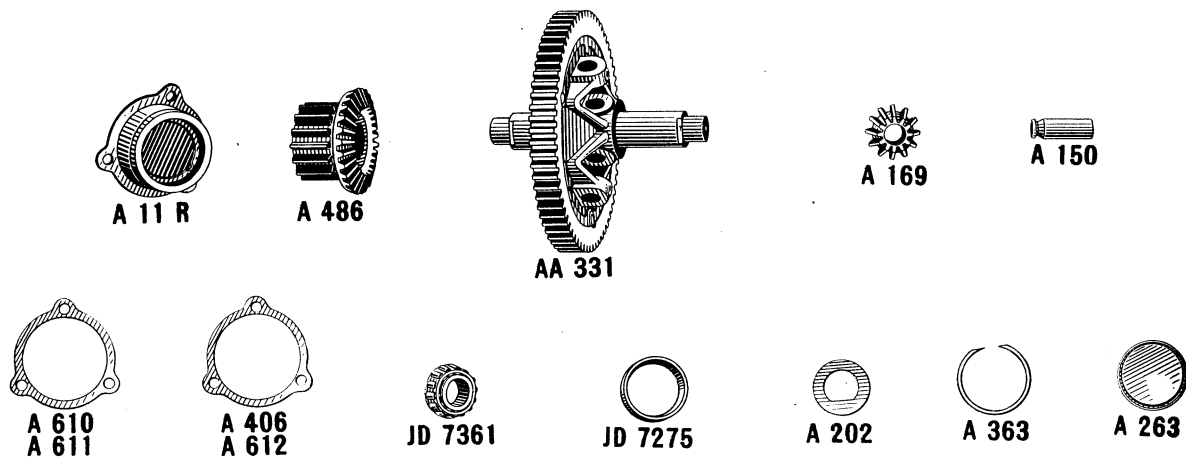

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

FINAL DRIVE

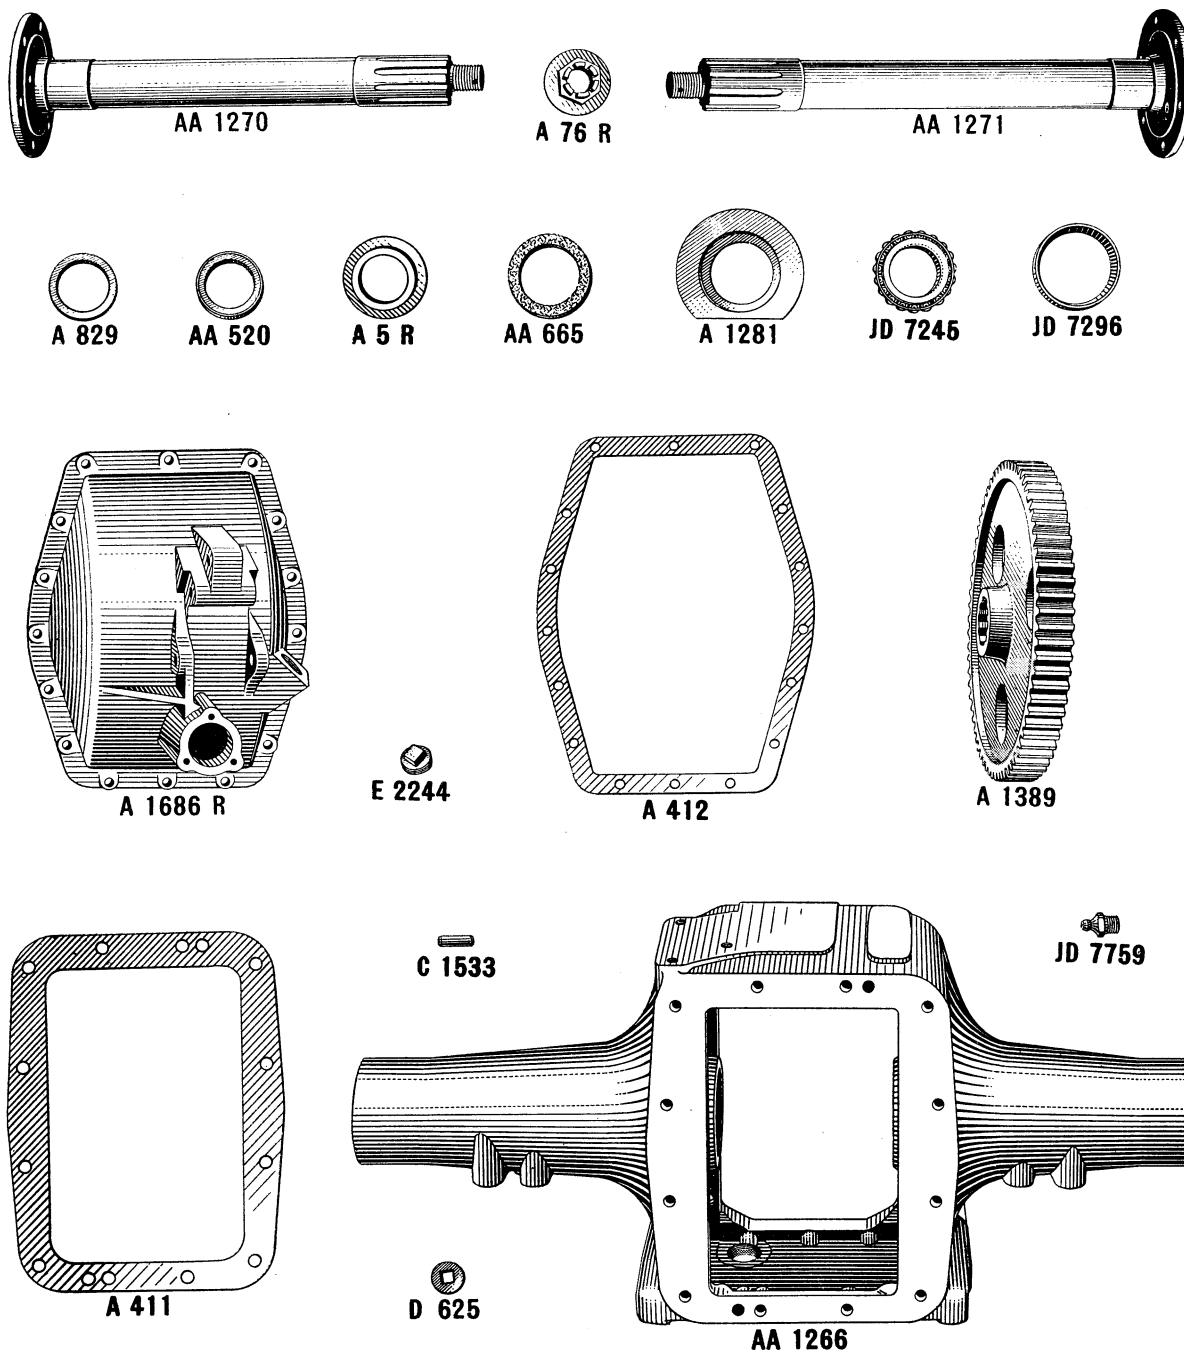
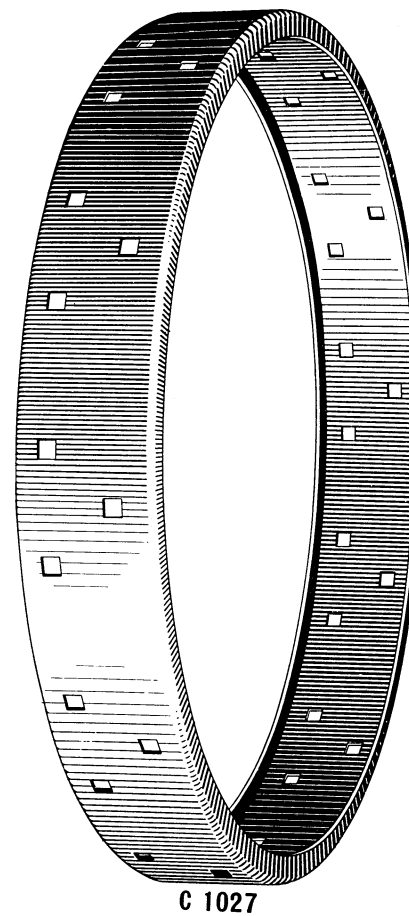
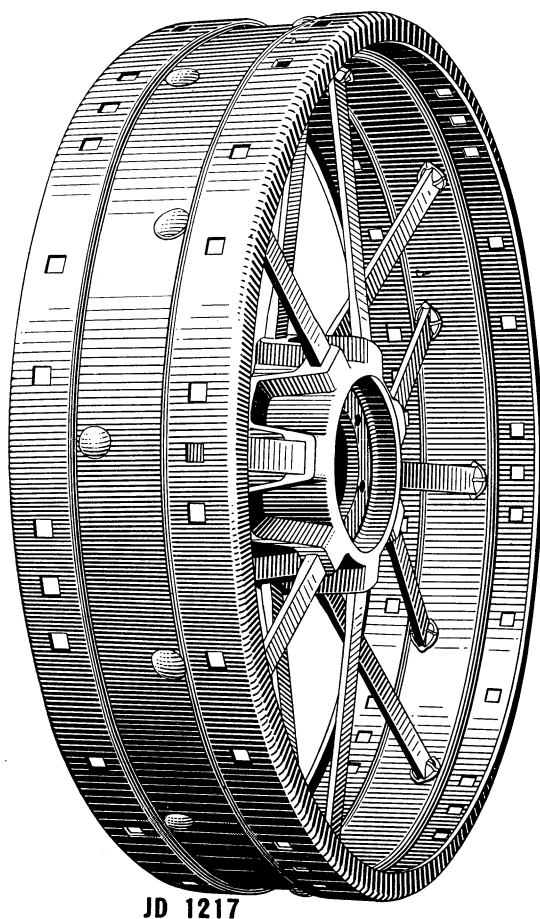
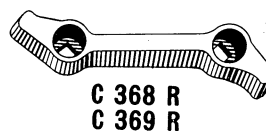
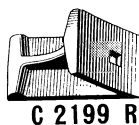
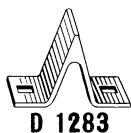
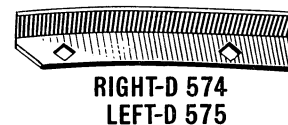
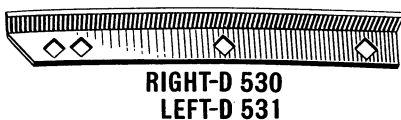
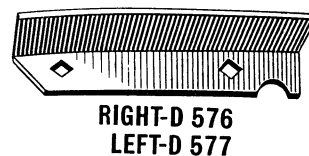
 
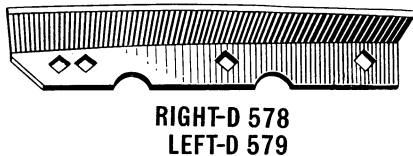
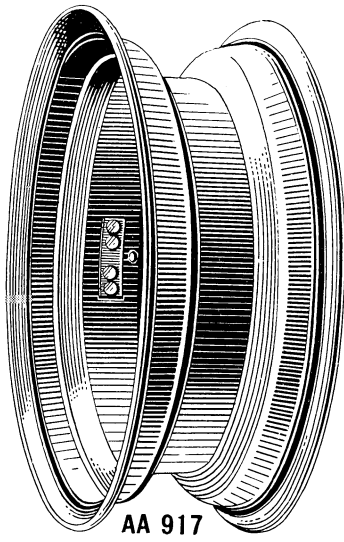
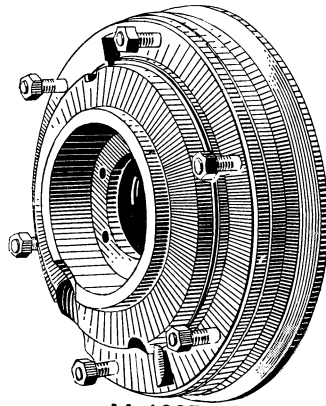
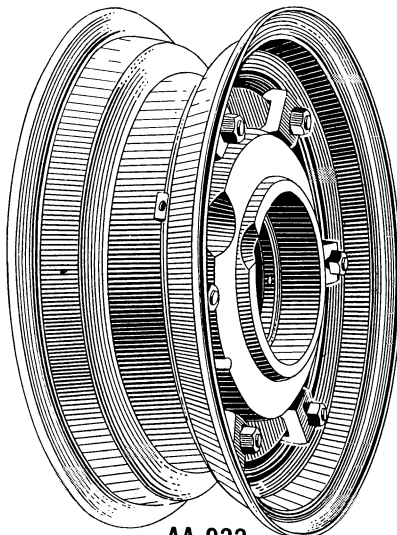
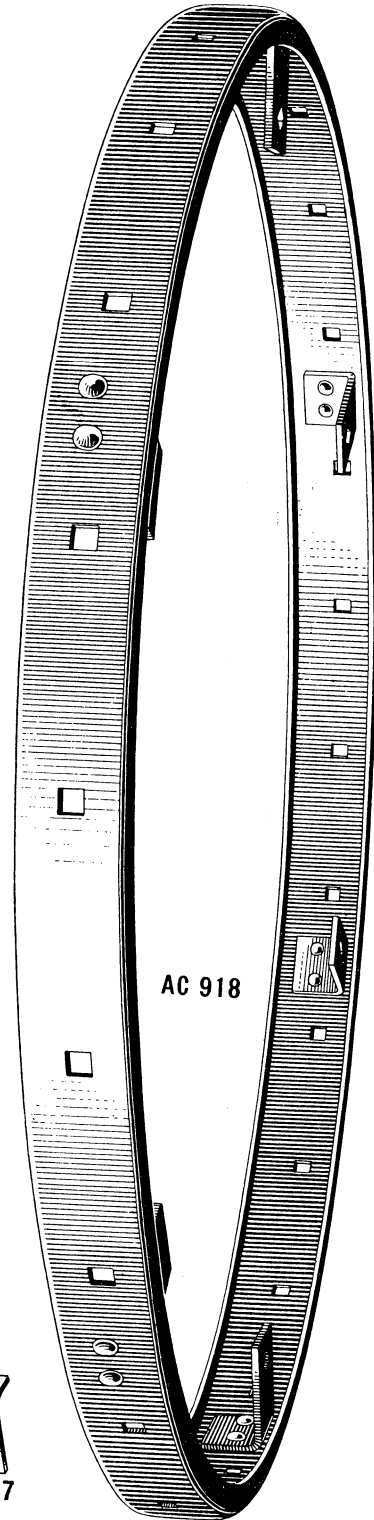



Plate No. 10

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR**REAR WHEELS AND WHEEL EQUIPMENT**


REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR**REAR WHEELS AND WHEEL EQUIPMENT—Continued****AA 917****D 409****AA 1087
AB 823****AA 933
AB 834****D 2526 R****A 1062****C 744****C 2147****AC 918****Plate No. 12**

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

DIFFERENTIAL BRAKES

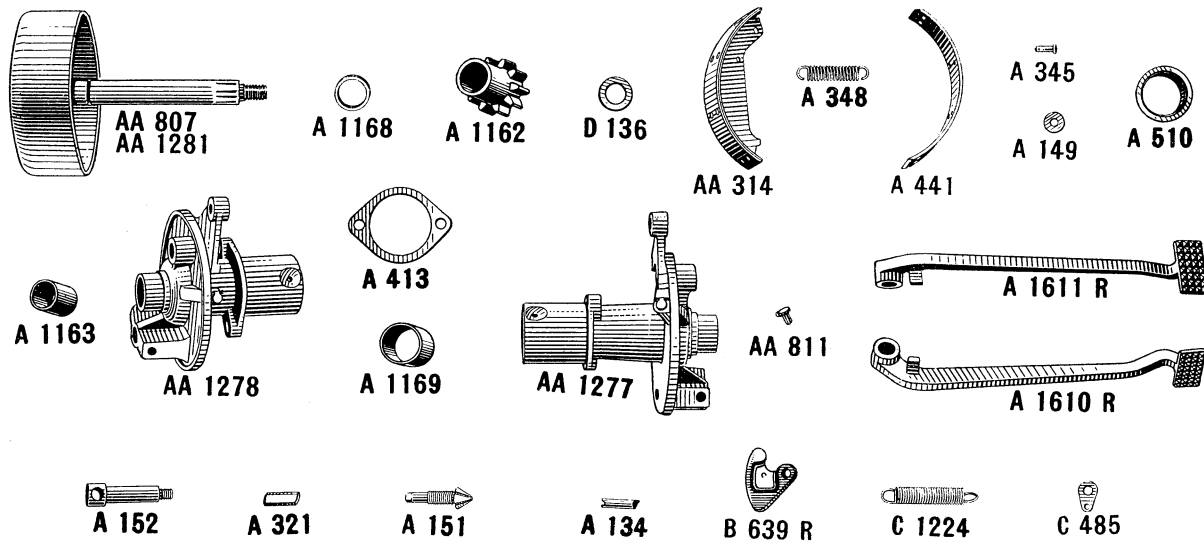

FRONT AXLE AND FRONT END SUPPORT

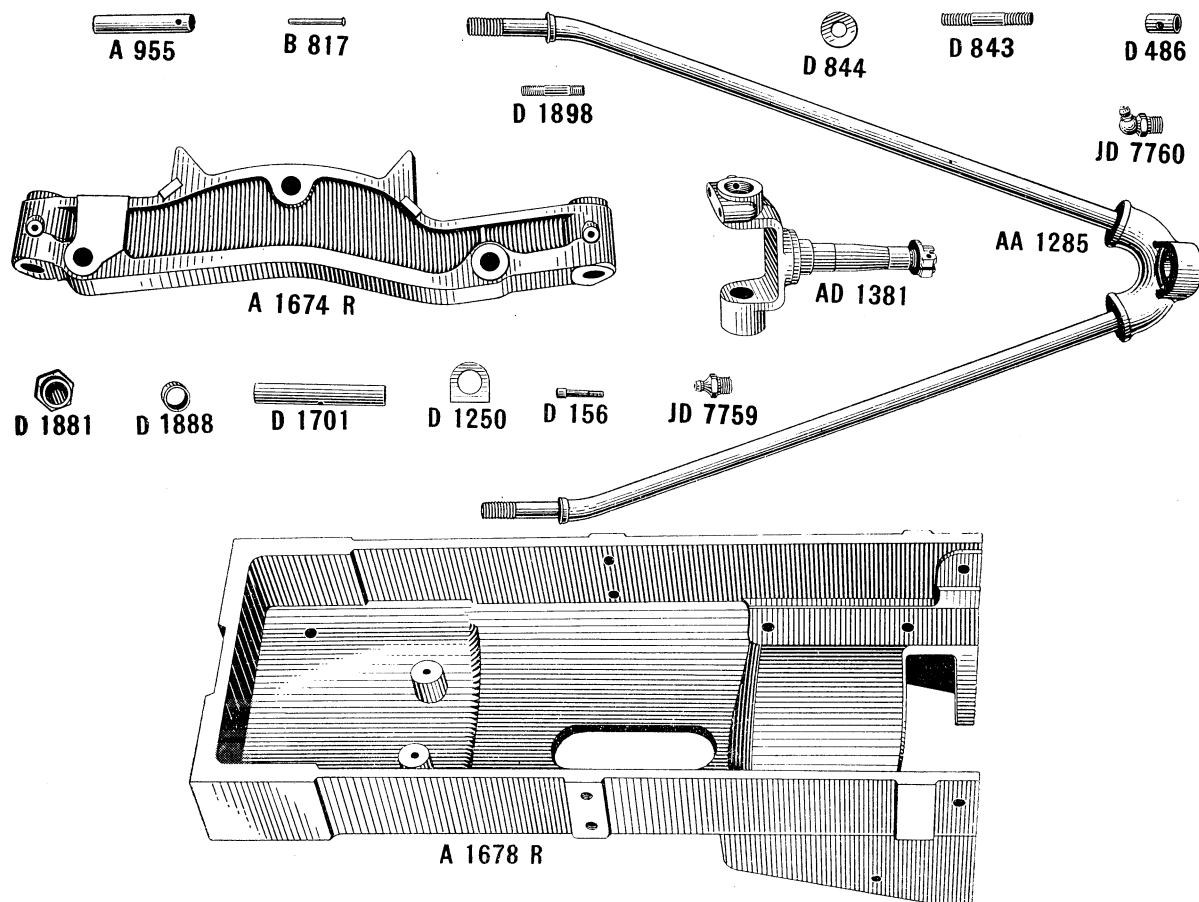

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

FRONT WHEELS AND FRONT WHEEL EQUIPMENT



AC 119



C 677



AD 452



JD 7216



JD 7266



JD 7270



JD 7224



D 635



AA 663



AA 1407



A 1556



JD 7759



D 827



27 R




D 1551



D 583




D 584 R

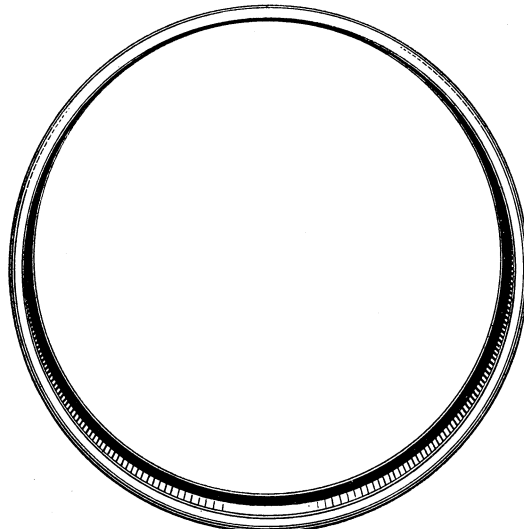


D 582




A 1828

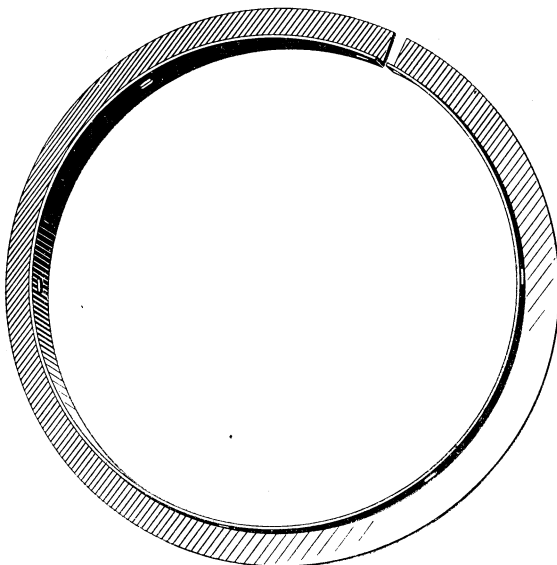

D 1524

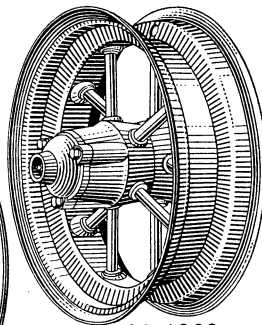


AC 1062

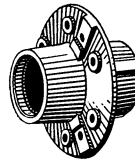


AA 1395




JD 15

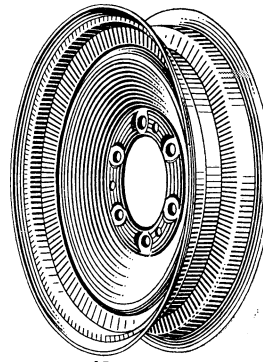


JD 1232

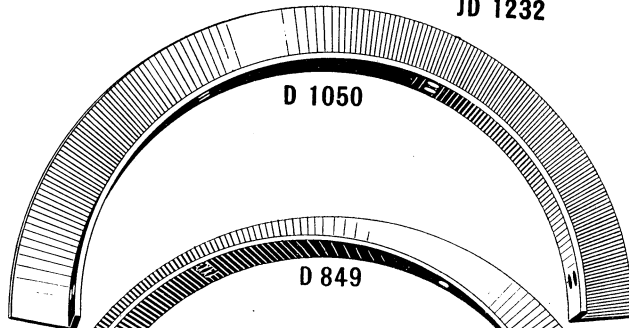



D 1050

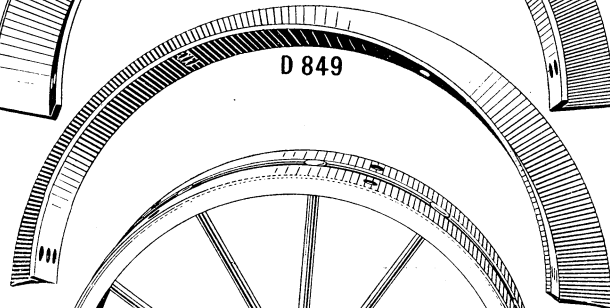

D 849

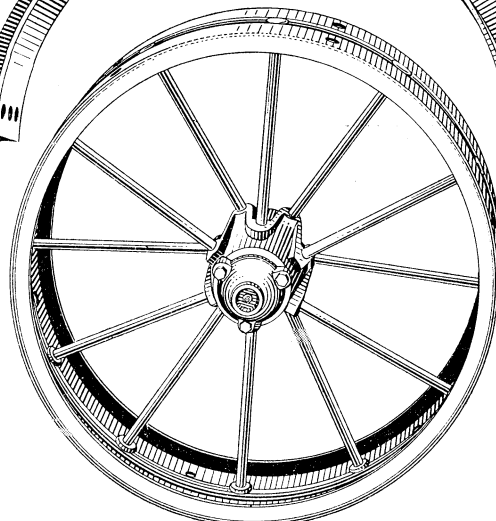


AD 900

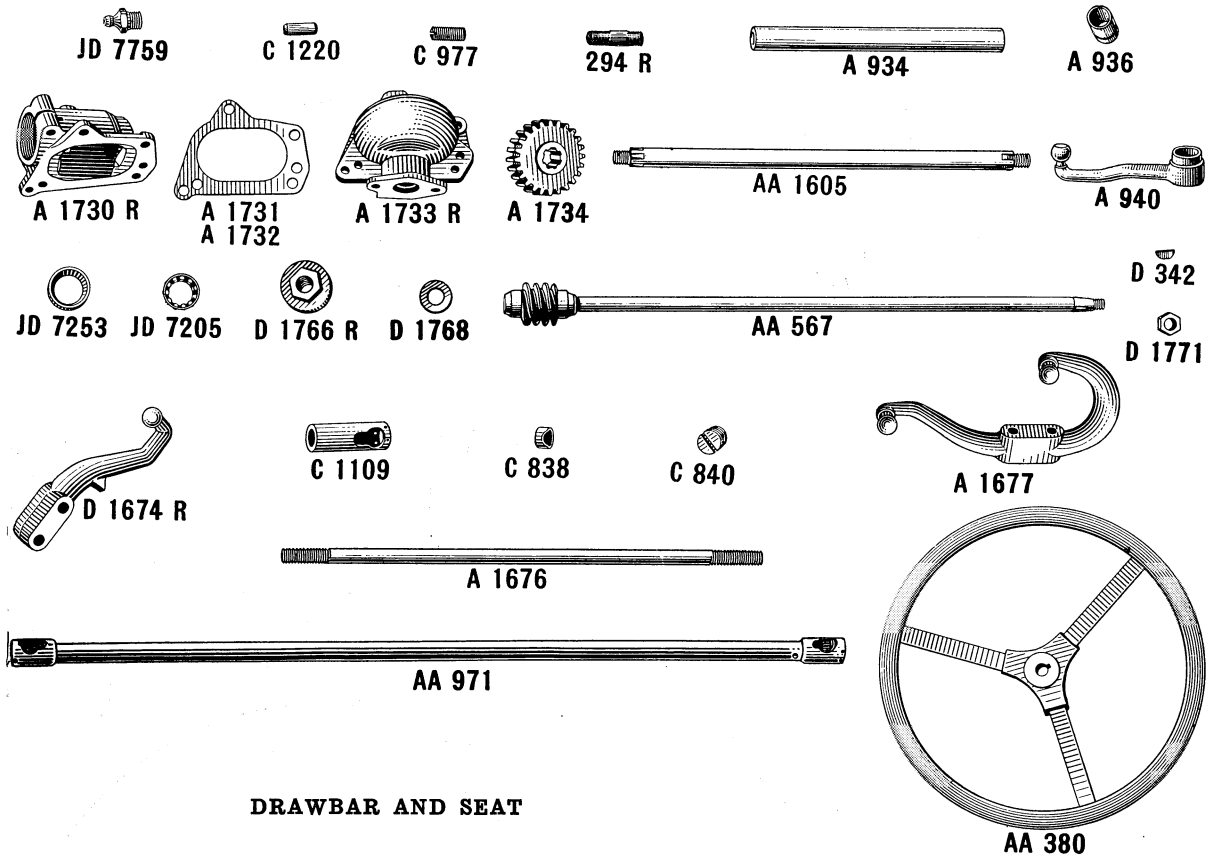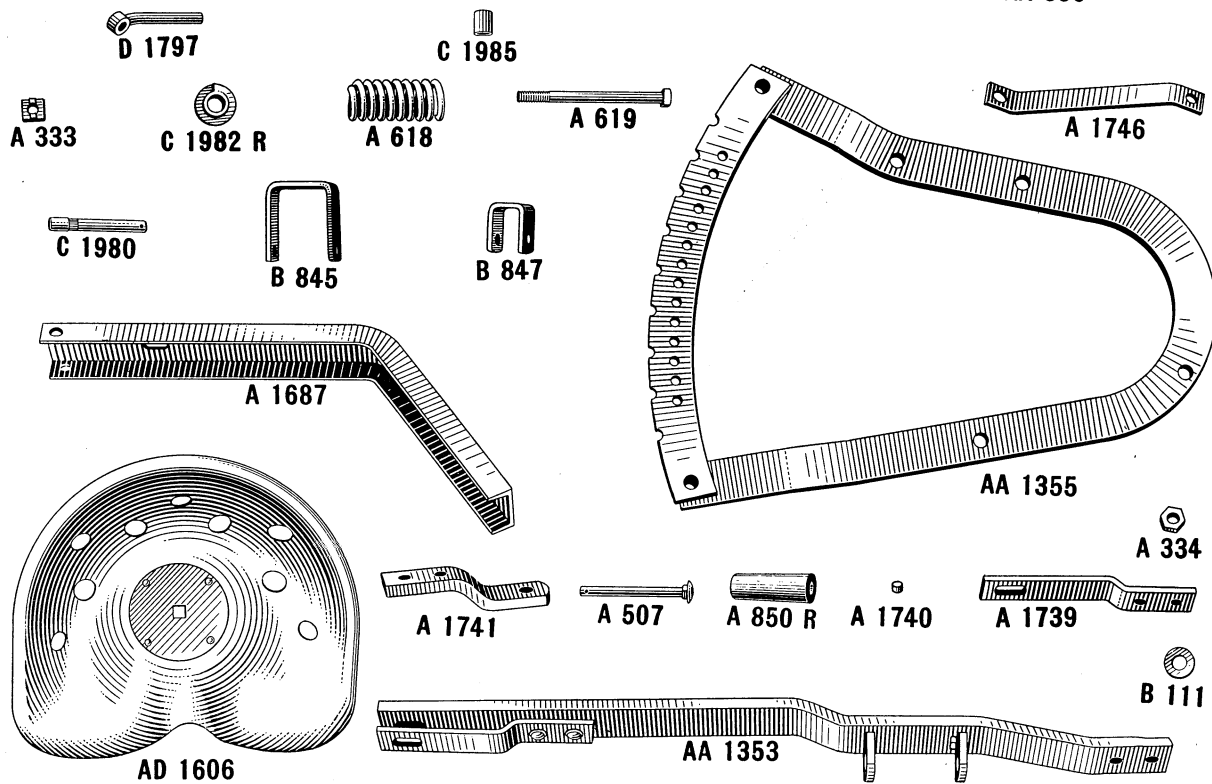
REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR**STEERING PARTS****DRAWBAR AND SEAT**

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

COWL

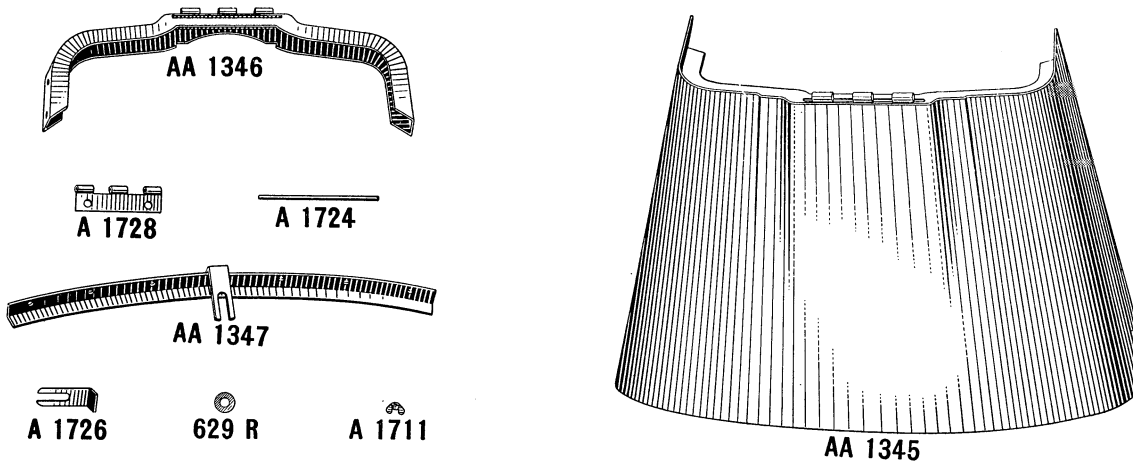

PLATFORM

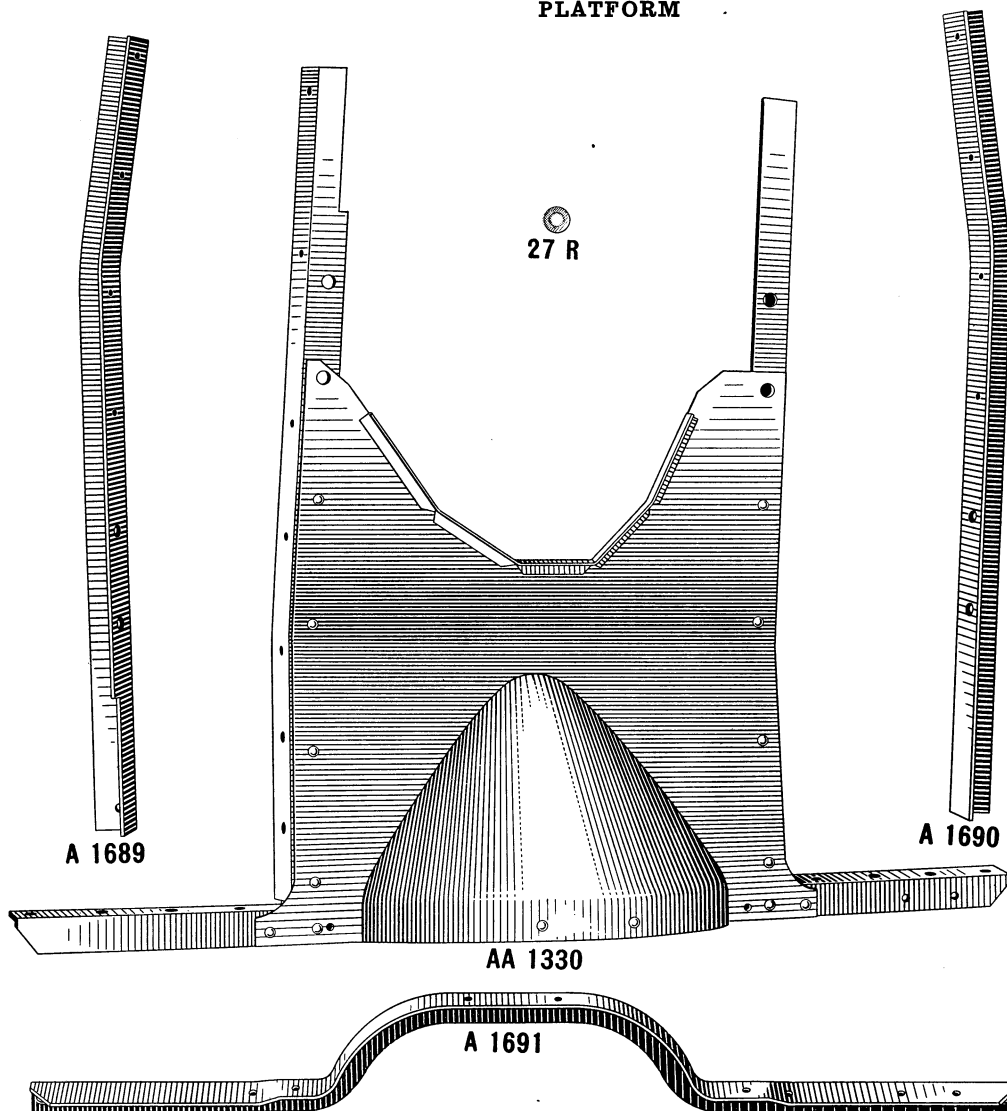

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR
FENDERS


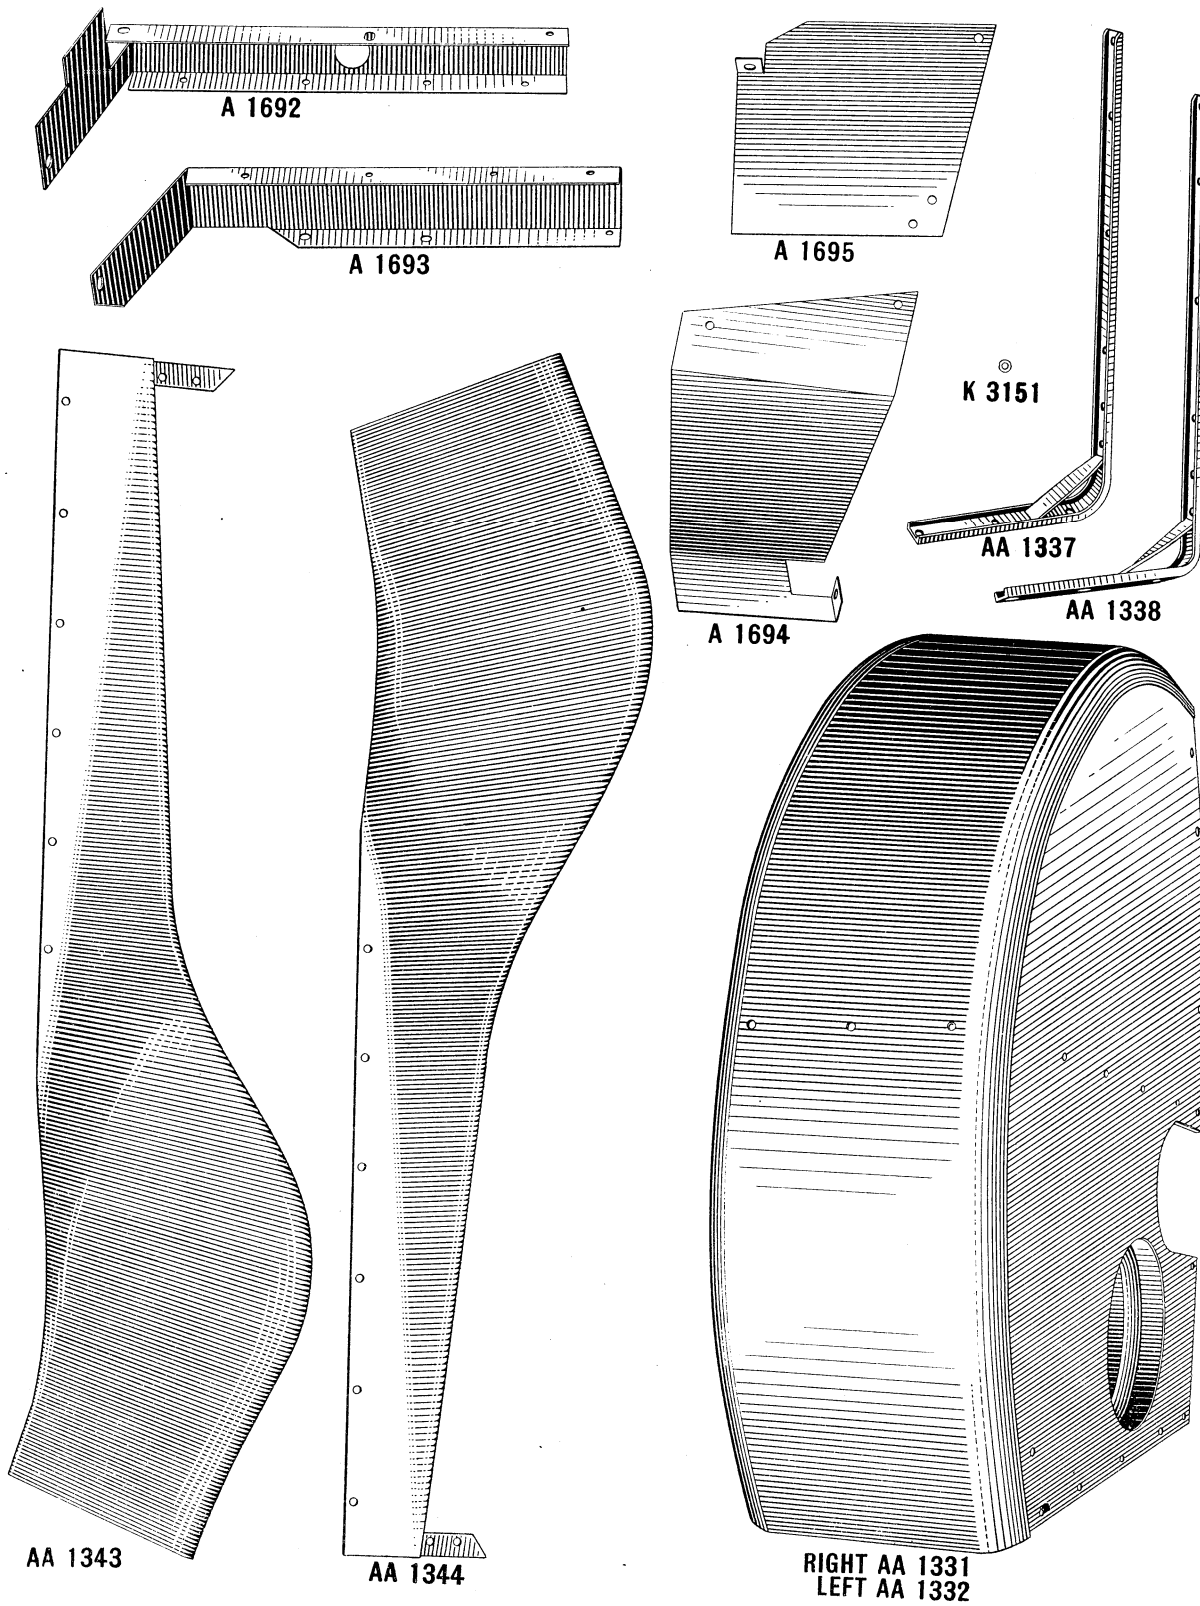


Plate No. 17

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR


AIR CLEANER

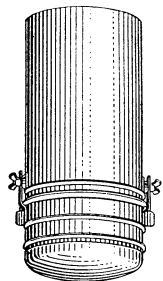

AA 929



A 1269

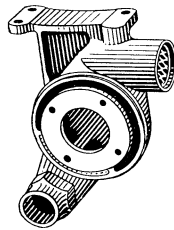

AA 1289



A 1782




A 1401



A 971




A 447

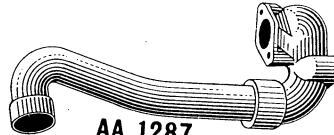

AA 1287



D 1034

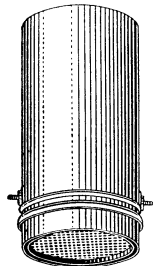


AA 1674



A 1967



 AA 1676



AA 1675



A 1966




629 R



C 1572

MAGNETO

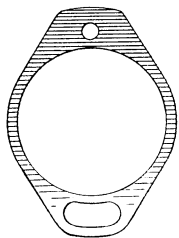

A 500



AA 858



AA 478



D 2808



AA 1677



AA 1678



AB 336



B 465 R



A 471



 
A 470




C 1300




D 465




AC 600

 

AA 1084

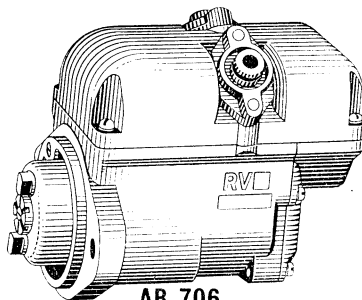

AB 706

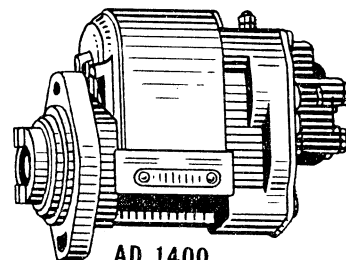

AD 1400

Plate No. 18

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

MAGNETO PARTS

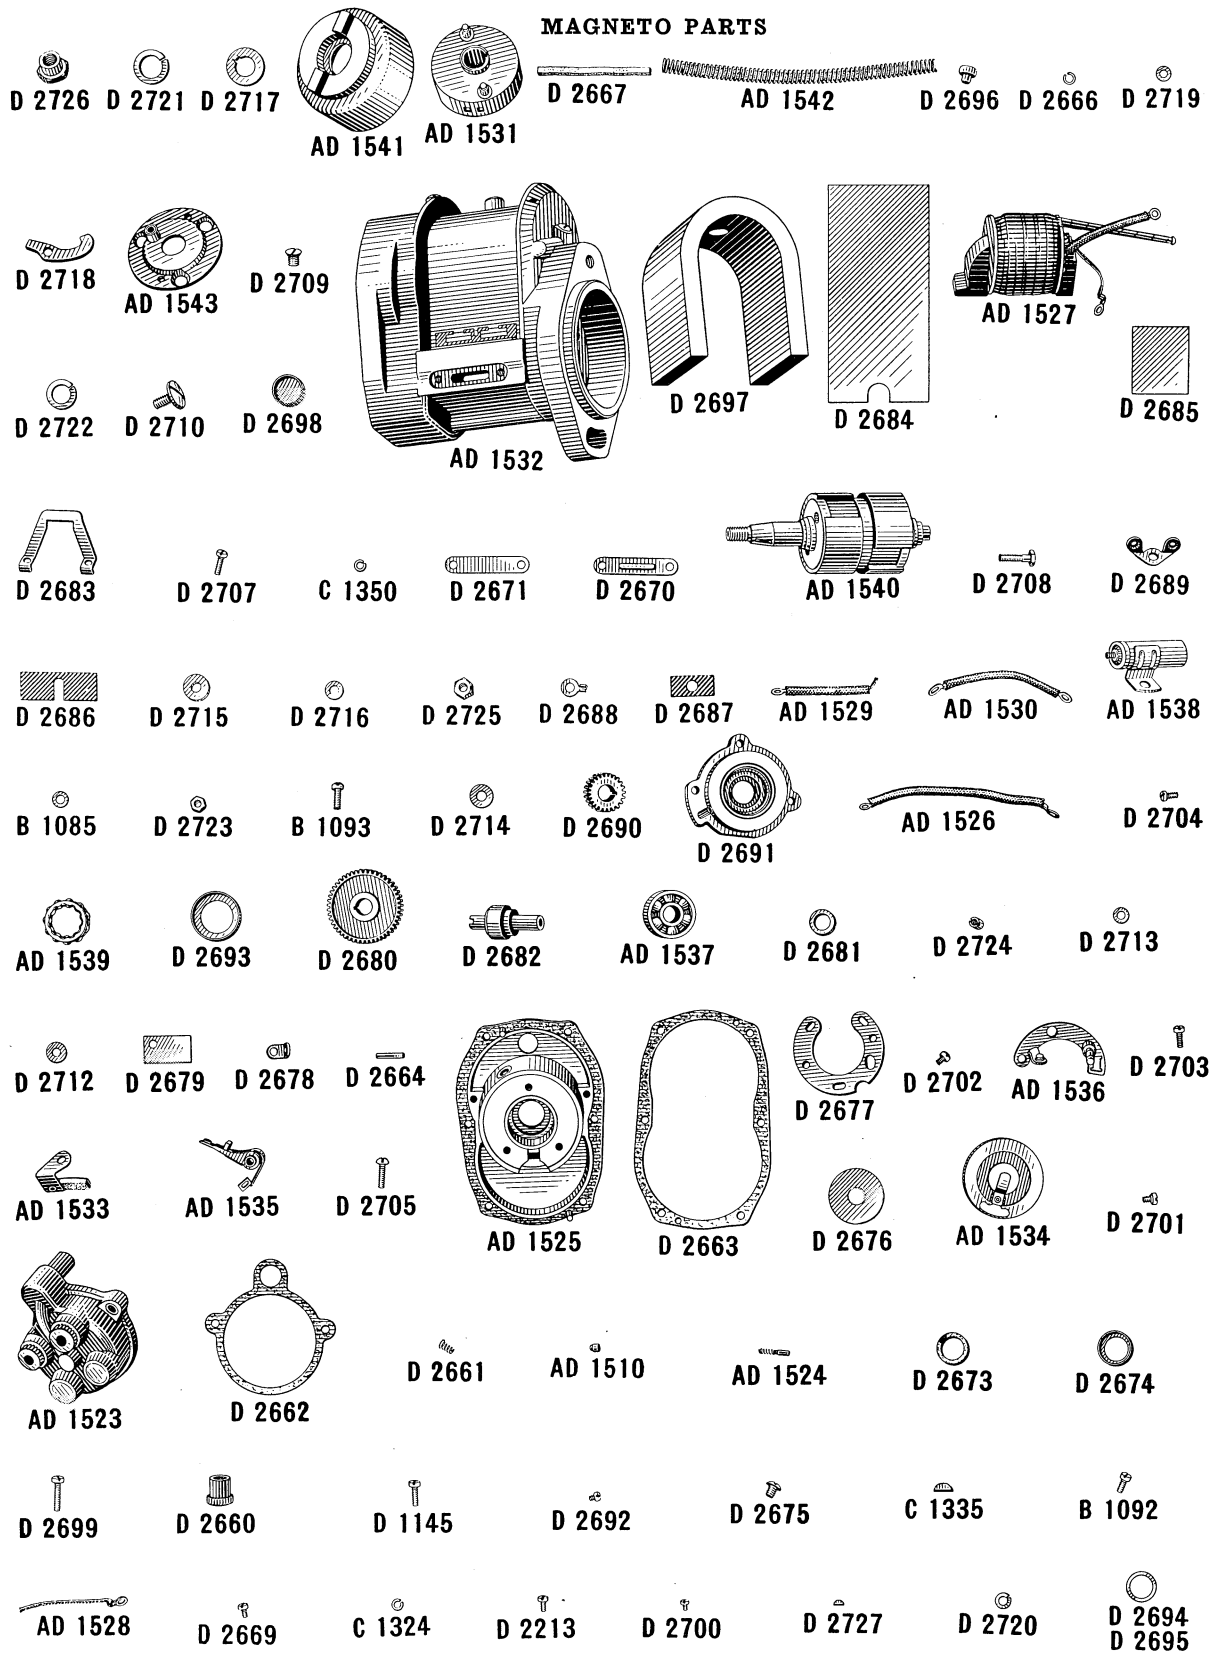


Plate No. 19

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR

MAGNETO PARTS—Continued

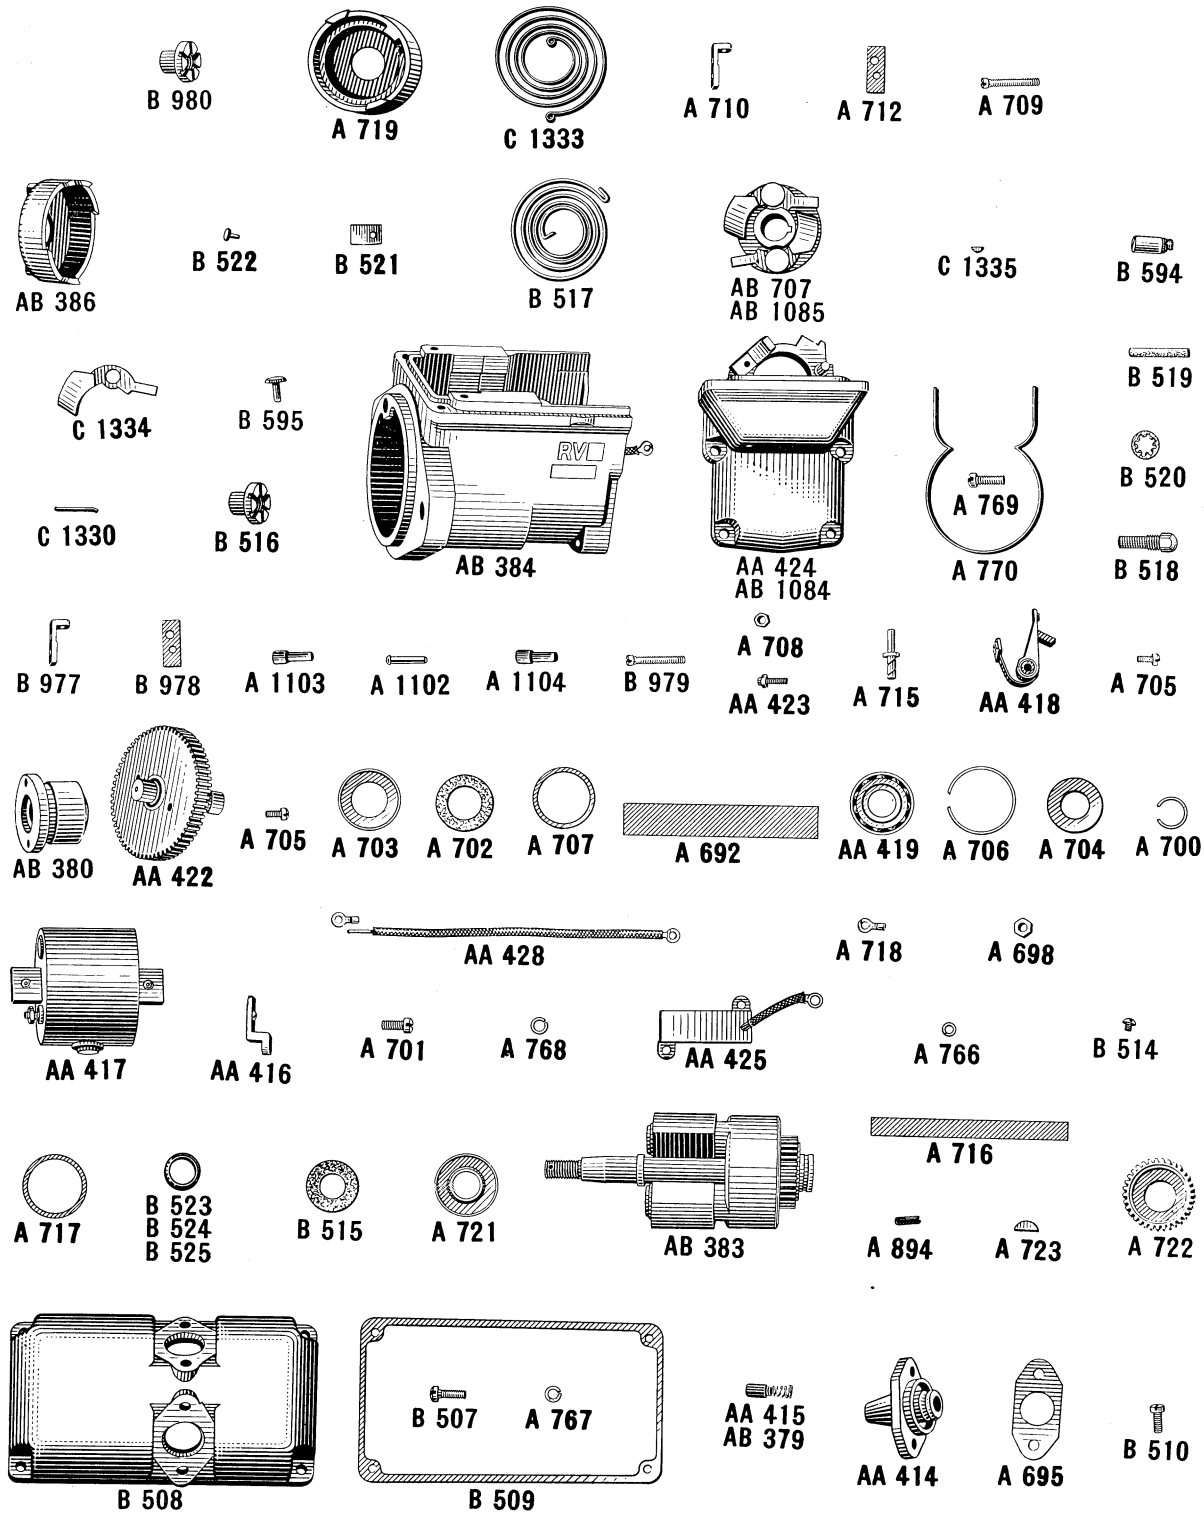


Plate No. 20

REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR CARBURETOR

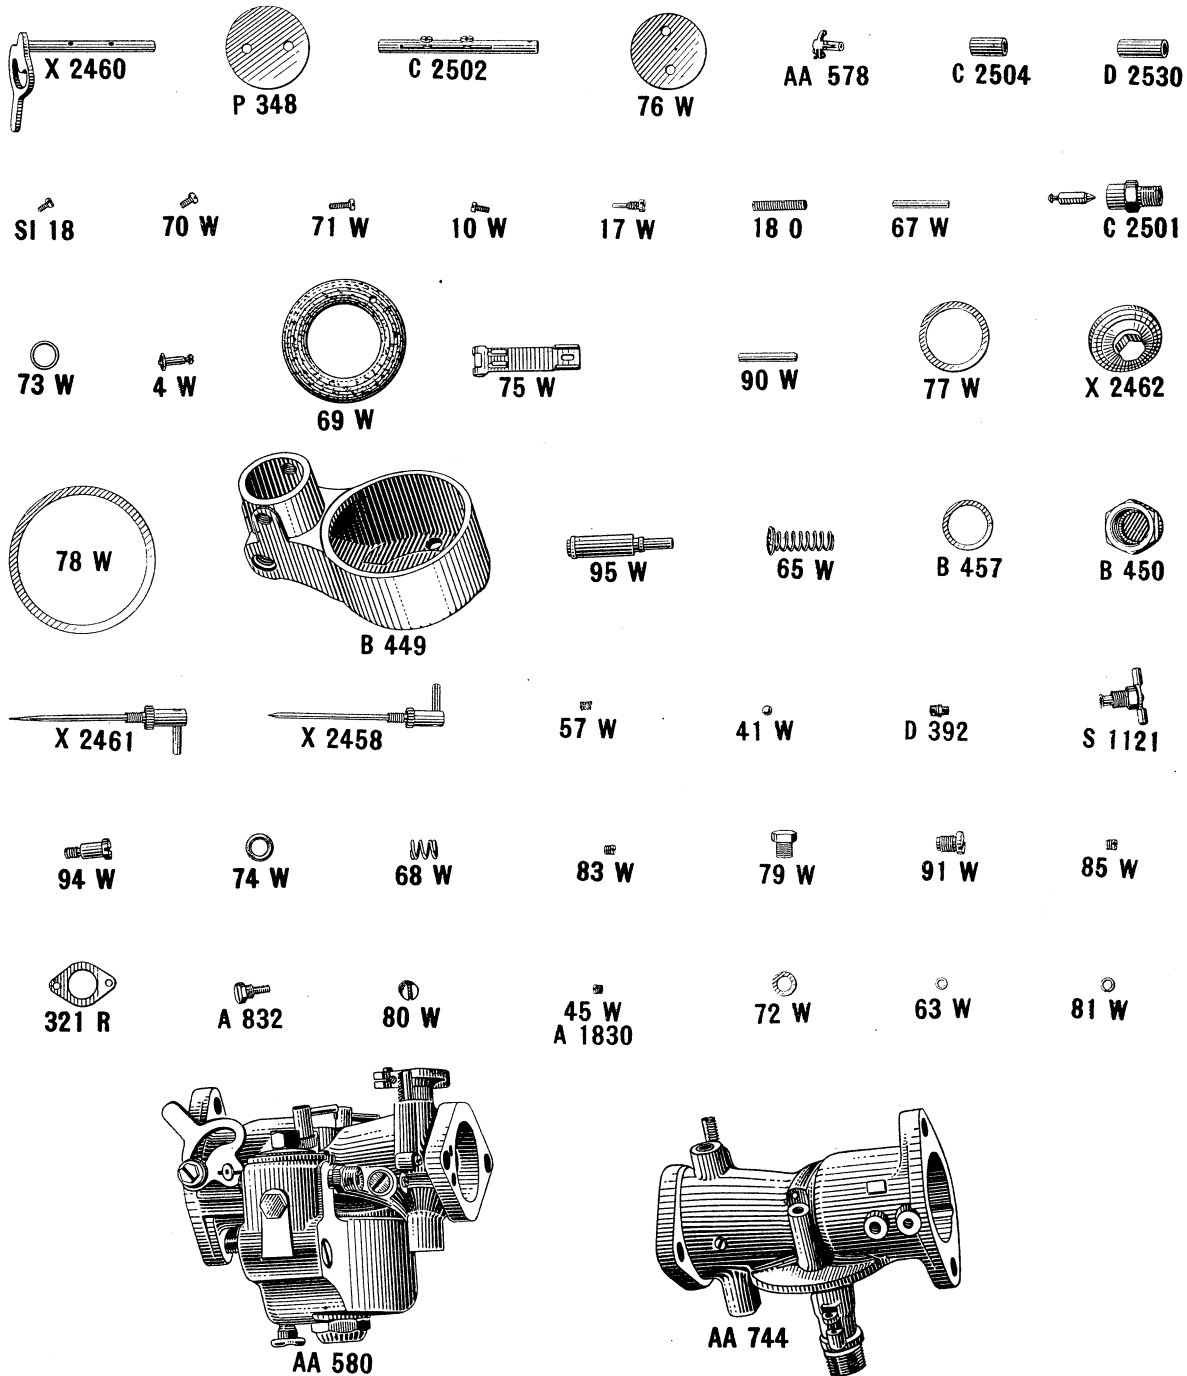


Plate No. 21



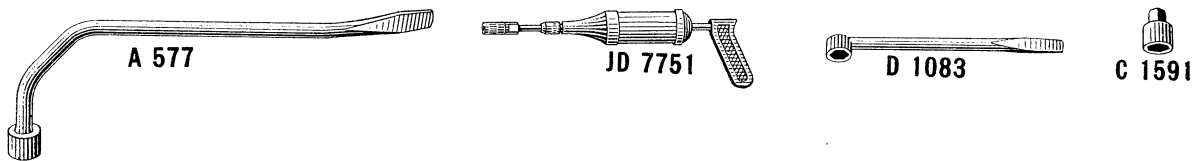
REPAIR PARTS FOR MODEL "AO" STREAMLINED TRACTOR**TOOLS****POWER SHAFT PARTS**

Plate No. 22

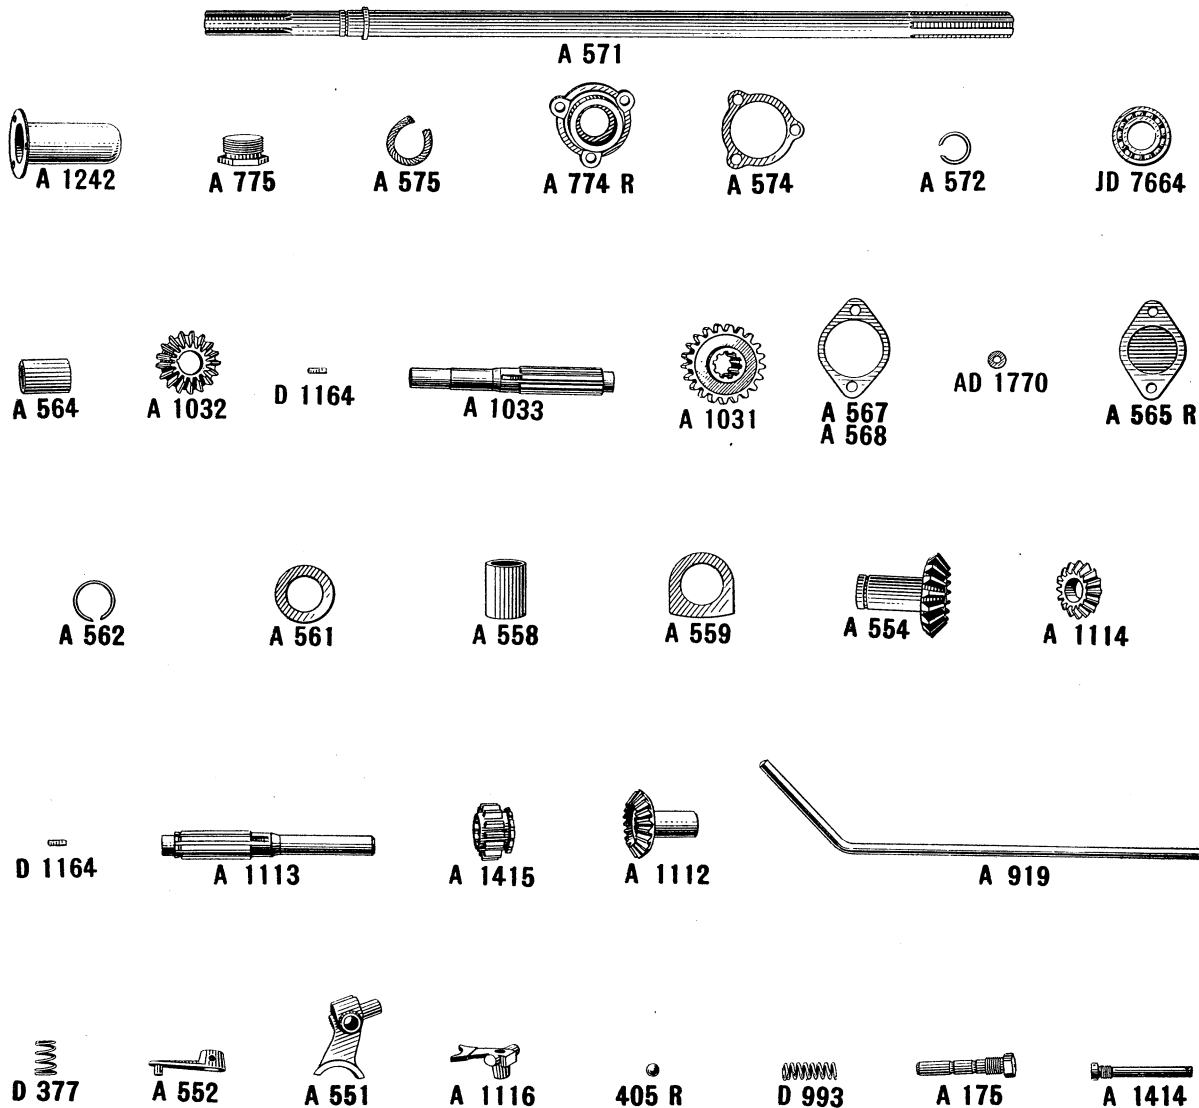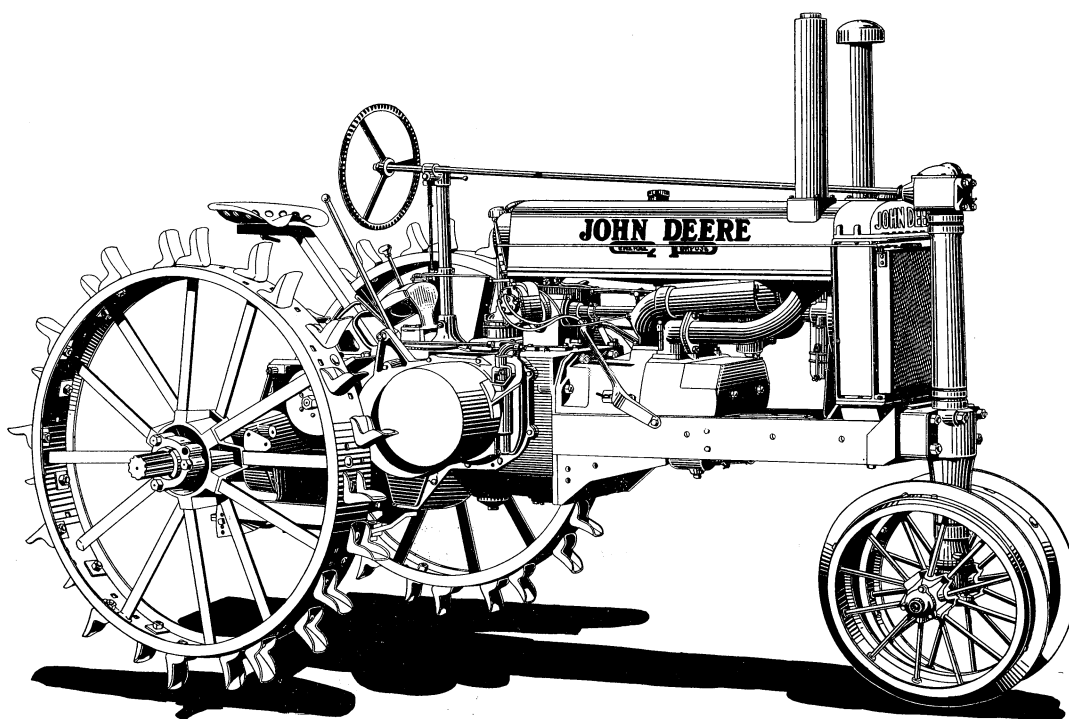

John Deere Model "G" Tractor

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
TRANSMISSION CASE			
A284	Stud, L. H. Main Bearing.....	G1000-	23
AF337	Case, F57R, Transmission, Main.....	G1000-	23
C732	Welch Plug, in Underdrive Shifter Shaft Hole.....	G1000-	23
D409	Stud, Cylinder to Case.....	G1000-	23
D625	Pipe Plug, Transmission Oil Filler.....	G1000-	23
E2142	Pipe Plug, Transmission Case Drain.....	G1000-	23
F285R	Cover, Transmission Case.....	G1000-	23
F286	Gasket, Transmission Case Cover.....	G1000-	23
K3083	Stud, Gear Cover to Case.....	G1000-	23
1452R	Pipe Plug, Power Shaft Shifter Hole.....	G1000-	23
ENGINE			
AA244	Spacer, Flywheel, with D2124 Cork Washer.....	G1000-	23
AF245	Flywheel, F36R, with Bolts.....	G1000-	23
AF251	Housing, F65R, R. H. Main Bearing, with Cap.....	G1000-	23
AF252	Housing, F66R, L. H. Main Bearing, with Cap.....	G1000-	23
AF378	Bushing, R. H. Main Bearing (2 Halves).....	G1000-	23
AF379	Bushing, L. H. Main Bearing (2 Halves).....	G1000-	23
B122	Dowel Pin, R. H. Main Bearing.....	G1000-	23
D2009	Pin, Flywheel Spacer Driving.....	G1000-	23
D2124	Washer, Flywheel Spacer Cork.....	G1000-	23
E2142	Pipe Plug, Crank Case Oil Drain.....	G1000-	23
F16R	Cover, Crank Case.....	G1000-	23
F17	Gasket, Crank Case Cover.....	G1000-	23
F68	Bolt, R. H. Main Bearing.....	G1000-	23
F69	Bolt, L. H. Main Bearing.....	G1000-	23
F70	Nut, Main Bearing Bolt.....	G1000-	23
F75	Shim, Main Bearing, Laminated.....	G1000-	23
F76	Gasket, L. H. Main Bearing Housing.....	G1000-	23
F77R	Cover, L. H. Main Bearing.....	G1000-	23
F78	Gasket, L. H. Main Bearing Cover.....	G1000-	23
1454R	Pipe Plug, in L. H. Main Bearing.....	G1000-	23

INDEX

For Model "G" Tractor

SUBJECT	Page	SUBJECT	Page
Air Cleaner.....	61	Illustrations of Repair Parts.....	69
Brakes, Differential.....	57	Lubricating System and Oil Pump... 51	
Breather, Crank Case.....	51	Magneto.....	59
Cam Followers.....	49	Magneto Parts.....	59-60
Cam Shaft.....	49	Manifold.....	49
Carburetor.....	60	Muffler and Exhaust Pipe.....	50
Casting Numbers.....	68	Oil Filter and Indicator.....	51
Clutch Fork Bearing and Pulley Brake.....	54	Oil Pipes and Fittings.....	51
Clutch Parts.....	54	Overdrive Gear and Shaft and First Reduction Gear.....	55
Connecting Rods.....	49	Overdrive Idler Gear.....	55
Controls.....	50	Pedestal.....	58
Cooling System.....	52	Pistons, Connecting Rods and Crank- shaft.....	49
Countershaft.....	55	Platform.....	58
Crank Case Ventilator.....	51	Power Lift Parts.....	62-63
Crankshaft.....	49	Power Shaft Parts.....	61
Cylinder.....	49	Pulley.....	53
Cylinder Head, Manifold and Valves.....	49	Radiator Shutter.....	53
Differential.....	55	Seat.....	58
Drawbar.....	58	Sliding Gear Shaft.....	54
Engine.....	48	Steering Parts.....	58
Fan.....	53	Tappets.....	49
Fenders.....	58	Tool Box and Tools.....	61
Final Drive.....	56	Transmission Case.....	48
Front End Support.....	58	Valves.....	49
Front Wheels and Front Wheel Equipment.....	57	Wheel—Rear, Equipment.....	56
Fuel System.....	52	Wheels, Rear.....	56
Gears, Overdrive and First Reduction.....	55		
Gear Shift.....	54		
Governor.....	50		
Hardware List.....	64-68		
Hood.....	52		

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
PISTONS, CONNECTING RODS, CRANKSHAFT			
AF213	Piston, with Rings	G1000-	23
AF220	Connecting Rod, F5, Complete	G1000-	23
AF220	"Exchange" Connecting Rod, Complete. Old Connecting Rod must accompany order for New Rod in order to get the benefit of difference in price between a New Rod and Exchange Rod. All orders received for "Exchange" Rod that are not accompanied with Old Rod will be filled with New Rod and billed at full price.		
AF224	Bolt, with Nut and Cotter, Connecting Rod	G1000-	23
AF242	Crankshaft, F34, with Gear and Inner Race	G1000-	23
AF398	Piston Rings (Set of 10)	G1000-	23
AF404	Bushing, Piston Pin (Set of 2)	G1000-	23
AF437	Piston with Rings (.045" oversize)	G1000-	23
AF438	Piston Rings (.045" oversize) (Set of 10)	G1000-	23
AF440	Pin, Piston (Set of 2)	G1000-	23
AF441	Pin, Piston (.005" oversize) (Set of 2)	G1000-	23
D342	Woodruff Key, in Crankshaft Gear	G1000-	23
D2824	Snap Ring, Piston Pin	G1000-	23
F7	Shim, Connecting Rod, Laminated	G1000-	23
F35	Gear, Crankshaft	G1000-	23
CYLINDER			
AF293	Cylinder, F48R, with Studs	G1000-	24
D1865	Cock, Compression Relief	G1000-	24
F56	Stud, Cylinder Head	G1000-	24
F64	Gasket, Cylinder to Case	G1000-	24
CYLINDER HEAD, MANIFOLD, VALVES			
AD1769	Lead Washer, Cylinder Head Stud	G1000-	24
AF294	Cylinder Head, F49R, with Valves, Complete	G1000-	24
AF422	Cylinder Head, F49R, with Valve Guides and Studs	G1000-	24
C2239	Stud, Short, 1/2"x5-1/8", Manifold	G1000-	24
D1720	Lock Washer (Half), Valve Stem	G1000-	24
E2142	Plug, Cylinder Head Drain	G1000-	24
F50R	Guide, Valve	G1000-	24
F51	Valve, Intake	G1000-	24
F52	Valve, Exhaust	G1000-2600	24
F53	Spring, Valve	G1000-	24
F54	Cap, Valve Spring	G1000-	24
F55	Gasket, Cylinder Head	G1000-	24
F56	Stud, Cylinder Head	G1000-	24
F87	Pipe, Cylinder Head Water Inlet	G1000-	24
F136R	Manifold	G1000-	24
F137	Gasket, Manifold	G1000-	24
F138	Stud, Long, 1/2"x6" Manifold	G1000-	24
F389	Valve, Exhaust	G2601-	24
321R	Gasket, Carburetor to Manifold	G1000-	24
CAM SHAFT			
A355	Spring, Cam Shaft Thrust	G1000-	24
A425	Gasket, Cam Shaft Bearing Housing	G1000-	24
AA227	Housing, A31R, Cam Shaft Bearing	G1000-	24
AF428	Gear, Cam Shaft, with Stud and Nut	G1000-	24
F120	Cam Shaft	G1000-	24
F122	Plate, Cam Shaft Gear Locking	G1000-	24
F123	Capscrew, Cam Shaft Gear Locking	G1000-	24
F393	Stud, Cam Shaft Gear	G1000-	24
JD7250	Cup, Cam Shaft Bearing	G1000-	24
JD7358	Cone, Cam Shaft Bearing	G1000-	24
CAM FOLLOWERS			
A178	Support, Cam Follower Guide	G1000-	24
F124	Cam Follower	G1000-	24
F125R	Guide, Cam Follower	G1000-	24
TAPPETS			
A172	Nut, Tappet Lever Oiler Pipe Packing	G1000-	24
A260	Washer, Tappet Lever Shaft	G1000-	24
A602	Snap Ring, Tappet Lever Shaft	G1000-	24
A1291	Screw, Tappet Lever Adjusting	G1000-	24

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
TAPPETS—Continued			
AF275	Cover, F128R, Tappet Lever, with Oil Trough.....	G1000—	24
B216	Washer, Tappet Oil Pipe Packing.....	G1000—	24
D376	Spring, Tappet Lever Spacer.....	G1000—	24
F126	Rod, Tappet.....	G1000—	24
F127	Lever, Tappet.....	G1000—	24
F129	Gasket, Tappet Lever Cover.....	G1000—	24
F130	Gasket, Tappet Lever Cover Stud.....	G1000—	24
F131	Cap Nut, Steel, on Tappet Lever Cover Studs.....	G1000—	24
F132	Pipe, Tappet Lever Oil.....	G1000—	24
F133	Shaft, Tappet Lever.....	G1000—	24
F134R	Bracket, Tappet Lever Shaft.....	G1000—	24
F135	Trough, Tappet Lever Oil.....	G1000—	24
F158	Stud, Tappet Lever Bracket.....	G1000—	24
F354	Gasket, Tappet Lever Oil Trough.....	G1000—	24
F357	Elbow, Tappet Lever Pressure Oil Line.....	G1000—	24
MUFFLER AND EXHAUST PIPE			
AA300	Muffler.....	G1000—	25
AF238	Exhaust Pipe with Flange.....	G1000—	25
GOVERNOR			
A369	Snap Ring, Governor Shaft.....	G1000—	25
A584	Spring, Governor Bearing.....	G1000—	25
AA814	Sleeve, Governor Shaft.....	G1000—	25
AC667	Weight, Governor.....	G1000—	25
AF267	Case, Governor, F104R, with Lever Shaft Bushing.....	G1000—	25
B271	Lever, Inside Governor.....	G1000—	25
B272R	Arm, Governor.....	G1000—	25
B274	Clamp, Speed Change Spring.....	G1000—	25
B276	Snap Ring, Governor Bearing.....	G1000—	25
B280	Washer, Governor Bearing Spring.....	G1000—	25
B281	Flange, Magneto Drive.....	G1000—	25
B432	Bushing, Governor Lever Shaft.....	G1000—	25
C902	Pin, Governor Weight.....	G1000—	25
C998	Bearing, Governor Thrust.....	G1000—	25
D342	Woodruff Key, in Governor Drive Gear.....	G1000—	25
F105	Shaft, Governor.....	G1000—	25
F106	Shaft, Governor Lever.....	G1000—	25
F107R	Gear, Governor Drive.....	G1000—	25
F108R	Housing, Left Governor Bearing.....	G1000—	25
F109	Gasket, Left Governor Bearing Housing (1/32" Thick).....	G1000—	25
F110	Gasket, Left Governor Bearing Housing (.005"-.006" Thick).....	G1000—	25
F111	Gasket, Left Governor Bearing Housing (.015" Thick).....	G1000—	25
F113	Gear, Fan Drive Bevel.....	G1000—	25
F358	Gasket, Governor Case.....	G1000—	25
JD7655	Cup, Governor Shaft Bearing.....	G1000—	25
JD7656	Cone, Governor Shaft Bearing.....	G1000—	25
JD7657	Balls and Retainer, Governor Shaft Bearing.....	G1000—	25
629R	Washer, Magneto to Governor Case.....	G1000—	25
CONTROLS			
A80R	Lever, Speed Control Hand.....	G1000—	25
A183	Rod, Clutch Operating.....	G1000—	25
A241	Washer, Speed Control Shaft, Upper.....	G1000—	25
A586	Washer, Speed Control Shaft, Lower.....	G1000—	25
A1197	Bushing, Clutch Lever Pivot.....	G1000—	25
A1491	Spring, Speed Change, Flat.....	G1000—	25
AD1360	Lever, Clutch Operating, with Pivot Bushing.....	G1000—	25
B390R	Bracket, Speed Control Shaft.....	G1000—	25
B392R	Bracket, Steering Shaft Bearing.....	G1000—	25
C1438	Spring, Speed Control Shaft.....	G1000—	25
D157	End, Speed Control Rod.....	G1000—	25
D157	End, Throttle Rod.....	G1000—	25
D393R	Yoke, Clutch Operating Rod.....	G1000—	25
D1994	Pin, Clutch Operating Rod Yoke.....	G1000—	25
D2031	Bolt, Clutch Operating Hand Lever Pivot.....	G1000—	25
E2057	Washer, on Speed Control Rod.....	G1000—	25
E2057	Washer, on Throttle Rod.....	G1000—	25
F119	Rod, Carburetor Throttle.....	G1000—	25

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CONTROLS—Continued			
F147	Support, Steering Shaft, Rear	G1000—	25
F148	Shaft, Speed Control	G1000—	25
F149	Rod, Speed Control	G1000—	25
CRANK CASE BREATHER			
AA551	Breather Stack, Complete	G1000—	25
D1951	Gasket, Filter Core	G1000—	25
D1952	Core, Breather Filter	G1000—	25
CRANK CASE VENTILATOR			
A535	Packing, Ventilator Pipe	G1000—	25
C1705	Nut, Ventilator Pipe Packing	G1000—	25
F18	Pipe, Ventilator	G1000—	25
LUBRICATING SYSTEM—OIL PUMP			
A1596	Gear, Oil Pump Drive	G1000—	26
A1597R	Bearing, Oil Pump Drive Gear	G1000—	26
A1598	Gasket, Oil Pump Drive Gear Bearing	G1000—	26
AB284	Strainer, Screen, Complete, Oil Pump	G1000—	26
B241R	Body, Oil Pump	G1000—	26
B243	Gear, Oil Pump Drive—Bottom	G1000—	26
B244	Shaft, Oil Pump Idler Gear	G1000—	26
B245	Gear, Oil Pump Idler	G1000—	26
B246	Gasket, Oil Pump Cover	G1000—	26
B247	Cover, Oil Pump	G1000—	26
B250	Coupling, Oil Pump Drive Shaft	G1000—	26
B251	Gasket, Oil Pump to Case	G1000—	26
E2207	Key, Oil Pump Drive Shaft	G1000—	26
F95	Shaft, Oil Pump Drive	G1000—	26
OIL FILTER AND INDICATOR			
A518	Stud, Oil Filter	G1000—	26
A519	Gasket, Oil Filter Bottom	G1000—	26
A520	Nut, Oil Filter Bottom	G1000—	26
A521	Gasket, Oil Filter Bottom Nut	G1000—	26
A522	Bottom, Oil Filter	G1000—	26
A523	Spring, Oil Filter Bottom	G1000—	26
A1149	Gasket, Oil Filter Head to Filter Body	G1000—	26
A1152	Body, Oil Filter	G1000—	26
A1278	Bushing, Oil Relief	G1000—	26
A1280	Spring, Oil Relief Valve (Coil)	G1000—	26
AA357	Element, Oil Filter	G1000—	26
AA824	Leaf Spring, Relief Valve, with Centering Button	G1000—	26
AB292	Gauge, Complete, Oil Indicator	G1000—	26
AB326	Leaf Spring, Oil Filter, with Centering Button	G1000—	26
AF260	Cover, Oil Filter Head with Bushing and Relief Spring	G1000—	26
B430	Pilot, Oil Filter Leaf Spring	G1000—	26
B438	Clip, Oil Filter Leaf Spring	G1000—	26
B439	Spring, By-Pass Valve (Coil)	G1000—	26
B1136	Screw, Pressure Regulating	G1000—	26
B1137	Clip, Oil Filter Relief Spring	G1000—	26
D186	Dowel, in Oil Filter Head	G1000—	26
D793	Body, Crank Case Oil Level Cock	G1000—	26
D794	Plug, Crank Case Oil Level Cock	G1000—	26
F96R	Head, Oil Filter	G1000—	26
F98	Gasket, Oil Filter Head Cover	G1000—	26
K2573	Washer, Oil Filter Bottom Nut	G1000—	26
OIL PIPES AND FITTINGS			
A374	Nut, Solder Bushing, Governor Oil Line	G1000—	26
A465	Body, Solder Bushing, Governor Oil Line to Filter Head	G1000—	26
AF262	Oil Line, Pump Discharge	G1000—	26
AF263	Oil Line, R. H. Main Bearing	G1000—	26
AF264	Oil Line, L. H. Main Bearing	G1000—	26
AF265	Oil Line, Governor	G1000—	26
AF391	Oil Pressure Line, Tappet Lever	G1000—	26
B258	Nut, Solder Bushing, 1/2"	G1000—	26
B259	Gland, Solder Bushing, on Oil Pump Discharge Line	G1000—	26
D892	Body, Solder Bushing, R. and L. Main Bearing Oil Lines to R. and L. Main Bearings	G1000—	26

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
OIL PIPES AND FITTINGS—Continued			
D392	Body, Solder Bushing, R. and L. Main Bearing Oil Lines to Filter Head	G1000—	26
D1935	Gland, Solder Bushing, Governor Oil Line	G1000—	26
D2440	Body, Solder Bushing Oil Pump Discharge Line to Filter Head	G1000—	26
D2440	Body, Solder Bushing, Oil Pump Discharge Line to Pump Body	G1000—	26
E2149	Nut, Solder Bushing, Main Bearing Oil Lines	G1000—	26
E2150	Gland, Solder Bushing, Main Bearing Oil Lines	G1000—	26
E2157	Nut, Solder Bushing, Tappet Lever Oil Pressure Line	G1000—	26
E2158	Gland, Solder Bushing, Tappet Lever Oil Pressure Line	G1000—	26
F355	Bushing, Governor Oil Line	G1000—	26
FUEL SYSTEM			
A1013	Cushion, Fuel Tank Front Support	G1000—	26
AA270	Strap, Fuel Tank	G1000—	26
AA335	Clamp, Fuel Filter Bowl Adjusting	G1000—	26
AA454	Gasoline Strainer, Complete	G1000—	26
AA499	Filter, Fuel	G1000—	26
AA517	Bail, Fuel Filter Bowl	G1000—	26
AA518	Nut, with Washer, Fuel Filter Adjusting	G1000—	26
AA519	Screen, Fuel Filter	G1000—	26
AB609	Cock, Three-Way	G1000—	26
AC1079	Body, Fuel Filter, with Valve	G1000—	26
AC1080	Valve, Fuel Filter Bowl	G1000—	26
AD709	Cap, Easy-On Filler	G1000—	26
AF226	Tank, Fuel, with Caps	G1000—	26
AF228	Support, Fuel Tank, Front, with Cushion	G1000—	26
AF229	Support, Fuel Tank, Rear, with Cushion	G1000—	26
AF230	Gasoline Line	G1000—	26
AF231	Fuel Line	G1000—	26
C1777	Bowl, Fuel Filter, Glass	G1000—	26
C1778	Gasket, Fuel Filter, Cork	G1000—	26
C2378	Body, Fuel Filter	G1000—	26
D392	Body, Solder Bushing, Fuel Line	G1000—	26
D2122	Packing Washer, Three-Way Cock	G1000—	26
E2149	Nut, Solder Bushing, on Gasoline Line	G1000—	26
E2149	Nut, Solder Bushing, on Fuel Line	G1000—	26
E2150	Gland, Solder Bushing, on Fuel Line	G1000—	26
E2150	Gland, Solder Bushing, on Gasoline Line	G1000—	26
F28	Cushion, Fuel Tank Rear Support	G1000—	26
HOOD			
A1890	Guide, Shutter Control Rod	G1379—	...
AF232	Hood, Complete	G1000—	27
C1573	Clip, Hood	G1000—	27
D478	Rivet, Shutter Control Rod Guide to Hood	G1000—	...
F84	Bracket, Hood Clip	G1000-2199	27
F381	Bracket, Hood Clip, R. H.	G2200—	27
F382	Bracket, Hood Clip, L. H.	G2200—	27
COOLING SYSTEM			
A1247	Bracket, Heat Indicator	G1000—	27
A1248	Bushing, Heat Indicator Tube	G1000—	27
AA883	Indicator, Heat, Complete	G1000—	27
AD86	Cap, Radiator, Complete	G1000—	27
AD97	Head with Stud, Radiator Filler	G1000—	27
AF255	Pipe, F93R, Upper Water	G1000—	27
AF257	Core, Radiator	G1000—	27
AF427	Inlet, F383R, Radiator Water	G1000—	27
D126	Baffle, Radiator Cap	G1000—	27
D319R	Cap, Radiator Filler	G1000—	27
D362	Clamp Bar, Radiator Filler Cap	G1000—	27
D473	Gasket, Radiator Filler Cap	G1000—	27
D1138	Nut, on Heat Indicator Stud	G1000—	27
F79R	Tank, Radiator Top	G1000—	27
F80R	Tank, Radiator Bottom	G1000—	27
F81R	Sides, Radiator	G1000-2600	27
F82	Strap, Radiator	G1000-2600	27
F83	Gasket, Radiator Core Top and Bottom	G1000—	27
F86	Gasket, Radiator Water Inlet	G1000—	27
F87	Pipe, Radiator Bottom Outlet	G1000—	27

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
COOLING SYSTEM—Continued			
F87	Pipe, Cylinder Head Inlet.....	G1000—	27
F89	Hose, Lower Water Pipe.....	G1000—	27
F89	Hose, Upper Water Pipe.....	G1000—2199	27
F90	Clamp, Upper and Lower Water Pipe Hose.....	G1000—	27
F91	Pipe, Lower Water.....	G1000—	27
F94	Gasket, Cylinder Water Pipe Outlet.....	G1000—	27
F374	Hose, Upper Water Pipe.....	G2200—	27
F390R	Sides, Radiator.....	G2601—	27
F391	Strap, Radiator.....	G2601—	27
F398	Plate, Heat Baffle.....	G3170—
RADIATOR SHUTTER			
A1785	Spring, Shutter Control Lever.....	G1000—	28
A1786R	Lever, Shutter Control.....	G1000—	28
A1787R	Bracket, Shutter Control.....	G1000—	28
A1853	Washer, on Bell Crank and Stud.....	G1000—	28
A1854	Rivet, Bell Crank to Operating Link.....	G1000—	28
A1855	Rivet, Operating Bar to Shutter.....	G1000—	28
A1856	Spring, Shutter.....	G1000—	28
AA1521	Bell Crank Bracket and Stud.....	G1000—	28
AA1522	Bell Crank and Bushing.....	G1000—	28
AF385	Shutter Blade and Pivot Pin.....	G1000—	28
AF386	Frame and Bearing Strip.....	G1000—	28
AF387	Operating Bar and Stud.....	G1000—	28
AF388	Top Tie Bar and Bearing Bar.....	G1000—	28
AF399	Shutter, Radiator, Complete.....	G1000—
D157	End, Shutter Control Rod.....	G1000—	25
E2057	Washer, on Shutter Control Rod End.....	G1000—	25
F261	Rod, Shutter Control.....	G1000—	28
F344	Link, Bell Crank Operating.....	G1000—	28
629R	Washer, Shutter Control Lever Spring.....	G1000—	25
FAN			
A281	Washer, Fan Bearing Packing.....	G1000—	28
A286	Retainer, Front Fan Bearing Packing.....	G1000—	28
A369	Snap Ring, Fan Shaft Rear End.....	G1000—	28
A393	Packing, Fan Shaft Rear Bearing.....	G1000—	28
A346	Spring, Fan Bearing Take-Up.....	G1000—	28
A1176	Shaft, Fan.....	G1000—	28
A1180R	Housing, Fan Shaft Rear Bearing.....	G1000—	28
A1181	Gasket, Fan Shaft Rear Bearing Housing (.015" Thick).....	G1000—	28
A1182	Gasket, Fan Shaft Rear Bearing Housing (.006" Thick).....	G1000—	28
AA817	Housing, Fan Shaft Bearing, with Support Tube.....	G1000—	28
AB518	Washer, Felt, Front Fan Bearing.....	G1000—	28
AF415	Fan Blades with Hub, Complete.....	G2200—	28
AF417	Fan Assembly (Fan, Shroud, Radiator Inlet and Bottom Tank).....	G1000—2199
B293	Packing, Fan Shaft Support Tube.....	G1000—	28
B296	Washer, Fan Shaft Bearing Packing Retainer.....	G1000—	28
B298	Retainer, Fan Shaft Bearing Packing.....	G1000—	28
D342	Woodruff Key, Fan Drive Bevel Gear.....	G1000—	25
D403	Key, Fan Drive, Bevel Pinion.....	G1000—	28
D1720	Lock Washer (Half) Fan Shaft.....	G1000—	28
F112	Support, Fan Shaft Front.....	G1000—	28
F114	Pinion, Fan Drive Bevel.....	G1000—	28
F380	Shroud, Fan (Fits G1000— when used in AF417 Assembly).....	G2200—	27
JD7655	Cup, Front and Rear Bearing.....	G1000—	28
JD7656	Cone, Front and Rear Bearing.....	G1000—	28
JD7657	Ball Assembly, Front and Rear Bearing.....	G1000—	28
1450R	Pipe Plug, in Fan Bearing Housing.....	G1000—	28
PULLEY			
AF305	Pulley, Belt, F179R, with Sleeve, Gear and Bushing.....	G1000—	29
D279	Key, Belt Pulley Gear.....	G1000—	29
D358	Snap Ring, Belt Pulley Bearing.....	G1000—	29
D454	Drive Screw, for F178 Dust Shield.....	G1000—	29
F178	Shield, Pulley Dust.....	G1000—	29
F181	Bushing, Belt Pulley.....	G1000—	29
F182	Snap Ring, Belt Pulley Bushing.....	G1000—	29
F184	Gear, Belt Pulley.....	G1000—	29

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
PULLEY—Continued			
F185	Snap Ring, Belt Pulley Gear	G1000—	29
F186	Washer, Belt Pulley Bearing	G1000—	29
F187	Retainer, Belt Pulley Bearing	G1000—	29
JD7488	Bearing, Pulley, Outer Race and Roller Assembly	G1000—	29
JD7560	Bearing, Pulley, Inner Race	G1000—	29
CLUTCH PARTS			
A352	Spring, Clutch Release	G1000—	29
A1652	Cover, Clutch Dust	G1000—	29
AD752	Disk, Clutch Facing	G1000—	29
AF248	Disk, Fixed Clutch Drive, F37R, with Rivet	G1000—	29
C614	Facing, Clutch	G1000—	29
D141	Washer, Clutch Driving Disk	G1000—	29
D158	Pin, Clutch Operating Sleeve Drive	G1000-3944	29
D1661	Nut, Clutch Operating Bolt	G1000—	29
D1760	Facing, Clutch, Rivet Type	G1000—	29
F183R	Sleeve, Clutch Operating	G1000—	29
F188R	Cam, Clutch Operating	G1000—	29
F189	Washer, Clutch Operating Cam	G1000—	29
F190	Bolt, Clutch Operating	G1000—	29
F192	Pin, Headed, in Clutch Operating Link	G1000—	29
F193	Pin, Clutch Operating Bolt	G1000—	29
F194R	Disk, Clutch Adjusting	G1000—	29
F195R	Disk, Clutch Sliding Drive	G1000—	29
F419	Pin, Clutch Operating Sleeve Drive	G3945—	29
CLUTCH FORK BEARING AND PULLEY BRAKE			
A353	Spring, Clutch Fork	G1000—	29
A602	Snap Ring, Clutch Fork Shaft	G1000—	29
AF307	Brake, F196R, Pulley, with Lining	G1000—	29
AF403	Bearing, Clutch Fork	G1000-2303	29
D178	Pivot, Clutch Fork	G1000—	29
D1086	Set Screw, Pulley Brake Adjusting	G1000—	29
D1932	Lining, Pulley Brake	G1000—	29
F197R	Fork, Clutch	G1000—	29
F198	Shaft, Clutch Fork	G1000—	29
F199R	Bearing, Clutch Fork	G2304—	29
F200R	Collar, Clutch	G1000—	29
F201	Gasket, Clutch Fork Bearing	G1000—	29
GEAR SHIFT			
A147	Washer, Underdrive Shifter Key	G1000—	30
A644	Washer, Gear Shift Lever Spring	G1000—	30
AF331	Shifter, Gear, Underdrive	G1000—	30
AF332	Shifter, Gear, 1st, 2nd, and Reverse	G1000—	30
AF333	Shifter, Gear, 3rd and 4th Speeds	G1000—	30
B374	Spring, Gear Shifter Pawl	G1000—	30
B375	Pawl, Gear Shifter	G1000—	30
B387	Snap Ring, Gear Shift Lever	G1000—	30
D377	Spring, Gear Shift Lever	G1000—	30
D678	Screw, Gear Shift Adjusting	G1000—	30
F262	Lock Plate, Shifter Shaft Lock Plate to Case Screw	G1000—	30
F275	Yoke, Underdrive Shifter	G1000—	30
F276	Shaft, Underdrive Gear Shifter	G1000—	30
F279	Shaft, Shifter, 1st, 2nd, and Reverse	G1000—	30
F281	Yoke, Gear Shifter	G1000—	30
F282	Shaft, Gear Shifter, 3rd and 4th	G1000—	30
F284	Lock Plate, Shifter Shaft	G1000—	30
F287	Lever, Gear Shift	G1000—	30
F288	Ball, Fulcrum	G1000—	30
F289	Seal, Fulcrum	G1000—	30
F290	Cover, Fulcrum Ball Socket	G1000—	30
F291R	Quadrant, Gear Shift Lever	G1000—	30
F292R	Handle, Gear Shifter Lever Ball	G1000—	30
SLIDING GEAR SHAFT			
A1401	Snap Ring, Sliding Gear Shaft Drive Gear, R. H. Bearing	G1000—	30
A1401	Snap Ring, Sliding Gear Shaft Drive Gear, L. H. Bearing	G1000—	30
F213	Snap Ring, Sliding Gear Shaft Drive Gear, L. H. Bearing	G1000—	30

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
SLIDING GEAR SHAFT—Continued			
F214	Shaft, Sliding Gear	G1000—	30
F215	Snap Ring, Sliding Gear Shaft	G1000—	30
F216	Snap Ring, Sliding Gear Shaft, L. H. Bearing	G1000—	30
F217	Pinion, First and Second Speed Sliding (18 Teeth)	G1000—	30
F218	Pinion, Third and Fourth Speed Sliding (25 Teeth)	G1000—	30
F219	Pinion, Sliding Gear Shaft Drive (25 and 20 Teeth)	G1000—	30
F220R	Cover, Sliding Gear Shaft and Countershaft, L. H. Bearing	G1000—	30
F221	Gasket, Sliding Gear Shaft and Countershaft, L. H. Bearing Cover	G1000—	30
F222R	Cover, Sliding Gear Shaft Drive Gear, L. H. Bearing	G1000—	30
F223	Retainer, Oil, Sliding Gear Shaft, L. H. Bearing	G1000—	30
JD7538	Bearing, Sliding Gear Shaft, R. H., Outer Race and Roller	G1000—	30
JD7558	Bearing, Sliding Gear Shaft, R. H., Inner Race	G1000—	30
JD7670	Bearing, Sliding Gear Shaft, L. H.	G1000—	30
OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR			
A69R	Cover, Overdrive, R. H. Bearing	G1000—	30
A119	Stud, Overdrive, R. H. Bearing Cover	G1000—	30
A120	Dowel Pin, First Reduction Gear Cover	G1000—	30
A159	Spacer, First Reduction Gear	G1000—	30
A438	Gasket, Overdrive, R. H. Bearing Cover	G1000—	30
AF392	Gear Cover, First Reduction (F175R) with Pulley Dust Shield	G1000—	30
AF396	Gear, Sliding Gear Shaft Drive with Nut	G1000—	30
C535	Nut, Overdrive Gear and Shaft End	G1000—	30
F176	Gasket, First Reduction Gear Cover	G1000—	30
F224	Gasket, Overdrive Gear and Shaft, L. H. Bearing Cover	G1000—	30
F225	Gear, First Reduction	G1000—	30
JD7487	Bearing, Overdrive Gear and Shaft, L. H. End	G1000—	30
JD7664	Bearing, Overdrive Gear and Shaft, R. H. End	G1000—	30
OVERDRIVE IDLER GEAR			
F203	Gear, Countershaft Idler (21 and 25 Teeth)	G1000—	31
F205	Washer, Countershaft Idler Left Bearing	G1000—	31
F206	Spacer, Countershaft Idler Bearing	G1000—	31
F207	Washer, Countershaft Right, Thrust	G1000—	31
JD7904	Bearing, Countershaft Idler	G1000—	31
COUNTERSHAFT			
A1160	Snap Ring, Countershaft Bearing, L. H.	G1000—	31
AF309	Housing, F208R, Countershaft, R. H. Bearing, with Cup	G1000—	31
AF397	Countershaft	G1000—	31
C535	Nut, Countershaft Left End	G1000—	30
C2321	Washer, Countershaft L. H. Bearing	G1000—	31
F204	Gear, Countershaft Cluster (21, 21 and 28 Teeth)	G1000—	31
F209	Gasket, Countershaft R. H. Bearing Housing (Thin)	G1000—	31
F210	Gasket, Countershaft R. H. Bearing Housing (Thick)	G1000—	31
F211	Shim, Countershaft R. H. Bearing Housing	G1000—	31
JD7246	Cone and Roller, Countershaft, R. H. Bearing	G1000—	31
JD7379	Cone and Roller, Countershaft, L. H. Bearing	G1000—	31
JD7408	Cup, Countershaft R. H. Bearing	G1000—	31
JD7411	Cup, Countershaft L. H. Bearing	G1000—	31
DIFFERENTIAL			
AF298	Differential, Complete	G1000—
AF299	Gear, Differential, with Shaft and Pinion	G1000—
AF382	Gear, Differential, with Shaft	G1000—	32
AF389	Pinion, Differential Bevel with Bushing (Furnish AF405 for G1000—G1167)	G1168—	32
AF405	Bevel Gear and Pinion, Assembly (Furnished in place of AF389 or F165)	G1000—1167
F163	Shaft, Differential Bevel Pinion	G1000—	32
F165	Bevel Gear and Spur Pinion, Differential (Furnish AF405 for G1000—G1167)	G1168—	32
F166	Washer, Differential Thrust	G1000—	32
F167	Cover, Differential Shaft, R. H. Bearing	G1000—	32
F168R	Quill, Differential Bearing	G1000—	32
F169	Snap Ring, Differential Shaft, R. H. Bearing	G1000—	32
F170	Shim, Differential Bearing Quill (Steel, Thick)	G1000—	32
F171	Shim, Differential Bearing Quill (Steel, Thin)	G1000—	32
F172	Shim, Differential Bearing Quill (Vellumoid, Thick)	G1000—	32
F173	Shim, Differential Bearing Quill (Vellumoid, Thin)	G1000—	32
F346	Bushing, Differential Bevel Pinion	G1000—	32

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
DIFFERENTIAL—Continued			
JD7288	Cup, Differential Bearing, R. H. and L. H.	G1000—	32
JD7391	Cone, Differential Bearing, R. H. and L. H.	G1000—	32
FINAL DRIVE			
A76R	Nut, Rear Axle Shaft.	G1000—	31
AD1275	Felt Washer, Rear Axle.	G1000—	31
AF318	Shaft, Rear Axle.	G1000—	31
AF341	Housing, Rear Axle, F226R, with Bearing Cups and Oil Seals.	G1000—	31
AF342	Oil Seal, Rear Axle Inner Bearing.	G1000—	31
C1220	Dowel Pin, Rear Axle Housing to Case.	G1000—	31
C1479	Stud, for Implement Attachment in Rear Axle Housing.	G1379—	31
D625	Pipe Plug, Rear Axle Housing Drain.	G1000—	31
D2454	Spacer, Rear Axle Bearing.	G1000—2698	31
E2244	Plug, Rear Axle Housing Cover Filler.	G1000—	31
F227	Gasket, Rear Axle Housing to Case.	G1000—	31
F228	Washer, Rear Axle Oil Seal.	G1000—	31
F230	Retainer, Rear Axle Felt.	G1000—	31
F231	Gear, Final Drive.	G1000—	31
F264R	Cover, Rear Axle Housing.	G1000—	31
F265	Gasket, Rear Axle Housing to Cover.	G1000—	31
F386	Spacer, Rear Axle Bearing.	G2699—	31
JD7298	Cup, Rear Axle Bearing.	G1000—	31
JD7376	Cone, Rear Axle Bearing.	G1000—	31
JD7759	Oil Fitting, Alemite, No. 1610.	G1000—	31
REAR WHEELS			
AF356	Drive Wheel, Cast, F337R with Demountable Rim for 10.00x36" or 11.25x36" Low Pressure Rubber Tires.	G1000—
AF375	Drive Wheel, Cast, F337R, with Studs and Nuts, for 10.00x36" or 11.25x36" Low Pressure Rubber Tires.	G1000—	34
AF411	Drive Wheel, Spoke Type, D. C. Rim, for 10.00x36" or 11.25x36" Low Pressure Rubber Tires.	G1000—	34
F22R	Clamp, Drive Wheel Hub.	G1000—	33
F23	Capscrew, Drive Wheel Hub Clamp.	G1000—	33
JD1227	Drive Wheel, Flat Tire.	G1000—	33
JD1228	Drive Wheel, Skeleton Type.	G1000—	33
REAR WHEEL EQUIPMENT			
A685	Spacer, on Drive Wheel Support to Drive Wheel Bolt.	G1000—	34
A685	Spacer, Skeleton Drive Wheel Cast Lug.	G1000—	34
A686	Bolt, Skeleton Drive Wheel Cast Lug.	G1000—	34
A686	Bolt, Drive Wheel Support to Road Band Support.	G1000—	34
A1298	Lug, Spud.	G1000—	33
AA1002	Rim, Demountable, with Side Ring, for F337R Cast Drive Wheel and 10.00x36" or 11.25x36" Low Pressure Rubber Tires.	G1000—	34
AC649	Lug, Cone.	G1000—	33
AF436	Road Band, Drive Wheel.	G1000—	34
B634R	Rim Clamp, for F337R Cast Wheel.	G1000—	34
C744	Washer, on Drive Wheel to Road Band Support Bolt.	G1000—	34
C1030	Support, Extension Rim.	G1000—	33
C1479	Stud, Rim Clamp to Drive Wheel.	G1000—	34
C1517	Bolt, Sand Lug.	G1000—	33
C1646R	Lug, Button.	G1000—	33
C2199R	Lug, Sand.	G1000—	33
D233	Lug, Spade, 4" High.	G1000—	33
D411	Bolt, Spade Lug.	G1000—	33
D573	Lug, Spade, 6" High.	G1000—	33
D938	Washer, Spade Lug—Sand Lug.	G1000—	33
D1078	Lug, Spade, 5" High.	G1000—	33
D1283	Lug, "A" Shape, 5" High.	G1000—	33
D2121	Lug, Spade, 5" Heavy Duty.	G1000—	33
D2184	Hook Bolt.	G1000—	34
D2186	Washer, Hook Bolt.	G1000—	34
D2446	Lug, 31° Face, 6" Spade.	G1000—	33
D2447	Lug, Spade, 4" Heavy Duty.	G1000—	33
D2627	Lug, "A" Shape, 6" High.	G1000—	33
F295R	Lug, Cast, Skeleton Drive Wheel.	G1000—	33
F336	Rim, Extension.	G1000—	33

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
REAR WHEEL EQUIPMENT—Continued			
F405	Support, Road Band	G1000—	34
F407	Support, Drive Wheel	G1000—	34
1706R	Washer, Button Lug	G1000—	33
DIFFERENTIAL BRAKES			
A88R	Pedal, Brake, R. H.	G1000—	32
A89R	Pedal, Brake, L. H.	G1000—	32
A120	Dowel, Brake	G1000—	32
A134	Pin, Brake Adjusting	G1000—	32
A149	Roller, Brake Shoe	G1000—	32
A151	Screw, Brake Adjusting	G1000—	32
A152	Shaft, Brake Lever	G1000—	32
A321	Cam, Brake	G1000—	32
A345	Pin, Brake Shoe Roller	G1000—	32
A348	Spring, Brake Shoe	G1000—	32
A441	Lining, Brake Shoe	G1000—	32
A510	Guard, Brake Shaft Dust (Inner)	G1000—	32
A1163	Bushing, Brake Shaft (Outer)	G1000—	32
A1168	Washer, Brake Shaft Thrust	G1000—	32
AA314	Shoe, Brake, with Lining	G1000—	32
AA319	Support, Brake Latch	G1000—2075	32
AA811	Oil Cup, Outer Brake Shaft Bearing	G1000—	32
AB330	Support, Brake Latch	G2076—	32
AF286	Housing, Brake, F150R, R. H., with Bushings and Oiler	G1000—	32
AF287	Housing, Brake, F151R, L. H., with Bushings and Oiler	G1000—	32
AF291	Drum, Brake, with Hub	G1000—	32
AF395	Shaft, Brake with Nut	G1000—	32
B305	Latch, Brake	G2076—	32
C2182	Latch, Brake	G1000—2075	32
D136	Washer, Brake Shaft	G1000—	32
F152	Bushing, Brake Shaft (Inner)	G1000—	32
F155	Nut, Brake Shaft	G1000—	32
F157	Gasket, Brake Housing to Transmission Case	G1000—	32
K2525	Pipe Plug, in Brake Housing	G1000—	32
27R	Washer, Pivot, on Brake Latch	G1000—	32
FRONT WHEELS AND FRONT WHEEL EQUIPMENT			
A215	Band, Front Wheel Guide (1-1/2" High)	G1000—	36
A777	Band, Front Wheel Guide	G1000—	36
A1556	Gasket, Front Wheel Hub Cap (Disk Wheel)	G1000—	35
A1828	Hook Bolt	G1000—	36
AA663	Washer, Front Wheel Felt	G1000—	35
AA1399	Hub, Front Wheel (A1553R), with Cups	G1000—	35
AA1407	Hub Cap, with Alemite Fitting (Disk Wheel)	G1000—	35
AC119	Hub Cap, with Oil Fittings, Front Wheel	G1000—	35
AC365	Hub, Front Wheel (Disk Type)	G1000—	35
AC847	Front Wheel, with Bolts (Disk Type)	G1000—	35
AD452	Nut, Front Wheel Knuckle	G1000—	35
AF210	Front Wheel, with Bearing Cups, less Hub Cap	G1000—	35
AF402	Scraper, Front Wheel	G1000—	36
C677	Gasket, Front Wheel Hub Cap	G1000—	35
C1732	Band, Front Wheel Guide (2-1/2" High)	G1000—	36
C2308	Rim, Front Wheel Extension	G1000—	36
C2309	Clip, Front Wheel Extension Rim	G1000—	36
D635	Retainer, Front Wheel Felt	G1000—	35
D827	Washer, on Hook Bolt	G1000—	36
JD15	Bolt, Front Wheel Hub (Disk Type)	G1000—	35
JD1232	Front Wheel with Rim (Disk Type) For 6.00x16" Low Pressure Rubber Tires	G1000—	35
JD7216	Cone and Roller, Front Wheel Outer Bearing	G1000—	35
JD7224	Cone and Roller, Front Wheel Inner Bearing	G1000—	35
JD7266	Cup, Front Wheel Outer Bearing	G1000—	35
JD7270	Cup, Front Wheel Inner Bearing	G1000—	35
JD7759	Oil Fitting, Alemite Hydraulic No. 1610, Front Wheels	G1000—	35
27R	Washer, on Weight to Wheel Bolts	G1000—	36

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
FRONT END SUPPORT			
AF319	Support, Front End	G1000-	35
PEDESTAL			
A133	Washer, Steering Sector	G1000-	37
A257	Cover, Steering Gear Housing	G1000-	32
A288	Shim, Steering Worm Quill, 1/32" Thick	G1000-	32
A289	Shim, Steering Worm Quill, 1/64" Thick	G1000-	32
A396	Packing, Spindle Adjusting Bushing	G1000-	32
A435	Gasket, Steering Gear Housing Cover	G1000-	32
A490	Shim, Steering Spindle, Upper	G1000-	32
A491R	Bushing, Steering Spindle Eccentric	G1000-	32
A776	Stop Pin, Steering Sector	G1000-	32
A1052	Shim, Steering Worm Quill, .005"-.006" Thick	G1000-	32
A1422	Washer, Spindle Lower (Cork)	G1000-	32
A1423	Cap, Spindle, Lower	G1000-	32
AF322	Pedestal, F241R, with Stop Pin and Cup	G1000-	32
B32	Packing, Steering Shaft	G1000-	32
B33	Nut, Steering Shaft Packing	G1000-	32
C2327	Gasket, Spindle, Lower Cap	G1000-	32
F146R	Quill, Steering Worm	G1000-	32
F349	Washer, Steering Spindle Packing	G1000-	32
K2525	Pipe Plug, Steering Gear Housing Drain	G1000-	32
JD7684	Bearing, Steering Spindle, Lower	G1000-	32
JD7759	Oil Fitting, No. 1610, Upper and Lower Pedestal Bearings	G1000-	31
STEERING PARTS			
A133	Washer, Steering Sector	G1000-	37
A301	Bushing, Steering Shaft, Rear	G1000-1378	25
A1910	Bushing, Steering Shaft, Rear	G1379-	25
AA380	Wheel, Steering	G1000-	37
AA1575	Bearing, A1909R, with Bushing, Steering Shaft, Rear	G1000-	25
AF281	Shaft and Worm, Steering	G1000-	37
AF324	Double Knuckle with Spindle and Dust Excluder	G1000-	37
B392R	Bracket, Steering Shaft Bearing	G1000-	25
D342	Woodruff Key, in Steering Shaft	G1000-	37
D1771	Nut, Steering Wheel to Shaft	G1000-	37
F147	Support, Steering Shaft, Rear	G1000-	25
F245	Sector, Steering	G1000-	37
JD7205	Cone, Steering Shaft Worm	G1000-	37
JD7253	Cup, Steering Shaft Worm	G1000-	37
DRAWBAR			
A334	Nut, Drawbar Clevis, Special	G1000-	36
A507	Pin, Drawbar Roller	G1000-	36
A850R	Roller, Drawbar	G1000-	36
AF373	Support, Drawbar	G1000-	36
AF383	Drawbar, Swinging	G1000-	36
F333	Clevis, Drawbar, Lower	G1000-
F334	Clevis, Drawbar, Upper	G1000-
F335	End, Drawbar	G1000-	36
SEAT			
A60R	Body, Seat Support	G1000-	37
A222	Channel, Seat Support	G1000-	37
A333	Nut, Seat Spring Bolt (Special)	G1000-	37
A618	Spring, Seat	G1000-	37
A619	Bolt, Seat Spring (9" Long)	G1000-	37
AD1606	Seat	G1000-	37
C1980	Pin, Channel Seat Support	G1000-	37
C1982R	Washer, Seat Spring	G1000-	37
C1985	Spacer, Seat Clamp	G1000-	37
D1797	Nut, Seat Clamp	G1000-	37
PLATFORM			
AA318	Platform, with Brake Latch Supports	G1000-	37
AA319	Support, Brake Latch	G1000-2075	37
AB330	Support, Brake Latch	G2076-	37
FENDERS			
AA1582	Fender, R. H.	G1000-
AA1583	Fender, L. H.	G1000-

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
MAGNETO			
A470	Clamp, Spark Plug Cable.....	G1000-	37
A471	Clip, Spark Plug Cable.....	G1000-	37
A500	Gasket, Magneto to Governor Case.....	G1000-	37
AA1084	Insulator, Spark Plug Porcelain.....	G1000-	37
AC600	Spark Plug.....	G1000-	37
AD1400	Magneto.....	G1000-	37
AD1454	Cable, Spark Plug, Complete, R. H.....	G1000-	37
AF233	Shield and Cable Conduit, Spark Plug.....	G1000-	37
AF234	Cable, Spark Plug, Complete, L. H.....	G1000-	37
B465R	Clamp, Spark Plug Cable Conduit.....	G1000-	37
D465	Gasket, Spark Plug.....	G1000-	37
D2808	Gauge, Magneto Contact Point.....	G1000-	37
629R	Washer, on Magneto to Governor Case Screws.....	G1000-	37
MAGNETO PARTS			
AD1510	Center Brush.....	G1000-	38
AD1523	Distributor Block, Complete.....	G1000-	38
AD1524	Distributor Brush with Spring.....	G1000-	38
AD1525	Front Cover, Gasket and Dowel Pin.....	G1000-	38
AD1526	Wire, Condenser Lead.....	G1000-	38
AD1527	Coil, Complete, with Primary and Ground Leads.....	G1000-	38
AD1528	Lead Wire, Coil to Ground.....	G1000-	38
AD1529	Wire, Primary Lead.....	G1000-	38
AD1530	Wire, Breaker Lead.....	G1000-	38
AD1531	Impulse Drive Member.....	G1000-	38
AD1532	Housing, Magneto.....	G1000-	38
AD1533	Cam Wiper and Bracket.....	G1000-	38
AD1534	Distributor Rotor.....	G1000-	38
AD1535	Breaker Bar, Complete.....	G1000-	38
AD1536	Point, Stationary Contact, with Bracket and Breaker Bar Fulcrum Pin..	G1000-	38
AD1537	Distributor Bearing.....	G1000-	38
AD1538	Condenser.....	G1000-	38
AD1539	Rotor Bearing.....	G1000-	38
AD1540	Rotor Assembly.....	G1000-	38
AD1541	Shell, Impulse Coupling, with Spring Locating Pin.....	G1000-	38
AD1542	Spring, Impulse Coupling, with Felt.....	G1000-	38
AD1543	Plate, with Impulse Stop Pin.....	G1000-	38
B1085	Washer, Contact Bracket.....	G1000-	38
B1092	Screw, Timing Slot.....	G1000-	38
B1093	Screw, Distributor Shaft.....	G1000-	38
B1093	Screw, Rotor and Distributor Gears.....	G1000-	38
C1324	Lock Washer, Breaker Bar Spring Screw.....	G1000-	38
C1335	Key, Rotor Shaft.....	G1000-	38
C1350	Lock Washer, Timing Slot Screw.....	G1000-	38
C1350	Lock Washer, Condenser Lead.....	G1000-	38
C1350	Lock Washer, Distributor Block Screw.....	G1000-	38
C1350	Lock Washer, Breaker Bar Terminal Screw.....	G1000-	38
C1350	Lock Washer, Coil Clamp Screw.....	G1000-	38
C1350	Lock Washer, Ground Stud.....	G1000-	38
C1350	Lock Washer, Front Cover Screw.....	G1000-	38
D1145	Screw, Front Cover.....	G1000-	38
D2213	Screw, Front Bearing Plate.....	G1000-	38
D2660	Thumb Nut, Distributor Block.....	G1000-	38
D2661	Coil Spring, Distributor Block, High Tension Contact.....	G1000-	38
D2662	Gasket, Distributor Block.....	G1000-	38
D2663	Gasket, Front Cover.....	G1000-	38
D2664	Dowel Pin, Front Cover.....	G1000-	38
D2666	Snap Ring, Impulse Pawl.....	G1000-	38
D2667	Felt, Impulse Drive Member.....	G1000-	38
D2669	Oil Hole Plug.....	G1000-	38
D2670	Cover, Timing Slot.....	G1000-	38
D2671	Gasket, Timing Slot.....	G1000-	38
D2673	Felt Washer, Rotor Bearing, Impulse End.....	G1000-	38
D2674	Retainer, Felt Washer Rotor Bearing.....	G1000-	38
D2675	Screw, Rear Bearing Oil Hole Plug.....	G1000-	38
D2676	Disk, Safety Cap.....	G1000-	38
D2677	Adjusting Plate, Breaker Bar.....	G1000-	38
D2678	Terminal Bracket, Breaker Bar Spring.....	G1000-	38
D2679	Insulation, Breaker Stud.....	G1000-	38

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
MAGNETO PARTS—Continued			
D2680	Gear, Distributor	G1000-	38
D2681	Collar, Distributor Gear Spacing	G1000-	38
D2682	Distributor Cam and Shaft	G1000-	38
D2683	Clamp, Coil	G1000-	38
D2684	Insulator, Coil (Top)	G1000-	38
D2685	Insulator, Coil (Bottom)	G1000-	38
D2686	Insulator, Coil Lead	G1000-	38
D2687	Insulation, Ground Terminal Connector	G1000-	38
D2688	Connection Clip, Ground Outside	G1000-	38
D2689	Terminal Connector, Ground	G1000-	38
D2690	Pinion, Rotor	G1000-	38
D2691	Plate, Front Bearing	G1000-	38
D2692	Screw, Distributor Bearing Oil Hole	G1000-	38
D2693	Sealing Cap, Main Bearing	G1000-	38
D2694	Shim, Rotor Bearing, .002"	G1000-	38
D2695	Shim, Rotor Bearing, .003"	G1000-	38
D2696	Button, Centering, Impulse Spring	G1000-	38
D2697	Magnet	G1000-	38
D2698	Cap, Magnet Screw	G1000-	38
D2699	Screw, Distributor Block	G1000-	38
D2700	Screw, Breaker Bar Spring	G1000-	38
D2701	Screw, Contact Bracket Pivot	G1000-	38
D2702	Screw, Connector Plate	G1000-	38
D2702	Screw, Contact Bracket Holding (Short)	G1000-	38
D2703	Screw, Contact Bracket Holding (Long)	G1000-	38
D2704	Screw, Breaker Base Plate	G1000-	38
D2705	Screw, Breaker Terminal	G1000-	38
D2707	Screw, Coil Clamp	G1000-	38
D2708	Stud, Ground Terminal	G1000-	38
D2709	Screw, Stop Pin Plate	G1000-	38
D2710	Screw, Magnet	G1000-	38
D2712	Washer, Insulating, Breaker Bar Terminal Screw	G1000-	38
D2713	Washer, Breaker Bar Terminal Screw	G1000-	38
D2714	Washer, Distributor Gear	G1000-	38
D2714	Washer, Rotor Pinion	G1000-	38
D2715	Washer, Insulating, Ground Stud, Outside	G1000-	38
D2716	Washer, Ground Stud	G1000-	38
D2717	Washer, Notched Impulse Coupling Nut	G1000-	38
D2718	Pawl, Impulse Coupling	G1000-	38
D2719	Washer, Impulse Stop Lever	G1000-	38
D2720	Lock Washer, Front Bearing Plate Screw	G1000-	38
D2720	Lock Washer, Distributor Shaft Screw	G1000-	38
D2720	Lock Washer, Ground Terminal Screw	G1000-	38
D2720	Lock Washer, Pinion Gear Screw	G1000-	38
D2721	Lock Washer, Impulse Shaft	G1000-	38
D2722	Lock Washer, Magnet Screw	G1000-	38
D2723	Nut, Breaker Bar Terminal	G1000-	38
D2723	Nut, Condenser Lead Wire	G1000-	38
D2724	Nut, Breaker Terminal	G1000-	38
D2725	Hex. Nut, Ground Terminal	G1000-	38
D2726	Hex. Nut, Impulse Starter	G1000-	38
D2727	Key, Distributor Gear	G1000-	38
D2727	Key, Pinion Gear	G1000-	38
CARBURETOR			
A1830	Plug Screw for Drilled Holes	G1000-	39
AF240	Carburetor, Complete	G1000-	39
AF241	Carburetor Body	G1000-	39
B449	Bowl Casting	G1000-	39
B450	Nut, Bowl Retaining	G1000-	39
B457	Gasket, Bowl Nut	G1000-	39
B855	Idle Plug	G1000-	39
C2501	Float Valve and Seat Assembly	G1000-	39
C2502	Shaft, Throttle	G1000-	39
C2504	Bushing, Throttle Shaft, Upper	G1000-	39
C2506	Throttle Lever Assembly	G1000-	39
D392	Body, Solder Bushing, Fuel Pipe	G1000-	39
D2530	Bushing, Throttle Shaft, Lower	G1000-	39
P348	Choker Disk, Air Valve	G1000-	39

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
CARBURETOR—Continued			
S1121	Drain Cock	G1000-	39
SI-18	Screw, Choker Disk	G1000-	39
X2458	High Speed Needle	G1000-	39
X2460	Choker Lever and Shaft Assembly	G1000-	39
X2461	Idle Needle	G1000-	39
X2462	Strainer, Complete	G1000-	39
18-O	Spring, Throttle Stop	G1000-	39
4W	Screw and Washer, Float	G1000-	39
10W	Clamp Screw, Throttle Lever Adjusting Screw	G1000-	39
17W	Screw, Throttle Lever	G1000-	39
41W	Friction Ball, Needle Valve	G1000-	39
45W	Plug Screw, for Drilled Holes	G1000-	39
57W	Spring, Friction Ball	G1000-	39
63W	Lock Washers, Choker Disk Screw	G1000-	39
65W	Spring, Nozzle Retaining	G1000-	39
67W	Stop Pin, Throttle Lever	G1000-	39
68W	Spring, Choker Lever Friction	G1000-	39
69W	Cork Float	G1000-	39
70W	Screws, Throttle Disk	G1000-	39
71W	Adjusting Screw, Throttle Lever	G1000-	39
72W	Washer, Choker Lever Friction Spring	G1000-	39
73W	Gasket, Float Valve Seat	G1000-	39
74W	Washer, Choke Friction	G1000-	39
75W	Lever, Float	G1000-	39
76W	Disk, Throttle	G1000-	39
77W	Gasket, Strainer	G1000-	39
78W	Gasket, Bowl	G1000-	39
79W	Pipe Plug, Hex. Head	G1000-	39
80W	Pipe Plug, Headless	G1000-	39
81W	Lock Washer, Throttle Disk Screws	G1000-	39
83W	Drill Plug (7/32"-32)	G1000-	39
85W	Drill Plug (1/4"-28)	G1000-	39
90W	Pin, Float Pivot	G1000-	39
91W	Screw, Float Bearing	G1000-	39
94W	Screw, Choker Friction Spring	G1000-	39
95W	Nozzle	G1000-	39
321R	Gasket, Carburetor to Manifold	G1000-	39
AIR CLEANER			
AA931	Air Stack	G1000-	39
AB822	Side Rod Bolts, Air Cleaner	G1000-	39
AF276	Elbow, Carburetor Intake, F139R, with Pipe	G1000-	39
AF277	Air Cleaner	G1000-	39
AF278	Body, Air Cleaner	G1000-	39
AF279	Oil Cup, Air Cleaner	G1000-	39
C617	Clamp, Carburetor Inlet Hose	G1000-	39
C1572	Wing Nut, Cup Retaining Bolt	G1000-	39
D1034	Gasket, Elbow to Carburetor	G1000-	39
F141	Hose, Air Cleaner Elbow to Carburetor	G1000-2399	39
F142R	Bracket, Air Cleaner	G1000-	39
F143	Gasket, Air Cleaner	G1000-	39
F388	Hose, Air Cleaner Elbow to Carburetor	G2400-	39
K3151	Washer, Cup Retaining Bolt	G1000-	39
TOOL BOX AND TOOLS			
AF318	Tool Box	G1000-	40
B352	Socket Wrench for Connecting Rod Bolt Nuts	G1000-	40
B353	Socket Wrench for Spade Lug and Flywheel Bolt Nuts	G1000-	40
JD7751	Grease Gun No. 5545	G1000-	40
K3151	Washer, Tool Box Bolt	G1000-	40
629R	Washer, Tool Box to Front End Bolt	G1000-	40
POWER SHAFT PARTS			
A378	Snap Ring, Power Shaft Drive Shaft Left Bearing	G1000-	40
A552	Arm, Power Shaft Shifter	G1000-	40
B334	Snap Ring, Power Shaft Drive Shaft Left Bearing	G1000-	40
D377	Spring, Power Shaft Shifter Hand Lever	G1000-	40
D993	Spring, Power Shaft Shifter Yoke	G1000-	40
F246	Shaft, Power Shaft Drive	G1000-	40

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
POWER SHAFT PARTS—Continued			
F247	Woodruff Key, Pinion.....	G1000—	40
F248	Gear, Power Shaft Bevel Drive.....	G1000—	40
F249	Gear, Power Shaft Drive Shaft Sliding.....	G1000—	40
F250R	Cover, Power Shaft Drive Shaft Right Bearing.....	G1000—	40
F251	Shim, Power Shaft Bearing Cover, Thick.....	G1000—	40
F252	Shim, Power Shaft Bearing Cover, Thin.....	G1000—	40
F253	Shaft, Power Shaft Shifter.....	G1000—	40
F254	Shifter, Power Shaft Gear.....	G1000—	40
F255	Lever, Power Shaft Shifter, Hand.....	G1000—	40
F256	Pinion, Power Shaft Bevel Driven.....	G1000—	40
F257	Washer, Power Shaft Bevel Driven Pinion Thrust.....	G1000—	40
F258	Spacer, Power Shaft Bevel Drive Pinion Bearing.....	G1000—	40
F259R	Cover, Power Shaft Bearing.....	G1000—	40
F262	Lockplate, Power Shaft Bearing Cover.....	G1000—	40
F263	Coupling, Power Shaft.....	G1000—	40
F266	Shaft, Power.....	G1000—	40
F267	Snap Ring, Power Shaft Rear End.....	G1000—	40
F268R	Stuffing Box, Power Shaft.....	G1000—	40
F269	Gasket, Power Shaft Stuffing Box.....	G1000—	40
F270	Packing, Power Shaft Rear End (3 used).....	G1000—	40
F271R	Gland, Power Shaft.....	G1000—	40
F272R	Guard, Power Shaft.....	G1000—	40
F273	Gasket, Power Shaft Guard.....	G1000—	40
JD7502	Bearing, Power Shaft Bevel Driven Pinion, Rear, Outer Race and Roller.....	G1000—	40
JD7538	Bearing, Power Shaft Drive Shaft, Left, Outer Race and Roller.....	G1000—	40
JD7558	Bearing, Power Shaft Drive Shaft, Left, Inner Race.....	G1000—	40
JD7665	Bearing, Power Shaft Drive Shaft, Right.....	G1000—	40
JD7682	Bearing, Power Shaft, Rear.....	G1000—	40
JD7951	Bearing, Power Shaft Bevel Pinion, Front, Outer Race and Roller.....	G1000—	40
405R	Ball, Power Shaft Shifter.....	G1000—	40
2226R	Washer, on Power Shaft Shifter Lever.....	G1000—	40
POWER LIFT PARTS			
A140	Valve, Relief.....	P.L.G. 100—	41
A147	Key Washer, in Power Lift Pedals.....	P.L.G. 100—	40
A354	Spring, Cam Trip Lever.....	P.L.G. 100—	40
A521	Gasket, Relief Valve Spring Nut (Copper).....	P.L.G. 100—	41
A608	Washer, on Control Shaft.....	P.L.G. 100—	40
A640	Gasket, Check Valve Spring Plug (Copper Asbestos).....	P.L.G. 100—	40
A642	Valve, By-Pass.....	P.L.G. 100—	40
A648	Pin, Control Lever Pawl.....	P.L.G. 100—	40
A659	Spring, Relief Valve.....	P.L.G. 100—	41
A664	Rod, Control.....	P.L.G. 100—	40
A665	Pin, Pump Follower Gear.....	P.L.G. 100—	41
A676	Key (Woodruff) in Pump Drive Gear.....	P.L.G. 100—	41
A679	Spring, Control Lever Pawl.....	P.L.G. 100—	40
A680	Key Washer, Control Lever.....	P.L.G. 100—	40
A731	Bushing, Pump Follower Gear.....	P.L.G. 100—	41
A818	Dowel Pin, Pump Body (Upper).....	P.L.G. 100—	41
A1427R	Pedal, R. H.....	P.L.G. 100—	40
A1428R	Pedal, L. H.....	P.L.G. 100—	40
A1429R	Cam.....	P.L.G. 100—	40
A1431	Guide, Valve.....	P.L.G. 100—	40
A1432	Trip Lever, Cam.....	P.L.G. 100—	40
A1433	Roller, Cam Follower.....	P.L.G. 100—	40
A1434	Pin, Cam Follower Roller.....	P.L.G. 100—	40
A1435	Shaft, Trip Lever and Cam Follower.....	P.L.G. 100—	40
A1436	Pawl, Control Lever.....	P.L.G. 100—	40
A1437	Packing, Control Shaft (Cork).....	P.L.G. 100—	40
A1438	Shaft, Control.....	P.L.G. 100—	40
A1439	Screw, Relief Valve Spring.....	P.L.G. 100—	41
A1440	Valve, Check.....	P.L.G. 100—	40
A1441	Plug, Check Valve Spring.....	P.L.G. 100—	40
A1444	Spring, Rock Shaft Return.....	P.L.G. 100—	41
A1445R	Bearing, Rock Shaft.....	P.L.G. 100—	41
A1446	Valve, Throttle.....	P.L.G. 100—	41
A1447	Gasket, Valve Housing.....	P.L.G. 100—	40
A1449	Screw, Throttle Valve Adjusting.....	P.L.G. 100—	41
A1450	Spring, Pedal Return.....	P.L.G. 100—	40

REPAIRS FOR MODEL "G" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
POWER LIFT PARTS—Continued			
A1452	Stud Valve Housing to Power Lift Housing	P.L.G. 100-	41
A1453	Shield, Rock Shaft Return Spring	P.L.G. 100-	41
A1861	Washer, under Power Lift Relief Valve Spring	P.L.G. 100-	41
AA1103	Housing, A1430R, Valve, with Guide	P.L.G. 100-	40
AA1104	Cam Follower Assembly	P.L.G. 100-	40
AA1105	Lever, Control	P.L.G. 100-	40
AF361	Housing, F296R, with Oil Seal Bearing and Bushing	P.L.G. 100-	41
AF366	Gear, Pump Follower, with Bushing	P.L.G. 100-	41
AF368	Rock Shaft, with Dowel Pin, R. H. and L. H.	P.L.G. 100-	41
AF370	Rod, Connecting	P.L.G. 100-	41
AF371	Shaft with Coupling, Drive	P.L.G. 100-	41
B170	Spring, Control Shaft	P.L.G. 100-	40
B268	Spring, Check Valve	P.L.G. 100-	40
B268	Spring, Throttle Valve	P.L.G. 100-	40
B365	Spring, Cam Follower	P.L.G. 100-	40
B425	Washer, Throttle Valve Adjusting Screw (Copper) (2 used)	P.L.G. 100-	41
B427	Cap Nut, Throttle Valve Adjusting Screw	P.L.G. 100-	41
B489	Shaft, Pedal	P.L.G. 100-	40
C1220	Dowel Pin, R. H. Rock Shaft	P.L.G. 100-	41
D1969	Pin, Cam Trip	P.L.G. 100-	40
E2142	Pipe Plug, Oil Level Test	P.L.G. 100-	41
E2244	Pipe Plug, Oil Filler, in Valve Housing	P.L.G. 100-	41
F298	Bearing, Oil Seal	P.L.G. 100-	41
F299R	Body, Power Lift Pump	P.L.G. 100-	41
F301	Cup, Oil Seal, Pump Shaft	P.L.G. 100-	41
F302	Packing, Oil Seal	P.L.G. 100-	41
F303	Washer, in Oil Seal	P.L.G. 100-	41
F304	Spring, in Oil Seal	P.L.G. 100-	41
F305	Gear, Power Lift Pump Drive	P.L.G. 100-	41
F306R	Cover, Power Lift Pump	P.L.G. 100-	41
F307R	Cylinder, Power Lift	P.L.G. 100-	41
F308	Gasket, Power Lift Cylinder	P.L.G. 100-	41
F309R	Piston, Power Lift	P.L.G. 100-	41
F310	Cup, Power Lift Piston (Leather)	P.L.G. 100-	41
F311R	Retainer, Power Lift Piston Cup	P.L.G. 100-	41
F312	Lock Plate, on Power Lift Piston Cup Retainer	P.L.G. 100-	41
F314	Pin, Power Lift Piston	P.L.G. 100-	41
F315	Snap Ring, Power Lift Piston Pin	P.L.G. 100-	41
F316	Arm, Power Lift Crank	P.L.G. 100-	41
F317	Pin, Power Lift Crank	P.L.G. 100-	41
F323	Coupling, Power Lift Drive Shaft	P.L.G. 100-	41
F324	Rivet, Power Lift Drive Shaft Coupling	P.L.G. 100-	41
F325	Shaft, Power Lift Pump	P.L.G. 100-	41
F338	Stud, Power Lift Pump Body and Cover to Housing	P.L.G. 100-	41
F339	Dowel, Lower, Power Lift Pump Body	P.L.G. 100-	41
F340	Bushing, Power Lift Pump Shaft	P.L.G. 100-	41
JD7759	Alemite Zerk Fitting No. 1610, on Rock Shaft Bearings	P.L.G. 100-	41
K2198	Stud, Power Lift Housing to Rear Axle Housing	P.L.G. 100-	41
1452R	Drain Plug, in Power Lift Housing	P.L.G. 100-	41

HARDWARE LIST FOR MODEL "G" TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS					
C1871	A60R	Seat Support Body to Rear Axle Housing.....	1/2"x1-7/8"	4
D474	A178	Cam Follower Guide Support to Transmission Case..	1/2"x1-3/4"	3
A309	A1152	Oil Filter Body to Cover.....	5/16"x1-3/4"	1
D2067	A1152	Oil Filter Body to Cover.....	5/16"x2-1/4"	2
1670R	A1180R	Fan Shaft Rear Bearing Housing to Case.....	3/8"x1"	3
1669R	A1423	Spindle Lower Cork Cap to Pedestal.....	3/8"x3/4"	4
1676R	A1445R	P.L. Rock Shaft Bearing to Housing.....	7/16"x1-1/4"	3
D916	A1597R	Oil Pump Drive Gear Bearing to Cam Follower Guide (Drilled).....	3/8"x3/4"	2
C806	A1787R	Radiator Shutter Control Rod Support to Bracket..	5/16"x9/16"	2
1670R	AA227	Camshaft Left Bearing Housing to Transmission Case.....	3/8"x1"	2
1669R	AA300	Muffler to Radiator Top Tank.....	3/8"x3/4"	4
1682R	AA318	Platform to Rear Axle Housing.....	1/2"x1"	2
1669R	AA931	Air Stack to Air Cleaner Bracket.....	3/8"x3/4"	3
A1448	AA1103	P.L. Valve Housing to P.L. Housing.....	1/2"x5-1/2"	6
A871	AA1407	In Front Wheel Hub Cap (Disk Type).....	5/16"x1-1/4"	6
B568	AA1582	R. Fender Pedestal to Rear Axle Housing.....	5/8"x3-3/4"	6
B568	AA1583	L. Fender Pedestal to Rear Axle Housing.....	5/8"x3-3/4"	6
1671R	AC119	In Front Wheel Hub Cap.....	3/8"x1-1/4"	6
1672R	AD1400	Magneto to Governor Case.....	3/8"x1-1/2"	2
A1338	AF233	Conduit Assembly to Front End.....	1/2"x1/2"	2
1670R	AF240	Carburetor to Manifold.....	3/8"x1"	2
D508	AF242	In Crankshaft.....	3/4"x1-1/2"	1
A312	AF251	Right Main Bearing to Case (Drilled).....	5/8"x1-1/2"	4
D475	AF252	Left Main Bearing Housing to Transmission Case..	5/8"x1-1/2"	3
D1564	AF254	Radiator to Front End.....	5/8"x2-1/2"	2
1683R	AF255	Cylinder Water Outlet to Cylinder.....	1/2"x1-1/4"	4
1683R	AF258	Oil Pump to Case.....	1/2"x1-1/4"	3
1676R	AF267	Governor Case to Transmission Case.....	7/16"x1-1/4"	4
1677R	AF267	Governor Case to Transmission Case.....	7/16"x1-1/2"	2
1670R	AF276	Carburetor Inlet Elbow to Carburetor.....	3/8"x1"	1
C529	AF277	Air Cleaner to Air Cleaner Bracket.....	1/2"x3-1/2"	3
A313	AF286	Brake Housing to Case, R. H.....	5/8"x1-3/4"	3
A313	AF287	Brake Housing to Case, L. H.....	5/8"x1-3/4"	3
1688R	AF319	Front End to Cylinder.....	3/4"x1-3/4"	4
D2461	AF319	Front End to Case.....	3/4"x2"	4
A313	AF341	Rear Axle Housing to Case.....	5/8"x1-3/4"	14
1688R	AF373	Drawbar Support to Rear Axle Housing.....	3/4"x1-3/4"	4
1683R	AF427	Radiator Inlet to Top Tank.....	1/2"x1-1/4"	1
F384	AF427	Radiator Inlet to Top Tank.....	3/4"x1-3/8"	1
1670R	B247	Oil Pump Cover to Body.....	3/8"x1"	4
1670R	B290R	Fan Bearing Housing to Fan Support.....	3/8"x1"	2
A871	B390R	Throttle Lever Stop.....	5/16"x1-1/4"	2
1671R	D687	In Gear Shifter Shaft Adjusting Screw.....	3/8"x1-1/4"	2
1671R	D1082R	On Front Wheel Knuckle Nut.....	3/8"x1-1/4"	2
F23	F22R	Drive Wheel Hub Clamp to Hub.....	7/8"x5"	6
1667R	F77R	Left Main Bearing Cover to Housing.....	5/16"x1"	2
A309	F77R	Left Main Bearing Cover to Housing.....	5/16"x1-3/4"	3
F384	F79	Radiator Inlet to Top Tank.....	3/4"x1-3/8"	1
1675R	F108R	Governor Left Bearing Housing to Case.....	7/16"x1"	3
1670R	F116R	Crankcase Cover to Case.....	3/8"x1"	6
D474	F142R	Air Cleaner Bracket to Top Tank.....	1/2"x1-3/4"	3
1684R	F146R	Steering Worm Bearing to Pedestal.....	1/2"x1-1/2"	4
A313	F168R	Differential Bearing Quill to Case.....	5/8"x1-3/4"	3
1676R	F175R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	8
F177	F175R	First Reduction Gear Cover to Case.....	7/16"x4-3/4"	3
C834	F178	Pulley Dust Shield to First Reduction Gear Cover (Drilled Head).....	5/16"x9/16"	4
1674R	F199R	Clutch Fork Bearing to Gear Cover.....	3/8"x1-3/4"	4
A310	F208R	Countershaft Right Bearing Housing to Case (Drilled)	7/16"x1-1/4"	4
1670R	F220R	In Sliding Gear Shaft and Countershaft Left Bearing Cover.....	3/8"x1"	6
A310	F222R	In Sliding Gear Shaft Left Bearing Cover to Case... (Drilled)	7/16"x1-1/4"	4

HARDWARE LIST FOR MODEL "G" TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
CAP SCREWS—Continued					
C1096	F250R	In Power Shaft Drive Shaft R. H. Bearing Cover...	1/2"x1-1/4" (Drilled Head)	2
1683R	F259R	Power Shaft Bearing Cover to Transmission Case...	1/2"x1-1/4"	2
1676R	F264R	Rear Axle Housing Cover to Rear Axle Housing...	7/16"x1-1/4"	15
1671R	F268R	Power Shaft Stuffing Box to Rear Axle Housing Cover	3/8"x1-1/4"	3
1683R	F284	Shifter Shaft Lock Plate to Case.....	1/2"x1-1/4"	1
1671R	F285R	Transmission Case Cover to Case.....	3/8"x1-1/4"	6
1671R	F291R	In Gear Shift Lever Quadrant to Transmission Case Cover.....	3/8"x1-1/4"	4
1687R	F299R	Power Lift Pump Body to Housing.....	1/2"x2-3/4"	4
F366	F306R	P.L. Pump Cover and Body to Housing.....	1/2"x3-1/4"	3
A624	F307R	P.L. Cylinder to Housing.....	5/8"x1-3/4"	5
1667R	F311R	P.L. Piston Cup Retainer to Piston.....	5/16"x1"	2
F320	F316	In Power Lift Crank Arm.....	7/16"x2-1/4"	2
CAP SCREWS—FILLISTERED HEAD					
A492	A491R	Steering Spindle Adjusting Bushing Lock Screw....	3/8"x3/4"	1
SET SCREWS—SQUARE HEAD— DOG POINT					
A320	A80R	In Speed Control Lever.....	5/16"x3/4"	1
D1086	AF307	Pulley Brake Adjusting Screw.....	1/2"x2-1/4"	1
A320	B390R	In Speed Control Bracket.....	5/16"x3/4"	1
SET SCREWS—CONICAL POINT					
B275	B272R	In Governor Arm.....	3/8"x1-3/8"	1
MACHINE SCREWS—ROUND HEAD					
E2064	AA831	Heat Indicator Bracket to Governor Case.....	1/4"-20x1/2"	2
E2064	AF388	Top Tie Bar to Frame (Shutter).....	1/4"-20x1/2"	4
E2064	B271	Inside Governor Lever to Shaft.....	1/4"-20x1/2"	2
E2064	B439	By-Pass Valve, Leaf Spring to Filter Head.....	1/4"-20x1/2"	2
DRIVE SCREWS—ROUND HEAD					
A1648	AF305	In Belt Pulley.....	No. 4 3/16"	3
D454	In Serial Number Plate.....	No. 7 3/8"	2
D454	F178	Pulley Dust Shield to First Reduction Gear Cover..	No. 7 3/8"	4
CARRIAGE BOLTS WITH HEX. NUTS					
C1647	AF229	Hood Clamp to Fuel Tank Rear Support.....	3/8"x1-1/4"	2
C1647	AF232	Hood Clamp to Hood Clip Bracket.....	3/8"x1-1/4"	2
C1578	C2309	On Front Wheel to Extension Rim Clip.....	1/2"x1-3/4"	12
2235R	C2309	On Front Wheel Extension Rim to Clip.....	1/2"x2"	12
CARRIAGE BOLTS WITHOUT NUTS					
A317	AD1606	Seat to Channel Support.....	5/8"x2-1/2"	1
C1517	C2199	In Sand Lug.....	3/4"x2-1/4"	48
C1517	F407	Drive Wheel Support to Road Band Support.....	3/4"x2-1/4"	12
A686	F407	Drive Wheel Support to Drive Wheel.....	3/4"x3"	12
MACHINE BOLTS WITH SQUARE NUTS					
1622R	A60R	Seat Support Body to Platform.....	1/2"x1-1/2"	2
D544	A777	Front Wheel Guide Band to Wheel.....	1/2"x1"	16
1620R	A1427R	In Power Lift Pedals, R. H.....	3/8"x1-1/2"	1
1620R	A1428R	In Power Lift Pedals, L. H.....	3/8"x1-1/2"	1
1613R	AA270	In Fuel Tank Strap.....	3/8"x1-1/4"	2
1622R	AF229	On Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	2
1614R	AF313	Tool Box to Front End.....	3/8"x1"	1
1611R	AF313	Tool Box to Front End.....	5/16"x1-1/8"	2
1624R	AF402	Scraper to Double Knuckle.....	1/2"x2"	4
1622R	C1646R	In Button Lug.....	1/2"x1-1/2"	48
1611R	F81R	In Radiator Sides.....	5/16"x1-1/8"	12
D595	F82	In Radiator Straps.....	5/16"x7/8"	12
D595	F84	Hood Clip Bracket to Radiator Sides.....	5/16"x7/8"	4
M21	F92	Fan Shroud to Radiator Sides.....	3/8"x3/4"	4
1621R	F112	Fan Shaft Support to Front End.....	1/2"x1-1/4"	2
C2015	F335	Drawbar End to Swinging Drawbar.....	3/4"x2-1/2"	2

HARDWARE LIST FOR MODEL "G" TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
MACHINE BOLTS WITH HEX. NUTS					
1906R	A1786R	Shutter Control Lever to Bracket.....	3/8"x2-3/4"	1
A1829	A1827	In Wheel Weight to Wheel.....	1/2"x4-3/4"	6
1893R	AA1105	In Power Lift Control Lever.....	5/16"x1-1/2"	1
1939R	AA1575	Steering Shaft Bearing to Support.....	1/2"x5"	1
1971R	AD984	Wheel Weight to Wheels.....	3/4"x6"	4
1928R	AF238	Exhaust Pipe Flange to Manifold.....	1/2"x1-3/4"	2
1946R	C334R	Disk Type Front Wheel to Hub.....	5/8"x2-1/2"	12
1932R	F147	Steering Shaft Rear Support to Cover.....	1/2"x2-3/4"	1
MACHINE BOLTS WITHOUT NUTS					
A619	A618	Seat Spring Bolt.....	5/8"x9"	1
C981	AF245	In Flywheel.....	3/4"x5"	2
D888	AF319	Front End to Pedestal.....	3/4"x5-1/2"	4
F242	AF319	Front End to Pedestal.....	3/4"x7-1/2"	2
F227	AF331	In Underdrive Shifter (Drilled Hole).....	3/8"x2"	1
A734	F81R	In Radiator Sides to Top Tank.....	5/16"x7/8"	4
A734	F82	Radiator Strap to Top and Bottom Tank.....	5/16"x7/8"	18
D616	F333	Clevis to Drawbar Support.....	3/4"x2-3/4"	1
STOVE BOLTS—ROUND HEAD— SQUARE NUTS					
2568R	A470	Spark Plug Cable Clamp to Conduit.....	5/16"x1-1/2"	1
2394R	AF233	Spark Plug Cable Clamp to Conduit Shield.....	1/4"-20x1-1/4"	1
A1053	AF338	Shutter to Radiator Side.....	5/16"x3/4"	4
B497	B465R	Spark Plug Cable Conduit Clamp to Fan Shaft Tube.....	5/16"x1-3/4"	1
STOVE BOLTS—ROUND HEAD— WITHOUT NUTS					
A330	A257	In Steering Gear Housing Cover.....	5/16"x1/2"	6
A330	F398	Heat Baffle Plate to Radiator Inlet Elbow.....	5/16"x1/2"	2
HEXAGON NUTS					
1512R	A152	On Brake Lever Shaft.....	5/8"	2
1514R	A183	Clutch Operating Rod.....	9/16"	1
1513R	A1298	On Spud Lugs.....	3/4"	96
1504R	A1786R	Lock Nut on Shutter Control Lever Bolt.....	3/8"	1
1512R	A1828	On Hook Bolts.....	5/8"	6
1506R	AA1103	P.L. Valve Housing to P.L. Stud.....	1/2"	1
1513R	AC649	On Cone Lug Studs.....	3/4"	48
1513R	AF245	Flywheel Bolt.....	3/4"	2
1512R	AF252	Left Main Bearing to Case Stud.....	5/8"	1
D1771	AF281	On Steering Shaft.....	3/4"	1
F155	AF291	Brake Shaft Nut.....	1"	2
1513R	AF293	Cylinder Flange to Case.....	3/4"	7
1512R	AF375	On Rim Clamp Stud.....	5/8"	8
1504R	B272R	Governor Arm Set Screw.....	3/8"	1
1503R	B390R	Throttle Lever Stop.....	5/16"	2
1512R	C1479	On Rim Clamp Studs.....	5/8"	16
A1892	C1479	On Rear Axle Housing Stud.....	5/8"	12
1513R	C2199	On Sand Lug Bolts.....	3/4"	48
1513R	D411	Spade Lug Bolt.....	3/4"	48
1506R	D1086	On Pulley Brake Adjusting Set Screw.....	1/2"	1
1512R	D2031	On Clutch Lever Pivot Bolt.....	5/8"	1
1513R	D2184	On Hook Bolts.....	3/4"	4
1513R	F56	On Cylinder Head Stud.....	3/4"	9
D1771	F134R	Tappet Lever Shaft Bracket Stud.....	3/4"	2
1506R	F136R	On Manifold Stud.....	1/2"	4
1506R	F138	On Manifold Stud.....	1/2"	4
1505R	F175R	First Reduction Gear Cover Stud.....	7/16"	1
1504R	F222R	Sliding Gear Shaft Drive Gear Right Bearing Cover Stud.....	3/8"	2
1513R	F242	Pedestal Front End Bolts.....	3/4"	6
1506R	F338	P.L. Pump Body End Cover to Housing Stud.....	1/2"	4
1505R	F393	On Camshaft Gear Stud.....	7/16"	1
1513R	F407	On Drive Wheel Support to Road Band Support Bolt.....	3/4"	12
1513R	F407	On Drive Wheel Support to Drive Wheel Bolts.....	3/4"	12
1512R	K2198	Power Lift to Rear Axle Housing Stud.....	5/8"	2

HARDWARE LIST FOR MODEL "G" TRACTOR

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
HEXAGON NUTS—CASTELLATED					
C535	AF324	On Steering Spindle.....	1"	1
F278	AF331	On Bolt in Underdrive Shifter.....	3/8"	1
B9	F6	On Connecting Rod Bolts.....	1/2"	8
F70	F68	On R. H. Main Bearing Bolt.....	3/4"	2
F70	F69	On L. H. Main Bearing Bolt.....	3/4"	2
D1661	F190	On Clutch Operating Bolts.....	9/16"	3
C535	F202	Countershaft, L. H. End.....	1"	1
C535	F212	Sliding Gear Shaft Drive Gear, Right End.....	1"	1
HEXAGON JAM NUTS					
A337	A1291	Tappet Lever Adjusting Screw.....	3/8"	4
D2780	A1449	On P.L. Adjusting Screw.....	3/8"	1
D528	D157	On Speed Control Rod to End.....	1/4"	1
D2782	D2427	Oil Filter Adjusting Screw Lock Nut.....	5/8"	1
D528	F261	On Shutter Control Rod.....	1/4"	1
CAP NUTS					
F131	AF275	On Tappet Lever Cover Stud.....	5/8"	2
SQUARE NUTS					
A334	D616	On Clevis to Drawbar Support Bolt (Special).....	3/4"	1
RIVETS—R. I. HEAD					
D479	AB326	Oil Relief Spring to Filter Cover.....	1/4"x3/4"	1
B448	AB330	Brake Latch Pivot Pin (Drilled).....	1/2"x1-3/4"	2
D479	AB330	Brake Latch Support to Platform.....	1/4"x3/4"	4
D1762	AF245	Flywheel Locating Rivet.....	3/16"x7/8"	1
D430	AF248	Clutch Driving Disk.....	3/16"x5/8"	1
D437	AF331	Yoke to Underdrive Shifter.....	3/8"x1-1/2"	2
D1079	AF332	Yoke to Shifter.....	3/8"x1-1/4"	2
D1079	AF333	Yoke to Shifter.....	3/8"x1-1/4"	2
D478	C1573	Hood Clips to Hood.....	3/16"x3/8"	8
F324	F163	Differential Bevel Pinion Shaft.....	3/8"x2-11/16"	3
D478	F261	On Shutter Control Guide to Hood.....	3/16"x3/8"	2
F324	F323	In Power Lift Drive Shaft Coupling.....	3/8"x2-11/16"	1
F406	F405	Road Band Support to Road Band.....	5/8"x1-5/8"	24
RIVETS—BRASS—BOX OF 100					
AD1771	A1013	Cushion to Fuel Tank Front Support.....	9/64"x5/16"	3
AD1773	AA314	Facing to Brake Shoe.....	3/16"x5/16"	32
AD1774	AD1761	Clutch Facing to Disk.....	3/16"x7/16"	12
AD1772	D1932	Pulley Brake Lining to Brake.....	9/64"x7/16"	6
AD1772	F28	Cushion to Fuel Tank Rear Support.....	9/64"x7/16"	3
RIVETS—TINNERS					
A488	F135	Tappet Lever Oil Trough to Tappet Lever Cover....	8 Lbs.	6

HARDWARE LIST FOR MODEL "G" TRACTOR





LOCK WASHERS		COTTER KEYS					
Size	No.	Length	Diameter				
			3/32"	1/8"	3/16"	1/4"	3/8"
1/4"	1729R	1/2"	1730R				
5/16"	1721R	5/8"	1732R				
3/8"	1722R	3/4"	1733R				
7/16"	1723R	1"	1731R	1735R	1741R		
1/2"	1724R	1-1/4"	1742R				
5/8"	1726R	1-1/2"		1737R	1743R	1745R	
3/4"	1728R	2"	1748R				
7/8"	1881R	3"	D341				

CASTINGS SOLD ONLY AS ASSEMBLIES FOR MODEL "G" TRACTOR












Casting Number	NAME AND DESCRIPTION	Order Part No.	Page No.	Plate No.
A31R	Housing with Cup, L. H. Camshaft Bearing	AA227	49	24
A85R	Spacer, Flywheel, with Cork Washer	AA244	48	23
A1425R	Control Lever, Power Lift	AA1105	63	40
A1426R	Cam Follower, Power Lift	AA1104	63	40
A1430R	Housing, Valve, Power Lift, with Guide	AA1103	63	40
A1555R	Hub Cap with Oil Fitting, Front Wheel	AA1407	57	35
A1909R	Bearing, Steering Shaft, Rear	AA1575	58	25
B290R	Housing, Front Fan Bearing with Support Tube	AA817	53	28
C167R	Hub Cap, with Oil Fitting, Front Wheel	AC119	57	35
D363R	Head, with Stud, Radiator Filler Cap	AD97	52	27
D363R	Radiator Cap, Complete	AD86	52	27
F5	Connecting Rod, Complete	AF220	49	23
F8R	Piston with Rings Package	AF213	49	23
F34	Crankshaft, with Gear and Inner Race	AF242	49	23
F36R	Flywheel with Bolts, Locating Rivet and Driving Pin	AF245	48	23
F37R	Drive Disk, Fixed Clutch, with Rivet	AF248	54	29
F48R	Cylinder, with Studs	AF293	49	24
F49R	Cylinder Head, with Valve Guides	AF294	49	...
F49R	Cylinder Head, with Valves	AF422	49	24
F57R	Case, Transmission	AF337	48	...
F65R	Housing, R. H. Main Bearing, with Cap	AF251	48	23
F66R	Housing, L. H. Main Bearing, with Cap	AF252	48	23
F67R	Cap, Main Bearing	AF251	48	23
F67R	Cap, Main Bearing	AF252	48	23
F85R	Elbow, Radiator Inlet	AF427	52	27
F93R	Upper Water Pipe	AF255	52	27
F97R	Cover, with Bushing, Oil Filter Head	AF260	51	26
F104R	Case, Governor, with Lever Shaft Bushing	AF267	50	25
F128R	Cover, with Oil Trough, Tappet Lever	AF275	50	24
F139R	Inlet Elbow, with Pipe, Carburetor	AF276	61	39
F150R	Housing, Brake, R. H. with Bushing and Oiler	AF286	57	32
F151R	Housing, Brake, L. H. with Bushing and Oiler	AF287	57	32
F159R	Differential Gear, with Shaft	AF382	55	32
F159R	Differential Gear, with Shaft and Pinions	AF299	55	...
F159R	Differential, Complete	AF298	55	...
F175R	Gear Cover, First Reduction, with Pulley Dust Shield	AF392	55	30
F179R	Belt Pulley, with Sleeve, Gear and Bushing	AF305	53	29
F196R	Pulley Brake, with Lining	AF307	54	29
F208R	Housing, Countershaft, R. H. Bearing, with Cup	AF309	55	31
F226R	Housing, with Cups, Oil Seal and Studs, Rear Axle	AF341	56	31
F241R	Pedestal, with Stop Pin and Cup	AF322	58	32
F274R	Gear Shifter, Underdrive, with Yoke	AF331	54	30
F280R	Gear Shifter, First, Second, and Reverse, with Yoke	AF332	54	30
F283R	Gear Shifter, Third and Fourth Speed, with Yoke	AF333	54	30
F296R	Housing, Power Lift, with Oil Seal Bearing and Bushing	AF361	63	41
F337R	Wheel, Solid Cast, Rear, with Studs and Nuts	AF375	56	...
F383R	Elbow, Radiator Inlet	AF427	52	27

REPAIR PARTS FOR MODEL "G" TRACTOR

TRANSMISSION CASE

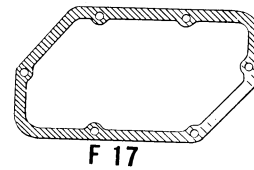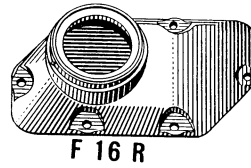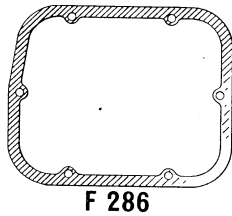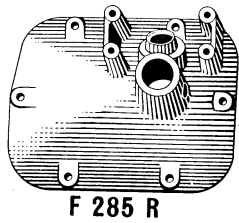


  ENGINE, PISTON, CONNECTING RODS, CRANKSHAFT

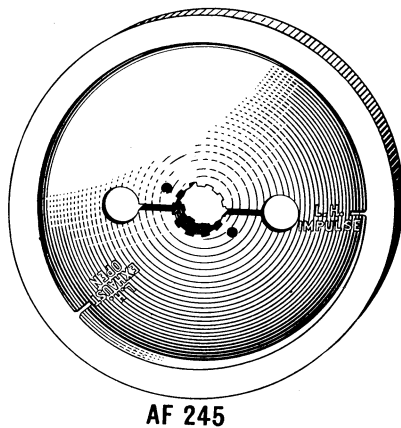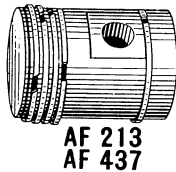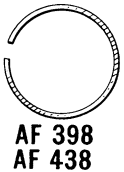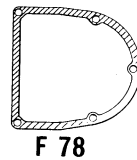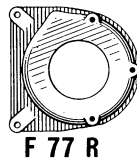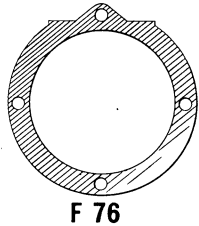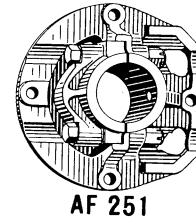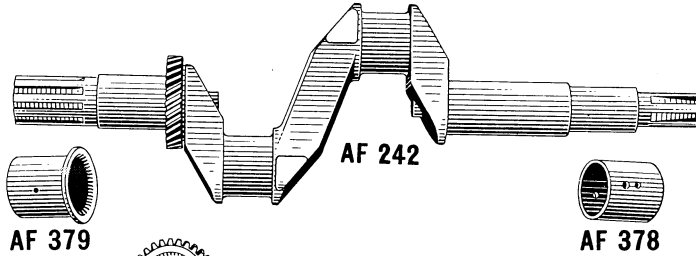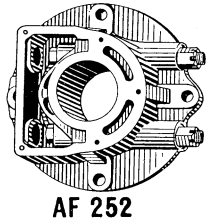

REPAIR PARTS FOR MODEL "G" TRACTOR

CYLINDER HEAD, VALVES AND MANIFOLD

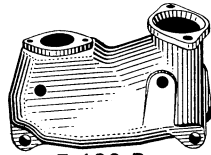

F 136 R



F 137



321 R



F 138



C 2239

D 1720



F 54



 
F 53




F 50 R



F 51


F 52
F 389

F 87

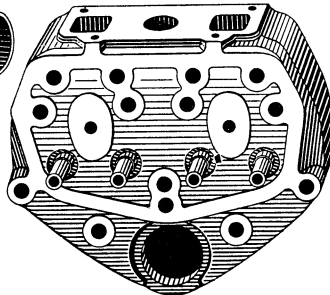

AF 422

AD 1769

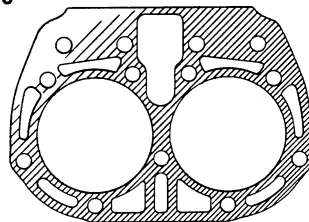


F 55

CYLINDER




F 56

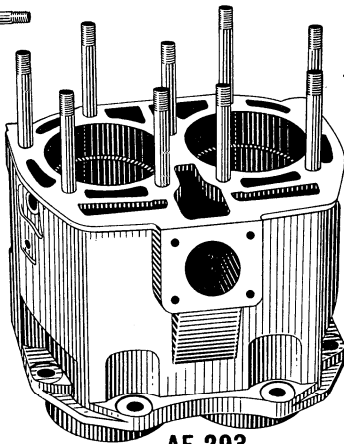

AF 293

D 1865

E 2142

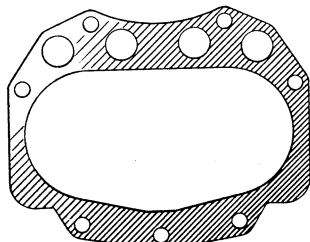

F 64

TAPPETS



A 602



A 260



F 133



D 376



F 127



A 1291



F 134 R



F 158



 
F 126

CAM FOLLOWERS

A 178



F 124




F 125 R

CAM SHAFT



AA 227

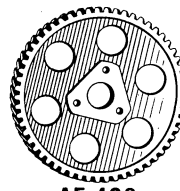

AF 428



A 425



F 122



F 120

F 123 F 393



JD 7250 JD 7358

 


A 355

TAPPET OILER


A 172

B 216



F 132

 
F 357



F 135




F 354

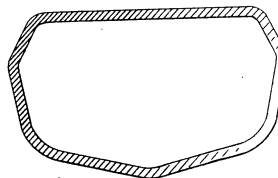

F 129

F 131


F 130

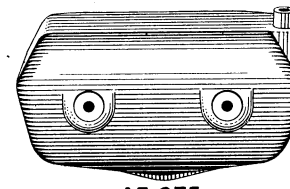


AF 275

REPAIR PARTS FOR MODEL "G" TRACTOR


GOVERNOR

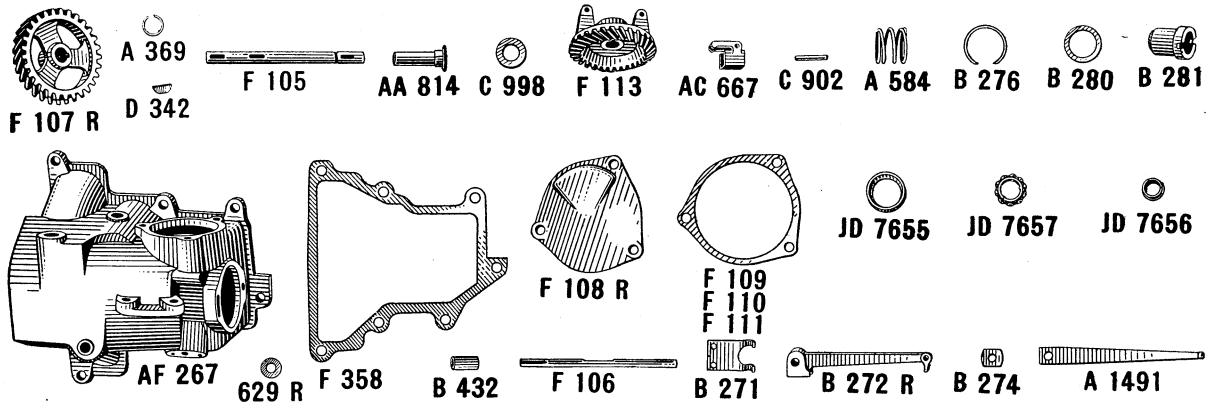


CONTROLS

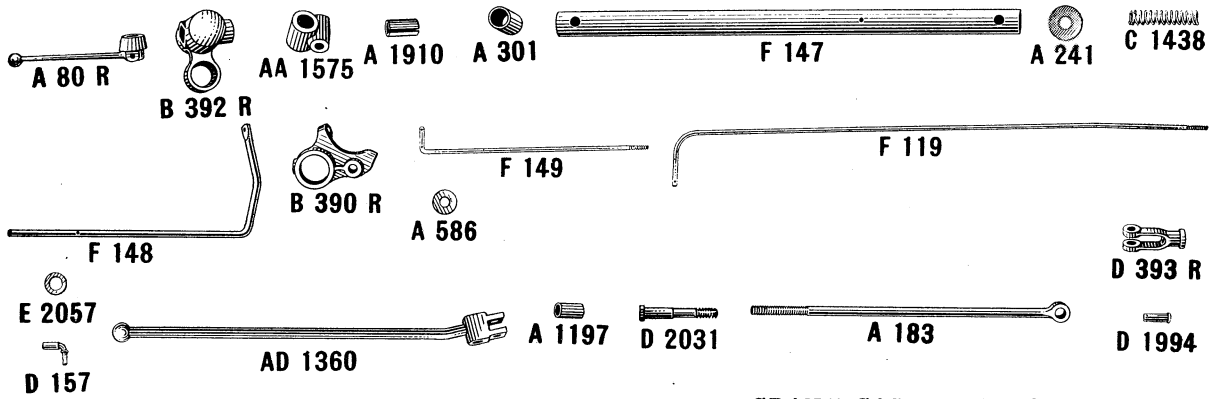


CRANK CASE VENTILATOR

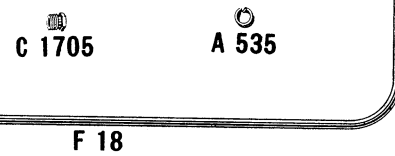

MUFFLER AND SPARK ARRESTER

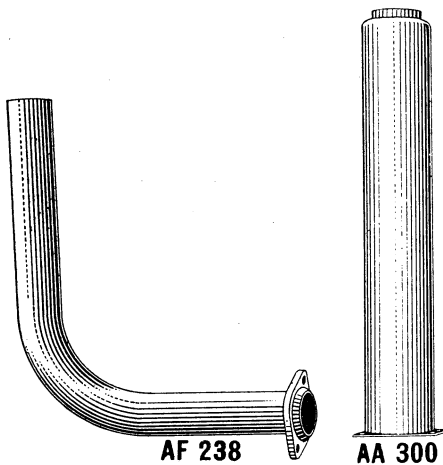

CRANK CASE BREATHER

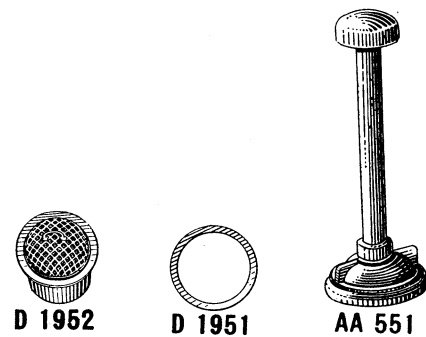




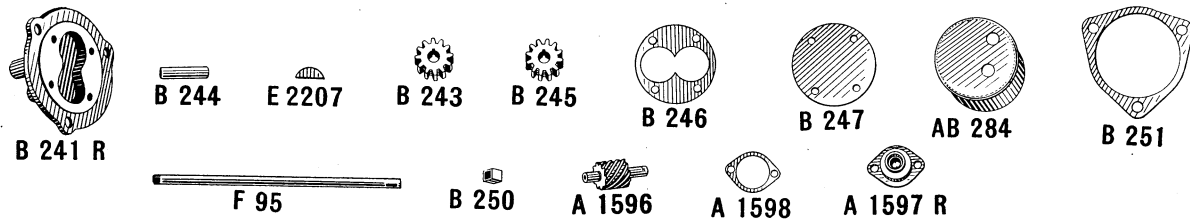
REPAIR PARTS FOR MODEL "G" TRACTOR**LUBRICATING SYSTEM AND OIL PUMP****OIL FILTER AND INDICATOR****OIL PIPES AND FITTINGS****FUEL SYSTEM**

Plate No. 26

REPAIR PARTS FOR MODEL "G" TRACTOR

COOLING SYSTEM

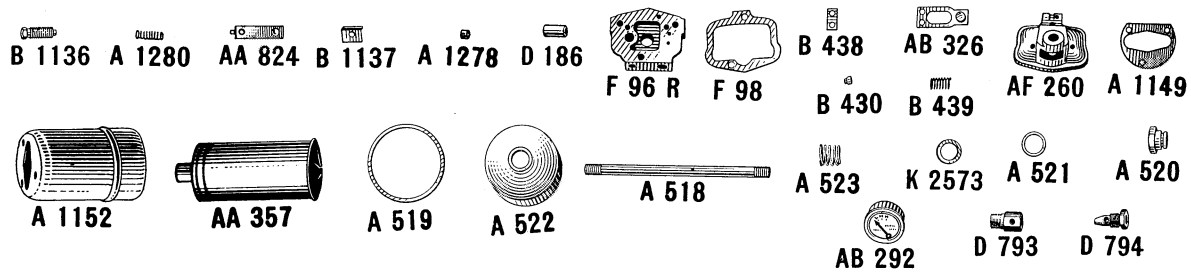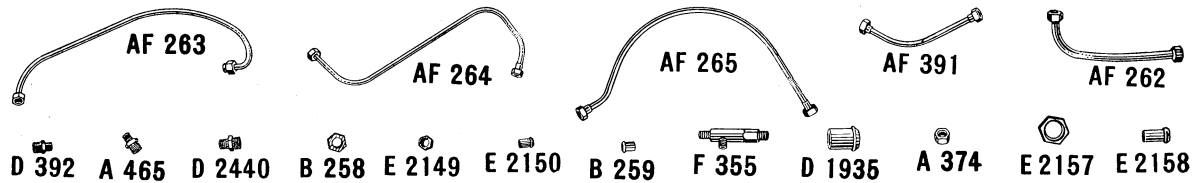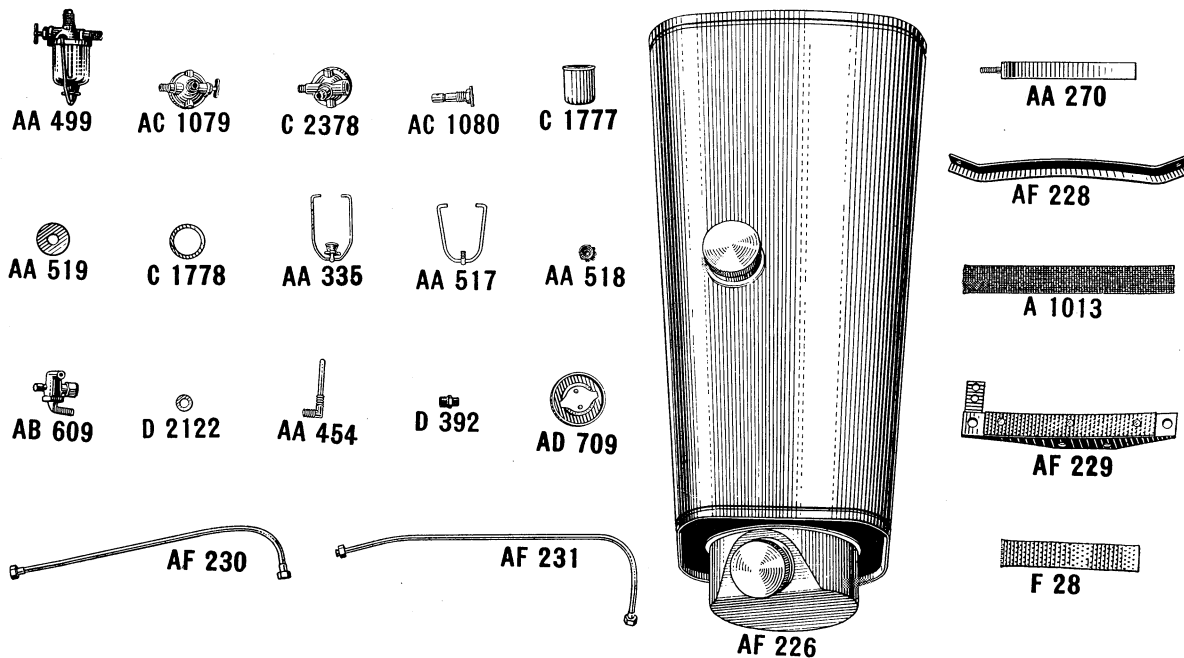

AA 883




A 1247



A 1248


D 1138

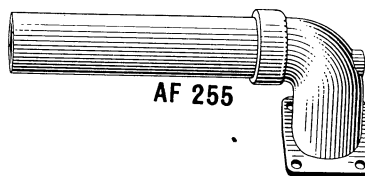


AF 255



 F 94



F 86

 

AF 427



F 91




F 87

F 89
F 374

F 90



 AD 97



D 319 R



D 126




D 362




D 473



AD 86

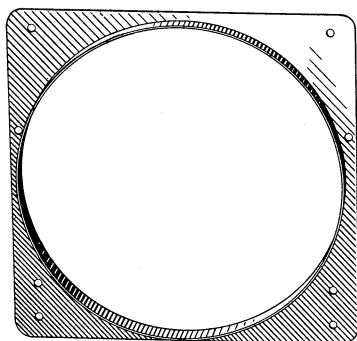


F 380

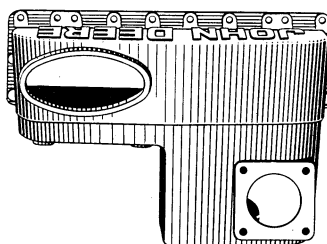


F 79 R



HOOD

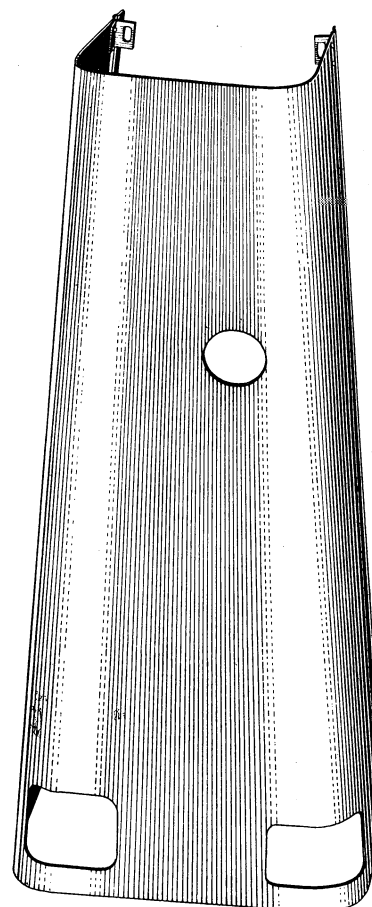

AF 232

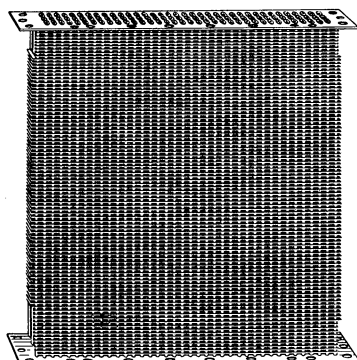


AF 257

 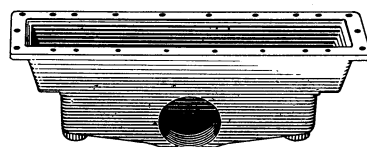F 81 R
F 390 R

F 80 R



 F 83



F 82 F 391

F 84
F 381
F 382

C 1573

REPAIR PARTS FOR MODEL "G" TRACTOR

RADIATOR SHUTTER


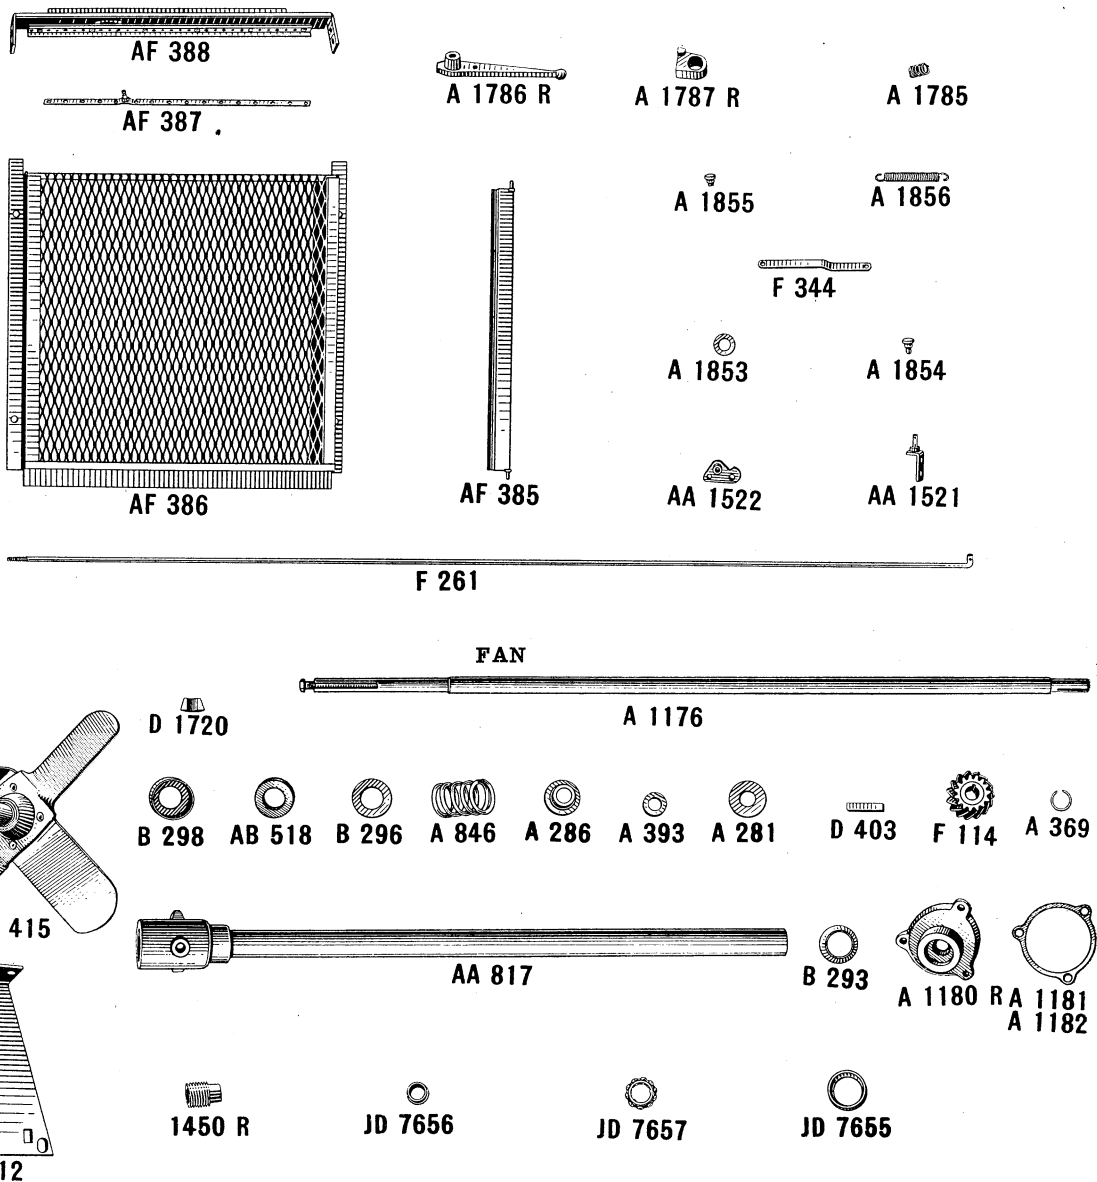



Plate No. 28

REPAIR PARTS FOR MODEL "G" TRACTOR

PULLEY

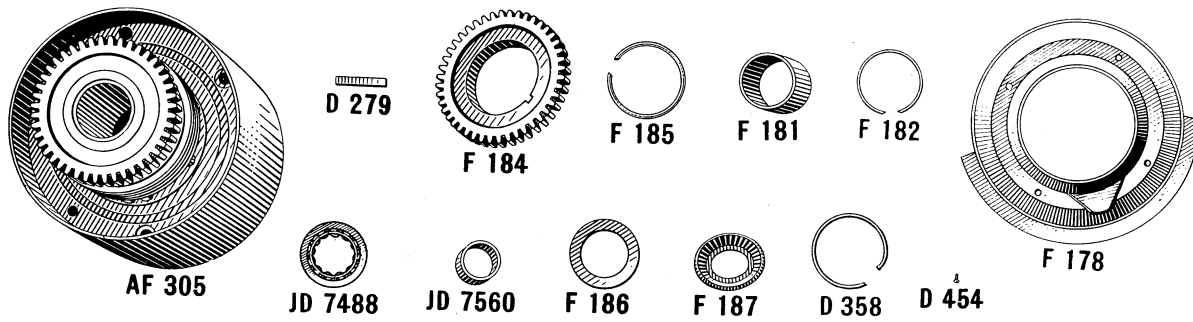

CLUTCH PARTS

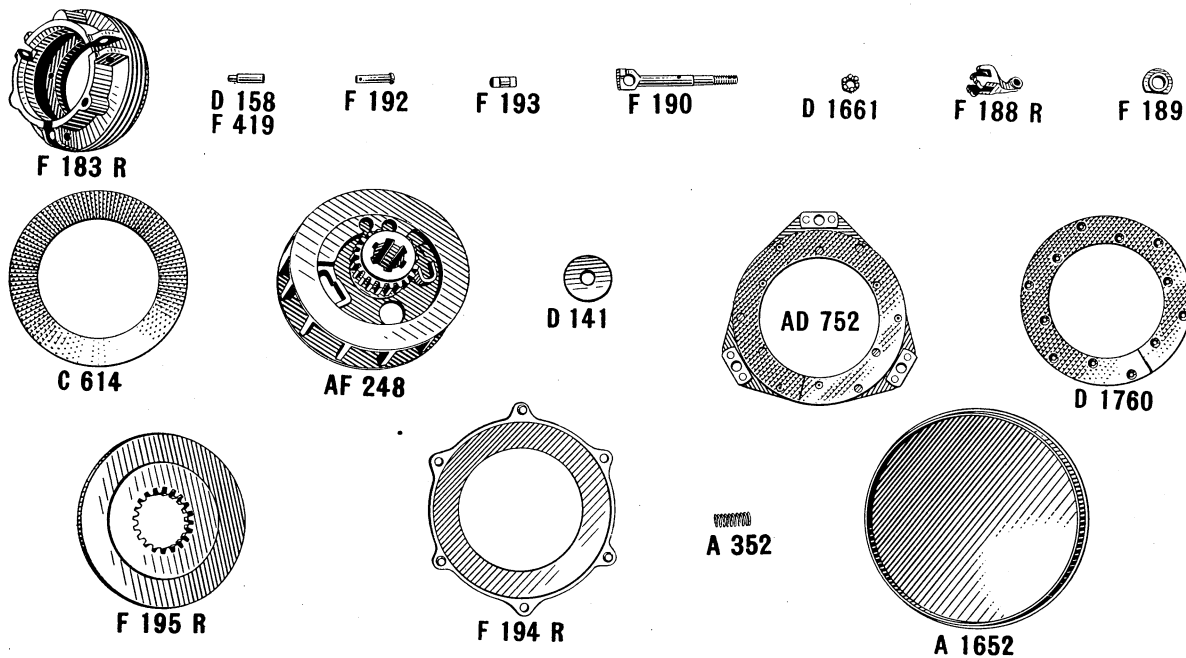

CLUTCH FORK BEARING AND PULLEY BRAKE


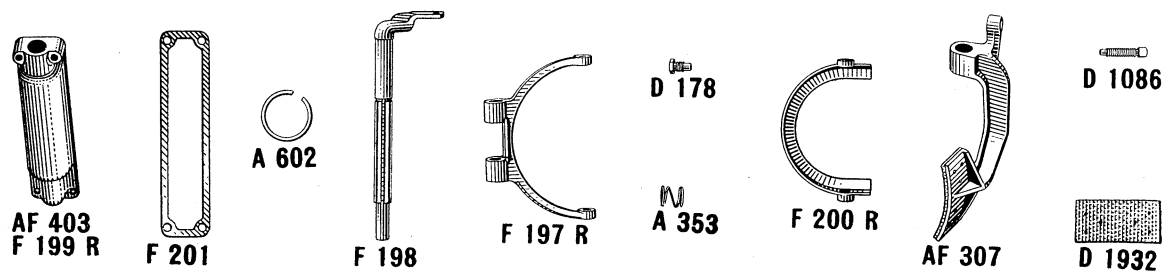



Plate No. 29

REPAIR PARTS FOR MODEL "G" TRACTOR

GEAR SHIFT

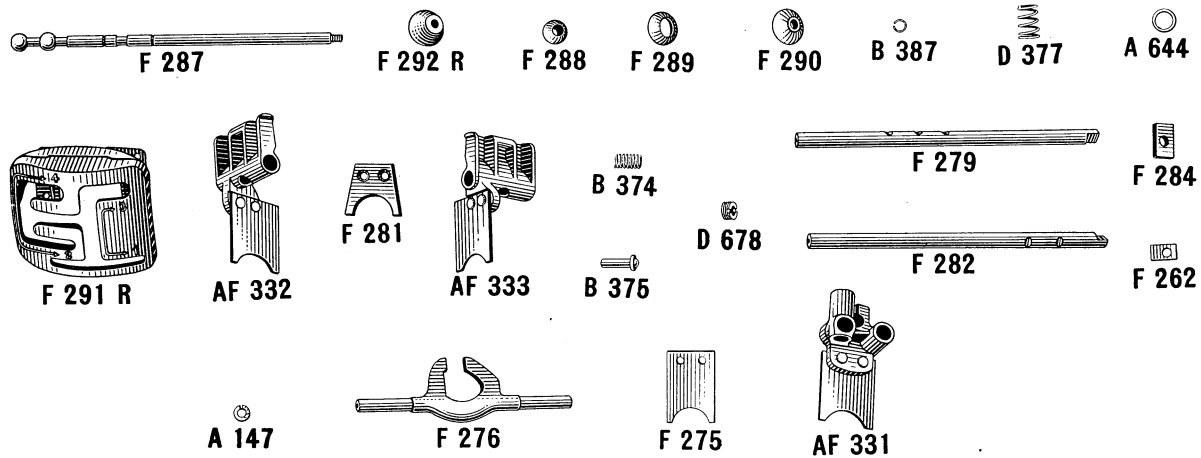

SLIDING GEAR SHAFT

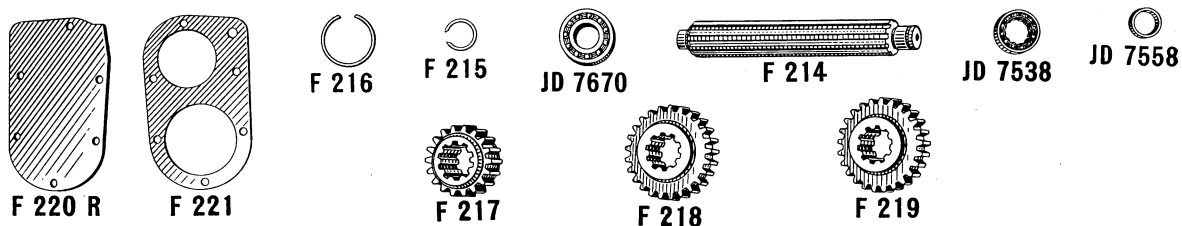

OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR



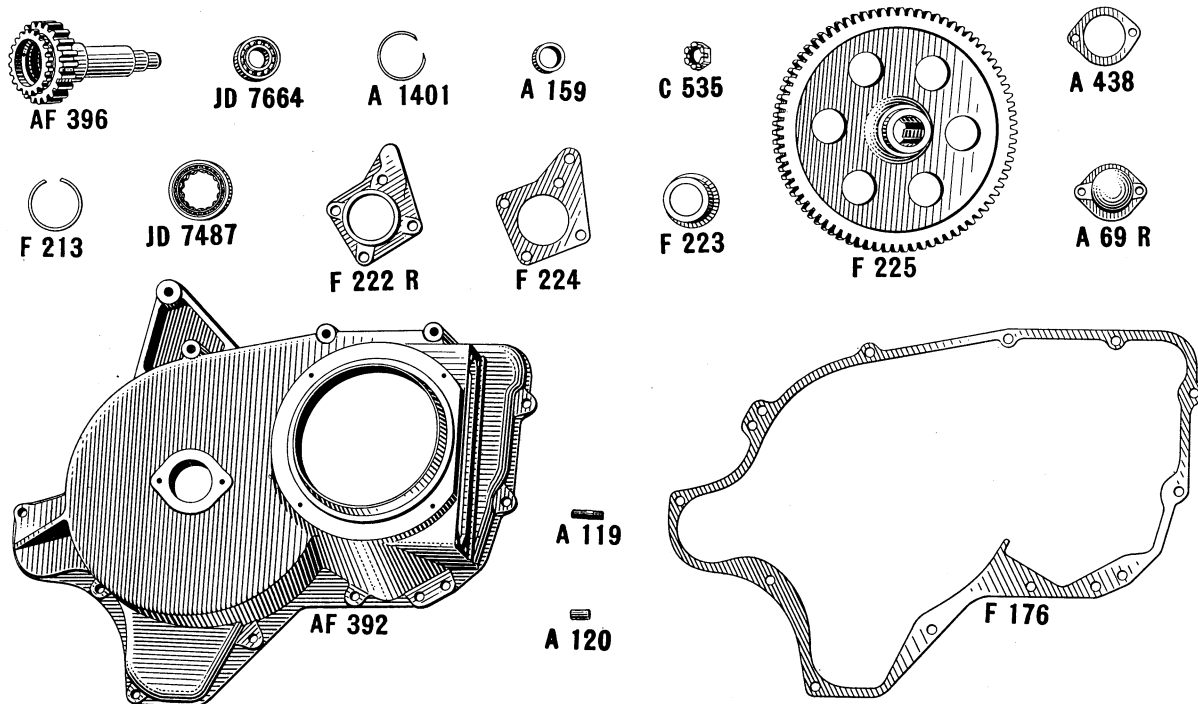


Plate No. 30

REPAIR PARTS FOR MODEL "G" TRACTOR

 COUNTERSHAFT

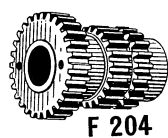

FINAL DRIVE







 
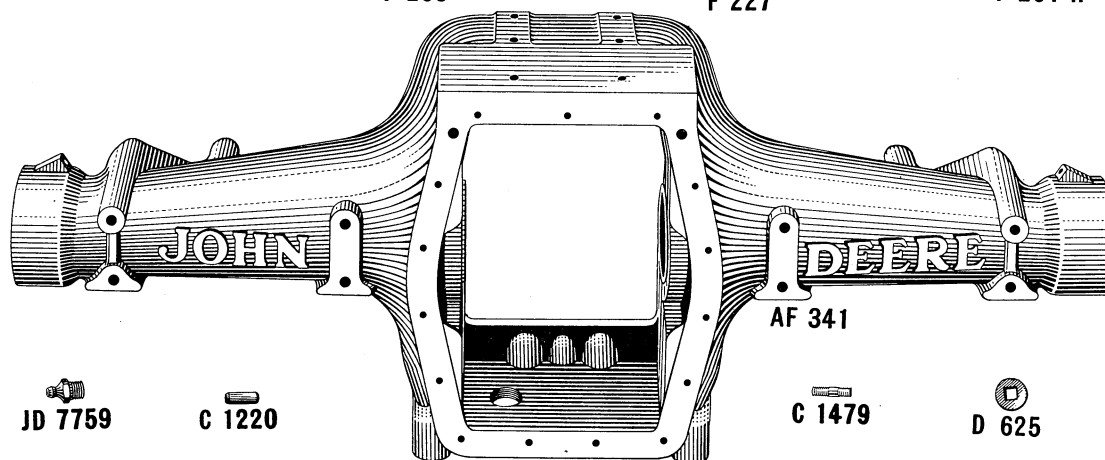



Plate No. 31

REPAIR PARTS FOR MODEL "G" TRACTOR

DIFFERENTIAL

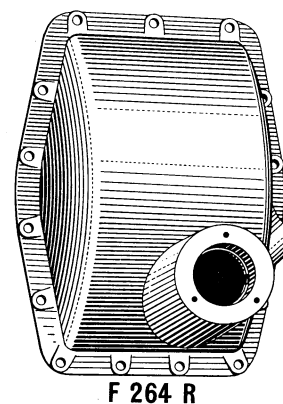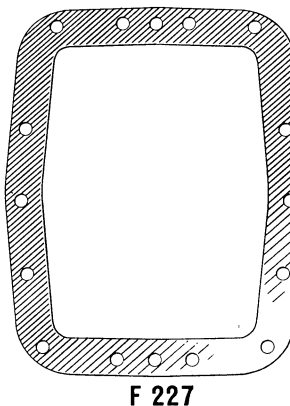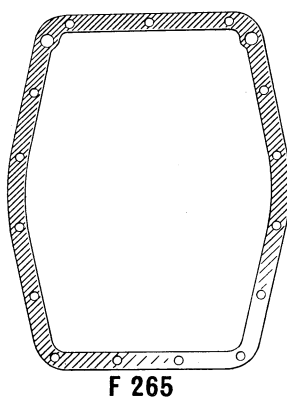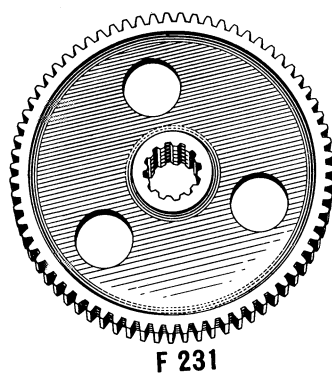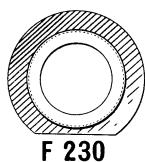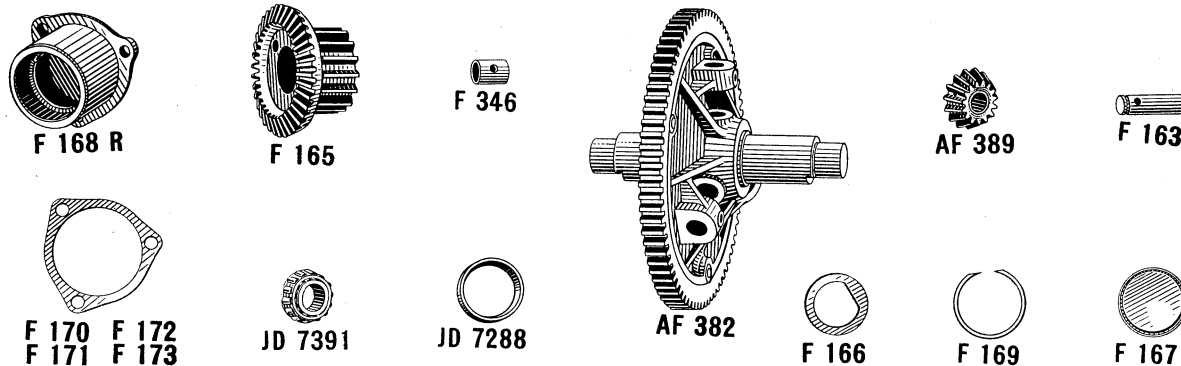

DIFFERENTIAL BRAKES

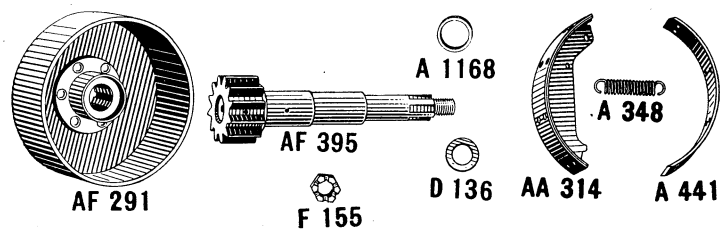

PEDESTAL


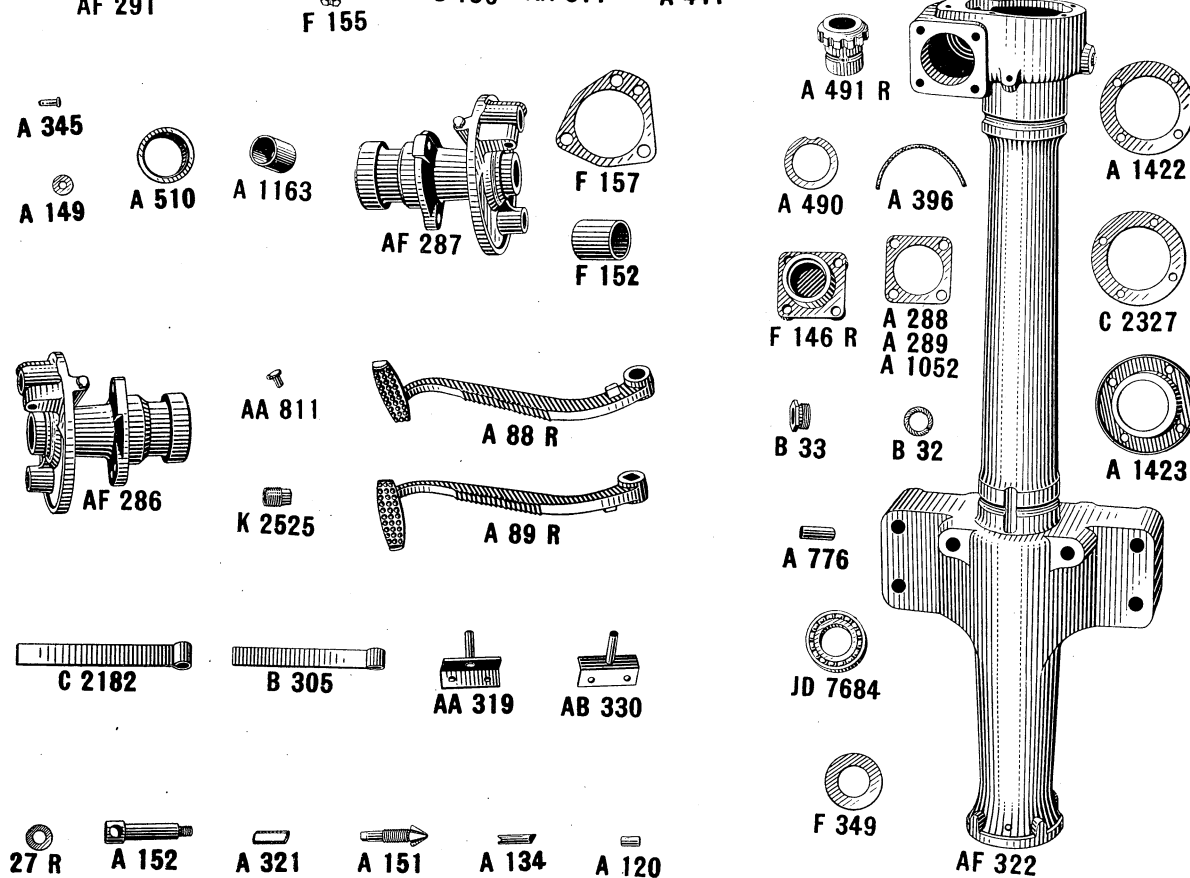


Plate No. 32

REPAIR PARTS FOR MODEL "G" TRACTOR
REAR WHEELS AND WHEEL EQUIPMENT

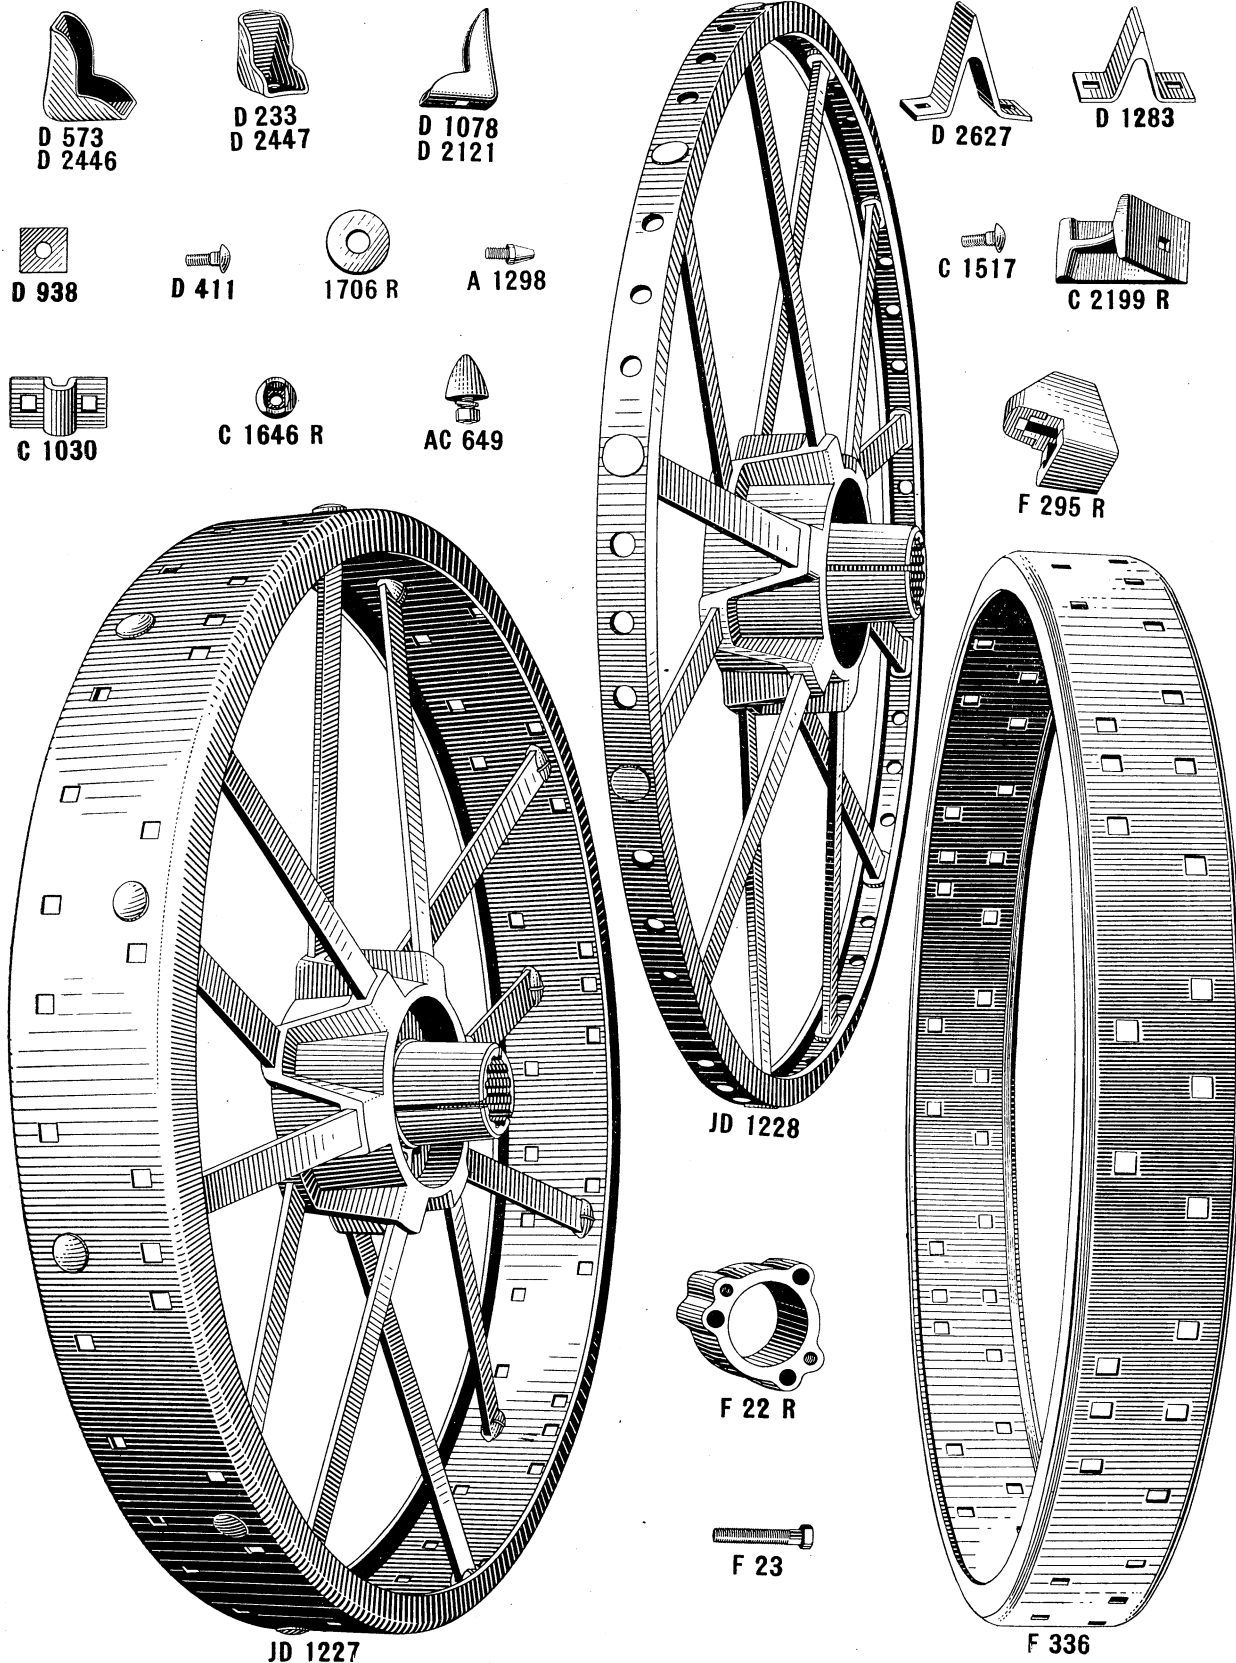

REPAIR PARTS FOR MODEL "G" TRACTOR
REAR WHEELS AND WHEEL EQUIPMENT—Continued

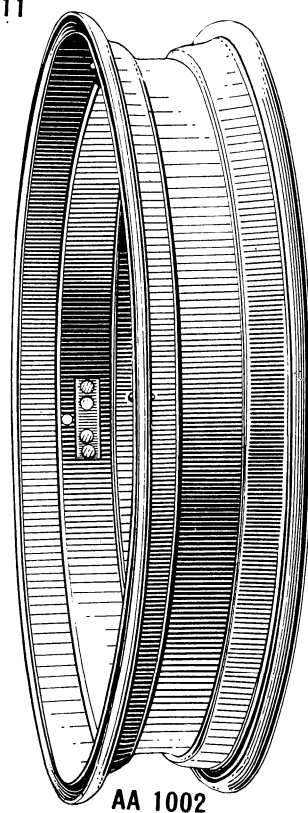
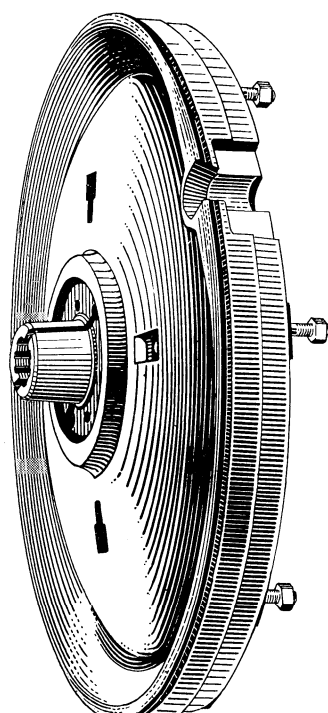
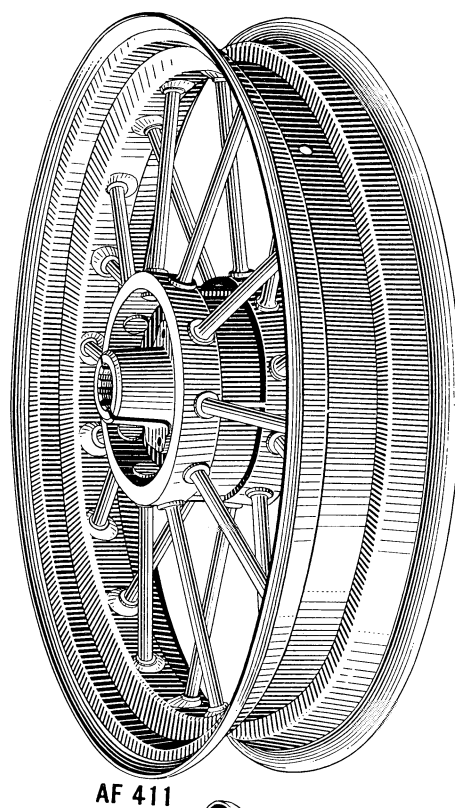
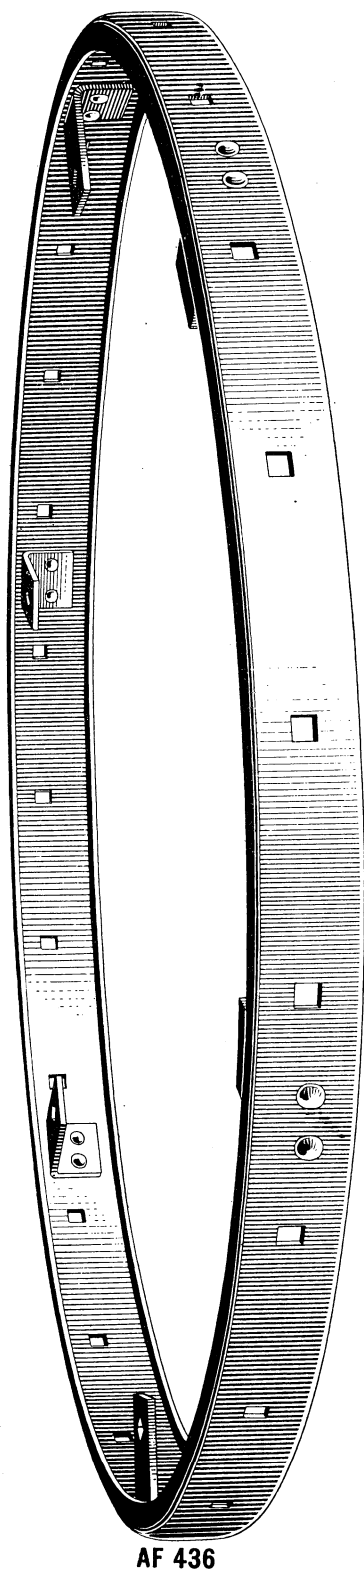
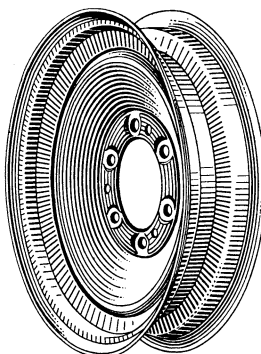
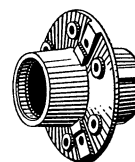
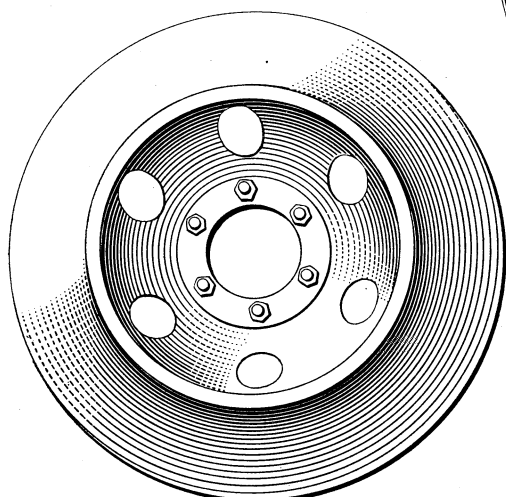
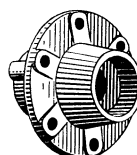
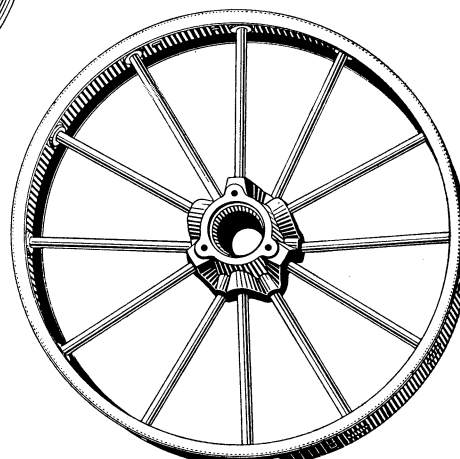
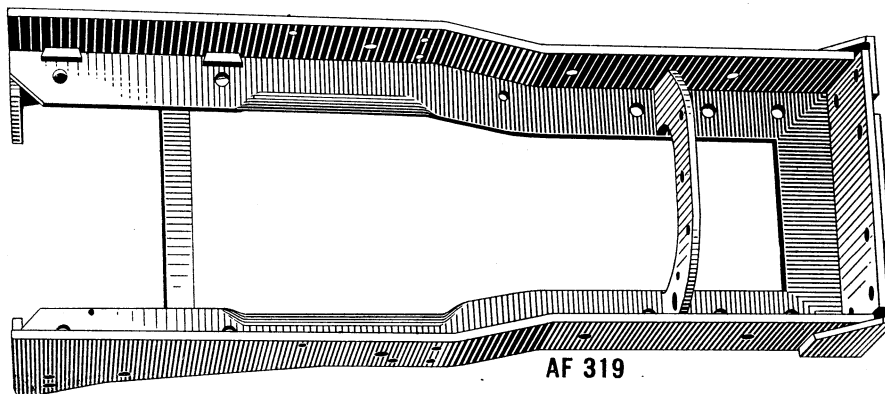
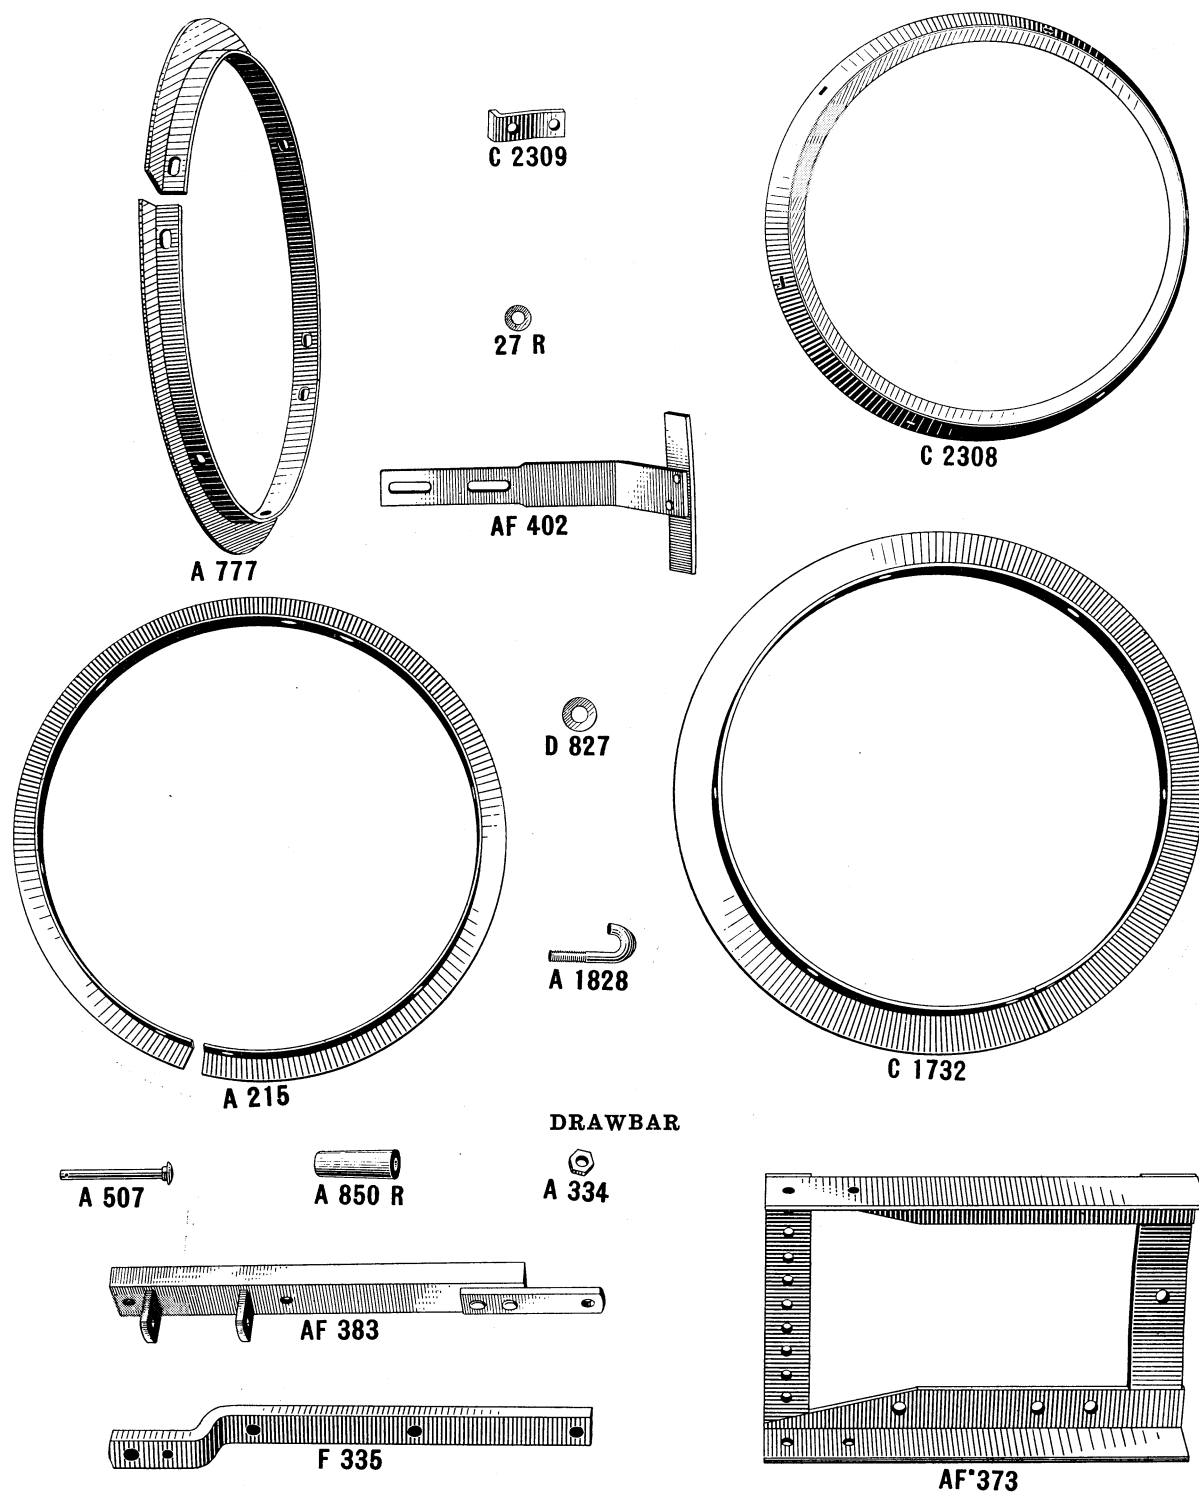



Plate No. 34

REPAIR PARTS FOR MODEL "G" TRACTOR**FRONT WHEELS AND FRONT END SUPPORT****AC 119****C 677****AD 452****JD 7216****JD 7266****JD 7270****JD 7224****D 635****AA 663****A 1556****AA 1407****JD 7759****JD 15****JD 1232****AA 1399****AC 847****AC 365****AF 210****AF 319**


REPAIR PARTS FOR MODEL "G" TRACTOR**FRONT WHEEL EQUIPMENT****Plate No. 36**

REPAIR PARTS FOR MODEL "G" TRACTOR

STEERING PARTS

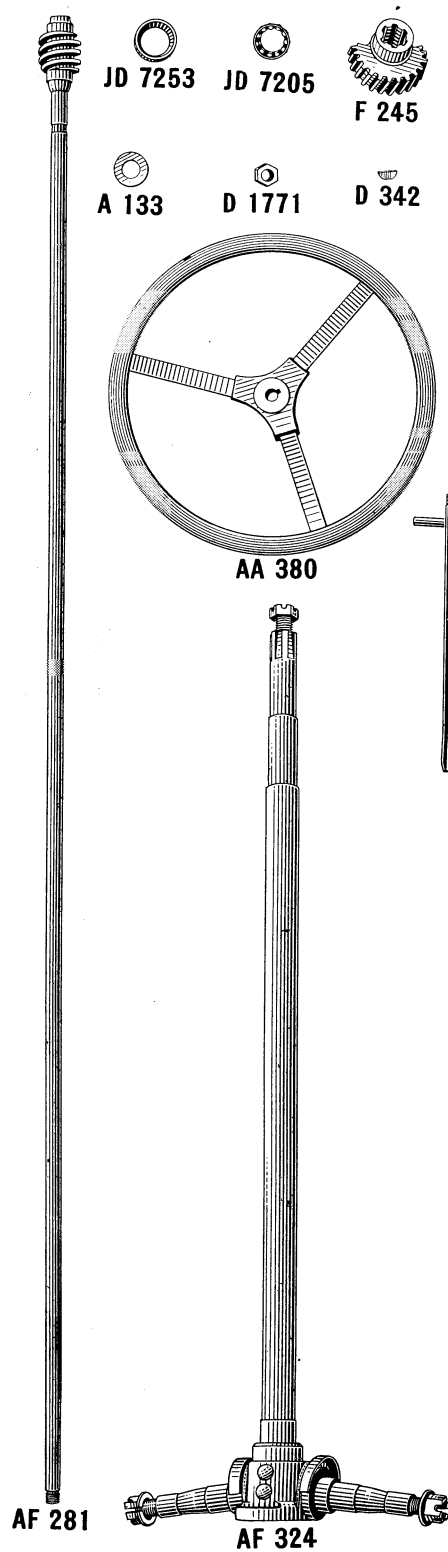

SEAT AND PLATFORM

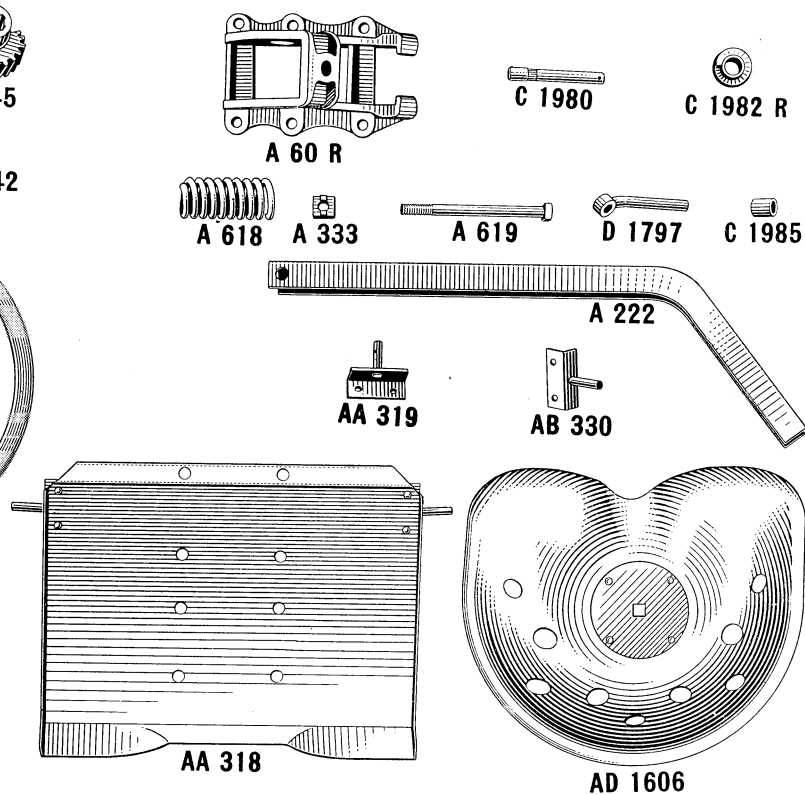

MAGNETO

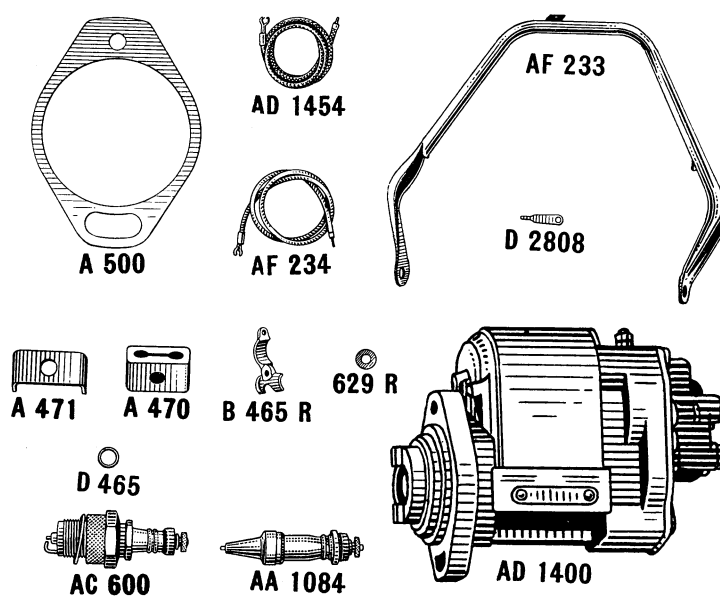


Plate No. 37

REPAIR PARTS FOR MODEL "G" TRACTOR

MAGNETO PARTS


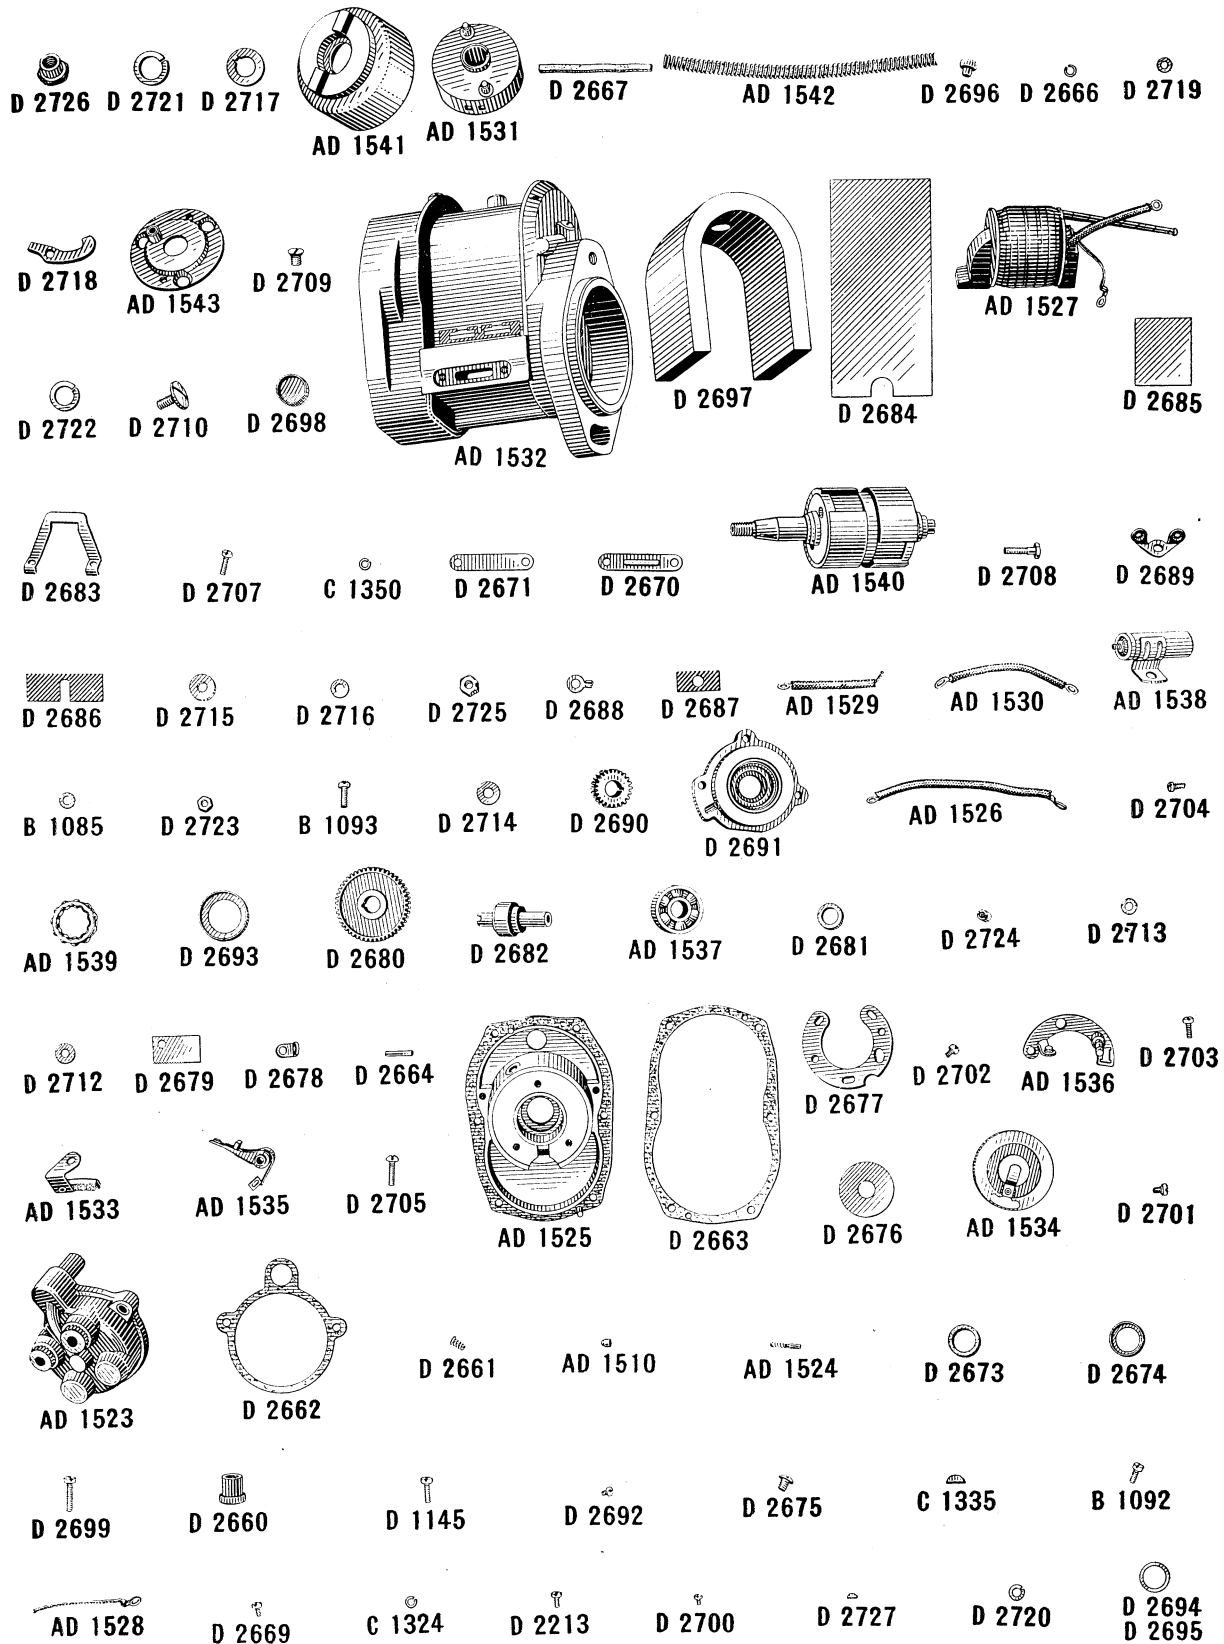



Plate No. 38

REPAIR PARTS FOR MODEL "G" TRACTOR

CARBURETOR

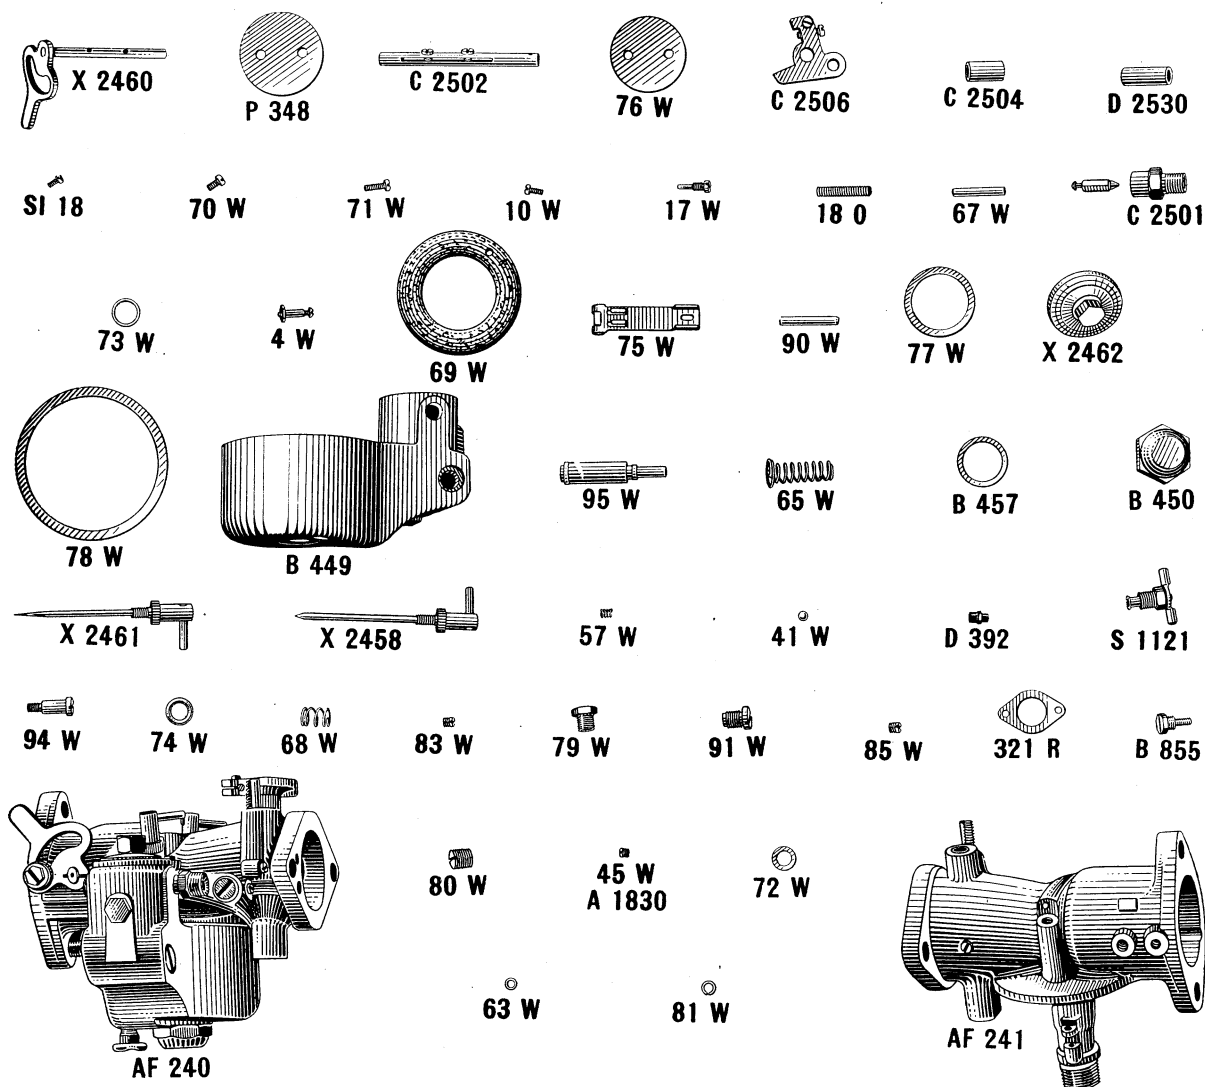

AIR CLEANER

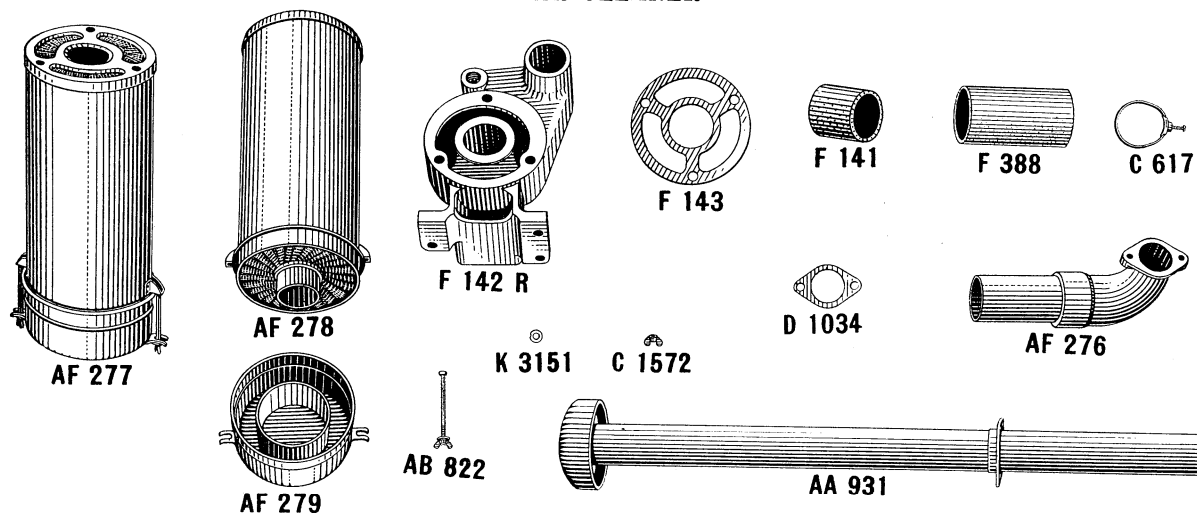

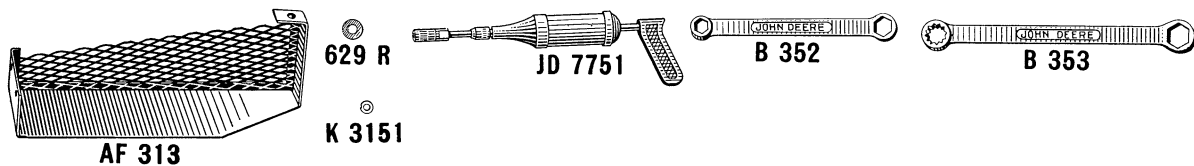
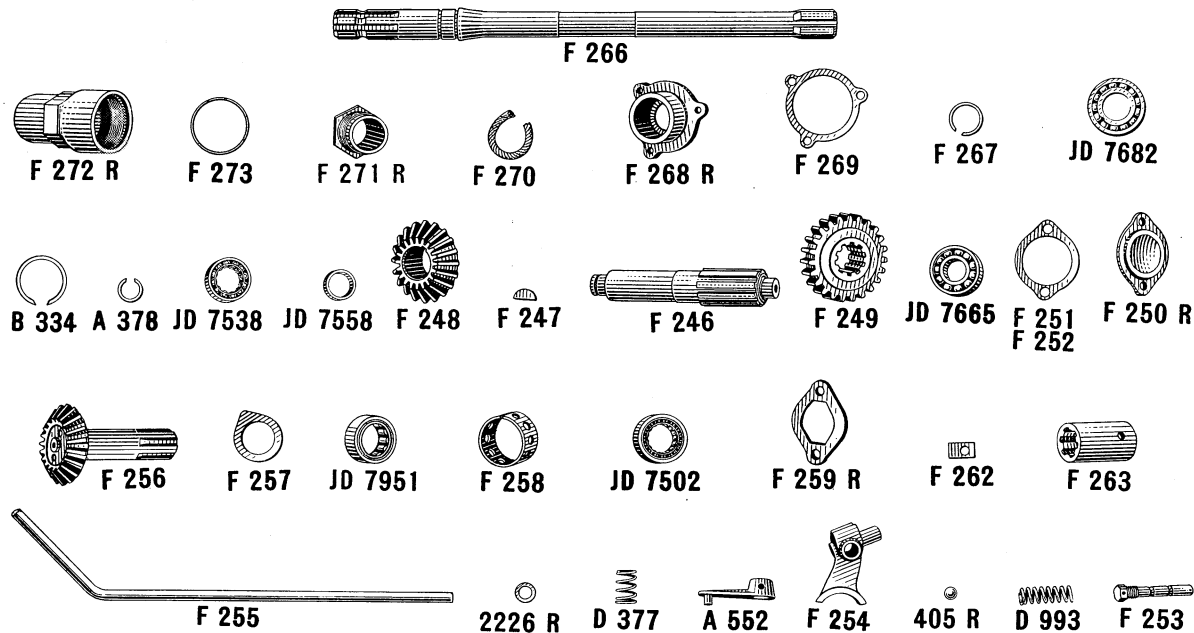
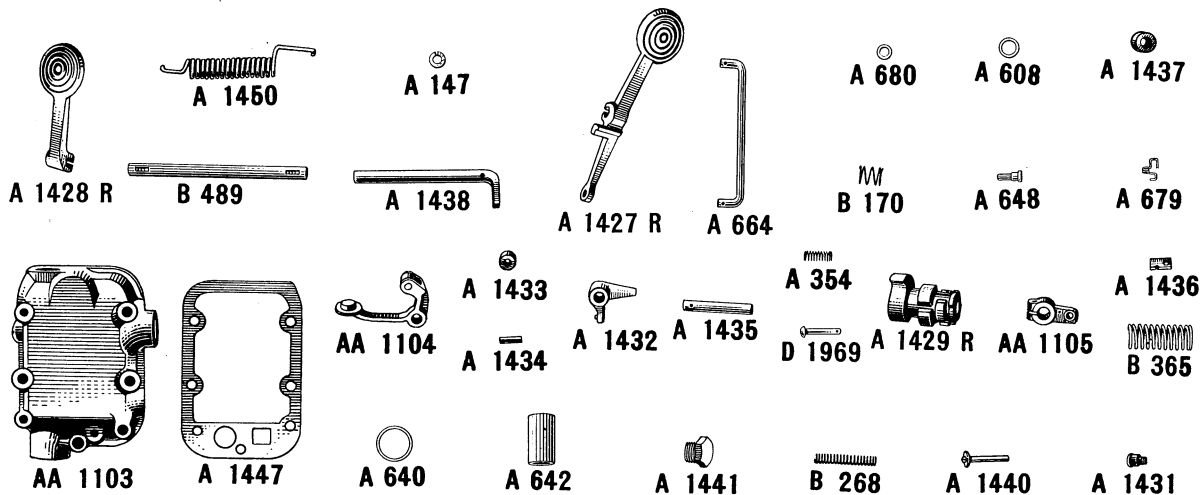
REPAIR PARTS FOR MODEL "G" TRACTOR**TOOL BOX AND TOOLS****POWER SHAFT PARTS****POWER LIFT**

Plate No. 40

REPAIR PARTS FOR MODEL "G" TRACTOR

POWER LIFT—Continued

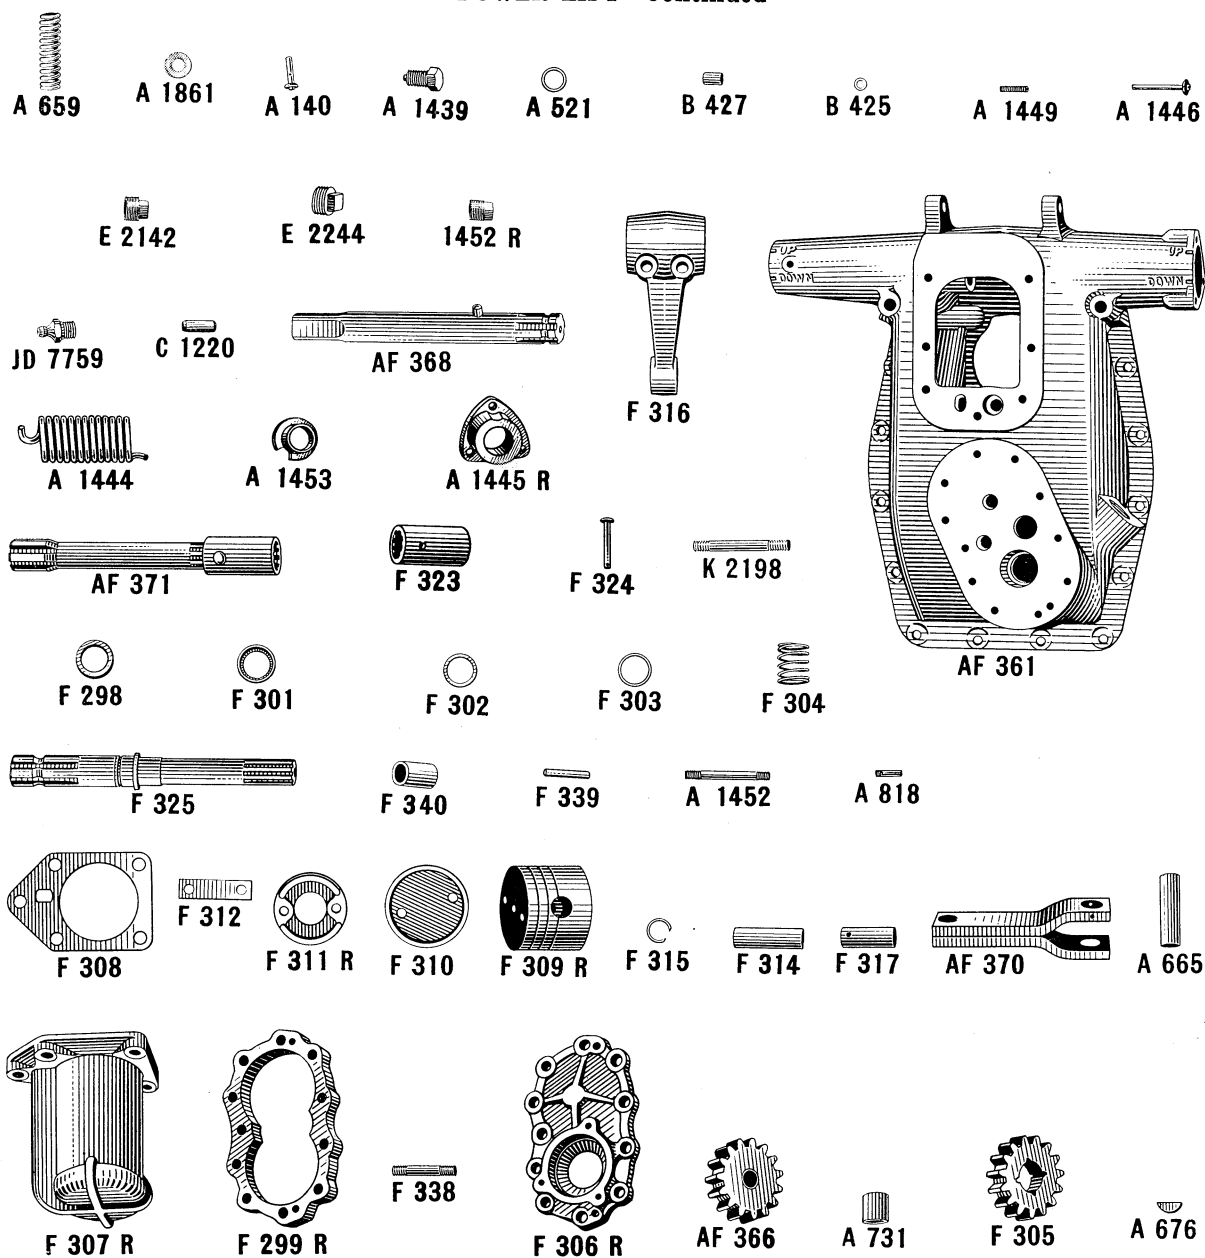


Plate No. 41

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A									
A5R.....	11	A263.....	11	A435.....	58	A601.....	5	A902.....	3
A10R.....	25	A281.....	8	A437.....	5	A602.....	5	A903.....	3
A11R.....	11		53	A438.....	10		9	A906.....	10
A30R.....	25	A284.....	3		55		49	A907.....	11
A31R.....	25		48	A439.....	5	A608.....	54	A908.....	6
	68	A286.....	8	A441.....	13	A610.....	11	A910R.....	25
A35R.....	4		53	A446.....	8	A611.....	11	A911R.....	25
A41R.....	5	A288.....	58	A447.....	19	A612.....	11	A912R.....	25
A51R.....	8		58	A448.....	8	A618.....	14	A913.....	10
A60R.....	58	A289.....	58	A454.....	4	A619.....	14	A916.....	10
A69R.....	10	A301.....	58	A465.....	7		58	A917.....	10
	55	A302.....	3		51	A624.....	66	A918.....	10
		A303.....	4	A470.....	15	A640.....	62	A919.....	20
A73R.....	5	A309.....	64	A471.....	15		62	A927.....	8
A76R.....	11		64	A486.....	11	A642.....	62	A931R.....	8
	56	A310.....	20		59	A644.....	54	A932.....	8
A78R.....	9	A312.....	21	A487.....	4	A648.....	62	A933.....	4
A80R.....	6	A313.....	21	A488.....	20	A659.....	62	A934.....	14
	8	A317.....	22	A490.....	67	A664.....	62	A936.....	14
	50	A318.....	21	A491R.....	58	A665.....	62	A940.....	14
A82R.....	9		58	A492.....	65	A676.....	62	A944R.....	6
A85R.....	25	A319.....	4	A500.....	15	A679.....	62	A946R.....	14
A88R.....	68	A320.....	58	A507.....	59	A680.....	62	A951.....	21
A89R.....	57		65	A510.....	14	A685.....	56	A955.....	13
A94.....	10	A321.....	12	A518.....	58	A686.....	56	A958.....	6
A103.....	4		57	A519.....	13		65	A959R.....	25
		A327.....	22		57	A692.....	17	A971.....	19
A105.....	5	A330.....	66	A520.....	6	A695.....	17	A1003R.....	4
A114.....	10		23	A521.....	51	A698.....	17	A1004.....	4
A115R.....	10	A333.....	14		6	A700.....	17	A1013.....	7
A119.....	4		58	A522.....	51	A701.....	17		52
	10	A334.....	14		6	A702.....	17	A1014.....	7
A120.....	10		24	A523.....	51	A703.....	17	A1015R.....	25
	55		58	A535.....	6	A704.....	17	A1031.....	20
	57	A335.....	67		51	A705.....	17	A1032.....	20
A124.....	11	A336.....	23	A539.....	62	A706.....	17	A1033.....	20
A125.....	4	A337.....	23	A540.....	6	A707.....	17	A1052.....	58
A130.....	4		67	A547.....	51	A708.....	17	A1053.....	66
A133.....	58	A343.....	24	A548R.....	6	A709.....	17	A1062.....	12
		A345.....	12	A549.....	51	A710.....	17	A1102.....	18
A134.....	12		57	A550.....	6	A712.....	17	A1103.....	18
	57	A348.....	12	A551.....	51	A715.....	17	A1104.....	18
A140.....	62		57	A552.....	10	A716.....	17	A1112.....	20
A147.....	10	A352.....	54	A554.....	10	A717.....	17	A1113.....	20
	54	A353.....	54	A557.....	10	A718.....	17	A1114.....	20
A149.....	62		54		10		17	A1116.....	20
	12	A354.....	62	A558.....	10	A719.....	17	A1123R.....	25
A150.....	57	A355.....	4	A559.....	17	A721.....	17	A1141R.....	25
	11		49	A561.....	19	A722.....	17	A1142.....	5
A151.....	12	A356.....	4	A562.....	19	A723.....	17	A1147.....	3
	57	A363.....	11	A564.....	61	A726.....	9	A1149.....	6
A152.....	12	A365.....	10		19	A731.....	62		51
	57		5	A557.....	10	A732R.....	25	A1151.....	6
A159.....	10	A369.....	8	A558.....	19	A734.....	22	A1152.....	6
	55		50	A562.....	19		66		51
A166.....	10		53	A567.....	19	A766.....	17	A1153.....	11
A169.....	11	A370.....	9	A568.....	20	A767.....	17	A1154.....	11
		A371.....	9	A571.....	20		17	A1155R.....	25
A172.....	5	A374.....	7	A572.....	20	A768.....	17		
	49		51	A565R.....	20	A769.....	17	A1156.....	11
A173.....	5	A378.....	10	A567.....	20	A770.....	17	A1157.....	11
A175.....	19		61	A568.....	20	A772.....	5	A1158.....	11
A176.....	5	A393.....	8	A571.....	20	A774R.....	20	A1159.....	11
A178.....	5		53	A572.....	20		20	A1160.....	11
	49	A396.....	58	A574.....	20	A775.....	20		55
A182.....	8	A399.....	3	A575.....	20	A776.....	58	A1162.....	13
A183.....	50	A403.....	5	A577.....	19	A777.....	57	A1163.....	13
A189.....	8	A404.....	4	A581.....	11	A812.....	11	A1168.....	57
A191.....	3		4	A582.....	11	A818.....	62		13
A192.....	8	A405.....	4			A829.....	11	A1169.....	57
		A406.....	11	A583.....	11	A832.....	18	A1170R.....	13
A202.....	11	A411.....	11	A584.....	5	A836.....	11		25
A215.....	57	A412.....	11	A586.....	50	A837.....	10	A1171.....	5
A222.....	58	A413.....	12		6			A1172.....	5
A234.....	5			A587R.....	8	A845R.....	25	A1174R.....	5
A241.....	6	A424.....	3	A588.....	50	A846.....	8	A1175.....	5
	8	A425.....	4		25	A850R.....	53	A1176.....	53
	50		49	A596.....	4		14		
A245.....	4	A426.....	4	A597.....	58	A871.....	20	A1177.....	8
A253.....	4	A428.....	5	A598.....	21		21	A1178.....	8
A256.....	3	A432.....	8	A599.....	10	A894.....	64	A1180R.....	9
A257.....	58			A600.....	10		17		53
A260.....	5	A433.....	8		10			A1181.....	9
	49	A434.....	8						53

NUMERICAL INDEX

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A1182.....	9	A1522.....	11	A1693.....	15	AA335.....	7	AA958.....	5
	53	A1553R.....		A1694.....	15		52	AA971.....	14
A1183.....	5	A1555R.....	25	A1695.....	15	AA345.....	11	AA1002.....	56
A1188.....	6		68	A1711.....	15	AA357.....	6		
A1190.....	6	A1556.....	13	A1712.....	8	AA380.....	51	AA1047.....	5
A1193.....	5		57	A1713.....	6		14	AA1084.....	15
A1196.....	6	A1574.....	5	A1714.....	7	AA382.....	58		59
				A1723.....	15		4	AA1087.....	12
A1197.....	6	A1575.....	5	A1724.....	15	AA396.....	8	AA1103.....	63
	9	A1595R.....	5	A1726.....	15	AA397.....	3	AA1104.....	63
	50	A1596.....	6			AA414.....	18		
A1225.....	8		51	A1728.....	15	AA415.....	18	AA1105.....	63
A1241R.....	5	A1597R.....	6	A1730R.....	14	AA416.....	18	AA1122.....	11
A1242.....	20		51	A1731.....	14			AA1123.....	10
A1247.....	52	A1598.....	6	A1732.....	14	AA417.....	18	AA1124.....	10
			51	A1733R.....	14	AA418.....	18	AA1234.....	11
A1248.....	52					AA419.....	18		
A1252.....	7	A1599.....	6	A1734.....	14	AA422.....	18	AA1266.....	11
A1253.....	21	A1600R.....	25	A1735.....	6	AA423.....	18	AA1270.....	11
A1269.....	19	A1603R.....	25	A1736.....	6			AA1271.....	11
A1271.....	21	A1605R.....	25		14	AA424.....	18	AA1272.....	10
		A1606.....	9	A1737.....	6	AA425.....	18	AA1274.....	10
A1277R.....	25			A1739.....	14	AA428.....	18		
A1278.....	6	A1608R.....	25			AA437.....	4	AA1277.....	13
	51	A1609R.....	25	A1740.....	14	AA454.....	7	AA1278.....	13
A1279R.....	6	A1610R.....	13	A1741.....	14		52	AA1281.....	13
A1280.....	6	A1611R.....	13	A1742.....	22			AA1282.....	7
	51	A1612R.....	8	A1746.....	14	A A463.....	4	AA1283.....	7
A1281.....	11	A1627R.....	8	A1758.....	21	AA464.....	4		
		A1628R.....	8			AA465.....	4	AA1284.....	7
A1290.....	5	A1629R.....	8	A1781R.....	25	AA478.....	15	AA1285.....	13
A1291.....	5	A1631.....	7	A1782.....	19	AA499.....	7	AA1286.....	5
	49	A1632.....	7	A1785.....	6		52	AA1287.....	19
A1298.....	12	A1633R.....	25		8			AA1289.....	19
	56					AA517.....	7		
A1338.....	64	A1634.....	8	A1786R.....	53		52	AA1291.....	10
A1382.....	9	A1635R.....	8	A1787R.....	53	AA518.....	7	AA1293.....	8
		A1636.....	8				52	AA1299.....	9
A1389.....	11	A1637.....	8	A1795R.....	14	AA519.....	7	AA1301.....	8
A1401.....	10	A1638R.....	8	A1796.....	8		52	AA1303.....	4
	19			A1797.....	8	AA520.....	11		
	54	A1640R.....	25	A1819.....	5	AA523.....	9	AA1305.....	3
A1402.....	10	A1641R.....	9	A1828.....	13			AA1309.....	3
A1403.....	10	A1642.....	9		57	AA535.....	4	AA1310.....	3
A1405.....	10	A1643.....	9	A1829.....	22	AA551.....	6	AA1312.....	4
		A1644.....	9		66		51	AA1315.....	9
A1406.....	10			A1830.....	18	AA553.....	10		
A1408.....	11	A1645.....	9		60	AA565.....	8	AA1318.....	9
A1409.....	11	A1646.....	9	A1853.....	8	AA567.....	14	AA1320.....	6
A1410.....	11	A1647.....	9		53			AA1322.....	7
A1411.....	11	A1648.....	9			AA578.....	18	AA1324.....	7
			21	A1854.....	8	AA580.....	18	AA1325.....	7
A1413R.....	25		65		24	AA588.....	10		
A1414.....	20	A1649R.....	9		53	AA623.....	7	AA1328.....	7
A1415.....	20			A1855.....	8	AA624.....	7	AA1330.....	14
A1416.....	10	A1650.....	9		24			AA1331.....	15
A1418.....	10	A1651.....	9	A1856.....	53	AA663.....	13	AA1332.....	15
		A1652.....	9		8		57	AA1337.....	15
A1422.....	58		54	A1857.....	53	AA665.....	11		
A1423.....	58	A1653.....	9	A1858.....	8	AA741.....	3	AA1338.....	15
A1425R.....	68	A1654R.....	9		22	AA744.....	18	AA1340.....	7
A1426R.....	68			A1861.....	23	AA793.....	10	AA1342.....	8
A1427R.....	62	A1655.....	9	A1874.....	63			AA1343.....	15
		A1656.....	9	A1879.....	15	AA797.....	10	AA1344.....	15
A1428R.....	62	A1657.....	9	A1887.....	15	AA798.....	10		
A1429R.....	62	A1658R.....	25	A1890.....	52	AA802.....	7	AA1345.....	15
A1430R.....	68	A1661R.....	9			AA806.....	11	AA1346.....	15
A1431.....	62			A1892.....	66	AA807.....	13	AA1347.....	15
A1432.....	62	A1662R.....	25	A1909R.....	58			AA1349.....	3
		A1663R.....	25	A1910.....	23	AA811.....	13	AA1353.....	14
A1433.....	62	A1664R.....	25	A1935.....	15		57		
A1435.....	62	A1671.....	3	A1953.....	19	AA813.....	5	AA1355.....	14
A1436.....	62	A1672R.....	3	A1966.....	19	AA814.....	5	AA1366.....	15
A1437.....	62						50	AA1381.....	4
		A1673.....	21	A1967.....	19	AA817.....	53	AA1395.....	13
A1438.....	62	A1674R.....	13			AA818.....	9	AA1399.....	57
A1439.....	62	A1676.....	14						
A1440.....	62	A1677.....	14			AA819.....	7	AA1407.....	13
A1441.....	62	A1678R.....	13			AA823.....	3		57
A1444.....	62					AA824.....	6	AA1422.....	4
		A1680R.....	6	AA227.....	5		51	AA1429.....	8
A1445R.....	62		9		49	AA840.....	4	AA1444.....	8
A1446.....	62	A1681.....	6	AA229.....	5	AA843.....	3	AA1481.....	4
A1447.....	62	A1682.....	6	AA244.....	3				
A1448.....	64		9		48	AA858.....	15	AA1521.....	8
A1449.....	62	A1684.....	7	AA270.....	7	AA861.....	7		
		A1686R.....	11		52	AA883.....	52	AA1522.....	8
				AA300.....	50	AA917.....	12	AA1523.....	53
A1450.....	62					AA929.....	19	AA1524.....	8
A1452.....	63	A1687.....	14	AA314.....	13			AA1527.....	8
A1453.....	63	A1689.....	14		57	AA931.....	61		
A1491.....	50	A1690.....	14	AA318.....	58	AA933.....	12	AA1528.....	8
A1507.....	4	A1691.....	14	AA319.....	57			AA1553.....	10
		A1692.....	15		58				
				AA325.....	8				
				AA331.....	11				

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
AA1564	15	AD709	7	AF242	49	B		B439	7
AA1565	15	AD752	52	AF245	48		B448	51	
AA1569	15	AD900	54	AF248	54			67	
AA1570	15	AD1275	13	AF251	48		B449	18	
AA1572	4	AD1360	56	AF252	48			60	
AA1573	4		50				B450	18	
				AF255	52			60	
AA1574	4	AD1381	13	AF257	52		B457	18	
AA1575	58	AD1400	15	AF260	51			60	
AA1582	58		59	AF262	51		B465R	15	
AA1583	58	AD1454	59	AF263	51		59		
AA1605	14	AD1510	15			B111	14		
AA1607	4		59	AF264	51	B112	8		
				AF265	51				
AA1615	4	AD1523	15	AF267	50	B122	23		
AA1620	4		59	AF275	50	B155	48		
AA1621	4	AD1524	15	AF276	61	B170	21		
AA1622	4		59				63		
AA1623	4	AD1525	15	AF277	61	B216	50		
			59	AF278	61	B241R	6		
AA1624	18	AD1526	15	AF279	61				
AA1626	4		59	AF281	58	B243	51		
AA1652	4	AD1527	15	AF286	57				
	5		59			B244	6		
AA1674	19			AF287	57	B245	51		
AA1675	19	AD1528	15	AF291	57				
			59	AF293	49				
AA1676	19	AD1529	15	AF294	49				
AA1677	15		59	AF298	55	B246	6		
AA1678	15	AD1530	15						
AA1683	10		59	AF299	55	B247	51		
AA1730	7	AD1531	15	AF305	53				
			59	AF307	54	B250	51		
		AD1532	15	AF309	55				
			59	AF313	61	B251	6		
		AD1533	16	AF318	56	B258	7		
AB			59	AF319	58				
AB214	14	AD1534	16	AF322	58				
AB284	6		59	AF324	58	B259	51		
	51	AD1535	16	AF331	54				
AB292	7		59			B268	63		
AB326	51	AD1536	16	AF332	54	B271	5		
	57		59	AF333	54				
AB330	58	AD1537	16	AF337	48	B272R	50		
			59	AF341	56	B273	6		
				AF342	56				
AB336	15	AD1538	16			B274	5		
AB379	18		59	AF356	56				
AB380	18	AD1539	16	AF361	63				
AB383	18		59	AF366	63	B275	65		
AB384	18	AD1540	16	AF368	63	B276	5		
			59	AF370	63				
AB386	18	AD1541	16			B280	50		
AB518	9		59	AF371	63				
AB609	53	AD1542	16	AF373	58	B281	50		
	7		59	AF375	56				
AB706	52	AD1543	16	AF378	48				
AB707	18		59	AF379	48				
AB822	61	AD1606	14	AF382	55	B290R	25		
AB823	12		58	AF383	58				
AB834	12	AD1769	49	AF385	53	B293	9		
AB1084	18	AD1770	20	AF386	53	B296	53		
AB1085	18	AD1771	24	AF387	53				
			67			B298	9		
		AD1772	24	AF388	53				
			67	AF389	55	B305	53		
				AF391	51				
		AD1773	24	AF392	55				
			67	AF395	57	B334	61		
		AD1774	67			B352	61		
				AF396	55	B353	61		
AC				AF397	55	B359	4		
AC119	13			AF398	49	B365	63		
AC365	57	AF		AF399	53				
AC600	15			AF402	57	B372	24		
	59					B373	24		
AC649	12	AF210	57	AF403	54	B374	54		
	56	AF213	49	AF404	49	B375	54		
AC667	50	AF220	49	AF405	55	B387	54		
		AF224	49	AF411	56				
AC847	57	AF226	52	AF415	53	B390R	50		
AC918	12					B392R	50		
AC1062	13	AF228	52	AF417	53				
AC1079	7	AF229	52	AF422	49	B423	8		
	52	AF230	52	AF427	52	B425	63		
AC1080	7	AF231	52	AF428	49	B427	63		
	52	AF232	52						
						B430	7		
		AF233	59	AF436	56				
AD		AF234	59	AF437	49	B432	5		
AD86	52	AF238	50	AF438	49				
AD97	52	AF240	60	AF440	49	B438	7		
AD452	13	AF241	60	AF441	49				
	57								

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C744.....	12	C2327.....	58	D479.....	24	D1768.....	14	D2680.....	16
C806.....	56	C2378.....	7		67	D1771.....	14		60
	20		52				23		
C834.....	64	C2392.....	22	D486.....	13		58	D2681.....	16
	21		23	D508.....	64		66		60
C838.....	64	C2501.....	18	D528.....	24			D2682.....	16
	14		60		67	D1797.....	14		60
C840.....	14	C2502.....	18	D530.....	12		58	D2683.....	16
C902.....	5		60	D531.....	12	D1865.....	49		60
	50	C2504.....	18	D544.....	22	D1881.....	13	D2684.....	16
C977.....	14		60		65	D1888.....	13		60
C980.....	22	C2506.....	60	D571.....	22	D1898.....	13	D2685.....	16
C981.....	4						14		60
	66			D573.....	56				
		D		D574.....	12	D1932.....	9	D2686.....	16
C985.....	24			D575.....	12		54		60
C998.....	5	D126.....	52	D576.....	12	D1935.....	7	D2687.....	16
	50	D136.....	13	D577.....	12		52		60
C1027.....	12		57			D1951.....	6	D2688.....	16
C1030.....	12	D141.....	54	D578.....	12		51		60
	56	D156.....	14	D579.....	12	D1952.....	6	D2689.....	16
C1096.....	65	D157.....	6	D582.....	13		51		60
			8	D583.....	13	D1969.....	63	D2690.....	16
C1104.....	23		50	D584R.....	13				60
C1109.....	14		53			D1994.....	6		
C1220.....	14			D585.....	22		50	D2691.....	16
	56	D158.....	54	D595.....	22	D2009.....	4		60
	63	D178.....	9		65		48	D2692.....	16
C1224.....	6		54	D616.....	22	D2031.....	50		60
	13	D186.....	51	D625.....	66	D2067.....	64	D2693.....	16
C1294.....	12	D233.....	12		12	D2121.....	12		60
			56		48		56	D2694.....	16
C1295.....	12	D279.....	53	D635.....	56	D2122.....	7	D2695.....	16
C1300.....	15				13		52		60
C1324.....	16	D319R.....	52		57	D2124.....	4		
	59	D336.....	23	D678.....	10		48	D2696.....	16
C1330.....	18	D341.....	68		54	D2184.....	56		60
C1333.....	18	D342.....	4	D793.....	7	D2186.....	56	D2697.....	16
C1334.....	18		5		51	D2213.....	16		60
C1335.....	16-18		14	D794.....	7		59	D2698.....	16
	59		49		51				60
C1350.....	16		50	D827.....	13	D2319.....	23	D2699.....	16
	59		53		57	D2379.....	15		60
C1438.....	6		58	D843.....	13	D2427.....	7	D2700.....	16
	50	D358.....	53			D2440.....	7		60
C1479.....	56			D844.....	13		52		
		D362.....	52	D849.....	13	D2446.....	56	D2701.....	16
C1517.....	12	D363R.....	68	D888.....	66				60
	22	D376.....	5	D916.....	20	D2447.....	12	D2702.....	16
	56		50		64		56		60
C1533.....	12	D377.....	20	D938.....	12	D2454.....	56	D2703.....	16
C1572.....	19		54		56	D2461.....	21		60
	61	D392.....	61	D942.....	20		64	D2704.....	16
C1573.....	7		18	D993.....	20	D2526R.....	12	D2705.....	60
	52		51		61	D2530.....	18		60
C1578.....	65		52	D1034.....	19		60		
			60		61	D2627.....	56	D2707.....	17
C1591.....	19			D1050.....	13	D2629.....	12		60
C1646R.....	12	D393R.....	6	D1078.....	12	D2660.....	16	D2708.....	17
	56		50		56		59		60
C1647.....	22	D403.....	9			D2661.....	16	D2709.....	17
	65		53	D1079.....	67		59		60
C1705.....	6	D409.....	12	D1080.....	4	D2662.....	16	D2710.....	17
	51		48	D1083.....	19		59		60
C1716.....	12	D411.....	12	D1086.....	9			D2712.....	17
			56		21	D2663.....	16		60
C1732.....	57	D417.....	7		54		59		
C1777.....	7			D1138.....	65	D2664.....	16	D2713.....	17
	52	D430.....	12		52		59		60
C1778.....	7		24	D1145.....	16	D2666.....	16	D2714.....	17
	52		67				59		60
C1823.....	4	D431.....	12	D1164.....	59	D2667.....	16	D2715.....	17
C1871.....	21	D432.....	24	D1250.....	20		59		60
	64	D436.....	24	D1283.....	13	D2669.....	16	D2716.....	17
		D437.....	24		12		59		60
C1980.....	14		67	D1524.....	56			D2717.....	17
	58				13	D2670.....	16		60
C1982R.....	14	D443.....	24				59		
	58	D454.....	21	D1550.....	22	D2671.....	16	D2718.....	17
C1985.....	14		53	D1551.....	13		59		60
	58		65	D1564.....	64	D2673.....	16	D2719.....	17
C2015.....	65	D459.....	20				59		60
C2147.....	12	D463.....	3	D1661.....	54	D2674.....	16	D2720.....	17
		D465.....	15		67		59		60
C2182.....	57		59	D1674R.....	14	D2675.....	16	D2721.....	17
C2199R.....	12			D1701.....	14		59		60
	56	D473.....	8	D1720.....	9			D2722.....	17
	49		52		49	D2676.....	16		60
C2239.....	57	D474.....	20		53		59		
C2308.....	57		64	D1760.....	54	D2677.....	16	D2723.....	17
C2309.....	57	D475.....	20				59		60
C2321.....	55		64	D1762.....	67	D2678.....	16	D2724.....	17
		D478.....	24	D1766R.....	14		59		60
			52	D1767.....	22	D2679.....	16	D2725.....	17
			67				59		60

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
D2726	17	F86	52	F187	54	F283R	68	JD7216	13
D2727	60	F87	49	F188R	54	F284	54		57
	17		52	F189	54	F285R	48	JD7224	13
	60		53	F190	54	F286	48		57
D2780	24	F89	53	F192	54	F287	54	JD7245	12
	67	F90	53	F193	54	F288	54	JD7246	55
D2781	24	F91	53	F194R	54	F289	54	JD7250	5
D2782	24	F93R	68	F195R	54	F290	54		49
	67	F94	53	F196R	68	F291R	54	JD7253	14
D2808	15	F95	51			F292R	54		58
	59	F96R	51	F197R	54			JD7266	13
D2824	49	F97R	68	F198	54	F295R	56		57
		F98	51	F199R	54	F296R	68	JD7270	13
				F200R	54	F298	63		57
				F201	54	F299R	63	JD7275	11
		F104R	68			F301	63		
		F105	50	F203	55			JD7288	56
		F106	50	F204	55	F302	63	JD7296	12
E2057	6	F107R	50	F205	55	F303	63	JD7298	56
	50	F108R	50	F206	55	F304	63	JD7358	5
	53			F207	55	F305	63		49
E2064	21	F109	50			F306R	63	JD7361	11
	65	F110	50						
E2072	11	F111	50	F208R	68				
E2142	3	F112	53	F209	55	F307R	63	JD7367	56
	4	F113	50	F210	55	F308	63	JD7376	11
	48			F211	55	F309R	63	JD7379	55
	49	F114	53	F213	54	F310	63		56
	63	F119	50			F311R	63	JD7391	56
		F120	49	F214	55			JD7405	11
E2149	7	F122	49	F215	55	F312	63		
	52	F123	49	F216	55	F314	63	JD7408	55
				F217	55	F315	63	JD7411	11
E2150	7	F124	49	F218	55	F316	63		55
	52	F125R	49			F317	63	JD7487	9
E2157	52	F126	50	F219	55				55
E2158	52	F127	50	F220R	55	F320	65	JD7488	54
E2162	21	F128R	68	F221	55	F323	63	JD7501	11
E2207	6			F222R	55	F324	67		
	51	F129	50	F223	55			JD7502	62
E2244	12	F130	50			F325	63	JD7538	55
	56	F131	50	F224	55	F333	58		62
	63			F225	55				
		F132	50	F226R	68	F334	58	JD7539	11
		F133	50	F227	56	F335	58	JD7551	11
					66	F336	56	JD7552	11
F5	68	F134R	50	F228	56	F337R	68		
F7	49	F135	50			F338	63	JD7558	55
F8R	68	F136R	49	F230	56				62
F16R	48	F137	49	F231	56	F339	63	JD7559	11
F17	48	F138	49	F241R	68	F340	63	JD7560	54
				F242	66	F344	53	JD7587	9
F18	51	F139R	68	F245	58	F346	55	JD7649	10
F22R	56	F141	61			F349	58		

NUMERICAL INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
K		1513R.....	23	1706R.....	12	2568R.....	23	45W.....	19
			66		57		66		61
K2198.....	63	1514R.....	23		25			57W.....	19
			66	1721R.....	68	Carburetor			61
K2525.....	57	1515R.....	23	1722R.....	25	Parts		63W.....	19
	58	1516R.....	23		68				61
K2573.....	7	1518R.....	23	1723R.....	25	A832.....	18	65W.....	19
	51				68	A1830.....	18		61
K3083.....	3	1611R.....	22	1724R.....	25		60	67W.....	19
	10		65		68	AA578.....	18		61
	48	1613R.....	22	1726R.....	25	AA580.....	18	68W.....	19
K3151.....	6		65		68	AA744.....	18		61
	15	1614R.....	22	1728R.....	25			69W.....	19
	61		65	1729R.....	25	AF240.....	60		61
		1615R.....	22		68	AF241.....	60		
				1730R.....	25	B449.....	18	70W.....	19
M		1620R.....	65		68				61
		1621R.....	22	1730R.....	25	B450.....	18	71W.....	19
			65		68		60		61
M21.....	22	1622R.....	22	1731R.....	25	B457.....	18	72W.....	19
	65		65		68		60		61
		1624R.....	22	1732R.....	25	B855.....	60	73W.....	19
R			65		68				61
		1638R.....	22	1733R.....	25	C2501.....	18	74W.....	19
					68		60		61
27R.....	13	1667R.....	20	1735R.....	25	C2502.....	18		
	15		64		68		60	75W.....	19
	57	1668R.....	21	1737R.....	25	C2504.....	18		61
294R.....	3	1669R.....	20		68		60	76W.....	19
	14		21			C2506.....	60		61
321R.....	4		64	1738R.....	25	D392.....	18	77W.....	19
	49	1670R.....	20	1741R.....	25		60		61
372R.....	8		21		68	D2530.....	18	78W.....	19
405R.....	20		64	1742R.....	25		60		61
	62	1671R.....	20		68	P348.....	18	79W.....	19
			21	1743R.....	25		60		61
629R.....	8		64		68	S1121.....	19	80W.....	19
	15		65	1745R.....	25		61		61
	50				68	SI-18.....	19	81W.....	19
	53	1672R.....	21				61		61
	59		64	1748R.....	25	X2458.....	19	83W.....	19
	61	1674R.....	64		68		61		61
1450R.....	9	1675R.....	64	1881R.....	68			85W.....	19
	53	1676R.....	21	1882R.....	25	X2460.....	19		61
1452R.....	3		64	1893R.....	66		61	90W.....	19
	48		65	1906R.....	66	X2461.....	19		61
	63	1677R.....	64				61		
1454R.....	48			1928R.....	66	X2462.....	19	91W.....	19
1469R.....	7	1682R.....	21	1932R.....	66		61		61
			64	1935R.....	22			94W.....	19
1503R.....	23	1683R.....	20	1938R.....	22	18-O.....	19		61
	66		21	1939R.....	66		61	95W.....	19
1504R.....	23		64			4W.....	19		61
	66		65	1946R.....	66		61	321R.....	4
1505R.....	23	1684R.....	20	1971R.....	22				19
	66		21		66	10W.....	19		49
1506R.....	23		64	2214R.....	11		61		61
	66	1685R.....	21	2226R.....	62	17W.....	19		
1512R.....	23	1687R.....	65	2235R.....	65		61		
	66					41W.....	19		
		1688R.....	64	2394R.....	23		61		
					66				