




JOHN DEERE
Parts Catalog

**NO. 47R REPAIR CATALOG FOR “A,” “AN,” “AW,” “AR”
AND “AO” TRACTORS**


CAT47R

INDEX


SUBJECT	Page	SUBJECT	Page
Air Cleaner.....	40	High Speed Gear Assemblies.....	17
Brakes, Differential.....	23	Hood and Grilles.....	12
Brakes, Emergency.....	22	Illustrations of Repair Parts.....	68
Brakes, Rear Wheel.....	23	Lighting Equipment.....	44
Breather, Crankcase.....	8	Lubricating System and Oil Pump.....	8
Cam Followers.....	5	Magneto, Spark Plugs and Cables.....	29
Camshaft.....	5	Magneto Parts.....	31
Carburetor.....	38	Manifold.....	5
Casting Numbers.....	65	Muffler and Exhaust Pipe.....	6
Clutch Fork Bearing and Pulley		Numerical Index.....	115
Brake.....	16	Oil Filter and Indicator.....	9
Clutch Parts.....	15	Oil Pipes and Fittings.....	10
Connecting Rods.....	3	Overdrive Gear and Shaft and First	
Controls.....	7	Reduction Gear.....	17
Cooling System.....	12	Pedestal.....	26
Countershaft.....	18	Pistons, Connecting Rods and Crank-	
Crankshaft.....	3	shaft.....	3
Cylinder.....	4	Platform.....	28
Cylinder Head, Manifold and Valves.....	5	Power Lift Parts.....	42
Differential.....	19	Power Shaft Parts.....	40
Drawbar.....	28	Pulley.....	15
Engine.....	3	Radiator Guard and Curtain.....	13
Fan.....	14	Radiator Shutter.....	13
Fenders.....	29	Rear Wheels.....	20
Final Drive.....	19	Rear Wheel Equipment.....	21
Front Axle and Front End Support.....	24	Seat.....	28
Front Wheels and Front Wheel		Sliding Gear Shaft.....	16
Equipment.....	25	Starting and Lighting.....	46
Fuel System.....	11	Steering Parts.....	26
Gear Assemblies, AA1120 R, AA1717 R		Tappets.....	6
and AA2360 R, Slow Speed.....	18	Tool Box and Tools.....	40
Gear, Countershaft Idler.....	17	Transmission Case.....	3
Gears, Overdrive and First Reduction.....	17	Valves.....	5
Gear Shift.....	16	Ventilator, Crankcase.....	8
Gear Shift, Overdrive.....	16	Wheel Scrapers.....	22
Governor.....	6		
Hardware List.....	49		

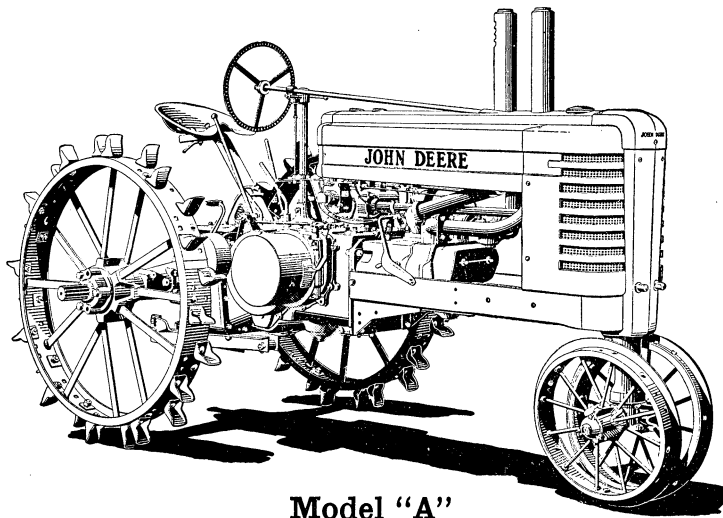


Model "A"

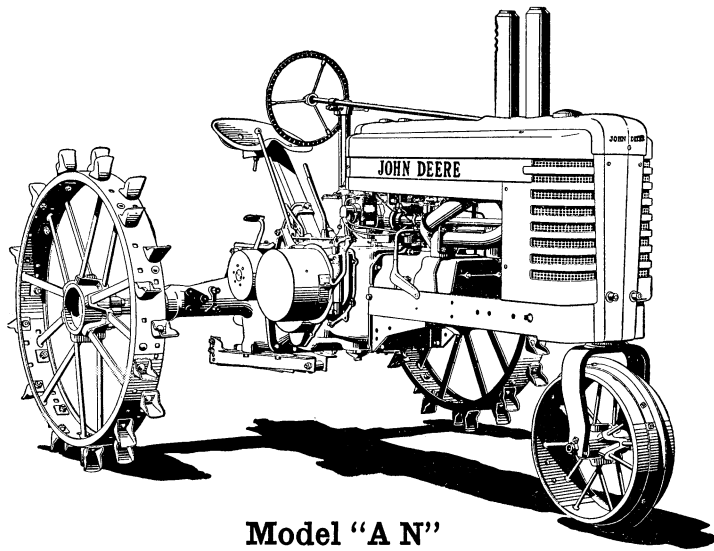

Model "A N"

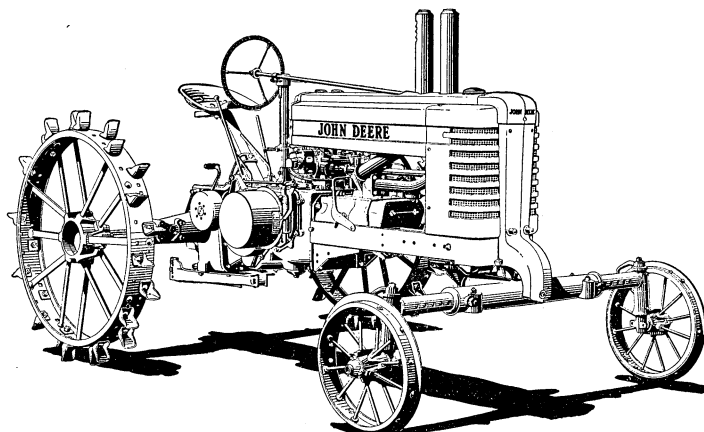

Model "AW"

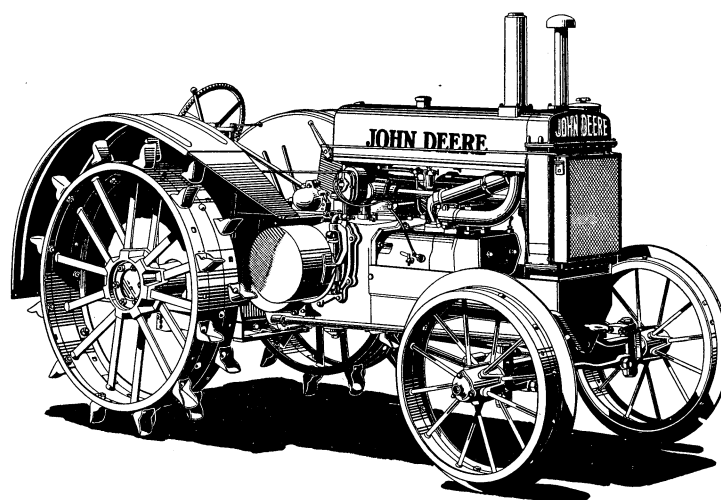

Model "AR"

Instructions for Ordering Parts

First. Always give serial number of tractor or power lift when ordering repairs.

Second. Give number and name of each part ordered. If in doubt as to correct name and number, send dimensioned sketch or return broken parts, charges prepaid.

Third. Orders for parts should be written separately from correspondence.

Fourth. State whether shipments are to be forwarded by Freight, Express, or Parcel Post. Telegraph orders will be shipped Express or Parcel Post unless otherwise instructed.

JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS 3

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
TRANSMISSION CASE				
294 R	Stud, Steering Housing to Case (1/2" x 1-11/16")		250000-	1
1452 R	Pipe Plug, Power Shaft Shifter Hole	410000-	250000-	1
A 284 R	Stud, Main Bearing to Case, L. H.	410000-	250000-	1
A 399 R	Gasket, Transmission Case Cover	410000-	250000-	1
AA 286 R	Cover, Transmission, A72 R, with A560 R Gear Shift Interlock	410000-413398		1
AA 320 R	Case, A560 R, Transmission, Main	410000-424024		
AA 508 R	Cover, A824 R, Transmission Case with Gear Shift Interlock	413399-		1
AA 618 R	Case, A920 R, Transmission, Main		250000-251485	
AA 823 R	Cover, A912 R, Transmission, with Gear Shift Interlock		250000-	1
AA 843 R	Case, A1141 R, Transmission, Main		251486-	
AA 1017 R	Case, A1140 R, Transmission, Main	424025-487999		
AA 2245 R	Case, A2300 R, Transmission, Main	488000-		
C 719 R	Stud, Cylinder to Case	410000-	250000-	1
C 719 R	Stud, Rear Axle Housing to Case		254186-	1
C 1533 R	Dowel Pin, Rear Axle Housing to Case		250000-	1
D 463 R	Welsh Plug, Transmission Case Cover		250000-	1
D 625 R	Pipe Plug, Transmission Oil Filler	410000-413278		1
E 1976 R	Pipe Plug, Transmission Case Oil Level	410000-413278		1
E 2142 R	Pipe Plug, Transmission Case Drain	410000-	250000-	1
E 2142 R	Pipe Plug, Crank Case Drain	410000-	250000-	1
JD 7759	Fitting, Alemite, No. 1610, Steering Shaft Lower Bushing		250000-	1
K 2471 R	Pipe Plug, Transmission Case Oil Level, R. H.	482252-	257158-	1
K 3083 R	Stud, Gear Cover to Case	410000-	250000-	1
ENGINE				
A 28 R	Cover, L. H. Main Bearing	410000-	250000-	1
A 191 R	Bolt, R. H. Main Bearing	410000-	250000-	1
A 256 R	Bolt, L. H. Main Bearing	410000-	250000-	1
A 302 R	Shim, Main Bearing, Laminated	410000-	250000-	1
A 401 R	Gasket, Crankcase Cover	410000-		1
A 423 R	Gasket, L. H. Main Bearing Housing	410000-424024	250000-251485	1
A 424 R	Gasket, L. H. Main Bearing Cover	410000-	250000-	1
A 524 R	Cover, Crankcase	410000-		1
A 902 R	Cover, Crankcase		250000-	1
A 903 R	Gasket, Crankcase Cover		250000-	1
A 1147 R	Gasket, L. H. Main Bearing Housing to Case	424025-	251486-	1
AA 239 R	Housing, A22 R, Main Bearing, with Cap, R. H.	410000-	250000-	1
AA 242 R	Housing, A23 R, Main Bearing, with Cap, L. H.	410000-424024	250000-251485	1
AA 244 R	Spacer, Flywheel, with D2124 R Cork Washer	410000-	250000-	1
AA 246 R	Flywheel, A29 R, with Bolts and Driving Pin	410000-487999	250000-	2
AA 397 R	Bushing, Main Bearing (2 Halves)	410000-	250000-	1
AA 804 R	Housing, A1146 R, Main Bearing, with Cap, L. H.	424025-	251486-	1
AA 2280 R	Flywheel, A2449 R, with Bolts	488000-		2
D 1080 R	Screw, Flywheel, Locating	410000-	250000-	1
D 2009 R	Pin, Flywheel Spacer Driving	410000-	250000-	1
D 2124 R	Cork Washer, Flywheel Spacer	410000-	250000-	1
E 2142 R	Pipe Plug, L. H. Main Bearing	410000-	250000-	1
E 2142 R	Pipe Plug, Crankcase Oil Drain	410000-	250000-	1
PISTONS, CONNECTING RODS, CRANKSHAFT				
A 103 R	Gear, Crankshaft	410000-	250000-	1
A 303 R	Shim, Connecting Rod, Laminated	410000-	250000-	1
A 319 R	Lock Screw, Piston Pin (Set Screw)	410000-445509	250000-253655	1
A 1507 R	Snap Ring, Piston Pin	445510-487999	253656-	1
AA 382 R	Bolt with Nut and Cotter, Connecting Rod	410000-	250000-	1
AA 463 R	Connecting Rod, A107 R, Complete "Exchange"			
	Connecting Rod, Complete. Old Connecting Rod must Accompany Order for new Rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange" Rods that are not accompanied with Old Rod will be filled with new Rods and billed at full price			
AA 737 R	Piston, A1109 R, with Rings, .030" Oversize	410000-487999	250000-	1
AA 840 R	Piston, A61 R, with Rings, Standard (Substitute for A1505 R)	410000-445509	250000-253655	1
AA 1423 R	Ring, Piston, .030" Oversize (Set of 10)	410000-487999	250000-	1
AA 1572 R	Piston, A1893 R, with Rings, .045" Oversize	410000-487999	250000-	1

4 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
	PISTONS, CONNECTING RODS, CRANKSHAFT—Continued			
AA 1607 R	Ring, Piston, Oil Control (1 Ring).....	410000-487999	250000-	1
AA 1620 R	Pin, Piston (Set Screw Type) (Set of 2).....	410000-445509	250000-253655	1
AA 1621 R	Pin, Piston (Snap Ring Type) (Set of 2).....	445510-487999	253656-	1
AA 1622 R	Pin, Piston, .005" Oversize (Set of 2) (Set Screw Type)	410000-445509	250000-253655	1
AA 1623 R	Pin, Piston, .005" Oversize (Set of 2) (Snap Ring Type).....	445510-487999	253656-	1
AA 1626 R	Bushing, Piston Pin (Set of 2).....	410000-487999	250000-	1
AA 1955 R	Ring, Piston, Oil Control, .045" Oversize (1 Ring)....	410000-487999	250000-	1
AA 2024 R	Crankshaft and Cylinder Block Replacement As- sembly; Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets.....	410000-487999	250000-
AA 2033 R	Crankshaft, A102 R, with Gear, Main Bearings, Con- necting Rods and Shims (Substitute for AA237 R)....	410000-487999	250000-	1
AA 2047 R	Ring, Piston, Standard (8 Compression and 2 Oil Control).....	410000-487999	250000-	1
AA 2048 R	Ring, Piston, .045" Oversize (8 Compression and 2 Oil Control).....	410000-487999	250000-	1
AA 2210 R	Connecting Rod, A2344 R, Complete.....	488000-	1
AA 2210 R	"Exchange" Connecting Rod, Complete. Old Connect- ing Rod must Accompany order for new Rod in order to get the benefit of difference in price be- tween a New Rod and an Exchange Rod. All orders received for "Exchange" Rods that are not Ac- companied with Old Rod will be Filled with New Rods and Billed at Full Price.....	488000-	1
AA 2224 R	Bushings, Piston Pin (Set of 2).....	488000-	1
AA 2225 R	Pin, Piston (Set of 2).....	488000-	1
AA 2226 R	Pin, Piston, .005" Oversize (Set of 2).....	488000-	1
AA 2270 R	Crankshaft and Cylinder Block Replacement As- sembly; Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and necessary Gaskets.....	488000-
AA 2272 R	Crankshaft, A2360 R, with Gear, Main Bearings, Connecting Rods and Shims (Substitute for AA- 2215 R).....	488000-	1
AA 2347 R	Piston, A2338 R, with Rings (Standard).....	488000-	1
AA 2348 R	Ring, Piston (Set of 10).....	410000-
AA 2357 R	Piston, A2582 R, with Rings, .045" Oversize.....	488000-
AA 2358 R	Ring, Piston, .045" Oversize (Set of 10).....	410000-	250000-	1
D 342 R	Woodruff Key, in Crankshaft Gear.....	410000-	250000-	1
D 2824 R	Snap Ring, Piston Pin.....	488000-	1
	CYLINDER			
A 426 R	Gasket, Cylinder to Case.....	410000-	250000-	2
A 2326 R	Stud, Cylinder Head (8 used).....	488000-	2
A 2330 R	Oil Pipe in Cylinder, Tappet Lever.....	488000-	2
A 2353 R	Stud, Cylinder Head (1 used).....	488000-	2
A 2354 R	Washer, Oil Outlet (on Cylinder Head Stud).....	488000-	2
A 2355 R	Gasket, Oil Outlet Washer.....	488000-	2
A 2356 R	Bushing on Tappet Lever Oil Pipe to Cylinder....	488000-	3
AA 436 R	Cylinder Block, A732 R, including Upper Water Pipe and Fan Support Assembly.....	410000-410189
AA 437 R	Cylinder Block, A732 R, with Studs.....	410190-487999	250000-	2
AA 534 R	Cylinder Block, A732 R, and Upper Water Pipe As- sembly, with Pistons, Piston Rings and Gaskets....	410000-410189
AA 535 R	Cylinder Block, A732 R, with Pistons, Piston Rings and Gaskets.....	410190-487999	250000-
AA 2024 R	Cylinder Block and Crankshaft Replacement As- sembly; Consisting of Cylinder Block with Pistons, Piston Rings, Piston Pins, Crankshaft with Gear, Main Bearings, Connecting Rods and necessary Gaskets.....	410000-487999	250000-
AA 2270 R	Cylinder Block and Crankshaft Replacement As- sembly; Consisting of Cylinder Block with Pistons, Piston Rings, Piston Pins, Crankshaft with Gear, Main Bearings, Connecting Rods and necessary Gaskets.....	488000-
AA 2286 R	Cylinder Block, A2324 R, with Studs.....	488000-	2

JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS 5

Part Number		Serial Number		Plate No.
		A, AN, AW	AR, AO	
CYLINDER—Continued				
AA 2327 R	Cylinder Block, A2324 R, with Pistons, A2338 R, Piston Rings and Gaskets.....	488000—		
AB 1898 R	Cock, Compression Relief.....	410000—	250000—	2
C 719 R	Stud, Cylinder to Case.....	410000—	250000—	2
C 1479 R	Stud, Front End Support to Cylinder (Substitute D475 R Capscrew).....	410000—		
C 1823 R	Stud, Cylinder Head.....	410000-487999	250000—	2
CYLINDER HEAD, MANIFOLD, VALVES				
321 R	Gasket, Carburetor to Manifold.....	410000—	250000—	2
A 35 R	Guide, Valve.....	410000-487999	250000—	2
A 36 R	Manifold.....	410000-487999		2
A 117 R	Stud, Manifold, Long (7/16" x 6").....	410000-487999		2
A 125 R	Stud, Manifold, Medium (7/16" x 5-1/2").....	410000-487999	250000—	2
A 126 R	Stud, Manifold, Short (7/16" x 4-3/8").....	410000-487999		2
A 130 R	Lock Washer, Valve Stem (Half).....	410000-487999	250000—	2
A 245 R	Cap, Valve Spring.....	410000-487999	250000—	2
A 356 R	Spring, Valve.....	410000—	250000—	2
A 384 R	Pipe, Cylinder Head Water Inlet.....	410000-487999		2
A 404 R	Gasket, Cylinder Head.....	410000-487999	250000—	2
A 405 R	Gasket, Manifold.....	410000-487999	250000—	2
A 933 R	Pipe, Cylinder Head Water Inlet.....		250000—	2
A 1003 R	Manifold.....		250000—	2
A 1004 R	Stud, Manifold, L. H. (7/16" x 6-1/2").....		250000—	2
A 2093 R	Pipe Plug, Cylinder Head Drain.....	410000—	250000—	2
A 2327 R	Pipe, Cylinder Head Water Inlet.....	488000—		2
A 2328 R	Gasket, Cylinder Head Water Inlet.....	488000—		2
A 2329 R	Gasket, Cylinder Head.....	488000—		2
A 2332 R	Lock Washer, Valve Stem (Half).....	488000—		2
A 2333 R	Cap, Valve Spring.....	488000—		2
A 2383 R	Manifold.....	488000—		2
A 2384 R	Gasket, Manifold.....	488000—		2
A 2385 R	Stud, Manifold (7/16" x 3-1/2").....	488000—		2
A 2386 R	Stud, Manifold (7/16" x 5-3/8").....	488000—		2
A 2467 R	Guide, Valve.....	488000—		2
AA 464 R	Cylinder Head, A587 R, with Valve Guides.....	410000-487999	250000—	2
AA 465 R	Cylinder Head, A587 R, with Valves and Springs.....	410000-487999	250000—	
AA 1615 R	Sleeve, Push Rod (Set of 2).....	410000-487999	250000—	2
AA 1652 R	Lead Washer, Cylinder Head Stud (9 used) (Box of 50).....	410000—	250000—	2
AA 1810 R	Valve, Intake (Set of 2).....	410000-487999	250000—	2
AA 1811 R	Valve, Exhaust (Set of 2).....	410000-487999	250000—	2
AA 2329 R	Cylinder Head, A2325 R, with Valve Guides and Studs.....	488000—		2
AA 2330 R	Cylinder Head, A2325 R, with Valves and Studs.....	488000—		
AA 2332 R	Valve, Intake (Set of 2).....	488000—		2
AA 2333 R	Valve, Exhaust (Set of 2).....	488000—		2
B 359 R	Stud, Manifold, R. H. (7/16" x 4-3/4").....		250000—	2
B 359 R	Stud, Manifold (7/16" x 4-3/4").....	488000—		2
B 504 R	Stud, Manifold, Long (7/16" x 5-3/4").....		250000—	2
D 488 R	Stud, Cylinder Head Water Inlet Pipe to Cylinder Head (1/2" x 2") (2 used).....	488000—		2
CAMSHAFT				
A 104 R	Camshaft.....	410000-424024	250000-251485	3
A 119 R	Stud, Camshaft Gear to Cam Shaft.....	435595—	252710—	3
A 253 R	Plate, Camshaft Gear Locking.....	410000—	250000—	3
A 355 R	Spring, Camshaft Thrust.....	410000—	250000—	3
A 425 R	Gasket, Camshaft Bearing Housing.....	410000—	250000—	3
A 1142 R	Camshaft.....	424025—	251486—	3
AA 227 R	Housing, A31 R, with Bearing Cup, Camshaft, L. H.	410000—	250000—	3
AA 1047 R	Gear, A30 R, Camshaft, with Stud and Nut.....	410000—	250000—	3
JD 7250 R	Cup, Camshaft Bearing.....	410000—	250000—	3
JD 7358 R	Cone with Rollers, Camshaft Bearing.....	410000—	250000—	3
CAM FOLLOWERS				
A 178 R	Support, Cam Follower Guide.....	410000—	250000—	3
A 616 R	Guide, Cam Follower.....	410000-424024	250000-251485	3
A 1143 R	Guide, Cam Follower.....	424025-442150	251486-253520	3
A 1595 R	Guide, Cam Follower.....	442151—	253521—	3
AA 377 R	Cam Follower.....	410000-435282	250000-252684	3
AA 958 R	Cam Follower.....	435283—	252685—	3

6 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
TAPPETS				
A 105 R	Lever, Tappet.....	410000-487999	250000-	3
A 129 R	Rod, Tappet.....	410000-435282	250000-252684	3
A 131 R	Adjusting Screw, Tappet Lever.....	410000-435282	250000-252684	3
A 139 R	End, Tappet Rod.....	410000-435282	250000-252684	3
A 172 R	Nut, Tappet Oiler Pipe Packing.....	410000-487999	250000-	3
A 173 R	Nut, Tappet Lever Stud.....	410000-487999	250000-	3
A 176 R	Stud, Tappet Lever Bracket.....	410000-487999	250000-	3
A 234 R	Spacer, Tappet Lever Shaft.....	410000-487999	250000-	3
A 260 R	Washer, Tappet Lever Shaft.....	410000-	250000-	3
A 386 R	Pipe, Tappet Lever Oiler.....	410000-424024	3
A 437 R	Gasket, Tappet Lever Bracket Stud.....	410000-	250000-	3
A 439 R	Washer, Tappet Oil Pipe Packing (12 used).....	410000-487999	250000-	3
A 601 R	Shaft, Tappet Lever.....	410000-487999	250000-	3
A 602 R	Snap Ring, Tappet Lever Shaft.....	410000-	250000-	3
A 772 R	Nut, Tappet Lever Cover (Acorn).....	410000-	250000-	3
A 1010 R	Pipe, Tappet Lever Oiler.....	250000-251485	3
A 1186 R	Pipe, Tappet Lever Oiler.....	424025-459999	3
A 1193 R	Pipe, Tappet Lever Oiler.....	251486-254702	3
A 1290 R	Rod, Tappet.....	435283-	252685-	3
A 1291 R	Adjusting Screw, Tappet Lever.....	435283-	252685-	3
A 1574 R	Bushing, Tappet Oiler Pipe.....	460000-487999	254703-	3
A 1575 R	Gasket, Tappet Lever Cover.....	410000-	250000-	3
A 1818 R	Pipe, Tappet Lever Oiler.....	460000-487999	3
A 1819 R	Pipe, Tappet Lever Oiler.....	254703-	3
A 2346 R	Lever, Tappet.....	488000-	3
A 2347 R	Cover, Tappet Lever.....	488000-	3
A 2349 R	Shaft, Tappet Lever.....	488000-	3
A 2350 R	Bracket, Tappet Lever Shaft.....	488000-	3
A 2356 R	Bushing on Tappet Lever Oiler Pipe in Cylinder Block.....	488000-	3
A 2363 R	Stud, Tappet Lever Bracket (2 used).....	488000-	3
A 2421 R	Clip, Tappet Lever Oiler Pipe.....	488000-	3
AA 229 R	Cover, A68 R, Tappet Lever, with Oil Trough.....	410000-487999	250000-	3
AA 1652 R	Lead Washer, Tappet Lever Stud (Box of 50).....	410000-487999	250000-	3
AA 2260 R	Pipe, Tappet Lever Oiler.....	488000-	3
D 376 R	Spring, Tappet Lever Spacer.....	410000-	250000-	3
MUFFLER AND EXHAUST PIPE				
629 R	Washer, Exhaust Opening Cover Screws.....	250000-	3
A 464 R	Gasket, Exhaust Pipe.....	410000-487999	4
AA 299 R	Pipe, Exhaust, with Flange.....	410000-476999	4
AA 300 R	Muffler, Complete.....	410000-476999	3
AA 472 R	Muffler Complete (15" High).....	410000-476999	250000-	3
AA 587 R	Pipe, Exhaust, with Flange, A1006 R.....	250000-	4
AA 685 R	Muffler Complete (Substitute AA1050 R).....	250000-	3
*AA 702 R	Elbow, A1066 R, Lower, Muffler and Spark Arrestor.....	250000-	3
AA 888 R	Cover, Exhaust Opening.....	250000-	3
AA 1050 R	Muffler, Complete (Substitute for AA685 R).....	250000-	3
AA 1777 R	Pipe, Exhaust, with Flange.....	477000-487999	4
AA 1778 R	Muffler Complete.....	477000-487999	3
AA 2213 R	Pipe, Exhaust, with Flange.....	488000-	4
AA 2214 R	Muffler Complete.....	488000-	3
*C 2000 R	Flange Casting, Muffler.....	250000-	3
*D 1922 R	Cap, Muffler.....	250000-	3
*D 1923 R	Finned Section, Muffler.....	250000-	3
*D 1924 R	Collar, Spacing Muffler.....	250000-	3
*D 1925 R	Stud, Muffler.....	250000-	3
GOVERNOR				
629 R	Washer, Governor Shaft.....	410000-424024	250000-251485	4
629 R	Washer, Magneto to Governor Case.....	410000-	250000-	4
1450 R	Pipe Plug in Governor Case Oil Hole.....	410000-424024	250000-251485	4
A 41 R	Housing, L. H., Governor Bearing.....	410000-	250000-	4
A 42 R	Arm, Governor.....	410000-415708	4
A 43 R	Flange, Magneto Drive.....	410000-424024	250000-251485	4
A 45 R	Case, Governor.....	410000-424024	250000-251485	4
A 73 R	Gear, Governor Drive.....	410000-	250000-	4
A 74 R	Gear, Fan Drive, Bevel.....	410000-424024	250000-251485	4
A 136 R	Shaft, Governor Lever.....	410000-415708	4
A 184 R	Shaft, Governor.....	410000-424024	250000-251485	4
A 235 R	Lever, Inside Governor.....	410000-424024	250000-251485	4

*Repairs for AA685 R Muffler.

JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS 7

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
GOVERNOR—Continued				
A 369 R	Snap Ring, Governor Shaft	410000—	250000—	4
A 428 R	Gasket, L. H. Governor Bearing Housing (Thick)	410000—	250000—	4
A 429 R	Gasket, Governor Case	410000-424024	250000-251485	4
A 499 R	Nut, Governor Shaft End (Special Grip)	410000-424024	250000-251485	4
A 584 R	Spring, Governor Bearing	410000—	250000—	4
A 1035 R	Shaft, Governor Lever	415709-424024	250000-251485	4
A 1036 R	Arm, Governor	415709-424024	250000-251485	4
A 1171 R	Gasket, L. H. Governor Bearing Housing (Thin)	424025—	251486—	4
A 1172 R	Shaft, Governor	424025—	251486—	4
A 1175 R	Shaft, Governor Lever	424025—	251486—	4
A 1183 R	Gasket, Governor Case	424025—	251486—	4
A 1241 R	Arm, Governor	424025—	251486—	4
A 2303 R	Flange, Magneto Drive	488000—	258800—	4
A 2482 R	Shoulder Screw, Governor Case to Case (3/4" x 2") (2 used)	488000—		4
A 2495 R	Shoulder Screw, Governor Case to Case (3/4" x 2-1/8") (1 used)	488000—		4
AA 255 R	Sleeve, Governor Shaft	410000-424024	250000-251485	4
AA 813 R	Case, A1170 R, Governor, with Lever Shaft Bushing	424025-487999	251486—	4
AA 814 R	Sleeve, Governor Shaft	424025—	251486—	4
AA 1695 R	Gear and Pinion Assembly, Fan Drive Bevel (1 A1174 R and 1 A1177 R)	424025—	251486—	4
AA 2262 R	Case, A2422 R, Governor, with Lever Shaft Bushing	488000—		4
AC 667 R	Weight, Governor	410000—	250000—	4
B 271 R	Lever, Inside Governor	424025—	251486—	4
B 276 R	Snap Ring, Governor Bearing	424025—	251486—	4
B 280 R	Washer, Governor Bearing Spring	424025—	251486—	4
B 281 R	Flange, Magneto Drive	424025-487999	251486-258799	4
B 432 R	Bushing, Governor Lever Shaft (Upper)	424025—	251486—	4
C 902 R	Pin, Governor Weight	410000—	250000—	4
C 998 R	Bearing, Governor Thrust	410000—	250000—	4
D 342 R	Woodruff Key in Governor Drive Gear and Magneto Flange	410000—	250000—	4
D 342 R	Woodruff Key, Fan Drive Bevel Gear	410000—	250000—	4
JD 7655 R	Cup, Governor Shaft Bearings, L. H. and R. H.	410000—	250000—	4
JD 7656 R	Cone with Rollers Governor Shaft Bearings, L. H. and R. H.	410000—	250000—	4
JD 7657 R	Balls and Retainer, Governor Shaft Bearings, L. H. and R. H.	410000—	250000—	4
CONTROLS				
A 58 R	Bracket, Speed Control Shaft	410000-413398		5
A 80 R	Lever, Speed Control Hand	410000—		5
A 118 R	Rod, Carburetor Throttle	410000-424024		5
A 128 R	Shaft, Speed Control	410000-413398		5
A 181 R	Rod, Speed Control	410000-415708		5
A 183 R	Rod, Clutch Operating	410000—		5
A 241 R	Washer, Speed Control Shaft (Upper)	410000—	250000—	5
A 244 R	Clamp, Speed Change Spring	410000-415708		5
A 357 R	Spring, Speed Change (Flat)	410000-415708		5
A 586 R	Washer, Speed Control Shaft (Lower)	410000—	250000—	5
A 908 R	Rod, Clutch Operating		250000—	5
A 942 R	Bracket, Clutch Lever		250000—	5
A 944 R	Bracket, Speed Control Shaft		250000—	5
A 945 R	Shaft, Speed Control		250000—	5
A 947 R	Lever, Speed Control, Hand		250000—	5
A 948 R	Rod, Carburetor Throttle		250000-251485	5
A 949 R	Rod, Speed Control		250000-251485	5
A 958 R	End, Speed Control Rod		250000—	5
A 1034 R	Spring, Speed Change (Flat)	415709-424024	250000-251485	5
A 1037 R	Rod, Speed Control	415709-424024		5
A 1184 R	Rod, Carburetor Throttle Control	424025—		5
A 1185 R	Rod, Speed Control	424025—		5
A 1188 R	Rod, Carburetor Throttle		251486—	5
A 1189 R	Rod, Speed Control		251486—	5
A 1197 R	Bushing, Clutch Lever Pivot	424169—	250000—	5
A 2494 R	Clamp, Speed Change Spring		250000—	5
AA 794 R	Lever, Clutch Operating, with Pivot Bushing		250000—	5
AA 1575 R	Bearing, A1909 R, Steering Shaft with Bushing	410000—		5
AA 1595 R	Lever, Clutch Operating, with Pivot Bushing	410000—		5
B 273 R	Spring, Speed Change (Flat)	424025—	251486—	5
B 274 R	Clamp, Speed Change Spring	415709—		5
B 390 R	Bracket, Speed Control Shaft	413399—		5

8 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
CONTROLS—Continued				
B 391 R	Shaft, Speed Control.....	413399—		5
B 1447 R	Rod, Fuel Control.....	477000—		5
C 1438 R	Spring, Speed Control Shaft.....	410000—	250000—	5
D 157 R	End, Throttle Rod.....	410000—477009	250000—256780	5
D 157 R	End, Speed Control Rod.....	410000—		5
D 393 R	Yoke, Clutch Operating Rod.....	410000—	250000—	5
D 1994 R	Pin, Clutch Operating Rod Yoke.....	410000—	250000—	5
D 1994 R	Pin, Clutch Operating Hand Lever to Rod.....	410000—	250000—	5
D 2031 R	Bolt, Clutch Operating Hand Lever Pivot.....	410000—	250000—	5
D 2887 R	End, Throttle Rod.....	477010—	256781—	5
E 2057 R	Washer on Speed Control Rod.....	410000—	250000—	5
E 2057 R	Washer on Throttle Rod.....	410000—	250000—	5
K 3151 R	Washer, Speed Control Rod.....		250000—	5
CRANKCASE BREATHER				
AA 359 R	Breather Stack Complete.....	410000—		4
AA 360 R	Breather Body Assembly.....	410000—		4
AA 551 R	Breather Cover, A900 R, and Stack.....		250000—	4
D 1950 R	Spring, Clamp.....	410000—		4
D 1951 R	Gasket, Filter Core.....	410000—	250000—	4
D 1952 R	Core, Breather Filter.....	410000—	250000—	4
D 1957 R	Gasket, Stack.....	410000—		4
D 2119 R	Clip, Breather Body.....	410000—449118		4
D 2120 R	Clamp, Breather Cover.....	410000—		4
D 2765 R	Clip, Breather Body.....	449119—		4
K 3151 R	Washer, Breather Cover Clamp.....	410000—		4
CRANKCASE VENTILATOR				
A 534 R	Pipe, Ventilator.....	410000—424024		4
A 535 R	Packing, Ventilator Pipe (2 used).....	410000—	250000—	4
A 904 R	Pipe, Ventilator.....		250000—251485	4
A 1187 R	Pipe, Ventilator.....	424025—476999		4
A 1190 R	Pipe, Ventilator.....		251486—	4
A 2166 R	Pipe, Ventilator.....	477000—		4
C 1705 R	Packing Nut, Ventilator Pipe (2 used).....	410000—	250000—	4
LUBRICATING SYSTEM—OIL PUMP				
A 25 R	Body, Oil Pump.....	410000—424024	250000—251485	5
A 27 R	Cover, Oil Pump.....	410000—424024	250000—251485	5
A 46 R	Elbow, Oil Pump Strainer.....	410000—424024	250000—251485	5
A 140 R	Valve, Oil Relief.....	410000—424024	250000—251485	5
A 156 R	Gear, Oil Pump Idler and Shaft.....	410000—424024	250000—251485	5
A 177 R	Nut, Oil Relief Valve.....	410000—424024	250000—251485	5
A 354 R	Spring Oil Pump Relief Valve, Pressure Regulating (Coil).....	410000—424024	250000—251485	5
A 388 R	Pipe, Oil Pump Strainer.....	410000—424024	250000—251485	5
A 408 R	Gasket, Oil Pump Cover.....	410000—424024	250000—251485	5
A 422 R	Gasket, Oil Pump Body.....	410000—424024	250000—251485	5
A 495 R	Gear, Oil Pump Drive.....	410000—424024	250000—251485	5
A 496 R	Gear, Oil Pump Drive, and Shaft.....	410000—424024	250000—251485	5
A 1144 R	Shaft, Oil Pump Drive (14-5/16" Long).....	425025—442150	251486—253520	5
A 1596 R	Gear, Oil Pump Drive, Top.....	442151—	253521—	5
A 1597 R	Bearing, Oil Pump Drive Gear.....	442151—	253521—	5
A 1598 R	Gasket, Oil Pump Drive Gear Bearing.....	442151—	253521—	5
A 1599 R	Shaft, Oil Pump Drive (13-31/32" Long).....	442151—	253521—	5
A 2415 R	Body, Oil Pump.....	488000—		5
AA 2258 R	Strainer Screen Complete, Oil Pump.....	488000—		5
AB 284 R	Strainer Screen Complete, Oil Pump.....	424025—487999	251486—	5
AC 445 R	Strainer Complete, Oil Pump.....	410000—424024	250000—251485	5
B 241 R	Body, Oil Pump.....	424025—487999	251486—	5
B 243 R	Gear, Oil Pump Drive, Bottom.....	424025—	251486—	5
B 244 R	Shaft, Oil Pump Idler Gear.....	424025—	251486—	5
B 245 R	Gear, Oil Pump Idler.....	424025—	251486—	5
B 246 R	Gasket, Oil Pump Cover.....	424025—	251486—	5
B 247 R	Cover, Oil Pump.....	424025—	251486—	5
B 250 R	Coupling, Oil Pump Drive Shaft.....	424025—	251486—	5
B 251 R	Gasket, Oil Pump Body to Case.....	424025—	251486—	5
B 252 R	Gear, Oil Pump Drive, Top.....	424025—442150	251486—253520	5
B 253 R	Bearing, Oil Pump Top Drive Gear.....	424025—442150	251486—253520	5
C 1490 R	Gasket, Oil Pump Strainer Body.....	410000—424024	250000—251485	5
D 403 R	Key, Oil Pump Drive Gear.....	410000—424024	250000—251485	5
D 453 R	Washer, Oil Pump Relief Valve.....	410000—424024	250000—251485	5

JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS 9

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
LUBRICATING SYSTEM—OIL PUMP				
—Continued				
D 465 R	Gasket, Oil Pump Relief Valve Cap (Copper)	410000-424024	250000-251485	5
E 2207 R	Woodruff Key, Oil Pump Drive Shaft	424025-	251486-	5
K 2525 R	Pipe Plug in Oil Pump Body (2 used)	488000-		5
OIL FILTER AND INDICATOR				
A 174 R	Ball in Filter By-Pass	410000-424024	250000-251485	6
A 179 R	Cap, Oil Filter Relief Valve	410000-416504		6
A 354 R	Spring, Filter Head Pressure Regulating Valve (Coil)	424025-426561	251486-251820	6
A 515 R	Body, Oil Filter	410000-424024	250000-251485	6
A 516 R	Gasket, Oil Filter Head	410000-424024	250000-251485	6
A 518 R	Stud, Oil Filter	410000-	250000-	6
A 519 R	Gasket, Oil Filter Bottom (Rubber)	410000-	250000-	6
A 520 R	Nut, Oil Filter Bottom	410000-487999	250000-257999	6
A 521 R	Gasket, Oil Filter Bottom Nut (Copper)	410000-	250000-	6
A 522 R	Bottom, Oil Filter	410000-	250000-	6
A 523 R	Spring, Oil Filter Bottom	410000-487999	250000-257999	6
A 1044 R	Head, Oil Filter	416505-424024	250000-251485	6
A 1148 R	Head, Oil Filter	424025-426561	251486-251820	6
A 1149 R	Gasket, Oil Filter Head to Filter Body	424025-	251486-	6
A 1150 R	Cover, Oil Filter Head	424025-426561	251486-251820	6
A 1151 R	Gasket, Oil Filter Head Cover	424025-	251486-	6
A 1152 R	Body, Oil Filter	424025-	251486-	6
A 1196 R	Clip, Oil Pressure Regulating Valve, Leaf Spring	424025-	251486-	6
A 1278 R	Bushing, Filter Head Cover, Oil Pressure Regulating Valve	426562-	251821-	6
A 1279 R	Head, Oil Filter	426562-	251821-	6
A 1280 R	Spring, Oil Pressure Regulating Valve (Coil)	426562-	251821-	6
*A 2440 R	Nut, Oil Filter Bottom	488000-	258000-	6
*A 2441 R	Spring, Oil Filter Bottom	488000-	258000-	6
*A 2444 R	Snap Ring, Oil Filter End Plate Retaining	488000-	258000-	6
A 2530 R	Spacer, Oil Filter Bottom Plate	490339-	258123-	6
AA 283 R	Piston and Rod, Oil Indicator	410000-424024	250000-251485	6
AA 357 R	Filter, Oil (Metal)	410000-487999	250000-257999	6
AA 670 R	Head, A1044 R, Oil Filter, with Cap and Gasket	410000-416504		6
AA 824 R	Spring, Leaf with Centering Button, Oil Pressure Regulating Valve	424025-	251486-	6
AA 861 R	Cover, A1277 R, Oil Filter Head, with Bushing and Relief Spring (Substitute for AA934 R)	426562-	251821-	6
AA 934 R	Cover, A1277 R, with Bushing, Oil Filter Head (Substitute AA861 R)			
*AA 2092 R	Filter, Oil (Replacement)	488000-	258000-	6
*AA 2095 R	Plate, Oil Filter End	488000-	258000-	6
*AA 2096 R	Outlet, Oil Filter	488000-	258000-	6
AA 2454 R	Filter, Oil (Replacement)	410000-487999	250000-257999	6
NOTE: This assembly consists of all parts necessary to replace metal filter AA357 R with replacement filter AA2092 R.				
AB 292 R	Gauge, Oil Pressure	424025-476999	251486-	6
AB 326 R	Spring, Leaf, with Centering Button, Oil Filter By-Pass	424025-	251486-	6
AB 1549 R	Gauge, Oil Pressure	477000-		6
B 430 R	Button, Oil Filter By-Pass Valve Leaf Spring	424025-	251486-	6
B 439 R	Spring, Oil Filter By-Pass Valve (Coil)	424025-	251486-	6
D 380 R	Spring, Oil Indicator	410000-424024	250000-251485	6
D 465 R	Gasket, Oil Filter By-Pass Valve Cap	410000-424024	250000-251485	6
D 793 R	Body, Crank Case Oil Level Cock	410000-	250000-	6
D 794 R	Plug, Crank Case, Oil Level Cock	410000-	250000-	6
D 2001 R	Spring, Filter Head By-Pass Valve (Coil)	410000-424024	250000-251485	6
D 2425 R	Pilot, Oil Relief Coil Spring	424024-	251486-	6
D 2427 R	Screw, Pressure Regulating	424025-	251486-	6
D 2428 R	Cap, Oil Filter By-Pass Valve	416505-424024	250000-251485	6
K 2573 R	Washer, Oil Filter Bottom Nut	410000-	250000-	6

*Also repairs for tractors Serial Numbers 410000-487999 and 250000-257999 equipped with AA2454 R.

10 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
OIL PIPES AND FITTINGS				
A 259 R	Bushing, Reducer, Indicator Oil Pipe to Governor . . .	410000-424024	250000-251485	6
A 374 R	Nut, Solder Bushing, Governor and Gauge Oil Pipe. .	424025-	251486-	6
A 374 R	Nut, Solder Bushing, Discharge Oil Pipe.	410000-424024	250000-251485	6
A 465 R	Body, Solder Bushing, Oil Pump Discharge Pipe to Filter Head.	410000-424024	250000-251485	6
A 465 R	Body, Solder Bushing, Oil Pump Discharge Pipe to Case	410000-411365	251486-	6
A 465 R	Body, Solder Bushing, Oil Gauge Pipe to Filter Head. .	424025-	251486-	6
A 465 R	Body, Solder Bushing, Oil Pump Discharge Pipe to Filter Head.	410000-424024	250000-251485	6
A 782 R	Body, Solder Bushing, Oil Pump Discharge Pipe to Case	411366-424024	250000-251485	6
A 1252 R	Body, Solder Bushing, Oil Gauge Pipe to Governor Case	424025-	251486-	6
A 2330 R	Oil Pipe in Cylinder, Tappet Lever	488000-	250000-	6
A 2354 R	Washer, Oil Outlet (on Cylinder Head Stud)	488000-	250000-	6
A 2355 R	Gasket, Oil Outlet Washer	488000-	250000-251485	6
A 2356 R	Bushing on Tappet Lever Oil Pipe in Cylinder	488000-	250000-251485	6
*A 2498 R	Pipe, Oil Pressure Gauge	489984-	250000-	3
*A 2499 R	Sleeve on Oil Pressure Gauge Pipe	489984-	250000-	6
*A 2500 R	Nut on Oil Pressure Gauge Pipe	489984-	250000-	46
*A 2501 R	Elbow, Oil Pressure Gauge to Oil Pressure Gauge Pipe . .	489984-	250000-	6
*A 2502 R	Connector, Governor Case to Oil Pressure Gauge Pipe . .	489984-	250000-	46
AA 280 R	Pipe, Main Bearing Oil, R. H.	410000-	250000-	6
AA 281 R	Pipe, Main Bearing Oil, L. H.	410000-	250000-	6
AA 282 R	Pipe, Indicator Oil	410000-424024	250000-251485	6
AA 456 R	Pipe, Pump Discharge Oil	411366-424024	250000-251485	6
AA 475 R	Pipe, Pump Discharge Oil	410000-411365	250000-	6
AA 802 R	Pipe, Pump Discharge Oil	424025-	251486-	6
AA 819 R	Pipe, Oil Filter to Governor and Oil Gauge	424025-	251486-	6
AA 2259 R	Pipe, Tappet Lever, Pump to Cylinder	488000-	250000-	6
AA 2260 R	Pipe, Tappet Lever Oil	488000-	250000-	6
AA 2310 R	Pipe, Oil Pressure Gauge with Fittings (Substitute for AA1818 R)	477000-	489983-	6
B 258 R	Nut, Solder Bushing (1/2") Oil Pump Discharge Pipe. .	424025-	251486-	6
B 259 R	Gland, Solder Bushing (1/2") Oil Pump Discharge Pipe	424025-	251486-	6
B 1479 R	Elbow, Oil Pressure Gauge.	477000-489983	250000-	6
D 392 R	Body, Solder Bushing, Oil Indicator Pipe to Filter Head.	410000-424024	250000-251485	6
D 392 R	Body, Solder Bushing, R. H. Main Bearing Oil Pipe to Filter Head.	410000-	250000-	6
D 392 R	Body, Solder Bushing, R. H. Main Bearing Oil Pipe to R. H. Main Bearing Housing	410000-	250000-	6
D 392 R	Body, Solder Bushing, L. H. Main Bearing Oil Pipe to Filter Head.	410000-	250000-	6
D 392 R	Body, Solder Bushing, L. H. Main Bearing Oil Pipe to L. H. Main Bearing Housing	410000-	250000-	6
D 392 R	Body, Solder Bushing, Governor Case to Pipe, Indi- cator Oil (on Outside of Governor Case)	477000-489983	250000-251485	6
D 458 R	Nut, Packing, Oil Pump Discharge Oil Pipe.	411366-424024	250000-251485	6
D 1935 R	Gland, Solder Bushing, Oil Pump Discharge Oil Pipe . .	410000-424024	250000-251485	6
D 1935 R	Gland, Solder Bushing, Governor and Oil Gauge Oil Pipe	424025-	251486-	6
D 2081 R	Packing Washer, Oil Pump Discharge Pipe (3 used) . .	411366-424024	250000-251485	6
D 2440 R	Body, Solder Bushing, Oil Pump Discharge Pipe to Filter Head.	424025-	251486-	6
D 2440 R	Body, Solder Bushing, Oil Pump Discharge Pipe to Pump	424025-	251486-	6
E 1994 R	Bushing, Tappet Lever Oil Pipe to Pump	488000-	250000-	6
E 1994 R	Bushing, Tappet Lever Oil Pipe to Oil Outlet Washer. .	488000-	250000-	6
E 2149 R	Nut, Solder Bushing, Main Bearing Oil Pipe	410000-	250000-	6
E 2149 R	Nut, Solder Bushing, Indicator Oil Pipe	410000-424024	250000-251485	6
E 2149 R	Nut, Solder Bushing, Oil Pressure Gauge Oil Pipe. . . .	477000-489983	250000-	6
E 2150 R	Gland, Solder Bushing, Main Bearing Oil Pipe	410000-	250000-	6
E 2150 R	Gland, Solder Bushing, Indicator Oil Pipe	410000-424024	250000-251485	6
E 2150 R	Gland, Solder Bushing, Oil Pressure Gauge Oil Pipe . .	477000-489983	250000-	6
E 2157 R	Nut, Solder Bushing, in Tappet Lever Oil Pipe, Pump to Cylinder	488000-	250000-	6
E 2158 R	Gland, Solder Bushing, in Tappet Lever Oil Pipe, Pump to Cylinder	488000-	250000-	6

*Also repairs for Model "A" Tractors Serial No. 477000-489983 inclusive on which the oil pressure gauge pipe has been replaced by an AA2310 R Assembly.

JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS 11

Part Number		Serial Number		Plate No.
		A, AN, AW	AR, AO	
FUEL SYSTEM				
A 307 R	Tee, Fuel Pipe	410000-410858		6
A 442 R	Cushion, Fuel Tank Front Support	410000-476999		7
A 443 R	Cushion, Fuel Tank Rear Support	410000-476999		7
A 460 R	Flange, Gasoline Outlet	477000-487999		7
A 1013 R	Cushion, Fuel Tank Front Support	477000-487999	250000-	7
A 1014 R	Cushion, Fuel Tank Rear Support		250000-	7
A 2404 R	Filler Neck, Gasoline	488000-		7
A 2406 R	Cushion, Fuel Tank Front Support	488000-		7
A 2491 R	Flange, Fuel Outlet	488000-		7
AA 204 R	Valve, Gasoline Shut-Off Needle	410000-410858		6
AA 266 R	Pipe, Gasoline	410000-410858		7
AA 267 R	Pipe, Fuel	410000-410858		7
AA 270 R	Strap, Fuel Tank	410000-476999	250000-	8
AA 271 R	Support, Fuel Tank Front, with Cushion	410000-476999		7
AA 272 R	Support, Fuel Tank Rear, with Cushion	410000-476999		7
AA 335 R	Clamp, Fuel Filter Bowl	410000-413854		6
AA 376 R	Tank, Fuel	410000-413878		7
AA 454 R	Gasoline Strainer Complete	410859-	250000-	6
AA 499 R	Filter, Fuel	410000-	250000-	6
AA 517 R	Bail, Fuel Filter Bowl	413855-	250000-	6
AA 518 R	Nut with Washer, Fuel Filter Adjusting	413855-	250000-	6
AA 519 R	Screen, Fuel Filter	410000-	250000-	6
AA 577 R	Tank, Fuel	413879-476999		7
AA 599 R	Tank, Fuel		250000-	7
AA 603 R	Support, Fuel Tank Front, with Cushion		250000-	7
AA 604 R	Support, Fuel Tank Rear, with Cushion		250000-	7
AA 623 R	Pipe, Gasoline		250000-	7
AA 624 R	Pipe, Fuel		250000-	7
AA 1769 R	Tank, Fuel	477000-487999		7
AA 1815 R	Support, Fuel Tank Front, with Cushion	477000-487999		7
AA 1816 R	Support, Fuel Tank Rear, with Cushion	477000-487999		7
AA 1885 R	Pipe, Gasoline	477000-		7
AA 1887 R	Pipe, Gasoline	410859-476999		7
AA 1888 R	Pipe, Fuel	410859-476999		7
AA 2064 R	Bowl and Gasket, Fuel Filter (Glass)	410000-	250000-	6
AA 2250 R	Tank, Fuel	488000-		7
AA 2253 R	Tank, Gasoline	488000-		7
AA 2254 R	Support, Fuel Tank Front, with Cushion	488000-		7
AA 2255 R	Support, Fuel Tank Rear, with Cushion	488000-		7
AA 2349 R	Pipe, Fuel	477000-		7
AB 609 R	Three-Way Cock		250000-	6
AB 1545 R	Three-Way Cock	477000-		6
AC 1079 R	Body, Fuel Filter, with Valve	410000-	250000-	6
AC 1080 R	Valve, Fuel Filter	413855-	250000-	6
AD 680 R	Three-Way Cock	410859-476999		6
AD 709 R	Cap, Filler	410000-	250000-	7
B 1451 R	Cushion, Fuel Tank Rear Support	477000-		7
B 1535 R	Indexing Stop, Three-Way Cock	477000-		6
B 1539 R	Filler Neck, Fuel	477000-		7
B 1540 R	Filler Neck, Gasoline	477000-487999		7
C 1778 R	Gasket, Fuel Filter, Cork	410000-	250000-	6
C 1827 R	Washer on Gasoline Tank to Hood Side Bolt	488000-		7
C 2378 R	Body, Fuel Filter	413855-	250000-	6
D 82 R	Flange, Fuel Outlet	477000-487999		7
D 392 R	Body, Solder Bushing, Fuel Pipe	410000-	250000-	6
D 2122 R	Packing Washer, Three-Way Cock	410859-	250000-	6
E 2149 R	Nut, Solder Bushing, on Gasoline Pipe (Used only with Copper Pipe)	410000-476999	250000-	7
E 2149 R	Nut, Solder Bushing, on Fuel Pipe (Used only with Copper Pipe)	410000-476999	250000-	7
E 2150 R	Gland, Solder Bushing, on Fuel Pipe (Used only with Copper Pipe)	410000-476999	250000-	7
E 2150 R	Gland, Solder Bushing, on Gasoline Pipe (Used only with Copper Pipe)	410000-476999	250000-	7
H 577 R	Flange, Gasoline Outlet	488000-		7

12 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
HOOD AND GRILLES				
A 230 R	Bracket, Hood Clip, R. H.	410000-476999	250000-	8
A 532 R	Bracket, Hood Clip, L. H.	410000-476999	250000-	8
A 2112 R	Plate, Center Grille	477000-		9
A 2181 R	Cushion, Hood	477000-		9
AA 363 R	Hood, Complete	410000-413878		8
AA 526 R	Hood, Complete	413879-476999		8
AA 601 R	Hood, Complete (AR only)		250000-	8
AA 886 R	Hood, Complete with Shields (AO only)		250000-	8
AA 1781 R	Hood, Complete	477000-487999		9
AA 1782 R	End Cap with Shutter Control Handle	477000-		9
AA 1787 R	Medallion	477000-		9
AA 2238 R	Grille, Radiator, R. H.	477000-		9
AA 2239 R	Grille, Radiator, L. H.	477000-		9
AA 2257 R	Hood, Complete	488000-		9
B 1441 R	Clip, Hood	477000-		9
B 1544 R	Cushion, Medallion	477000-		9
C 1573 R	Clip, Hood	410000-476999	250000-	8
K 3151 R	Washer on Hood and Grille to Radiator Side Bolts	477000-		9
K 3151 R	Washer on Medallion to Pedestal Screw	489971-		9
COOLING SYSTEM				
1452 R	Pipe Plug, Upper Water Pipe (AA525 R and AA565 R)	414809-	250000-	11
A 51 R	Tank, Radiator Bottom	410000-476999	250000-	11
A 52 R	Side, Radiator	410000-476999	250000-	11
A 55 R	Inlet, Radiator Water	410000-476999		11
A 119 R	Stud, Radiator Side to Radiator Top Tank (2 used)	477000-		11
A 192 R	Strap, Radiator	410000-	250000-	11
A 384 R	Pipe, Radiator Bottom Outlet	410000-476999		11
A 384 R	Pipe, Cylinder Head Inlet	410000-487999		11
A 391 R	Pipe, Lower Water	410000-476999		11
A 432 R	Gasket, Radiator Core, Top and Bottom	410000-476999	250000-	11
A 433 R	Gasket, Cylinder Water Pipe Outlet	410000-487999	250000-	11
A 434 R	Gasket, Radiator Water Inlet	410000-476999	250000-	11
A 445 R	Hose, Lower Water Pipe	410000-		11
A 446 R	Hose, Upper Water Pipe	410000-	250000-	11
A 448 R	Clamp, Lower Water Pipe Hose	410000-	250000-	11
A 448 R	Clamp, Upper Water Pipe Hose	410000-	250000-	11
A 531 R	Tank, Radiator Top	410000-476999	250000-	11
A 931 R	Inlet, Radiator Water		250000-	11
A 932 R	Hose, Lower Water Pipe		250000-	11
A 933 R	Pipe, Radiator Bottom Outlet		250000-	11
A 933 R	Pipe, Cylinder Head Inlet		250000-	11
A 1247 R	Bracket, Heat Indicator	424851-476999	251668-	10
A 1248 R	Bushing, Heat Indicator Tube	410000-	250000-	10
A 1284 R	Bracket, Heat Indicator	410000-424850	250000-251667	10
A 1712 R	Clamp, Heat Indicator	477000-		10
A 2101 R	Tank, Radiator Bottom	477000-487999		11
A 2102 R	Side, Radiator	477000-487999		11
A 2152 R	Pipe, Radiator Water Inlet	477000-487999		11
A 2153 R	Gasket, Radiator Core, Top and Bottom	477000-		11
A 2155 R	Pipe, Lower Water	477000-487999		11
A 2156 R	Drain Tube, Radiator Vent	477000-		10
A 2199 R	Screen, Front End Lower Trash	479844-487999		10
A 2272 R	Retainer, Front End Screen	479845-		10
A 2327 R	Pipe, Cylinder Head Inlet	488000-		11
A 2328 R	Gasket, Cylinder Head Inlet Pipe	488000-		11
A 2368 R	Tank, Radiator Bottom	488000-		11
A 2369 R	Side, Radiator	488000-		11
A 2370 R	Elbow, Radiator Water Inlet	488000-		11
A 2371 R	Gasket, Radiator Water Inlet Elbow	488000-		11
A 2372 R	Vent Tube, Radiator	488000-		10
A 2376 R	Gasket, Cylinder Water Outlet Pipe	488000-		11
A 2377 R	Pipe, Lower Water	488000-		11
A 2378 R	Screen, Front End Lower Trash	488000-		10
AA 253 R	Pipe, A53 R, Upper Water, and Fan Support	410000-410189		11
AA 396 R	Core, Radiator	410000-476999	250000-	11
AA 435 R	Pipe, A733 R, Upper Water, and Fan Support	410190-414808		11
AA 525 R	Pipe, A845 R, Upper Water, Complete	414809-476999		11
AA 565 R	Pipe, A845 R, Upper Water, Complete		250000-	11
AA 795 R	Cap, Radiator Filler, Complete	410000-476999	250000-	10
AA 796 R	Head, A1198 R, with Stud, Radiator Filler	410000-476999	250000-	10
AA 883 R	Heat Indicator, Complete	424851-476999	251668-	10
AA 952 R	Heat Indicator, Complete	410000-424850	250000-251667	10

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
COOLING SYSTEM—Continued				
AA 1342 R	Heat Indicator, Complete.....	477000—		10
AA 1770 R	Pipe, A2113 R, Upper Water	477000-487999		11
AA 1792 R	Core, Radiator	477000-487999		11
AA 1822 R	Top Tank, A2100 R, Radiator, with Filler Flange and Vent Tube.....	477000-487999		11
AA 1919 R	Vent Tube and Front End Lower Trash Screen.....	477000-479844		10
AA 2235 R	Core, Radiator	488000—		11
AA 2237 R	Pipe, A2375 R, Upper Water.....	488000—		11
AA 2298 R	Top Tank, A2367 R, Radiator, with Filler Flange and Vent Tube.....	488000—		11
AB 1607 R	Flange, Radiator Filler.....	477000—		11
AB 1621 R	Cap, Radiator Filler, Complete.....	477000—		10
AD 922 R	Cap, Radiator Filler (for Motometer)	410000—	250000—	10
AD 1255 R	Motometer (use with AD922 R).....	410000-476999	250000—	
B 60 R	Packing Washer, Radiator Vent Tube.....	477000—		10
B 1504 R	Stud, Radiator Strap to Top Tank.....	477000—		11
B 1526 R	Vent Tube, Radiator.....	477000-487999		10
B 1669 R	Gasket, Radiator Filler Cap.....	477000—		10
C 1705 R	Gland, Radiator Vent Tube Packing	477000—		10
D 126 R	Baffle, Radiator Cap.....	410000-476999	250000—	10
D 319 R	Cap, Radiator Filler	410000-476999	250000—	10
D 362 R	Clamp Bar, Radiator Filler Cap.....	410000-476999	250000—	10
D 473 R	Gasket, Radiator Filler Cap.....	410000-476999	250000—	10
D 488 R	Stud, Radiator Water Inlet Elbow to Top Tank.....	488000—		11
D 488 R	Stud, Cylinder Head Water Outlet Pipe.....	488000—		11
D 1138 R	Nut, on Heat Indicator Stud.....	410000—	250000—	10
D 2101 R	Baffle, Radiator Cap (for Motometer).....	410000-476999	250000—	10
D 2102 R	Nut, Radiator Cap (for Motometer).....	410000-476999	250000—	10
D 2216 R	Clip, Heat Indicator Tube.....	487147—	257724—	10
D 2388 R	Clamp, Radiator Cap (for Motometer)	410000-476999	250000—	10
RADIATOR GUARD AND CURTAIN				
372 R	Spring, Radiator Curtain	410000-450831	250000-253981	9
629 R	Washer, Roller on Radiator Curtain	410000-450831	250000-253981	9
A 182 R	Roller, Radiator Curtain	410000-450831	250000-253981	9
A 189 R	Clip, Radiator Curtain	410000-450831	250000-253981	9
AA 325 R	Curtain, Radiator	410000-450831	250000-253981	9
AA 431 R	Guard, Radiator.....	410000-450831	250000-253981	9
B 423 R	Spring, Radiator Curtain Roller.....	442935-450831	253521-253981	9
D 1856 R	Spacer, Guard to Radiator.....	410000-442934	250000-253520	9
D 1887 R	Pin, Radiator Curtain Roller.....	410000-442934	250000-253520	9
D 2001 R	Spring, Radiator Curtain Roller.....	410000-442934	250000-253520	9
RADIATOR SHUTTER				
629 R	Washer, Shutter Control Lever Spring.....	410000-476999	250000—	9
A 1785 R	Spring, Shutter Control Lever.....	410000-476999	250000—	9
A 1786 R	Lever, Shutter Control	410000-476999	250000—	9
A 1787 R	Bracket, Shutter Control	410000-476999	250000—	9
A 1788 R	Rod, Shutter Control	410000-476999		10
A 1790 R	Rod, Shutter Control		250000—	10
**A 1853 R	Washer, Bell Crank Retaining.....	410000-471567	250000-255947	9
A 1854 R	Rivet, Operating Link to Bell Crank.....	410000—	250000—	9
**A 1855 R	Rivet, Operating Bar to Shutter.....	410000-471567	250000-255947	9
**A 1856 R	Spring, Shutter.....	410000-471567	250000-255947	9
**A 1857 R	Link, Bell Crank Operating.....	410000-471567	250000-255947	9
A 1890 R	Guide, Shutter Control Rod.....	460000-476999		10
*A 1999 R	Spring, Shutter.....	471568—	255948—	10
A 2133 R	Link, Shutter Control.....	477000—		10
A 2175 R	Stud, Bell Crank	477000-487999		10
A 2192 R	Link, Shutter Operating.....	477000—		10
A 2193 R	Stud in Operating Bar.....	477000—		10
AA 1420 R	Shutter, Radiator (15 Shutter Blades) (Substitute AA1438 R).....			
AA 1438 R	Shutter, Radiator (16 Shutter Blades) (Substitute for AA1420 R).....	410000-476999	250000—	
**AA 1521 R	Bracket, Bell Crank and Stud.....	410000-471567	250000-255947	9
**AA 1522 R	Bell Crank and Bushing	410000-471567	250000-255947	9
AA 1522 R	Bell Crank and Bushing	477000—		9
**AA 1523 R	Blade, Shutter, and Pivot Pin.....	410000-471567	250000-255947	9

**Also repairs for tractors equipped with AA1400 R Shutter (15 Shutter Blades).

*Also repairs for tractors equipped with AA1438 R Shutter (16 Shutter Blades) Serial No. 410000-471567 and 250000-255947.

14 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
RADIATOR SHUTTER—Continued				
**AA 1524 R	Bar, Operating, and Stud.	410000-471567	250000-255947	9
**AA 1525 R	Frame and Bearing Bar	410000-471567	250000-255947	9
**AA 1526 R	Bar, Top Tie, and Bearing Bar.	410000-471567	250000-255947	9
*AA 1723 R	Retainer and Bearing Strip.	471568-476999	255948-	10
*AA 1724 R	Frame and Bearing Bar	471568-476999	255948-	10
*AA 1725 R	Bar, Top Tie, and Bearing Bar.	471568-476999	255948-	10
*AA 1726 R	Blade, Shutter, and Pivot Pin.	471568-476999	255948-	10
*AA 1727 R	Bar, Operating, and Stud.	471568-476999	255948-	10
*AA 1728 R	Bell Crank and Bushing	471568-476999	255948-	10
*AA 1729 R	Link, Operating, and Spring Clip	471568-476999	255948-	10
AA 1794 R	Shutter, Radiator (17 Shutter Blades)	477000-487999		
AA 1823 R	Frame and Bearing Bar	477000-487999		10
AA 1824 R	Bar, Bottom Tie, and Bearing Bar.	477000-487999		10
AA 1825 R	Blade, Shutter, and Pivot Pin.	477000-487999		10
AA 1826 R	Bar, Operating, and Stud.	477000-		10
AA 2240 R	Shutter, Radiator.	488000-		
AA 2267 R	Frame and Bearing Bar	488000-		10
AA 2268 R	Bar, Bottom Tie, and Bearing Bar.	488000-		10
AA 2269 R	Blade, Shutter, and Pivot Pin.	488000-		10
B 1516 R	Handle, Radiator Shutter Control.	477000-		10
B 1518 R	Rod, Radiator Shutter Control	477000-		10
B 1519 R	Washer on Radiator Shutter Control Rod	477000-		10
B 1520 R	Lever, Radiator Shutter Control.	477000-		10
B 1521 R	Bracket, Radiator Shutter Control Lever, Outer.	477000-		10
B 1522 R	Step Nut, Radiator Shutter Control.	477000-		10
B 1523 R	Lock Nut, Radiator Shutter Control.	477000-		10
D 157 R	End, Radiator Shutter Control Rod.	410000-	250000-	9
*E 2057 R	Washer, Bell Crank Retaining.	471568-476999	255948-	9
E 2057 R	Washer on Shutter Control Link.	477000-		9
E 2057 R	Washer on Bell Crank Stud.	477000-		9
E 2057 R	Washer on Radiator Shutter Control Rod End.	410000-	250000-	9
F 473 R	Bracket, Radiator Shutter Control, Inner.	477000-		10
FAN				
1450 R	Pipe Plug in Fan Bearing Housing.	410000-	250000-	12
1704 R	Washer on Front Fan Bearing Housing to Support Screws.	414809-	250000-	12
A 74 R	Gear, Fan Drive Bevel.	410000-424024	250000-251485	4
A 144 R	Shaft, Fan.	410000-414808		12
A 170 R	Pinion, Fan Drive Bevel.	410000-424024	250000-251485	12
A 285 R	Retainer, Fan Shaft Rear Bearing Packing.	410000-414808		12
A 286 R	Retainer, Rear Fan Bearing Packing.	410000-414808	250000-	12
A 286 R	Retainer, Front Fan Shaft Bearing Packing (Rear)	418971-	250500-	12
A 369 R	Snap Ring, Fan Shaft Rear End.	410000-	250000-	12
A 393 R	Packing, Rear of Front Fan Bearing.	410000-418972	250499-	12
A 393 R	Packing, Fan Shaft Rear Bearing.	410000-414808		12
A 395 R	Packing, Front of Front Fan Bearing.	410000-414808		12
A 407 R	Gasket, Rear Fan Bearing Housing.	410000-424024	250000-251485	12
A 579 R	Housing, Fan Shaft Rear Bearing.	410000-414808		12
A 841 R	Shaft, Fan.	414809-424024		12
A 842 R	Housing, Fan Shaft Rear Bearing.	414809-424024	250000-251485	12
A 844 R	Support, Fan Shaft, Front (Order A1233 R for Trac- tors with K. W. Lighting Outfit).	414809-		12
A 846 R	Spring, Fan Bearing Take-Up.	414809-	250000-	12
A 925 R	Shaft, Fan.		250000-251485	12
A 927 R	Support, Fan Shaft.		250000-	12
A 1176 R	Shaft, Fan.	424025-		12
A 1178 R	Shaft, Fan.		251486-	12
A 1180 R	Housing, Fan Shaft Rear Bearing.	424025-	251486-	12
A 1181 R	Gasket, Fan Shaft Rear Bearing Housing (Thick).	424025-	251486-	12
A 1182 R	Gasket, Fan Shaft Rear Bearing Housing (Thin).	424025-	251486-	12
A 1233 R	Support, Fan Shaft, Front (For use on Tractors equipped with K. W. Lighting Outfit).	414809-476999		12
A 1382 R	Washer, Spacing, Fan Shaft Support		252459-	12
A 2114 R	Shroud, Fan.	477000-487999		11
A 2373 R	Shroud, Fan.	488000-		11
AA 205 R	Fan Blades with Hub, Complete.	410000-414808		12
AA 268 R	Shroud, Fan.	410000-476999	250000-	11
AA 523 R	Fan Blades with Hub, Complete.	414809-487999	250000-	12
AA 524 R	Housing, B290 R, Fan Bearing, with Support Tube.	414809-424024		12

**Also repairs for tractors equipped with AA1400 R Shutter (15 Shutter Blades).

*Also repairs for tractors equipped with AA1438 R Shutter (16 Shutter Blades) Serial No. 410000-471567 and 250000-255947.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
FAN—Continued				
AA 564 R	Housing, B290 R, Front Fan Bearing, with Support Tube.....		250000-251485	12
AA 817 R	Housing, B290 R, Fan Bearing, with Support Tube.....	424025-	12
AA 818 R	Housing, B290 R, Front Fan Bearing, with Support Tube.....		251486-	12
AA 1695 R	Gear and Pinion Assembly, Fan Drive Bevel (1 A1174 R and 1 A1177 R).....	424025-	251486-	12
AA 2249 R	Fan Blades with Hub, Complete.....	488000-	12
AB 518 R	Washer, Felt, Front Fan Bearing.....	414809-	250000-	12
B 292 R	Retainer, Fan Shaft Support Tube Packing Rear of Fan Shaft Tube.....	414809-424024	250000-251485	12
B 293 R	Packing Ring, Rear of Fan Shaft Tube (Rubber).....	414809-	250000-	12
B 294 R	Washer, Grease Retainer, Front Fan Bearing (Rear).....	410000-	250000-	12
B 296 R	Washer, Front Fan Bearing Felt Retainer.....	414809-	250000-	12
B 298 R	Retainer, Front Fan Bearing Felt Washer (Front).....	414809-	250000-	12
D 342 R	Woodruff Key, Fan Drive Bevel Gear.....	410000-	250000-	4
D 403 R	Key, Fan Drive Bevel Pinion.....	410000-	250000-	12
D 1720 R	Lock Washer, (Half) Fan Lock on Fan Shaft.....	410000-	250000-	12
D 1866 R	Cover, Fan Bearing, Front.....	410000-414808	12
D 1868 R	Retainer Washer, Front Fan Bearing Packing (Front).....	410000-414808	12
D 1938 R	Snap Ring, Front Fan Bearing Packing.....	410000-414808	12
D 1939 R	Spring, Fan Bearing Take-Up.....	410000-414808	12
JD 7655 R	Cup, Front and Rear Bearing, Fan Shaft.....	410000-	250000-	12
JD 7656 R	Cone, Front and Rear Bearing, Fan Shaft.....	410000-	250000-	12
JD 7657 R	Balls and Retainer, Front and Rear Bearing, Fan Shaft.....	410000-	250000-	12
PULLEY				
A 101 R	Gear, Belt Pulley.....	410000-	250000-	12
A 261 R	Washer, Belt Pulley Felt Retainer.....	410000-459999	250000-254702	12
A 262 R	Retainer, Belt Pulley Felt.....	410000-459999	250000-254702	12
A 370 R	Snap Ring, Belt Pulley Gear.....	410000-	250000-	12
A 371 R	Snap Ring, Belt Pulley Bearing.....	410000-459999	250000-254702	12
A 382 R	Felt Washer, Belt Pulley.....	410000-459999	250000-254702	12
A 726 R	Bushing, Belt Pulley (Bronze).....	410000-	250000-	12
A 1646 R	Washer, Belt Pulley Bearing.....	460000-	254703-	12
A 1647 R	Retainer, Belt Pulley Bearing.....	460000-	254703-	12
A 1867 R	Shield, Dust Pulley.....	460000-489670	254703-258154	12
*A 2471 R	Gasket, Pulley Dust Shield.....	489671-	258155-	12
AA 231 R	Belt Pulley, A17 R, with Sleeve, Gear and Bushing.....	410000-459999	250000-254702	12
AA 329 R	Shield, Pulley, Dust with Cap Screws.....	410000-459999	250000-254702	12
AA 1555 R	Belt Pulley, A1864 R, with Sleeve, Gear and Bushing.....	460000-	254703-	12
*AA 2336 R	Shield, Pulley Dust, with Oil Seal.....	489671-	258155-	12
D 279 R	Key, Belt Pulley Gear.....	410000-	250000-	12
D 454 R	Drive Screw, Pulley Dust Shield to First Reduction Gear Cover.....	460000-489670	254703-258154	12
*F 478 R	Stud, Pulley Dust Shield and Oil Seal to First Reduction Gear Cover.....	489671-	258155-	12
JD 7487 R	Outer Race and Roller, Pulley Bearing.....	460000-	254703-	12
JD 7489 R	Outer Race, Pulley Bearing.....	410000-459999	250000-254702	12
JD 7539 R	Roller Assembly, Pulley Bearing.....	410000-459999	250000-254702	12
JD 7559 R	Inner Race, Pulley Bearing.....	410000-459999	250000-254702	12
JD 7587 R	Inner Race, Pulley Bearing.....	460000-	254703-	12
CLUTCH PARTS				
A 18 R	Sleeve, Clutch Operating.....	410000-	250000-	12
A 20 R	Disk, Clutch Adjusting.....	410000-	250000-	12
A 135 R	Bolt, Clutch Operating.....	410000-	250000-	12
A 141 R	Toggle, Clutch Dog.....	410000-	250000-	12
A 198 R	Washer, Clutch Driving Disk.....	410000-	250000-	12
A 272 R	Cover, Clutch Dust.....	410000-	250000-	12
A 351 R	Spring, Clutch Dust Cover.....	410000-	250000-	12
A 352 R	Spring, Clutch Release.....	410000-	250000-	12
AA 232 R	Disk, A19 R, Clutch Driving, with Rivet.....	410000-487999	250000-	12
AA 2279 R	Disk, A2448 R, Clutch Driving, with Rivet.....	488000-	12
C 74 R	Dog, Clutch.....	410000-	250000-	12
C 404 R	Drive Pin, Clutch Operating Sleeve.....	410000-	250000-	12
C 614 R	Facing, Clutch.....	410000-	250000-	12
D 355 R	Pin, Clutch Dog.....	410000-	250000-	12
D 393 R	Yoke, Clutch Operating Rod.....	410000-	250000-	5

*Also repairs for tractors equipped with a first reduction gear cover bearing either the casting number A2472 R or A2474 R.

16 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A. AN, AW	AR, AO	
CLUTCH FORK BEARING AND PULLEY BRAKE				
A 21 R	Bearing, Clutch Fork.....	410000-	250000-	13
A 78 R	Fork, Clutch.....	410000-	250000-	13
A 82 R	Collar, Clutch (Bronze).....	410000-	250000-	13
A 353 R	Spring, Clutch Fork.....	410000-	250000-	13
A 420 R	Gasket, Clutch Fork Bearing.....	410000-	250000-	13
A 602 R	Snap Ring, Clutch Fork Shaft.....	410000-	250000-	13
A 603 R	Shaft, Clutch Fork.....	410000-	250000-	13
AA 235 R	Brake, A79 R, with Lining, Pulley.....	410000-	250000-	13
C 732 R	Welsh Plug, in Clutch Fork Bearing.....	410000-	250000-	13
D 178 R	Pivot, Clutch Fork (2 used).....	410000-	250000-	13
D 1086 R	Set Screw, Pulley Brake Adjusting.....	410000-	250000-	13
D 1932 R	Lining, Pulley Brake.....	410000-	250000-	13
GEAR SHIFT				
A 147 R	Washer, Gear Shift Lever Key.....	410000-		13
A 239 R	Interlock, Gear Shift.....	410000-		13
A 350 R	Spring, Gear Shift Lever.....	410000-		13
A 369 R	Snap Ring, Gear Shift Lever.....	410000-		13
A 418 R	Gasket, Fulcrum Ball Socket.....	410000-413398		13
A 497 R	Shaft, Shifter.....	418088-487999		13
A 596 R	Yoke, Gear Shifter.....	410000-	250000-	13
A 597 R	Spring, Gear Shifter Pawl.....	410000-	250000-	13
A 598 R	Pawl, Gear Shifter.....	410000-	250000-	13
A 604 R	Lever, Gear Shift.....	410000-		13
A 605 R	Ball, Fulcrum.....	410000-413398		13
A 606 R	Socket, Fulcrum Ball.....	410000-413398		13
A 607 R	Cover, Fulcrum Ball Socket.....	410000-		13
A 608 R	Washer, Gear Shift Spring Retainer.....	410000-		13
A 825 R	Ball, Fulcrum.....	413399-		13
A 913 R	Interlock, Gear Shift.....		250000-	13
A 916 R	Lever, Gear Shift.....		250000-	13
A 917 R	Arm, Gear Shifter.....		250000-	13
A 918 R	Shaft, Shifter.....		250550-	13
A 2423 R	Shaft, Shifter.....	488000-		13
AA 371 R	Gear Shift Fork, A594 R, Complete with Yoke.....	410000-		13
AA 553 R	Gear Shifter, Low and Reverse, A910 R, with Yoke.....		250000-	13
AA 588 R	Gear Shifter, Second Speed, A1015 R, with Yoke.....		250000-	13
AA 757 R	Shaft, Shifter, with Overdrive Shifter, A595 R, and Yoke.....	410000-418087		13
AA 758 R	Shaft, Shifter, with Overdrive Shifter, A911 R, and Yoke.....		250000-250549	13
D 678 R	Screw, Gear Shift Adjusting.....	410000-	250000-	13
SLIDING GEAR SHAFT				
A 94 R	Pinion, First Speed Sliding (18 Teeth).....	410000-	250000-	13
A 113 R	Pinion, Second Speed Sliding (21 Teeth).....	410000-		13
A 365 R	Snap Ring, Sliding Gear Shaft, L. H. Bearing, Outer Race.....	410000-	250000-	13
A 378 R	Snap Ring, Sliding Gear Shaft, L. H. Bearing, Inner Race.....	410000-	250000-	13
A 540 R	Shaft, Sliding Gear.....	410000-	250000-	13
A 549 R	Gasket, Sliding Gear Shaft and Countershaft, L. H. Bearing Cover.....	410000-	250000-	13
A 550 R	Cover, Sliding Gear Shaft L. H. Bearing.....	410000-	250000-	13
A 600 R	Pinion, Sliding Gear Shaft Drive (20 Teeth).....	410000-	250000-	13
A 906 R	Pinion, Second Speed Sliding (23 Teeth).....		250000-	13
JD 7665 R	Bearing, Sliding Gear Shaft, L. H.....	410000-	250000-	13
JD 7673 R	Bearing, Sliding Gear Shaft, R. H.....	410000-	250000-	13
OVERDRIVE GEAR SHIFT				
A 115 R	Lever, Overdrive Shifter.....	410000-	250000-	13
A 142 R	Handle, Overdrive Shifter.....	410000-		13
A 147 R	Key Washer, Overdrive Shifter.....	410000-	250000-	13
A 369 R	Snap Ring, Overdrive Shifter Handle.....	410000-	250000-	13
A 596 R	Yoke, Overdrive Shifter.....	410000-	250000-	13
A 599 R	Pin, Reverse Lockout.....	410000-	250000-	13
AA 556 R	Handle, Overdrive Shifter with Shaft.....		250000-	13
AA 757 R	Shifter, Overdrive, A595 R, with Yoke, Lock Out Pin and Shifter Shaft.....	410000-418087		13
AA 758 R	Shifter, Overdrive, A911 R, with Yoke, Lock Out Pin and Shifter Shaft.....		250000-250549	13

Part Number		Serial Number		Plate No.
		A, AN, AW	AR, AO	
OVERDRIVE GEAR SHIFT—Continued				
AA 792 R	Shifter, Overdrive, A595 R, with Yoke and Lock Out Pin.....	418088—	13
AA 793 R	Shifter, Overdrive, A911 R, with Yoke and Lock Out Pin.....	250550—	13
OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR				
A 69 R	Cover, Overdrive, R. H. Bearing.....	410000—	250000—	14
A 119 R	Stud, Overdrive, R. H. Bearing Cover (2 used).....	410000—	250000—	14
A 120 R	Dowel Pin, First Reduction Gear Cover (2 used).....	410000—	250000—	14
A 159 R	Spacer, First Reduction Gear.....	410000—	250000—	14
A 438 R	Gasket, Overdrive R. H. Bearing Cover.....	410000—	250000—	14
A 547 R	Gasket, Overdrive Gear and Shaft L. H. Bearing Cover.....	410000—	250000—	14
A 548 R	Cover, Overdrive Gear and Shaft L. H. Bearing.....	410000—	250000—	14
A 557 R	Gasket, First Reduction Gear Cover.....	410000—	250000—	14
A 2472 R	Cover, First Reduction Gear.....	258155—	14
A 2474 R	Cover, First Reduction Gear.....	489671—	14
AA 217 R	Gear, First Reduction with Spider, A12 R, Riveted..	410000—	250000—	14
AA 797 R	Gear and Shaft, Overdrive, A541 R, with R. H. Bearing Cover (28 Teeth outside, 20 Teeth inside).....	410000—450503	250000—	14
AA 1576 R	Cover, A2474 R, First Reduction Gear, with Pulley Dust Shield.....	410000—489670	14
AA 1577 R	Cover, A2472 R, First Reduction Gear, with Pulley Dust Shield (AR only).....	250000—258154	14
AA 1579 R	Gear and Shaft, A1579 R, Overdrive, with Nut (26 Teeth outside, 20 Teeth inside).....	450504—487999	14
AA 2265 R	Gear and Shaft, A2323 R, Overdrive, with Nut (26 Teeth outside, 20 Teeth inside).....	488000—	14
C 535 R	Nut, Overdrive Gear and Shaft.....	410000—	250000—	14
JD 7664 R	Bearing, Overdrive Gear and Shaft, R. H. End.....	410000—	250000—	14
JD 7672 R	Bearing, Overdrive Gear and Shaft, L. H. End.....	410000—	250000—	14
K 3083 R	Stud, First Reduction Gear Cover to Transmission Case.....	410000—	250000—	14
COUNTERSHAFT IDLER GEAR				
A 114 R	Gear, Countershaft Idler (17 and 25 Teeth).....	410000—450503	250000—	14
A 166 R	Washer, Bearing Locating.....	410000—487999	250000—	14
A 539 R	Spacer, Countershaft Idler Gear Bearing.....	410000—487999	250000—	14
A 543 R	Washer, Idler Gear Thrust.....	410000—424024	250000—251485	14
A 544 R	Washer, Idler Gear Locating (Notched).....	410000—412799	14
A 812 R	Spacer, Idler Gear Locating.....	412800—487999	250000—	14
A 1154 R	Washer, Idler Gear Thrust.....	424025—487999	251486—	14
A 1578 R	Gear, Countershaft Idler (19 and 25 Teeth).....	450504—487999	14
A 2312 R	Gear, Countershaft Idler (19 and 25 Teeth).....	488000—	14
A 2313 R	Spacer, Countershaft Idler Gear Bearing.....	488000—	14
A 2314 R	Spacer, Countershaft Idler Gear Bearing, L. H.....	488000—	14
A 2315 R	Spacer, Countershaft Idler Gear Locating.....	488000—	14
A 2316 R	Washer, Countershaft Idler.....	488000—	14
JD 7539 R	Roller Assembly, Countershaft Idler, L. H.....	410000—487999	250000—	14
JD 7551 R	Inner Race, Countershaft Idler, R. H.....	410000—487999	250000—	14
JD 7559 R	Inner Race, Countershaft Idler, L. H.....	410000—487999	250000—	14
JD 7914 R	Roller Assembly, Countershaft Idler, R. H.....	410000—487999	250000—	14
JD 7920 R	Roller Assembly, Countershaft Idler Gear Bearing, R. H. and L. H. (2 used).....	488000—	14
REPAIRS FOR HIGH SPEED GEAR ASSEMBLIES				
A 836 R	Gear, Countershaft Idler (17 and 28 Teeth).....	410000—	250000—	15
A 837 R	Pinion, Sliding Gear Shaft Drive (17 Teeth).....	410000—	250000—	15
A 2571 R	Pinion, Sliding Gear Shaft Drive (17 Teeth).....	488000—	15
A 2572 R	Gear, Countershaft Idler (16 Teeth and 27 Teeth)...	488000—	15
A 2573 R	Gear, Power Shaft Sliding (19 Teeth).....	488000—	15
AA 798 R	Gear and Shaft, A838 R, Overdrive, with Bearing Cover (28 Teeth outside, 17 Teeth inside).....	410000—487999	250000—	15
AA 2370 R	Gear and Shaft, A2570 R, Overdrive, with Nut (28 Teeth outside, 17 Teeth inside).....	488000—	15

18 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
COUNTERSHAFT				
A 124 R	Stud, Countershaft R. H. Bearing Cover	410000-	250000-	14
A 242 R	Washer, Countershaft R. H. Bearing	410000-424024	250000-251485	14
A 415 R	Gasket, Countershaft R. H. Bearing Housing	410000-424024	250000-251485	14
A 542 R	Snap Ring, Countershaft L. H. Bearing	410000-424024	250000-251485	14
A 545 R	Spacer, Countershaft L. H. Bearing	410000-424024	250000-251485	14
A 580 R	Gear, Second Speed, Countershaft (24 Teeth)	410000-		14
A 581 R	Pinion, Differential Driving (17 Teeth)	410000-	250000-	14
A 582 R	Gear, First Speed Countershaft (27 Teeth)	410000-	250000-	14
A 583 R	Spacer, Countershaft Gear	410000-487999	250000-	14
A 907 R	Gear, Second Speed Countershaft (22 Teeth)		250000-	14
A 1153 R	Countershaft	424025-450503	251486-	14
A 1156 R	Gasket, Countershaft R. H. Bearing Housing (Thin)	424025-	251486-	14
A 1157 R	Gasket, Countershaft R. H. Bearing Housing (Thick)	424025-	251486-	14
A 1158 R	Shim, Countershaft R. H. Bearing Housing (Steel, Thin)			
A 1159 R	Shim, Countershaft R. H. Bearing Housing (Steel, Thick)	424025-	251486-	14
A 1160 R	Snap Ring, Countershaft L. H. Bearing	424025-	251486-	14
A 2317 R	Spacer, Countershaft Gear	488000-		14
AA 503 R	Countershaft with Idler Gear Locating Spacer	410000-412799		14
AA 806 R	Housing, A1155 R, Countershaft R. H. Bearing, with Cup		251486-	14
AA 1593 R	Countershaft with Nuts	412800-424024	250000-251485	14
AA 1594 R	Countershaft with Nut	450504-487999		14
AA 1758 R	Housing, A546 R, Countershaft R. H. Bearing, with Outer Race and Roller	410000-424024	250000-251485	14
AA 2263 R	Countershaft with Nut	488000-		14
AA 2264 R	Housing, A2318 R, with Cup, Countershaft R. H. Bearing	488000-		14
C 535 R	Nut, R. H. and L. H. End of Countershaft	410000-424024	250000-251485	14
C 2321 R	Washer, Countershaft L. H. Bearing	410000-424024	250000-251485	14
C 2321 R	Washer, Countershaft L. H. Bearing	450504-		14
JD 7214 R	Cone, Countershaft Bearing, R. H.	488000-		14
JD 7260 R	Cup, Countershaft R. H. Bearing	488000-		14
JD 7367 R	Cone with Rollers, Countershaft, R. H. Bearing	424025-487999	251486-	14
JD 7379 R	Cone with Rollers, Countershaft L. H. Bearing	424025-	251486-	14
JD 7405 R	Cup, Countershaft R. H. Bearing	424025-487999	251486-	14
JD 7411 R	Cup, Countershaft L. H. Bearing	424025-	251486-	14
JD 7502 R	Outer Race and Rollers, Countershaft R. H. Bearing	410000-424024	250000-251485	14
JD 7552 R	Inner Race, Countershaft R. H. Bearing	410000-424024	250000-251485	14
JD 7680 R	Bearing, Countershaft L. H.	410000-424024	250000-251485	14
REPAIRS FOR AA1120 R, AA1717 R AND AA2360 R SLOW SPEED GEAR ASSEMBLIES				
A 1112 R	Gear, Power Shaft Bevel (19 Teeth)	424025-487999	252654-	15
A 1113 R	Shaft, Power Shaft Drive	424025-487999	252654-	15
A 1114 R	Pinion, Power Shaft Bevel Drive (16 Teeth)	424025-487999	252654-	15
A 1116 R	Shifter, Power Shaft	424025-487999	252654-	15
A 1401 R	Snap Ring, First Reduction Gear Cover	424025-	252654-	15
A 1402 R	Snap Ring, Sliding Gear Shaft Drive Gear Left Bearing	424025-	252654-	15
A 1403 R	Spacer, First Reduction Gear	424025-	252654-	15
A 1405 R	Pinion, Sliding Gear Shaft Drive (20 and 26 Teeth)	424025-487999	252654-	15
A 1406 R	Pinion, High Speed Sliding (23 Teeth)	424025-	252654-	15
A 1408 R	Gear, Countershaft Idler (19 and 25 Teeth)	424025-487999	252654-	15
A 1409 R	Spacer, Idler Gear Bearing	424025-487999	252654-	15
A 1410 R	Washer, Countershaft Idler Gear Thrust	424025-487999	252654-	15
A 1411 R	Gear, Differential Drive, and Pinion (17 Teeth)	424025-	252654-	15
A 1412 R	Washer, Countershaft L. H. Bearing Retainer		252654-253345	15
A 1414 R	Shaft, Power Shaft Shifter	424025-487999	252654-	15
A 1415 R	Gear, Power Shaft Sliding (13 Teeth)	424025-487999	252654-	15
A 1416 R	Shaft, Shifter		252654-	15
A 1418 R	Yoke, Underdrive Shifter	424025-	252654-	15
A 1522 R	Washer, Countershaft, L. H. Bearing Retaining	424025-	253346-	15
A 2019 R	Interlock, Gear Shift	424025-		15
A 2020 R	Shaft, Shifter	424025-		15
A 2508 R	Gear, Power Shaft Bevel (16 Teeth)	488000-		15
A 2509 R	Shaft and Bevel Pinion, Power Shaft Drive	488000-		15
A 2510 R	Gear, Power Shaft Sliding (13 Teeth)	488000-		15
A 2511 R	Shaft, Power Shaft Shifter	488000-		15
A 2513 R	Gear, Countershaft Idler (17 Teeth and 23 Teeth)	488000-		15
A 2514 R	Spacer, Countershaft Idler Gear Bearing	488000-		15
A 2515 R	Pinion, Sliding Gear Shaft Drive (28 and 22 Teeth)	488000-		15

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
REPAIRS FOR AA1120 R, AA1717 R AND AA2360 R SLOW SPEED GEAR ASSEMBLIES—Continued				
AA 741 R	Cover, A1123 R, Transmission Case, with Gear Shift Interlock		252654—	1
AA 1122 R	Housing, A1413 R, Countershaft R. H. Bearing with Cup	424025—487999	252654—	15
AA 1123 R	Shifter, Gear, A1417 R, Second Speed, with Yoke		252654—	15
AA 1124 R	Shifter, Underdrive, A911 R, with Yoke		252654—	15
AA 1233 R	Countershaft with Dowel Pin (Substitute for AA-1121 R)		252654—253345	15
AA 1234 R	Countershaft with Dowel Pin	424025—487999	253346—	15
AA 1553 R	Gear and Shaft, A1404 R, Underdrive, with Nut (20 Teeth)	424025—487999	253346—	15
AA 1718 R	Shifter, Gear, A2017 R, High Speed	424025—		15
AA 1719 R	Shifter, A595 R, Underdrive Gear	424025—		15
AA 1721 R	Cover, A2018 R, Transmission Case, with Gear Shift Interlock	424025—		1
AA 2361 R	Countershaft with Nut	488000—		15
AA 2362 R	Gear and Shaft, A2516 R, Underdrive, with Nut (22 Teeth)	488000—		15
E 2072 R	Dowel Pin in Countershaft	424025—	252654—	15
JD 7649 R	Bearing, Overdrive Gear and Shaft, L. H. End	424025—		15
JD 7904 R	Bearing, Countershaft Idler Gear (2 used)	424025—		15
DIFFERENTIAL				
*A 11 R	Quill, Differential Bearing	410000—	250000—	15
A 169 R	Pinion, Differential Bevel	410000—	250000—	15
A 202 R	Washer, Differential Thrust	410000—	250000—	15
A 263 R	Cover, Differential Shaft R. H. Bearing	410000—	250000—	15
A 363 R	Snap Ring, Differential Shaft, R. H. Bearing	410000—	250000—	15
A 406 R	Gasket, Differential Quill (Thin)	410000—	250000—	15
A 486 R	Pinion, Differential Bevel Gear and Spur	410000—	250000—	15
A 610 R	Shim, Differential Bearing Quill, Steel (Thick)	410000—	250000—	15
A 611 R	Shim, Differential Bearing Quill, Steel (Thin)	410000—	250000—	15
A 612 R	Gasket, Differential Bearing Quill (Thick)	410000—	250000—	15
A 2307 R	Shaft, Differential Bevel Pinion (Substitute for A150 R)	410000—	250000—	15
AA 331 R	Gear with Shaft, Differential	410000—487999	250000—	15
AA 345 R	Differential, Complete	410000—487999		
AA 559 R	Differential, Complete		250000—	
AA 661 R	Gear with Shaft, Differential		250000—	15
AA 2223 R	Differential, Complete	488000—		
AA 2247 R	Gear with Shaft, Differential	488000—		15
B 1403 R	Snap Ring, Differential Shaft (.118" Thick)	488000—		15
B 1404 R	Snap Ring, Differential Shaft (.115" Thick)	488000—		15
B 1405 R	Snap Ring, Differential Shaft (.112" Thick)	488000—		15
B 1406 R	Snap Ring, Differential Shaft (.109" Thick)	488000—		15
JD 7275 R	Cup, Differential Bearing, R. H. and L. H.	410000—487999	250000—	15
JD 7361 R	Cone, Differential Bearing, R. H. and L. H.	410000—487999	250000—	15
JD 7430 R	Cup, Differential Bearing, R. H. and L. H.	488000—		15
JD 8108 R	Cone, Differential Bearing, R. H. and L. H.	488000—		15
*Used only on AR equipped with Differential Brakes.				
FINAL DRIVE				
A 5 R	Spacer, Rear Axle Bearing	410000—467023	250000—	16
A 76 R	Nut, Rear Axle Shaft	410000—	250000—	16
A 187 R	Shaft, Rear Axle	410000—424024		16
A 264 R	Retainer, Rear Axle Felt	410000—		16
A 411 R	Gasket, Rear Axle Housing to Case	410000—	250000—	16
A 412 R	Gasket, Rear Axle Housing to Cover	410000—	250000—	16
A 609 R	Gear, Final Drive	410000—439352	250000—253330	16
A 810 R	Washer, Rear Axle Oil Seal	411593—413647		16
A 813 R	Retainer, Oil Seal and Felt, Rear Axle (Repairs for AA500 R Oil Seal only)	410000—411592		16
A 815 R	Spacer, Rear Axle Bearing (Repairs for AA500 R Oil Seal only)	410000—411592		16
A 829 R	Washer, Rear Axle Oil Seal	413648—	250000—	16
A 1281 R	Retainer, Rear Axle Oil Seal		250000—	16
A 1311 R	Retainer, Rear Axle Felt		250000—	16
A 1313 R	Spacer, Rear Axle Bearing		250000—	16
A 1389 R	Gear, Final Drive	439353—487999	253331—	16
*A 1389 R	Gear, Final Drive		250000—	16

*Repairs only for AR Tractors equipped with Rear Wheel Brakes.

20 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
FINAL DRIVE—Continued				
A 1892 R	Nut, Special Hex., on C1479 R Stud for Quick Implement Attachment (12 used)	460000—		16
A 1974 R	Spacer, Rear Axle Bearing	467024—		16
A 2305 R	Gear, Final Drive	488000—		16
A 2394 R	Cover, Rear Axle Housing	488000—		16
AA 504 R	Cover, Rear Axle Housing, A570 R, with Filler Plug	410000-487999	250000—	16
AA 505 R	Oil Seal, Rear Axle (Repairs for AA500 R)	410000-411592		16
AA 506 R	Oil Seal, Rear Axle Inner Bearing	411593-413647		16
AA 509 R	Housing, Rear, A828 R, with Bearing Cups and Oil Seals	410000-459999		16
AA 520 R	Oil Seal, Rear Axle Inner Bearing	413648—	250000—	16
AA 616 R	Housing, Rear Axle, A921 R, with Bearing Cups and Oil Seals		250000—	16
AA 665 R	Felt Washer, Rear Axle, A380 R	410000—	250000—	16
AA 666 R	Felt Washer, Rear Axle, A814 R (Repairs for AA500 R Oil Seal Assembly)	410000-411592		16
AA 935 R	Shaft, Rear Axle, with Nut and Bearing Spacer	460000-487999		16
AA 936 R	Shaft, Rear Axle, with Nut, R. H.		253331—	16
AA 937 R	Shaft, Rear Axle, with Nut, L. H.		253331—	16
*AA 1067 R	Felt Washer, Rear Axle, A1312 R		250000—	16
*AA 1073 R	Shaft, Rear Axle, with Nut, R. H.		250000—	16
*AA 1074 R	Shaft, Rear Axle, with Nut, L. H.		250000—	16
*AA 1075 R	Housing, Rear Axle, A1308 R, with Bearing Cups and Oil Seals		250000—	17
AA 1483 R	Housing, Rear Axle, A1866 R, with Bearing Cups and Oil Seals	460000—		16
AA 1596 R	Shaft, Rear Axle, with Nut, R. H.		250000-253330	16
AA 1597 R	Shaft, Rear Axle, with Nut, L. H.		250000-253330	16
AA 1600 R	Shaft, Rear Axle, with Nut	410000-423400		16
AA 1601 R	Shaft, Rear Axle, with Nut (For 84" Maximum Tread)	423401-439352		16
AA 1602 R	Shaft, Rear Axle, with Nut (Substitute for A1390 R)	439353-459999		16
AA 2243 R	Shaft, Rear Axle, with Nut	488000—		16
C 1472 R	Stud for Quick Implement Attachment to Rear Axle Housing (12 used)	460000—		16
C 1533 R	Dowel Pin, Rear Axle Housing to Transmission Case	410000—	250000—	16
D 625 R	Pipe Plug, Rear Axle Housing Drain	410000—	250000—	16
E 2244 R	Pipe Plug, Rear Axle Housing Oil Filler	413279—	250000—	16
JD 7245 R	Cone with Rollers, Rear Axle Bearing, Inner and Outer	410000-459999	250000—	16
*JD 7245 R	Cone with Rollers, Rear Axle Bearing, Inner		250000—	16
JD 7296 R	Cup, Rear Axle Bearing, Inner and Outer	410000-459999	250000—	16
*JD 7296 R	Cup, Rear Axle Bearing, Inner		250000—	16
*JD 7381 R	Cone with Rollers, Rear Axle Outer Bearing		250000—	16
JD 7392 R	Cone, Rear Axle Bearing, Inner and Outer	460000—		16
*JD 7412 R	Cup, Rear Axle Outer Bearing		250000—	16
JD 7416 R	Cup, Rear Axle Bearing, Inner and Outer	460000—		16
JD 7760	Alemite Fitting No. 1612, Rear Axle Shaft		250000—	16
REAR WHEELS				
A 77 R	Sleeve, Rear Wheel	410000-459999		17
A 1283 R	Side Ring, Demountable Rim (For A1282 R Rear Wheel and 9.00" x 36" Rubber Tires) (Specify Manufacturer's Name and Number as Stamped on Rim)	410000—		21
A 1293 R	Side Ring, Demountable Rim (For A1282 R Rear Wheel and 10.00" x 36" or 11.25" x 36" Rubber Tires) (Specify Manufacturer's Name and Number as Stamped on Rim)	410000—		21
A 1325 R	Bolt without Nut, Rear Wheel		250000—	20
*A 1325 R	Bolt without Nut, Rear Wheel		250000—	20
A 1538 R	Rivet in AA1261 R Side Ring and AA1409 R Front Side Ring	410000—		
A 1539 R	Rivet, in AA1002 R Demountable Ring (Firestone only)	410000—		
A 1544 R	Side Ring, Demountable Rim (For A1282 R Cast Wheel and 10.00" x 36" and 11.25" x 36" Rubber Tires) (Specify Manufacturer's Name and Number as Stamped on Rim)	410000—		21
A 1812 R	Clamp, Rear Wheel Hub	460000—		17
A 2027 R	Stud, Rim Clamp to Rear Wheel (5/8" x 2-5/8")		250000—	20
A 2028 R	Stud, Rim Clamp to Rear Wheel (5/8" x 2-1/4")	410000—		20

*Repairs only for AR tractors equipped with Rear Wheel Brakes.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
REAR WHEELS—Continued				
A 2466 R	Hub, Wheel (Use with JD1249 R Disk Type Wheel)	488000—		20
AA 385 R	Wheel, Spoke Type (For 9.00" x 36" Rubber Tires)	410000-459999		20
AA 917 R	Rim, Demountable (For A1272 R and A1324 R Cast Wheel and 11.25" x 24" or 12.75" x 24" Rubber Tires)		250000—	20
AA 933 R	Wheel, Cast Disk, A1272 R with Demountable Rim. (For 11.25" x 24" and 12.75" x 24" Rubber Tires)		250000—	20
AA 945 R	Rim, Demountable, with Side Ring (For A1282 R Cast Wheels and 9.00" x 36" Rubber Tires)	410000-487999		21
AA 1002 R	Rim, Demountable, with Side Ring (For A1282 R Cast Wheel and 10.00" x 36" Rubber Tires)	410000-487999		21
*AA 1078 R	Wheel, Cast Disk, A1324 R, with Studs and Nuts. (For 11.25" x 24" and 12.75" x 25" Rubber Tires) (AR only)		250000—	20
AA 1087 R	Wheel, Cast Disk, A1272 R. (For 11.25" x 24" and 12.75" x 24" Rubber Tires)		250000—	20
AA 1088 R	Wheel, Cast Disk, A1282 R, with Studs and Nuts. (For 9.00" x 36" and 11.25" x 36" Rubber Tires)	410000-459999		21
AA 1261 R	Side Ring, Demountable Rim (For A1282 R Cast Wheels and 9.00" x 36" Rubber Tires) (Specify Manufacturer's Name and Number as Stamped on Rim)	410000—		21
AA 1409 R	Side Ring, Demountable Rim (For A1282 R Cast Wheel and 10.00" x 36" and 11.25" x 36" Rubber Tires) (Specify Manufacturer's Name and Number as Stamped on Rim)	410000—		21
AA 1433 R	Wheel, Spoke Type, with Rim Strip (For 10.00" x 36" and 11.25" x 36" Rubber Tires)	410000-459999		20
AA 1497 R	Wheel, Cast Disk, A1815 R, with Studs and Nuts (For 9.00" x 36", 10.00" x 36" and 11.25" x 36" Rubber Tires)	460000-487999		22
AA 1502 R	Wheel, Spoke Type, with Rim Strip (For 9.00" x 36" Rubber Tires)	460000-487999		21
AA 1507 R	Wheel, Spoke Type, with Rim Strip (For 10.00" x 36" and 11.25" x 36" Rubber Tires)	460000-487999		21
AA 2228 R	Wheel, Cast Disk, A2366 R, with Studs and Nuts (For 9-38, 10-38 and 11-38 Rubber Tires)	488000—		21
AA 2320 R	Rim with Driver, Demountable (For 9-38 Rubber Tires)	488000—		22
AA 2341 R	Wheel, Spoke Type, with Rim Strip	488000—		20
AA 2478 R	Rim with Driver, Demountable (For A2366 R Cast Wheel with 11-38 6-ply Rubber Tires)	488000—		22
AB 823 R	Wheel, Cast Disk, B684 R, with Studs and Nuts (For 11.25" x 24" Rubber Tires)		250000—	20
B 634 R	Clamp, Rim (For A1282 R Cast Wheel)	410000—		20
C 1716 R	Bolt without Nut, Rear Wheel		250000—	20
D 2526 R	Clamp, Rim		250000—	20
D 2882 R	Stud, Rim Clamp to Rear Wheel		250000—	20
JD 16 R	Bolt, Disk Type Rear Wheel JD1249 R, to Hub A2466 R	488000—		20
JD 1214 R	Wheel, Rear (50" x 6"), Flat Tire	410000-459999		17
JD 1217 R	Wheel, Rear (42-3/4" x 10"), Flat Tire		250000—	19
JD 1225 R	Wheel, Rear, Skeleton Type	410000-459999		18
JD 1229 R	Wheel, Rear, 50" x 6", Flat Tire	460000-487999		17
JD 1230 R	Wheel, Rear, Skeleton Type	460000-487999		19
JD 1246 R	Wheel, Rear, 50" x 6", Flat Tire	488000—		17
JD 1247 R	Wheel, Rear, Skeleton Type	488000—		19
JD 1249 R	Wheel, Rear, Disk with Rim (For 9-38 Rubber Tires)	488000—		20
REAR WHEEL EQUIPMENT				
1706 R	Washer, Button Lug	410000—	250000—	19
A 684 R	Lug, Cast, Skeleton Rear Wheel	410000—		18
A 685 R	Spacer, Skeleton Rear Wheel Cast Lug	410000—		18
A 686 R	Bolt, Skeleton Rear Wheel Cast Lug (3/4" x 3")	410000—		18
A 687 R	Lock Washer, Skeleton Rear Wheel Cast Lug (Special)	410000—		18
A 808 R	Support for AA483 R Road Band	410000—		19
A 840 R	Extension Rim, Rear Wheel (6")	410000—		18
A 1062 R	Support, Rear Wheel, to Road Band Support		250000—	19
A 1298 R	Lug, Spud	410000—	250000—	18

*Repairs for AR tractors equipped with rear wheel brakes.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
REAR WHEEL EQUIPMENT—Continued				
A 1533 R	Extension Rim, Skeleton Type Wheel	410000—		18
A 1534 R	Lug, Skeleton Type Wheel Extension Rim	410000—		18
A 1828 R	Hook Bolt, used with A 1826 R Wheel Weights	410000—		
AA 483 R	Road Band with Supports	410000—		
AA 899 R	Mud Guard, Rear Wheel		250000—	19
AC 649 R	Lug, Cast Cone	410000—	250000—	18
AC 918 R	Road Band with Supports		250000—	
B 1563 R	Hook Bolt (Use with D2628 R Wheel Weight)	410000—		19
C 744 R	Washer, Hook Bolt (2" Outside Diameter 13/16" In- side Diameter)	410000—		19
C 744 R	Washer, Rear Wheel Support to Road Band Support Bolt (2" Outside Diameter, 13/16" Inside Diameter)	410000—	250000—	19
C 1027 R	Extension Rim, Drive Wheel (6")		250000—	19
C 1030 R	Clip, Rear Wheel Extension Rim	410000—	250000—	18
C 1294 R	Grouser, Meadow (Channel), R. H.		250000—	18
C 1295 R	Grouser, Meadow (Channel), L. H.		250000—	18
C 1517 R	Bolt with Nut, Sand Lug (3/4" x 2-1/4")	410000—	250000—	18
C 1646 R	Lug, Button	410000—	250000—	18
C 2147 R	Support, for AC918 R Road Band		250000—	19
C 2148 R	Support, Rear Wheel, to Road Band Support	410000—		19
C 2199 R	Lug, Sand	410000—	250000—	18
D 233 R	Lug, Spade, 4" High	410000—	250000—	18
D 411 R	Bolt, Spade Lug (3/4" x 1-7/8")	410000—	250000—	18
D 411 R	Bolt, Road Band Support to Rear Wheel Support	410000—	250000—	18
D 411 R	Bolt, Rear Wheel Support to Rear Wheel (Road Band)	410000—	250000—	18
D 530 R	Grouser (2-1/4" x 2-1/4" x 5/16" x 22"), R. H.		250000—	18
D 531 R	Grouser (2-1/4" x 2-1/4" x 5/16" x 22"), L. H.		250000—	18
D 574 R	Grouser (2-1/4" x 2-1/4" x 5/16" x 16"), R. H.	410000—	250000—	18
D 575 R	Grouser (2-1/4" x 2-1/4" x 5/16" x 16"), L. H.	410000—	250000—	18
D 938 R	Washer, Spade Lug and Sand Lug	410000—	250000—	18
D 1078 R	Lug, Spade (5" High)	410000—	250000—	18
D 1283 R	Lug, Spade, "A" Shape (5" High)	410000—	250000—	18
D 2121 R	Lug, Spade, Heavy Duty (5" High)	410000—	250000—	18
D 2184 R	Hook Bolt with Nut for Inner Rear Wheel Weight	410000—		19
D 2447 R	Lug, Spade, Heavy Duty (4" High)	410000—	250000—	18
D 2629 R	Washer, Wheel Weight Bolt (1-7/16" Outside Di- ameter, 25/32" Inside Diameter)	410000—	250000—	19
WHEEL SCRAPERS				
1705 R	Washer, Front Wheel Scraper (A only)	410000—		19
A 651 R	Bracket, Front Wheel Scraper	410000—		
A 652 R	Blade, Front Wheel Scraper (A only)	410000—		19
A 1084 R	Bracket, Scraper, Rear Wheel, R. H.	410130—		19
A 1085 R	Bracket, Scraper, Rear Wheel, L. H.	410130—		19
A 1090 R	Spacer, Scraper Bracket, Rear Wheel	410130—		19
A 1265 R	Bar, Scraper, Rear Wheel, R. H. and L. H.		252199—252691	19
A 1266 R	Blade, Scraper, Rear Wheel		252199—	19
A 1267 R	Bar, Scraper, Extension, Rear Wheel		252199—	19
A 1357 R	Bar, Scraper, Rear Wheel, R. H.		252692—	19
A 1358 R	Bar, Scraper, Rear Wheel, L. H.		252692—	19
AA 399 R	Scraper, Front Wheel, Complete (A only)	410000—		19
AA 700 R	Holder, A1087 R, Scraper Blade, Rear Wheel	410130—		19
AA 701 R	Blade, Complete, Scraper, Rear Wheel	410130—		19
C 264 R	Holder, Scraper Blade		252199—	19
E 2229 R	Stud, Scraper Bracket, Rear Wheel	410130—		19
EMERGENCY BRAKE (AR ONLY)				
A 133 R	Washer on Differential Shaft		250000—	22
A 348 R	Spring, Brake Lever		250000—	22
A 406 R	Gasket, Differential Quill (Thin)		250000—	22
A 413 R	Gasket, Brake Housing Opening Cover to Case		250000—	22
A 610 R	Shim, Differential Bearing Quill, Steel (Thick)		250000—	22
A 611 R	Shim, Differential Bearing Quill, Steel (Thin)		250000—	22
A 612 R	Gasket, Differential Bearing Quill (Thick)		250000—	22
A 973 R	Shaft, Brake Band Lever		250000—	22
A 975 R	Retainer, Brake Housing Felt		250000—	22
A 976 R	Drum, Brake		250000—	22
A 981 R	End, Brake Band Adjusting		250000—	22
A 982 R	Lining, Brake Band		250000—	22
A 983 R	Nut, Brake Band Adjusting		250000—	22
A 986 R	Pin, Brake Pedal		250000—	22
A 987 R	Rod, Brake Operating		250000—	22
A 988 R	Lever, Brake		250000—	22

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
EMERGENCY BRAKE (AR ONLY)—Continued				
A 989 R	Cover, Brake Housing Opening.....		250000-	22
AA 582 R	Housing, A972 R, Brake, with Lever Shaft.....		250000-	22
AA 583 R	Lever, Brake Band.....		250000-	22
AA 584 R	Brake Band with Lining.....		250000-	22
AA 586 R	Pedal, A984 R, with Latch, Brake.....		250000-	22
AA 610 R	Support, Brake Lever.....		250000-	22
AA 664 R	Washer, Felt, Brake Housing.....		250000-	22
C 284 R	Yoke, Brake Operating Rod.....		250000-	22
C 1067 R	Pin, Brake Rod Yoke.....		250000-	22
D 1950 R	Spring, Brake Band Adjusting End.....		250000-	22
D 1969 R	Pin in Brake Band (Drilled).....		250000-	22
JD 7759	Alemite Fitting No. 1610, in Brake Housing.....		250000-	22
DIFFERENTIAL BRAKES				
27 R	Washer on Brake Latch Pivot.....	410000-		22
A 88 R	Pedal, Brake, R. H.....	410000-		22
A 89 R	Pedal, Brake, L. H.....	410000-		22
A 133 R	Washer, Brake Shaft Pinion.....	410000-424024	250000-251485	22
A 134 R	Pin, Brake Adjusting.....	410000-	250000-	22
A 149 R	Roller, Brake Shoe.....	410000-	250000-	22
A 151 R	Screw, Brake Adjusting.....	410000-	250000-	22
A 152 R	Shaft, Brake Lever.....	410000-	250000-	22
A 321 R	Cam, Brake.....	410000-	250000-	22
A 348 R	Spring, Brake Shoe.....	410000-	250000-	22
A 348 R	Spring, Brake Lever.....		250000-	22
A 413 R	Gasket, Brake Housing to Transmission Case.....	410000-	250000-	22
A 441 R	Lining, Brake Shoe.....	410000-	250000-	22
A 509 R	Bushing, Brake Shaft.....	410000-424024	250000-251485	22
A 510 R	Guard, Brake Shaft Dust (Outer).....	410000-	250000-	22
A 514 R	Pinion, Brake Shaft.....	410000-424024	250000-251485	22
A 986 R	Pin, Brake Pedal (Drilled).....		250000-	22
A 988 R	Lever, Brake.....		250000-	22
A 1055 R	Arm, Brake Lever Shaft.....		250000-	22
A 1056 R	Rod, Brake Operating.....		250000-	22
A 1162 R	Pinion, Brake Shaft.....	424025-	251486-	22
A 1163 R	Bushing, Brake Shaft (Outer).....	424025-	251486-	22
A 1168 R	Washer, Brake Shaft Pinion.....	424025-	251486-	22
A 1169 R	Bushing, Brake Shaft (Inner).....	424025-	251486-	22
A 2299 R	Washer on Brake Shoe Roller Pin.....	488772-	258045-	22
AA 314 R	Shoe with Lining, Brake.....	410000-	250000-	22
AA 319 R	Support, Brake Latch.....	410000-464071		22
AA 352 R	Housing, Brake, A508 R, with Bushing.....	410000-424024	250000-251485	22
AA 353 R	Shaft and Drum, Brake.....	410000-424024	250000-251485	22
AA 586 R	Pedal, A984 R, Brake, with Latch, R. H. and L. H.....		250000-	22
AA 807 R	Shaft and Drum, Brake.....	424025-	251486-	22
AA 811 R	Oil Cup, Outer Brake Shaft Bearing.....	424025-	251486-	22
AA 1079 R	Housing, Brake, A1161 R, with Bushing and Oiler.....	424025-	251486-	22
AA 2124 R	Pin, Break Shoe Roller, with Washers (Substitute for A345 R).....	410000-	250000-	22
AB 330 R	Support, Brake Latch.....	464072-		22
B 305 R	Latch, Brake.....	464072-		22
C 284 R	Yoke, Brake Operating Rod.....		250000-	22
C 1067 R	Pin, Brake Rod Yoke.....		250000-	22
C 2182 R	Latch, Brake.....	410000-464071		22
D 136 R	Washer, Brake Shaft.....	424025-	251486-	22
D 1821 R	Washer, Brake Shaft Pinion.....	410000-424024	250000-251485	22
JD 7760	Alemite Fitting No. 1612, Brake Housing.....	410000-424024	250000-251485	22
K 2525 R	Pipe Plug in Brake Housing.....		250000-	22
REAR WHEEL BRAKES (AR ONLY)				
A 348 R	Spring, Brake Shoe.....		250000-	23
A 676 R	Woodruff Key in Brake Cross Shaft.....		250000-	23
A 981 R	End, Brake Band Adjusting.....		250000-	23
A 983 R	Nut, Brake Band Adjusting.....		250000-	23
*A 1319 R	Pivot, Brake Pedal.....		250000-	23
*A 1321 R	Lining, Brake Band.....		250000-	23
*A 1322 R	Pedal, Brake.....		250000-	23
*A 1323 R	Pin, Brake Pedal.....		250000-	23
A 1363 R	Carrier, Brake Shoe.....		250000-	23
A 1364 R	Screw, Brake Adjusting.....		250000-	23
A 1365 R	Shaft, Brake Cam.....		250000-	23
A 1366 R	Pin, Brake Adjusting.....		250000-	23

*Repairs only for emergency brake on AR tractors equipped with rear wheel brakes.

24 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
REAR WHEEL BRAKES (AR ONLY)—Continued				
A 1368 R	Facing, Brake.....		250000-	23
A 1369 R	Bracket, Brake Shaft, R. H.....		250000-	23
A 1370 R	Bracket, Brake Shaft, L. H.....		250000-	23
A 1371 R	Lever, Brake Cross Shaft.....		250000-	23
A 1372 R	Shaft, Brake Cross.....		250000-	23
A 1373 R	Lever, Brake Hand.....		250000-	23
A 1374 R	Rod, Hand Lever Pawl.....		250000-	23
A 1375 R	Latch Plate, Brake.....		250000-	23
A 1459 R	Pedal, Brake, R. H.....		250000-	23
A 1460 R	Pedal, Brake, L. H.....		250000-	23
A 1461 R	Spring, Brake Pedal, R. H.....		250000-	23
A 1462 R	Spring, Brake Pedal, L. H.....		250000-	23
AA 610 R	Support, Brake Lever.....		2500-	22
*AA 976 R	Housing, A1318 R, Brake, with Pedal Pivot and Bear- ing Cup.....		250000-	23
*AA 977 R	Band, Brake, with Lining.....		250000-	23
AA 1043 R	Shoe, Brake, A1367 R, with Facing.....		250000-	23
AA 1046 R	Bracket, A1370 R, Left Brake Shaft with Latch Plate.....		250000-	23
B 178 R	Pin, Brake Control Link.....		250000-	23
*B 639 R	Latch, Brake Pedal.....		250000-	23
B 886 R	Link, Brake Control.....		250000-	23
*C 1224 R	Spring, Brake Pedal.....		250000-	23
D 1950 R	Spring, Brake Band Adjusting End.....		250000-	23
D 2594 R	Roller, Brake Shoe.....		250000-	23
D 2595 R	Pin, Brake Shoe Roller.....		250000-	23
D 2596 R	Cam, Brake.....		250000-	23
D 2606 R	Pawl, Hand Lever.....		250000-	23
D 2608 R	Spring, Hand Lever Pawl Rod.....		250000-	23
D 2609 R	Button, Hand Lever Pawl Rod.....		250000-	23
FRONT AXLE AND FRONT END SUPPORT				
A 876 R	Bushing, Front Axle Pivot Pin, Front (AW only).....	410000-		23
A 877 R	Bushing, Knuckle Pin (AW only).....	410000-		23
A 880 R	Pin, Front Axle Pivot, Front (AW only).....	410000-		23
A 881 R	Pin, Front Axle Pivot, Rear (AW only).....	410000-		23
A 882 R	Bushing, Front Axle Pivot Pin, Rear (AW only).....	410000-		23
A 887 R	U-Bolt, Front Axle (5/8") (AW only).....	410000-		23
A 890 R	Washer, Front Wheel Knuckle Thrust (AW only).....	410000-		23
A 950 R	Support, Front End.....		250000-	24
A 952 R	Axle, Front.....		250000-	23
A 955 R	Pin, Front Axle Pivot.....		250000-	23
A 1101 R	Bolt, Front Axle Lock (1" x 7-1/8") (AW only).....	410000-		23
A 1297 R	Eyebolt, Front End Support.....		252644-	24
AA 296 R	Support, Front End (A only).....	410000-476999		24
AA 569 R	Radius Rods with Pivot.....		250000-	24
AA 631 R	Support, Front End (Except A).....	410000-476999		24
AA 633 R	Pivot Bracket, A1050 R, with Bushing, Front Axle (AW only).....	410000-		23
AA 729 R	Housing, A1100 R, with Pivot Pin, Front Axle (AW only).....	410000-		23
AA 730 R	Knee with Bushing and Pin, Front Axle (AW only).....	410000-		23
AA 1168 R	Knuckle with Spindle and Dust Excluder (AW only).....	410000-		23
AA 1809 R	Support, Front End.....	477000-487999		24
AA 2222 R	Support, Front End.....	488000-		24
AB 411 R	Axle with Bearing Spacer, Front (A N only).....	410000-		23
AD 452 R	Nut, Front Wheel Knuckle (Except A N).....	410000-	250000-	23
AD 1381 R	Knuckle, Front Wheel, with Bushing and Dust Ex- cluder.....		250000-	23
B 547 R	Spacer, Front Wheel Bearing (A N only).....	410000-		23
B 548 R	Nut, Front Axle Bearing Adjusting (A N only).....	410000-		23
B 549 R	Lock Plate, Front Axle Nut (A N only).....	410000-		23
B 550 R	Cap Screw, Front Axle Lock Plate, Special Dog Point (3/8" x 1/2") (A N only).....	410000-		23
B 551 R	Nut, Front Axle (A N only).....	410000-		23
B 817 R	Pin, Front Axle Pivot Pin to Front End Support (Drilled).....		252250-	24
C 535 R	Nut, Front Axle (A N only).....	410000-		23
D 186 R	Pin, Thrust Washer Anchor (AW only).....	410000-		23
D 486 R	Bushing, Radius Rod Pivot.....		250000-	24
D 843 R	Stud, Radius Rod Pivot.....		250000-	24
D 844 R	Washer, Radius Rod Pivot.....		250000-	24
D 1250 R	Washer, Knuckle Thrust.....		250000-	23

*Repairs only for emergency brake on AR tractors equipped with rear wheel brakes.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
FRONT AXLE AND FRONT END SUPPORT —Continued				
D 1701 R	Pin, Spindle.....		250000—	23
D 1881 R	Cap, Knuckle Dust (4 used).....		250000—	23
D 1888 R	Bushing, Front Wheel Knuckle (4 used).....		250000—	23
D 1969 R	Pin, Front Axle Pivot Pin to Front End Support.....		250000—252249	24
JD 7759 R	Alemite Fitting No. 1610, in Front Axle and Knuckles (5 used).....		250000—	23
JD 7760 R	Alemite Fitting No. 1612, in Radius Rod Pivot.....		250000—	24
FRONT WHEELS AND FRONT WHEEL EQUIPMENT				
27 R	Washer on Weight to Wheel Bolts (3 used) (Disk Type)	410000—	250000—	25
A 215 R	Band, Front Wheel Guide (1-1/2" High) (Except A N)	410000—		26
A 777 R	Band, Front Wheel Guide (2" High) (Except A N).....	410000—		26
A 1132 R	Band, Front Wheel Guide (Half) (1-1/2" High) (2 used per Wheel) (A N only).....	410000—		26
A 1556 R	Gasket, Front Wheel Hub Cap (Disk Type).....	410000—	250000—	25
A 1828 R	Hook Bolt, Front Wheel Weight (Spoke Type).....	410000—	250000—	25
AA 663 R	Felt Washer, Front Wheel (Except A N).....	410000—	250000—	25
AA 787 R	Wheel, Front, with Bearing Cups (A N only).....	420660—		25
AA 847 R	Wheel, Front, with Bearing Cups (For 7.50" x 10" or 9.00" x 10" Rubber Tires) (A N only).....	410000—		25
AA 1395 R	Hub with Bearing Cups, Front Wheel.....		254515—	25
AA 1399 R	Hub with Bearing Cups, Front Wheel (Disk Type) (Except A N).....	445325—		25
AA 1407 R	Hub Cap with Alemite Fitting, Front Wheel (Disk Type) (Except A N).....	445325—	254515—	25
AA 2345 R	Wheel, Front, with Bearing Cups, less Hub Caps (A only)	488000—		25
AB 474 R	Washer, Front Wheel, Felt (A N only).....	410000—		25
AC 119 R	Hub Cap with Alemite Fitting (Except A N).....	410000—	250000—	25
AC 513 R	Hub, C391 R, with Bearing Races (A only).....	410000—		25
AC 847 R	Wheel, Front C334 R, with Bolts (A only).....	410000—		25
AC 885 R	Wheel, Front, with Bearing Cups, less Hub Cap (AW only).....	410000—		25
AC 885 R	Wheel, Front, with Bearing Cup less Hub Cap (A only)	410000—487999		25
AC 1062 R	Wheel, Front, Spoke Type, with Bearing Cups and Hub Cap (For 6.00" x 16" Rubber Tires).....		250000—254514	25
AC 1088 R	Wheel, Front, Spoke Type, with Bearing Cups (For 5.50" x 16" or 5.25" x 16" Rubber Tires (Except A N)	410000—445324		25
AD 900 R	Wheel, Front, with Hub Cap and Bearing Cups.....		250000—	25
B 89 R	Retainer, Front Wheel Felt (A N only).....	410000—		25
C 677 R	Gasket, Front Wheel Hub Cap (Except A N).....	410000—	250000—	25
C 1732 R	Band, Front Wheel Guide (2-1/2" High) (Except A N)	410000—		26
C 2308 R	Rim, Front Wheel Extension (4" Wide) (A only).....	410000—		26
C 2309 R	Clip, Front Wheel Extension (use with C2308 R) (A only).....	410000—		26
D 582 R	Rim, Front Wheel Extension (5" Wide).....		250000—	26
D 583 R	Clamp, Front Wheel Extension Rim to Wheel.....		250000—	26
D 584 R	Washer, Front Wheel Extension Rim Clamp.....		250000—	26
D 635 R	Retainer, Front Wheel Felt (Except A N).....	410000—	250000—	25
D 827 R	Washer on Front Wheel Weight Hook Bolt (3 used) (Spoke Type).....	410000—	250000—	25
D 849 R	Band, Front Wheel Guide (Half) for Listed Corn (2 used per Wheel).....		250000—	26
D 1050 R	Band, Front Wheel Guide (Half) (3-1/2" High) for Listed Corn (2 used per Wheel).....		250000—	26
D 1524 R	Band, Front Wheel Guide (2-1/2" High).....		250000—	26
D 1551 R	Clamp, Front Wheel Weight.....		250000—	25
JD 15 R	Bolt, Front Wheel, Hub Cap to Hub (For Disk Type Wheel) (Except A N).....	410000—483259	250000—257176	25
JD 17 R	Bolt, Front Wheel Hub Cap to Hub (For Disk Type Wheel) (Except A N).....	483260—	257177—	25
JD 18 R	Bolt, Front Wheel Spacer to Front Wheel Hub.....	410000—		
JD 1232 R	Disk and Rim, Front Wheel (For 5.50" x 16" Rubber Tires) (Except A N).....	445325—	254515—	25
JD 7216 R	Cone with Rollers, Front Wheel Outer Bearing (Ex- cept A N).....	410000—	250000—	25
JD 7222 H	Cone with Rollers, Front Wheel R. H. and L. H. Bearings (A N only).....	410000—		25
JD 7224 R	Cone with Rollers, Front Wheel Inner Bearing (Ex- cept A N).....	410000—		25
JD 7266 R	Cup, Front Wheel, R. H. and L. H. Bearings (A N only).....	410000—		25

26 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
FRONT WHEELS AND FRONT WHEEL EQUIPMENT—Continued				
JD 7266 R	Cup, Front Wheel Outer Bearing (Except A N)	410000—	250000—	25
JD 7270 R	Cup, Front Wheel Inner Bearing (Except A N)	410000—	250000—	25
JD 7759	Alemite Fitting No. 1610, Front Axle and Front Wheel Hub Cap	410000—	250000—	25
PEDESTAL				
A 56 R	Quill, Steering Worm (Except AW)	410000—476999		27
A 257 R	Cover, Steering Gear Housing	410000—476999		27
A 275 R	Retainer, Steering Shaft Cork (Except AW)	410000—476999		27
A 283 R	Washer, Spindle, Lower (Steel)	410000—		27
A 288 R	Gasket, Steering Worm Quill, Thick	410000—476999		27
A 289 R	Gasket, Steering Worm Quill, Thin	410000—476999		27
A 360 R	Spring, Steering Shaft Oil Seal (Except AW)	410000—476999		27
A 377 R	Snap Ring, Steering Worm Quill (Except AW)	410000—476999		27
A 394 R	Washer, Cork, Steering Shaft Worm Seal (Except AW)	410000—476999		27
A 396 R	Packing, Spindle Adjusting Bushing	410000—		27
A 435 R	Gasket, Steering Gear Housing Cover	410000—476999		27
A 490 R	Shim, Steering Spindle, Upper	410000—		27
A 491 R	Bushing, Steering Spindle Eccentric	410000—		27
A 776 R	Stop Pin, Steering Sector (Except AW)	411583—		27
A 875 R	Stop Pin, Steering Sector (AW only)	410000—476999		27
A 877 R	Bushing, Pedestal Lower (1 used) (AW only)	410000—		27
A 1052 R	Gasket, Steering Worm Quill (AW only)	410000—476999		27
A 1129 R	Washer, Spindle, Lower (Steel) (A N only)	410000—		27
A 1130 R	Retainer, Spindle Lower (Cork) (A N only)	410000—		27
A 1131 R	Washer, Spindle Lower (Cork) (A N only)	410000—		27
A 1422 R	Washer, Spindle Lower (Cork) (A only)	439465—		27
A 1423 R	Cap, Spindle Lower (A only)	439465—		27
A 1892 R	Nut, Special Hex., on Pedestal Lower Implement At- tachment Studs	460000—		27
A 2002 R	Stop Pin, Steering Sector (AW only)	410000—476999		27
A 2118 R	Cover, Steering Gear Housing	477000—		27
A 2158 R	Stud, Pedestal to Front End (2 used)	477000—		27
AA 381 R	Pedestal, A489 R, with Stud and Stop Pin (A only)	410000—459999		27
AA 632 R	Pedestal, A1047 R, with Bushing, Stop Pin and Bear- ing Cups (AW only)	410000—476999		27
AA 634 R	Quill, A1051 R, Steering Worm, with Bearing Cup (AW only)	410000—476999		27
AA 756 R	Pedestal, A1128 R, with Stop Pin (A N only)	410000—476999		27
AA 1612 R	Pedestal, A1933 R, with Stud and Stop Pin (A only)	460000—476999		27
AA 1798 R	Pedestal, A2117 R, with Stop Pin and Bearing Cup (A only)	477000—		27
AA 1830 R	Pedestal, A2169 R, with Stop Pin and Bearing Cup (AW only)	477000—		27
AA 2282 R	Pedestal, A2168 R, or A2450 R, with Stop Pin and Bearing Cup (A N only)	477000—		27
B 33 R	Nut, Steering Shaft Packing (AW only)	410000—		27
B 33 R	Nut, Steering Shaft Packing (Except AW)	477000—		27
B 1532 R	Stop Pin, Steering Sector (AW only)	477000—		27
B 1564 R	Packing, Steering Shaft (Except AW)	477000—		27
B 1564 R	Packing, Steering Shaft (AW only)	410000—		27
C 1479 R	Stud in Pedestal Lower Implement Attachment Holes	477000—		27
C 2271 R	Stud, Pedestal to Front End (4 used) (3/4" x 2-1/2")	477000—		27
C 2271 R	Stud, Pedestal to Front End (In Lower Hole) (1 used) (A only)	410000—476999		27
C 2325 R	Washer, Spindle, Lower (Cork)	410000—439464		27
C 2326 R	Cap, Spindle, Lower	410000—439464		27
C 2327 R	Gasket, Spindle Lower Cap	410000—		27
JD 7663 R	Bearing, Steering Spindle, Lower (A only)	410000—		27
JD 7679 R	Bearing, Steering Spindle, Lower (A N only)	410000—		27
JD 7759	Alemite Fitting No. 1610, Upper Pedestal Bearing	410000—		27
K 2525 R	Pipe Plug, Steering Housing Drain	410000—481660		27
STEERING PARTS				
294 R	Stud, Steering Housing to Transmission Case (2 used)		250000—	28
A 59 R	Bracket, Steering Shaft Bearing	410000—413398		5
A 110 R	Sector, Steering	410000—476999		28
A 133 R	Washer, Steering Gear Arm (AW only)	410000—		28
A 133 R	Washer, Steering Sector	410000—		28
A 301 R	Bushing, Steering Shaft Rear Bearing (For A57 R Steering Shaft Bearing)	410000—459999		5

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
STEERING PARTS—Continued				
A 389 R	Support, Steering Shaft, Rear.	410000-413398		5
A 492 R	Lockscrew, Steering Spindle Adjusting Bushing.	410000-		
A 891 R	Arm, Steering (2 used) (AW only)	410000-		28
A 892 R	Rod, Drag Link (AW only)	410000-		28
A 893 R	Clamp Half, Drag Link (8 used) (AW only)	410000-		28
A 934 R	Tube, Vertical Steering Shaft.		250000-	28
A 936 R	Bushing, Vertical Steering Shaft, Lower.		250000-	28
A 937 R	Housing, Steering Gear.		250000-	28
A 939 R	Gear, Steering Worm.		250000-	28
A 940 R	Arm, Steering Gear.		250000-	28
A 943 R	Support, Steering Shaft.		250000-	5
A 946 R	Bracket, Steering Shaft Bearing.		250000-	5
A 956 R	Tie Rod		250000-	28
A 1049 R	Arm, Steering Gear, Pedestal (AW only)	410000-		28
A 1421 R	Dust Excluder, Front Wheel (A only)	439465-		28
A 1424 R	Dust Excluder, Front Wheel (AW only)	439465-		28
A 1910 R	Bushing, Steering Shaft Bearing (For A1909 R Steering Shaft Bearing)	460000-		5
A 2123 R	Sector, Steering	477000-		28
A 2159 R	Shim, Steering Worm Bearing Housing (Thin)	477000-		27
A 2160 R	Shim, Steering Worm Bearing Housing (Medium)	477000-		27
A 2161 R	Shim, Steering Worm Bearing Housing (Thick)	477000-		27
A 2215 R	Washer on Steering Gear Shaft.		250000-	28
AA 248 R	Shaft and Worm, Steering.	410000-476999		28
AA 380 R	Wheel, Steering.	410000-	250000-	28
AA 567 R	Shaft and Worm, Steering.		250000-	28
AA 568 R	Drag Link, Complete.		250000-	28
AA 755 R	Yoke and Spindle, Front Wheel (A N only)	410000-476999		28
AA 1163 R	Double Knuckle with Spindle and Dust Excluders (A only) (Substitute for AA295 R)	410000-476999		28
AA 1168 R	Knuckle with Spindle and Dust Excluder (AW only)	410000-		23
AA 1575 R	Bearing, A1909 R, Steering Shaft, with Bushing	410000-		5
AA 1604 R	Steering Spindle with Nuts (AW only)	410000-476999		28
AA 1605 R	Shaft, Steering Gear Vertical (Substitute for A938 R)		250000-	28
AA 1702 R	Knuckle with Dust Excluder (Offset) (A only)	410000-		28
AA 1708 R	Knuckle Hub with Spindle (Offset) (A only)	410000-476999		28
AA 1771 R	Double Knuckle with Spindle and Dust Excluders (A only)	477000-		28
AA 1776 R	Shaft and Worm, Steering.	477000-		28
AA 1803 R	Yoke, Front Wheel (A N only)	410000-476999		28
AA 1828 R	Housing, A2122 R, with Cup, Steering Worm Bearing	477000-		27
AA 1829 R	Spindle with Nuts, Steering (AW only)	477000-		28
AA 1843 R	Knuckle Hub with Spindle (Offset) (A only)	477000-		28
AB 214 R	Bearing, B36 R, with Bushing, Steering Shaft, Upper		250000-	5
AC 352 R	Cover, Drag Link Dust (AW only)	410000-		28
AD 452 R	Nut, Front Wheel Knuckle (Except A N)	410000-	250000-	25
AD 1381 R	Knuckle, Front Wheel, with Bushings, Studs and Dust Excluders		250000-	23
B 37 R	Bushing, Steering Shaft, Upper Bearing.		250000-	5
B 111 R	Washer, Steering Arm (AW only)	410000-		28
B 389 R	Support, Steering Shaft, Rear.	413399-		5
B 392 R	Bracket, Steering Shaft Bearing.	413399-		5
B 1233 R	Clamp Half, Drag Link, Lower (AW only)	468414-		28
B 1532 R	Stop Pin, Steering Sector (AW only)	477000-		27
C 838 R	Bearing, Ball Stud, Drag Link and Tie Rod (AW only)	410000-	250000-	28
C 840 R	Screw Plug, Drag Link and Tie Rod (AW only)	410000-	250000-	28
C 977 R	Screw, Steering Gear Vertical Shaft Adjusting.		250000-	28
C 1109 R	End, Tie Rod.		250000-	28
C 1220 R	Dowel Pin, Steering Gear Housing.		250000-	28
C 1231 R	Gasket, Steering Worm Housing (Thick)		250000-	28
C 1242 R	Gasket, Steering Worm Housing (Thin)		250000-	28
C 2327 R	Gasket, Spindle Lower Cap (A only)	410000-		27
D 156 R	Bolt, Taper, Steering Knuckle Pivot Pin.		250000-	23
D 186 R	Pin, Thrust Washer Anchor (AW only)	410000-		23
D 342 R	Woodruff Key in Steering Shaft to Steering Wheel	410000-	250000-	28
D 467 R	Washer, Steering Arm Shim (AW only)	410000-		28
D 1250 R	Washer, Spindle Pin.		250000-	23
D 1673 R	Arm, Steering, R. H.		250000-	28
D 1674 R	Arm, Steering, L. H.		250000-	28
D 1701 R	Spindle Pin.		250000-	23
D 1766 R	Nut, Steering Worm Adjusting.		250000-	28

28 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
STEERING PARTS—Continued				
D 1768 R	Washer, Steering Worm Adjusting Nut, Oil Seal (Cork) (2 used)		250000—	28
D 1769 R	Housing, Steering Worm		250000—	28
D 1898 R	Stud, Steering Arm (4 used)		250000—	23
D 2638 R	Dust Excluder, Front Wheel		253145—	28
JD 7205 R	Retainer with Rollers, Steering Shaft Worm, Front and Rear	410000—	250000—	28
JD 7253 R	Cup, Steering Shaft Worm Bearing, Front and Rear	410000—	250000—	28
JD 7759	Alemite Fitting, No. 1610, Steering Worm Housing and Vertical Steering Shaft Lower Bushing		250000—	28
JD 7759	Alemite Fitting No. 1610, in Drag Link and Tie Rod (4 used)		250000—	28
JD 7759	Alemite Fitting No. 1610, in Lower Pedestal Bearing	410000-479999		28
DRAWBAR				
A 9 R	Roller, Drawbar	410000-414564		29
A 211 R	Swivel, Drawbar	410000-432496		29
A 212 R	Support, Drawbar Rear	410000—	250000—	29
A 216 R	Support, Drawbar, R. H.	410000—		29
A 217 R	Support, Drawbar, L. H.	410000—		29
A 334 R	Nut, Drawbar Clevis (Grip)	410000—	250000—	29
A 505 R	Support, Drawbar	410000-414564		29
A 506 R	End, Drawbar	410000-459999		29
A 507 R	Pin, Drawbar Roller	410000—	250000—	29
A 850 R	Roller, Drawbar	414565—	250000—	29
A 1020 R	End, Drawbar		250000-254702	29
A 1286 R	Swivel, Drawbar	432497—		29
A 1821 R	End, Drawbar	460000—		29
A 1822 R	End, Drawbar		254703—	29
AA 354 R	Swinging Drawbar Assembly	410000-432496		29
AA 605 R	Swinging Drawbar Assembly		250000—	29
AA 607 R	Support, Drawbar, with Brake Lever Pivot		250000—	29
AA 610 R	Brake Lever Support with Pivot		250000—	29
AA 956 R	Swinging Drawbar Assembly	432497—		29
D 349 R	Spacer, Drawbar Support	410000—	250000—	29
SEAT				
1706 R	Washer, on Seat to Seat Support Bolt	488000—	257961—	29
1707 R	Washer, Seat Clamp (Use with K-W Lighting)	410000—		29
A 60 R	Body, Seat Support	410000—		29
A 222 R	Channel, Seat Support	410000—		29
A 329 R	Bolt, Seat Spring (8" Long)	410000-412270		29
A 333 R	Nut, Seat Spring Bolt (Special)	410000—	250000—	29
A 618 R	Spring, Seat	412271—	250000—	29
A 619 R	Bolt, Seat Spring (9" Long)	412271—	250000—	29
A 928 R	Channel, Seat Support		250000—	29
A 929 R	Body, Seat Support		250000—	29
A 2298 R	Spacer, Seat Bolt	488000—	257961—	29
AA 379 R	Spring, with Bolt, Seat	410000-412270		29
AD 1606 R	Seat	410000—	250000—	29
C 1980 R	Pin, Channel Seat Support	410000—	250000—	29
C 1982 R	Washer, Seat Spring	410000—	250000—	29
C 1985 R	Spacer, Seat Clamp	410000-487999	250000-257960	29
D 1797 R	Nut, Seat Clamp	410000-487999	250000-257960	29
PLATFORM				
A 999 R	Platform		250000-252691	31
A 1000 R	Support, Platform, R. H.		250000-252198	31
A 1001 R	Support, Platform, L. H.		250000-252198	31
A 1002 R	Cross Angle, Platform (65" Long)		250000-252198	31
A 1258 R	Support, Platform, R. H.		252199-252691	31
A 1259 R	Support, Platform, L. H.		252199-252691	31
A 1260 R	Cross Angle, Platform (63-3/4" Long)		252199-252691	31
*A 1326 R	Platform		250000-258329	30
*A 1327 R	Brace, Platform, Rear		250000—	30
A 1341 R	Platform		252692-258329	31
A 1342 R	Cross Angle, Platform (63-3/4" Long)		252692-258329	30
A 1343 R	Support, Platform, R. H.		252692-258329	30
A 1344 R	Support, Platform, L. H.		252692-258329	30
A 2531 R	Platform		258330—	32
*A 2533 R	Platform		258330—	30
A 2534 R	Support, Platform, R. H.		258330—	30

*Repairs only for AR tractors equipped with rear wheel brakes.

JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS 29

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
PLATFORM—Continued				
A 2535 R	Support, Platform, L. H.		258330—	30
A 2536 R	Angle, Fender Support, R. H.		258330—	32
A 2537 R	Angle, Fender Support, L. H.		258330—	32
A 2542 R	Safety Shield		258330—	32
AA 318 R	Platform with Brake Latch Supports	410000—		30
AA 319 R	Support, Brake Latch	410000—464071		30
AA 598 R	Platform with Supports and Cross Angle		250000—252198	31
AA 905 R	Platform with Supports and Cross Angle		252199—252691	31
AA 1025 R	Platform with Supports and Cross Angle		252692—258329	31
AA 1032 R	Platform with Supports and Cross Angle		250000—258329	30
AA 3000 R	Platform with Supports and Cross Angle		258330—	32
*AA 3002 R	Platform with Support Angle		258330—	32
AB 330 R	Support, Brake Latch with Pivot	464072—		30
C 2182 R	Latch, Brake	410000—464071		22
FENDERS				
*A 241 R	Spacer, Brake Dust Guard		250000—	34
A 792 R	Pedestal, Fender, R. H. and L. H. (For AA467 R and A468 R Fenders)	410130—		33
A 963 R	Dust Shield, L. H.		250000—252691	34
A 968 R	Extension, Dust Shield, R. H.		250000—	34
A 969 R	Guard, Dust, Brake, L. H.		250000—	34
A 996 R	Brace, Fender, Front, R. H.		250000—	33
A 997 R	Brace, Fender, Front, L. H.		250000—	33
A 1057 R	Extension, Dust Shield, Brake, L. H. (Used only with Differential Brakes)		250000—	34
A 1078 R	Support, R. H. Citrus Fender, Front		250000—	34
A 1079 R	Plate, R. H. Citrus Fender, Front Support		250000—	34
A 1080 R	Extension, R. H. Citrus Fender, Front Support		250000—	34
A 1081 R	Support, L. H. Citrus Fender, Front		250000—	34
A 1258 R	Support, Platform, R. H.		252199—252691	31
A 1259 R	Support, Platform, L. H.		252199—252691	31
A 1260 R	Cross Angle, Platform (63-3/4" Long)		252199—252691	31
A 1359 R	Shield, Dust, L. H.		252692—	34
AA 467 R	Fender, R. H.	410130—		33
AA 468 R	Fender, L. H.	410130—		33
AA 591 R	Fender, R. H.		250000—252198	33
AA 592 R	Fender, L. H.		250000—252198	33
AA 595 R	Shield, Dust, and Fender Reinforcement, R. H.		250000—	34
AA 596 R	Guard, Pulley		250000—	34
AA 692 R	Fender, Citrus Grove, R. H.		250000—252198	34
AA 693 R	Fender, Citrus Grove, L. H.		250000—252198	34
AA 901 R	Fender, R. H.		252199—252691	33
AA 902 R	Fender, L. H.		252199—252691	33
AA 907 R	Fender, Citrus Grove, R. H.		252199—252691	34
AA 908 R	Fender, Citrus Grove, L. H.		252199—252691	34
*AA 987 R	Guard, Dust, Brake, with Flange		250000—	34
AA 1021 R	Fender, R. H.		252692—	33
AA 1022 R	Fender, L. H.		252692—	33
AA 1027 R	Fender, Citrus Grove, R. H.		252692—	34
AA 1028 R	Fender, Citrus Grove, L. H.		252692—	34
*AA 1034 R	Fender, R. H.		250000—	33
*AA 1035 R	Fender, L. H.		250000—	33
AA 1112 R	Fender, Front, L. H.		252799—	34
AA 1582 R	Fender, R. H., (Cannot be used with 1937 or previous Hand Lift Cultivators)	410000—		33
AA 1583 R	Fender, L. H. (Cannot be used with 1937 or previous Hand Lift Cultivators)	410000—		33
MAGNETO, SPARK PLUGS, CABLES				
629 R	Washer, Magneto to Governor Case	410000—	250000—	35
A 43 R	Flange, Magneto Drive	410000—424024	250000—251485	35
A 470 R	Clamp, Spark Plug Cable	410000—	250000—	35
A 471 R	Clip, Spark Plug Cable	410000—	250000—	35
A 500 R	Gasket, Magneto to Governor Case	410000—	250000—	35
A 1134 R	Insulator, Spark Plug and Wire Terminal (Rubber)	410000—		35
A 2303 R	Flange, Magneto Drive	488000—	258800—	35

*Repairs only on AR tractors equipped with rear wheel brakes.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
MAGNETO, SPARK PLUGS, CABLES				
—Continued				
AA 201 R	Magneto (Fairbanks Morse Type RV2A) (Substitute AH653 R)	410000-424024	250000-251485	35
AA 1084 R	Porcelain for AC600 R Spark Plug (Champion No. 2)	410000-487999	250000-	35
AA 1129 R	Shield, Spark Plug, and Spark Plug Cables.	414810-438176	35
AA 1130 R	Shield and Cable Conduit, Spark Plug.	438177-	35
AA 1225 R	Cable, Spark Plug, R. H.	478500-487999	257000-258799	35
AA 1225 R	Cable, Spark Plug, L. H.	410000-466399	250000-255339	35
	Except	462100-462499	35
		464500-465099	35
AA 1225 R	Cable, Spark Plug, L. H.	488000-	35
AA 1890 R	Cable, Spark Plug, R. H.	410000-424024	250000-251485	35
AA 1890 R	Cable, Spark Plug, L. H.	478500-487999	258800-	35
AA 2044 R	Spark Plug (Edison-Splitdorf)	410000-487999	250000-	35
AB 336 R	Conduit, Spark Plug Cable.	424025-438176	251486-	35
AB 706 R	Magneto (Fairbanks Morse Type RV2B) (Substitute either AB757 R or AD1400 R)	424025-462099	251486-255339	35
	Except	462500-464499	35
		465100-466399	35
AB 757 R	Magneto (Wico Type AP477 B)	478500-487999	257000-258799	35
AB 829 R	Cable, Spark Plug, R. H.	424025-466399	251486-255339	35
	Except	462100-462499	35
		464500-465099	35
AB 829 R	Cable, Spark Plug, R. H.	488000-	258800-	35
AC 600 R	Spark Plug, No. 2 (Champion)	410000-487999	250000-	35
		462100-462499	35
AD 1400 R	Magneto (Edison-Splitdorf Type CD)	464500-465099	255340-256999	35
		466400-478499	35
AD 1415 R	Cable, Spark Plug, L. H.	466400-478499	255340-256999	35
AD 1454 R	Cable, Spark Plug, R. H.	462100-462499	35
	Also on	464500-465099	35
AD 1454 R	Cable, Spark Plug, L. H.	466400-478499	35
	Also on	462100-462499	35
		464500-465099	35
AD 1498 R	Cable, Spark Plug, L. H.	257000-258799	35
AH 653 R	Magneto (Wico Type C)	488000-	258800-	35
AH 702 R	Spark Plug (Edison-Splitdorf)	488000-	35
AH 830 R	Spark Plug (Champion)	488000-	35
B 281 R	Flange, Magneto Drive.	424025-487999	251486-258799	35
B 465 R	Clamp, Spark Plug Cable Conduit.	424025-	251486-	35
C 1300 R	Safety Nipple, Spark Plug Wire (Rubber)	410000-466399	250000-255339	35
C 2331 R	Porcelain for AC600 R Spark Plug (Champion C4 or 3X)	410000-487999	250000-	35
D 465 R	Gasket, Spark Plug	410000-487999	250000-	35
D 2808 R	Gauge, Contact Point (For AD1400 R Magneto)	462100-487499	255340-256999	35

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AA201 R MAGNETO PARTS (Fairbanks-Morse Type RV2A)			
A 692 R	Insulating Strip, Distributor Bearing.....	509-	36
A 693 R	Cover, Frame Top.....	509-	36
A 694 R	Gasket, Frame Top Cover.....	509-	36
A 695 R	Gasket, Brush Holder.....	509-	36
A 698 R	Nut, Primary Lead Wire.....	509-	36
A 698 R	Nut, Stationary Contact Screw.....	509-	36
A 699 R	Screw, Breaker Bar Clip.....	509-726	36
A 700 R	Snap Ring, Distributor Shaft.....	509-	36
A 701 R	Screw, Bridge Clamp.....	509-	36
A 702 R	Washer, Cork, Distributor Bearing Oil Seal.....	509-	36
A 702 R	Washer, Cork, Rotor Shaft Bearing.....	509-	36
A 703 R	Retainer, Distributor Bearing Oil Seal Washer.....	509-	36
A 704 R	Washer, Flat, Distributor Bearing.....	509-	36
A 705 R	Screw, Breaker Bar Clip.....	727-	36
A 705 R	Screw, Distributor Rotor.....	509-	36
A 706 R	Snap Ring, Distributor Cup.....	509-	36
A 707 R	Spacer, Distributor Bearing Cup.....	509-	36
A 708 R	Lock Nut, Stationary Contact Screw and Point.....	509-	36
A 709 R	Screw, Stationary Contact Support.....	3482-179114	36
A 710 R	Support, Stationary Contact.....	509-179114	36
A 711 R	Rivet, Stationary Contact Support.....	509-3481	36
A 712 R	Insulator, Stationary Contact Support.....	509-179114	36
A 713 R	Insulator, Stationary Contact Support Rivet.....	509-3481	36
A 714 R	Insulator, Stationary Contact Support Screw.....	509-3481	36
A 715 R	Pin, Breaker Bar Fulcrum.....	509-	36
A 716 R	Insulating Strip, Rotor Bearing.....	509-	36
A 717 R	Insulating Washer, Rotor Bearing.....	509-	36
A 718 R	Terminal, Connection Primary Lead Wire.....	509-	36
A 719 R	Shell, Impulse Coupling.....	509-	36
A 720 R	Screw, Condenser.....	509-	36
A 721 R	Retainer, Rotor Shaft Bearing, Cork Washer.....	509-	36
A 722 R	Gear, Rotor.....	509-	36
A 723 R	Woodruff, Key, Rotor Gear Drive.....	509-725	36
A 724 R	Oil Seal, Frame, Cork.....	509-	36
A 765 R	Lock Washer, Breaker Bar Clip Screw.....	509-726	36
A 766 R	Lock Washer, Breaker Bar Clip Screw.....	509-	36
A 766 R	Lock Washer, Stationary Contact Support Screw.....	509-	36
A 766 R	Lock Washer, Primary Lead Nut.....	509-	36
A 766 R	Lock Washer, Distributor Rotor Screw.....	509-	36
A 766 R	Lock Washer, Condenser Screw.....	509-	36
A 767 R	Lock Washer, Frame Screws.....	509-	36
A 767 R	Lock Washer, Brush Holder Screws.....	509-	36
A 768 R	Lock Washer, Bridge Clamp Screw.....	509-	36
A 768 R	Lock Washer, End Cap Screw.....	509-	36
A 769 R	Screw, End Cap.....	509-	36
A 770 R	Gasket, End Cap.....	509-	36
A 894 R	Pin, Rotor Gear Drive.....	726-	36
A 1046 R	Rivet, Impulse Pawl.....	509-136199	36
A 1102 R	Rivet, Stationary Contact Support.....	3482-	36
A 1103 R	Insulator, Stationary Contact Support Rivet.....	3482-	36
A 1104 R	Insulator, Stationary Contact Support Screw.....	3482-	36
A 2074 R	Screw, Stationary Contact Support.....	509-3481	36
AA 414 R	Brush Holder with Screws (less Brush).....	509-	36
AA 415 R	Distributor Brush with Spring.....	509-	36
AA 415 R	Collector Brush with Spring.....	509-	36
AA 416 R	Bridge Clamp with Rivet.....	509-	36
AA 417 R	Coil Complete.....	509-	36
AA 419 R	Bearing, Distributor.....	509-	36
AA 419 R	Bearing, Rotor Shaft.....	509-	36
AA 421 R	Distributor Rotor Complete.....	509-	36
AA 422 R	Distributor Shaft with Gear.....	509-	36
AA 424 R	End Cap Assembly.....	509-179114	36
AA 425 R	Condenser with Lead Wire.....	509-	36
AA 426 R	Rotor with Gear, less Bearings.....	509-	36
AA 427 R	Frame Complete with Lead Wire.....	509-	36
AA 428 R	Primary Lead Wire with Terminals.....	509-	36
AA 429 R	Drive Members with Pawls, Impulse.....	509-136199	36
AA 1447 R	Drive Member with Pawls, Impulse.....	136200-	36
AA 1624 R	Wick and Retainer, Rubbing Block.....	509-	36
AA 2059 R	Breaker Point Assembly (1 AA418 R and 1 AA423 R).....	509-	36
AB 1084 R	End Cap Assembly.....	179115-	36

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AA201 R MAGNETO PARTS—Continued (Fairbanks-Morse Type RV2A)			
B 507 R	Screw, Frame Cover.....	509—	36
B 510 R	Screw, Brush Holder.....	509—	36
B 518 R	Holder, Oil Wick.....	5991—	36
B 519 R	Wick, Oil.....	5991—	36
B 520 R	Lock Washer, Cam Wick Holder.....	5991—	36
B 595 R	Rivet, Impulse Pawl.....	136200—	36
B 977 R	Support, Stationary Contact.....	179115—	36
B 978 R	Insulator, Stationary Contact Support.....	179115—	36
B 979 R	Screw, Stationary Contact Support.....	179115—	36
B 980 R	Nut, Impulse Coupling.....	136200—	36
C 1330 R	Lock Wire, Impulse Nut.....	509—	36
C 1331 R	Nut, Impulse Coupling.....	509-136199	36
C 1333 R	Spring, Impulse Coupling.....	509—	36
C 1334 R	Pawl, Impulse Drive Member.....	509—	36
C 1335 R	Key, Woodruff, Impulse Coupling.....	509—	36
C 1336 R	Screw, Impulse Stop.....	509—	36
AB706 R MAGNETO PARTS (Fairbanks-Morse Type DRV2B)			
A 692 R	Insulating Strip, Distributor Bearing.....	56577—	36
A 695 R	Gasket, Cork, Brush Holder.....	56577—	36
A 698 R	Nut, Hex., Primary Lead.....	56577—	36
A 698 R	Nut, Hex., Stationary Contact Screw.....	56577—	36
A 700 R	Snap Ring, Distributor Shaft.....	56577—	36
A 701 R	Screw, Bridge Clamp.....	56577—	36
A 702 R	Washer, Cork, Distributor Bearing Oil Seal.....	56577—	36
A 702 R	Washer, Cork, Rotor Shaft Bearing.....	56577—	36
A 703 R	Retainer, Distributor Bearing Oil Seal Washer.....	56577—	36
A 704 R	Washer, Flat, Distributor Bearing.....	56577—	36
A 705 R	Screw, Distributor Rotor.....	56577—	36
A 705 R	Screw, Breaker Bar Clip.....	56577—	36
A 706 R	Snap Ring, Distributor Cup.....	56577—	36
A 707 R	Spacer, Distributor Bearing Cup.....	56577—	36
A 708 R	Lock Nut, Stationary Contact Screw and Point.....	56577—	36
A 709 R	Screw, Stationary Contact Support.....	56577-179114	36
A 710 R	Support, Stationary Contact.....	56577-179114	36
A 712 R	Insulator, Stationary Contact Support.....	56577-179114	36
A 715 R	Pin, Breaker Bar Fulcrum.....	56577—	36
A 716 R	Insulating Strip, Rotor Bearing.....	56577—	36
A 717 R	Insulating Washer, Rotor Bearing.....	56577—	36
A 718 R	Terminal Connection, Primary Lead Wire.....	56577—	36
A 719 R	Shell, Impulse Coupling.....	136200—	36
A 721 R	Retainer, Rotor Shaft Bearing Cork Washer.....	56577—	36
A 722 R	Gear, Rotor.....	56577—	36
A 723 R	Woodruff, Key, Distributor Shaft.....	56577—	36
A 766 R	Lock Washer, Stationary Contact, Support Screw.....	56577—	36
A 766 R	Lock Washer, Breaker Bar Clip Screw.....	56577—	36
A 766 R	Lock Washer, Lead Wire Nut.....	56577—	36
A 766 R	Lock Washer, Distributor Rotor Screw.....	56577—	36
A 766 R	Lock Washer, Condenser Screw.....	56577—	36
A 767 R	Lock Washer, Frame Cover Screws.....	56577—	36
A 767 R	Lock Washer, Brush Holder Screws.....	56577—	36
A 768 R	Lock Washer, Bridge Clamp Screw.....	56577—	36
A 768 R	Lock Washer, End Cap Screw.....	56577—	36
A 769 R	Screw, End Cap.....	56577—	36
A 770 R	Gasket, End Cap.....	56577—	36
A 894 R	Pin, Rotar Gear.....	56577—	36
A 1102 R	Rivet, Stationary Contact Support.....	56577—	36
A 1103 R	Insulator, Stationary Contact Support Rivet.....	56577—	36
A 1104 R	Insulator, Stationary Contact Support Screw.....	56577—	36
AA 414 R	Brush Holder with Screws (less Brush).....	56577—	36
AA 415 R	Brush, Distributor, with Spring.....	56577—	36
AA 416 R	Bridge Clamp with Rivet.....	56577—	36
AA 417 R	Coil Complete.....	56577—	36
AA 419 R	Bearing, Distributor.....	56577—	36
AA 419 R	Bearing, Rotor Shaft.....	56577—	36
AA 422 R	Distributor Shaft with Gear.....	56577—	36
AA 424 R	End Cap Assembly.....	56577-179114	36
AA 425 R	Condenser with Lead Wire.....	56577—	36
AA 428 R	Lead Wire, Primary, with Terminals.....	56577—	36
AA 1624 R	Wick and Retainer, Rubbing Block.....	56577—	36

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AB706 R MAGNETO PARTS—Continued (Fairbanks-Morse Type DRV2B)			
AA 2059 R	Breaker Point Assembly (1 AA418 R and 1 AA423 R).....	56577-	36
AB 379 R	Brush, Collector, with Spring.....	56577-	36
AB 380 R	Distributor Rotor Complete.....	56577-	36
AB 383 R	Rotor with Gear (less Bearings).....	56577-	36
AB 384 R	Frame, with Lead Wire.....	56577-	36
AB 386 R	Shell, Impulse Coupling with Spring Clip.....	56577-136199	36
AB 707 R	Drive Member with Pawls, Impulse.....	56577-136199	36
AB 1084 R	End Cap Assembly.....	179115-	36
AB 1085 R	Drive Member with Pawls, Impulse.....	136200-	36
B 507 R	Screw, Frame Cover.....	56577-	36
B 508 R	Cover, Frame Top.....	56577-	36
B 509 R	Gasket, Frame Top Cover.....	56577-	36
B 510 R	Screw, Brush Holder.....	56577-	36
B 514 R	Screw, Condenser.....	56577-	36
B 515 R	Oil Seal, Frame (Cork).....	56577-	36
B 516 R	Nut, Impulse Coupling.....	56577-136199	36
B 517 R	Spring, Impulse Coupling.....	56577-136199	36
B 518 R	Holder, Oil Wick.....	56577-	36
B 519 R	Oil Wick.....	56577-	36
B 520 R	Lock Washer, Cam Wick Holder.....	56577-	36
B 521 R	Spring Clip, Impulse Coupling.....	56577-	36
B 522 R	Rivet, Impulse Coupling Spring Clip.....	56577-	36
B 523 R	Shim, Copper, Rotor Bearing (.002", Thin).....	56577-	36
B 524 R	Shim, Copper, Rotor Bearing (.004", Medium).....	56577-	36
B 525 R	Shim, Copper, Rotor Bearing (.006", Thick).....	56577-	36
B 594 R	Screw, Impulse Stop.....	56577-	36
B 595 R	Rivet, Impulse Pawl.....	56577-	36
B 977 R	Support, Stationary Contact.....	179115-	36
B 978 R	Insulator, Stationary Contact Support.....	179115-	36
B 979 R	Screw, Stationary Contact Support.....	179115-	36
B 980 R	Nut, Impulse Coupling.....	136200-	36
C 1330 R	Lock Wire, Armature Shaft Nut.....	56577-	36
C 1333 R	Spring, Impulse Coupling.....	136200-	36
C 1334 R	Pawl, Impulse Drive Member.....	56577-	36
C 1335 R	Key, Woodruff, Impulse Coupling.....	56577-	36
AD1400 R MAGNETO PARTS (Edison-Splitdorf Type CD Flange Mounted)			
62	Nut, Breaker Bar Terminal (Was D2723 R).....	100-	37
62	Nut, Condenser Lead Wire (Was D2723 R).....	100-	37
72	Key, Distributor Gear (Was D2727 R).....	100-	37
72	Key, Pinion Gear (Was D2727 R).....	100-	37
515	Hex. Nut, Ground Terminal (Was D2725 R).....	100-	37
1212	Screw, Front Cover (Was D1145 R).....	100-	37
2635	Connection Clip, Ground Outside (Was D2688 R).....	100-	37
3055	Lock Washer, Front Bearing Plate Screw (Was D2720 R).....	100-	37
3055	Lock Washer, Distributor Shaft Screw (Was D2720 R).....	100-	37
3055	Lock Washer, Ground Terminal Screw (Was D2720 R).....	100-	37
3055	Lock Washer, Pinion Gear Screw (Was D2720 R).....	100-	37
3398	Washer, Ground Stud (Was D2716 R).....	100-	37
3722	Screw, Rear Bearing Oil Hole Plug (Was D2675 R).....	100-	37
3794	Lock Washer, Breaker Bar Spring Screw (Was C1324 R).....	100-	37
6140	Washer, Insulating, Breaker Bar Terminal Screw (Was D2712 R).....	100-	37
6214	Distributor Brush with Spring (Was AD1524 R).....	100-41756	37
6763	Washer, Oil Seal (Impulse End) (Leather).....	45540-	37
6822	Plate, Impulse with Stop Pin (Was AD1543 R).....	100-	37
7316	Shell, Impulse Coupling, with Spring Locating Pin (Was AD1541 R).....	100-	37
7334A	Impulse Drive Member (Was AD1531 R).....	100-	37
7340	Screw, Stop Pin Plate (Was D2709 R).....	100-	37
7343	Washer, Notched Impulse Coupling Nut (Was D2717 R).....	100-	37
7344	Hex. Nut, Impulse Starter (Was D2726 R).....	100-	37
7347	Spring, Impulse Coupling, with Felt (Was AD1542 R).....	100-	37
7348	Felt, Impulse Drive Member (Was D2667 R).....	100-	37
7349	Pawl, Impulse Coupling (Was D2718 R).....	100-	37
7350	Washer, Impulse Stop Lever (Was D2719 R).....	100-	37
7351	Snap Ring, Impulse Pawl (Was D2666 R).....	100-	37
7366	Button, Centering, Impulse Spring (Was D2696 R).....	100-	37
7523	Insulation, Ground Terminal Connector (Was D2687 R).....	100-	37
7524	Felt Washer, Rotor Bearing, Impulse End (Was D2673 R).....	100-	37
7535	Cap, Magnet Screw (Was D2698 R).....	100-	37
7571	Washer, Insulating, Ground Stud, Outside (Was D2715 R).....	100-	37

34 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AD1400 R MAGNETO PARTS—Continued (Edison-Splitdorf Type CD Flange Mounted)			
7572	Screw, Magnet (Was D2710 R).....	100-	37
7593	Insulator, Coil (Top) (Was D2684 R).....	100-	37
7595	Insulator, Coil (Bottom) (Was D2685 R).....	100-	37
7606	Lead Wire, Coil to Ground (Was AD1528 R).....	100-	37
7616	Gasket, Timing Slot (Was D2671 R).....	100-	37
7617	Stud, Ground Terminal (Was D2708 R).....	100-	37
7717	Insulator, Coil Lead (Was D2686 R).....	100-	37
7775	Terminal, Ground, Primary and Condenser Lead Wire (Was D2665 R).....	100-	37
16640	Screw, Breaker Bar Spring (Was D2700 R).....	100-	37
16756	Screw, Coil Clamp (Was D2707 R).....	100-	37
17394	Screw, Timing Slot (Was D2672 R).....	100-	37
18309	Screw, Distributor Shaft (Was D2706 R).....	100-	37
18309	Screw, Rotor and Distributor Gears (Was D2706 R).....	100-	37
29335	Washer, Breaker Bar Terminal Screw (Brass) (Was D2713 R).....	100-	37
29411	Washer, Distributor Gear (Was D2714 R).....	100-	37
29411	Washer, Rotor Pinion (Was D2714 R).....	100-	37
29555	Lock Washer, Magnet Screw (Was D2722 R).....	100-	37
29631	Screw, Breaker Terminal (Was D2705 R).....	100-	37
30537	Lock Washer, Impulse Shaft (Was D2721 R).....	100-	37
35207	Screw, Distributor Bearing Oil Hole (Was D2692 R).....	100-18567	37
35251	Screw, Breaker Base Plate (Was D2704 R).....	100-	37
35252	Screw, Contact Bracket Holding (Long) (Was D2703 R).....	100-	37
51202	Rotor Assembly (Was AD1540 R).....	100-	37
51209	Plate, Front Bearing (Was D2691 R).....	100-	37
*51226	Breaker Point Assembly (51274 with 51275) (Was AD1535 R with AD1536 R).....	100-	37
51227	Thumb Nut, Distributor Block (Was D2660 R).....	100-	37
51229	Pinion, Rotor (Was D2690 R).....	100-	37
51230	Gear, Distributor (Was D2680 R).....	100-	37
51231	Adjusting Plate, Breaker Bar (Was D2677 R).....	100-	37
51233	Clamp, Coil (Was D2683 R).....	100-	37
51234	Rotor Bearing (Was AD1539 R).....	100-	37
51236	Magnet (Was D2697 R).....	100-	37
51237	Oil Hole Plug (Was D2669 R).....	100-	37
51244	Nut, Breaker Terminal (Special Round) (Was D2724 R).....	100-	37
51252	Collar, Distributor Gear Spacing (Was D2681 R).....	100-	37
51253	Distributor Bearing (Was AD1537 R).....	100-	37
51254	Gasket, Front Cover (Was D2663 R).....	100-	37
51255	Dowel Pin, Front Cover (Was D2664 R).....	100-	37
51256	Insulation, Breaker Stud (Was D2679 R).....	100-	37
51257	Terminal Bracket, Breaker Bar Spring (Was D2678 R).....	100-	37
51266	Retainer, Felt Washer Rotor Bearing (Was D2674 R).....	100-	37
51267	Gasket, Distributor Block (Was D2662 R).....	100-	37
51271	Disk, Safety Gap (Was D2676 R).....	100-	37
51272	Screw, Contact Bracket Pivot (Was D2701 R).....	100-	37
51273	Washer, Contact Bracket (Was D2711 R).....	100-	37
51283	Distributor Cam and Shaft (Was D2682 R).....	100-	37
51285	Wire, Condenser Lead (Was AD1526 R).....	100-	37
51286	Wire, Breaker Lead (Was AD1530 R).....	100-	37
51287	Terminal Connector, Ground (Was D2689 R).....	100-	37
51301	Cover, Timing Slot (Was D2670 R).....	100-	37
51315	Wire, Primary Lead (Was AD1529 R).....	100-	37
51432	Coil Complete, with Primary and Ground Leads (Was AD1527 R).....	100-	37
51435	Sealing Cap, Main Bearing (Was D2693 R).....	100-	37
51436	Center Brush (Was AD1510 R).....	100-	37
51439	Front Cover, Gasket and Dowel Pin (Was AD1525 R).....	100-	37
51441	Condenser (Was AD1538 R).....	100-	37
51452	Distributor Block Complete (Was AD1523 R).....	100-	37
51459	Coil Spring, Distributor Block, High Tension Contact (Was D2661 R).....	100-	37
51530	Housing, Magneto (Was AD1532 R).....	100-	37
51580	Cam Wiper and Bracket (Was AD1533 R).....	100-	37
51655	Washer, Distributor Bearing Seal (Was D2888 R).....	18568-	37
51656	Felt, Distributor Bearing Seal (Was D2889 R).....	18568-	37
51664	Distributor Brush with Spring (Was AD1882 R).....	41757-	37
51666	Snap Ring, Distributor Bearing (Was D2937 R).....	42889-	37
51673	Distributor Rotor (Was AD1534 R).....	100-	37
53367	Screw, Connector Plate (Was D2702 R).....	100-	37
53367	Screw, Contact Bracket Holding (Short) (Was D2702 R).....	100-	37
63399	Shim, Rotor Bearing, .002" (Was D2694 R).....	100-	37
63400	Shim, Rotor Bearing, .003" (Was D2695 R).....	100-	37
63643	Screw, Distributor Block (Was D2699 R).....	100-	37

*Set of points. For best results replace both points. Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AD1400 R MAGNETO PARTS—Continued (Edison-Splitdorf Type CD Flange Mounted)			
C 1335 R	Key, Rotor Shaft (Splitdorf 73).....	100-	37
C 1350 R	Lock Washer, Timing Slot Screw (Splitdorf 23149).....	100-	37
C 1350 R	Lock Washer, Condenser Lead (Splitdorf 23149).....	100-	37
C 1350 R	Lock Washer, Distributor Block Screw (Splitdorf 23149).....	100-	37
C 1350 R	Lock Washer, Breaker Bar Terminal Screw (Splitdorf 23149).....	100-	37
C 1350 R	Lock Washer, Coil Clamp Screw (Splitdorf 23149).....	100-	37
C 1350 R	Lock Washer, Ground Stud (Splitdorf 23149).....	100-	37
C 1350 R	Lock Washer, Front Cover Screw (Splitdorf 23149).....	100-	37
D 2213 R	Screw, Front Bearing Plate.....	100-	37
AB757 R MAGNETO PARTS (Wico Type AP477 B)			
1031	Nut, Pinion (Was B1082 R).....	5867-	38
1083	Gasket, Gear Case (Was B1064 R).....	5867-	38
1084B	Washer, Gear Case Sealing (Cork) (Was B1041 R).....	5867-	38
1085	Screw, Gear Case (Was B1093 R).....	5867-	38
1092	Spring, Drive (Was B1074 R).....	5867-	38
1094	Trip Arm (Was B1075 R).....	5867-	38
1098	Lock Nut, Impulse (Was B1072 R).....	5867-	38
1110	Pad, Gear Case Oil (Was B1065 R).....	5867-	38
1116	Gasket, Cover (Was B1042 R).....	5867-	38
1117	Screw, Cover (Was B1044 R).....	5867-	38
1118	Washer, Cover Screw (Leather) (Was B1045 R).....	5867-	38
1121	Coil Contact (Was B1043 R).....	5867-	38
1129	Gasket, End Plate (Was B1077 R).....	5867-	38
1131	Felt, Drive Shaft Seal (Was B1078 R).....	5867-	38
1146	Key, Pinion Gear (Was B1083 R).....	5867-	38
1147	Pinion Gear (Was B1066 R).....	5867-	38
1151	Disk, Oiling (Was B1067 R).....	5867-	38
1152	Scraper, Oil (Was B1080 R).....	5867-	38
1153	Spring, Oil Scraper (Was B1081 R).....	5867-	38
1163	Bearing, Rotor (Was AB1226 R).....	5867-	38
1165	Clip, Condenser (Was B1051 R).....	5867-17866	38
1167	Stud, Cam (Was B1057 R).....	5867-	38
1168	Wick, Cam Stud Oil (Was B1058 R).....	5867-	38
1169	Pad, Cam Stud Oil (Was B1059 R).....	5867-	38
1170	Support, Cam Stud Oil Pad (Was B1060 R).....	5867-	38
1171	Pad, Main Oil (Was B1061 R).....	5867-	38
1193	Block, Breaker Point Spring (Was AB1213 R).....	5867-	38
1194	Pad, Cam Oil (Was B1038 R).....	5867-	38
1197	Washer, Breaker Arm Spacing (Was B1087 R).....	5867-	38
1197T	Shim, Breaker Arm Spacing Washer.....	5867-	38
1207	Washer, Breaker Arm Clamp (Was B1086 R).....	5867-	38
1208	Washer, Friction (Was B1090 R).....	5867-	38
1210	Clip, Distributor (Was B1039 R).....	5867-	38
1216	Brush, Distributor (Was B1034 R).....	5867-	38
1217	Spring, Distributor Brush (Was B1035 R).....	5867-	38
1232	Clamp, Coil Core (Was B1069 R).....	5867-	38
1418	Spacer, Breaker Arm (Was B1063 R).....	5867-	38
1433B	Drive Cup (Was B1108 R).....	5867-	38
1434B	End Plate (Was B1109 R).....	5867-	38
1641	Screw, End Plate (Was B1094 R).....	5867-	38
1729 R	Lock Washer, Pinion Nut.....	5867-	38
1730 R	Cotter Key, Impulse Lock Nut.....	5867-	38
1759	Plate, Coil Protecting (Was B1071 R).....	5867-	38
1786	Nut, Condenser Lead (Was B1068 R).....	5867-	38
1883	Cover, Gear Case Sealing Washer (Was B1040 R).....	5867-	38
2219	Gasket, Distributor Cap (Was B1106 R).....	5867-	38
2236	Lock Washer, End Plate Screw (Was B1091 R).....	5867-	38
2264B	Coil Wedge (Was B1070 R).....	5867-	38
2405	Support, Condenser (Was B1050 R).....	5867-	38
2442	Clip, Condenser (Was B1271 R).....	17867-	38
2443	Screw, Condenser Clip Drive (Was B1272 R).....	17867-	38
A 178XA	Pivot Trip, Arm (Was B1054 R).....	5867-	38
A 243X	Snap Ring, Trip Arm (Was B1076 R).....	5867-	38
A 705 R	Screw, Breaker Arm Clamp.....	5867-	38
A 705 R	Screw, Breaker Arm Spring.....	5867-	38
A 705 R	Screw, Condenser Support.....	5867-	38
A 705 R	Screw, Breaker Plate.....	5867-	38
C 1320 R	Lock Washer, Gear Case Screw.....	5867-	38
C 1344 R	Lock Washer, Condenser Clip Nut.....	5867-	38

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AB757 R MAGNETO PARTS—Continued (Wico Type AP477 B)			
C 1344 R	Lock Washer, Condenser Lead Nut.....	5867—	38
C 1344 R	Lock Washer, Coil Contact Screw.....	5867—	38
C 1350 R	Lock Washer, Breaker Plate Screw.....	5867—	38
C 1350 R	Lock Washer, Breaker Arm Clamp Screw.....	5867—	38
C 1350 R	Lock Washer, Breaker Arm Spring Screw.....	5867—	38
C 1350 R	Lock Washer, Fixed Contact Screw.....	5867—	38
C 1350 R	Lock Washer, Condenser Support Screw.....	5867—	38
C 1350 R	Lock Washer, Coil Core Clamp Screw.....	5867—	38
IKA 761	Nut Condenser Contact (Was B1048 R).....	5867—	38
IXA 256	Washer, Cover Screw (Was B1047 R).....	5867—	38
IXA 256	Washer, Fixed Contact Screw (Was B1047 R).....	5867—	38
IXA 345	Oil Plug (Was B1107 R).....	5867—	38
M 32XA	Bushing, Condenser Contact Screw Insulating (Was B1053 R).....	5867—	38
M 71X	Nut, Condenser Clip (Was B1052 R).....	5867—17866	38
M 94X	Key, Impulse Coupling (Was B1084 R).....	5867—	38
M 126XB	Screw, Coil Core Clamp (Was B1092 R).....	5867—	38
M 127X	Washer, Condenser Insulating (Was B1049 R).....	5867—	38
M 155X	Screw, Coil Contact (Was B1046 R).....	5867—	38
X 1097	Driven Flange Group (Was AB1221 R).....	5867—	38
X 1122	Cover Assembly (Was AB1217 R).....	5867—	38
X 1134	Impulse Stop Group (Was AB1222 R).....	5867—	38
X 1145	Rotor Assembly (Was AB1223 R).....	5867—	38
X 1220	Ventilating Screen Group (Was AB1208 R).....	5867—	38
X 1230	Coil Core Group (Was AB1219 R).....	5867—	38
X 1331	Condenser to Breaker Lead Group (Was AB1225 R).....	5867—	38
X 1570	Cam Group (Was AB1216 R).....	5867—	38
X 2226	Distributor Arm Group (Was AB1210 R).....	5867—	38
X 2228	Distributor Cap (Was AB1230 R).....	5867—	38
X 2229	Secondary Interlead Group (Was AB1229 R).....	5867—	38
X 2231	Breaker Plate Assembly (Was AB1232 R).....	5867—	38
X 2237	Gear and Breaker Case Group (Was AB1231 R).....	5867—	38
X 2296	Main Housing Assembly (Was AB1224 R).....	5867—	38
X 2595	Condenser Assembly (Was AB1220 R).....	5867—	38
X 2770	Coil Unit.....	5867—	38
*X 3342	Breaker Point Assembly (X1205 with 1196) (Was AB1211 R with AB1214 R).....	5867—	38
X 3543	End Plate with Oil Seal.....	5867—	38
AH653 R MAGNETO PARTS (Wico Type C Flange Mounted)			
Also repairs for Models "A", "A N" and "AW" Tractors Serial Nos. 410000-424024 and Models "AR" and "AO" Serial Nos. 250000-251485 on which original magneto has been replaced by an AH653 R Magneto.			
15-186	Spring, Drive (Was H648 R).....	04600—	39
16-480	Lock Spring, Distributor Arm (Was H642 R).....	04600—	39
16-491C	Lock Nut, Impulse (Was H646 R).....	04600—	39
16-X477B	Distributor Arm with Spring (Was AH766 R).....	04600—	39
16-583	Washer, Drive Cup Spacing (Brass) (Was H649 R).....	04600—	39
16-738	Screw, Breaker Point (Was E214 R).....	04600—	39
16-738	Screw, Breaker Arm Spring (Was E214 R).....	04600—	39
1118	Washer, Cover Screw (Leather) (Was B1045 R).....	04600—	39
1118	Washer, Distributor Cap (Leather) (Was B1045 R).....	04600—	39
1152	Scraper, Oil (Was B1080 R).....	04600—	39
1153	Spring, Oil Scraper (Was B1081 R).....	04600—	39
1197	Washer, Breaker Arm Spacing (Was B1087 R).....	04600—	39
1197T	Shim, Breaker Arm Spacing.....	04600—	39
1207	Washer, Breaker Arm Clamp (Was B1086 R).....	04600—	39
1379	Pad, Main Oil (Was E209 R).....	04600—	39
1383	Screw, Condenser (Was E215 R).....	04600—	39
1397	Coil Contact, Secondary Interlead (Was E221 R).....	04600—	39
1404	Screw, Secondary Interlead Contact (Was H664 R).....	04600—	39
1418	Spacer, Breaker Arm (Was B1063 R).....	04600—	39
1533	Gasket, Condenser Case (Was E216 R).....	04600—	39
1727A	Terminal, Primary Lead (Was H643 R).....	04600—	39
1760	Plate, Coil Protecting (Was E224 R).....	04600—	39
1814	Terminal, Primary Ground (Was H644 R).....	04600—	39
2061B	Cup, Drive (Was H647 R).....	04600—	39
2121	Spacer, Impulse (Was H654 R).....	04600—	39
2122	Spacer, Driven Flange (Was H653 R).....	04600—	39

*Set of points. For best results replace both points. Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
AH653 R MAGNETO PARTS—Continued (Wico Type C Flange Mounted) Also repairs for Models "A", "A N" and "AW" Tractors Serial Nos. 410000-424024 and Models "AR" and "AO" Serial Nos. 250000-251485 on which original magneto has been replaced by an AH653 R Magneto.			
2264B	Wedge, Coil (Was B1070 R).....	04600-	39
2288	Retainer, Drive Spring (Was H652 R).....	04600-	39
2495	Bushing, Rotor (Was H645 R).....	04600-	39
2496	Gasket, Impulse Stop (Was H655 R).....	04600-	39
2497	Gasket, Distributor Cap (Was H656 R).....	04600-	39
2503	Clamp, Coil Core (Was H658 R).....	04600-	39
2504	Gasket, Cover (Was H657 R).....	04600-	39
2505	Plate, Oil Pad Spring (Was H660 R).....	04600-	39
2537	Screw, Distributor Cap (Was H662 R).....	04600-	39
2538	Screw, Cover (Was H663 R).....	04600-	39
2641	Screw, Impulse Stop Group (Was H661 R).....	04600-	39
2745	Disk, Oiling (Was H659 R).....	04600-	39
A 33X	Oil Seal, Impulse (Was AH763 R).....	04600-	39
A 179X	Pawl, Impulse (Was H641 R).....	04600-	39
A 243X	Snap Ring, Trip Arm (Was B1076 R).....	04600-	39
A 705 R	Screw, Fixed Contact.....	04600-	39
C 1350 R	Lock Washer, Fixed Contact Screw.....	04600-	39
C 1350 R	Lock Washer, Secondary Interlead Contact Screw.....	04600-	39
C 1350 R	Lock Washer, Coil Core Clamp Screw.....	04600-	39
D 2003 R	Lock Washer, Condenser Screw.....	04600-	39
H 665 R	Lock Washer, Breaker Arm Spring Screw.....	04600-	39
H 666 R	Lock Washer, Impulse Stop Screw.....	04600-	39
IVA 583	Washer, Drive Cup Spacing (Steel) (Was H650 R).....	04600-	39
IXA 256	Washer, Distributor Cap (Was B1047 R).....	04600-	39
IXA 256	Washer, Cover Screw (Was B1047 R).....	04600-	39
IXA 256	Washer, Fixed Contact Screw (Was B1047 R).....	04600-	39
IXA 345	Oil Plug (Was B1107 R).....	04600-	39
M 42XA	Washer, Drive Cup (Was H651 R).....	04600-	39
M 126XB	Screw, Coil Core Clamp (Was B1092 R).....	04600-	39
X 1413	Condenser (Was AE270 R).....	04600-	39
X 2706	Core, Coil (Was AH769 R).....	04600-	39
X 2719	Impulse Stop Group (Was AH762 R).....	04600-	39
X 2723	Secondary Interlead (Was AH764 R).....	04600-	39
X 2766	Coil Unit (Was AH768 R).....	04600-	39
X 2938	Cap, Distributor (Was AH765 R).....	04600-	39
X 3043	Housing Group, Main (Was AH771 R).....	04600-	39
X 3051	Rotor (Was AH770 R).....	04600-	39
X 3114	Driven Flange Group with Pawls (Was AH761 R).....	04600-	39
X 3168	Cover with Breaker Plate Assembly (Was AH767 R).....	04600-	39
*X 3343	Breaker Point Assembly (X1408 and 1196) (Was AE269 R with AB1214 R).....	04600-	39

*Set of points. For best results replace both points. Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
AA200 R AND AA580 R SCHEBLER CARBURETORS				
1-K	Spring, Friction Ball (Was 57 W)	410000-487999	250000-	40
15-29	Screw, Choker Disk (Was SI-18)	410000-487999	250000-	40
15-67	Adjusting Screw, Throttle Lever (Was 71 W)	410000-487999	250000-	40
15-285	Screw, Throttle Disk (Was 70 W)	410000-487999	250000-	40
18-O	Spring, Throttle Stop	410000-487999	250000-	40
25-J	Spring, Nozzle Retaining (Was 65 W) ..	410000-487999	250000-	40
25-V	Spring, Choker Lever Friction (Was 68 W)	410000-487999	250000-	40
321 R	Gasket, Carburetor to Manifold	410000-487999	250000-	40
A 705 R	Screw in Swivel Pin	410000-487999	250000-	40
AA 200 R	Carburetor Complete	410000-487999	250000-	40
AA 580 R	Carburetor Complete		250000-	40
AB 1843 R	Choker Lever and Shaft Assembly	410000-487999	250000-	40
B 1663 R	Pin, Swivel	410000-487999	250000-	40
B 1664 R	Washer, on Swivel Pin	410000-487999	250000-	40
D 392 R	Body, Solder Bushing, Fuel Pipe (Schebler S2192) ..	410000-487999	250000-	40
*DLT7-A	Bowl, Casting (Was 97 W)	410000-425850	250000-252405	40
*DLT-13	Bowl, Casting (Was B449 R)	425851-487999	252406-	40
P 52	Washer, Choke Lever Friction Spring (Was 72 W) ..	410000-487999	250000-	40
P 348	Choker Disk, Air Valve	410000-487999	250000-	40
*P 710	Gasket, Bowl Retaining Nut (Was B457 R)	425851-487999	252406-	40
*P 713	Gasket, Bowl Nut (Was 64 W)	410000-425850	250000-252405	40
P 791	Gasket, Float Valve Seat (Was 73 W)	410000-487999	250000-	40
P 850	Washer, Choker Friction (Was 74 W)	410000-487999	250000-	40
P 947	Lever, Float (Was 75 W)	410000-487999	250000-	40
P 948	Disk, Throttle (Was 76 W)	410000-487999	250000-	40
P 950	Gasket, Strainer (Was 77 W)	410000-487999	250000-	40
P 951	Gasket, Bowl (Was 78 W)	410000-487999	250000-	40
S 93B	Screw, Throttle Lever (Was 17 W)	410000-487999	250000-	40
S 98	Pipe Plug, Hex. Head (Was 79 W)	410000-487999	250000-	40
S 98B	Pipe Plug, Headless (Was 80 W)	410000-487999	250000-	40
S 211G	Stop Pin, Throttle Lever (Was 67 W)	410000-487999	250000-	40
S 245	Lock Washer, Throttle Disk Screw (Was 81 W)	410000-487999	250000-	40
S 251A	Friction Ball, Needle Valve (Was 41 W)	410000-487999	250000-	40
*S 763	Plug Screw for Drilled Holes (Was A1830 R) ..	410000-487999	250000-	40
*S 1096	Nut, Bowl Retaining (Was 46 W)	410000-425850	250000-252405	40
S 1121	Drain Cock	410000-487999	250000-	40
S 1393	Lock Washer, Choker Disk Screw (Was 63 W)	410000-487999	250000-	40
S 1506	Drill Plug (7/32", -32) (Was 83 W)	410000-487999	250000-	40
S 2041	Drill Plug (1/4", -28) (Was 85 W)	410000-487999	250000-	40
S 2146	Pin, Float Pivot (Was 90 W)	410000-487999	250000-	40
S 2147	Screw, Float Bearing (Was 91 W)	410000-487999	250000-	40
S 2151C	Idle Plug (Was A832 R)	410000-487999	250000-	40
S 2154	Screw, Choker Friction Spring (Was 94 W)	410000-487999	250000-	40
S 2183A	Nozzle (Was 95 W)	410000-487999	250000-	40
S 2369	Shaft, Throttle (Was C2502 R)	410000-487999	250000-	40
*S 2424	Nut, Bowl Retaining (Was B450 R)	425851-487999	252406-	40
S 2471	Bushing, Throttle Shaft, Upper (Was C2504 R)	410000-487999	250000-	40
*S 2472	Bushing, Throttle Shaft, Lower (Was C2505 R)	410000-425850	250000-252405	40
*S 2482	Bushing, Throttle Shaft, Lower (Was D2530 R) ..	425851-487999	252406-	40
S 2502	Plug Screw for Drilled Holes (Was 45 W)	410000-487999	250000-	40
SI -10	Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) ..	410000-487999	250000-	40
*WSX2721	Body, Carburetor (Was AA219 R)	410000-425850	250000-	40
X 1178B	Screw and Washer, Float (Was 4 W)	410000-487999	250000-	40
X 2457	Cork Float (Was 69 W)	410000-487999	250000-	40
X 2458	Needle, High Speed ..	410000-487999	250000-	40
X 2461	Needle, Idle	410000-487999	250000-	40
X 2462	Strainer, Complete ..	410000-487999	250000-	40
X 2648	Throttle Lever Assembly (Was C2506 R) ..	410000-487999	250000-	40
X 2653	Float Valve and Seat Assembly (Was C2501 R)	410000-487999	250000-	40
*X 2691	Body, Carburetor (Was AA581 R)		250000-252405	40
X 2692	Throttle Lever Assembly (Was AA578 R) ..		250000-	40
*X 2773	Body and Bushing Assembly (Was AA743 R) ..	425851-487999	252406-	40
*X 2774	Body, Carburetor, with Bushing (Was AA744 R) ..		252406-	40

*Used only on Carburetors with Gray Iron Bodies.
 **Used only on Carburetors with Bronze Bodies.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
	AA2498 R SCHEBLER CARBURETOR			
1-K	Spring, Friction Ball (Was 57 W)	488000-		41
15-29	Screws, Choker Disk (Was SI-18)	488000-		41
15-57	Adjusting Screws, Throttle Lever (Was 71 W)	488000-		41
15-285	Screws, Throttle Disk (Was 70 W)	488000-		41
18-O	Spring, Throttle Stop	488000-		41
25-J	Spring, Nozzle Retainer (Was 65 W)	488000-		41
25-V	Spring, Choke Lever Friction (Was 68 W)	488000-		41
47-193	Nozzle	488000-		41
A 705 R	Screw in Choke Lever and Shaft Swivel Pin	488000-		41
AA 2498 R	Carburetor Complete (Substitute for AF240 R)	488000-		41
AB 1843 R	Choke Lever and Shaft Assembly	488000-		41
B 1663 R	Swivel Pin	488000-		41
B 1664 R	Washer on Swivel Pin	488000-		41
D 392 R	Bushing (Fuel Pipe to Carburetor) (Schebler S2192)	488000-		41
DLT-13	Bowl Casting (Was B449 R)	488000-		41
P 52	Washer, Choke Lever Friction Spring (Was 72 W)	488000-		41
P 348	Disk, Air Valve Choker	488000-		41
P 710	Gasket, Bowl Nut (Was B457 R)	488000-		41
P 791	Gasket, Float Valve Seat (Was 73 W)	488000-		41
P 850	Washer, Choke Friction (Was 74 W)	488000-		41
P 947	Lever, Float (Was 75 W)	488000-		41
P 948	Disk, Throttle (Was 76 W)	488000-		41
P 950	Gasket, Strainer (Was 77 W)	488000-		41
P 951	Gasket, Bowl (Was 78 W)	488000-		41
S 93B	Screw, Throttle Lever (Was 17 W)	488000-		41
S 98	Pipe Plug, Hex. Head (Was 79 W)	488000-		41
S 98B	Pipe Plug, Headless (Was 80 W)	488000-		41
S 211G	Stop Pin, Throttle Lever (Solid) (Was 67 W)	488000-		41
S 245	Lock Washer, Throttle Disk Screws (Was 81 W)	488000-		41
S 251A	Friction Ball Adjusting Needle (Was 41 W)	488000-		41
S 763	Drill Plug (Was A1830 R)	488000-		41
S 1121	Drain Cock	488000-		41
S 1393	Lock Washer Choker Disk Screw (Was 63 W)	488000-		41
S 1506	Drill Plug (Was 83 W)	488000-		41
S 2041	Drill Plug (Was 85 W)	488000-		41
S 2146	Pin, Float Pivot (Was 90 W)	488000-		41
S 2147	Screw, Float Bearing (Was 91 W)	488000-		41
S 2151E	Plug, Economizer (Was B855 R)	488000-		41
S 2154	Screw, Choke Friction Spring (Was 94 W)	488000-		41
S 2369	Shaft, Throttle (Was C2502 R)	488000-		41
S 2424	Nut, Bowl Retaining (Was B450 R)	488000-		41
S 2471	Bushing, Throttle Shaft, Upper (Was C2504 R)	488000-		41
S 2482	Bushing, Throttle Shaft, Lower (Was D2530 R)	488000-		41
S 2502	Plug Screw for Drilled Holes (Was 45 W)	488000-		41
SI -10	Clamp Screw, Throttle Lever Adjusting (Was 10 W)	488000-		41
X 1178B	Screw and Washer, Float (Was 4 W)	488000-		41
X 2457	Float, Cork (Was 69 W)	488000-		41
X 2458	Load Needle Assembly	488000-		41
X 2461	Idle Needle Assembly	488000-		41
X 2462	Strainer Complete	488000-		41
X 2648	Lever, Throttle (Was C2506 R)	488000-		41
X 2653	Float Valve and Seat Assembly (Was C2501 R)	488000-		41
X 2890	Body with Plugs and Bushings (Was AF241 R)	488000-		41

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
AIR CLEANER				
629 R	Washer, Air Stack to Air Cleaner Bracket Screws.		250000-	42
A 444 R	Hose, Air Cleaner Elbow to Carburetor.	410000-		42
A 447 R	Clamp, Air Cleaner to Carburetor Elbow Hose.	410000-	250000-	42
A 525 R	Elbow, Carburetor Air Intake.	410000-476999		42
A 526 R	Bracket, Vortex Cleaner.	410000-476999	250000-	42
A 527 R	Gasket, Vortex Cleaner.	410000-476999	250000-	42
A 688 R	Spring, Disk Retaining.	410000-476999	250000-	42
A 690 R	Washer, Cup Retaining Rod.	410000-476999	250000-	42
A 970 R	Plug, Air Cleaner Bracket.		250000-	42
A 971 R	Hose, Air Cleaner Elbow to Carburetor.		250000-	42
A 2063 R	Cup, Air Cleaner (Substitute AA2423 R).	477000-495106		42
A 2065 R	Spring, Baffle Retaining, Air Cleaner.	477000-495106		42
A 2066 R	Gasket, Air Cleaner Cup.	477000-		42
A 2167 R	Gasket, Air Cleaner.	477000-		42
A 2447 R	Elbow, Carburetor Air Intake.	477000-		42
AA 361 R	Air Cleaner Complete (Vortex).	410000-476999	250000-	42
AA 362 R	Stack, Air Cleaner Intake.	410000-476999		42
AA 392 R	Body Assembly, Vortex Air Cleaner.	410000-422553	250000-251377	42
AA 393 R	Cup with Bottom Strap, Vortex Air Cleaner.	410000-422553	250000-251377	42
AA 394 R	Disk with Handle, Air Cleaner Cup.	410000-476999	250000-	42
AA 395 R	Rod, Retaining, with Washer and Nut.	410000-422553	250000-251377	42
AA 474 R	Stack, Air Cleaner Intake (15" High).	410000-476999	250000-	42
AA 579 R	Inlet Pipe and Elbow, A959 R, Carburetor.		250000-	42
AA 789 R	Body Assembly, Vortex Air Cleaner.	422554-476999	251378-	42
AA 790 R	Rod, Retaining, with Washer and Nut.	422554-476999	251378-	42
AA 791 R	Cup with Bottom Strap, Vortex Air Cleaner.	422554-476999	251378-	42
AA 887 R	Stack, Air Cleaner Intake (Low).		250000-	42
AA 1779 R	Bracket, A2115 R, with Air Stack, Air Cleaner.	477000-487999		42
AA 1889 R	Spring, Bail Assembly, Air Cleaner.	470000-495106		42
AA 1941 R	Air Stack less Bracket (Part of AA1779 R and AA-2242 R).	477000-		42
AA 2063 R	Baffle, Air Cleaner (Substitute AA2423 R).	477000-495106		42
AA 2242 R	Bracket, A2387 R, with Air Stack, Air Cleaner.	488000-		42
AA 2299 R	Air Cleaner Complete.	477000-		42
AA 2423 R	Oil Cup Assembly with Baffle and Eyebolts (Substitute for A2063 R Cup and AA2063 R Baffle).	477000-495106		
*AA 2424 R	Baffle, Air Cleaner.	495107-		
*AA 2425 R	Oil Cup, Complete.	495107-		42
*AA 2426 R	Eyebolt and Wing Nut.	495107-		42
C 1572 R	Wing Nut, Cup Retaining Bolt.	410000-476999	250000-	42
D 1034 R	Gasket, Elbow to Carburetor.	410000-	250000-	42
TOOL BOX AND TOOLS				
A 577 R	Socket Wrench for Spade Lug and Flywheel Bolt Nuts.	410000-466736	250000-	
AA 348 R	Tool Box.	410000-412517		43
AA 459 R	Tool Box.	412518-476999		43
AA 1783 R	Tool Box.	477000-		43
AB 689 R	Tool Box.		250000-	43
B 353 R	Socket Wrench for Lug and Flywheel Bolt Nuts.	466737-		43
C 1591 R	Socket for Cylinder Head Nuts.	410000-	250000-	43
D 1083 R	Socket Wrench for Connecting Rod Bolt Nuts.	410000-	250000-	43
JD 7751	Grease Gun No. 6556.	410000-	250000-	43
POWER SHAFT PARTS				
405 R	Ball, Power Shaft Shifter.	410000-	250000-	
A 175 R	Shaft, Power Shaft Sliding Gear Shifter.	410000-487999	250000-	43
A 551 R	Shifter, Power Shaft Sliding Gear.	410000-487999	250000-	43
A 552 R	Arm, Power Shaft Shifter.	410000-		43
A 554 R	Gear, Power Shaft Bevel (17 Teeth).	410000-487999	250000-	43
A 558 R	Bushing, Power Shaft Bevel Gear, Bronze.	410000-487999	250000-	43
A 559 R	Washer, Power Shaft Bevel Gear Thrust (Steel).	410000-487999	250000-	43
A 561 R	Washer, Power Shaft Bevel Gear Retaining.	410000-487999	250000-	43
A 562 R	Snap Ring, Power Shaft Bevel Gear.	410000-487999	250000-	43
A 564 R	Bushing, Power Shaft Drive Shaft.	410000-487999	250000-	43
A 565 R	Cover, Power Shaft Bearing, R. H.	410000-	250000-	43
A 567 R	Gasket, Power Shaft R. H. Bearing Cover (Thin).	410000-	250000-	43
A 568 R	Gasket, Power Shaft R. H. Bearing Cover (Thick).	410000-	250000-	43
A 569 R	Lever, Power Shaft Shifter, Hand.	410000-487999		43

*Also repairs on Tractors Serial Numbers 477000-495106 equipped with AA2423 R Oil Cup Assembly with Baffle and Eyebolts.

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
POWER SHAFT PARTS—Continued				
A 571 R	Shaft, Power..	410000-487999	250000-	43
A 572 R	Snap Ring, Power Shaft Rear End.....	410000-487999	250000-	43
A 574 R	Gasket, Power Shaft Stuffing Box.....	410000-487999	250000-258329	43
A 574 R	Gasket, Power Shaft Guard.....	410000-487999	250000-	43
*A 574 R	Gasket, Power Shaft Oil Seal Housing.....	410000-487999	250000-	43
A 575 R	Packing, Power Shaft Rear End (3 used).....	410000-487999	250000-258329	43
A 774 R	Stuffing Box, Power Shaft, Rear End.....	410929-487999	250000-258329	43
A 775 R	Gland, Power Shaft Rear End Packing.....	410929-487999	250000-258329	43
A 919 R	Lever, Power Shaft Shifter Hand.....	410000-487999	250000-	43
A 1031 R	Gear, Power Shaft Sliding (21 Teeth).....	415082-450503	250000-	43
A 1032 R	Pinion, Power Shaft Bevel Drive (17 Teeth).....	415082-487999	250000-	43
A 1033 R	Shaft, Power Shaft Drive.....	415082-487999	250000-	43
A 1242 R	Guard, Power Shaft End.....	410000-487999	250000-258329	43
A 1580 R	Gear, Power Shaft Sliding (19 Teeth).....	450504-487999	250000-	43
°A 2062 R	Drive Shaft and Bevel Pinion, Power Shaft (16 Teeth).....	410000-487999	250000-	43
°A 2195 R	Gear, Power Shaft Bevel (16 Teeth).....	410000-487999	250000-	43
°A 2196 R	Thrust Washer, Power Shaft Bevel Gear (Bronze).....	410000-487999	250000-	43
°A 2197 R	Shaft, Power Lift Pump (No. stamped on Outer End).....	410000-487999	250000-	44
A 2364 R	Bushing, Power Shaft Drive Shaft.....	488000-	43
A 2365 R	Bushing, Power Shaft, Bevel Gear.....	488000-	43
A 2388 R	Shaft and Bevel Pinion, Power Shaft Drive.....	488000-	43
A 2389 R	Gear, Power Shaft Sliding (17 Teeth).....	488000-	43
A 2390 R	Gear, Power Shaft Bevel (16 Teeth).....	488000-	43
A 2391 R	Washer, Power Shaft Bevel Gear Thrust.....	488000-	43
A 2392 R	Shifter, Power Shaft.....	488000-	43
A 2393 R	Shaft, Power Shaft Shifter.....	488000-	43
*A 2395 R	Cover, Power Shaft Opening.....	488000-	43
*A 2396 R	Gasket, Power Shaft Opening Cover.....	488000-	43
A 2396 R	Gasket, Power Shaft Oil Seal Housing.....	488000-	43
A 2451 R	Shaft, Power.....	488000-	43
A 2454 R	Spring, Flipper Guard.....	488000-	43
A 2458 R	Lever, Power Shaft Shifter.....	488000-	43
AA 452 R	Stuffing Box with Packing Gland, Power Shaft Rear End.....	410000-410928	43
AA 625 R	Shaft with Gear and Pinion, Power Shaft Drive.....	410000-415081	43
†AA 2295 R	Housing, A2452 R, Power Shaft Oil Seal with Flipper Guard and Oil Seal.....	488000-	43
AA 2296 R	Oil Seal, Power Shaft.....	488000-	43
†*AA 2297 R	Shield, Power Shaft Safety.....	488000-	43
†AA 2343 R	Flipper Guard.....	488000-	43
†AA 3004 R	Housing, A2543 R, Rear Power Shaft with Oil Seal.....	258330-	43
†AB 2578 R	Oil Seal, Rear Power Shaft Housing.....	258330-	43
†AB 2594 R	Housing, B1679 R, Power Shaft Oil Seal with Flipper Guard and Oil Seal.....	410000-487999	43
B 1680 R	Cover, Power Shaft Opening.....	258330-	43
D 377 R	Spring, Power Shaft Shifter Hand Lever.....	410000-	250000-	43
*D 469 R	Welsh Plug in Power Shaft Shifter Lever Opening in Case.....	488000-	43
D 993 R	Spring, Power Shaft Shifter Yoke.....	410000-	250000-	43
D 1164 R	Woodruff Key, Power Shaft Drive Shaft Pinion.....	415082-487999	250000-	43
F 215 R	Snap Ring, Power Shaft Bevel Gear.....	488000-	43
F 215 R	Snap Ring, Power Shaft Bearing.....	488000-	43
F 215 R	Snap Ring, Power Shaft Coupling Retaining.....	488000-	43
JD 7664 R	Bearing, Power Shaft, Rear.....	410000-487999	250000-	43
JD 7664 R	Bearing, Power Shaft Drive Shaft R. H. Bearing.....	410000-487999	250000-	43
°JD 7673 R	Bearing, Power Shaft Drive Shaft, R. H. (Bearing No. 1305).....	410000-487999	250000-	43
JD 7673 R	Bearing, Power Shaft Drive Shaft, R. H. (Bearing No. 1305).....	488000-	43
JD 7686 C	Bearing, Power Shaft, Rear.....	488000-	43

*Used only on tractors without Power Shaft.

†Also repairs for Tractors Nos. 410000-487999 equipped with Power Shaft Safety Shield and Flipper Guard.

°Repairs only for tractors equipped with Heavy Duty Power Shaft.

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
		A, AN, AW	
POWER LIFT PARTS			
1450 R	Pipe Plug, Oil Level	P.L. 100-29999	44
1452 R	Drain Plug in Power Lift Housing.	P.L. 100-	44
A 140 R	Valve, Relief.	P.L. 100-	44
A 147 R	Key Washer, in Power Lift Pedals.	P.L. 1325-	44
A 354 R	Spring, Cam Trip Lever.	P.L. 30000-	44
A 521 R	Gasket, Relief Valve Spring Nut (Copper)	P.L. 30000-	44
A 608 R	Washer on Control Shaft.	P.L. 30000-	44
A 621 R	Bearing, Pump Shaft Oil Seal.	P.L. 100-59999	45
A 622 R	Cylinder.	P.L. 100-	45
A 623 R	Gasket, Cylinder.	P.L. 100-	45
A 625 R	Piston.	P.L. 100-	45
A 626 R	Cup, Piston (Leather).	P.L. 100-	45
A 627 R	Retainer, Piston Cup.	P.L. 100-	45
A 628 R	Lock Plate, Piston Cup Retainer.	P.L. 100-	45
A 630 R	Pin, Piston.	P.L. 100-	45
A 631 R	Snap Ring, Piston Pin.	P.L. 100-	45
A 633 R	Crank Arm.	P.L. 100-	45
A 635 R	Pin, Crank.	P.L. 100-	45
A 637 R	Guide, Valve.	P.L. 100-29999	44
A 638 R	Valve, Check.	P.L. 100-29999	44
A 639 R	Spring, Valve.	P.L. 100-29999	44
A 640 R	Gasket, Check Valve Spring Plug (Copper Asbestos).	P.L. 100-	44
A 641 R	Plug, Check Valve Spring.	P.L. 100-29999	44
A 642 R	Valve, By-Pass.	P.L. 100-	44
A 643 R	Shaft, Power Lift Control.	P.L. 100-29999	44
A 644 R	Washer, on Control Shaft.	P.L. 100-29999	44
A 645 R	Packing, Control Shaft.	P.L. 100-29999	44
A 646 R	Lever, Control.	P.L. 100-29999	44
A 647 R	Pawl, Control Lever.	P.L. 100-29999	44
A 647 R	Pawl, Trip Lever.	P.L. 100-29999	44
A 648 R	Pin, Trip Lever Pawl.	P.L. 100-29999	44
A 648 R	Pin, Control Lever Pawl.	P.L. 100-	44
A 649 R	Cam.	P.L. 100-29999	44
A 650 R	Lever, Trip.	P.L. 100-29999	44
A 653 R	Ratchet.	P.L. 100-29999	44
A 654 R	Spring, Trip Lever Pawl.	P.L. 100-29999	44
A 655 R	Spring, Trip Lever.	P.L. 100-29999	44
A 659 R	Spring, Relief Valve.	P.L. 100-	44
A 660 R	Retainer, Relief Valve Spring.	P.L. 100-29999	44
A 661 R	Gasket, Valve Housing.	P.L. 100-29999	44
A 662 R	Pedal, Power Lift.	P.L. 100-1324	44
A 663 R	Pin, Pedal.	P.L. 100-1324	44
A 664 R	Rod, Control.	P.L. 100-	44
A 665 R	Pin, Pump Follower Gear.	P.L. 100-	45
A 667 R	Cup, Oil Seal, Pump Shaft.	P.L. 100-59999	45
A 668 R	Packing, Pump Shaft Oil Seal.	P.L. 100-59999	45
A 669 R	Washer, Pump Shaft Oil Seal.	P.L. 100-59999	45
A 670 R	Spring, Pump Shaft Oil Seal.	P.L. 100-59999	45
A 671 R	Gear, Pump Drive.	P.L. 1576-	45
A 672 R	Gasket, Pump Body.	P.L. 100-1575	45
A 674 R	Stud, Pump Body to Housing.	P.L. 100-	45
A 676 R	Woodruff Key in Pump Drive Gear.	P.L. 100-	45
A 679 R	Spring, Control Lever, Pawl.	P.L. 100-	44
A 680 R	Key Washer, Control Lever.	P.L. 100-	44
A 731 R	Bushing, Pump Follower Gear.	P.L. 100-	45
A 800 R	Shaft, Power Lift Pump.	P.L. 457-59999	44
A 805 R	Bushing, Pump Drive Shaft.	P.L. 457-59999	44
A 816 R	Body, Pump.	P.L. 1576-59999	45
A 817 R	Cover, Pump.	P.L. 1576-59999	45
A 818 R	Dowel Pin, Pump Body (Upper).	P.L. 1576-	45
A 819 R	Dowel Pin, Pump Body (Lower).	L.P. 1576-	45
A 1427 R	Pedal, R. H.	P.L. 30000-	44
A 1428 R	Pedal, L. H.	P.L. 30000-	44
A 1429 R	Cam.	P.L. 30000-	44
A 1431 R	Guide, Valve.	P.L. 30000-	44
A 1432 R	Trip Lever, Cam.	P.L. 30000-	44
A 1433 R	Roller, Cam Follower.	P.L. 30000-	44
A 1434 R	Pin, Cam Follower Roller.	P.L. 30000-	44
A 1435 R	Shaft, Trip Lever and Cam Follower.	P.L. 30000-	44
A 1436 R	Pawl, Control Lever.	P.L. 30000-	44
A 1437 R	Packing, Control Shaft (Cork)	P.L. 30000-	44
A 1438 R	Shaft, Control.	P.L. 30000-	44

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
		A, AN, AW	
POWER LIFT PARTS—Continued			
A 1439 R	Screw, Relief Valve Spring.....	P.L. 30000—	44
A 1440 R	Valve, Check.....	P.L. 30000—	44
A 1441 R	Plug, Check Valve Spring.....	P.L. 30000—	44
A 1444 R	Spring, Rock Shaft Return.....	P.L. 30000—	44
A 1445 R	Bearing, Rock Shaft.....	P.L. 30000—	44
A 1446 R	Valve, Throttle.....	P.L. 30000—	44
A 1447 R	Gasket, Valve Housing.....	P.L. 30000—	44
A 1449 R	Screw, Throttle Valve Adjusting.....	P.L. 30000—	44
A 1450 R	Spring, Pedal Return.....	P.L. 30000—	44
A 1452 R	Stud, Valve Housing to Power Lift Housing.....	P.L. 30000—	45
A 1453 R	Shield, Rock Shaft Return Spring.....	P.L. 30000—	44
A 1861 R	Washer under Power Lift Relief Valve Spring.....	P.L. 60000—	44
° A 2197 R	Shaft, Power Lift Pump (Number Stamped on Outer End)	P.L. 457—59999	44
A 2396 R	Gasket, Power Shaft Oil Seal.....	P.L. 60000—	45
A 2429 R	Shaft, Power Lift Pump.....	P.L. 60000—	45
A 2430 R	Body, Pump.....	P.L. 60000—	45
A 2431 R	Cover, Pump.....	P.L. 60000—	45
A 2432 R	Cup, Oil Seal, Pump Shaft.....	P.L. 60000—	45
A 2433 R	Gear, Pump Drive.....	P.L. 60000—	45
A 2434 R	Washer, Pump Shaft Oil Seal.....	P.L. 60000—	45
A 2435 R	Spring, Pump Shaft Oil Seal.....	P.L. 60000—	45
A 2436 R	Packing, Pump Shaft Oil Seal.....	P.L. 60000—	45
A 2454 R	Spring, Power Shaft Flipper Guard.....	P.L. 60000—	43
A 2480 R	Bearing, Pump Shaft Oil Seal.....	P.L. 60000—	45
A 2481 R	Bushing, Pump Drive Shaft.....	P.L. 60000—	44
AA 401 R	Housing, A830 R, with Oil Seal Bearing and A800 R and AA480 R Shafts.....	P.L. 100—456	44
AA 402 R	Connecting Rod.....	P.L. 100—	45
AA 404 R	Housing, A636 R, Valve with Guide and Plug.....	P.L. 100—29999	44
AA 408 R	Vent Plug.....	P.L. 100—29999	44
AA 432 R	Gear, Pump Follower, with Bushing.....	P.L. 1576—	45
AA 452 R	Stuffing Box with Packing Gland, Power Shaft Rear End.....	P.L. 100—59999	45
AA 480 R	Shaft with Coupling, Power Lift Drive.....	P.L. 457—59999	44
AA 488 R	Housing, A830 R, with Oil Seal Bearing and Bushing.....	P.L. 457—29999	44
AA 498 R	Pump Body with Gears and Cover.....	P.L. 100—1575	45
AA 1103 R	Housing, A1430 R, Valve, with Guide.....	P.L. 30000—	44
AA 1104 R	Cam Follower Assembly.....	P.L. 30000—	44
AA 1105 R	Lever, Control.....	P.L. 30000—	44
AA 1108 R	Rock Shaft with Dowel Pin, R. H.....	P.L. 100—	44
AA 1111 R	Housing, A1442 R, Power Lift with Pump Shaft Bushing, Oil Seal Bearing and Pump Follower Gear Pin.....	P.L. 30000—59999	44
° AA 1902 R	Shaft with Coupling, Power Lift Drive.....	P.L. 457—59999	44
AA 2097 R	Housing, A2424 R, with Bushing and Oil Seal Bearing, Power Lift...	P.L. 60000—	44
AA 2103 R	Shaft with Coupling, Power Lift Drive.....	P.L. 60000—	44
* AA 2295 R	Housing, A2452 R, Power Shaft Oil Seal with Flipper Guard and Oil Seal.....	P.L. 60000—	45
* AA 2296 R	Oil Seal, Power Shaft.....	P.L. 60000—	45
* AA 2297 R	Shield, Power Shaft Safety.....	P.L. 60000—	43
* AA 2343 R	Flipper Guard.....	P.L. 60000—	43
B 170 R	Spring, Control Shaft.....	P.L. 30000—	44
B 268 R	Spring, Check Valve.....	P.L. 30000—	44
B 268 R	Spring, Throttle Valve.....	P.L. 30000—	44
B 365 R	Spring, Cam Follower.....	P.L. 30000—	44
B 425 R	Washer, Throttle Valve Adjusting Screw (Copper) (2 used).....	P.L. 30000—	44
B 427 R	Cap Nut, Throttle Valve Adjusting Screw.....	P.L. 30000—	44
B 489 R	Shaft, Pedal.....	P.L. 1325—	44
B 490 R	Pedal, R. H.....	P.L. 1325—29999	44
B 491 R	Pedal, L. H.....	P.L. 1325—29999	44
C 1220 R	Dowel Pin, R. H. Rock Shaft.....	P.L. 30000—	44
C 1224 R	Spring, Pedal.....	P.L. 100—29999	44
C 1335 R	Woodruff Key, Ratchet and Cam.....	P.L. 100—29999	44
D 469 R	Welsh Plug, Valve Housing.....	P.L. 100—29999	44
D 1969 R	Pin, Cam Trip.....	P.L. 30000—	44
E 2142 R	Pipe Plug, Oil Level Test.....	P.L. 30000—	44
E 2244 R	Pipe Plug, Oil Filler in Valve Housing.....	P.L. 30000—	44
E 2244 R	Pipe Plug, Power Lift Housing Transmission Filler and Level.....	P.L. 1325—29999	44
E 2272 R	Spring, Control Shaft.....	P.L. 100—29999	44
F 215 R	Snap Ring, Power Lift, Pump Shaft Rear Bearing.....	P.L. 60000—	45
F 215 R	Snap Ring, Power Lift, Drive Shaft Coupling Retaining.....	P.L. 60000—	45
JD 7686 C	Bearing, Power Lift Pump Shaft, Rear.....	P.L. 60000—	43
JD 7759	Alumite Fitting No. 1610 on Rock Shaft Bearings.....	P.L. 100—	44

*Also Repairs for tractors equipped with Power Lift with Power Shaft Safety Shield and Flipper Guard.

°Repairs only for tractors equipped with Heavy Duty Power Shaft.

44 JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
K. W. LIGHTING OUTFITS				
AA637 R, AA640 R, AA642 R and AA1928 R				
A 1105 R	Bracket, Lamp, Front.....		250000-	45
A 1219 R	Bracket, Lamp, Front.....	410000-476999		45
A 1219 R	Bracket, Lamp, Rear.....		250000-	45
A 1225 R	Cable Clip.....	410000-	250000-	45
A 1226 R	Support, Strap, Ignition Wire.....	410000-414808		45
A 2209 R	Bracket, Lamp, Front.....	477000-		45
AA 832 R	Lamp Complete.....	410000-	250000-	45
AA 833 R	Cable Complete with Contacts.....	410000-414808		45
AA 834 R	Plug, Single Contact.....	410000-476999	250000-	45
AA 835 R	Plug, Double Contact.....	410000-476999	250000-	45
AA 836 R	Cable Complete with Contacts.....		250000-	45
AA 837 R	Cable Complete with Contacts.....	414809-476999		45
AA 1684 R	Bracket, Lamp, Rear.....	410000-		45
AA 1929 R	Cable Complete with Contacts.....	477000-		45
C 1592 R	Nut, Lamp Supporting Bolt.....	410000-	250000-	45
D 1108 R	Bulb, 27 Candle Power, Direct Current, 9 Volts.....	410000-	250000-	45
D 2141 R	Moulding or Lens Retainer.....	410000-	250000-	45
D 2142 R	Reflector, Complete.....	410000-	250000-	45
D 2143 R	Wiring for Lamp Complete.....	410000-	250000-	45
D 2144 R	Lamp Body Complete.....	410000-	250000-	45
D 2145 R	Clip, Lens Holder.....	410000-	250000-	45
D 2146 R	Gasket, Lens (Cork).....	410000-	250000-	45
D 2147 R	Lens.....	410000-	250000-	45
D 2148 R	Spring, Lens, Retaining.....	410000-	250000-	45
D 2149 R	Screw, Moulding, or Lens Retainer.....	410000-	250000-	45
D 2569 R	Washer, Lamp Support Bolt Bearing.....	410000-	250000-	45
GENERATOR				
(For KW Lighting Outfits)				
1503 R	Nut on Rotor Shaft.....	410000-		
1707 R	Washer, Seat Clamp.....	477000-		45
2364 R	Rawhide Pin.....	410000-414808		45
A 767 R	Lock Washer, Generator Cover Screws.....	410000-	250000-	45
A 1200 R	Pin, Rotor Shaft (Taper).....	410000-	250000-	45
A 1201 R	Spring, Contact Plug Socket.....	410000-	250000-	45
A 1202 R	Cover, Generator.....	410000-	250000-	45
A 1203 R	Screw, Generator Cover, Fillister Head Steel Machine.....	410000-	250000-	45
A 1204 R	Spacer, Rotor.....	410000-	250000-	45
A 1205 R	Housing, Bearing, Brass.....	410000-	250000-	45
A 1206 R	Washer, Bearing Housing, 5/8" Inside Diameter.....	410000-	250000-	45
A 1207 R	Felt Washer, Bearing Dust Cap, Pulley End, 3/32" Thick.....	410000-	250000-	45
A 1208 R	Dust Cap, Bearing, Pulley End.....	410000-	250000-	45
A 1209 R	Dust Cap, Bearing.....	410000-	250000-	45
A 1210 R	Screw, Bearing Housing, Fillister Head Machine.....	410000-	250000-	45
A 1211 R	Lock Washer on Bearing Housing Oiler.....	410000-	250000-	45
A 1211 R	Lock Washer on Bearing Housing Screws.....	410000-	250000-	45
A 1212 R	Bottom, Generator Body, Sheet Brass.....	410000-	250000-	45
A 1213 R	Nut, Winding Side Spacer, 3/8", Brass.....	410000-	250000-	45
A 1214 R	Oiler, Bearing Housing, 1/4", Hinged Lid.....	410000-	250000-	45
A 1215 R	Packing, Cover, Short.....	410000-	250000-	45
A 1216 R	Packing, Cover, Long.....	410000-	250000-	45
A 1217 R	Screw, Generator Body to Bottom.....	410000-	250000-	
A 1218 R	Pulley, Generator.....	410000-414808		45
A 1221 R	Bracket, Generator.....	410000-414808		45
A 1222 R	Generator Base.....	410000-414808		45
A 1223 R	Pivot, Generator Base (3/8" x 3-11/16").....	410000-414808		45
A 1227 R	Bracket, Generator.....	414809-	250000-	45
A 1228 R	Pulley, Generator.....	414809-	250000-	45
A 1230 R	Belt, Generator (Vee Type).....	414809-476999	250000-	45
A 1231 R	Heat Shield, Generator.....	414809-	250000-	45
A 1232 R	Strap, Generator Bracket Clamp.....	414809-		45
A 1233 R	Support, Fan Shaft.....	414809-476999		45
A 1234 R	Lock Washer, Drive Pulley Screw (5/16" Special).....	410000-414809		45
A 2208 R	Bracket, Generator.....	477000-		45
AA 825 R	Generator, less Pulley.....	410000-	250000-	45
AA 826 R	Body, Generator Complete.....	410000-	250000-	45
AA 827 R	Rotor Shaft Complete.....	410000-	250000-	45
AA 828 R	Winding Complete.....	410000-	250000-	45
AA 829 R	Socket, Contact Plug with Wire.....	410000-	250000-	45

Part Number	NAME AND DESCRIPTION	Serial Number		Plate No.
		A, AN, AW	AR, AO	
	GENERATOR—Continued (For KW Lighting Outfits)			
AA 830 R	Wire, Contact Plug Socket.....	410000—	250000—	45
AA 831 R	Magnet with Keeper.....	410000—	250000—	45
AA 838 R	Belt, Complete, Fasteners and Pin.....	410000-414808	45
AA 862 R	Drive Pulley Complete.....	410000-414808	45
AA 1930 R	Pulley, Complete, D2911 R, Fan Shaft Drive.....	410000-476999	250000—	45
AF 443 R	Pulley, Fan Shaft Drive, Complete.....	477000—	45
C 1570 R	Spring, Belt Tension.....	410000-414808	45
C 1827 R	Washer, Generator Shaft.....	410000—	45
D 1124 R	Bearing, Rotor Shaft.....	410000—	250000—	45
D 1158 R	Woodruff Key, Rotor Shaft.....	410000—	250000—	45
F 462 R	Screw, Fan Shaft Drive Pulley.....	477000—	45
F 481 R	Belt, Generator....	477000—	45
K 3151 R	Washer, Spring Bolt (3/4" Outside Diameter, 21/64" Inside Diameter).....	410000-414808	45


Part Number	NAME AND DESCRIPTION	Starting and Lighting	Lighting Only	Starting Only	Serial Number	Plate No.
					A, AN, AW	
MODELS "A"-"A N"-"AW" STARTING AND LIGHTING EQUIPMENT						
A 258 R	Body, Solder Bushing, Governor Case to Oil Pressure Gauge Line.....	X	X	X	477000-489983	46
A 401 R	Gasket, Crankcase Cover.....	X	X		477000-	1
A 844 R	Support, Fan Shaft.....	X	X	X	477000-	12
A 903 R	Gasket, Crankcase Cover.....	X		X	477000-	1
A 1225 R	Clip, Generator Cable (3/4" Wide to fit 1/4" Tube).....	X	X	X	477000-	46
A 1225 R	Clip, Choke Tube (3/4" Wide to fit 1/4").....	X		X	477000-	46
A 1225 R	Clip, Rear Lamp Wire (3/4" Wide to fit 1/4").....	X	X		477000-	46
A 1712 R	Clamp, Heat Indicator.....	X	X	X	477000-	46
A 2217 R	Support, Dash and Battery.....	X	X	X	477000-	46
A 2222 R	Partition, Instrument Compartment.....	X	X	X	477000-	46
A 2223 R	Tubing, Dash and Battery Support Frame.....	X	X	X	477000-	46
A 2227 R	Top, Battery Box.....	X	X	X	477000-	46
A 2228 R	Adapter, Generator Bracket.....	X	X		477000-	46
A 2229 R	Extension, Fuel Control Rod.....	X	X	X	477000-	46
A 2230 R	Link, Fuel Control.....	X	X	X	477000-	46
A 2231 R	Rod, Speed Control.....	X	X	X	477000-	46
A 2232 R	Cover, Crankcase.....	X		X	477000-	46
A 2236 R	Rod, Shutter Control.....	X	X	X	477000-	46
A 2238 R	Gear, Flywheel Starter.....	X		X	477000-	47
A 2246 R	Cover, Crankcase.....		X		477000-	46
A 2499 R	Sleeve on Oil Pressure Gauge Pipe.....	X	X	X	489984-	46
A 2500 R	Nut, Compression Type, on Oil Gauge Pressure Pipe.....	X	X	X	489984-	46
A 2502 R	Connector in Governor Case.....	X	X	X	489984-	46
A 2563 R	Pipe, Oil Pressure Gauge (3/16" Tubing).....	X	X	X	489984-	46
A 2564 R	Connector, Compression Type, Oil Pressure Gauge to Oil Pressure Gauge Pipe.....	X	X	X	489984-	46
A 2565 R	Tube, Rubber, on Oil Pressure Gauge Pipe.....	X	X	X	489984-	46
AA 1730 R	Gauge with Clamp, Oil Pressure.....	X	X	X	477000-489983	46
AA 1930 R	Drive Pulley, D2911 R, Generator.....	X	X	X	477000-	46
AA 1986 R	Heat Indicator.....	X	X	X	477000-	46
AA 1997 R	Oil Pipe, Pressure Gauge (5/16" Tubing).....	X	X	X	477000-489983	46
AA 1998 R	Base, Battery Box.....	X	X	X	477000-487999	46
AA 1999 R	Side with Nut, R. H., Battery Box.....	X	X	X	477000-	46
AA 2000 R	Side with Nut, L. H., Battery Box.....	X	X	X	477000-	46
AA 2001 R	Rod, Choke and Tube.....	X		X	477000-	46
AA 2004 R	Starting Motor with Magnetic Switch.....	X		X	477000-	46
AA 2006 R	Body, A2233 R, and Pipe, Breather.....	X	X	X	477000-	46
AA 2007 R	Cover, A2234 R, Breather.....	X	X	X	477000-	46
AA 2011 R	Guard with Supports, Flywheel.....	X		X	477000-	47
AA 2209 R	Conduit, Wiring Harness, with Clip.....	X	X	X	477000-	46
AA 2308 R	Base, Battery Box.....	X	X	X	488000-	46
AA 2367 R	Flywheel, A2237 R, with Bolts and Starter Gear.....	X		X	477000-	47
AA 3032 R	Shaft, Cranking (Used with Tractor Steering Wheel).....	X		X	477000-	46
AB 1188 R	Light Switch.....	X	X	X	477000-	46
AB 1189 R	Control Rod, Light Switch.....	X	X	X	477000-	46
AB 1199 R	Tractor Lamp, R. H.....	X	X		477000-	46
AB 1201 R	Tractor Lamp, L. H.....	X	X		477000-	46
AB 1204 R	Generator.....	X	X	X	477000-	46
AB 1549 R	Gauge, Oil Pressure.....	X	X	X	489984-	46
AB 1829 R	Dash Light.....	X	X		477000-	46
AB 1830 R	Wire, Battery to Ammeter.....	X	X	X	477000-	46
AB 1831 R	Wiring Harness, Generator and Lamp.....	X	X		477000-	46
AB 1833 R	Cable, Battery Ground.....	X	X	X	477000-	46
AB 1834 R	Clamp with Cushions, Battery.....	X	X	X	477000-	46
AB 1837 R	Starter Switch.....	X		X	477000-	46
AB 1838 R	Control Rod, Starter Switch.....	X		X	477000-	46
AB 1840 R	Wire, Ammeter to Starting Switch.....	X		X	477000-	46
AB 1842 R	Cable, Battery to Starting Motor.....	X		X	477000-	46
AB 1857 R	Wheel, Cranking, with Pilot.....	X		X	477000-	46
AB 1860 R	Clamp, Negative Battery Terminal.....		X		477000-	46
AB 1913 R	Wiring Harness, Generator.....			X	477000-	46
AB 2568 R	Ammeter with Clamp.....	X	X	X	477000-	46
AD 1861 R	Tractor Lamp, Rear.....	X	X		477000-	46
B 1030 R	Pulley, Generator.....	X	X	X	477000-	46
B 1033 R	Strap, Generator Adjusting.....	X	X	X	477000-	46
B 1574 R	Bracket, Dash Light.....	X	X	X	477000-	46

Part Number	NAME AND DESCRIPTION	Starting and Lighting	Lighting Only	Starting Only	Serial Number	Plate No.
					A, AN, AW	
MODELS "A"—"A N"—"AW" STARTING AND LIGHTING EQUIPMENT—Continued						
B 1576 R	Clamp, Outlet.....	X	X	X	477000—	46
B 1577 R	Cover, Instrument Panel.....	X	X	X	477000—	46
B 1580 R	Grommet, Rubber, in Instrument Panel.....	X	X	X	477000—	46
B 1582 R	Cushion, Battery Clamp.....	X	X	X	477000—	46
B 1587 R	Belt, Generator.....	X	X	X	477000—	46
B 1588 R	Clip, Conduit (1" Wide to fit 3/4" Tube).....	X	X	X	477000—	46
B 1589 R	Pad, Battery.....	X	X	X	477000—	46
B 1592 R	Support, Choke Tube.....	X	X	X	477000—	46
B 1593 R	Bracket, Generator.....	X	X	X	477000—	46
B 1601 R	Bracket, Rear Lamp.....	X	X	X	477000—	46
B 1608 R	Ratchet, Flywheel Crank.....	X	X	X	477000—	47
B 1662 R	Pin in AA3032 R Cranking Shaft.....	X	X	X	477000—	46
C 1827 R	Washer, Generator Adjusting Strap to Generator Screw.....	X	X	X	477000—	46
D 342 R	Woodruff Key in AA3032 R Cranking Shaft.....	X	X	X	477000—	46
D 392 R	Body, Solder Bushing.....	X	X	X	477000—	46
D 2914 R	Lamp Bracket.....	X	X	X	477000—	46
E 2149 R	Nut, Solder Bushing, on Oil Pressure Gauge Oil Pipe.....	X	X	X	477000—	46
E 2150 R	Gland, Solder Bushing, on Oil Pressure Gauge Oil Pipe.....	X	X	X	477000—	46
H 448 R	Washer, Dash and Battery Support (6 used).....	X	X	X	477000—	46
STARTING AND LIGHTING EQUIPMENT—AR ONLY					AR	
A 1225 R	Clip, Cable, Wiring Harness to Tractor.....	X	X	X	250000—	46
A 1225 R	Clip, Cable, Tail Lamp on Rear Lamp Wire to Tractor.....	X	X	X	250000—	46
A 1225 R	Clip, Cable, Choke Tube to Crankcase.....	X	X	X	250000—	46
A 1712 R	Clamp, Heat Indicator.....	X	X	X	250000—	46
A 1971 R	Shield, Dust, L. H.....	X	X	X	250000—	47
A 1972 R	Bracket, Battery Box.....	X	X	X	250000—	47
A 2071 R	Bracket, Generator.....	X	X	X	250000—	47
A 2072 R	Belt, Generator.....	X	X	X	250000—	47
A 2230 R	Link, Fuel Control Rod.....	X	X	X	250000—	46
A 2232 R	Cover, Crankcase.....	X	X	X	250000—	46
A 2238 R	Gear, Flywheel Starter.....	X	X	X	250000—	47
A 2286 R	Cross Plate, Battery Clamp.....	X	X	X	250000—	47
A 2288 R	Body, Breather.....	X	X	X	250000—	47
A 2290 R	Extension, Fuel Control Rod.....	X	X	X	250000—	47
A 2291 R	Rod, Fuel Control.....	X	X	X	250000—	47
A 2488 R	Lid, Battery Box.....	X	X	X	250000—	47
AA 1730 R	Gauge, Oil Pressure.....	X	X	X	250000—	46
AA 1911 R	Tool Box.....	X	X	X	250000—	47
AA 1930 R	Pulley, D2911 R, Generator Drive.....	X	X	X	250000—	46
AA 2001 R	Rod and Tube, Choke.....	X	X	X	250000—	46
AA 2004 R	Motor, Starting, with Magnetic Switch.....	X	X	X	250000—	46
AA 2075 R	Clamp with Bolts.....	X	X	X	250000—	47
AA 2077 R	Cover, Breather, with Stack.....	X	X	X	250000—	47
AA 2079 R	Fuel Pipe.....	X	X	X	250000—	47
AA 2080 R	Gasoline Pipe.....	X	X	X	250000—	47
AA 2086 R	Guard, Flywheel, with Support.....	X	X	X	250000—	47
AA 2371 R	Flywheel, A2237 R, with Bolts and Starter Gear.....	X	X	X	250000—	47
AA 2415 R	Battery Box Complete.....	X	X	X	250000—	47
AB 1188 R	Switch, Light.....	X	X	X	250000—	46
AB 1189 R	Control Rod, Light Switch.....	X	X	X	250000—	46
AB 1197 R	Cable, Battery Ground.....	X	X	X	250000—	47
AB 1199 R	Lamp, Tractor, R. H.....	X	X	X	250000—	46
AB 1201 R	Lamp, Tractor, L. H.....	X	X	X	250000—	46
AB 1204 R	Generator.....	X	X	X	250000—	46
AB 1545 R	Fuel Cock, Three-Way.....	X	X	X	250000—	47
AB 1837 R	Switch, Starter Pull.....	X	X	X	250000—	46
AB 1838 R	Control Rod, Starter Switch.....	X	X	X	250000—	46
AB 1840 R	Lead, Ammeter to Starting Switch.....	X	X	X	250000—	46
AB 1842 R	Cable, Battery to Starting Motor.....	X	X	X	250000—	46
AB 1956 R	Wheel, Cranking, with Shaft and Pin.....	X	X	X	250000—	47
AB 1959 R	Indicator, Heat.....	X	X	X	250000—	47
AB 1960 R	Oil Pipe, Pressure Gauge.....	X	X	X	250000—	47
AB 1962 R	Harness Assembly, Wiring.....	X	X	X	250000—	47
AB 1963 R	Wire, Rear Lamp.....	X	X	X	250000—	47

Part Number	NAME AND DESCRIPTION				Serial Number	Plate No.
					AR	
STARTING AND LIGHTING EQUIPMENT— AR ONLY—Continued						
AB 1964 R	Wire, Starter Switch to Magnetic Switch.....	X		X	250000—	47
AB 1965 R	Wire, Ammeter to Magnetic Switch.....	X		X	250000—	47
AB 1978 R	Wire, Ammeter to Battery.....		X		250000—	47
AB 1979 R	Harness, Generator Wiring.....			X	250000—	47
AB 2568 R	Ammeter with Clamp.....	X	X	X	250000—	46
AB 2571 R	Shaft, Cranking (Use with Tractor Steering Wheel)...	X		X	250000—	47
AD 1855 R	Lamp, Dash.....	X	X		250000—	47
AD 1861 R	Lamp, Tractor Rear.....	X	X		250000—	46
B 994 R	Clip, Battery Box.....	X	X	X	250000—	47
B 995 R	Pin, Battery Box Clip.....	X	X	X	250000—	47
B 1026 R	Grommet, in Battery Box.....	X	X	X	250000—	47
B 1028 R	Bracket, Head Lamp.....	X	X		250000—	47
B 1030 R	Pulley, Generator.....	X	X	X	250000—	46
B 1033 R	Strap, Generator Adjusting.....	X	X	X	250000—	46
B 1535 R	Stop, Three-Way Cock Indexing.....	X		X	250000—	47
B 1588 R	Clip, Conduit.....	X	X	X	250000—	46
B 1589 R	Pad, Battery.....	X	X	X	250000—	46
B 1592 R	Support, Choke Tube.....	X		X	250000—	46
B 1608 R	Ratchet, Flywheel Crank.....	X		X	250000—	47
B 1642 R	Support, Dash and Steering.....	X	X	X	250000—	47
B 1644 R	Conduit, Starting and Lighting Control.....	X	X	X	250000—	47
B 1645 R	Cover, Dash.....	X	X	X	250000—	47
B 1647 R	Conduit, Wiring Harness.....	X	X	X	250000—	47
B 1654 R	Bracket, Fuel Control.....	X		X	250000—	47
B 1655 R	Rod, Speed Control.....	X	X	X	250000—	47
B 1662 R	Pin, Cranking Shaft.....	X		X	250000—	46
C 1827 R	Washer on Generator Adjusting Strap.....	X	X	X	250000—	46
D 342 R	Woodruff Key in AB2571 R Cranking Shaft.....	X		X	250000—	46
D 417 R	Elbow, Pressure Gauge Oil Pipe to Governor Case..	X	X	X	250000—	47
D 2914 R	Bracket, Rear Lamp.....	X	X		250000—	46
E 2149 R	Nut, Solder Bushing, on Fuel Pipe.....	X		X	250000—	46
E 2149 R	Nut, Solder Bushing, on Gasoline Pipe.....	X		X	250000—	46
E 2149 R	Nut, Solder Bushing, on Pressure Gauge Oil Pipe....	X	X	X	250000—	46
E 2150 R	Gland, Solder Bushing, on Pressure Gauge Oil Pipe....	X	X	X	250000—	46
E 2150 R	Gland, Solder Bushing, on Fuel Pipe.....	X		X	250000—	46
E 2150 R	Gland, Solder Bushing, on Gasoline Pipe.....	X		X	250000—	46

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

49

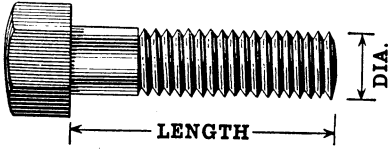Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
<p style="text-align: center;">CAP SCREWS</p>  <p style="text-align: center;">LENGTH DIA.</p>				
1684 R	A 11 R	Differential Bearing Quill to Case.....	1/2"x1-1/2"	3
1674 R	A 21 R	Clutch Fork Bearing to Gear Cover.....	3/8"x1-3/4"	4
1674 R	A 27 R	Oil Pump Cover to Oil Pump Body....	3/8"x1-3/4"	4
A 309 R	A 28 R	L. H. Main Bearing Cover to L. H. Main Bearing Hous- ing.....	5/16"x1-3/4"	3
1667 R	A 28 R	L. H. Main Bearing Cover to L. H. Main Bearing Hous- ing.....	5/16"x1"	2
1670 R	A 41 R	L. H. Governor Bearing Housing to Case.....	3/8"x1"	5
1683 R	A 45 R	Governor Case to Case.....	1/2"x1-1/4"	5
1684 R	A 45 R	Governor Case to Case.....	1/2"x1-1/2"	2
1671 R	A 46 R	Oil Pump Strainer Elbow to Body....	3/8"x1-1/4"	1
A 313 R	A 51 R	Radiator, Bottom Tank to Front End (A-AN-AW)....	5/8"x1-3/4"	2
D 942 R	A 51 R	Radiator Bottom Tank to Front End Support (AR only).....	5/8"x2-1/4"	2
1683 R	A 55 R	Water Elbow to Radiator....	1/2"x1-1/4"	2
1684 R	A 56 R	Steering Worm Quill to Pedestal.....	1/2"x1-1/2"	4
A 871 R	A 58 R	In Throttle Lever Stop....	5/16"x1-1/4"	2
C 1871 R	A 60 R	Seat Support Body to Rear Axle Housing.....	1/2"x1-7/8"	4
D 901 R	A 60 R	Seat Support Body to Rear Axle Housing (AR-AO)....	3/4"x2-1/4"	2
A 473 R	A 77 R	Rear Wheel Sleeve to Wheel.....	7/8"x2-3/4"	6
D 508 R	A 216 R	Drawbar Supports to Rear Axle Housing.....	3/4"x1-1/2"	2
D 508 R	A 217 R	Drawbar Supports to Rear Axle Housing.....	3/4"x1-1/2"	2
A 487 R	A 253 R	Camshaft Lock Plate to Cam Gear.....	3/8"x1"	2
1671 R	A 497 R	In Gear Shifter Shaft.....	3/8"x1-1/4"	1
C 806 R	A 515 R	Oil Filter Body to Head.....	5/16"x9/16"	3
1670 R	A 524 R	Crankcase Cover to Case.....	3/8"x1"	8
1670 R	A 525 R	Carburetor Intake Elbow to Carburetor.....	3/8"x1"	2
1683 R	A 526 R	Air Cleaner Bracket to Radiator Top Tank....	1/2"x1-1/4"	4
A 310 R	A 548 R	Sliding Gear Shaft R. H. Bearing Cover to Case (Drilled).....	7/16"x1-1/4"	2
1669 R	A 550 R	Sliding Gear Shaft and Countershaft Bearing Cover to Case.....	3/8"x3/4"	6
1676 R	A 556 R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7
A 311 R	A 556 R	First Reduction Gear Cover to Case.....	7/16"x4-1/2"	2
D 459 R	A 565 R	Power Shaft R. H. Bearing Cover to Case (Drilled)...	3/8"x1"	2
1670 R	A 579 R	Fan Shaft Rear Bearing to Governor Case.....	3/8"x1"	3
D 474 R	A 616 R	Cam Follower Guide Support to Case.....	1/2"x1-3/4"	2
A 624 R	A 622 R	Power Lift Cylinder to Housing (Drilled).....	5/8"x1-3/4"	4
1667 R	A 627 R	Piston Cup Retainer to Piston.....	5/16"x1"	2
A 634 R	A 633 R	In Power Lift Crank Arm (Drilled).....	7/16"x2"	2
1666 R	A 660 R	Spring Retainer to Valve Housing.....	5/16"x3/4"	2
1670 R	A 774 R	Power Shaft Stuffing Box to Cover.....	3/8"x1"	3
E 2027 R	A 792 R	Fender to Pedestal.....	5/8"x3-1/4"	6
K 2119 R	A 816 R	Power Lift Pump Body to Housing.....	7/16"x2-1/2"	7
K 2119 R	A 817 R	Power Lift Pump Cover to Power Lift Pump Body....	7/16"x2-1/2"	7
1670 R	A 842 R	Fan Shaft Rear Bearing to Governor Case.....	3/8"x1"	3
1670 R	A 902 R	Crankcase Cover to Case.....	3/8"x1"	7
1676 R	A 909 R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7
A 311 R	A 909 R	First Reduction Gear Cover to Case.....	7/16"x4-1/2"	2
D 459 R	A 913 R	Gear Shift Interlock to Transmission Case Cover (Drilled).....	3/8"x1"	2
1671 R	A 918 R	In Gear Shift Shaft.....	3/8"x1-1/4"	1
1683 R	A 927 R	Fan Shaft Support to Front End.....	1/2"x1-1/4"	2
D 901 R	A 929 R	Seat Support to Rear Axle Housing.....	3/4"x2-1/4"	2
1683 R	A 931 R	Water, Elbow to Radiator.....	1/2"x1-1/4"	2
A 313 R	A 942 R	Clutch Lever Bracket to Rear Axle Housing.....	5/8"x1-3/4"	3
A 871 R	A 944 R	In Speed Control Stop....	5/16"x1-1/4"	2
B 568 R	A 950 R	Front End Support to Cylinder Block.....	5/8"x3-3/4"	2
A 951 R	A 950 R	Front End to Case.....	5/8"x2"	4
B 568 R	A 950 R	Front End Support to Cylinder Block.....	5/8"x3-3/4"	2
A 313 R	A 950 R	Front End Support to Cylinder Block.....	5/8"x1-3/4"	2
1682 R	A 963 R	L. H. Dust Shield to Transmission Case.....	1/2"x1"	2
D 466 R	A 989 R	Brake Housing Opening Cover to Case.....	1/2"x3/4"	2
E 2027 R	A 1084 R	In Scraper Bracket, R. H.....	5/8"x3-1/4"	2

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS



Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used
CAP SCREWS—Continued				
E 2027 R	A 1085 R	In Scraper Bracket, L. H.	5/8"x3-1/4"	2
D 474 R	A 1143 R	Cam Follower Guide to Case	1/2"x1-3/4"	2
A 871 R	A 1150 R	Oil Filter Cover to Oil Filter Head	5/16"x1-1/4"	2
1668 R	A 1150 R	Oil Filter Cover to Oil Filter Head	5/16"x1-1/2"	1
1671 R	A 1150 R	In Oil Pressure Adjusting Screw Clamp	3/8"x1-1/4"	1
C 806 R	A 1152 R	Oil Filter Body to Head	5/16"x9/16"	3
1670 R	A 1180 R	Rear Fan Shaft Bearing Housing to Governor Case	3/8"x1"	3
D 474 R	A 1220 R	Rear Lamp Bracket to Platform	1/2"x1-3/4"	2
A 951 R	A 1236 R	In Front Wheel (AA847 R)	5/8"x2"	4
1682 R	A 1359 R	L. H. Dust Shield to Transmission Case	1/2"x1"	2
A 951 R	A 1363 R	Brake Shoe Carrier to Rear Axle Housing	5/8"x2"	6
1684 R	A 1369 R	R. H. Brake Shaft Bracket to Rear Axle Housing	1/2"x1-1/2"	2
1684 R	A 1370 R	L. H. Brake Shaft Bracket to Rear Axle Housing	1/2"x1-1/2"	2
A 1419 R	A 1412 R	Retainer Washer to Countershaft (Underdrive)	7/8"x1-3/4"	1
1671 R	A 1416 R	In Gear Shift Shaft	3/8"x1-1/4"	1
1669 R	A 1423 R	Spindle Lower Cap to Pedestal	3/8"x3/4"	4
1676 R	A 1445 R	Power Lift Rock Shaft Bearing to Housing	7/16"x1-1/4"	3
D 474 R	A 1595 R	Cam Follower Guide to Main Case	1/2"x1-3/4"	3
C 806 R	A 1787 R	Control Bracket to Bracket Body	5/16"x9/16"	2
A 1813 R	A 1812 R	Rear Wheel Hub Clamp to Wheel (used only with Cast and Spoke Wheels)	7/8"x4-1/2"	3
A 2476 R	A 1812 R	Rear Wheel Hub Clamp to Wheel (used only with Pressed Steel Disk Rear Wheels)	7/8"x3-3/4"	3
A 951 R	A 2101 R	Radiator Bottom Tank to Front End (A-AN)	5/8"x2"	2
D 1564 R	A 2101 R	Radiator Bottom Tank to Front End (AW only)	5/8"x2-1/2"	2
1677 R	A 2102 R	Side to Top and Bottom Tank	7/16"x1-1/2"	8
A 313 R	A 2207 R	Cross Member to Frame	5/8"x1-3/4"	4
1671 R	A 2288 R	Breather Body to Crankcase Cover	3/8"x1-1/4"	2
A 951 R	A 2368 R	Radiator Bottom to Front End (A-AN)	5/8"x2"	2
D 1564 R	A 2368 R	Radiator Bottom to Front End (AW only)	5/8"x2-1/2"	2
1677 R	A 2369 R	Radiator Side to Top and Bottom Tank	7/16"x1-1/2"	8
1676 R	A 2394 R	Rear Axle Housing Cover to Rear Axle Cover	7/16"x1-1/4"	16
1669 R	A 2395 R	Power Shaft Opening Cover to Rear Axle Housing Cover	3/8"x3/4"	3
1671 R	A 2423 R	In Gear Shifter Shaft	3/8"x1-1/4"	1
K 2119 R	A 2430 R	Power Lift Pump Body to Housing	7/16"x2-1/2"	7
K 2119 R	A 2431 R	Power Lift Pump Cover to Pump Body	7/16"x2-1/2"	7
1670 R	A 2447 R	Carburetor Intake Elbow to Carburetor	3/8"x1"	1
A 311 R	A 2472 R	First Reduction Gear Cover to Main Case	7/16"x4-1/2"	2
1676 R	A 2472 R	First Reduction Gear Cover to Main Case	7/16"x1-1/4"	7
A 311 R	A 2474 R	First Reduction Gear Cover to Main Case	7/16"x4-1/2"	2
1676 R	A 2474 R	First Reduction Gear Cover to Main Case	7/16"x1-1/4"	7
1670 R	AA 200 R	Carburetor to Manifold	3/8"x1"	2
1671 R	AA 201 R	Magneto to Governor Case	3/8"x1-1/4"	2
1670 R	AA 227 R	Camshaft Bearing Housing to Case, L. H.	3/8"x1"	2
D 475 R	AA 232 R	Clutch Driving Disk to Crankshaft	5/8"x1-1/2"	1
A 312 R	AA 239 R	R. H. Main Bearing to Case (Drilled)	5/8"x1-1/2"	4
D 475 R	AA 242 R	L. H. Main Bearing to Case	5/8"x1-1/2"	5
1683 R	AA 253 R	Cylinder Water Outlet to Cylinder	1/2"x1-1/4"	4
1670 R	AA 286 R	Transmission Case Cover to Case	3/8"x1"	6
D 475 R	AA 296 R	Front End to Case	5/8"x1-1/2"	4
D 475 R	AA 296 R	Front End to Cylinder	5/8"x1-1/2"	2
1669 R	AA 300 R	Muffler to Radiator Top Tank	3/8"x3/4"	4
D 466 R	AA 318 R	Platform to Rear Axle Housing	1/2"x3/4"	2
1682 R	AA 318 R	Platform to Rear Axle Housing	1/2"x1"	2
C 834 R	AA 329 R	Dust Shield to Cover (Drilled)	5/16"x9/16"	4
A 313 R	AA 509 R	Rear Axle Housing to Case	5/8"x1-3/4"	12
C 1871 R	AA 352 R	Brake Housing to Case	1/2"x1-7/8"	2
D 474 R	AA 352 R	Brake Housing to Case	1/2"x1-3/4"	2
C 1539 R	AA 361 R	Air Cleaner to Bracket	3/8"x3-1/2"	1
1670 R	AA 361 R	Air Cleaner to Bracket	3/8"x1"	3
1669 R	AA 362 R	Air Stack to Air Cleaner Bracket	3/8"x3/4"	4
A 675 R	AA 401 R	Power Lift Housing to Rear Axle Housing	7/16"x5-1/4"	2
E 2025 R	AA 404 R	Power Lift Valve Housing to Power Lift Housing	1/2"x3"	3
C 529 R	AA 404 R	Power Lift Valve Housing to Power Lift Housing	1/2"x3-1/2"	4
1683 R	AA 435 R	Cylinder Water Outlet to Cylinder	1/2"x1-1/4"	4
1670 R	AA 452 R	Power Shaft Stuffing Box to Cover	3/8"x1"	3
1669 R	AA 472 R	Muffler to Radiator Top Tank	3/8"x3/4"	4
1669 R	AA 474 R	Air Stack to Bracket	3/8"x3/4"	4
A 675 R	AA 488 R	Power Lift Housing to Rear Axle Housing	7/16"x5-1/4"	2
K 2119 R	AA 498 R	Power Lift Pump Body to Housing	7/16"x2-1/2"	7

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

51





Order Part, Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
CAP SCREWS—Continued				
1676 R	AA 504 R	Rear Axle Housing Cover to Rear Axle Housing.	7/16"x1-1/4"	16
1670 R	AA 508 R	Transmission Cover to Case.	3/8"x1"	6
1669 R	AA 524 R	Front Fan Bearing Housing to Support.	3/8"x3/4"	2
1683 R	AA 525 R	Cylinder Water Outlet to Cylinder.	1/2"x1-1/4"	4
1669 R	AA 564 R	Front Fan Shaft Bearing Housing to Support.	3/8"x3/4"	2
1683 R	AA 565 R	Cylinder Water Outlet to Cylinder.	1/2"x1-1/4"	4
1670 R	AA 579 R	Carburetor to Inlet Elbow.	3/8"x1"	2
1670 R	AA 580 R	Carburetor to Manifold.	3/8"x1"	2
D 474 R	AA 582 R	Brake Housing to Case (Emergency).	1/2"x1-3/4"	3
1682 R	AA 595 R	R. H. Dust Shield and Fender Reinforcement to First Reduction Gear Cover.	1/2"x1"	2
D 475 R	AA 598 R	Platform to Rear Axle Housing.	5/8"x1-1/2"	4
D 508 R	AA 607 R	Drawbar Support to Rear Axle Housing.	3/4"x1-1/2"	4
A 313 R	AA 616 R	Rear Axle Housing to Case.	5/8"x1-3/4"	12
D 475 R	AA 631 R	Front End to Cylinder.	5/8"x1-1/2"	4
1684 R	AA 634 R	Steering Worm Quill to Pedestal (AW only).	1/2"x1-1/2"	4
1670 R	AA 741 R	Transmission Case Cover to Main Case.	3/8"x1"	6
D 475 R	AA 804 R	L. H. Main Bearing to Main Case.	5/8"x1-1/2"	3
1683 R	AA 813 R	Governor Case to Transmission Case.	1/2"x1-1/4"	5
1684 R	AA 813 R	Governor Case to Case.	1/2"x1-1/2"	2
1669 R	AA 817 R	Front Fan Shaft Bearing Housing to Support.	3/8"x3/4"	2
1669 R	AA 818 R	Front Fan Bearing Housing to Support.	3/8"x3/4"	2
1670 R	AA 823 R	Transmission Case Cover to Case.	3/8"x1"	6
1671 R	AA 861 R	In Oil Pressure Adjusting Screw Clamp.	3/8"x1-1/4"	1
A 871 R	AA 861 R	Oil Filter Cover to Oil Filter Head.	5/16"x1-1/4"	2
1668 R	AA 861 R	Oil Filter Cover to Oil Filter Head.	5/16"x1-1/2"	1
D 475 R	AA 905 R	Platform to Rear Axle Housing.	5/8"x1-1/2"	4
1668 R	AA 934 R	Oil Filter Cover to Head.	5/16"x1-1/2"	1
A 871 R	AA 934 R	Oil Filter Cover to Head.	5/16"x1-1/4"	2
D 474 R	AA 976 R	Brake Housing to Case (Rear Wheel Brakes).	1/2"x1-3/4"	3
D 475 R	AA 1025 R	Platform to Rear Axle Housing.	5/8"x1-1/2"	4
D 475 R	AA 1032 R	Platform to Rear Axle Housing.	5/8"x1-1/2"	4
1684 R	AA 1046 R	Brake Shaft Bracket to Rear Axle Housing.	1/2"x1-1/2"	4
A 487 R	AA 1047 R	Cam Gear to Shaft.	3/8"x1"	2
A 313 R	AA 1075 R	Rear Axle Housing to Main Case.	5/8"x1-3/4"	12
C 1871 R	AA 1079 R	Brake Housing to Case.	1/2"x1-7/8"	4
A 1448 R	AA 1103 R	Valve Housing to Power Lift Housing.	1/2"x5-1/2"	6
A 675 R	AA 1111 R	Power Lift Housing to Rear Axle Housing.	7/16"x5-1/4"	1
A 1451 R	AA 1111 R	Power Lift Housing to Rear Axle Housing.	7/16"x5-1/2"	1
A 1419 R	AA 1121 R	In Countershaft (AR-AO).	7/8"x1-3/4"	1
A 1338 R	AA 1130 R	Cable Conduit to Front End.	1/2"x1/2"	2
A 871 R	AA 1407 R	Hub Cap to Hub (Disk Type Wheel).	5/16"x1-1/4"	3
A 313 R	AA 1483 R	Rear Axle Housing to Case.	5/8"x1-3/4"	12
1676 R	AA 1576 R	First Reduction Gear Cover to Main Case.	7/16"x1-1/4"	7
A 311 R	AA 1576 R	First Reduction Gear Cover to Main Case.	7/16"x4-1/2"	2
1676 R	AA 1577 R	First Reduction Gear Cover to Main Case.	7/16"x1-1/4"	7
A 311 R	AA 1577 R	First Reduction Gear Cover to Main Case.	7/16"x4-1/2"	2
B 568 R	AA 1582 R	Fender R. H. Rear Axle Housing.	5/8"x3-3/4"	3
B 568 R	AA 1583 R	Fender L. H. to Rear Axle Housing.	5/8"x3-3/4"	3
D 474 R	AA 1684 R	Rear Lamp Bracket to Tractor.	1/2"x1-3/4"	2
D 508 R	AA 1702 R	Knuckle to Knuckle Hub (Offset).	3/4"x1-1/2"	4
D 508 R	AA 1708 R	Knuckle to Knuckle Hub.	3/4"x1-1/2"	4
1683 R	AA 1770 R	Upper Water Pipe to Cylinder.	1/2"x1-1/4"	4
1671 R	AA 1778 R	Muffler to Radiator Top Tank.	3/8"x1-1/4"	3
1684 R	AA 1779 R	Air Cleaner Bracket to Radiator Top Tank.	1/2"x1-1/2"	4
D 475 R	AA 1809 R	Front End to Case.	5/8"x1-1/2"	4
D 475 R	AA 1809 R	Front End to Cylinder.	5/8"x1-1/2"	6
A 2176 R	AA 1828 R	Steering Worm Bearing Housing to Pedestal.	1/2"x1-3/8"	2
1670 R	AA 2004 R	Starting Motor to Crankcase Cover.	3/8"x1"	3
1671 R	AA 2006 R	Breather Body to Crankcase Cover.	3/8"x1-1/4"	2
A 675 R	AA 2097 R	Power Lift Housing to Rear Axle Housing.	7/16"x5-1/4"	1
A 1451 R	AA 2097 R	Power Lift Housing to Rear Axle Housing.	7/16"x5-1/2"	1
1669 R	AA 2214 R	Muffler to Radiator Top Tank.	3/8"x3/4"	4
D 475 R	AA 2222 R	Front End to Case.	5/8"x1-1/2"	4
D 475 R	AA 2222 R	Front End to Cylinder.	5/8"x1-1/2"	6
1683 R	AA 2242 R	Air Cleaner Bracket to Radiator Top Tank.	1/2"x1-1/4"	1
1683 R	AA 2262 R	Governor Case to Case.	1/2"x1-1/4"	4
1684 R	AA 2262 R	Governor Case to Case.	1/2"x1-1/2"	1
D 475 R	AA 2279 R	Clutch Driving Disk to Crankshaft.	5/8"x1-1/2"	1
1670 R	AA 2295 R	Power Shaft Oil Seal Housing to Rear Axle Housing Cover.	3/8"x1"	3

     HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS


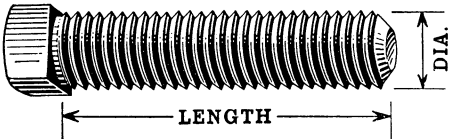

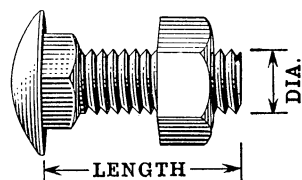
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
CAP SCREWS—Continued				
A 2174 R	AA 2299 R	Air Cleaner to Bracket.....	3/8"x4-1/4"	1
B 440 R	AA 2299 R	Air Cleaner to Bracket.....	3/8"x3-3/4"	3
C 834 R	AA 2336 R	Pulley Dust Shield and Oil Seal to First Reduction Gear Cover (Drilled).....	5/16"x9/16"	3
1670 R	AA 2499 R	Carburetor to Manifold.....	3/8"x1"	2
D 475 R	AA 3000 R	Platform to Rear Axle Housing.....	5/8"x1-1/2"	4
1670 R	AA 3004 R	Power Shaft Rear Housing with Oil Seal to Rear Axle Housing Cover.....	3/8"x1"	3
1672 R	AB 706 R	Magneto to Governor Case.....	3/8"x1-1/2"	2
1672 R	AB 757 R	Magneto to Governor.....	3/8"x1-1/2"	2
1671 R	AC 119 R	Front Wheel Hub Cap to Front Wheel.....	3/8"x1-1/4"	3
1671 R	AD 452 R	In Front Wheel Knuckle Nut.....	3/8"x1-1/4"	1
1670 R	AF 240 R	Carburetor to Manifold.....	3/8"x1"	2
1672 R	AH 653 R	Magneto to Governor.....	3/8"x1-1/2"	2
1683 R	B 241 R	Oil Pump to Case.....	1/2"x1-1/4"	3
1670 R	B 247 R	Oil Pump Cover to Body.....	3/8"x1"	4
D 916 R	B 253 R	Oil Pump Drive Gear Bearing to Cam Follower Sup- port (Drilled).....	3/8"x3/4"	2
1670 R	B 273 R	Speed Change Spring to Governor Arm.....	3/8"x1"	1
1666 R	B 292 R	Support Tube, Packing Retainer to Rear Fan Bearing Housing.....	5/16"x3/4"	3
A 871 R	B 390 R	In Speed Control Stop.....	5/16"x1-1/4"	2
1685 R	B 639 R	Brake Latch to Brake Housing.....	1/2"x2"	1
A 871 R	B 1028 R	Head Lamp Bracket to Radiator Top Tank.....	5/16"x1-3/4"	2
1666 R	B 1033 R	Generator Adjusting Strap to Generator.....	5/16"x3/4"	1
D 474 R	B 1601 R	Rear Lamp Bracket to Platform.....	1/2"x1-3/4"	2
D 475 R	B 1608 R	Crank Ratchet to Flywheel.....	5/8"x1-1/2"	2
D 137 R	B 1680 R	Power Shaft Opening Cover to Rear Axle Housing Cover.....	3/8"x5/8"	3
1669 R	C 2326 R	Spindle Cap to Pedestal (Lower).....	3/8"x3/4"	4
1683 R	D 1769 R	Steering Worm Housing to Steering Gear Housing.....	1/2"x1-1/4"	4
1669 R	D 1866 R	Fan Bearing Cover to Housing.....	3/8"x3/4"	2
D 474 R	D 2414 R	Rear Lamp Bracket to Platform.....	1/2"x1-3/4"	2
1677 R	D 2606 R	Hand Lever Pawl to Hand Lever.....	7/16"x1-1/2"	1
1667 R	D 2914 R	Lamp Bracket to Support.....	5/16"x1"	2
A 2476 R	JD 1249 R	Pressed Steel Wheel to Hub Clamp.....	7/8"x3-3/4"	3
CAP SCREWS—FILLISTER HEAD				
				
A 492 R	A 491 R	Steering Spindle Adjusting Bushing Lock Screw.....	3/8"x3/4"	1
A 492 R	AA 887 R	Air Stack to Air Cleaner Bracket.....	3/8"x3/4"	4
A 492 R	AA 888 R	Exhaust Opening Cover to Radiator Top Tank.....	3/8"x3/4"	4
A 2211 R	AA 1930 R	In Fan Shaft Drive Pulley.....	5/16"x1-1/4"	2
F 462 R	AF 443 R	In Fan Shaft Drive Pulley.....	5/16"x2"	2
SET SCREWS—SQUARE HEAD— CUP POINT				
				
1776 R	A 42 R	In Governor Arm.....	3/8"x1-1/4"	1
A 318 R	A 497 R	Gear Shifter Shaft to Main Case.....	1/2"x3-1/4"	1
A 318 R	A 918 R	Gear Shifter Shaft to Main Case.....	1/2"x3-1/4"	1
1791 R	A 1266 R	Scraper Blade to Holder.....	5/8"x2"	1
A 318 R	A 1416 R	Gear Shifter Shaft to Main Case.....	1/2"x3-1/4"	1
A 318 R	A 2423 R	Gear Shifter Shaft to Main Case.....	1/2"x3-1/4"	1
1791 R	AA 770 R	In Scraper Blade Holder.....	5/8"x2"	1
1791 R	C 264 R	Scraper Blade Holder to Scraper Bar.....	5/8"x2"	2

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

53

 

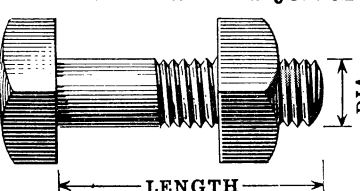
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
<p align="center">SET SCREWS—SQUARE HEAD— DOG POINT</p> 				
A 320 R	A 58 R	In Speed Control Bracket.....	5/16"x3/4"	1
A 320 R	A 80 R	In Speed Control Lever.....	5/16"x3/4"	1
A 320 R	A 944 R	Speed Control Bracket.....	5/16"x3/4"	1
A 320 R	A 947 R	Speed Control Lever.....	5/16"x3/4"	1
D 1086 R	AA 235 R	In Pulley Brake (Adjusting Screw).....	1/2"x2-1/4"	1
A 320 R	B 390 R	Speed Control Bracket.....	5/16"x3/4"	1
<p align="center">SET SCREWS—SQUARE HEAD— CONICAL POINT</p> 				
B 275 R	A 1036 R	In Governor Arm.....	3/8"x1-3/8"	1
A 1253 R	A 1241 R	In Governor Arm.....	3/8"x1"	1
A 1253 R	B 1644 R	Starting and Lighting Control Conduit to Dash.....	3/8"x1"	1
<p align="center">SET SCREWS—HEADLESS</p> 				
B 1529 R	AA 1798 R	In Pedestal Upper Implement Attachment Hole.....	5/8"x3/4"	2
B 1529 R	AA 1830 R	In Pedestal Upper Implement Attachment Hole.....	5/8"x3/4"	2
B 1529 R	AA 2282 R	In Pedestal Upper Implement Attachment Hole.....	5/8"x3/4"	2
<p align="center">MACHINE SCREWS—ROUND HEAD WITHOUT NUTS</p> 				
E 2064 R	A 235 R	Inside Governor Lever to Shaft.....	1/4"x1/2"	2
A 330 R	A 257 R	In Steering Gear Housing Cover.....	5/16"x1/2"	6
E 2063 R	A 606 R	Fulcrum Ball Socket to Cover.....	1/4"x3/4"	4
E 2064 R	A 1247 R	Heat Indicator Bracket to Governor Case.....	1/4"x1/2"	2
E 2062 R	A 2112 R	Grille Center Plate to Pedestal.....	5/16"x1/2"	3
E 2062 R	A 2118 R	In Steering Gear Housing Cover.....	5/16"x1/2"	4
E 2064 R	A 2421 R	Tappet Lever Oiler Pipe Clip to Tappet Lever Bracket.....	1/4"x1/2"	2
A 1543 R	AA 1130 R	Conduit Shield to Front End.....	3/8"x1/2"	2
D 2319 R	AA 1438 R	Shutter to Radiator Side.....	5/16"x3/4"	4
E 2064 R	AA 1526 R	Top Tiebar to Frame.....	1/4"x1/2"	4
E 2064 R	AA 1725 R	Top Tiebar to Frame.....	1/4"x1/2"	4
E 2062 R	AA 1794 R	Radiator Shutter to Radiator.....	5/16"x1/2"	4
E 2064 R	AA 1824 R	Bottom Tiebar to Frame.....	1/4"x1/2"	4
E 2062 R	AA 2238 R	R. H. Radiator Grille to Pedestal.....	5/16"x1/2"	4
E 2062 R	AA 2239 R	L. H. Radiator Grille to Pedestal.....	5/16"x1/2"	4
A 330 R	AA 2253 R	Gasoline Top to Hood Top.....	5/16"x1/2"	1
E 2064 R	AA 2268 R	Bottom Tiebar Assembly to Radiator Shutter Frame.....	1/4"x1/2"	4
E 2064 R	AB 326 R	Oil Filter Leaf By-Pass Spring to Oil Filter Head.....	1/4"x1/2"	2
E 2064 R	B 271 R	Inside Governor Lever to Shaft.....	1/4"x1/2"	2
E 2064 R	B 1592 R	In Choke Tube Support.....	1/4"x1/2"	1
B 991 R	B 1645 R	Dash Cover to Dash.....	No. 10 NC 2-3/8"	2

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

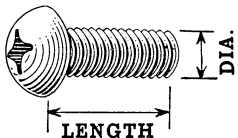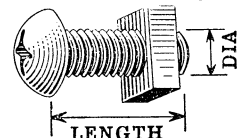Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
MACHINE SCREWS—CROSS RECESS— ROUND HEAD—WITHOUT NUTS				
				
A 2189 R	A 2112 R	Radiator Grille Center Plate to Pedestal.....	5/16"x1/2"	3
A 2189 R	A 2118 R	In Steering Gear Housing Cover.....	5/16"x1/2"	4
A 2189 R	AA 1781 R	Hood and Grille to Radiator Top Tank.....	5/16"x1/2"	2
A 2189 R	AA 1782 R	End Cap to Hood.....	5/16"x1/2"	4
A 2189 R	AA 1787 R	Medallion to Hood and Pedestal.....	5/16"x1/2"	3
A 2189 R	AA 1794 R	Shutter to Radiator Top and Bottom Tank.....	5/16"x1/2"	4
A 2189 R	AA 1999 R	R. H. Battery Box Side to Support.....	5/16"x1/2"	2
A 2189 R	AA 2000 R	L. H. Battery Box Side to Support.....	5/16"x1/2"	2
A 2189 R	AA 2240 R	Shutter to Radiator Top and Bottom Tank.....	5/16"x1/2"	4
A 2189 R	AA 2238 R	R. H. Radiator Grille to Pedestal.....	5/16"x1/2"	4
A 2189 R	AA 2239 R	L. H. Radiator Grille to Pedestal.....	5/16"x1/2"	4
A 2189 R	AA 2257 R	Hood and Grille to Radiator Top Tank.....	5/16"x1/2"	2
MACHINE SCREWS—CROSS RECESS— ROUND HEAD—WITH SQUARE NUTS				
				
A 2190 R	A 2209 R	Head Lamp Bracket and Medallion to Hood.....	5/16"x1"	2
A 2190 R	AA 1781 R	Hood to Radiator Side.....	5/16"x1"	4
A 2190 R	AA 2238 R	R. H. Radiator Grille to Radiator Side.....	5/16"x1"	2
A 2190 R	AA 2239 R	L. H. Radiator Grille to Radiator Side.....	5/16"x1"	2
A 2190 R	AA 2257 R	Hood to Radiator Side.....	5/16"x1"	2
A 2190 R	AA 2297 R	Power Shaft Safety Shield to Oil Seal Housing.....	5/16"x1"	4
DRIVE SCREWS—ROUND HEAD				
				
D 454 R	AA 325 R	Radiator Curtain to Roller.....	No. 7x3/8"	4
A 1217 R	AA 826 R	Generator Bottom to Body.....	No. 2 (.098)x1/4"	6
CARRIAGE BOLTS WITH HEX. NUTS				
				
A 1229 R	A 1227 R	Generator Bracket to Support.....	7/16"x1"	2
C 1647 R	A 1327 R	Platform Brace to Platform.....	3/8"x1-1/4"	4
C 1647 R	A 1369 R	R. H. Brake Shaft Bracket to Platform.....	3/8"x1-1/4"	1
C 1647 R	AA 363 R	Hood to Hood Clip Bracket.....	3/8"x1-1/4"	2
C 980 R	AA 363 R	Hood to Fuel Tank Rear Support.....	3/8"x1-1/2"	2
C 1647 R	AA 526 R	Hood to Hood Clip Bracket.....	3/8"x1-1/4"	2
C 980 R	AA 526 R	Hood to Fuel Tank Rear Support.....	3/8"x1-1/2"	2
C 1647 R	AA 601 R	Hood to Hood Clip Bracket.....	3/8"x1-1/4"	2
C 980 R	AA 601 R	Hood to Fuel Tank Rear Support.....	3/8"x1-1/2"	4
C 1647 R	AA 886 R	Hood to Fuel Tank Rear Support.....	3/8"x1-1/4"	2
C 1647 R	AA 1046 R	L. H. Brake Shaft Bracket with Latch Plate to Platform.....	3/8"x1-1/4"	1
C 1647 R	AA 1781 R	Hood to Fuel Tank Support.....	3/8"x1-1/4"	4
C 1647 R	AA 2257 R	Hood to Fuel Tank Support.....	3/8"x1-1/4"	4
A 2224 R	AB 1834 R	Battery Clamp to Base.....	3/8"x10"	2
D 1550 R	AD 623 R	Wheel Weight to Clamp (Front).....	5/8"x3"	6
D 1550 R	AD 624 R	Wheel Weight to Clamp (Front).....	5/8"x3"	6

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

55



Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
CARRIAGE BOLTS WITH HEX. NUTS				
—Continued				
C 1647 R	B 1441 R	Hood Clip to Fuel Tank Support.....	3/8"x1-1/4"	4
B 576 R	B 1593 R	Generator Bracket to Fan Shaft Support.....	7/16"x2"	3
2235 R	C 2308 R	Front Wheel Extension Rim to Clip.....	1/2"x2"	6
C 1578 R	C 2309 R	Front Wheel Extension Rim Clip to Wheel.....	1/2"x1-3/4"	6
D 585 R	D 583 R	Extension Rim Clamp to Front Wheel.....	1/2"x3"	1
D 585 R	D 584 R	Extension Rim Front Wheel Clamp Washer to Front Wheel.....	1/2"x3"	1
D 1550 R	D 1548 R	Front Wheel Weight Clamp to Wheel.....	5/8"x3"	6
D 1550 R	D 1549 R	Front Wheel Weight Clamp to Wheel.....	5/8"x3"	6
H 574 R	D 2628 R	Rear Wheel Weights to Wheel.....	3/4"x3-3/4"	4
CARRIAGE BOLTS WITH SQUARE NUTS				
				
A 2297 R	AD 1606 R	Seat to Seat Channel.....	1/2"x1-7/8"	1
A 2297 R	D 1796 R	Seat to Seat Channel.....	1/2"x1-7/8"	1
CARRIAGE BOLTS WITHOUT NUTS				
				
A 686 R	A 684 R	Skeleton Type Wheel Cast Lug Bolt.....	3/4"x3"	1
A 686 R	A 1534 R	Skeleton Type Wheel Extension Rim Bolt.....	3/4"x3"	1
A 1992 R	AD 1606 R	Seat to Seat Support.....	5/8"x1-1/4"	1
A 317 R	AD 1606 R	Seat to Channel Support.....	5/8"x2-1/2"	1
B 1234 R	B 1233 R	In Drag Link Clamp Half.....	5/8"x2-3/4"	1
C 1513 R	C 367 R	Cast Lug to Skeleton Rear Wheel.....	3/4"x4-1/2"	1
D 411 R	C 1030 R	Extension Rim Clip to Extension Rim.....	3/4"x1-7/8"	2
D 411 R	C 2148 R	Rear Wheel Support to Road Band Support.....	3/4"x1-7/8"	6
A 317 R	D 1796 R	Seat to Channel Support.....	5/8"x2-1/2"	1
D 411 R	All Spade Lugs	Lug to Rear Wheel.....	3/4"x1-7/8"	1
D 411 R	All Grousers	Grousers to Rear Wheel.....	3/4"x1-7/8"	2
D 411 R	All Road Lugs	Road Lug to Rear Wheel.....	3/4"x1-7/8"	2
D 411 R	All "A" Lugs	Lug to Rear Wheel.....	3/4"x1-7/8"	2
MACHINE BOLTS WITH SQUARE NUTS				
				
1611 R	A 52 R	In Radiator Side.....	5/16"x1-1/8"	7
1622 R	A 60 R	Seat Support Body to Platform.....	1/2"x1-1/2"	2
1615 R	A 115 R	In Overdrive Shifter Lever.....	3/8"x1-3/4"	1
D 595 R	A 192 R	In Radiator Straps.....	5/16"x7/8"	18
D 595 R	A 192 R	Radiator Strap to Bottom Tank.....	5/16"x7/8"	12
1637 R	A 211 R	Drawbar End and Support to Drawbar.....	5/8"x2-1/4"	2
1634 R	A 212 R	Rear Support to R. H. and L. H. Supports (Drawbar)	5/8"x1-3/4"	4
D 544 R	A 215 R	Front Wheel Guide Band to Wheel.....	1/2"x1"	16
A 585 R	A 470 R	Spark Plug Cable Clamp to Rear Fan Bearing Housing	1/4"x1-1/2"	1
1634 R	A 506 R	Drawbar End to Drawbar.....	5/8"x1-3/4"	2
D 544 R	A 777 R	Front Wheel Guide Band.....	1/2"x1"	8
1621 R	A 844 R	Fan Bearing Support to Front End.....	1/2"x1-1/4"	2
1640 R	A 893 R	In Drag Link Clamp Half.....	5/8"x3"	4
D 597 R	A 917 R	In Gear Shifter Arm.....	3/8"x1-3/4"	1
1614 R	A 996 R	R. H. Front Fender Brace to Platform Support.....	3/8"x1"	1
1614 R	A 997 R	L. H. Front Fender Brace to Platform Support.....	3/8"x1"	1
1634 R	A 1020 R	Drawbar End to Drawbar.....	5/8"x1-3/4"	2

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS



Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
MACHINE BOLTS WITH SQUARE NUTS				
—Continued				
1613 R	A 1078 R	R. H. Fender Support to Citrus Fender.....	3/8"x1-1/4"	3
1622 R	A 1078 R	Citrus Fender Front Support to Front End Support..	1/2"x1-1/2"	1
1620 R	A 1080 R	R. H. Front Support to Citrus Fender.....	3/8"x1-1/2"	1
1613 R	A 1081 R	L. H. Fender Support to Citrus Fender.....	3/8"x1-1/4"	2
1622 R	A 1081 R	Citrus Fender Front Support to Front End Support..	1/2"x1-1/2"	1
C 893 R	A 1105 R	Lamp Brackets to Tractor (Front).....	5/16"x1-1/2"	2
B 11 R	A 1132 R	Guide Band to Front Wheel.....	7/16"x1"	8
C 983 R	A 1219 R	Lamp Brackets to Tractor (Rear, AR and AO).....	5/16"x1-1/2"	2
C 983 R	A 1219 R	Front Lamp Bracket to Tractor.....	5/16"x1-1/2"	2
A 1224 R	A 1223 R	Spring Bolt, Generator Base.....	5/16"x3-1/2"	1
1611 R	A 1227 R	Bracket to Generator.....	5/16"x1-1/8"	1
1621 R	A 1233 R	Fan Bearing Support to Front End.....	1/2"x1-1/4"	2
1625 R	A 1371 R	Brake Cross Lever (Special Length Thread).....	1/2"x2-1/2"	1
1625 R	A 1373 R	In Brake Hand Lever (Special Length Thread).....	1/2"x2-1/2"	1
1620 R	A 1427 R	In Power Lift Pedal.....	3/8"x1-1/2"	1
1620 R	A 1428 R	In Power Lift Pedal.....	3/8"x1-1/2"	1
1638 R	A 1514 R	Tow Bracket to Front Bumper.....	5/8"x2-1/2"	2
1634 R	A 1520 R	Bumper and Extension to Support.....	5/8"x1-3/4"	7
1634 R	A 1821 R	Drawbar End to Drawbar.....	5/8"x1-3/4"	2
1636 R	A 1822 R	Drawbar End to Drawbar.....	5/8"x2"	2
1613 R	A 2071 R	Generator Bracket to Fan Shaft Support.....	3/8"x1-1/4"	3
1613 R	A 2102 R	Radiator Side to Bottom Tank.....	3/8"x1-1/4"	4
M 21 R	A 2114 R	Fan Shroud to Radiator Side.....	3/8"x3/4"	4
1611 R	A 2208 R	Generator Bracket to Generator.....	5/16"x1-1/8"	4
1613 R	A 2369 R	Radiator Side to Radiator Bottom Tank, Rear.....	3/8"x1-1/4"	2
1616 R	A 2369 R	Radiator Side to Radiator Bottom Tank, Front.....	3/8"x2"	2
M 21 R	A 2373 R	Fan Shroud to Radiator Side.....	3/8"x3/4"	4
M 21 R	AA 268 R	Fan Shroud to Radiator Sides.....	3/8"x3/4"	6
1613 R	AA 270 R	In Fuel Tank Strap.....	3/8"x1-1/4"	1
1622 R	AA 272 R	On Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	1
1614 R	AA 299 R	Exhaust Pipe Flange to Manifold.....	3/8"x1"	4
1614 R	AA 348 R	Tool Box to Front End.....	5/8"x1"	2
D 595 R	AA 348 R	Tool Box to Front End Bolts.....	5/16"x7/8"	2
1613 R	AA 376 R	In Fuel Tank Strap.....	3/8"x1-1/4"	2
1623 R	AA 399 R	Front Wheel Scraper to Double Knuckle.....	1/2"x1-3/4"	2
D 595 R	AA 459 R	Tool Box to Front End.....	5/16"x7/8"	1
1614 R	AA 459 R	Tool Box to Front End.....	3/8"x1"	2
1623 R	AA 467 R	R. H. Fender to Pedestal.....	1/2"x1-3/4"	4
1623 R	AA 468 R	L. H. Fender to Pedestal.....	1/2"x1-3/4"	4
1622 R	AA 587 R	Exhaust Pipe to Manifold.....	1/2"x1-1/2"	2
D 571 R	AA 587 R	Exhaust Pipe to Manifold.....	1/2"x3-3/4"	2
1614 R	AA 591 R	Fender, R. H., to Platform Support.....	3/8"x1"	3
1614 R	AA 592 R	Fender, L. H., to Platform Support.....	3/8"x1"	3
1613 R	AA 599 R	In Fuel Tank Strap.....	3/8"x1-1/4"	2
1622 R	AA 604 R	Rear Fuel Tank Support to Governor Case.....	1/2"x1-1/2"	2
1636 R	AA 633 R	Front Axle Bracket to Front End (AW only) (410000-476999).....	5/8"x2"	4
1639 R	AA 633 R	Front Axle Bracket to Front End (AW only).....	5/8"x2-3/4"	4
1622 R	AA 685 R	Muffler to Manifold.....	1/2"x1-1/2"	4
1619 R	AA 755 R	In Front Wheel Yoke.....	3/8"x3-1/2"	2
1614 R	AA 901 R	Fender to Platform Support, R. H.....	3/8"x1"	1
1621 R	AA 901 R	R. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	5
1614 R	AA 902 R	Fender to Platform Support, L. H.....	3/8"x1"	1
1621 R	AA 902 R	L. H. Fender to Platform Support and Cross Angle.....	1/2"x1-1/4"	5
1614 R	AA 1021 R	Fender to Platform Support, R. H.....	3/8"x1"	1
1621 R	AA 1021 R	R. H. Fender to Platform Support and Cross Angle.....	1/2"x1-1/4"	5
1614 R	AA 1022 R	Fender to Platform Support, L. H.....	3/8"x1"	1
1621 R	AA 1022 R	L. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	5
1614 R	AA 1034 R	Fender to Platform Support, R. H.....	3/8"x1"	1
1621 R	AA 1034 R	R. H. Fender to Platform Support and Cross Angles.....	1/2"x1-1/4"	5
1614 R	AA 1035 R	Fender to Platform Support, L. H.....	3/8"x1"	1
1621 R	AA 1035 R	L. H. Fender to Platform Supports and Cross Angles.....	1/2"x1-1/4"	5
1622 R	AA 1050 R	Muffler to Manifold.....	1/2"x1-1/2"	4
1619 R	AA 1803 R	In Front Wheel Yoke.....	3/8"x3-1/2"	2
1622 R	AA 1816 R	On Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	1
M 21 R	AA 1998 R	Battery Base to Support.....	3/8"x3/4"	2
1622 R	AA 2255 R	Fuel Tank Rear Support to Governor Case.....	1/2"x1-1/2"	1
C 1105 R	AB 1204 R	Generator to Bracket (Front).....	5/16"x1-3/4"	1
1620 R	B 490 R	In Power Lift Pedal.....	3/8"x1-1/2"	1
1620 R	B 491 R	In Power Lift Pedal.....	3/8"x1-1/2"	1

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

 57

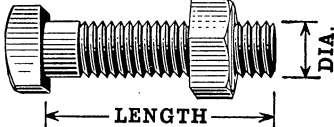
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
MACHINE BOLTS WITH SQUARE NUTS				
—Continued				
D 595 R	B 1033 R	Generator Strap to Generator Bracket.....	5/16"x7/8"	1
1622 R	C 1646 R	In Button Lugs.....	1/2"x1-1/2"	1
D 544 R	C 1732 R	Front Wheel Guide Band.....	1/2"x1"	8
A 324 R	D 349 R	Through Drawbar Spacer and Support.....	3/4"x4"	1
B 544 R	D 849 R	Front Wheel Listed Corn Guide Band to Wheel.....	1/2"x1"	4
D 544 R	D 1524 R	Front Wheel Guide Band to Wheel.....	1/2"x1"	8
D 544 R	D 1050 R	Listed Corn Guide Band to Front Wheel.....	1/2"x1"	4
1611 R	D 2914 R	Rear Lamp Bracket to Platform Cross Angle.....	5/16"x1-1/8"	2
MACHINE BOLTS WITH HEX. NUTS				
				
1930 R	A 389 R	Steering Shaft Rear Support to Cover.....	1/2"x2-1/4"	1
1892 R	A 646 R	Power Lift Control Lever.....	5/16"x1-1/4"	1
D 597 R	A 917 R	In Gear Shifter Arm.....	3/8"x1-3/4"	1
1935 R	A 943 R	Steering Shaft Rear Support to Clutch Lever Bracket.....	1/2"x3-1/2"	1
1938 R	A 946 R	Steering Shaft Bearing Bracket to Steering Shaft Sup- port.....	1/2"x4-1/2"	1
A 1108 R	A 1107 R	Wheel Weight to Wheel.....	3/4"x3-3/4"	2
1932 R	A 1267 R	Extension Scraper Bar to Scraper Blade Holder.....	1/2"x2-3/4"	2
1906 R	A 1786 R	For Attaching Shutter Control Lever.....	3/8"x2-3/4"	1
A 1829 R	A 1827 R	On Front Wheel Weights.....	1/2"x4-3/4"	3
A 1229 R	A 2208 R	Generator Bracket to Generator.....	7/16"x1"	2
1932 R	A 2223 R	Dash and Battery Support Frame to Tubing.....	1/2"x2-3/4"	1
1939 R	AA 249 R	Steering Shaft Bearing to Support.....	1/2"x5"	1
A 821 R	AA 299 R	Exhaust Pipe Flange to Manifold.....	1/2"x1-1/4"	4
1893 R	AA 1105 R	On Power Lift Control Lever.....	5/16"x1-1/2"	1
1939 R	AA 1575 R	Steering Shaft Rear Bearing to Support.....	1/2"x5"	1
A 821 R	AA 1777 R	Exhaust Pipe Flange to Manifold.....	1/2"x1-1/4"	4
1927 R	AA 2213 R	Exhaust Pipe Flange to Manifold.....	1/2"x1-1/2"	2
1938 R	AB 214 R	Steering Shaft Bearing to Steering Shaft Bearing Bracket.....	1/2"x4-1/2"	1
1896 R	AB 1204 R	Generator to Bracket (Rear).....	5/16"x2-1/4"	1
1893 R	AB 1204 R	Generator to Bracket (Front).....	5/16"x1-1/2"	1
1893 R	AB 1204 R	Generator to Bracket (Rear).....	5/16"x1-1/2"	1
1946 R	AC 847 R	Front Wheel to Hub.....	5/8"x2-1/2"	6
1971 R	AD 984 R	Auxiliary Rear Wheel Weight Bolt.....	3/4"x6"	2
1932 R	B 389 R	Steering Shaft Rear Support to Cover.....	1/2"x2-3/4"	1
1930 R	C 264 R	To Scraper Blade Holder to Scraper Bar.....	1/2"x2-1/4"	2
D 1767 R	D 1769 R	In Steering Worm Housing.....	1/2"x3"	1
1971 R	D 2183 R	Wheel Weight to Rear Wheel.....	3/4"x6"	2
MACHINE BOLTS WITHOUT NUTS				
				
A 734 R	A 52 R	Sides and Rear Strap to Radiator Top Tank.....	5/16"x7/8"	12
A 734 R	A 192 R	Radiator Strap to Top Tank.....	5/16"x7/8"	6
A 326 R	A 211 R	Drawbar Swivel to Clevis.....	3/4"x2-1/4"	1
A 329 R	A 618 R	Seat Spring (Tractors 410000-412099).....	5/8"x8"	1
A 619 R	A 618 R	In Seat Spring (Tractors 412100 and up).....	5/8"x9"	1
D 411 R	A 1062 R	Rear Wheel Support to Road Band.....	3/4"x1-7/8"	1
D 411 R	A 1062 R	Rear Wheel Support to Rear Wheel.....	3/4"x1-7/8"	1
A 326 R	A 1286 R	Drawbar Swivel to Clevis.....	3/4"x2-1/4"	1
B 1530 R	A 2102 R	Radiator Side to Top Tank.....	3/8"x1-1/8"	2
B 1530 R	A 2369 R	Radiator Side to Top Tank.....	3/8"x1-1/8"	2
C 981 R	AA 246 R	In Flywheel.....	3/4"x5"	2
A 327 R	AA 381 R	Pedestal to Front End.....	3/4"x4-3/4"	4
D 411 R	AA 483 R	Road Band to Rear Wheel Support.....	3/4"x1-7/8"	1
D 616 R	AA 605 R	Drawbar to Drawbar Front Support.....	3/4"x2-3/4"	1
D 888 R	AA 632 R	Pedestal to Front End (AW only).....	3/4"x5-1/2"	4
A 1133 R	AA 756 R	Pedestal to Front End (AN only).....	3/4"x6-3/4"	4

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

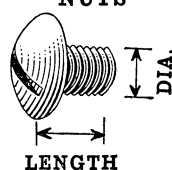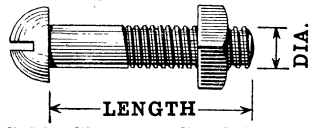Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
MACHINE BOLTS WITHOUT NUTS—Continued				
A 327 R	AA 1612 R	Pedestal to Front End.....	3/4"x4-3/4"	4
C 981 R	AA 2280 R	In Flywheel.....	3/4"x5"	2
C 981 R	AA 2444 R	In Flywheel.....	3/4"x5"	2
A 327 R	AD 1470 R	For Attaching Rear Wheel Weights.....	3/4"x4-3/4"	2
A 326 R	C 2148 R	In Rear Wheel Support.....	3/4"x2-1/4"	1
A 327 R	D 2628 R	Wheel Weight to Wheel.....	3/4"x4-3/4"	2
SLOTTED TRUSS HEAD BOLTS WITHOUT NUTS				
				
A 2050 R	A 2217 R	In Choke and Starter Switch Hole in Dash.....	5/16"x1/2"	1
A 2050 R	A 2227 R	Battery Box Top to Sides.....	5/16"x1/2"	2
A 2050 R	AA 1781 R	Hood and Grille to Radiator Top Tank.....	5/16"x1/2"	2
A 2050 R	AA 1782 R	End Cap to Hood.....	5/16"x1/2"	4
A 2050 R	AA 1787 R	Medallion to Hood and Pedestal.....	5/16"x1/2"	3
A 2050 R	AA 1999 R	R. H. Battery Box to Support.....	5/16"x1/2"	2
A 2050 R	AA 2000 R	L. H. Battery Box to Support.....	5/16"x1/2"	2
A 2050 R	AA 2238 R	Radiator Grille, R. H., to Pedestal.....	5/16"x1/2"	4
A 2050 R	AA 2239 R	Radiator Grille, L. H., to Pedestal.....	5/16"x1/2"	4
SLOTTED TRUSS HEAD BOLTS WITH SQUARE NUT				
A 1858 R	AA 1781 R	Hood and Grille to Radiator Side.....	5/16"x1"	4
STOVE BOLT—ROUND HEAD—SQUARE NUT				
				
2568 R	A 470 R	Spark Plug Cable Clamp to Conduit.....	5/16"x1-1/2"	1
2394 R	A 470 R	Spark Plug Cable Clamp to Conduit Shield.....	1/4"x1-1/4"	1
2392 R	A 963 R	L. H. Dust Shield to L. H. Fender.....	1/4"x5/8"	1
2392 R	A 969 R	Brake Dust Guard to Left Dust Shield.....	1/4"x5/8"	2
2392 R	A 969 R	Brake Dust Guard to Left Fender.....	1/4"x5/8"	1
A 1053 R	A 996 R	R. H. Front Fender Brace to R. H. Fender.....	5/16"x3/4"	3
A 1053 R	A 997 R	L. H. Fender Front Brace to L. H. Fender.....	5/16"x3/4"	4
A 1053 R	A 1359 R	L. H. Dust Shield to L. H. Fender.....	5/16"x3/4"	4
A 1053 R	A 1972 R	Battery Box, Bracket to Dust Shield.....	5/16"x3/4"	2
B 991 R	A 2222 R	Instrument Compartment Partition to Dash Lamp Bracket.....	No. 10x3/8"	1
2334 R	AA 431 R	Radiator Guard to Radiator Side.....	5/16"x1"	4
A 1053 R	AA 591 R	R. H. Fender to Platform Support.....	5/16"x3/4"	5
A 1053 R	AA 592 R	L. H. Fender to Platform Support.....	5/16"x3/4"	5
A 1053 R	AA 595 R	R. H. Dust Shield to R. H. Dust Shield Extension.....	5/16"x3/4"	2
2334 R	AA 595 R	R. H. Dust Shield to R. H. Fender.....	5/16"x1"	5
A 1053 R	AA 596 R	Pulley Guard to R. H. Front Dust Shield.....	5/16"x3/4"	1
A 1053 R	AA 901 R	R. H. Fender to Platform Support.....	5/16"x3/4"	3
A 1053 R	AA 902 R	L. H. Fender to Platform Support.....	5/16"x3/4"	3
2392 R	AA 987 R	Brake Dust Guard to L. H. Dust Shield.....	1/4"x5/8"	2
A 1053 R	AA 1021 R	R. H. Fender to Platform Support.....	5/16"x3/4"	3
A 1053 R	AA 1022 R	L. H. Fender to Platform Support.....	5/16"x3/4"	3
A 1053 R	AA 1034 R	R. H. Fender to Platform Support.....	5/16"x3/4"	3
A 1053 R	AA 1035 R	L. H. Fender Side Sheet to Platform Support.....	5/16"x3/4"	3
A 1053 R	AA 1420 R	Shutter to Radiator Sides.....	5/16"x3/4"	4
2334 R	AA 1783 R	Tool Box to Front End.....	5/16"x1"	1
A 1053 R	AA 1911 R	Tool Box to R. H. Fender.....	5/16"x3/4"	4
2392 R	AA 2074 R	Battery Box to Dust Shield.....	1/4"x5/8"	2
2392 R	AA 2074 R	Battery Box to Bracket.....	1/4"x5/8"	1
A 1053 R	AA 2253 R	Gasoline Tank to Hood Side.....	5/16"x3/4"	2
2392 R	AB 689 R	Tool Box Assembly to L. H. Fender.....	1/4"x5/8"	3
2392 R	AB 689 R	Tool Box to L. H. Front Dust Shield.....	1/4"x5/8"	2

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

 59


Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used
STOVE BOLT—ROUND HEAD— SQUARE NUT—Continued				
B 497 R	B 465 R	Spark Plug Cable Clamp to Shield.....	5/16"x1-3/4"	1
B 991 R	B 1574 R	Dash Light Bracket to Support.....	No. 10x3/8"	1
B 991 R	B 1576 R	Outlet Clamp to Support.....	No. 10x3/8"	2
B 991 R	B 1577 R	Instrument Panel Cover to Support.....	No. 10x3/8"	2
2392 R	B 1654 R	Fuel Control Bracket to Battery Box.....	1/4"x5/8"	2
2326 R	C 1400 R	In Dust Cover.....	No. 10-24x5/8"	1
2326 R	C 1401 R	In Dust Cover.....	No. 10-24x5/8"	1
HEXAGON NUTS				
				
1504 R	1776 R	On Governor Arm Set Screw.....	3/8"	1
1505 R	A 36 R	Manifold to Cylinder Head.....	7/16"	4
1504 R	A 42 R	Governor Arm, Set Screw.....	3/8"	1
1503 R	A 58 R	Throttle Lever Stop Screw.....	5/16"	1
1506 R	A 60 R	On Seat Support Body.....	1/2"	4
1504 R	A 69 R	Overdrive R. H. Bearing Cover to First Reduction Gear Cover.....	3/8"	2
1512 R	A 88 R	Brake Pedals to Pedal Shaft.....	5/8"	1
1512 R	A 89 R	Brake Pedals to Pedal Shaft.....	5/8"	1
1514 R	A 183 R	Clutch Operating Rod.....	9/16"	1
1503 R	A 192 R	Radiator Strap to Top Tank Stud.....	5/16"	6
1513 R	A 327 R	On Wheel Weight Attaching Bolt.....	3/4"	1
1505 R	A 546 R	Countershaft R. H. Bearing Housing to Case.....	7/16"	4
1505 R	A 556 R	On First Reduction Gear Cover Stud.....	7/16"	1
1505 R	A 674 R	On Pump Body to Housing Stud.....	7/16"	3
1505 R	A 816 R	Power Lift Pump Body to Power Lift Housing.....	7/16"	3
1505 R	A 817 R	Power Lift Pump Body to Power Lift Housing.....	7/16"	3
1503 R	A 871 R	On Throttle Lever Stop Screw.....	5/16"	1
1512 R	A 887 R	On Front Axle U-Bolt.....	5/8"	2
1514 R	A 908 R	On Clutch Operating Rod.....	9/16"	1
1505 R	A 909 R	First Reduction Gear Cover Stud.....	7/16"	1
1513 R	A 929 R	Seat Support Body to Rear Axle Housing.....	3/4"	2
1506 R	A 937 R	Steering Gear Housing to Main Case.....	1/2"	2
1512 R	A 942 R	Clutch Lever Bracket to Rear Axle Housing.....	5/8"	3
1503 R	A 949 R	On Speed Control Rod.....	5/16"	1
1512 R	A 951 R	On Front Wheel Bolt (AA847 R).....	5/8"	4
1504 R	A 987 R	On Brake Operating Rod.....	3/8"	1
1505 R	A 1003 R	On Manifold Studs.....	7/16"	4
1504 R	A 1036 R	On Governor Arm Set Screw.....	3/8"	1
1512 R	A 1055 R	Brake Lever to Brake Lever Shaft.....	5/8"	1
1504 R	A 1056 R	On Brake Operating Rod.....	3/8"	1
1512 R	A 1084 R	On Cap Screw, in Scraper Bracket.....	5/8"	2
1512 R	A 1085 R	On Cap Screw, in Scraper Bracket.....	5/8"	2
1516 R	A 1101 R	On Front Axle Lock Bolt.....	1"	1
1503 R	A 1189 R	On Speed Control Rod to End.....	5/16"	1
1504 R	A 1225 R	Cable Clip to Hood Bolt.....	3/8"	1
D 1133 R	A 1228 R	Generator Pulley to Generator.....	5/16"	1
1504 R	A 1241 R	On Governor Arm Set Screw.....	3/8"	1
1504 R	A 1253 R	On Governor Arm Set Screw.....	3/8"	1
1512 R	A 1266 R	Scraper Blade Holder Set Screw.....	5/8"	2
1513 R	A 1298 R	On Spud Lugs.....	3/4"	1
1512 R	A 1363 R	On Brake Shoe Carrier to Rear Axle Housing Screws..	5/8"	6
1506 R	A 1452 R	Power Lift Valve Housing to Power Lift Stud.....	1/2"	1
1513 R	A 1534 R	On Extension Lug.....	3/4"	2
1513 R	A 1534 R	On Skeleton Type Wheel Extension Rim Lug Bolts..	3/4"	1
1504 R	A 1786 R	On Shutter Control Lever Bolt.....	3/8"	1
1512 R	A 1826 R	On Front Wheel Weight Hook Bolt.....	5/8"	6
1512 R	A 1828 R	On Front Wheel Weight Hook Bolt.....	5/8"	1
1512 R	A 1851 R	On Narrow Rim Spade Lug.....	5/8"	1
1512 R	A 1992 R	On Seat Clamp (KW).....	5/8"	1
1503 R	A 2050 R	On Bolt in Choke and Starter Switch Hole in Dash...	5/16"	1
1504 R	A 2102 R	On Radiator Side to Top Tank Stud.....	3/8"	2
1512 R	A 2207 R	On Cross Member to Frame Screws.....	5/8"	4
1506 R	A 2327 R	Cylinder Head Inlet Pipe to Cylinder Head.....	1/2"	2
1512 R	A 2350 R	Tappet Lever Shaft Bracket to Head.....	5/8"	1

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS



Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used
HEXAGON NUTS—Continued				
1512 R	A 2363 R	On Tappet Lever Bracket Stud.	5/8"	1
1504 R	A 2369 R	On Radiator Side to Top Tank Stud.	3/8"	2
1506 R	A 2370 R	Radiator Water Inlet Elbow to Radiator Top Tank Stud.	1/2"	3
1505 R	A 2383 R	Manifold to Cylinder Head.	7/16"	4
1505 R	A 2430 R	Power Lift Pump Body to Housing.	7/16"	3
1505 R	A 2431 R	Power Lift Pump Cover to Pump Body.	7/16"	3
1505 R	A 2472 R	On First Reduction Gear Cover to Main Case Stud.	7/16"	1
1505 R	A 2474 R	On First Reduction Gear Cover to Main Case Stud.	7/16"	1
1506 R	AA 235 R	Pulley Brake Adjusting Set Screw Nut.	1/2"	1
1512 R	AA 242 R	L. H. Main Bearing to Case.	5/8"	1
1513 R	AA 246 R	Flywheel Bolts.	3/4"	2
1512 R	AA 296 R	Front End to Cylinder.	5/8"	4
1513 R	AA 381 R	Pedestal to Front End Stud.	3/4"	1
1513 R	AA 381 R	On Pedestal to Front End Bolts.	3/4"	4
1512 R	AA 436 R	Cylinder Flange to Case.	5/8"	6
1512 R	AA 437 R	Cylinder Flange to Case.	5/8"	6
1512 R	AA 464 R	On Cylinder Head Stud.	5/8"	9
1513 R	AA 483 R	On Rear Wheel Support to Road Band Support	3/4"	6
1505 R	AA 498 R	Power Lift Pump Body to Power Lift Housing.	7/16"	3
1507 R	AA 509 R	Rear Axle Housing to Case	5/8"	2
1515 R	AA 569 R	Radius Rod Pivot to Main Case.	7/8"	1
1516 R	AA 569 R	On Radius Rod Ends.	1"	2
1507 R	AA 616 R	Rear Axle Housing to Case	5/8"	2
1513 R	AA 632 R	Pedestal to Front End Bolts (AW only).	3/4"	4
1512 R	AA 701 R	On Scraper Blade Assembly to Holder Set Screw.	5/8"	1
1513 R	AA 756 R	Pedestal Front End Bolts (AN only).	3/4"	8
1512 R	AA 794 R	On Clutch Lever Pivot Bolt.	5/8"	1
1512 R	AA 804 R	On L. H. Main Bearing Stud.	5/8"	1
1505 R	AA 806 R	Countershaft R. H. Bearing Housing to Case.	7/16"	4
1503 R	AA 825 R	Generator to Generator Bracket.	5/16"	4
1503 R	AA 827 R	Rotor Shaft.	5/16"	2
D 2883 R	AA 917 R	Demountable Rim to Wheel.	3/4"	6
D 2883 R	AA 933 R	On Rim Clamp Stud.	3/4"	1
1512 R	AA 933 R	Rear Wheel to Axle	5/8"	6
1504 R	AA 1047 R	On Camshaft Gear Stud.	3/8"	1
A 2029 R	AA 1051 R	On Rim Clamp Stud.	5/8"	6
A 2029 R	AA 1052 R	On Dual Wheel Rim Clamp Stud.	5/8"	6
1512 R	AA 1078 R	Rear Wheel to Axle	5/8"	6
1512 R	AA 1087 R	Rear Wheel to Axle	5/8"	6
A 2029 R	AA 1088 R	On Rim Clamp Stud.	5/8"	8
1506 R	AA 1103 R	Power Lift Valve Housing to Housing.	1/2"	1
1505 R	AA 1122 R	Countershaft R. H. Bearing Housing to Case.	7/16"	4
1505 R	AA 1576 R	First Reduction Gear Cover to Main Case.	7/16"	1
1505 R	AA 1577 R	First Reduction Gear Cover to Main Case.	7/16"	1
1513 R	AA 1612 R	Pedestal Front End Studs.	3/4"	1
1513 R	AA 1612 R	Pedestal to Front End Bolts.	3/4"	4
1515 R	AA 1798 R	On Pedestal to Front End Stud.	7/8"	2
1513 R	AA 1798 R	On Pedestal to Front End Stud.	3/4"	4
1515 R	AA 1830 R	On Pedestal to Front End Stud.	7/8"	2
1513 R	AA 1830 R	On Pedestal to Front End Stud.	3/4"	4
1513 R	AA 2009 R	On Flywheel Bolts.	3/4"	2
1503 R	AA 2075 R	On Battery Clamp Bolts.	5/16"	2
1506 R	AA 2237 R	Upper Water Pipe to Cylinder Block.	1/2"	4
1513 R	AA 2280 R	On Flywheel Bolts.	3/4"	2
1513 R	AA 2282 R	On Pedestal to Front End Stud.	3/4"	4
1515 R	AA 2282 R	On Pedestal to Front End Stud.	7/8"	2
1512 R	AA 2286 R	Cylinder Block to Case.	5/8"	6
1507 R	AA 2329 R	On Cylinder Head Studs.	5/8"	9
1507 R	AA 2330 R	On Cylinder Head Studs.	5/8"	9
1503 R	AA 2336 R	Pulley Dust Shield and Oil Seal to First Reduction Gear Cover.	5/16"	4
1513 R	AA 2444 R	On Flywheel Bolts.	3/4"	2
1512 R	AB 823 R	Rear Wheel to Axle	5/8"	6
1513 R	AC 649 R	On Cast Cone Lugs.	3/4"	1
1513 R	AC 918 R	On Road Band Support to Rear Wheel Bolts	3/4"	6
A 2029 R	B 634 R	On Demountable Rim Clamp Stud.	5/8"	8
1513 R	B 1563 R	On Rear Wheel Weight Hook Bolt.	3/4"	1
1502 R	B 1592 R	On Choke Tube Support Screw.	1/4"	1
1502 R	B 1592 R	On Choke Tube Support Tube.	1/4"	1
1512 R	C 264 R	On Scraper Blade Set Screw.	5/8"	1

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

61

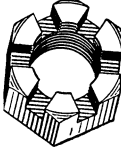
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
HEXAGON NUTS—Continued				
1513 R	C 367 R	Cast Lug to Skeleton Rear Wheel	3/4"	1
1513 R	C 1030 R	On Extension Rim Clip to Extension Rim Bolts	3/4"	2
A 1892 R	C 1479 R	On Pedestal Lower Implement Attachment Studs	5/8"	1
A 1892 R	C 1479 R	Rear Axle Housing Quick Implement Attachment Studs	5/8"	1
1512 R	C 1547 R	Skeleton Rear Wheel to Axle	5/8"	12
1513 R	C 2148 R	On Rear Wheel Support Bolt	3/4"	6
1513 R	C 2199 R	On Sand Lugs	3/4"	1
1513 R	C 2271 R	On Pedestal Support Studs (A only)	3/4"	1
1503 R	D 156 R	On Tapered Spindle Pin Lock Bolt	5/16"	1
1506 R	D 488 R	On Cylinder Head Water Inlet Stud	1/2"	2
1515 R	D 843 R	On Radius Rod Pivot Stud	7/8"	1
1506 R	D 1086 R	On Pulley Brake Adjusting Set Screw	1/2"	1
1512 R	D 2031 R	On Clutch Lever Pivot Bolt	5/8"	1
1513 R	D 2182 R	On Wheel Weight Hook Bolt	3/4"	2
1513 R	D 2184 R	On Inner Rear Wheel Weight Hook Bolt	3/4"	1
D 2583 R	D 2526 R	Rim Clamp to Rim	3/4"	1
1505 R	D 2606 R	On Brake Pawl to Hand Lever Screw	7/16"	1
1513 R	D 2628 R	On Rear Wheel Weight Attaching Bolt	3/4"	2
1512 R	E 2229 R	On Rear Wheel and Extension Rim Scraper Bracket Stud	5/8"	1
1512 R	JD 1217 R	Rear Wheel to Axle	5/8"	6
1513 R	All Spade Lugs	On Lug to Rear Wheel Bolts	3/4"	1
1513 R	All "A" Lugs	On Lug to Rear Wheel Bolt	3/4"	2
1513 R	All Road Lugs	On Road Lug to Rear Wheel Bolt	3/4"	2
1513 R	All Grousers	On Grousers to Rear Wheel Bolt	3/4"	2
HEXAGON NUTS—CASTELLATED				
				
C 535 R	A 110 R	Steering Sector to Spindle	1"	1
A 335 R	A 135 R	On Clutch Operating Bolts	1/2"	1
A 336 R	A 191 R	Main Bearing Bolts	5/8"	1
A 336 R	A 256 R	Main Bearing Bolts	5/8"	1
C 535 R	A 976 R	Brake Drum to Differential Shaft	1"	1
C 535 R	AA 295 R	On Steering Spindle, Upper End	1"	1
C 535 R	AA 353 R	On Brake Shaft	1"	1
D 336 R	AA 463 R	On Connecting Rod Bolts	9/16"	1
C 535 R	AA 503 R	Countershaft, R. H. and L. H. Ends	1"	1
C 535 R	AA 755 R	On Steering Spindle	1"	1
C 535 R	AA 797 R	On Overdrive Gear and Shaft	1"	1
C 535 R	AA 798 R	On Overdrive Gear and Shaft	1"	1
C 535 R	AA 807 R	On Brake Shaft	1"	1
C 535 R	AA 1163 R	On Steering Spindle	1"	1
D 112 R	AA 1168 R	On Front Axle Knuckle Spindle	3/4"	1
A 2214 R	AA 1234 R	On Countershaft	1-1/4"	1
C 535 R	AA 1553 R	On Underdrive Gear and Shaft	1"	1
C 535 R	AA 1579 R	On Overdrive Gear and Shaft	1"	1
C 535 R	AA 1593 R	Countershaft R. H. and L. H. Ends	1"	1
C 535 R	AA 1594 R	On Countershaft L. H. End	1"	1
C 535 R	AA 1604 R	On Steering Spindle (AW only)	1"	2
C 535 R	AA 1604 R	On Steering Spindle Lower End (AW only)	1"	1
C 1104 R	AA 1605 R	Vertical Steering Shaft	7/8"	2
C 535 R	AA 1708 R	On Steering Spindle (Offset)	1"	1
C 535 R	AA 1771 R	On Steering Spindle	1"	1
C 535 R	AA 1803 R	On Steering Spindle (AN only)	1"	1
C 535 R	AA 1829 R	On Steering Spindle (AW only)	1"	1
C 535 R	AA 2263 R	On Countershaft L. H. End	1"	1
C 535 R	AA 2265 R	On Overdrive Gear and Shaft	1"	1
A 2214 R	AA 2361 R	On Countershaft L. H. End	1-1/4"	1
C 535 R	AA 2362 R	On Underdrive Gear and Shaft	1"	1
C 535 R	AB 411 R	On Front Axle (AN only)	1"	1

  HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
HEXAGON JAM NUTS				
				
D 528 R	A 118 R	On Throttle Rod to End.....	1/4"	1
A 337 R	A 131 R	Tappet Lever Adjusting Screw.....	3/8"	1
D 2781 R	A 176 R	On Tappet Lever Stud.....	1/2"	1
D 528 R	A 181 R	On Speed Control Rod to End.....	1/4"	1
D 2781 R	A 318 R	On Gear Shifter Shaft Set Screw.....	1/2"	1
D 2781 R	A 319 R	Piston Pin Lock Screw.....	1/2"	1
D 2781 R	A 497 R	On Gear Shifter Shaft Set Screw.....	1/2"	1
D 2781 R	A 601 R	Tappet Lever to Cylinder Head (on Tappet Lever Stud).....	1/2"	2
C 985 R	A 892 R	On Drag Link Rod (AW only).....	7/8"	1
D 2782 R	A 893 R	On Drag Link Clamp Bolt.....	5/8"	1
D 2781 R	A 918 R	On Gear Shift Shaft Set Screw.....	1/2"	1
D 528 R	A 948 R	On Carburetor Throttle Rod.....	1/4"	1
C 985 R	A 956 R	On Tie Rod.....	7/8"	2
D 528 R	A 1037 R	On Speed Control Rod to End.....	1/4"	1
D 528 R	A 1184 R	On Carburetor Throttle Rod.....	1/4"	1
D 528 R	A 1185 R	On Speed Control Rod.....	1/4"	1
D 528 R	A 1188 R	On Throttle Rod to End.....	1/4"	1
D 2780 R	A 1253 R	On Conduit to Dash Set Screw.....	3/8"	1
A 337 R	A 1291 R	On Tappet Lever Adjusting Screw.....	3/8"	1
D 2783 R	A 1364 R	On Brake Adjusting Screw.....	3/4"	2
D 2783 R	A 1365 R	On Brake Cam Shaft.....	3/4"	2
D 2781 R	A 1416 R	On Gear Shift Shaft Set Screw.....	1/2"	1
D 2780 R	A 1449 R	On Power Lift Throttle Valve Adjusting Screw.....	3/8"	1
D 528 R	A 1788 R	On Shutter Control Rod.....	1/4"	1
D 528 R	A 1790 R	On Shutter Control Rod.....	1/4"	1
1518 R	A 2350 R	On Tappet Lever Bracket Stud.....	5/8"	2
D 2781 R	A 2423 R	On Gear Shifter Shaft Set Screw.....	1/2"	1
D 1771 R	AA 248 R	On Steering Shaft.....	3/4"	1
D 1771 R	AA 380 R	Steering Wheel to Steering Shaft.....	3/4"	1
D 1771 R	AA 1776 R	On Steering Shaft.....	3/4"	1
A 337 R	AA 2001 R	On Choke Tube.....	3/8"	1
A 337 R	AB 1189 R	On Light Switch Control Rod.....	3/8"	1
A 337 R	AB 1838 R	On Starter Switch Control Rod.....	3/8"	1
D 2782 R	B 1234 R	On Drag Link Clamp Bolt (AW only).....	5/8"	4
D 2780 R	B 1518 R	On Shutter Control Rod.....	3/8"	1
D 2782 R	C 977 R	On Steering Gear Shaft Adjusting Set Screw.....	5/8"	1
1518 R	D 1673 R	On Steering Arm Stud.....	5/8"	1
1518 R	D 1674 R	On Steering Arm Stud.....	5/8"	1
1518 R	D 1898 R	On Steering Arm Stud.....	5/8"	1
RIVETS—ROCK ISLAND OVAL HEAD				
				
1580 R	533 R	Counterweight to Reduction Pulley Rim.....	1/4"x1-1/4"	1
1580 R	534 R	Counterweight to Reduction Pulley Rim.....	1/4"x1-1/4"	1
1580 R	535 R	Counterweight to Reduction Pulley Rim.....	1/4"x1-1/4"	1
A 343 R	A 150 R	In Differential Bevel Pinion Shaft.....	5/16"x2-1/2"	1
D 432 R	A 230 R	Hood Clip Bracket to Fan Shroud.....	1/4"x1/2"	2
D 436 R	A 239 R	Gear Shift Interlock to Transmission Case Cover.....	3/8"x1-1/8"	2
D 432 R	A 351 R	Clutch Dust Cover Spring to Pulley.....	1/4"x1/2"	1
D 432 R	A 532 R	Hood Clip Bracket to Fan Shroud.....	1/4"x1/2"	2
D 437 R	A 596 R	Yoke to Shifter.....	3/8"x1-1/2"	2
D 436 R	A 913 R	Gear Shift Interlock to Transmission Cover.....	3/8"x1-1/8"	2
D 430 R	A 981 R	In Emergency Brake Band End.....	3/16"x5/8"	3
D 479 R	A 985 R	In Brake Latch to Pedal.....	1/4"x3/4"	2
B 372 R	A 999 R	Platform to Support and Cross Angles.....	5/16"x1"	14
B 372 R	A 1000 R	Platform Support to Platform, R. H.....	5/16"x1"	4
B 372 R	A 1001 R	Platform Support to Platform, L. H.....	5/16"x1"	4
B 372 R	A 1002 R	Cross Angle to Platform.....	5/16"x1"	6
B 372 R	A 1079 R	Plate to Citrus Fender Front Support.....	5/16"x1"	3
B 372 R	A 1258 R	Platform Support to Platform, R. H.....	5/16"x1"	4

HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW", "AR" AND "AO" TRACTORS

 63

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
RIVETS—ROCK ISLAND OVAL HEAD				
—Continued				
B 372 R	A 1259 R	Support to Platform, L. H.	5/16"x1"	4
B 372 R	A 1260 R	Fender Cross Angle to Platform.	5/16"x1"	6
B 372 R	A 1326 R	Platform to Supports and Cross Angles.	5/16"x1"	14
B 372 R	A 1341 R	Platform to Supports and Cross Angles.	5/16"x1"	14
B 372 R	A 1342 R	Cross Angle to Platform.	5/16"x1"	6
B 372 R	A 1343 R	Platform Support to Platform, R. H.	5/16"x1"	4
B 372 R	A 1344 R	Platform Support to Platform, L. H.	5/16"x1"	4
D 437 R	A 1418 R	Yoke to Underdrive Shifter.	3/8"x1-1/2"	2
D 478 R	A 1890 R	Shutter Control Rod Guide to Hood.	3/16"x3/8"	2
A 1965 R	A 1962 R	Drawbar Support Plate to Drawbar Support.	3/4"x1-1/4"	2
D 436 R	A 2019 R	Gear Shift Interlock to Transmission Cover.	3/8"x1-1/8"	2
A 343 R	A 2307 R	In Differential Bevel Pinion Shaft	5/16"x2-1/2"	1
C 544 R	A 2428 R	Power Lift Drive Shaft Coupling to Shaft.	1/4"x2-1/2"	1
B 372 R	A 2531 R	Platform to Support Angles.	5/16"x1"	10
B 372 R	A 2533 R	Platform to Support Angles.	5/16"x1"	10
D 432 R	A 2542 R	Universal Shield Pivot Plate to Platform.	1/4"x1/2"	4
D 479 R	AA 232 R	In Clutch Driving Disk.	1/4"x3/4"	1
C 1286 R	AA 295 R	Double Knuckle to Spindle.	1/2"x3-3/4"	2
D 479 R	AA 319 R	Brake Latch Support to Platform.	1/4"x3/4"	2
D 443 R	AA 354 R	Drawbar to Clevis.	1/2"x1-7/8"	2
C 1399 R	AA 480 R	In Power Lift Drive Shaft Coupling.	1/4"x2"	1
A 314 R	AA 605 R	Drawbar to Clevis.	1/2"x2"	2
A 1025 R	AA 610 R	Brake Lever Support to Drawbar Support.	1/2"x1-1/2"	2
D 479 R	AA 824 R	Oil Relief Spring to Filter Cover.	1/4"x3/4"	1
D 443 R	AA 956 R	Drawbar to Tongue.	1/2"x1-7/8"	2
D 432 R	AA 977 R	In Brake Band.	1/4"x1/2"	3
C 1286 R	AA 1163 R	Double Knuckle to Spindle.	1/2"x3-3/4"	2
C 1285 R	AA 1168 R	Knuckle to Knuckle Spindle (AW only).	1/2"x2-3/4"	2
A 2032 R	AA 1708 R	Knuckle to Spindle.	1/2"x5"	2
C 1286 R	AA 1771 R	Double Knuckle to Spindle.	1/2"x3-3/4"	2
A 2032 R	AA 1843 R	Knuckle to Spindle.	1/2"x5"	2
C 1399 R	AA 1902 R	In Power Lift Drive Shaft Coupling.	1/4"x2"	1
D 479 R	AA 2297 R	In Clutch Driving Disk.	1/4"x3/4"	1
A 2455 R	AA 2343 R	Flipper Guard to Power Shaft Oil Seal Housing.	5/16"x4-5/8"	1
D 479 R	AB 330 R	Brake Latch to Platform.	1/4"x3/4"	2
A 343 R	AB 1956 R	Cranking Wheel to Cranking Shaft.	5/16"x2-1/2"	1
F 475 R	B 1520 R	Radiator Shutter Control Lever, Pivot.	3/8"x5/8"	1
D 432 R	B 1521 R	Shutter Control Lever Bracket Outer to Hood.	1/4"x1/2"	2
D 478 R	C 1573 R	Hood Clip to Hood.	3/16"x3/8"	2
A 2053 R	C 2147 R	Road Band Support to Road Band.	1/2"x1-1/2"	12
D 430 R	D 2101 R	Baffle to Radiator Cap.	3/16"x5/8"	2
D 478 R	D 2119 R	In Breather Body Clip.	3/16"x3/8"	2
D 432 R	F 473 R	Shutter Control Lever Bracket Inner to Hood.	1/4"x1/2"	2
RIVETS—BRASS				
				
AD 1773 R	A 441 R	Facing to Brake Shoe (Box of 100).	3/16"x5/16"	8
AD 1771 R	A 442 R	Cushion to Fuel Tank Front Support (Box of 100).	9/64"x5/16"	4
AD 1772 R	A 443 R	Cushion to Fuel Tank Rear Support (Box of 100).	9/64"x7/16"	3
AD 1771 R	A 982 R	Lining to Brake Band (Box of 100).	9/64"x5/16"	10
AD 1771 R	A 1013 R	Cushion to Fuel Tank Front Support (Box of 100).	9/64"x5/16"	4
AD 1771 R	A 1013 R	Cushion to Fuel Tank Front Support (Box of 100).	9/64"x5/16"	3
AD 1772 R	A 1014 R	Cushion to Fuel Tank Rear Support (Box of 100).	9/64"x7/16"	4
AD 1771 R	A 1321 R	Lining to Brake Band (Box of 100).	9/64"x5/16"	16
AD 1781 R	A 1368 R	Facing to Brake Shoe (Box of 100).	3/16"x5/8"	4
AD 1771 R	B 1451 R	Cushion to Fuel Tank Rear Support (Box of 100).	9/64"x5/16"	2
AD 1772 R	D 1932 R	Pulley Brake Lining to Brake (Box of 100).	9/64"x7/16"	6
AD 1771 R	D 2406 R	Cushion to Fuel Tank Front Support (Box of 100).	9/64"x5/16"	3
RIVETS—TINNER'S				
A 488 R	A 274 R	Tappet Lever Oil Trough to Tappet Lever Cover.	8 lb.	4
2338 R	A 2491 R	Fuel Outlet Flange to Fuel Tank.	5 lb.	3
2338 R	D 82 R	Fuel Outlet Flange to Fuel Tank.	5 lb.	2
2338 R	H 577 R	Gasoline Outlet Flange to Gasoline Tank.	5 lb.	2

64 **HARDWARE LIST FOR JOHN DEERE MODELS "A", "A N", "AW",
"AR" AND "AO" TRACTORS**

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
RIVETS—COUNTERSUNK HEAD				
				
A 2053 R	A 808 R	Support to Road Band..	1/2"x1-1/2"	2
D 1416 R	A 1375 R	Latch Plate to Brake Shaft Bracket.....	3/8"x1-1/4"	2
A 2053 R	C 2147 R	Road Band Support to Road Band.....	1/2"x1-1/2"	2



LOCK WASHERS

Size	No.
3/64"	C1320 R
3/16"	D 603 R
1/4"	1729 R
5/16"	1721 R
3/8"	1722 R
7/16"	1723 R
1/2"	1724 R
9/16"	1725 R
5/8"	1726 R
3/4"	1728 R
7/8"	1881 R
1"	1882 R



COTTER KEYS

Length	Diameter				
	3/32"	1/8"	3/16"	1/4"	3/8"
1/2"	1730 R				
5/8"		1732 R			
3/4"		1733 R	D 339 R		
1"	1731 R	1735 R	1741 R		
1-1/4"			1742 R		
1-1/2"		1737 R	1743 R	1745 R	
2"		1738 R	2215 R	1748 R	
3-1/2"					M23 R

**CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES
FOR MODELS "A", "A N", "AW", "AR" AND "AO"**

65

Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A 4 R	Housing, Rear Axle	AA 509 R	20	16
A 10 R	Differential, Complete	AA 345 R	19	15
A 10 R	Differential, Complete	AA 559 R	19	15
A 10 R	Differential Gear with Shaft	AA 331 R	19	15
A 10 R	Differential Gear with Shaft	AA 661 R	19	15
A 12 R	Gear with Spider, First Reduction	AA 217 R	17	14
A 17 R	Belt Pulley with Sleeve Gear and Bushing	AA 231 R	15	12
A 19 R	Disk, Clutch Driving, with Rivet	AA 232 R	15	12
A 22 R	Housing, R. H. Main Bearing with Cap	AA 239 R	3	1
A 23 R	Housing, L. H. Main Bearing with Cap	AA 242 R	3	1
A 29 R	Flywheel with Bolts and Driving Pin	AA 246 R	3	2
A 30 R	Gear, Camshaft, with Stud and Nut	AA1047 R	5	3
A 31 R	Housing with Cup, L. H. Camshaft Bearing	AA 227 R	5	3
A 40 R	Dust Shield, Pulley	AA 329 R	15	12
A 53 R	Upper Water Pipe and Fan Support	AA 253 R	12	11
A 54 R	Fan Support and Upper Water Pipe	AA 253 R	12	11
A 54 R	Upper Water Pipe and Fan Support (410190 and up)	AA 435 R	12	11
A 57 R	Bearing, Steering Shaft, Rear	AA1575 R	27	5
A 61 R	Piston with Rings (Standard)	AA 840 R	3	1
A 68 R	Cover with Oil Trough, Tappet Lever	AA 229 R	6	3
A 72 R	Cover, Transmission	AA 286 R	3	1
A 79 R	Brake with Lining, Pulley	AA 235 R	16	13
A 85 R	Spacer, Flywheel with Cork Washer	AA 244 R	3	1
A 102 R	Crankshaft with Main Bearings, Connecting Rods and Shims	AA2033 R	4	1
A 107 R	Connecting Rod Complete	AA 463 R	3	1
A 454 R	Valve, Intake	AA1810 R	5	2
A 489 R	Pedestal with Stud and Stop Pin	AA 381 R	26	27
A 508 R	Housing with Bushing, Brake	AA 352 R	23	22
A 541 R	Gear and Shaft, Overdrive, with R. H. Bearing Cover	AA 797 R	17	14
A 546 R	Housing, Countershaft, R. H. Bearing with Outer Race and Roller	AA1758 R	18	14
A 556 R	Cover, First Reduction Gear	AA1576 R	17	14
A 560 R	Transmission and Crankcase	AA 320 R	3	1
A 570 R	Cover, Rear Axle Housing, with Filler Plug	AA 504 R	20	16
A 587 R	Cylinder Head with Valve Guides	AA 464 R	5	2
A 588 R	Valve, Exhaust	AA1811 R	5	2
A 594 R	Gear Shift Fork	AA 371 R	16	13
A 595 R	Shifter, Overdrive, with Yoke	AA 792 R	17	13
A 595 R	Shifter, Overdrive, with Shaft and Yoke	AA 757 R	16	13
A 595 R	Shifter, Underdrive and Yoke	AA1719 R	19	15
A 620 R	Housing, Power Lift (P. L. 100-P. L. 456)	AA 401 R	43	44
A 620 R	Housing, Power Lift (P. L. 457 and up)	AA 488 R	43	44
A 636 R	Valve Housing with Guide and Plug	AA 404 R	43	44
A 673 R	Pump Body with Gears and Cover	AA 498 R	43	45
A 732 R	Cylinder, with Upper Water Pipe and Fan Support Assembly	AA 436 R	4	2
A 732 R	Cylinder with Studs	AA 437 R	4	2
A 733 R	Upper Water and Fan Support	AA 435 R	12	11
A 824 R	Cover, Transmission Case	AA 508 R	3	1
A 828 R	Rear Axle Housing with Studs	AA 509 R	20	16
A 830 R	Power Lift Housing with Oil Seal Bearing, P. L. 100-456 P. L. 457-	AA 401 R	43	44
A 830 R	Power Lift Housing with Oil Seal Bearing, P. L. 100-456 P. L. 457-	AA 488 R	43	44
A 838 R	Gear and Shaft, Overdrive, with Bearing Cover	AA 798 R	17	15
A 845 R	Pipe, Upper Water, Complete	AA 525 R	12	11
A 845 R	Pipe, Upper Water	AA 565 R	12	11
A 900 R	Cover, Breather	AA 551 R	8	4
A 909 R	Cover, First Reduction Gear	AA1577 R	17	14
A 910 R	Gear Shifter, Low and Reverse	AA 553 R	16	13
A 911 R	Shifter, Overdrive, with Yoke	AA 793 R	17	13
A 911 R	Shifter, Overdrive, with Yoke and Shifter Shaft	AA 758 R	16	13
A 911 R	Shifter, Underdrive, with Yoke	AA1124 R	19	15
A 912 R	Cover, Transmission Case with Gear Shift Interlock	AA 823 R	3	1
A 920 R	Case, Transmission, Main	AA 618 R	3	1
A 921 R	Housing with Cups and Oil Seal, Rear Axle	AA 616 R	20	16
A 959 R	Pipe and Elbow Inlet, Carburetor	AA 579 R	40	42
A 972 R	Housing, Brake, with Lever Shaft	AA 582 R	23	22
A 984 R	Pedal with Latch, Brake	AA 586 R	23	22
A 1006 R	Exhaust Pipe with Flange	AA 587 R	6	4
A 1015 R	Shifter, Second Speed, with Yoke	AA 588 R	16	13
A 1044 R	Head, Oil Filter, with Cap and Gasket	AA 670 R	9	6
A 1047 R	Pedestal with Bushing, Stop Pin and Bearing Cups	AA 632 R	26	27
A 1050 R	Pivot Bracket, Front Axle, with Bushing	AA 633 R	24	23
A 1051 R	Quill, Steering Worm with Bearing Cup (AW only)	AA 634 R	26	27
A 1066 R	Muffler Complete	AA 685 R	6	3
A 1066 R	Elbow with Studs, Muffler Inlet	AA 702 R	6	3

CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES FOR MODELS "A", "A N", "AW", "AR" AND "AO"—Continued


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A 1087 R	Holder, Scraper Blade, Rear Wheel	AA 700 R	22	19
A 1100 R	Housing, Front Axle, with Pivot Pin	AA 729 R	24	23
A 1109 R	Piston with Rings (.030 Oversize)	AA 737 R	3	1
A 1123 R	Cover, Transmission Case with Gear Shift Interlock	AA 741 R	19	1
A 1128 R	Pedestal with Stop Pin	AA 756 R	26	27
A 1140 R	Case, Transmission, Main	AA1017 R	3	
A 1141 R	Case, Transmission, Main	AA 843 R	3	
A 1146 R	Housing, L. H. Main Bearing, with Cap	AA 804 R	3	1
A 1155 R	Housing, Countershaft R. H. Bearing, with Cup	AA 806 R	18	14
A 1161 R	Brake Housing with Bushing and Oiler	AA1079 R	23	22
A 1170 R	Case, Governor, with Lever Shaft Bushing	AA 813 R	7	4
A 1198 R	Head with Stud, Radiator Filler Cap	AA 796 R	12	10
A 1198 R	Radiator Cap, Complete	AA 795 R	12	10
A 1220 R	Bracket, Lamp, Rear, with Seat Bolt, Nut, Washer and Instructions (Substitute for A1220 R)	AA1684 R	44	45
A 1272 R	Wheel, Solid Cast, Rear	AA1087 R	21	20
A 1272 R	Wheel, Solid Cast, Rear, with Demountable Rim	AA 933 R	21	20
A 1277 R	Cover with Bushing, Oil Filter Head	AA 861 R	9	6
A 1282 R	Rear Wheel with Studs and Nuts	AA1088 R	21	21
A 1289 R	Knee, Front Axle, Complete	AA 730 R	24	23
A 1308 R	Housing, Rear Axle, with Bearing Cups and Oil Seals	AA1075 R	20	17
A 1318 R	Housing, Brake, with Pedal Pivot and Bearing Cup	AA 976 R	24	23
A 1324 R	Rear Wheel with Studs and Nuts	AA1078 R	21	20
A 1367 R	Brake Shoe with Facing	AA1043 R	24	23
A 1370 R	Bracket, L. H. Brake Shaft, with Latch Plate	AA1046 R	24	23
A 1386 R	Muffler, Complete	AA1050 R	6	3
A 1387 R	Muffler, Complete	AA1050 R	6	33
A 1404 R	Underdrive Gear and Shaft with Nut	AA1553 R	19	15
A 1413 R	Housing, Countershaft R. H. Bearing, with Cup	AA1122 R	10	15
A 1417 R	Shifter, Second Speed Gear with Yoke (Underdrive)	AA1123 R	10	15
A 1425 R	Lever Power Lift Control	AA1105 R	43	44
A 1426 R	Cam Follower Assembly Power Lift	AA1104 R	43	44
A 1430 R	Valve Housing with Guide, Power Lift	AA1103 R	43	44
A 1442 R	Housing, Power Lift, with Pump Shaft Bushing, Oil Seal Bearing and Pump Follower Gear Pin	AA1111 R	43	44
A 1553 R	Hub, Front Wheel	AA1399 R	25	25
A 1555 R	Hub Cap	AA1407 R	25	25
A 1557 R	Hub, Front Wheel	AA1395 R	25	25
A 1579 R	Overdrive Gear and Shaft with Nut	AA1579 R	17	14
A 1815 R	Wheel, Rear, Cast Disk	AA1497 R	21	22
A 1864 R	Belt Pulley, with Sleeve, Gear and Bushing	AA1555 R	15	12
A 1866 R	Housing, with Cups and Oil Seal, Rear Axle	AA1483 R	20	16
A 1893 R	Piston with Rings (.045" Oversize)	AA1572 R	3	1
A 1909 R	Bearing, Steering Shaft, Rear	AA1575 R	7	5
A 1933 R	Pedestal, with Stop Pin	AA1612 R	26	27
A 2016 R	Cover, First Reduction Gear	AA1576 R	17	14
A 2017 R	Shifter, High Speed Gear	AA1718 R	19	15
A 2018 R	Cover, Transmission Case	AA1721 R	19	1
A 2030 R	Knuckle, with Dust Excluder	AA1702 R	27	28
A 2031 R	Knuckle Hub with Spindle	AA1708 R	27	28
A 2100 R	Top Tank, Radiator, with Filler Flange and Vent Tube	AA1822 R	13	11
A 2113 R	Pipe, Upper Water	AA1770 R	13	11
A 2115 R	Bracket with Air Stack, Air Cleaner	AA1779 R	40	42
A 2117 R	Pedestal, with Stop Pin and Bearing Cup (A only)	AA1798 R	26	27
A 2122 R	Housing with Cup, Steering Worm Bearing	AA1828 R	27	27
A 2130 R	Muffler with Bracket	AA1778 R	6	3
A 2168 R	Pedestal, with Stop Pin and Bearing Cup (AN only)	AA2282 R	27	27
A 2169 R	Pedestal, with Stop Pin and Bearing Cup (AW only)	AA1830 R	27	27
A 2233 R	Body and Pipe, Breather	AA2006 R	46	46
A 2234 R	Cover Breather	AA2007 R	46	46
A 2237 R	Flywheel, with Bolts and Starter Gear	AA2367 R	46	47
A 2237 R	Flywheel, with Bolts and Starter Gear	AA2371 R	47	47
A 2300 R	Case, Transmission, Main	AA2245 R	3	
A 2318 R	Housing with Cup, Countershaft R. H. Bearing	AA2264 R	18	14
A 2323 R	Gear and Shaft, Overdrive, with Nut	AA2265 R	17	14
A 2324 R	Cylinder, with Studs	AA2286 R	4	2
A 2325 R	Cylinder Head, with Valve Guides and Studs	AA2329 R	5	2
A 2334 R	Valve, Intake	AA2332 R	5	2
A 2335 R	Valve, Exhaust	AA2333 R	5	2
A 2338 R	Pistons with Rings (Standard)	AA2347 R	4	1
A 2344 R	Connecting Rod, Complete	AA2210 R	4	1
A 2360 R	Crankshaft with Main Bearings, Connecting Rods and Shims	AA2272 R	4	1

**CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES
FOR MODELS "A", "A N", "AW", "AR" AND "AO"—Continued**

67

Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A 2366 R	Wheel, Cast Disk Rear, with Studs and Nuts (A-AN-AW).....	AA2228 R	21	21
A 2367 R	Top Tank with Filler Flange and Vent Tube.....	AA2298 R	13	11
A 2375 R	Pipe, Upper Water.....	AA2237 R	13	11
A 2387 R	Bracket with Air Stack, Air Cleaner.....	AA2242 R	40	42
A 2422 R	Case, Governor, with Lever Shaft Bushing.....	AA2262 R	7	4
A 2424 R	Housing, with Bushing and Oil Seal Bearing, Power Lift.....	AA2097 R	43	44
A 2448 R	Disk, Clutch Driving, with Rivet.....	AA2279 R	15	12
A 2449 R	Flywheel with Bolts.....	AA2280 R	3	2
A 2450 R	Pedestal, with Stop Pin and Bearing Cap (AN only).....	AA2282 R	27	27
A 2452 R	Housing, Power Shaft Oil Seal, with Flipper Guard and Oil Seal.....	AA2295 R	41	43
A 2472 R	Cover, First Reduction Gear, with Pulley Dust Shield.....	AA1577 R	17	14
A 2474 R	Cover, First Reduction Gear, with Pulley Dust Shield Studs and Nuts (Substitute for A556 R).....	AA1576 R	17	14
A 2516 R	Gear and Shaft, Underdrive, with Nut.....	AA2362 R	19	15
A 2543 R	Housing, Rear Power Shaft, with Oil Seal.....	AA3004 R	41	43
B 36 R	Bearing with Bushing, Steering Shaft, Upper.....	AB 214 R	27	5
B 290 R	Housing, Front Fan Bearing, with Support Tube.....	AA 564 R	15	12
B 290 R	Housing, Front Fan Bearing, with Support Tube.....	AA 818 R	15	12
B 290 R	Housing, Fan Bearing, with Support Tube.....	AA 524 R	14	12
B 290 R	Housing, Fan Bearing, with Support Tube.....	AA 817 R	15	12
C 167 R	Hub Cap with Oil Fitting, Front Wheel.....	AC 119 R	25	25
C 334 R	Front Wheel with Bolts (Disk Type).....	AC 847 R	25	25
C 391 R	Front Wheel Hub with Races (Disk Type).....	AC 513 R	25	25
C 2000 R	Muffler Complete.....	AA 685 R	6	...
D 319 R	Radiator Cap Complete.....	AA 795 R	12	10
D 363 R	Head with Stud, Radiator Filler Cap.....	AA 796 R	12	10
D 363 R	Radiator Cap, Complete.....	AA 795 R	12	10
D 1082 R	Nut, Front Wheel Knuckle (A-AW).....	AD 452 R	24	23
D 1879 R	Front Wheel Knuckle with Bushing and Studs.....	AD1381 R	24	23
D 2637 R	Knuckle, Front Wheel, with Bushings, Studs and Dust Excluders...	AD1381 R	24	23
D 2911 R	Fan Shaft Drive Pulley, Complete.....	AA1930 R	46	45

TRANSMISSION CASE

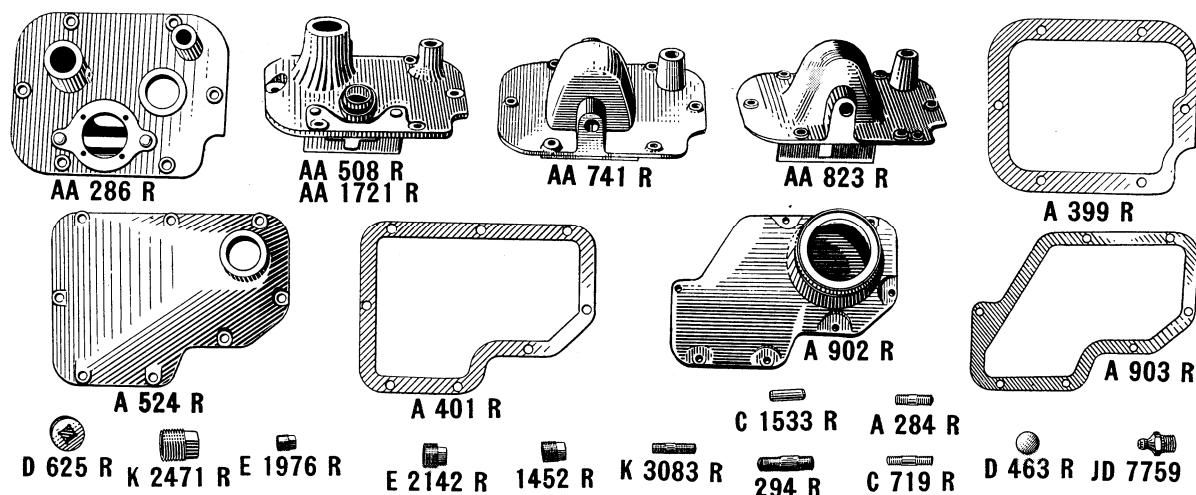

ENGINE, PISTONS, CONNECTING RODS, CRANKSHAFT



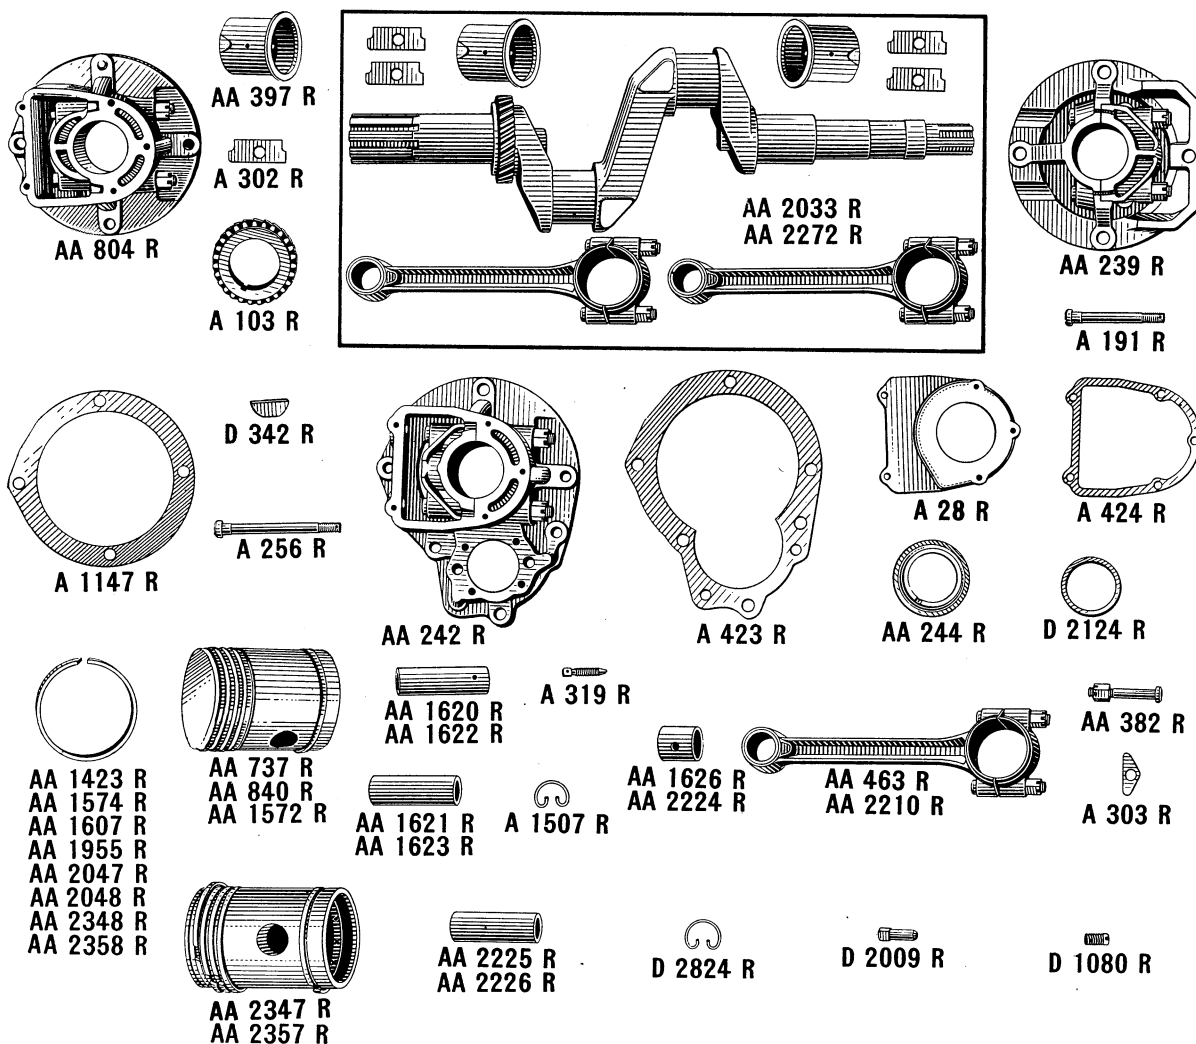


Plate No. 1

CYLINDER HEAD, MANIFOLD, VALVES

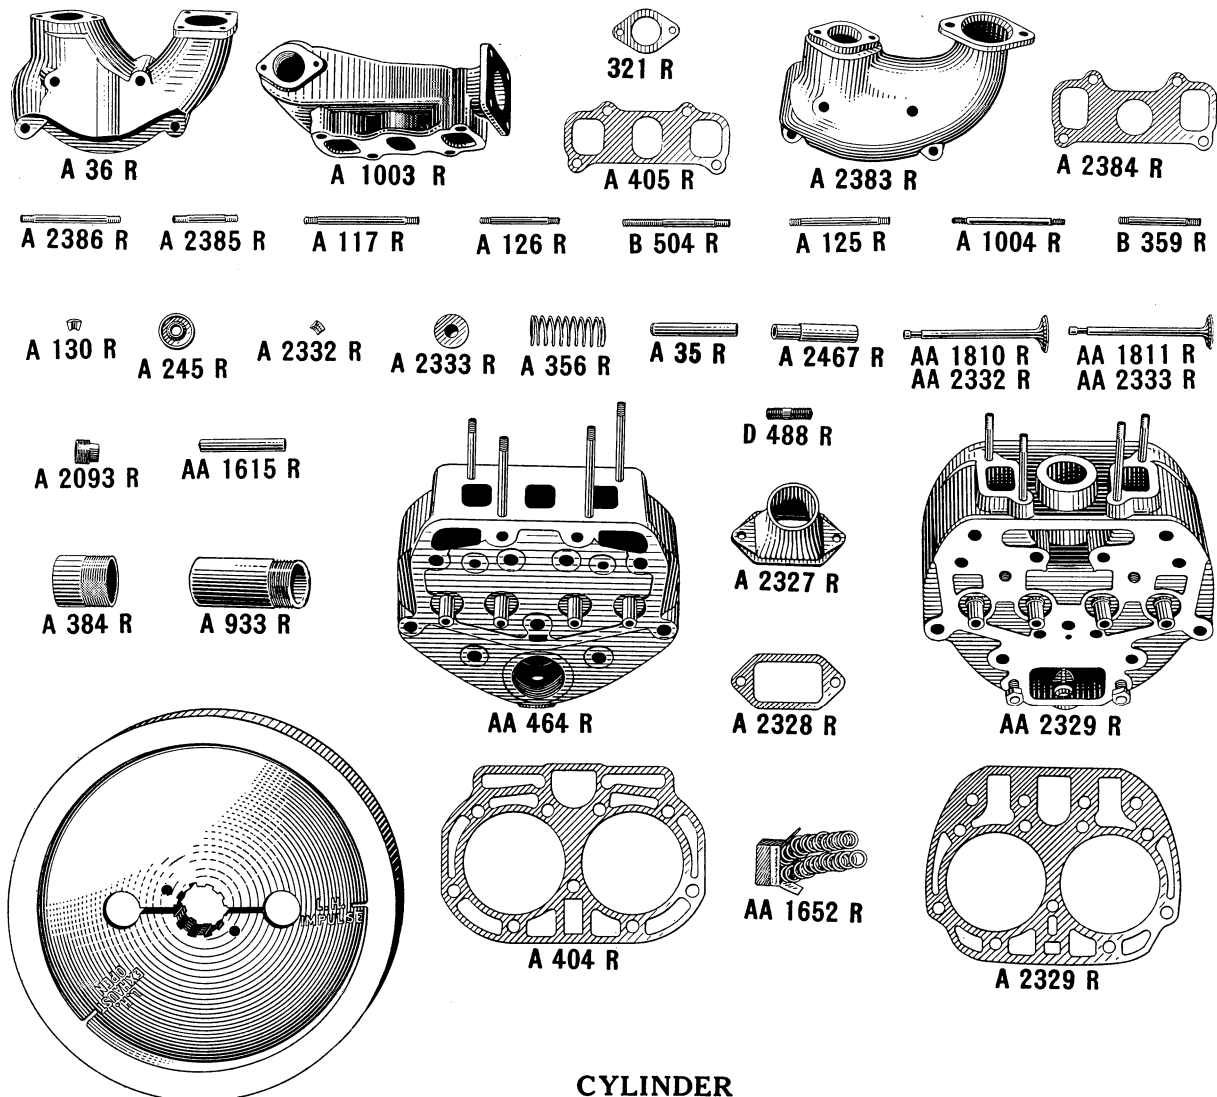

CYLINDER

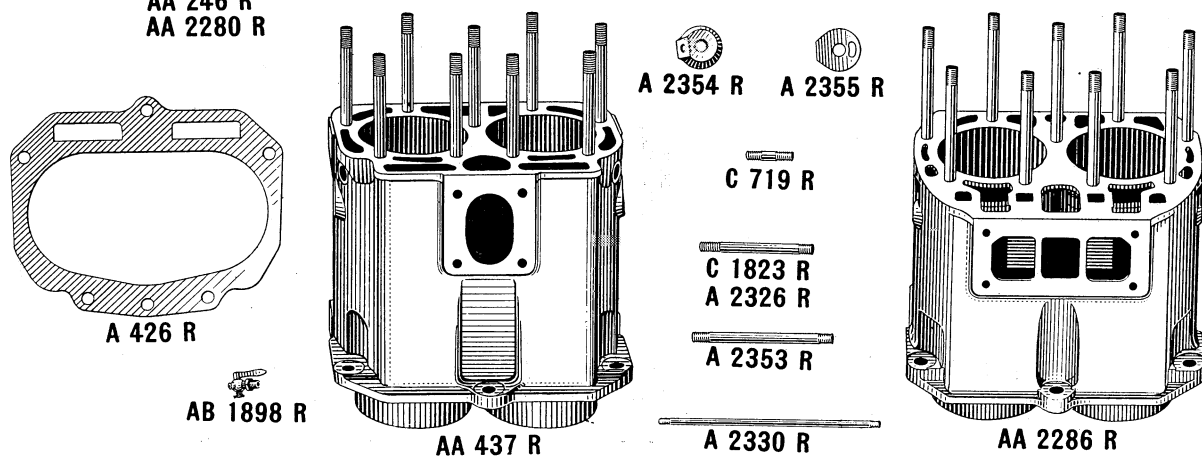


CAMSHAFT



A 227 R



A 425 R

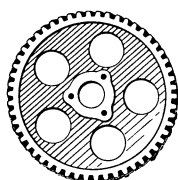

AA 1047 R



A 253 R



JD 7250 R



JD 7358 R



A 355 R



A 119 R



A 104 R

 


A 1142 R

CAM FOLLOWERS



A 178 R



A 616 R



A 1143 R



A 1595 R

AA 377 R
AA 958 R

 
TAPPETS



A 602 R



A 260 R



A 2349 R



 
A 601 R



A 176 R



A 2363 R



AA 1652 R



A 173 R



A 2350 R



A 234 R



D 376 R



A 105 R



A 131 R



A 1291 R




A 129 R




A 139 R




A 1290 R

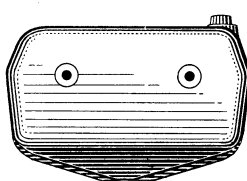

AA 229 R

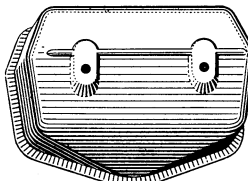

A 2347 R

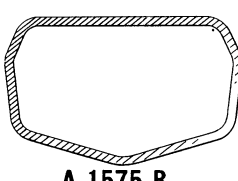

A 1575 R



A 386 R A 1186 R A 1818 R



A 172 R A 439 R



A 1010 R A 1193 R A 1819 R



A 772 R



A 437 R



A 2421 R



AA 2260 R

 


A 2356 R



A 1574 R

MUFFLER



AA 1778 R



 
AA 300 R



AA 2214 R



629 R




AA 1050 R



AA 888 R




AA 472 R

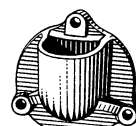

C 2000 R



D 1923 R

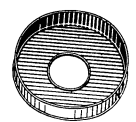


D 1922 R



D 1925 R




D 1924 R

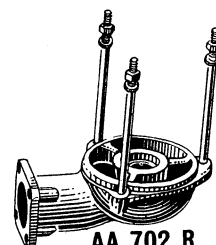


AA 702 R


EXHAUST PIPE

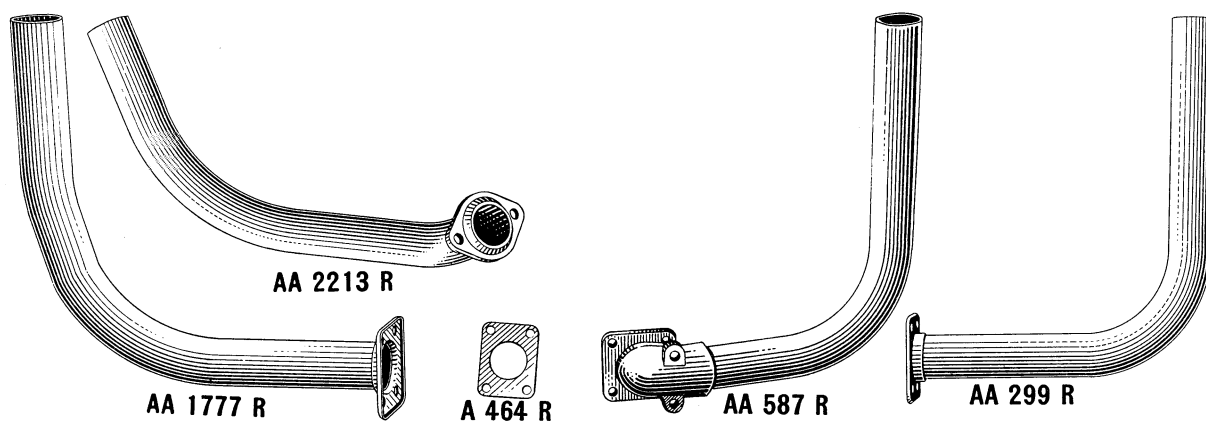


GOVERNOR

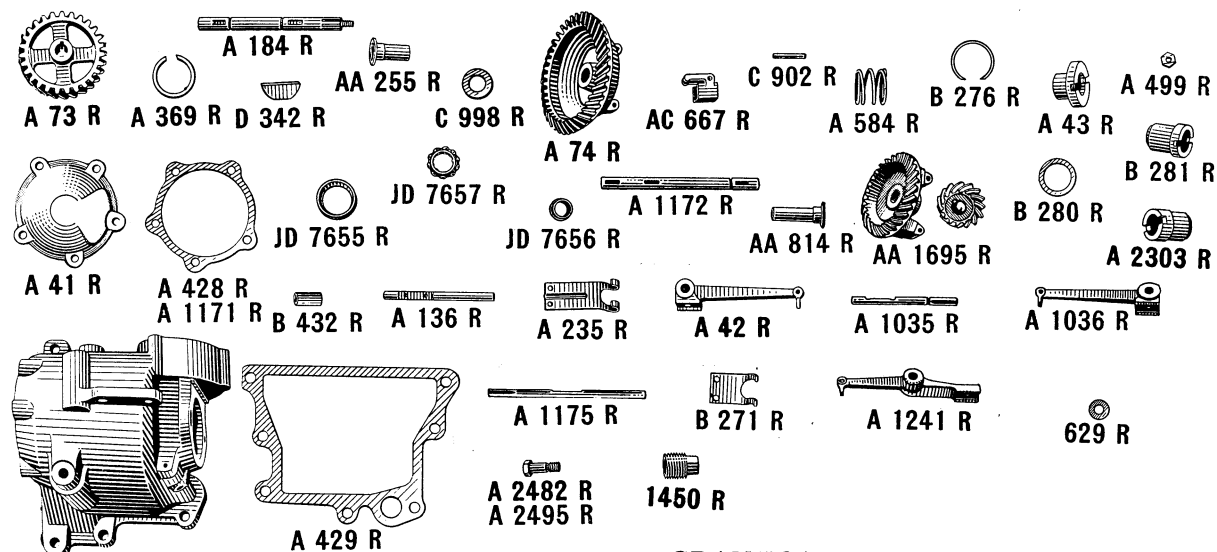


CRANKCASE VENTILATOR

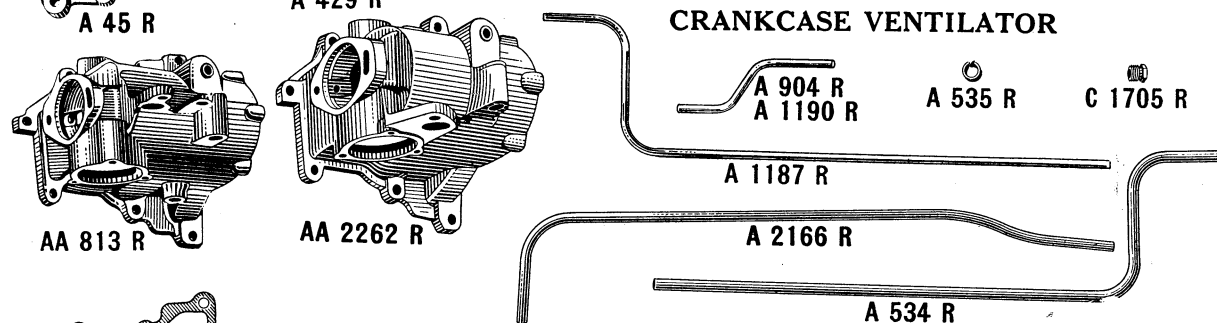


CRANKCASE BREATHER

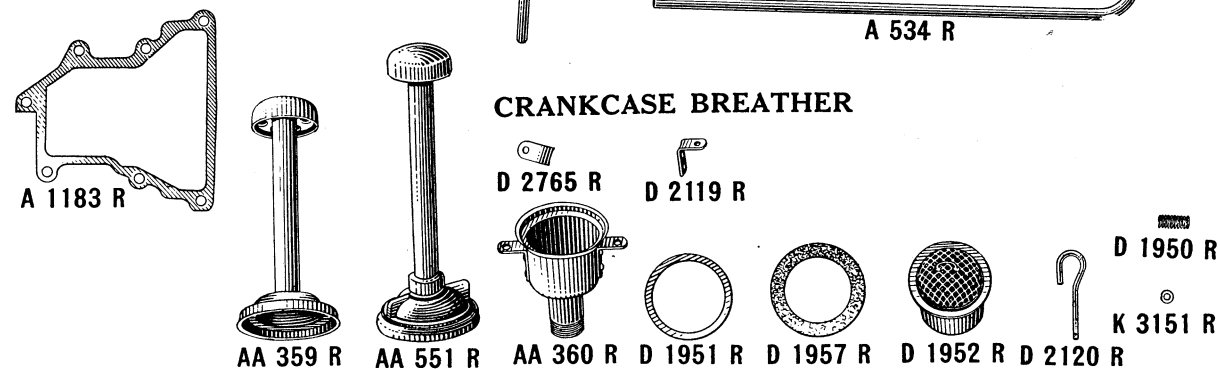


CONTROLS

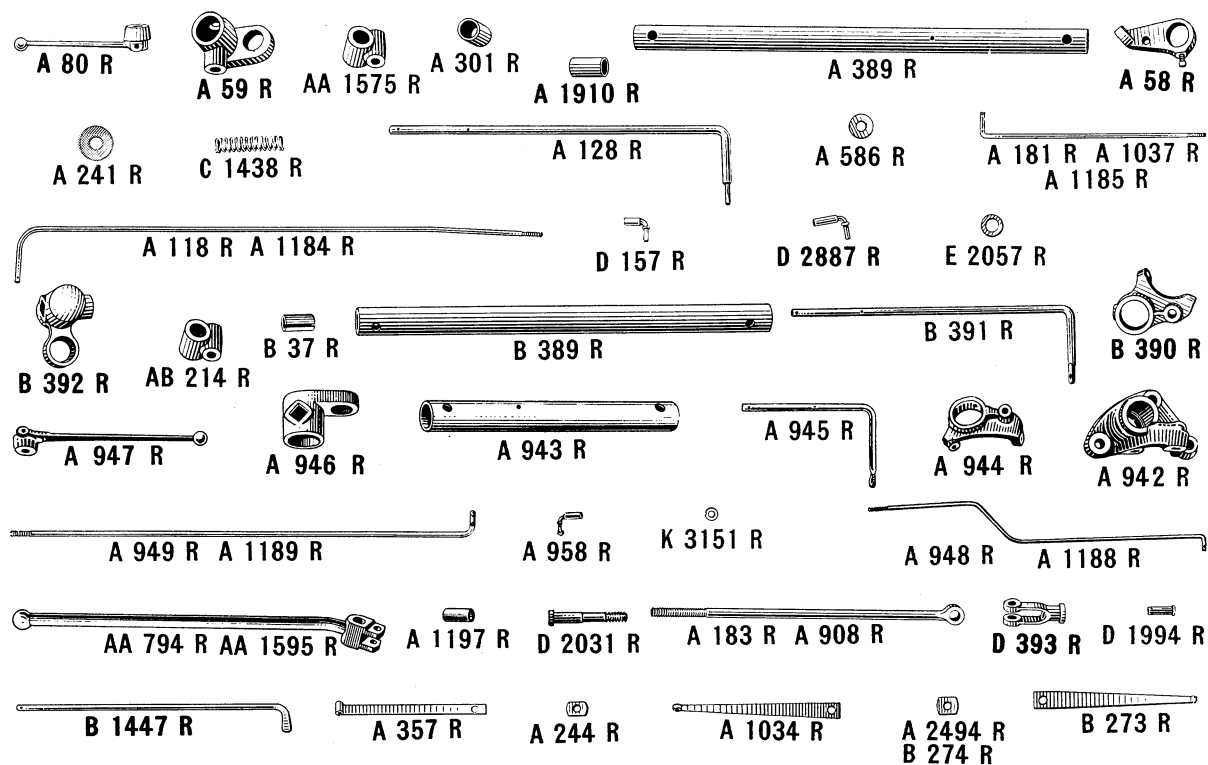


LUBRICATING SYSTEM—OIL PUMP

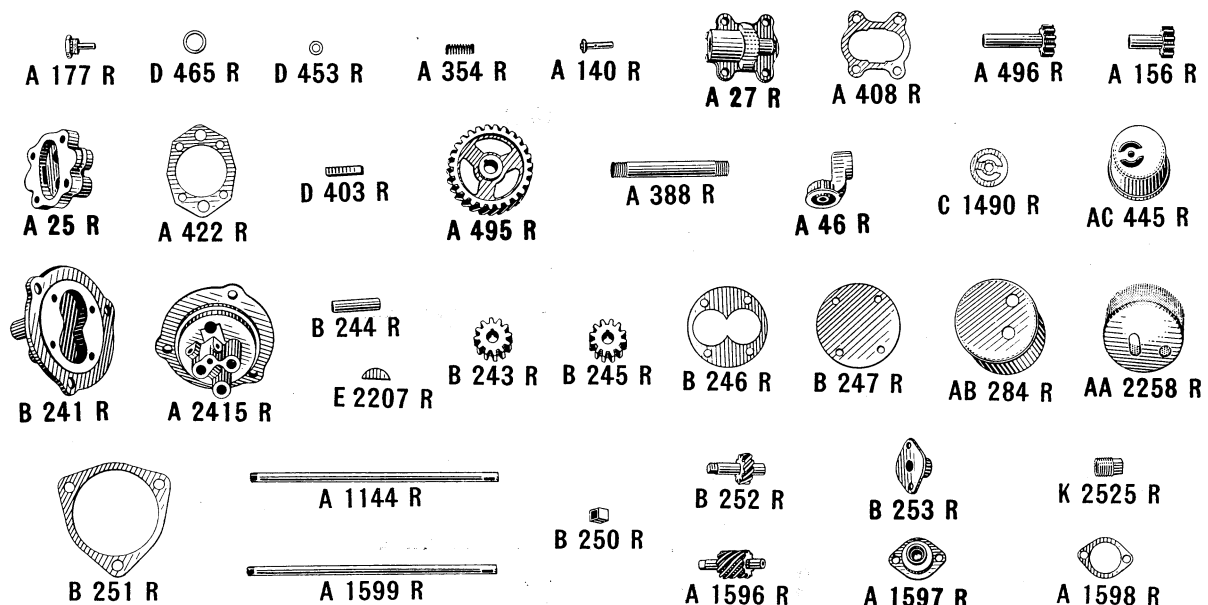


OIL FILTER AND INDICATOR

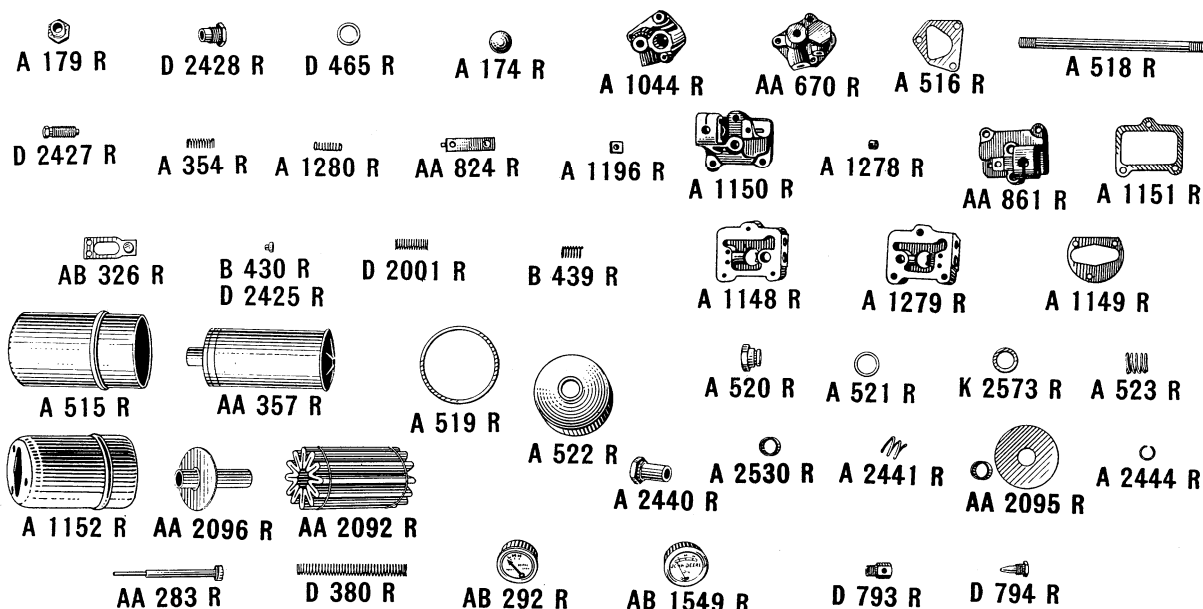

OIL PIPES AND FITTINGS

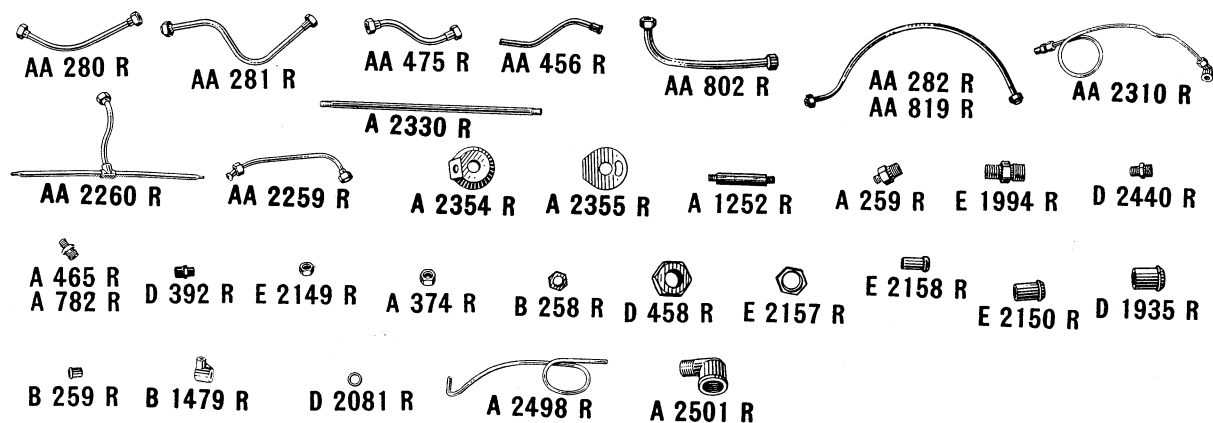

FUEL SYSTEM

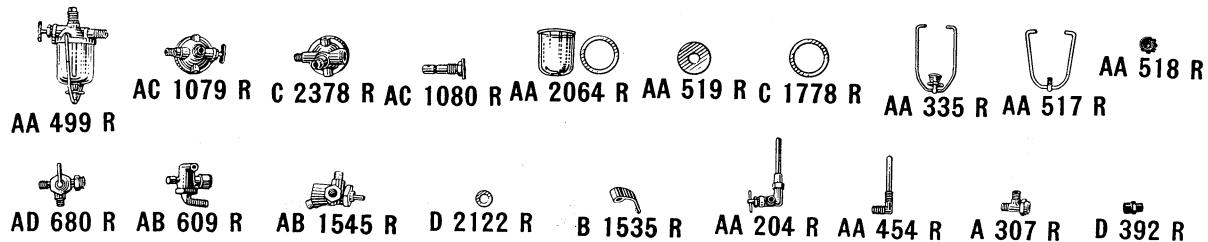

FUEL SYSTEM—Continued



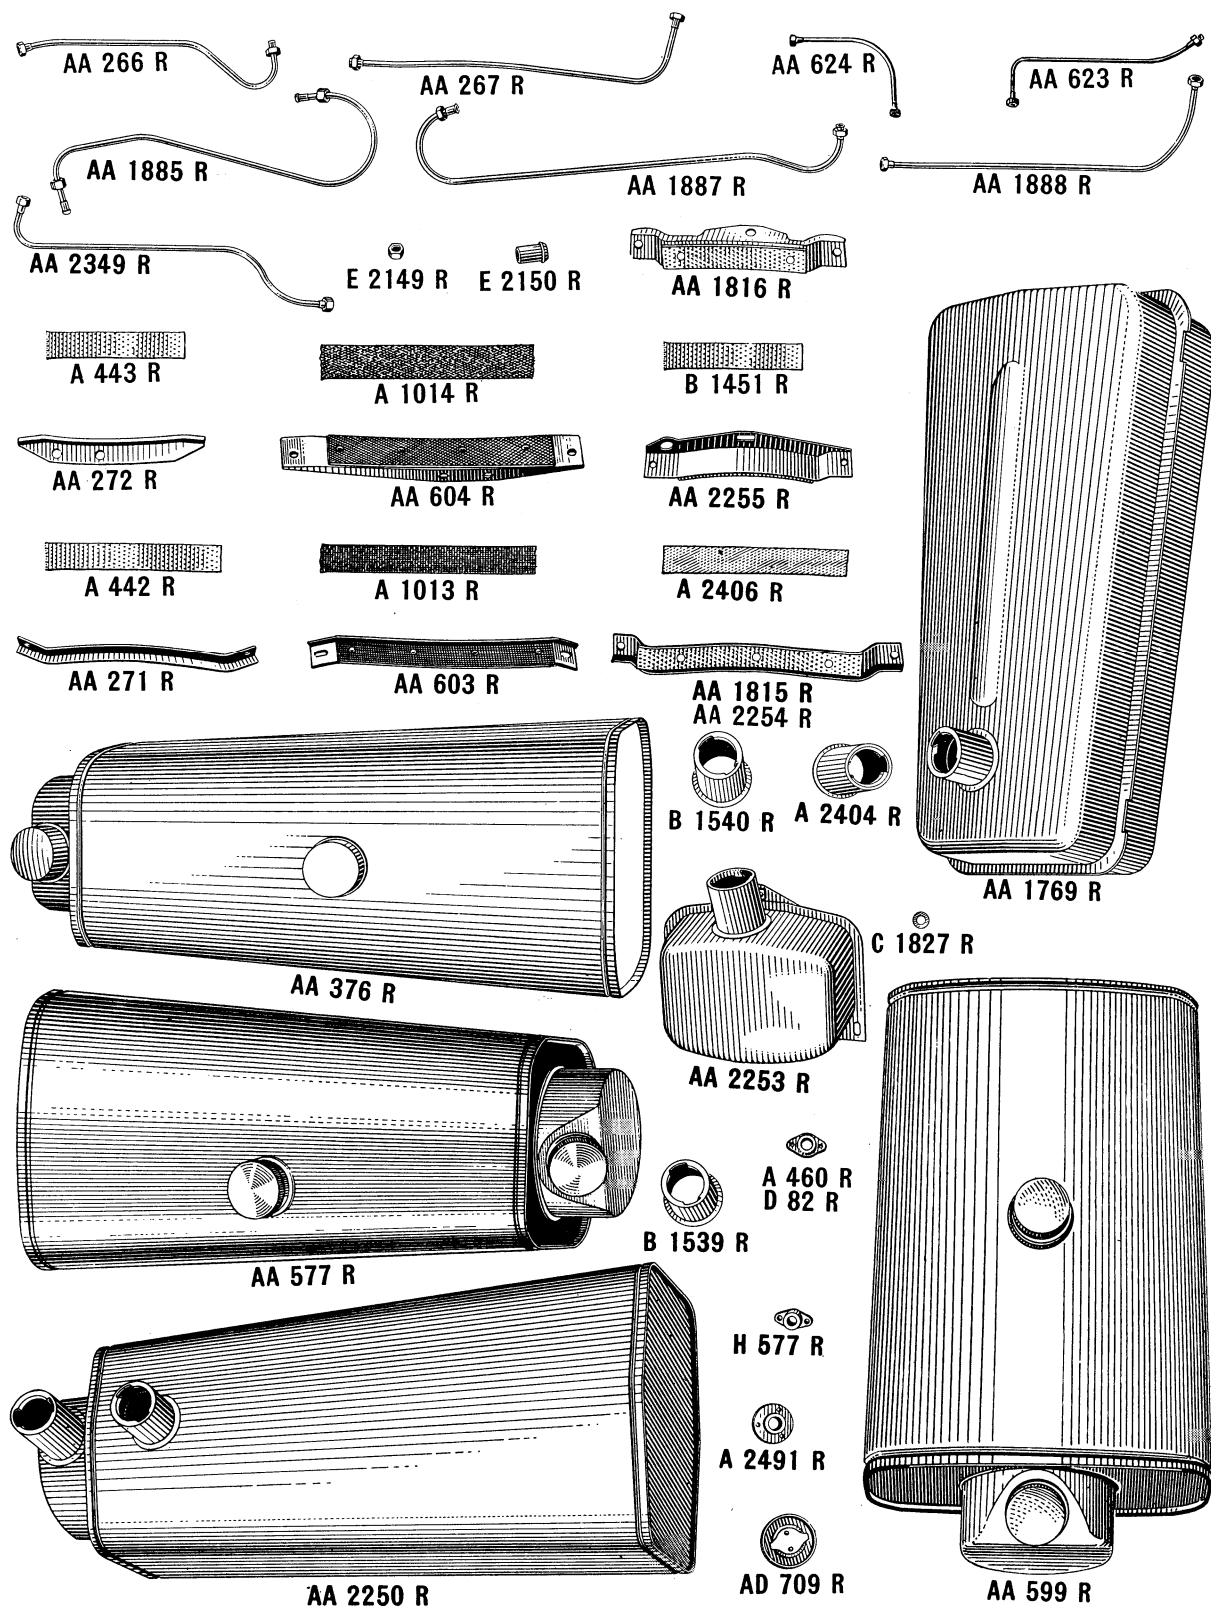


Plate No. 7


HOOD AND GRILLES

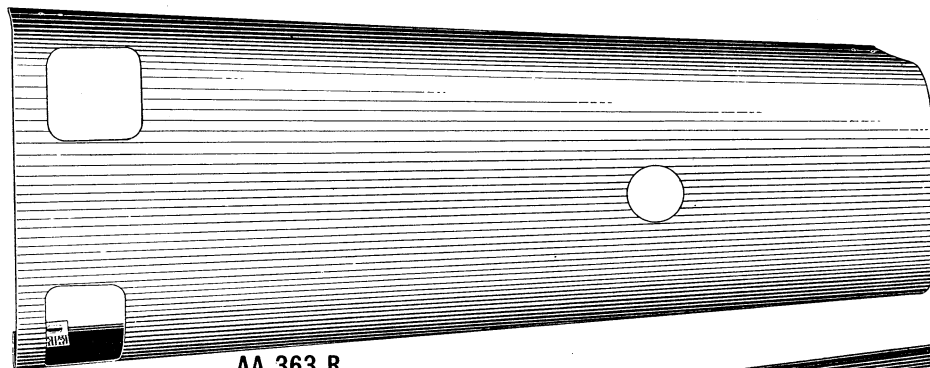

AA 363 R

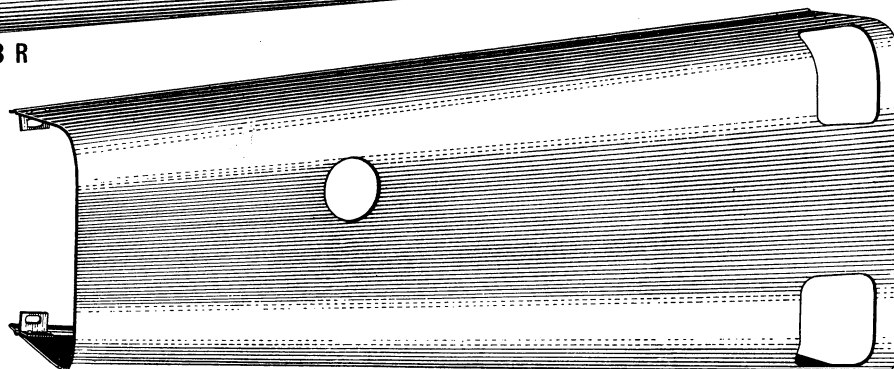


AA 526 R

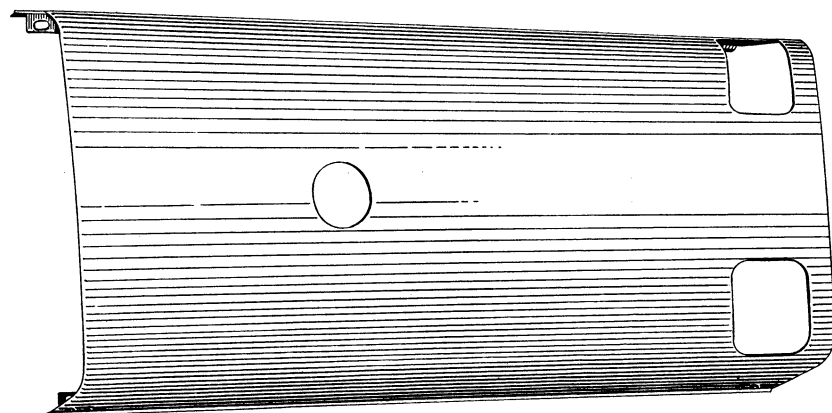

AA 601 R




AA 270 R

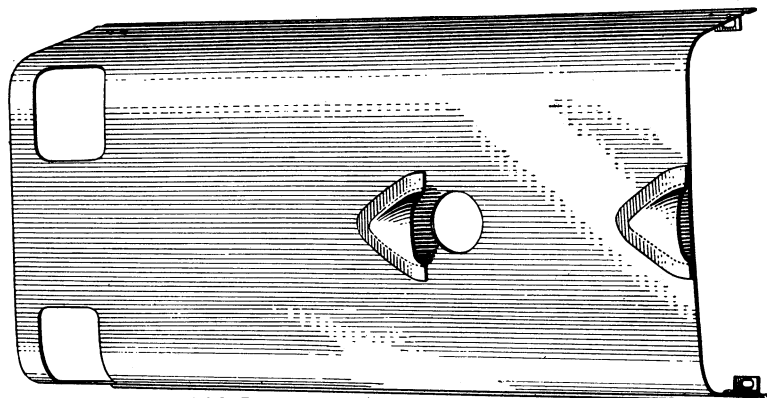


AA 886 R


HOOD AND GRILLES—Continued

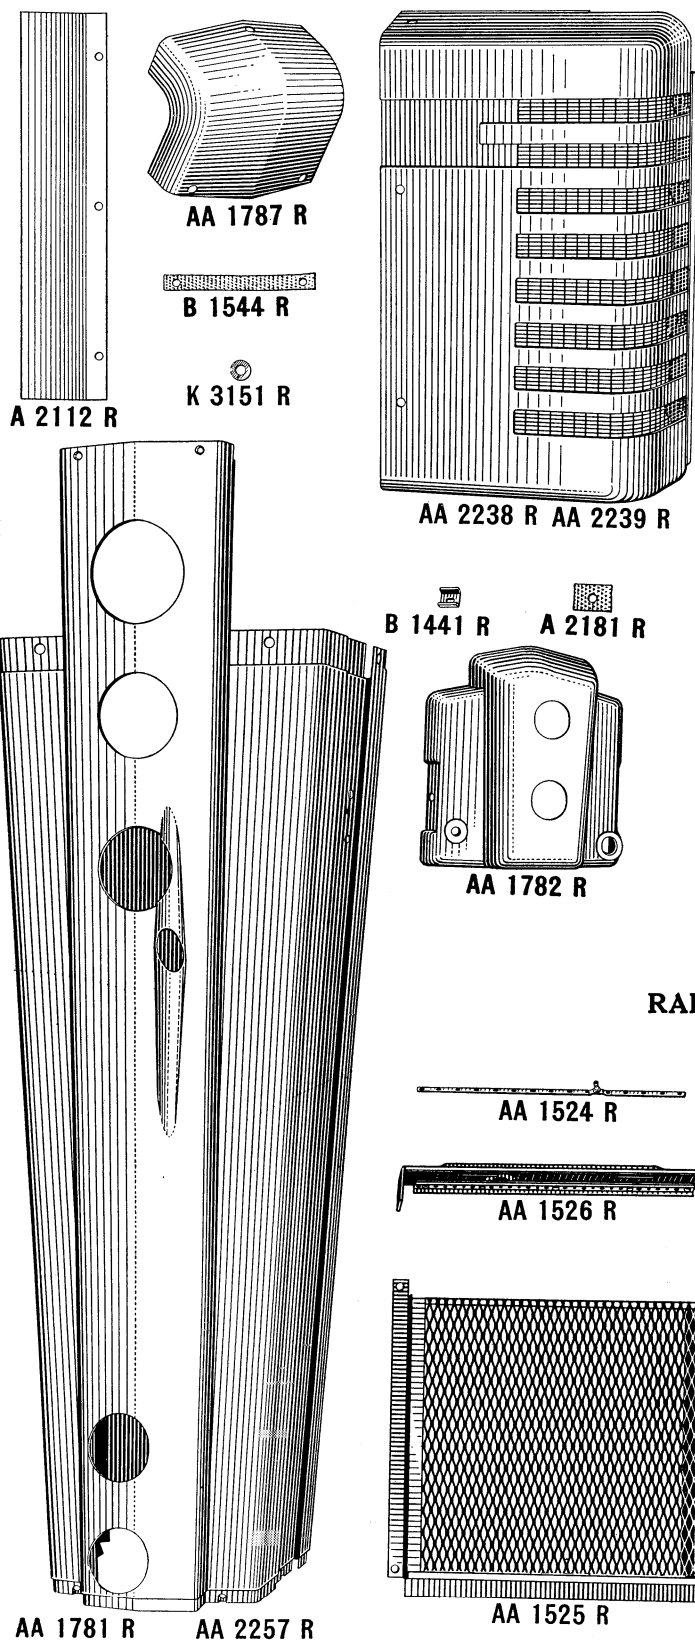


RADIATOR GUARD AND CURTAIN

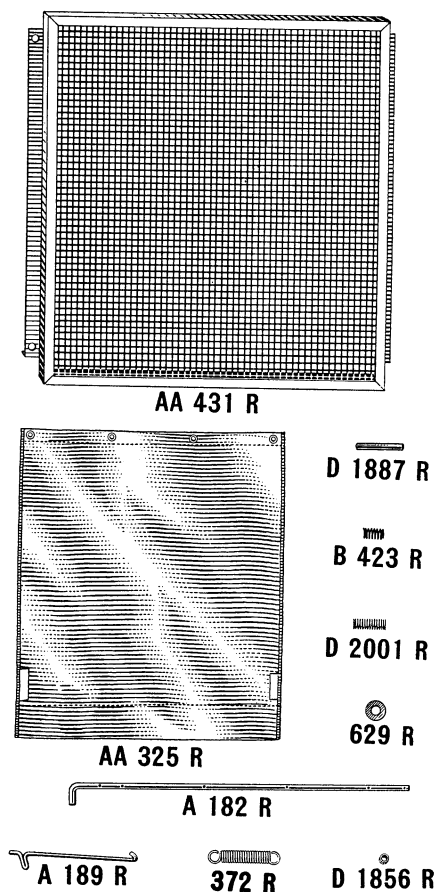


RADIATOR SHUTTER

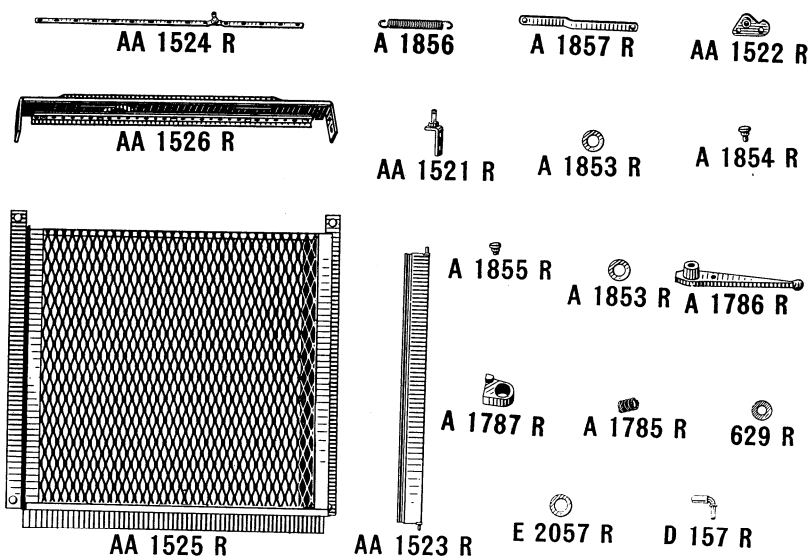


RADIATOR SHUTTER—Continued

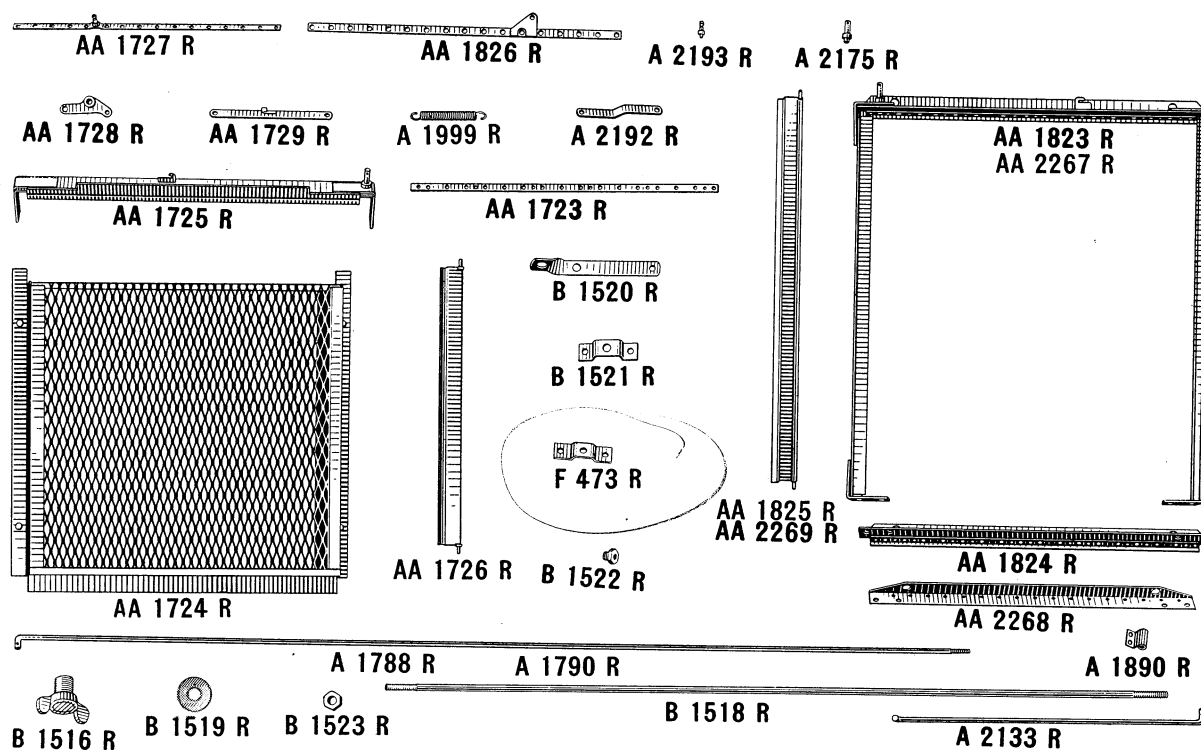


COOLING SYSTEM

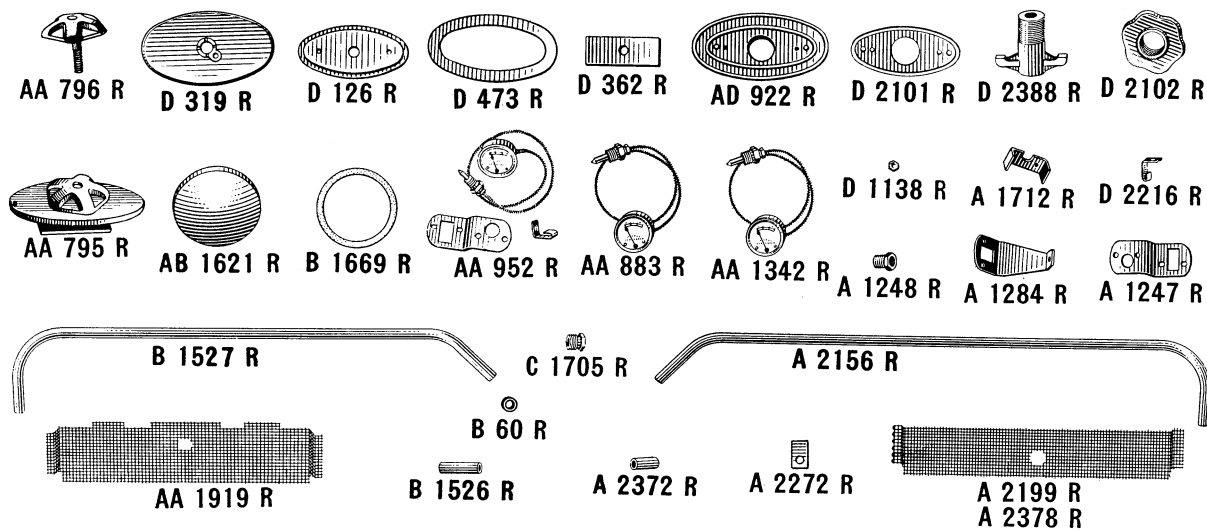


COOLING SYSTEM—Continued

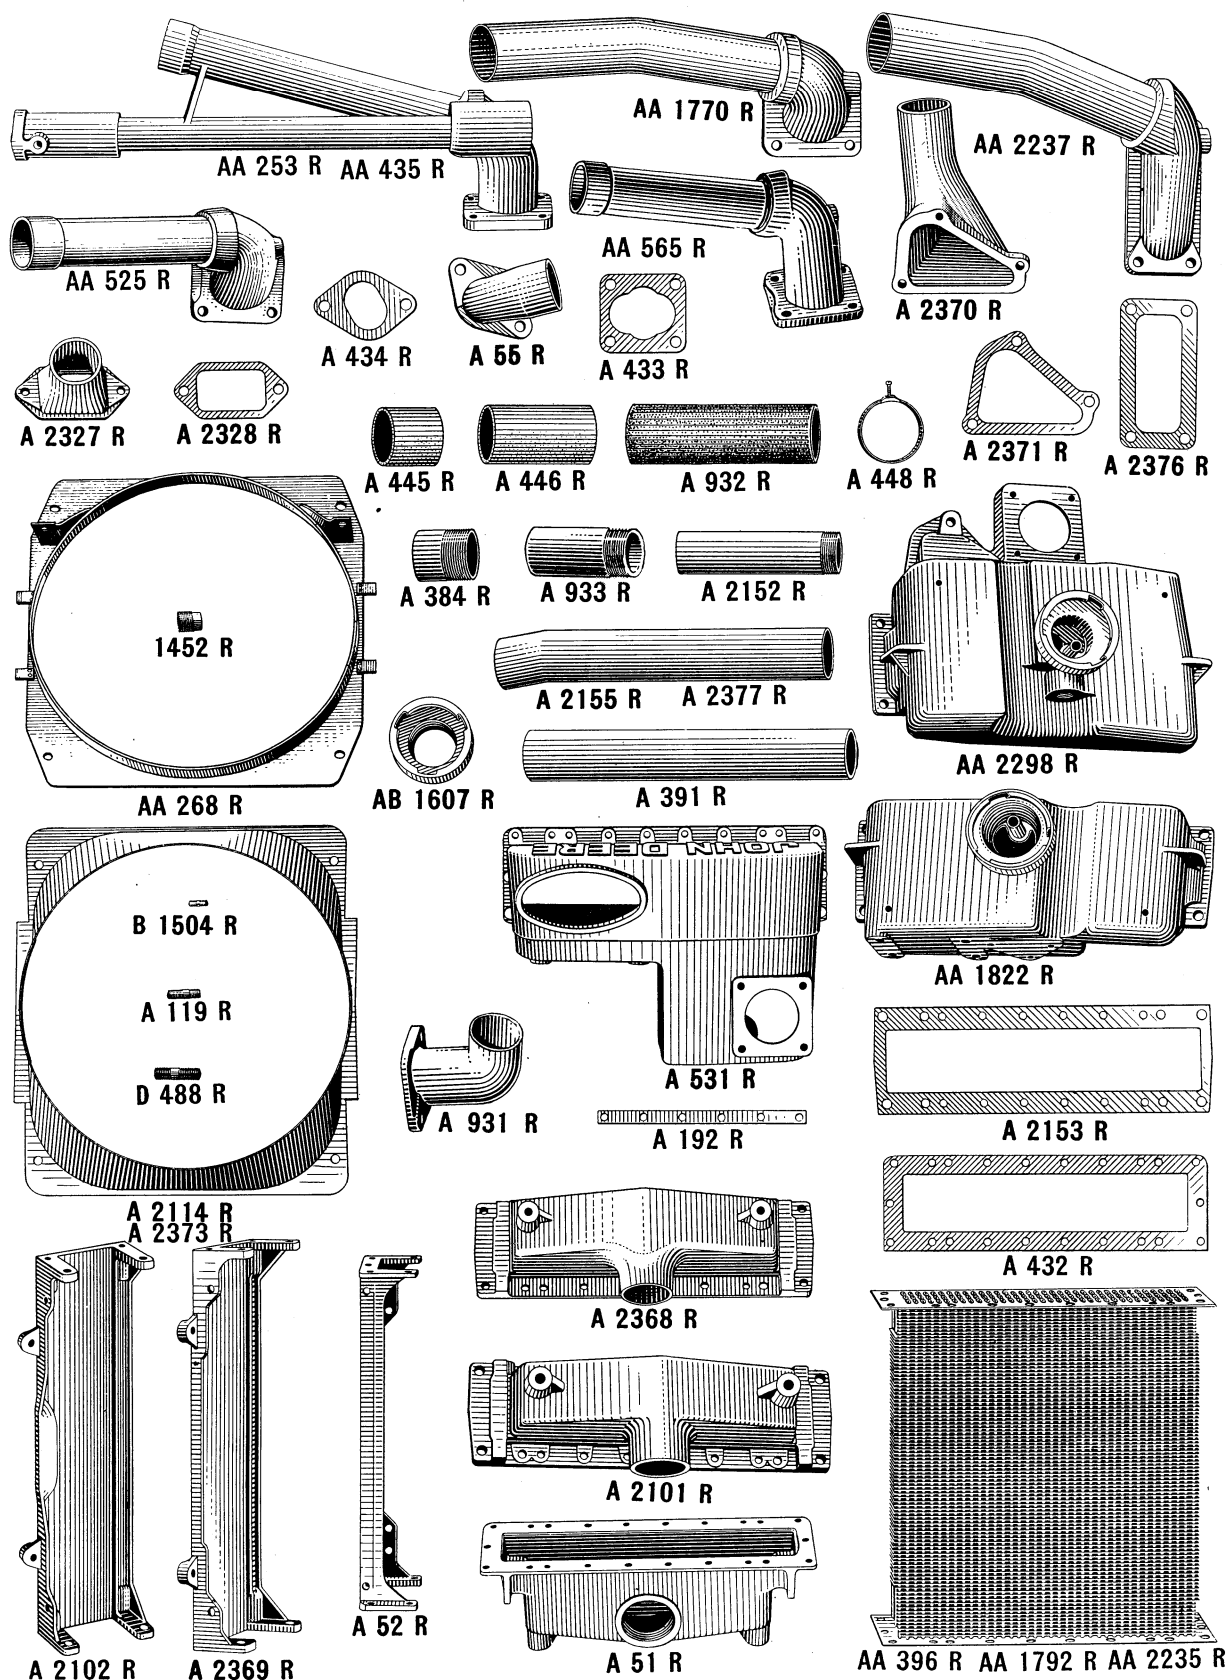


FAN

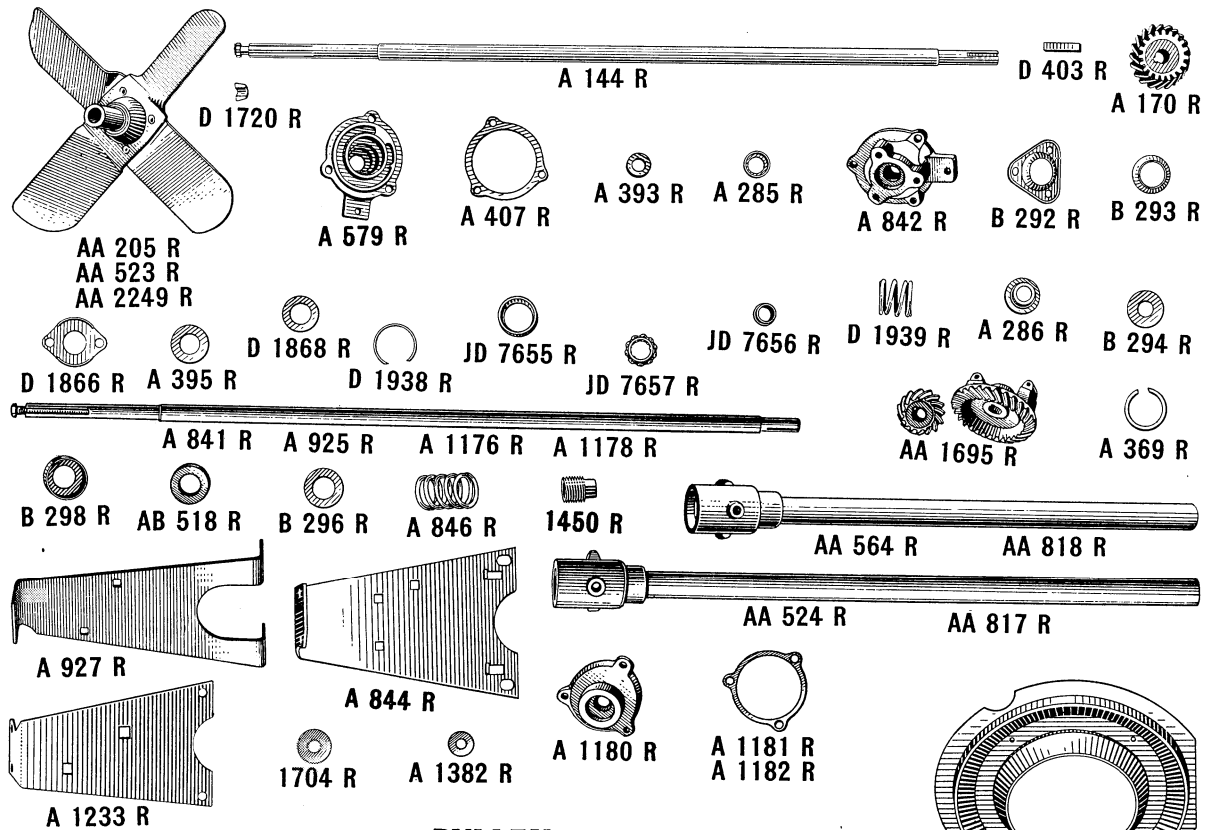


PULLEY

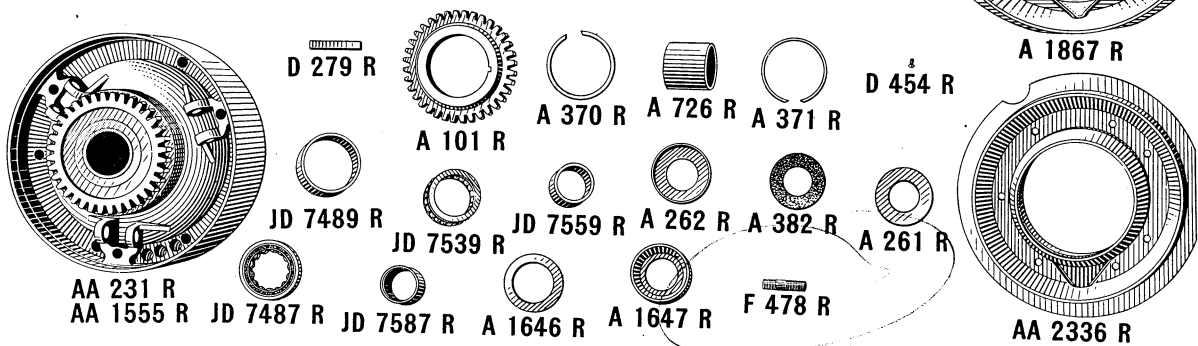


CLUTCH PARTS

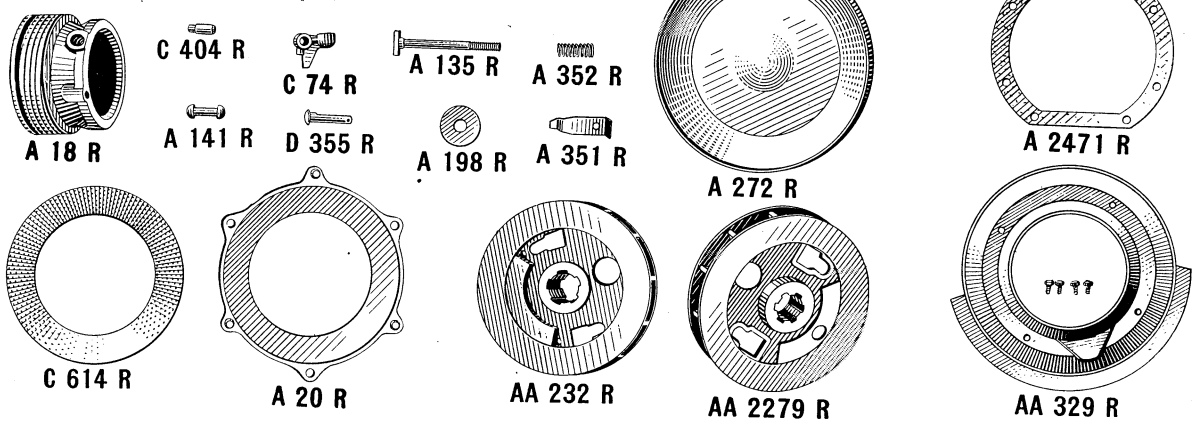


CLUTCH FORK BEARING AND PULLEY BRAKE

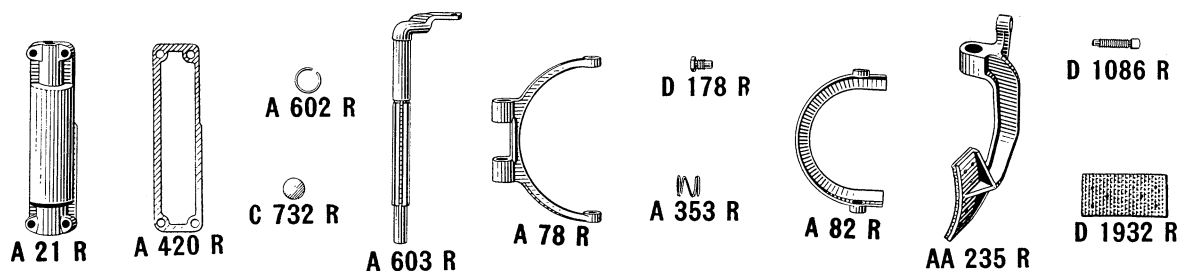


GEAR SHIFT

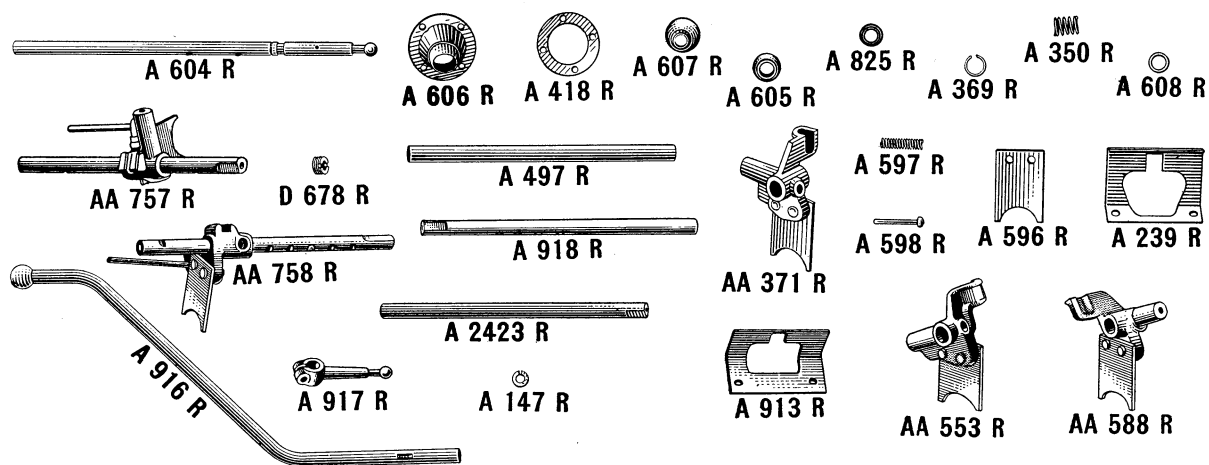


SLIDING GEAR SHAFT

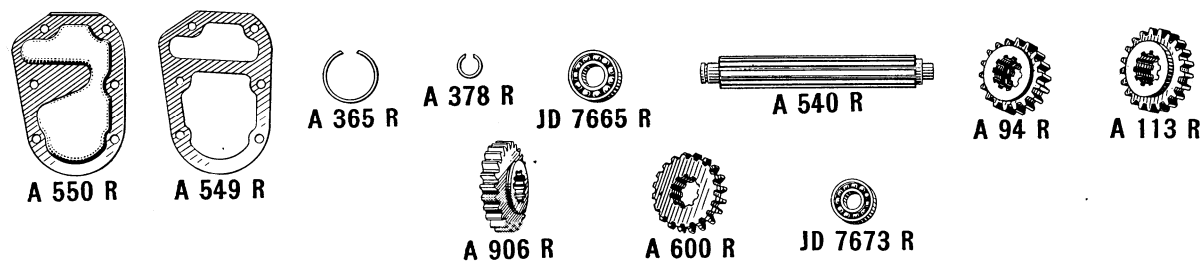

OVERDRIVE GEAR SHIFT

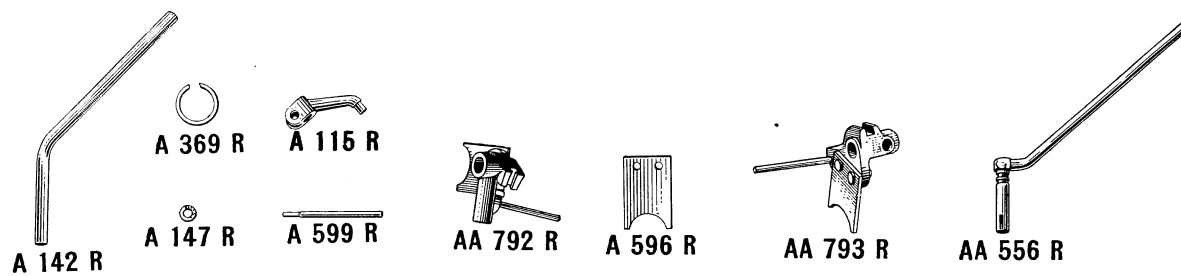

OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR

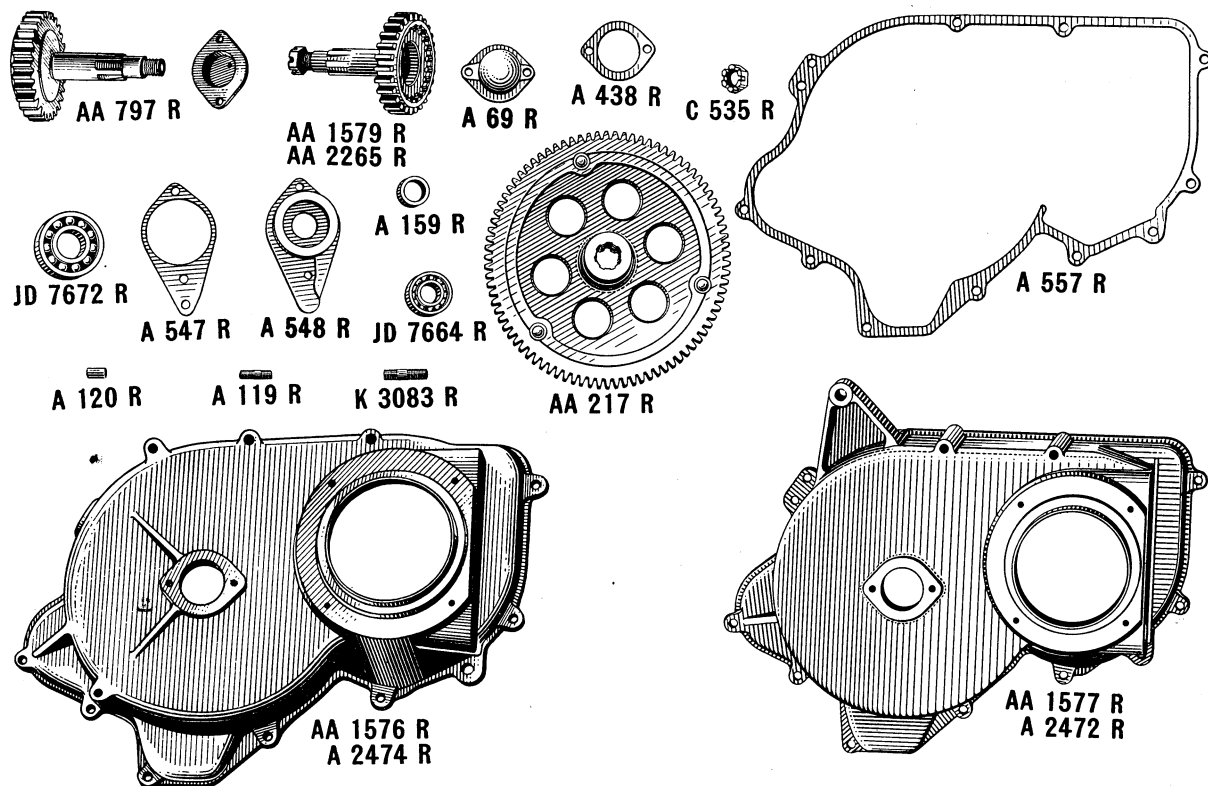

COUNTERSHAFT IDLER GEAR AND COUNTERSHAFT



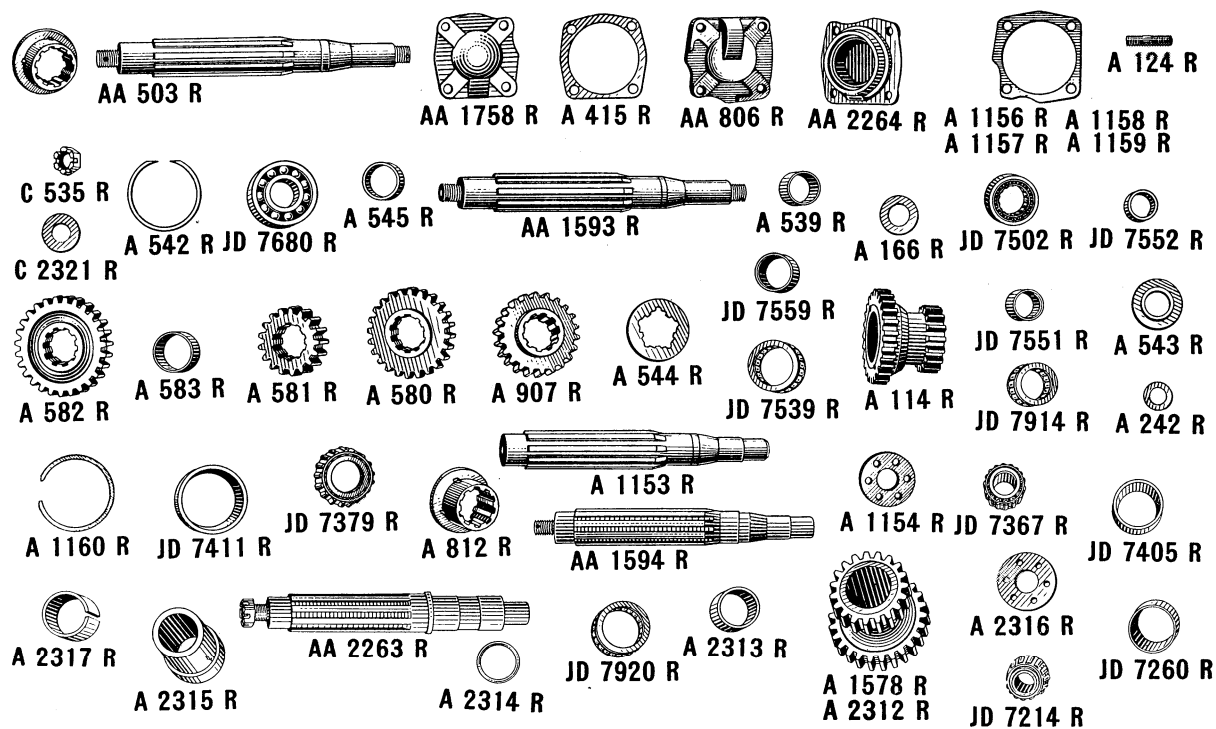


Plate No. 14

REPAIRS FOR HIGH SPEED GEAR ASSEMBLIES

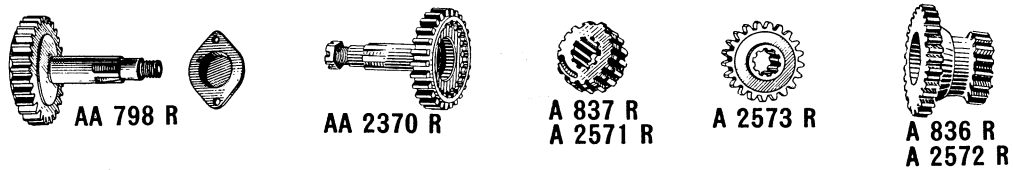

REPAIRS FOR AA1717 R, AA1120 R AND AA2360 R SLOW SPEED GEAR ASSEMBLIES

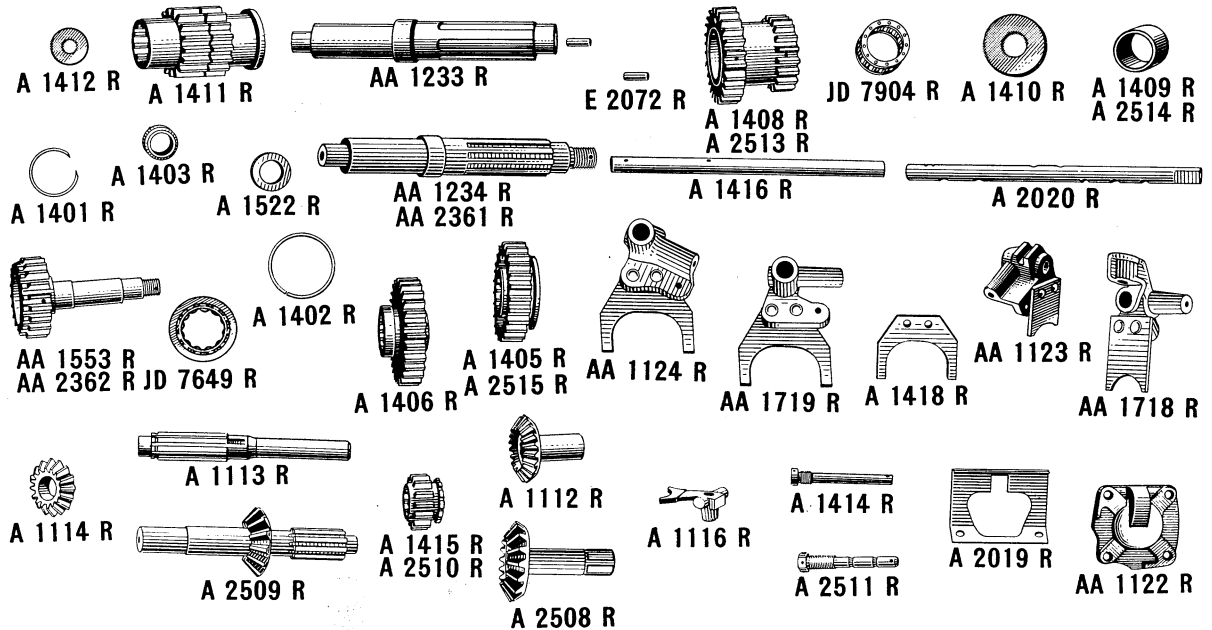

DIFFERENTIAL

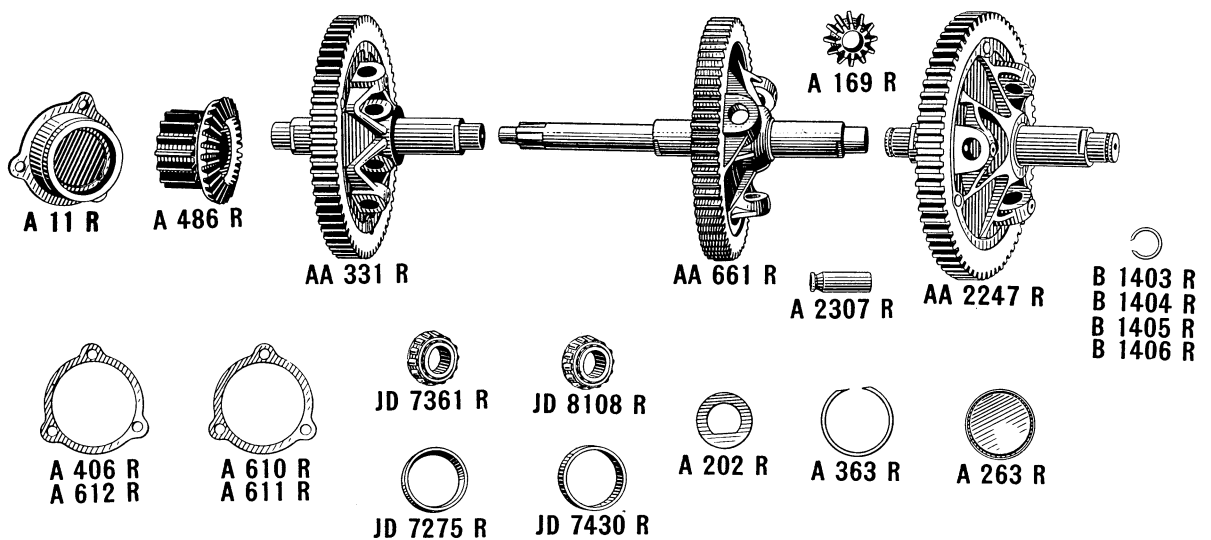


Plate No. 15

FINAL DRIVE






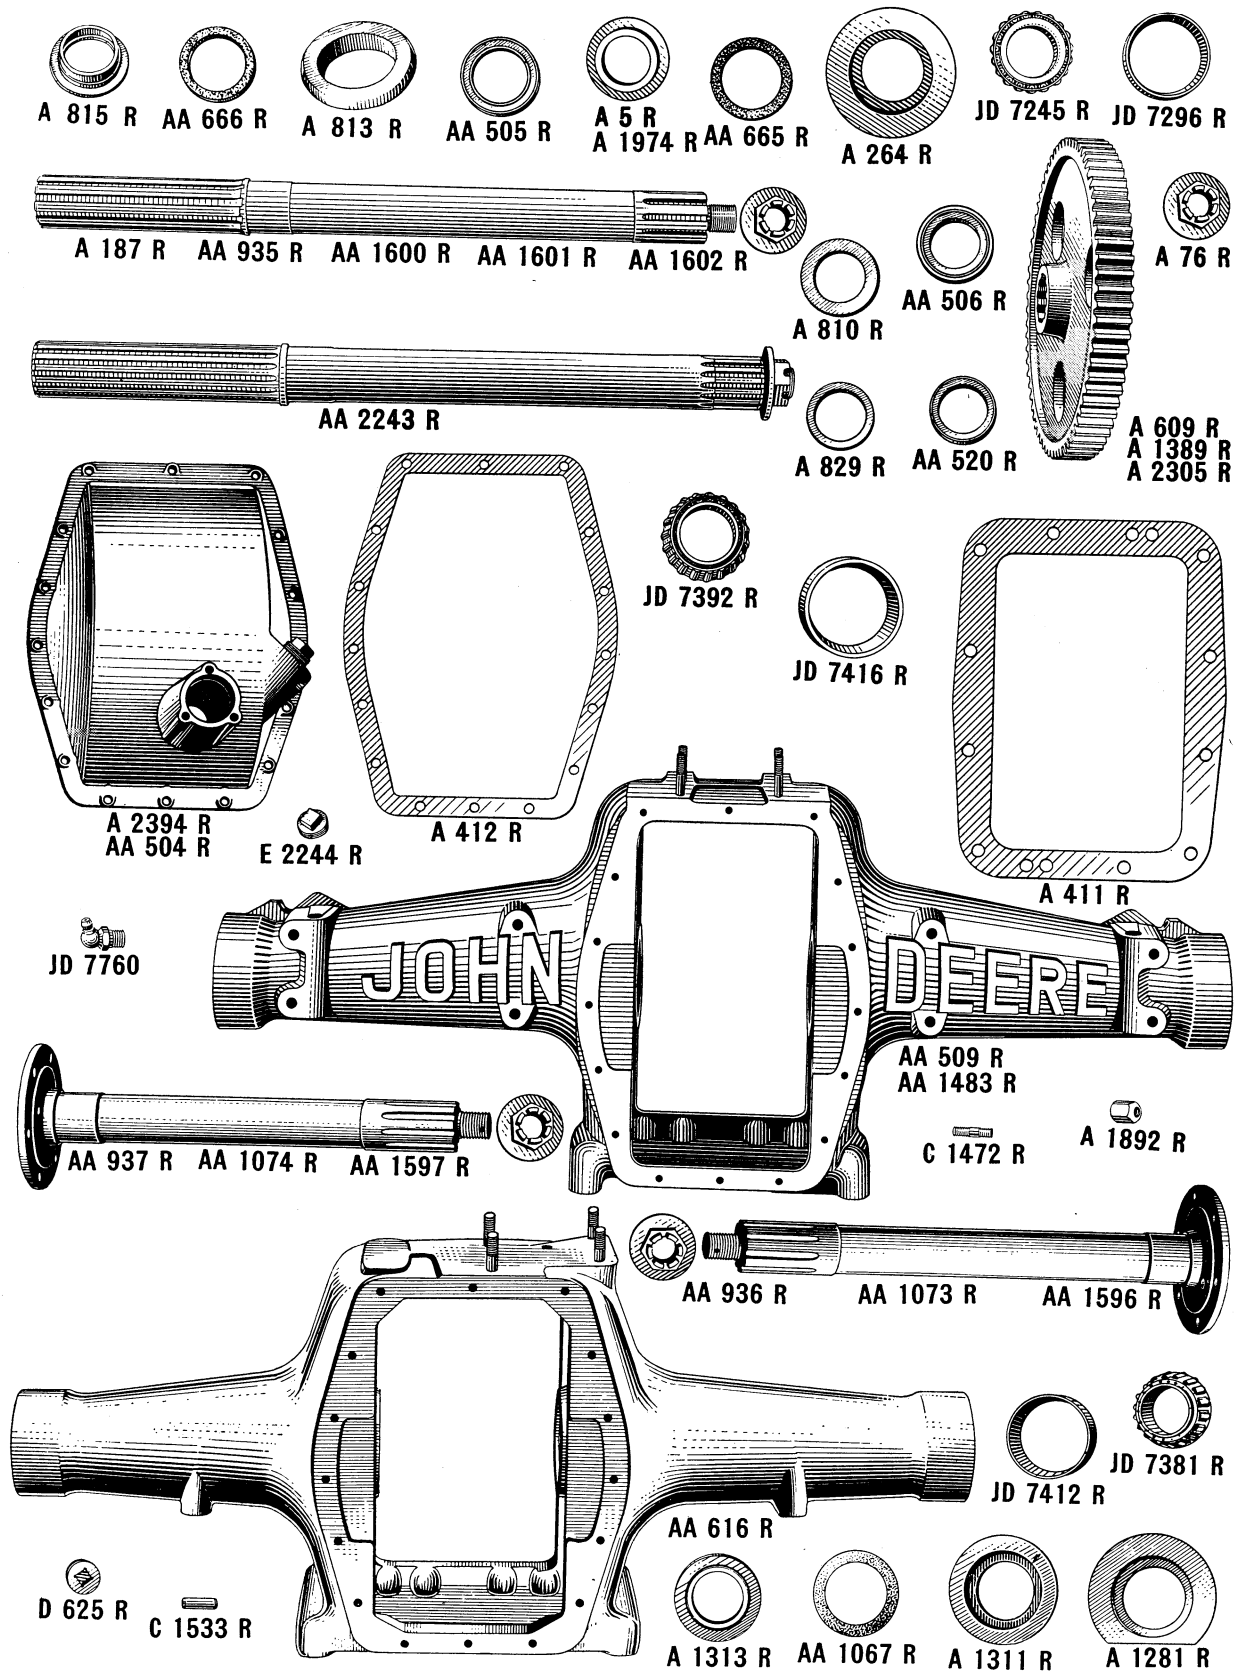


Plate No. 16

FINAL DRIVE—Continued

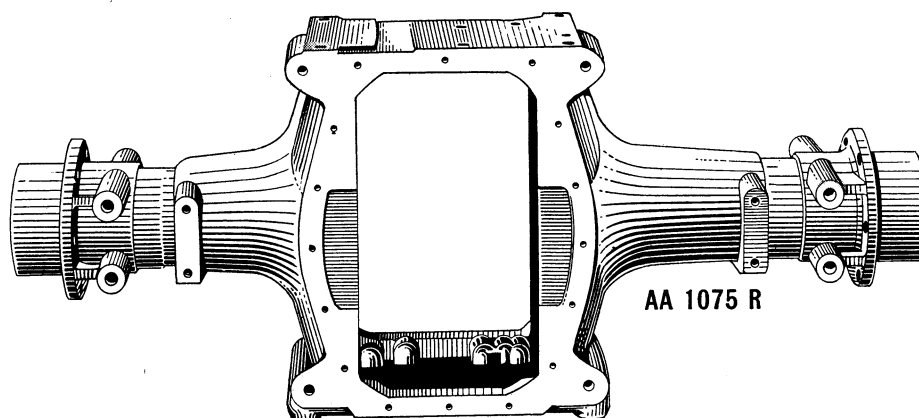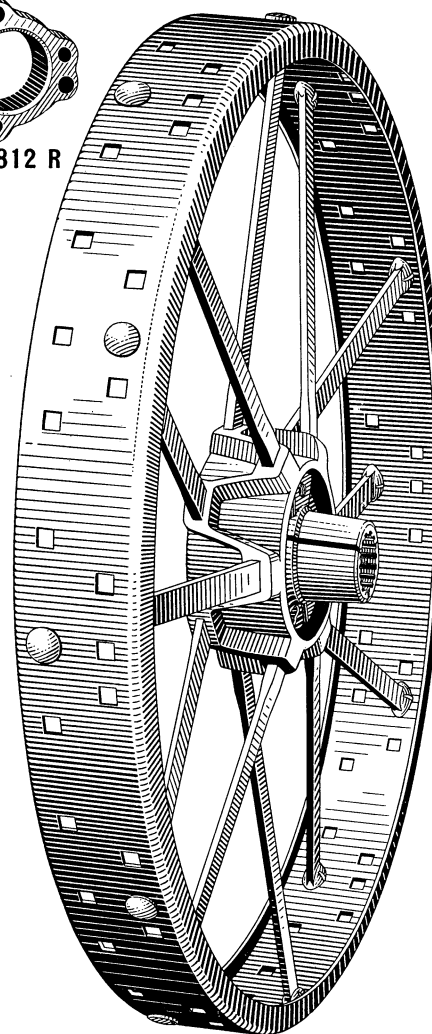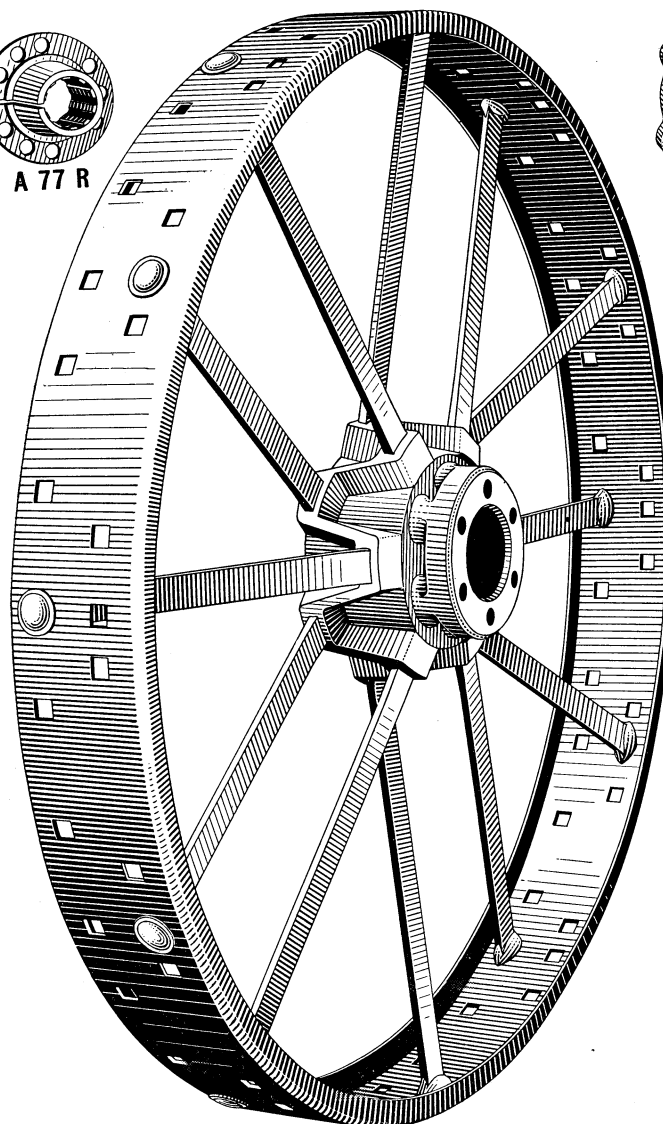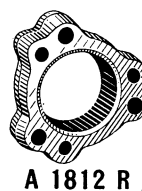

REAR WHEELS AND REAR WHEEL EQUIPMENT

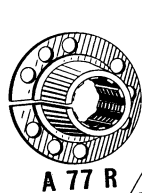

REAR WHEELS AND REAR WHEEL EQUIPMENT—Continued




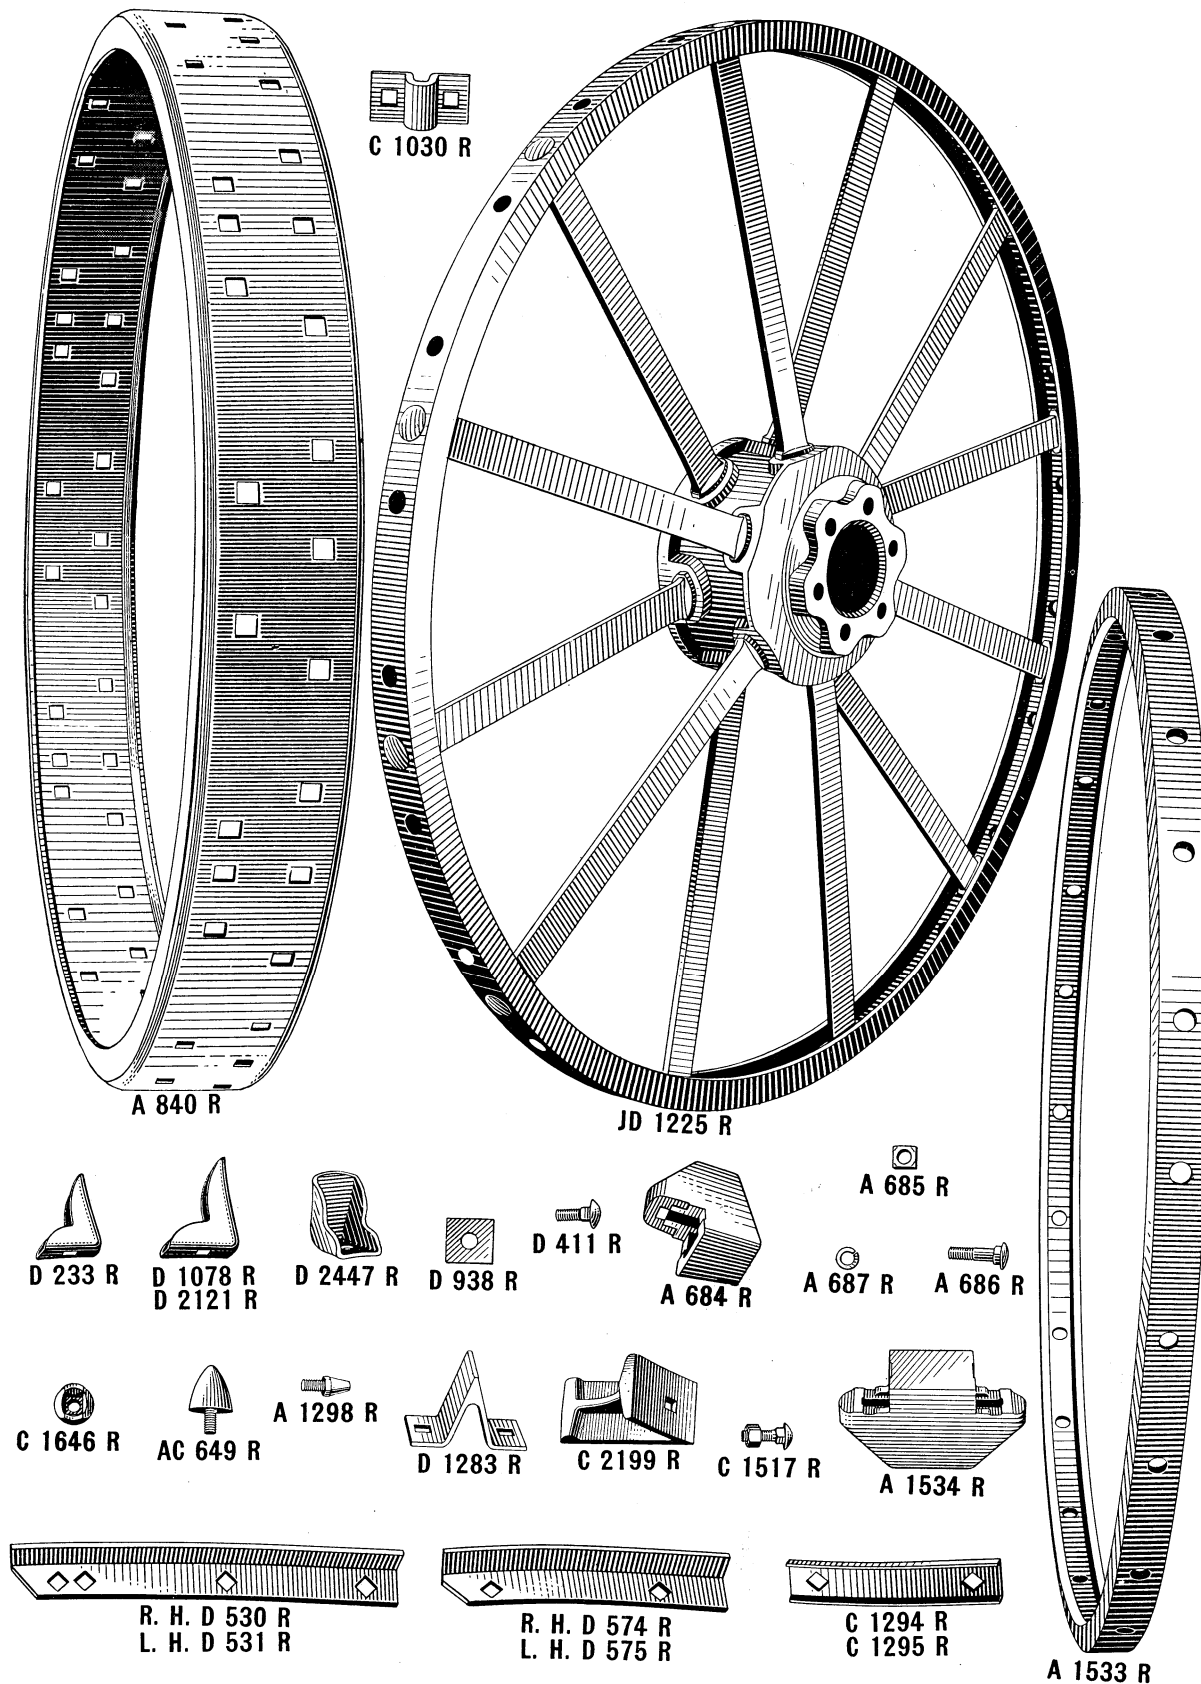


Plate No. 18


WHEEL SCRAPERS


 REAR WHEELS AND REAR WHEEL EQUIPMENT—
 Continued


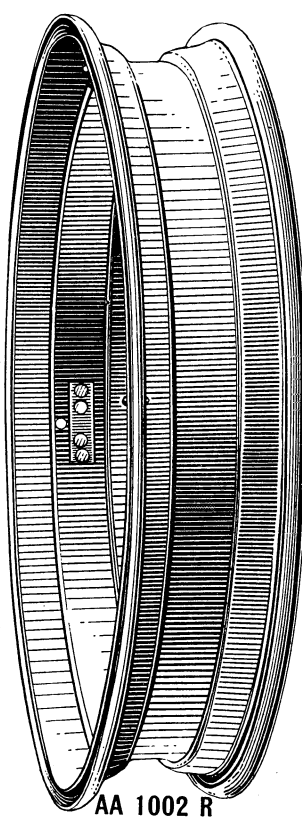
REAR WHEELS AND REAR WHEEL EQUIPMENT—Continued

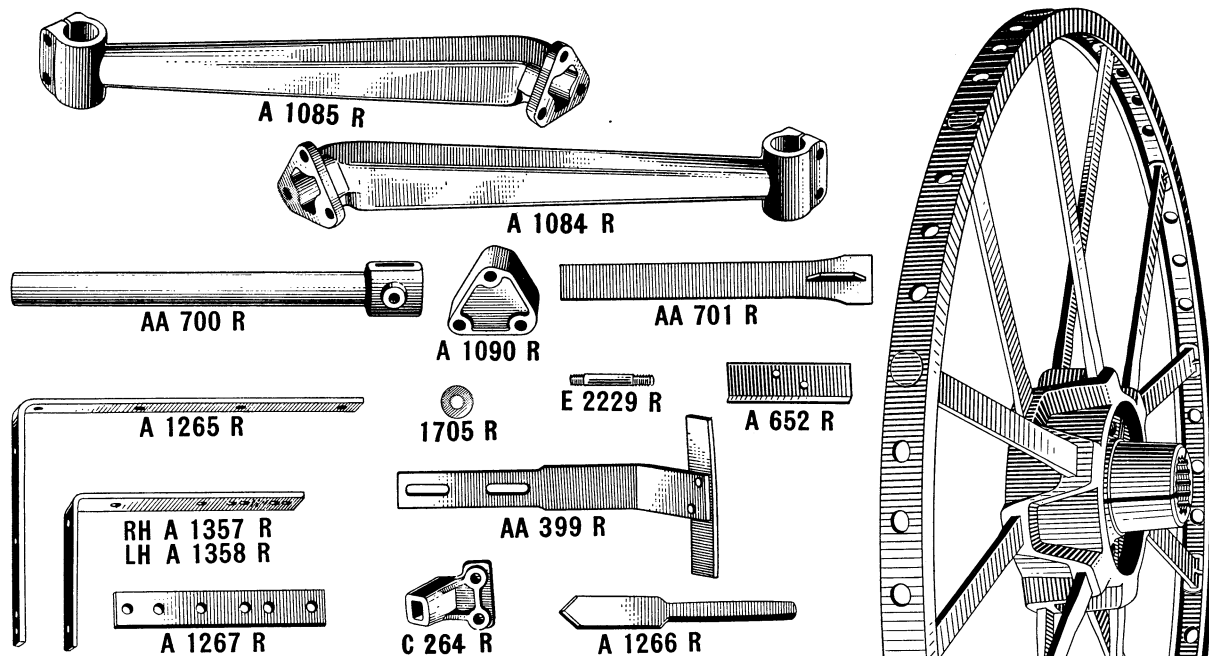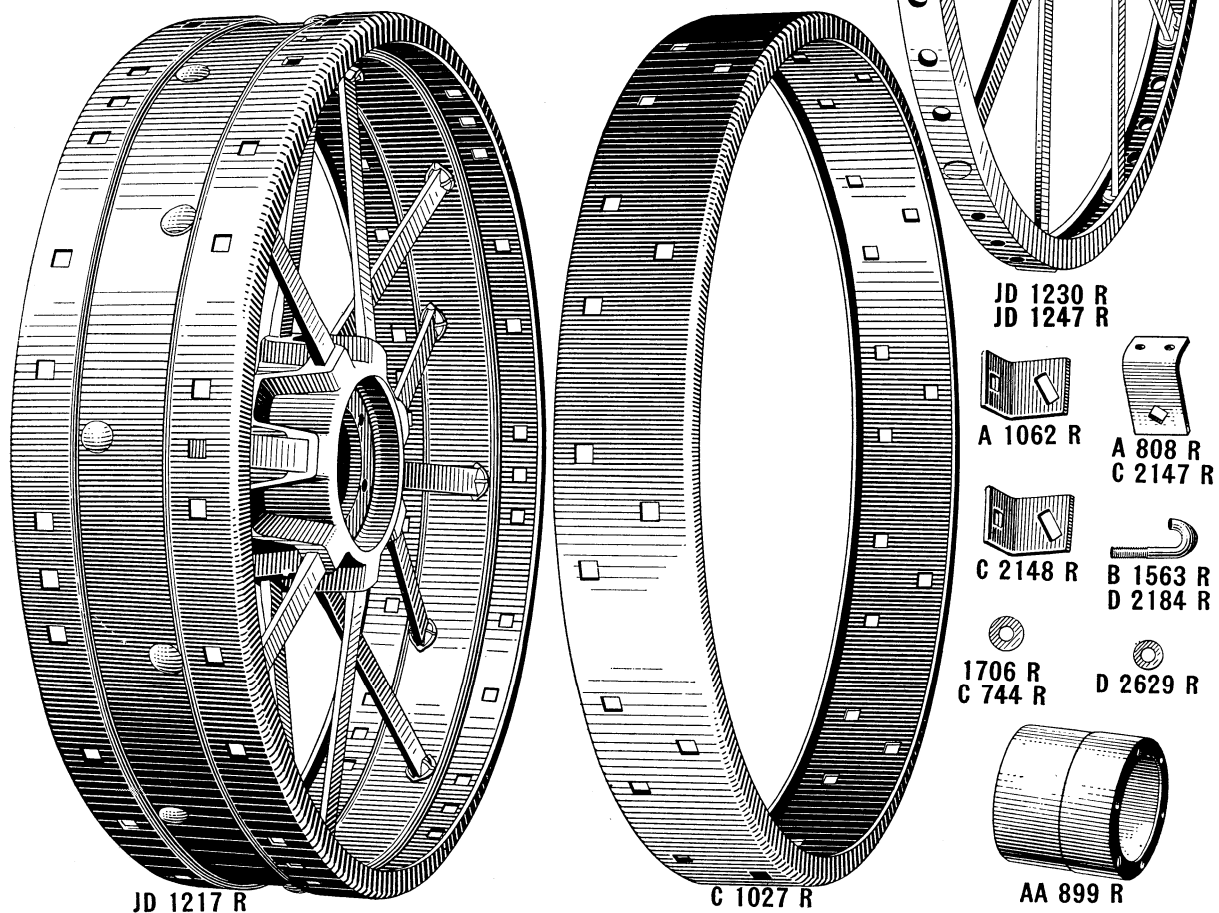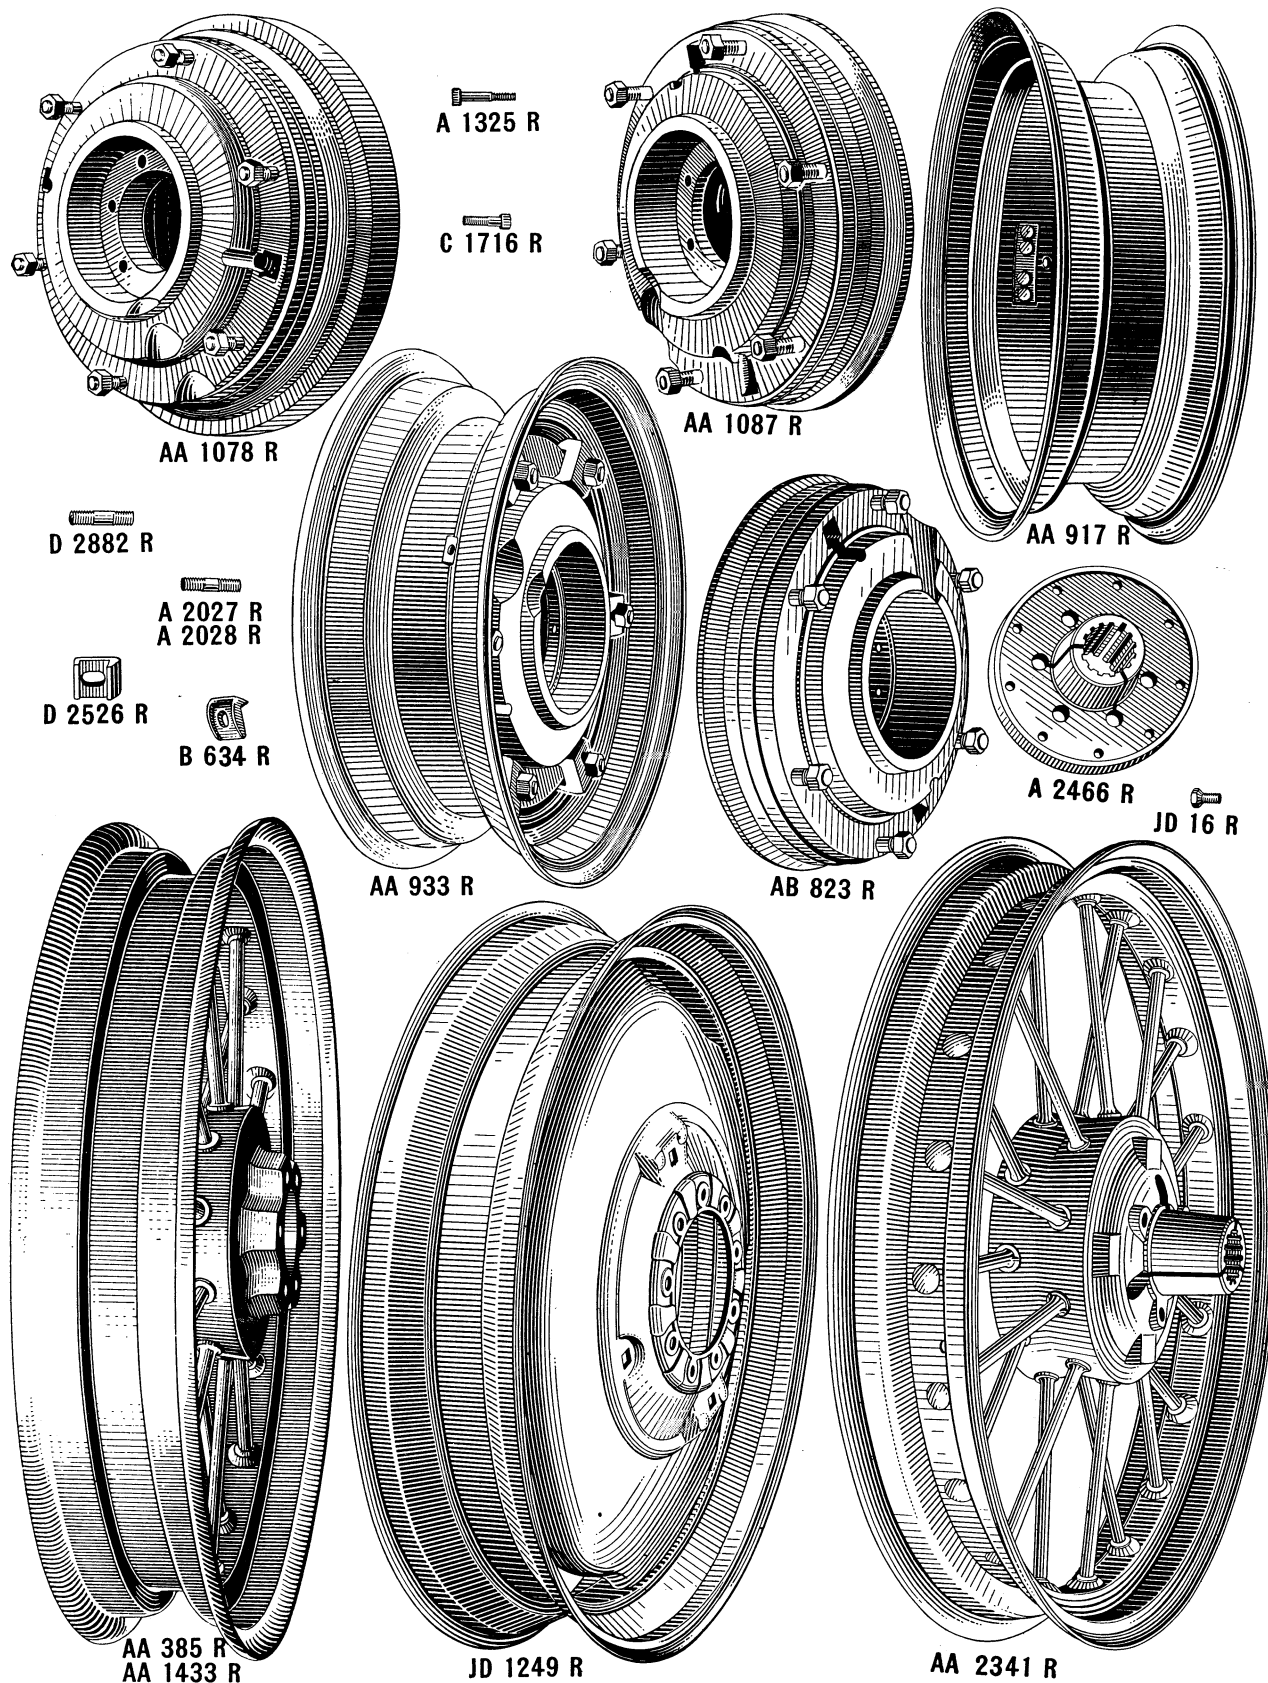

REAR WHEELS AND REAR WHEEL EQUIPMENT—Continued

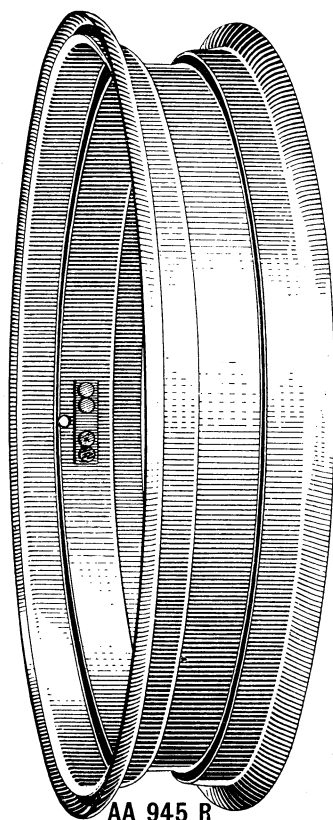


AA 945 R




AA 1002 R



A 1283 R
A 1293 R
A 1544 R

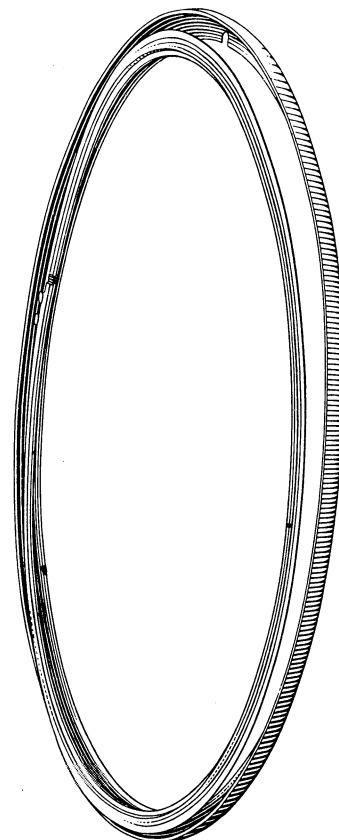


AA 1261 R
AA 1409 R

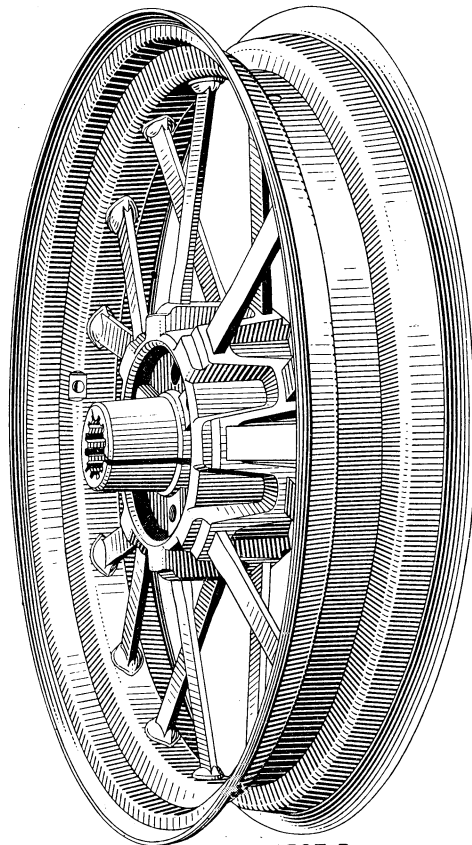


AA 1502 R

AA 1507 R

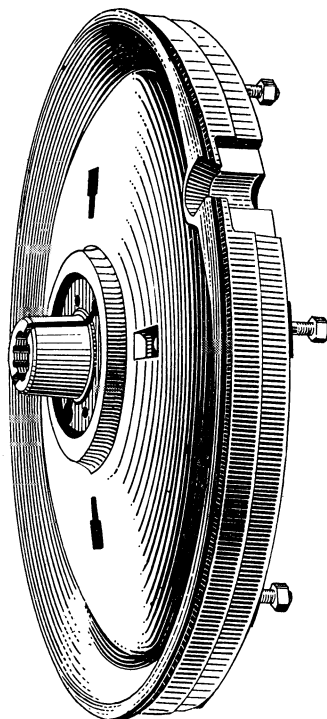


AA 2228 R

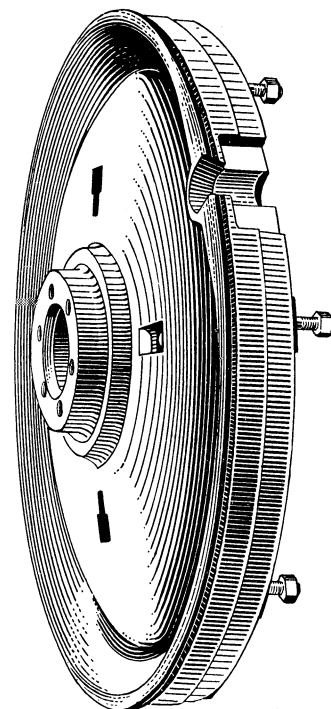


AA 1088 R


EMERGENCY BRAKE

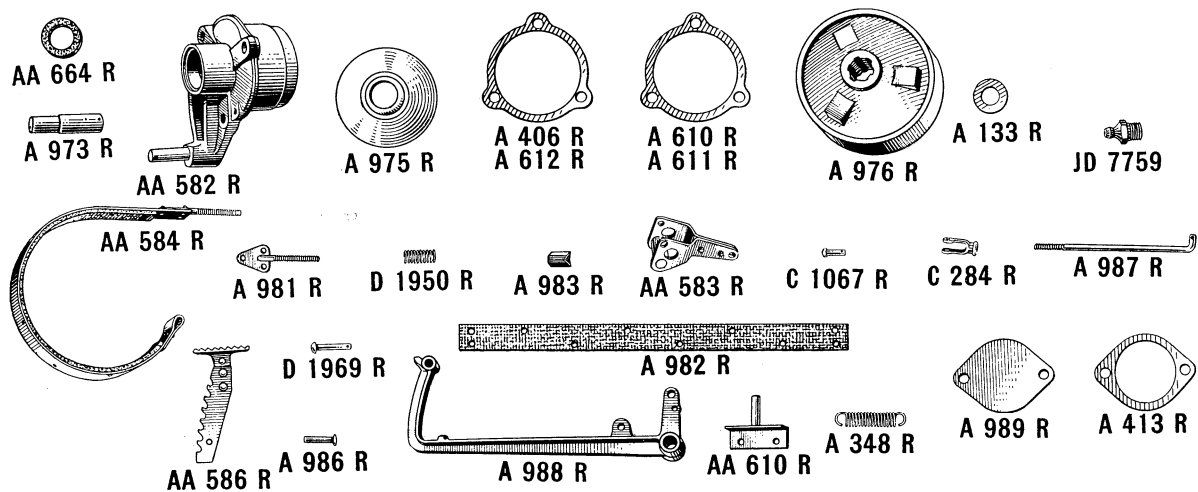


DIFFERENTIAL BRAKES

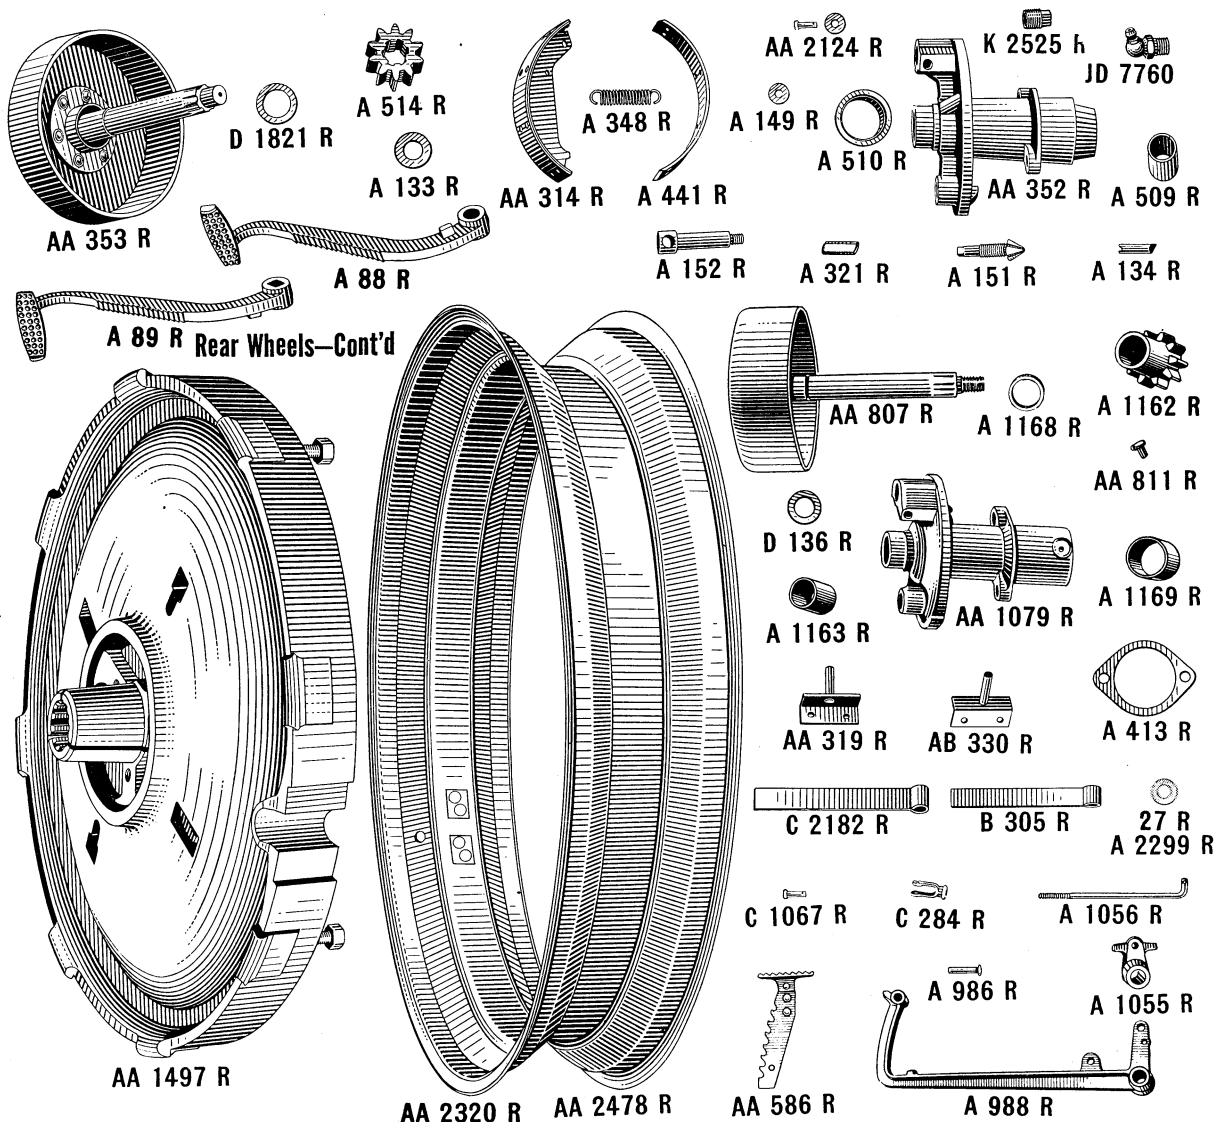

REAR WHEEL BRAKES

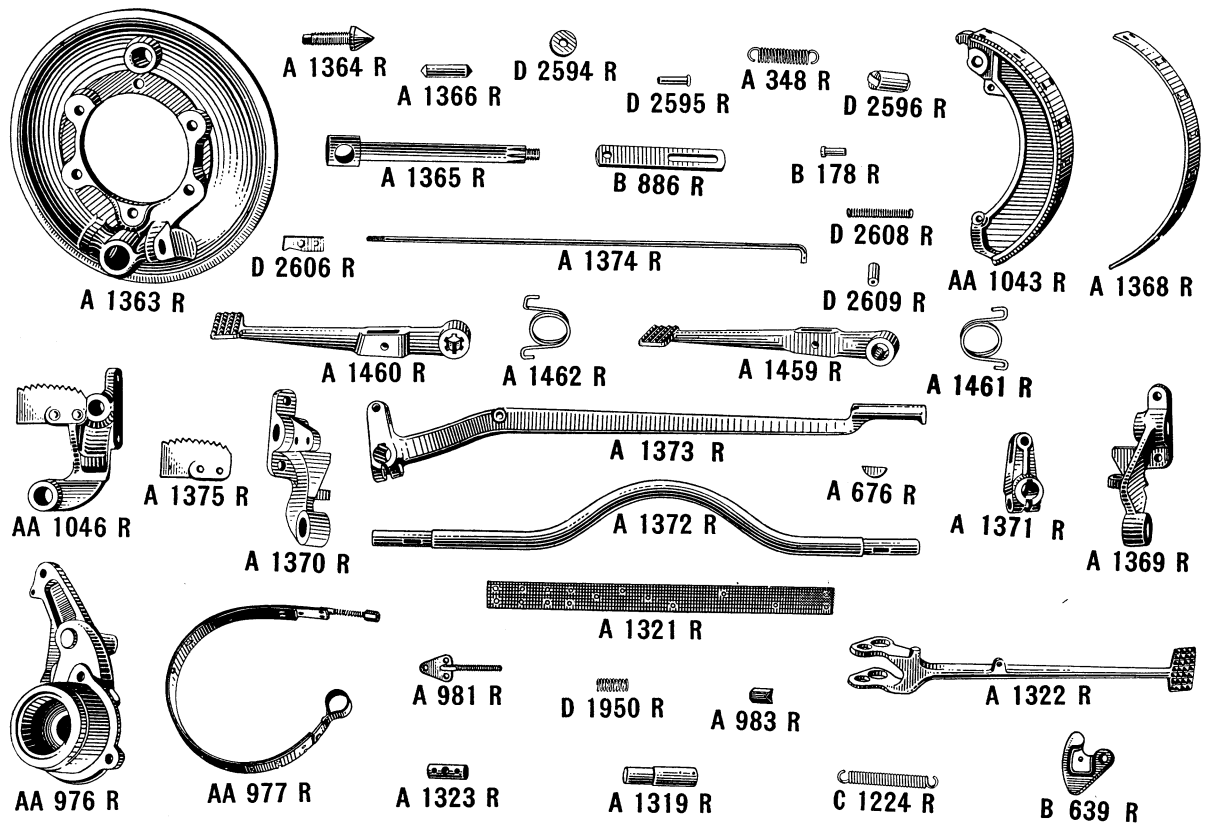

FRONT AXLE AND FRONT END SUPPORT

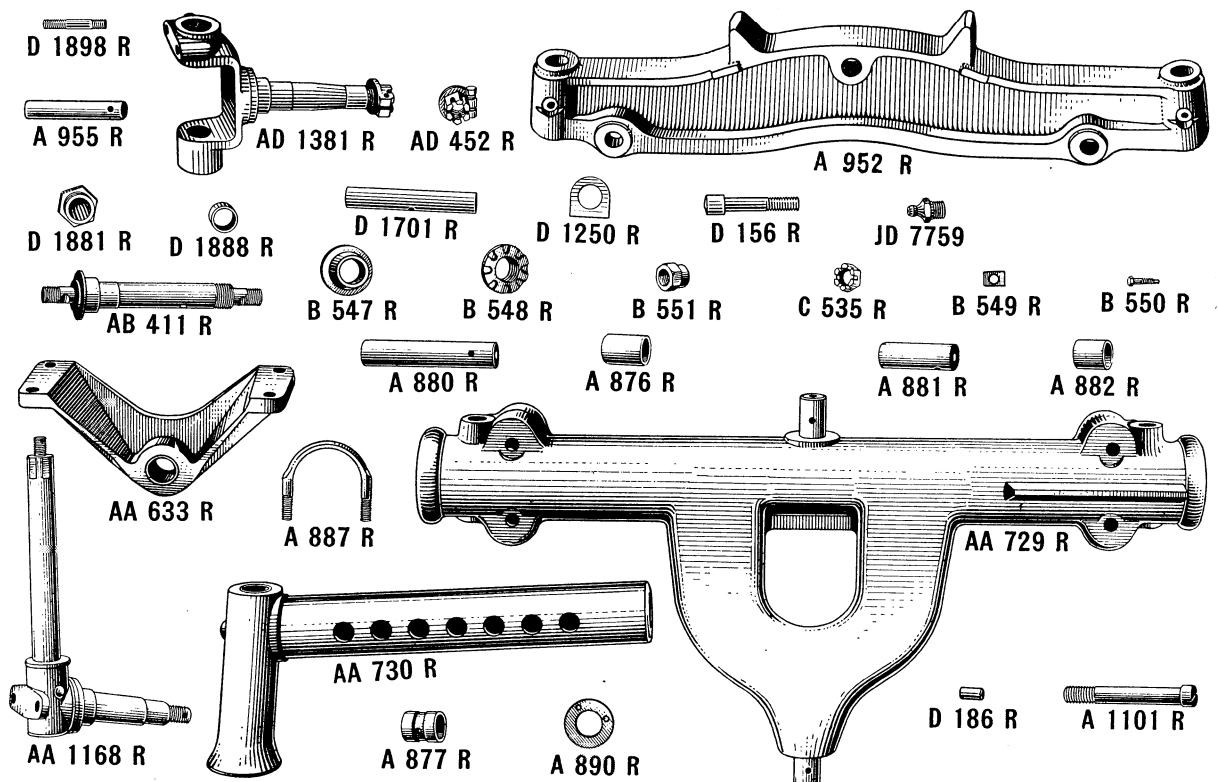

FRONT AXLE AND FRONT END SUPPORT—Continued



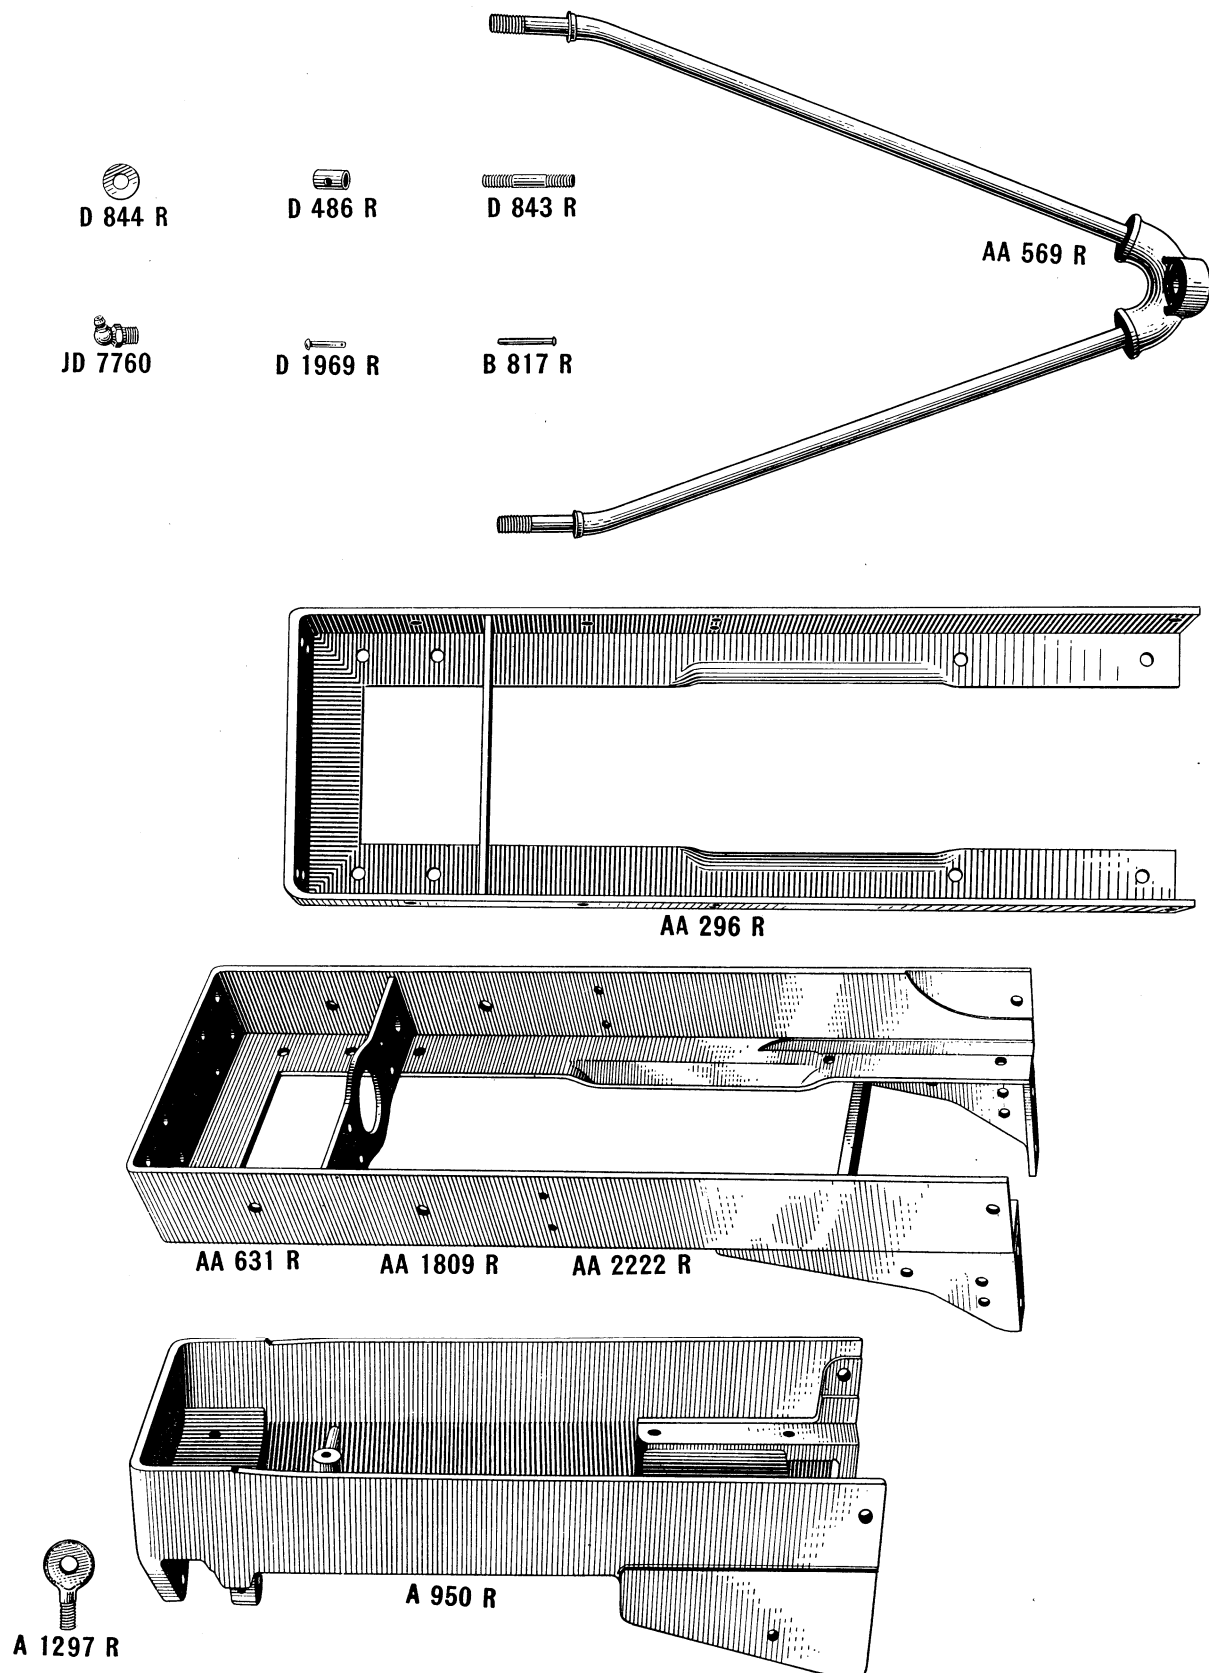


Plate No. 24


FRONT WHEELS AND FRONT WHEEL EQUIPMENT

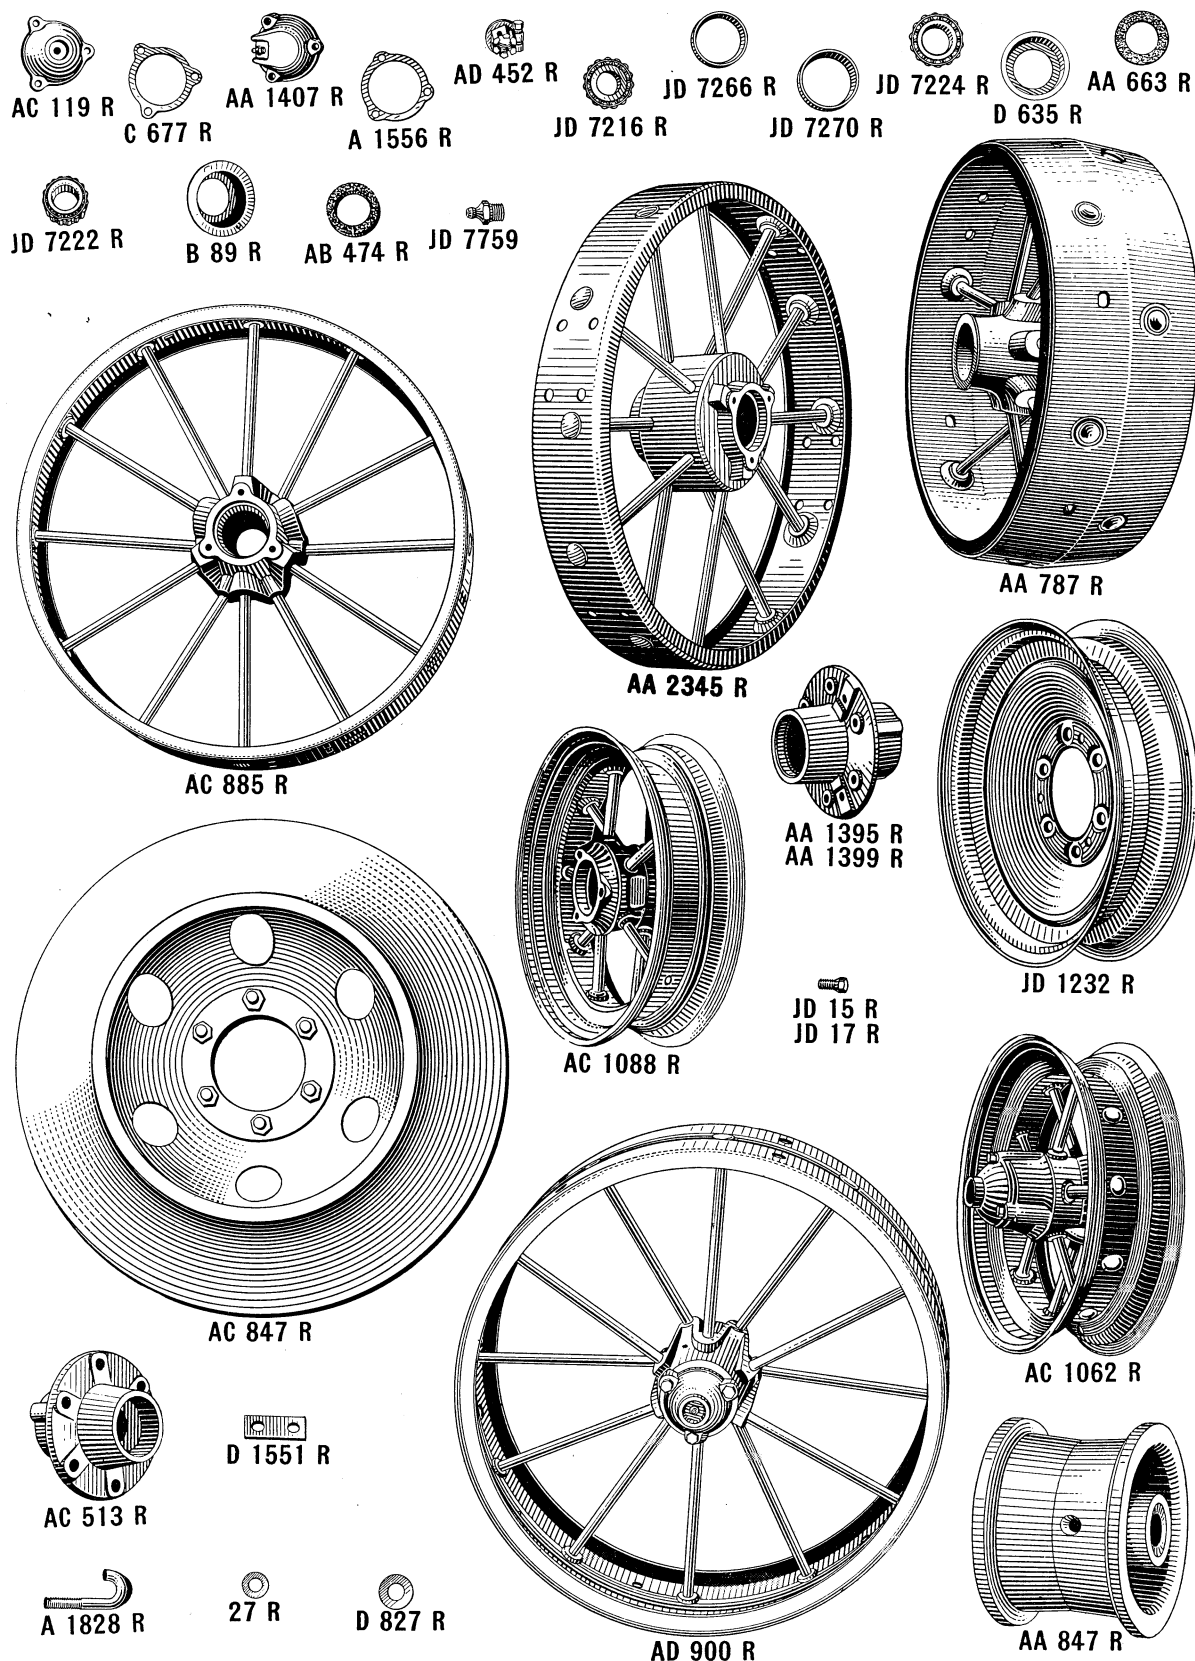

FRONT WHEELS AND FRONT WHEEL EQUIPMENT—Continued

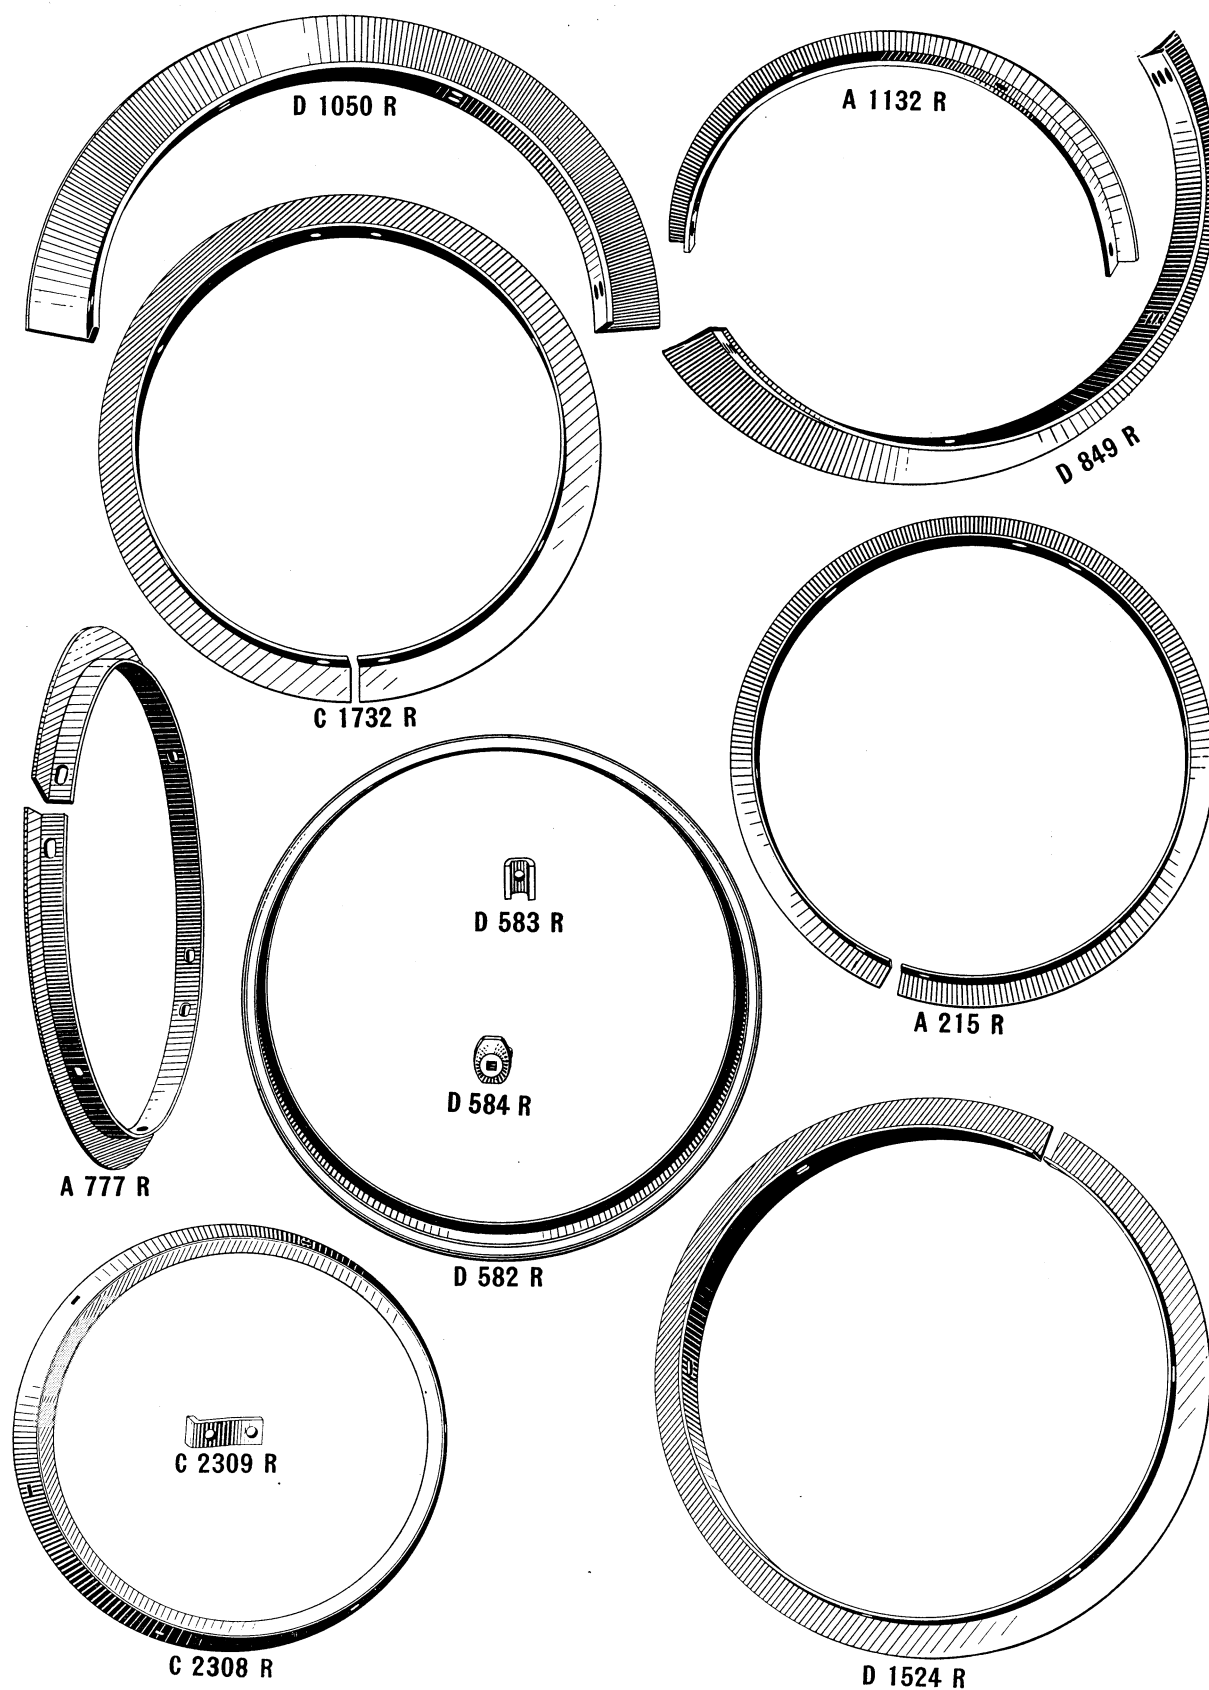

PEDESTAL

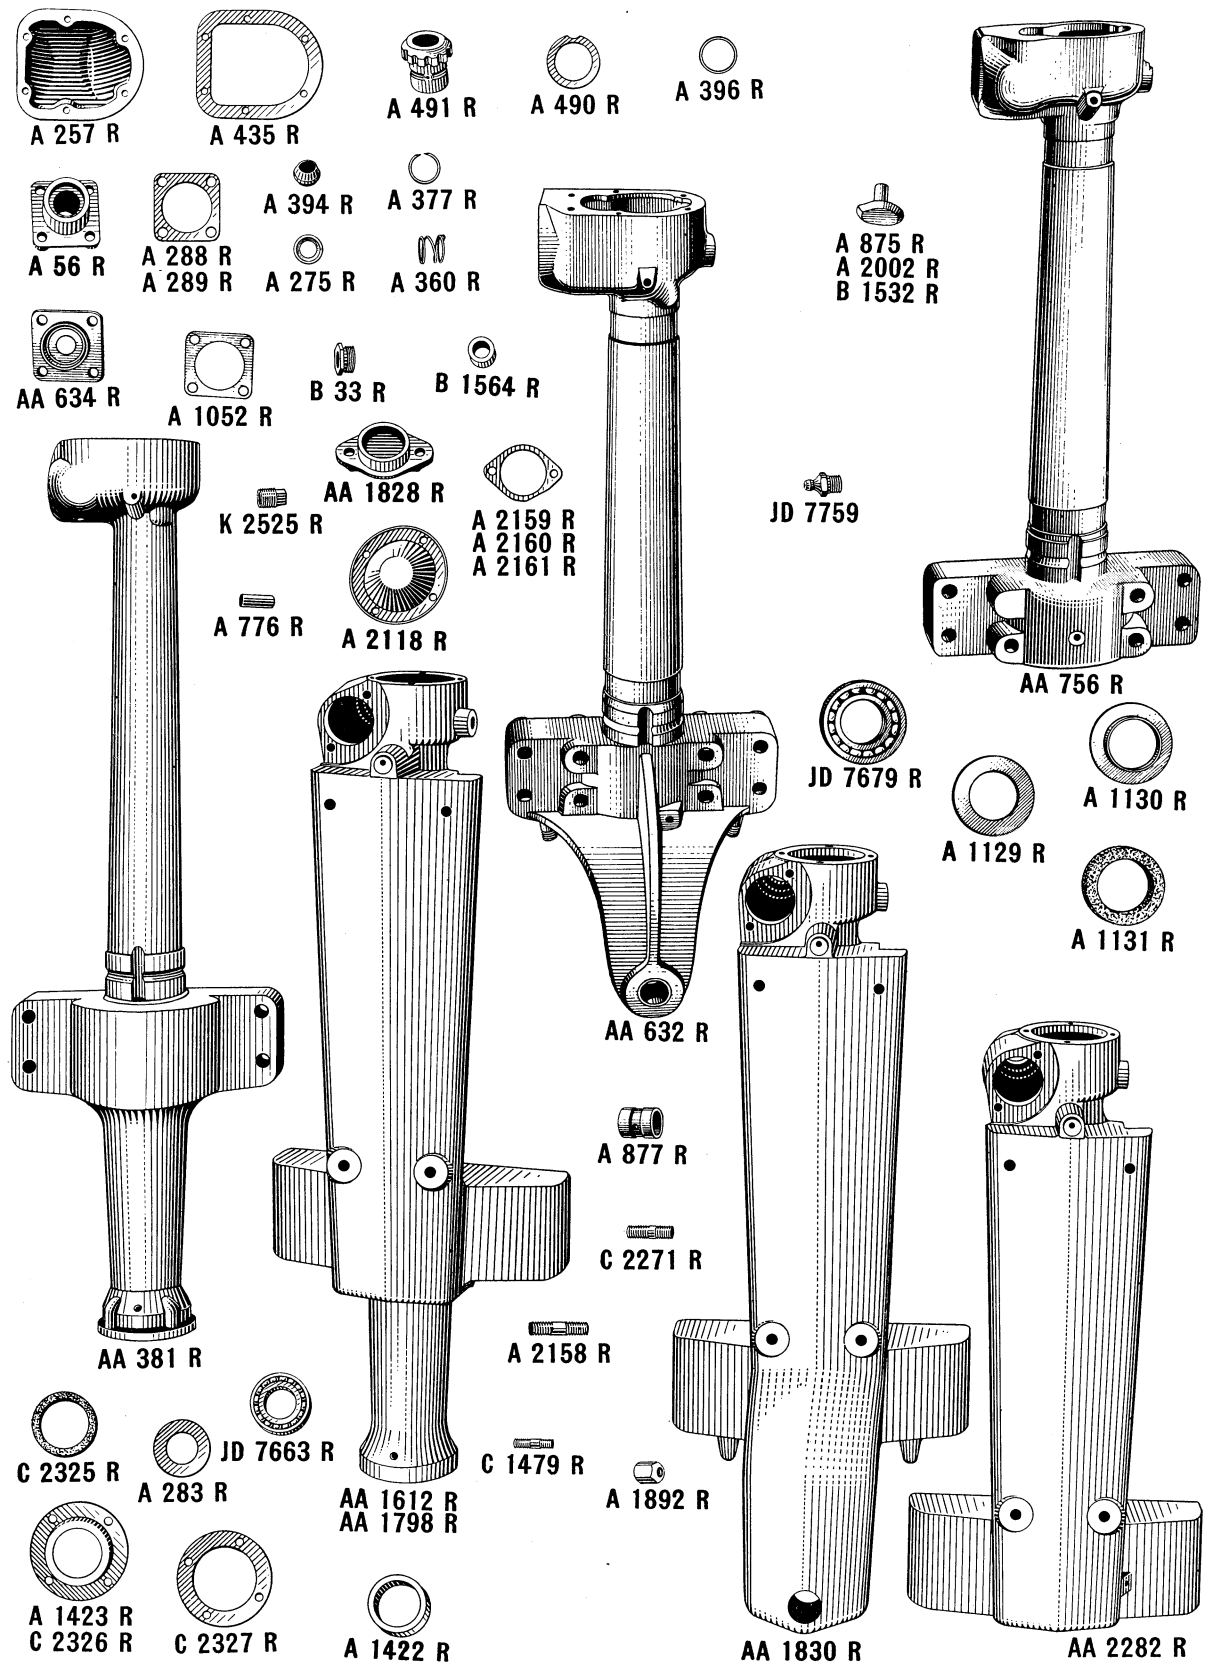

STEERING PARTS

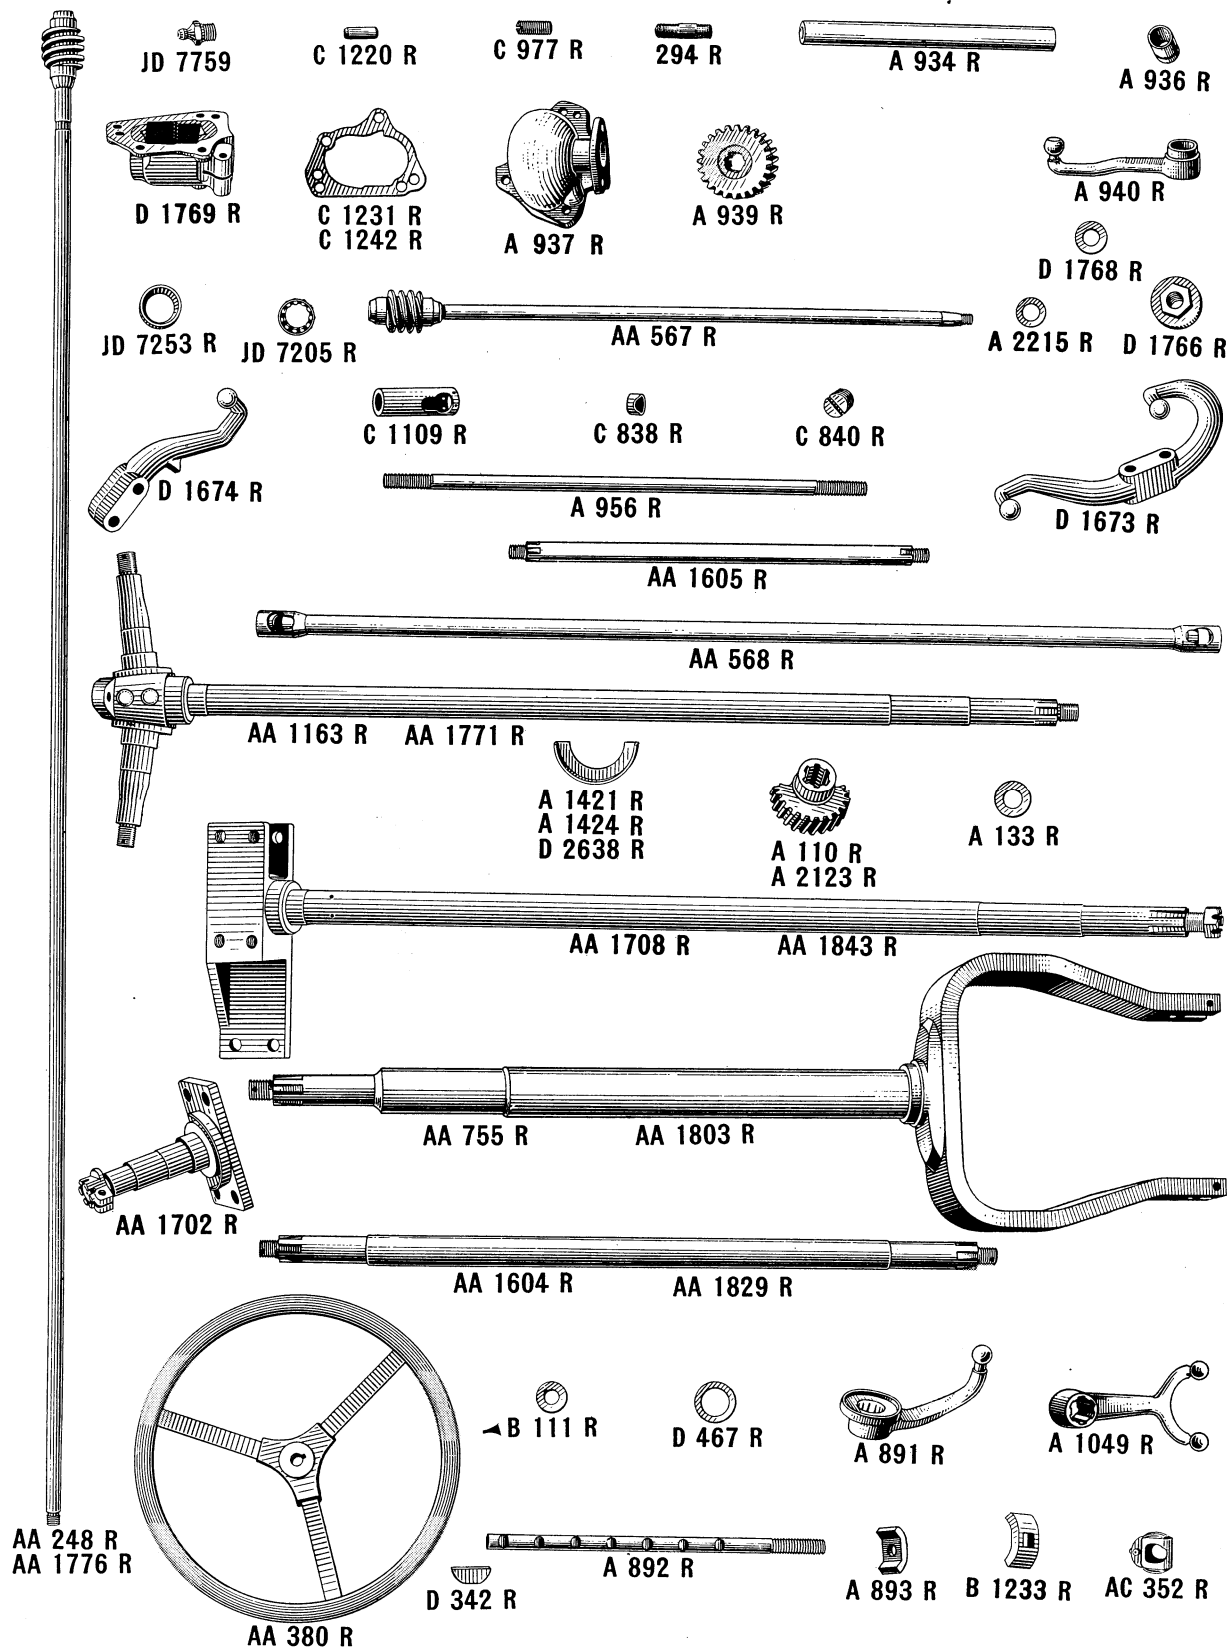


Plate No. 28

DRAWBAR



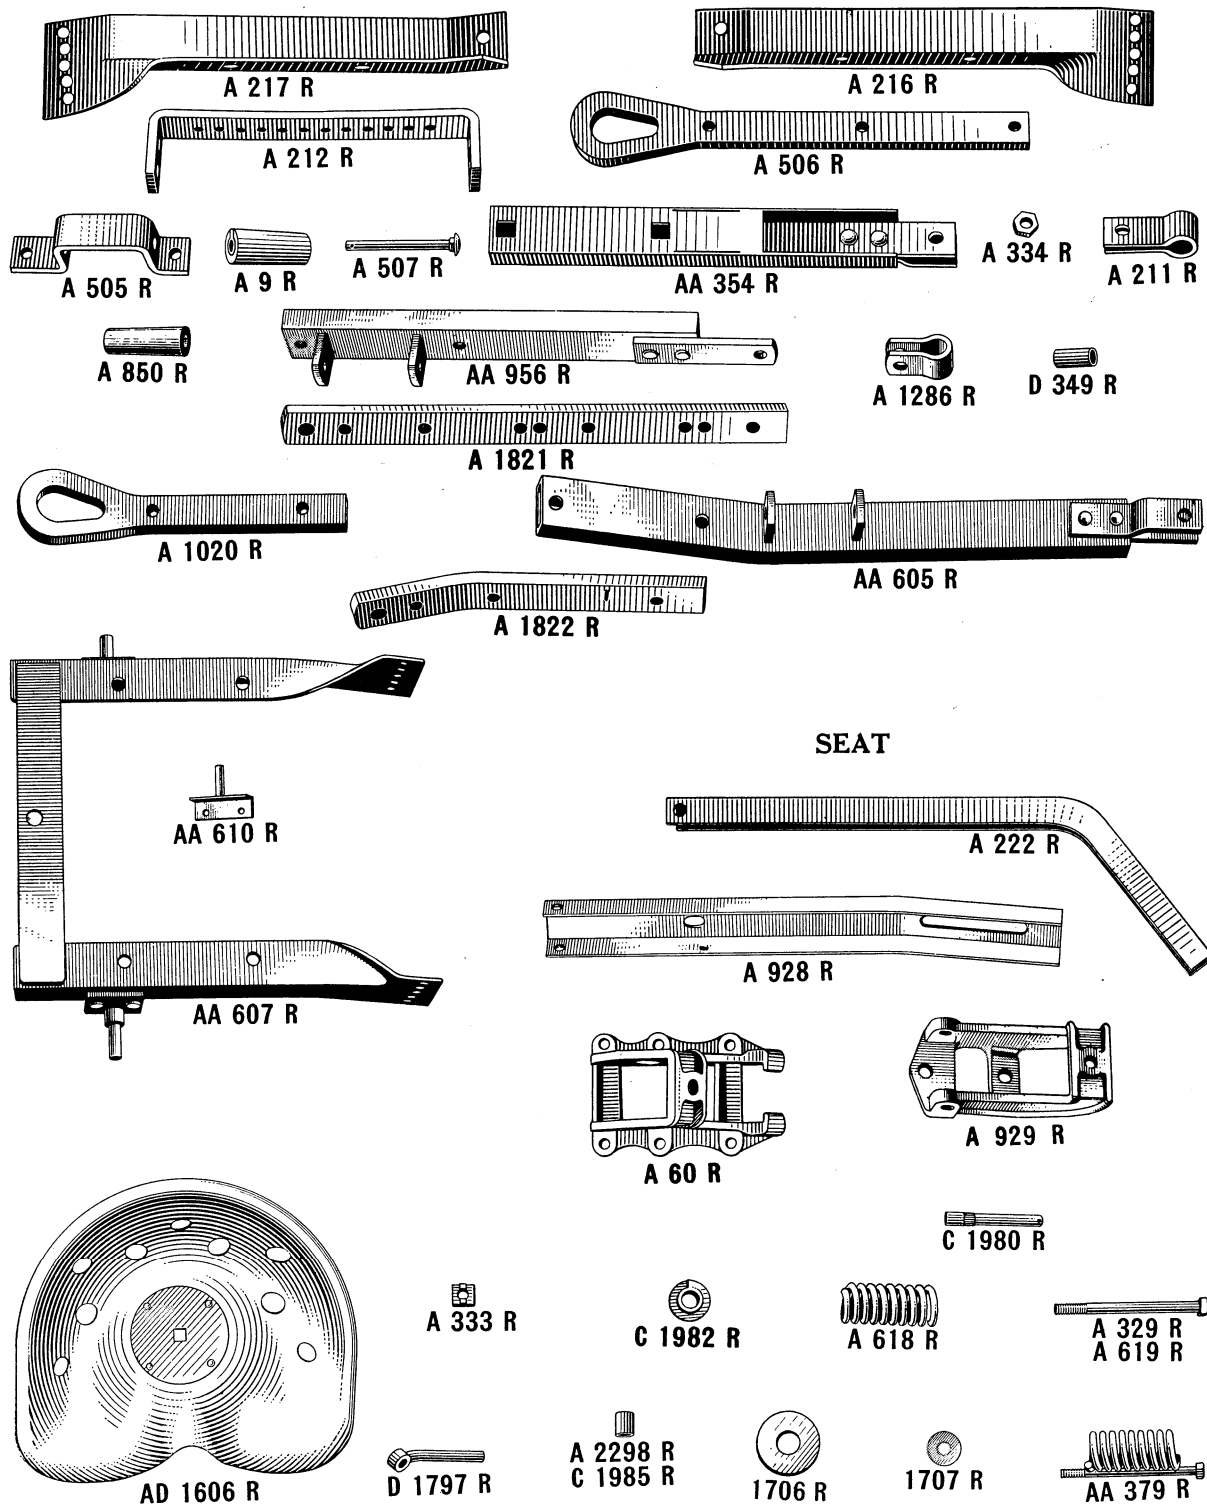


Plate No. 29


PLATFORM

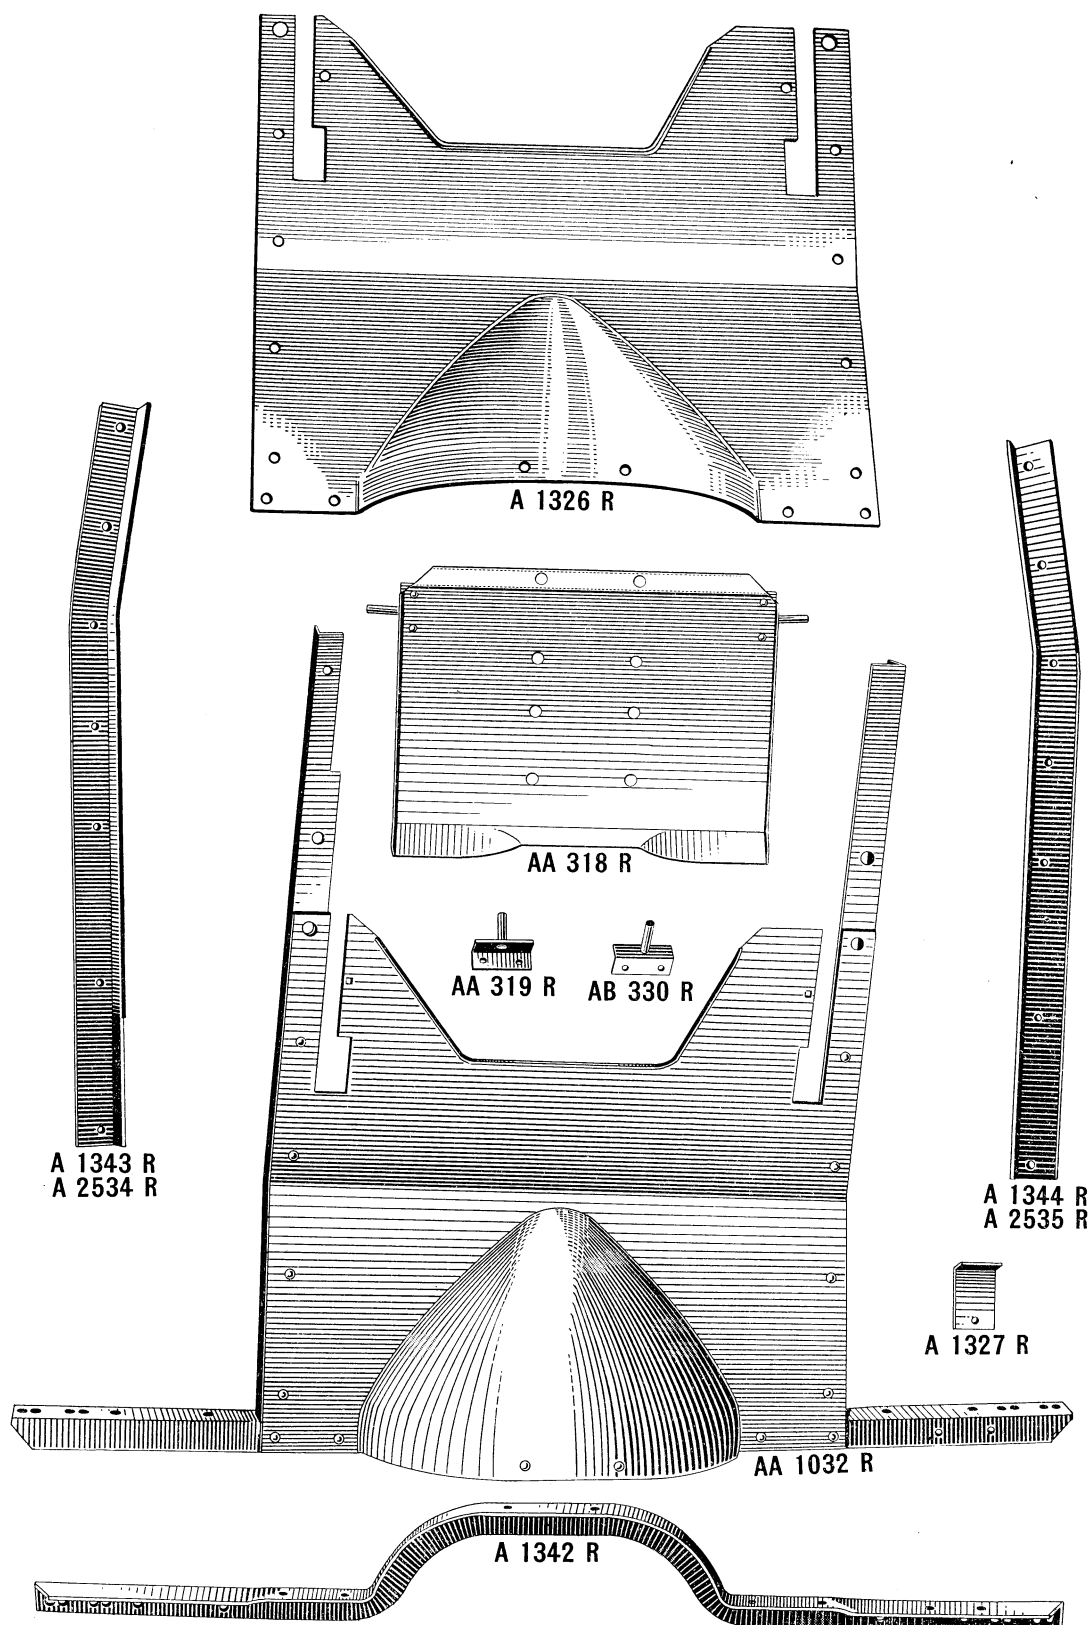


PLATFORM—Continued

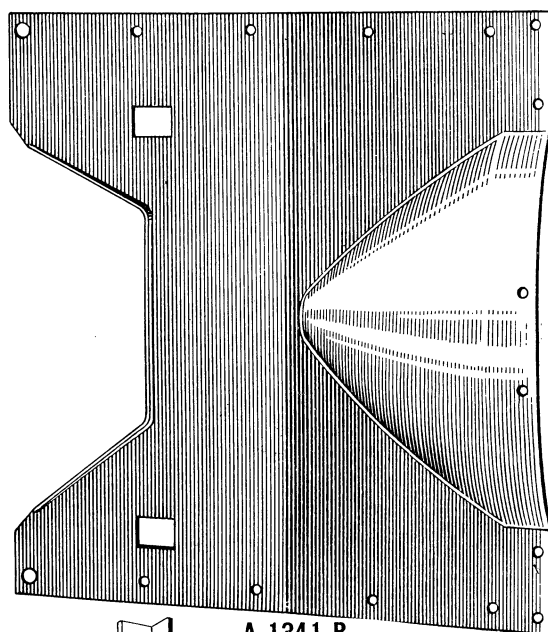



A 1341 R

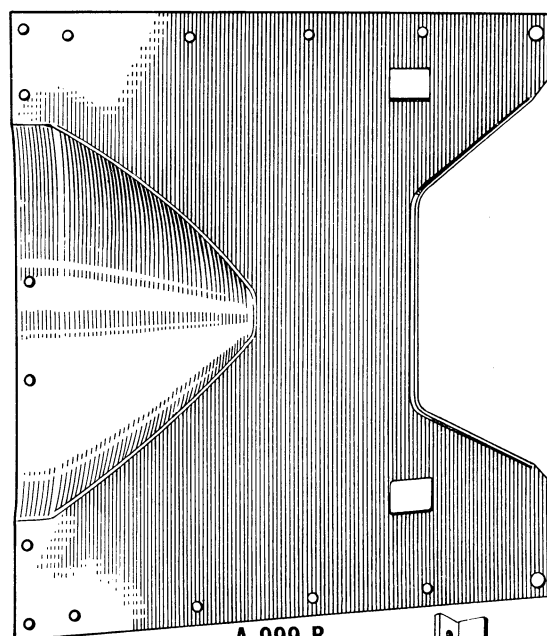

A 999 R

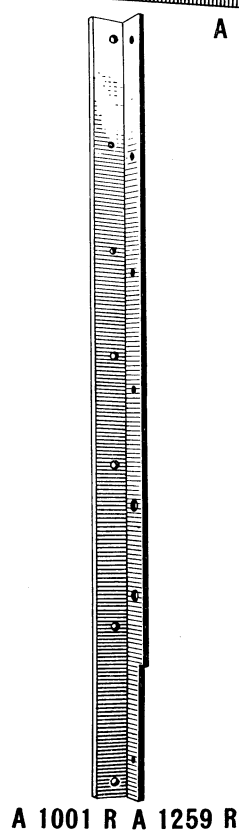


A 1001 R A 1259 R

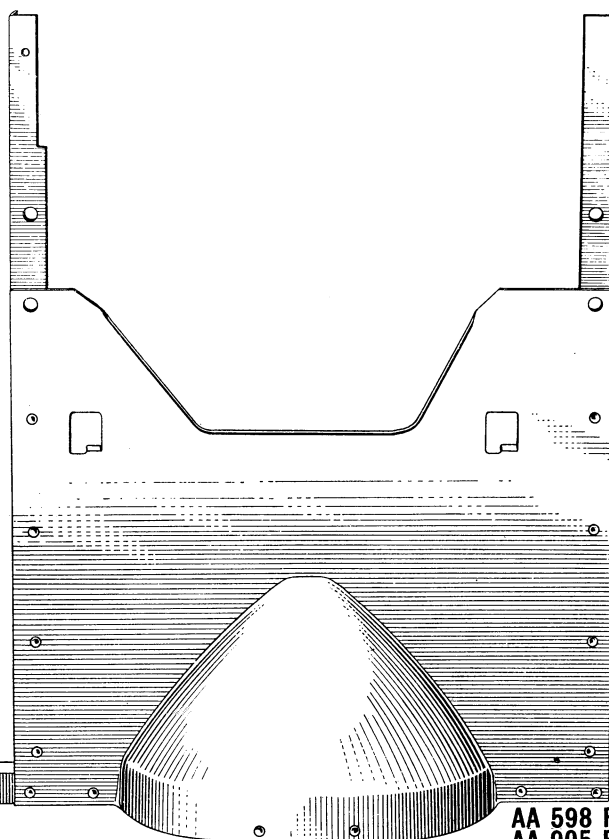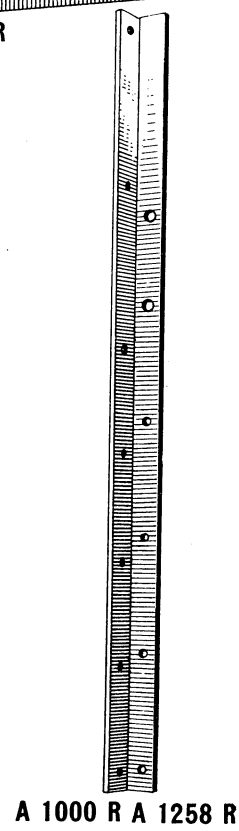A 1002 R
A 1260 R


A 1000 R A 1258 R

AA 598 R
AA 905 R
AA 1025 R

PLATFORM—Continued

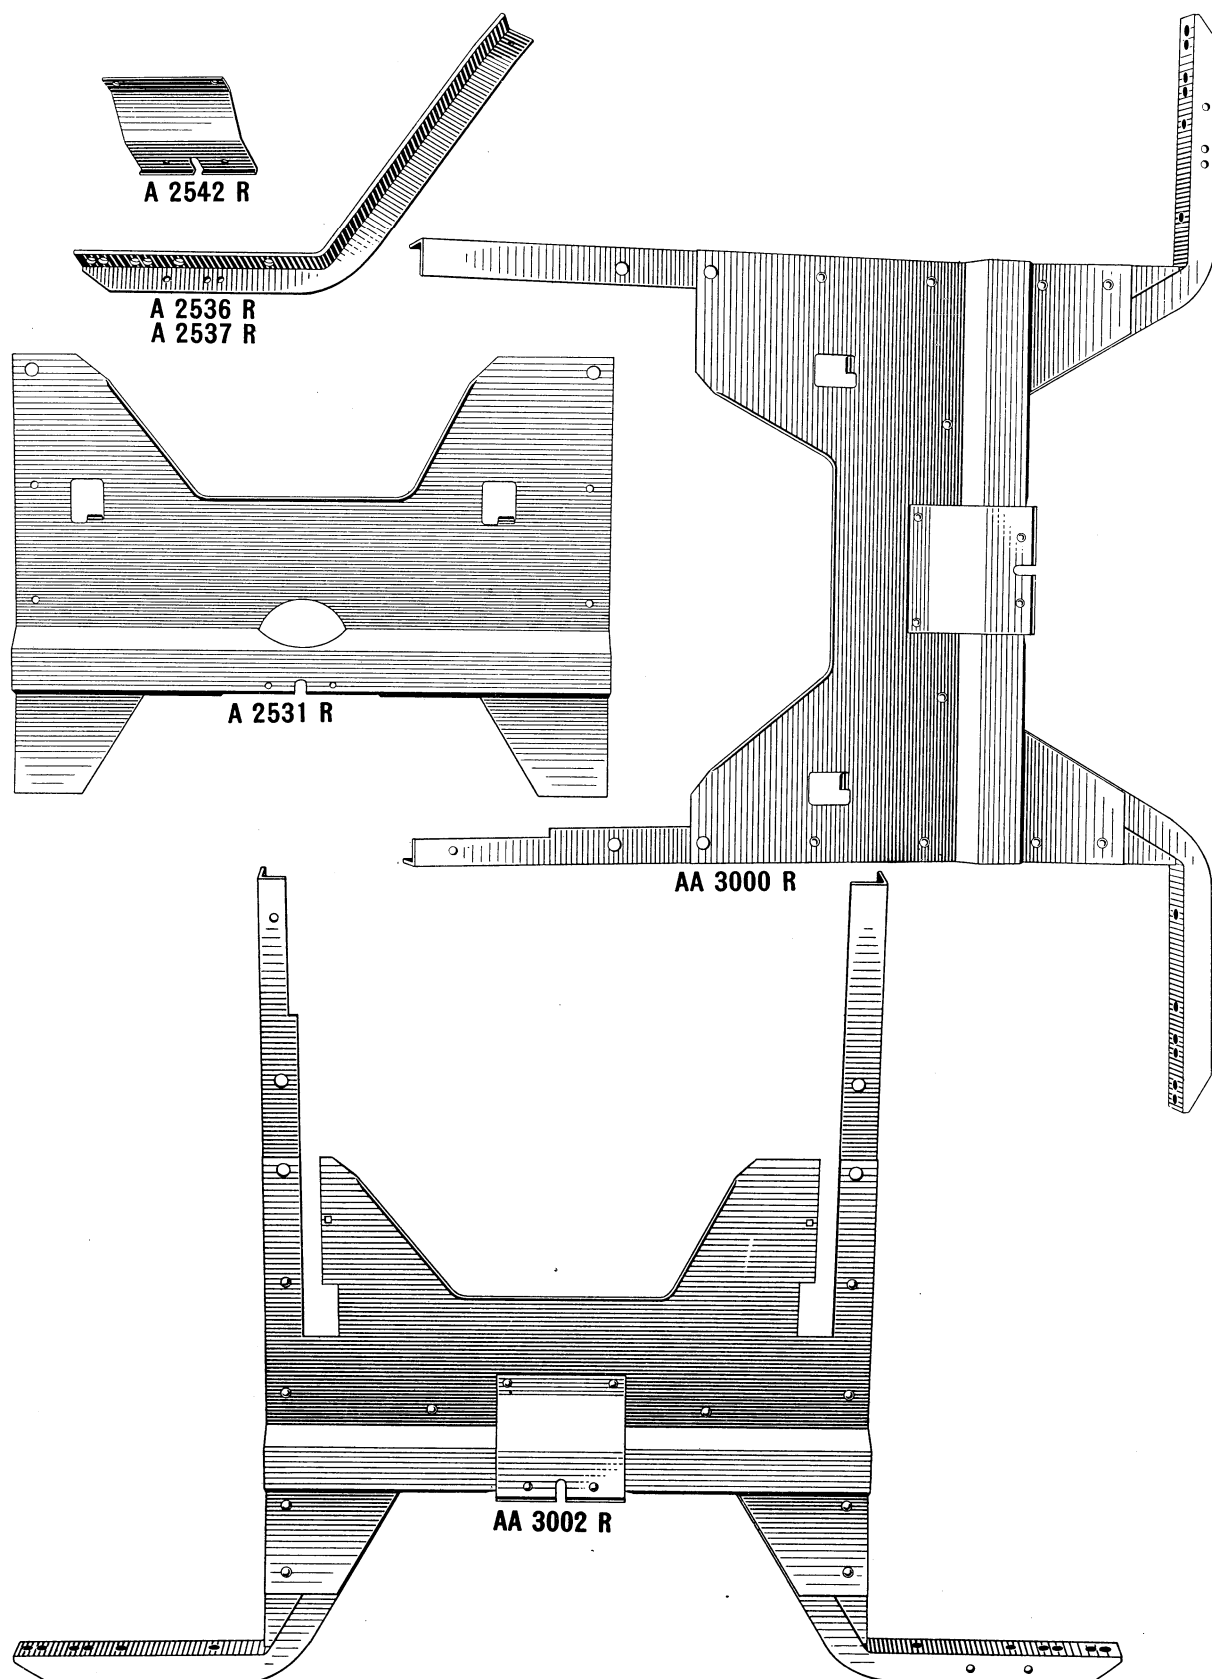

FENDERS

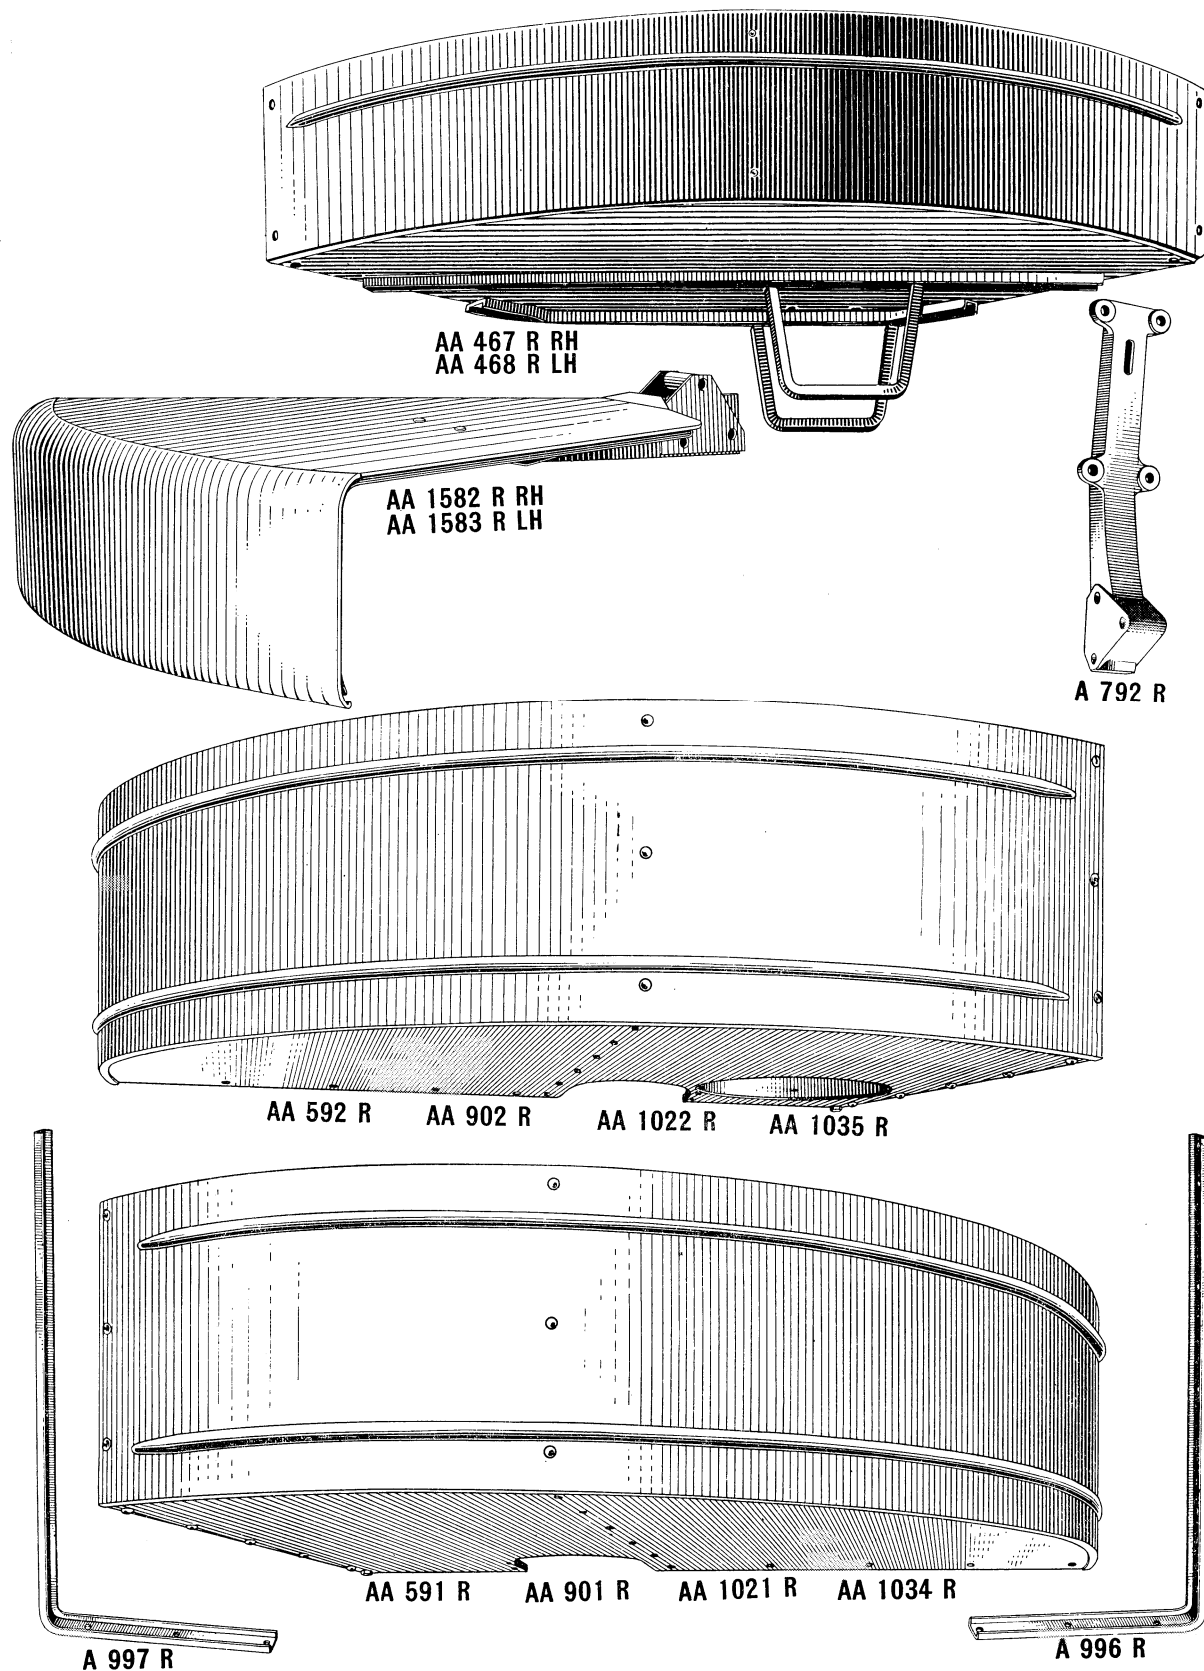

FENDERS—Continued




A 1078 R



A 1079 R



A 1080 R

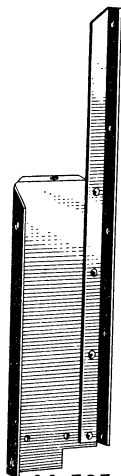


AA 595 R




A 241 R




A 1081 R

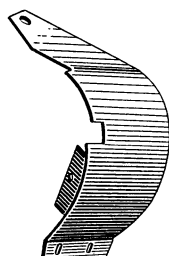


AA 987 R

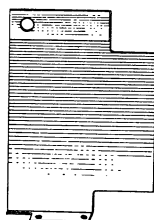

A 968 R

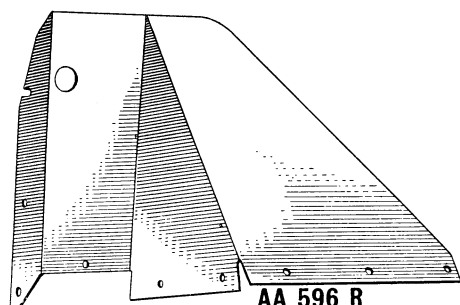

AA 596 R

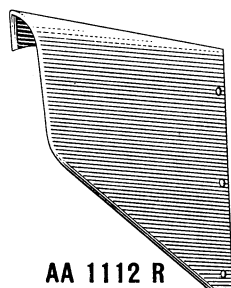

AA 1112 R




A 963 R




A 1359 R



A 1057 R







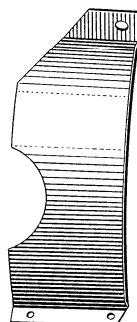


A 969 R

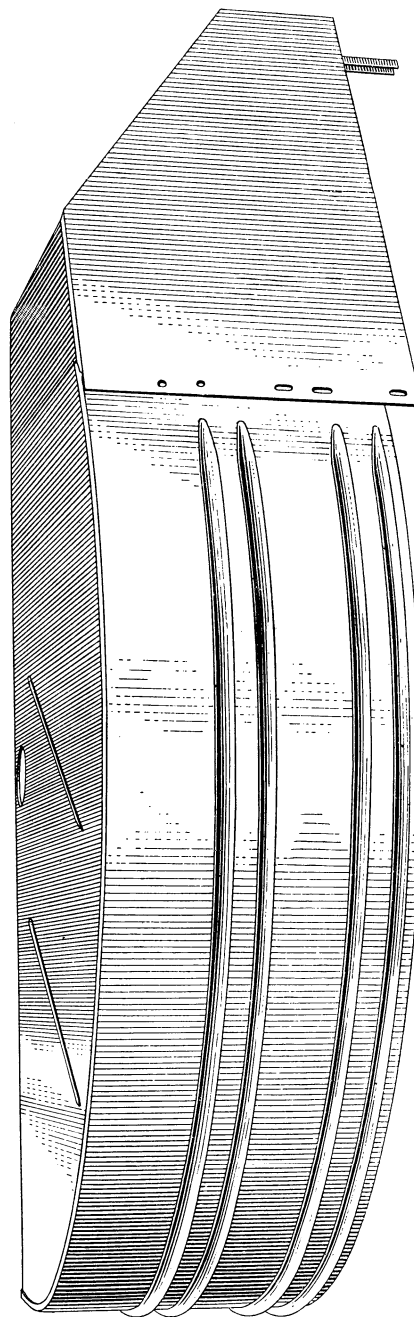


AA 692 R RH
AA 693 R LH
AA 907 R RH
AA 908 R LH
AA 1027 R RH
AA 1028 R LH

 
MAGNETOS, SPARK PLUGS, AND CABLES

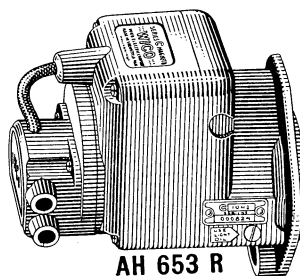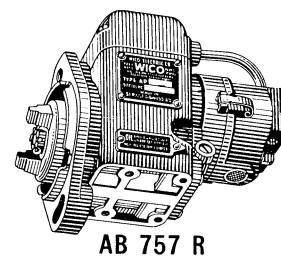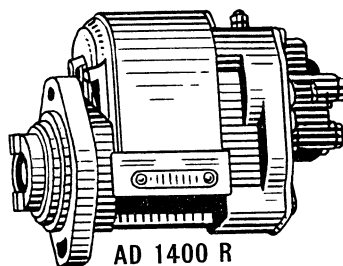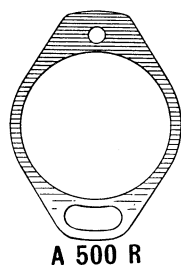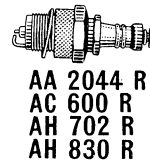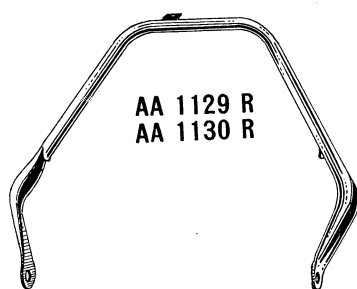

AA201 R AND AB706 R FAIRBANKS-MORSE MAGNETO PARTS

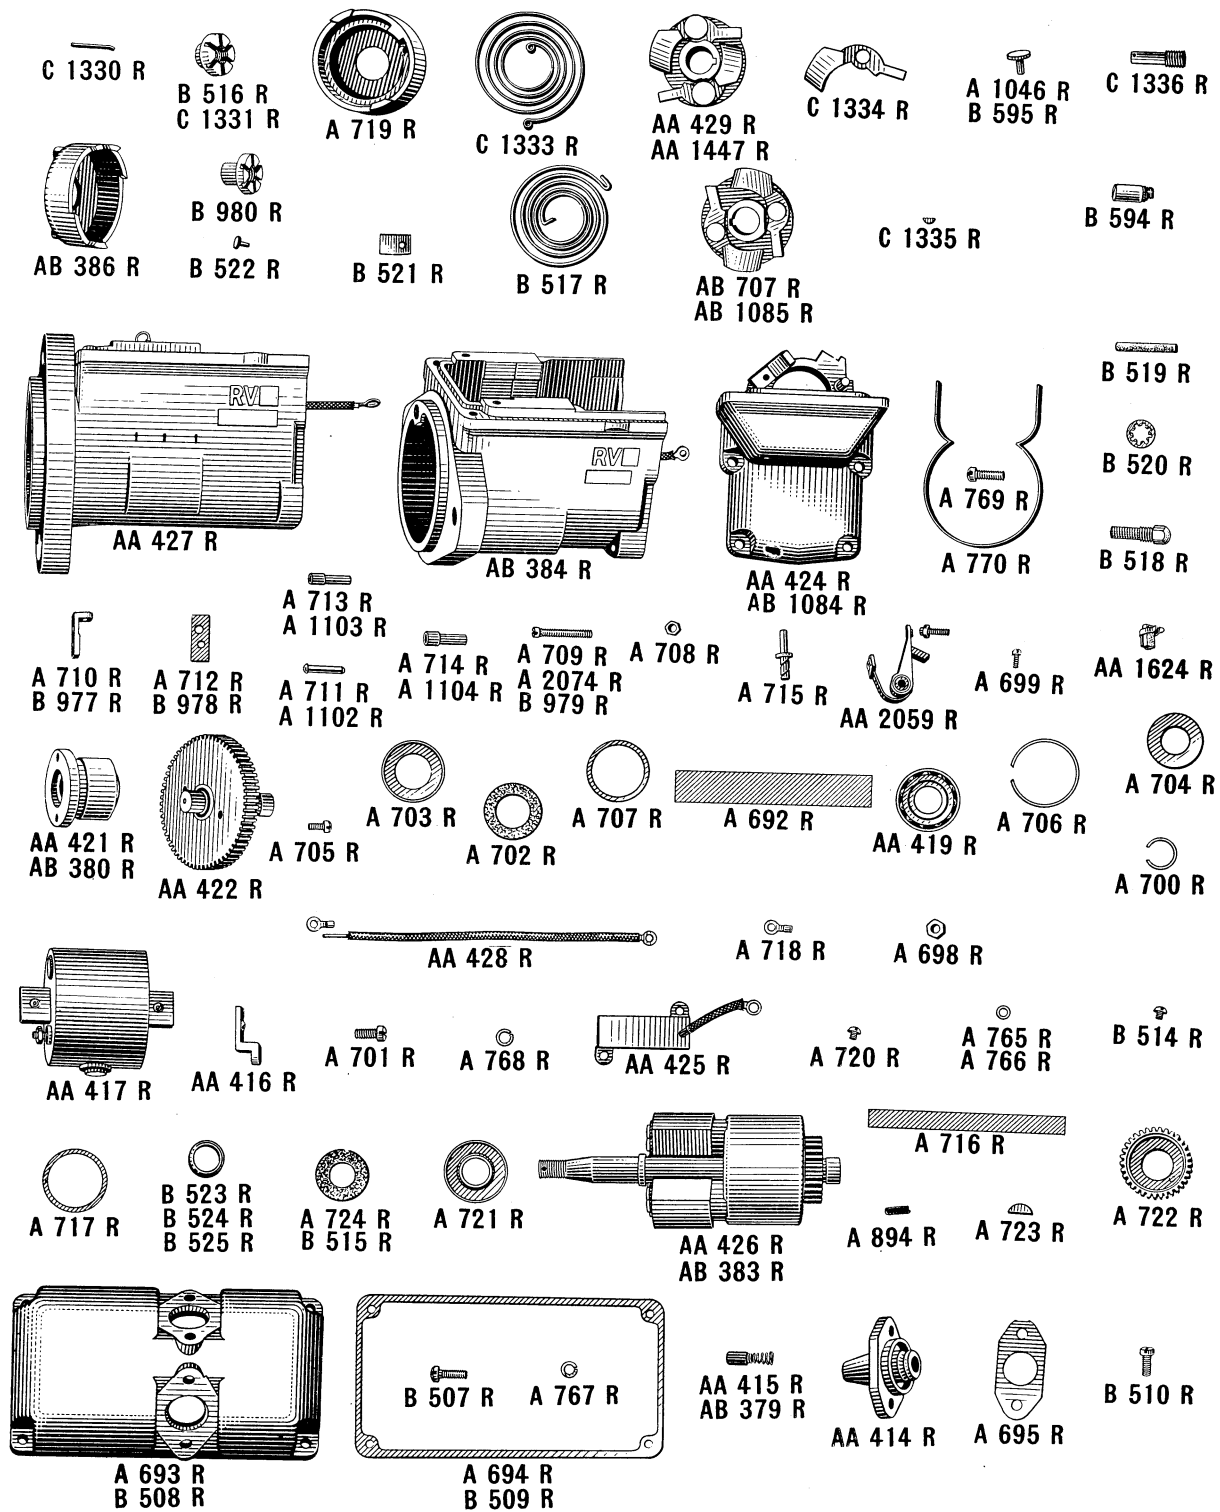

AD1400 R EDISON-SPLITDORF MAGNETO PARTS

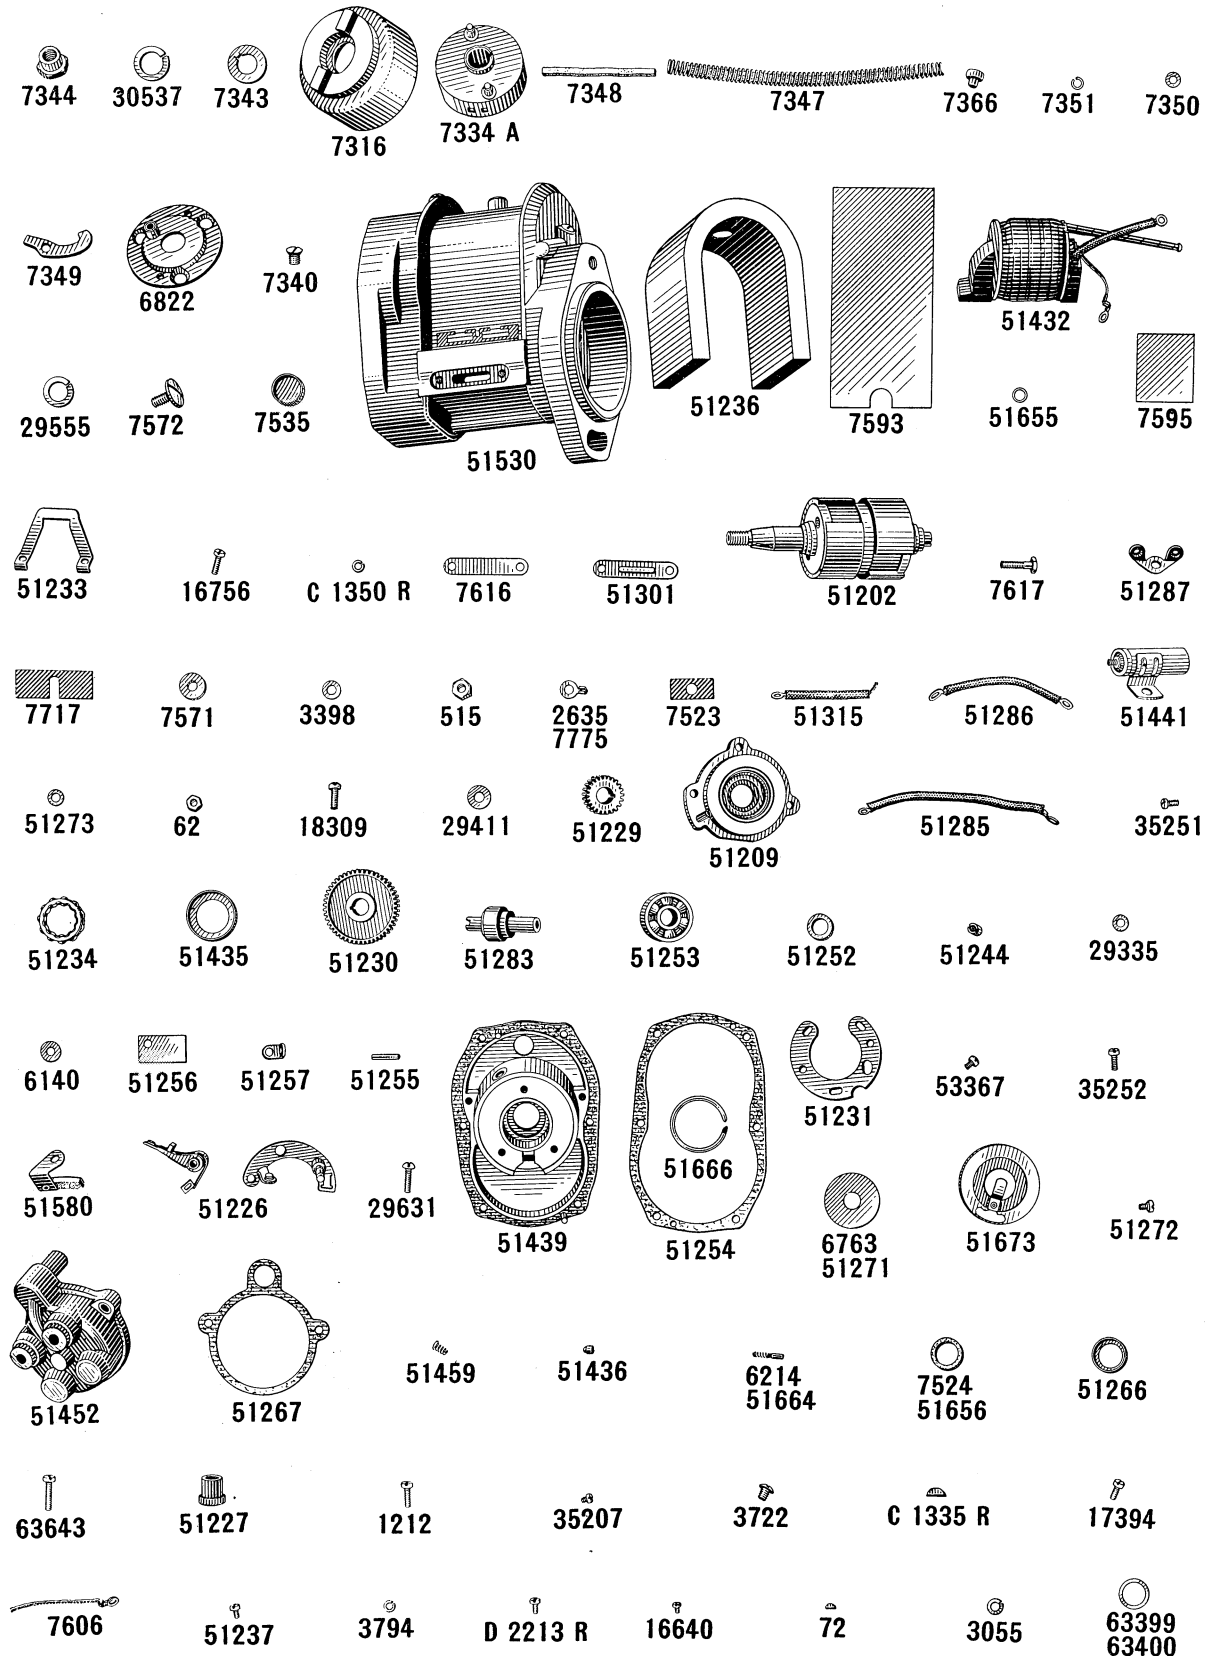

AB757 R WICO MAGNETO PARTS

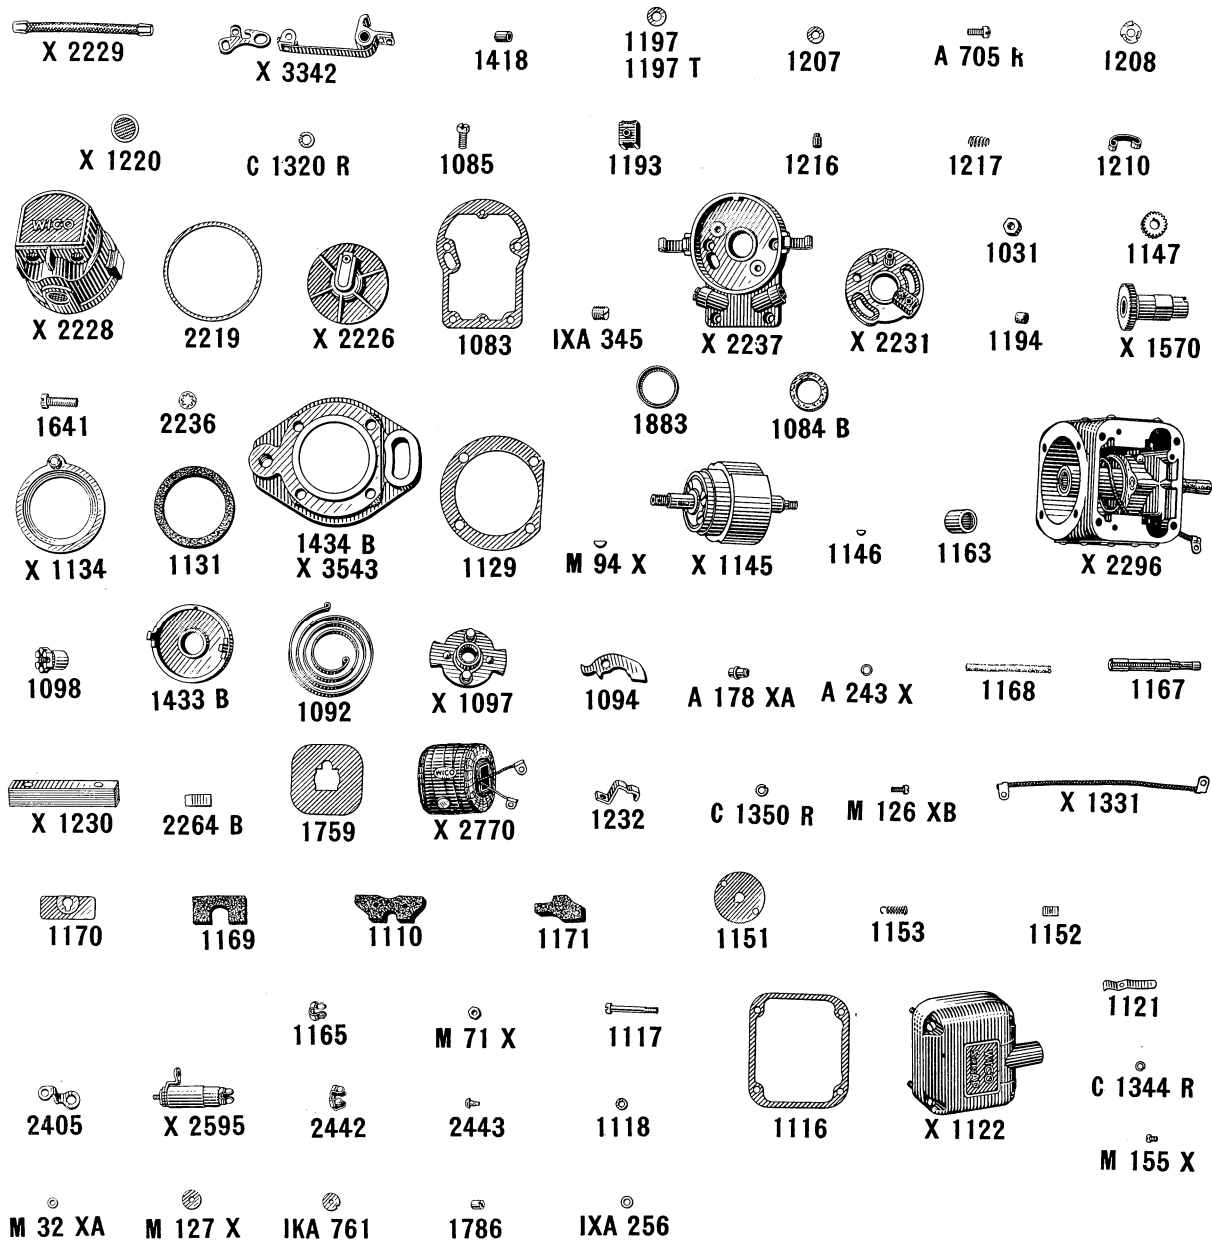


Plate No. 38

AH653 R WICO MAGNETO PARTS


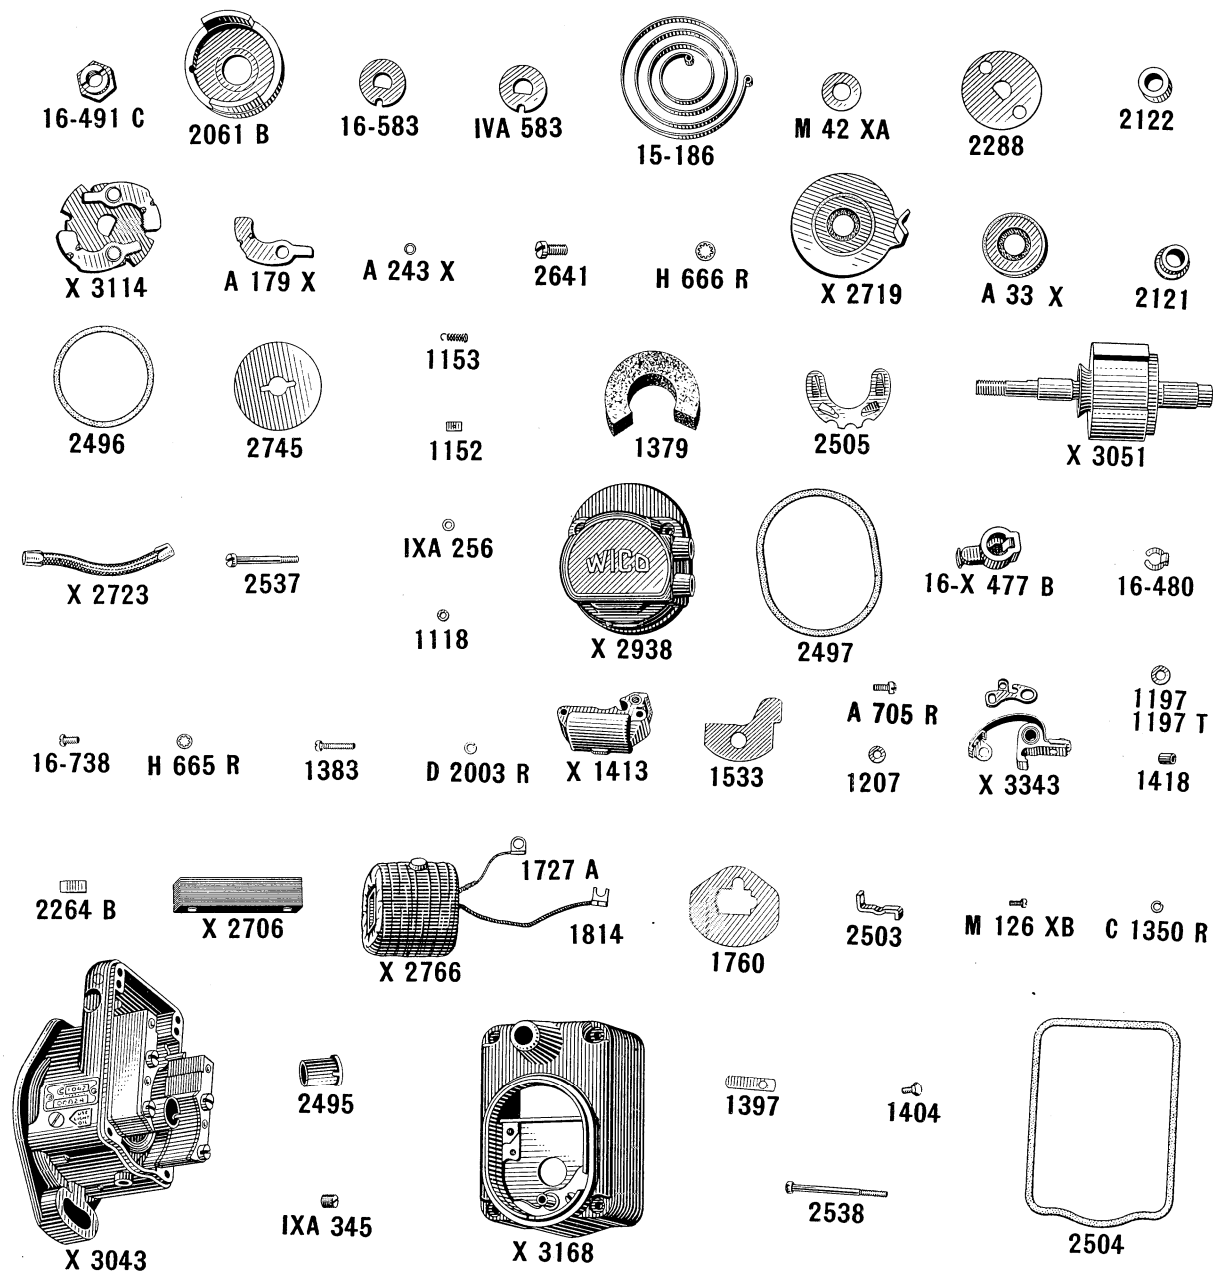


Plate No. 39

AA200 R AND AA580 R SCHEBLER CARBURETORS

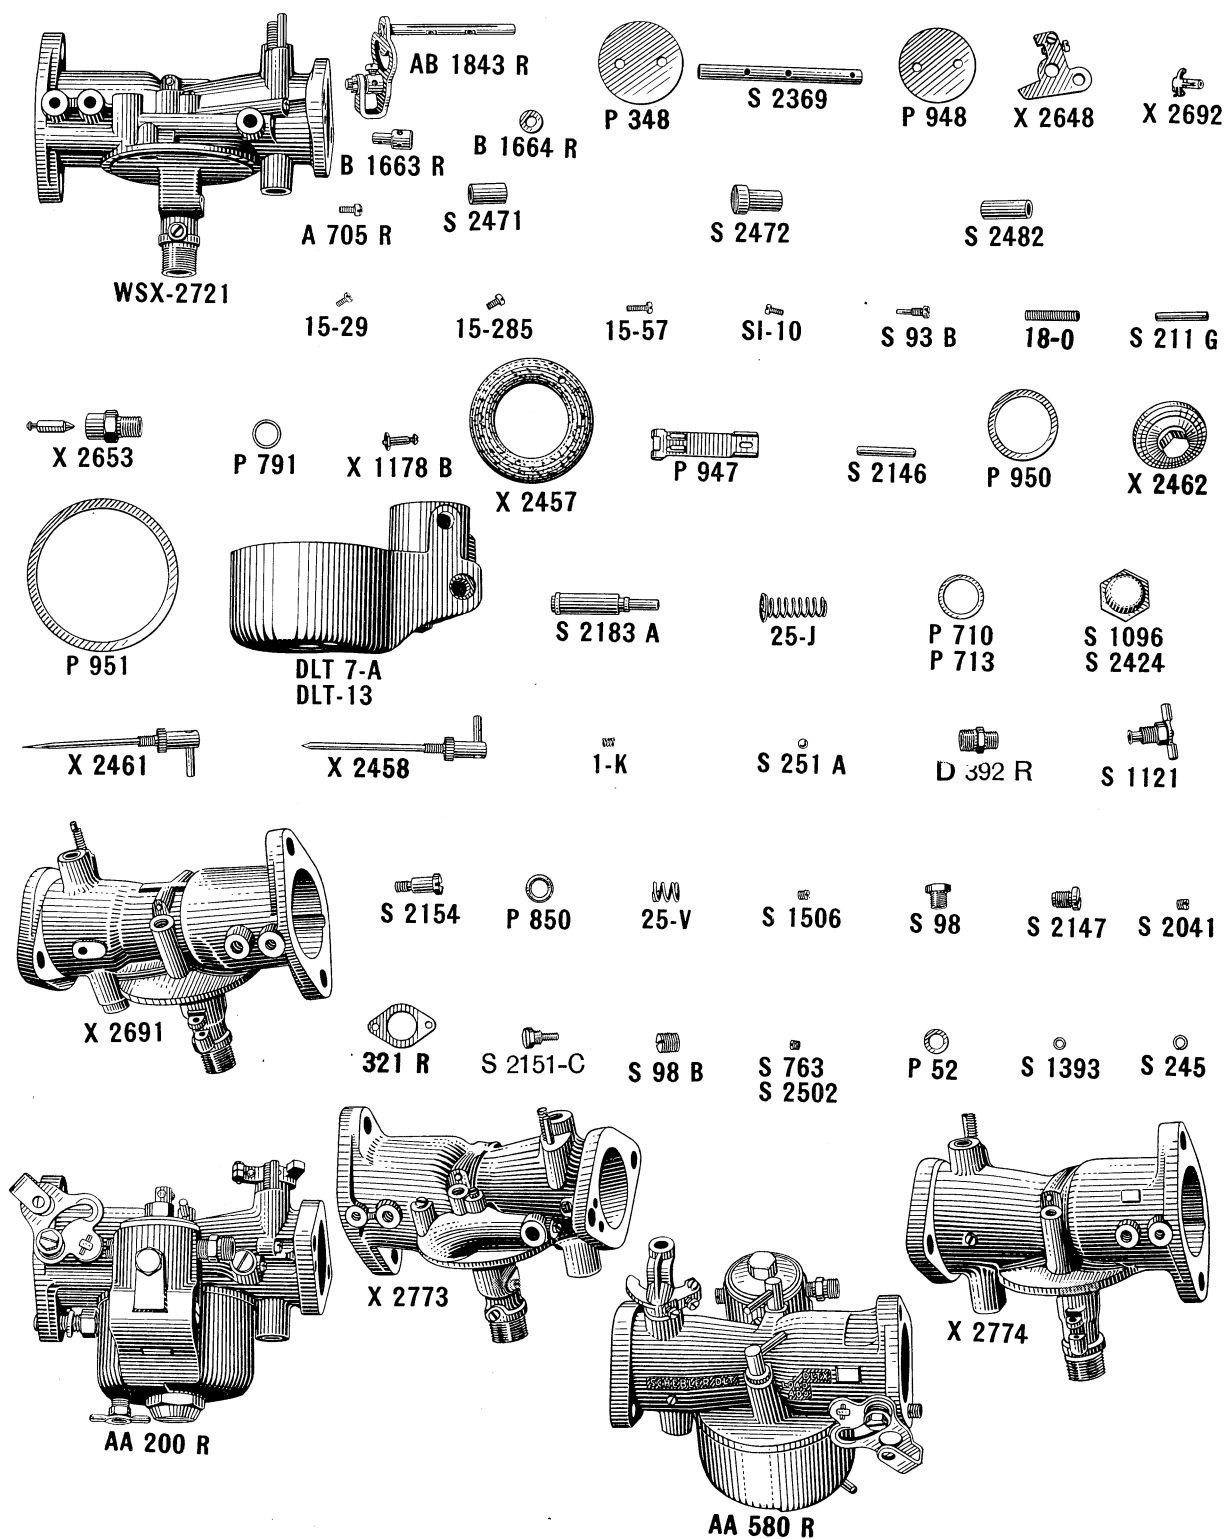

AA2499 R SCHEBLER CARBURETOR PARTS



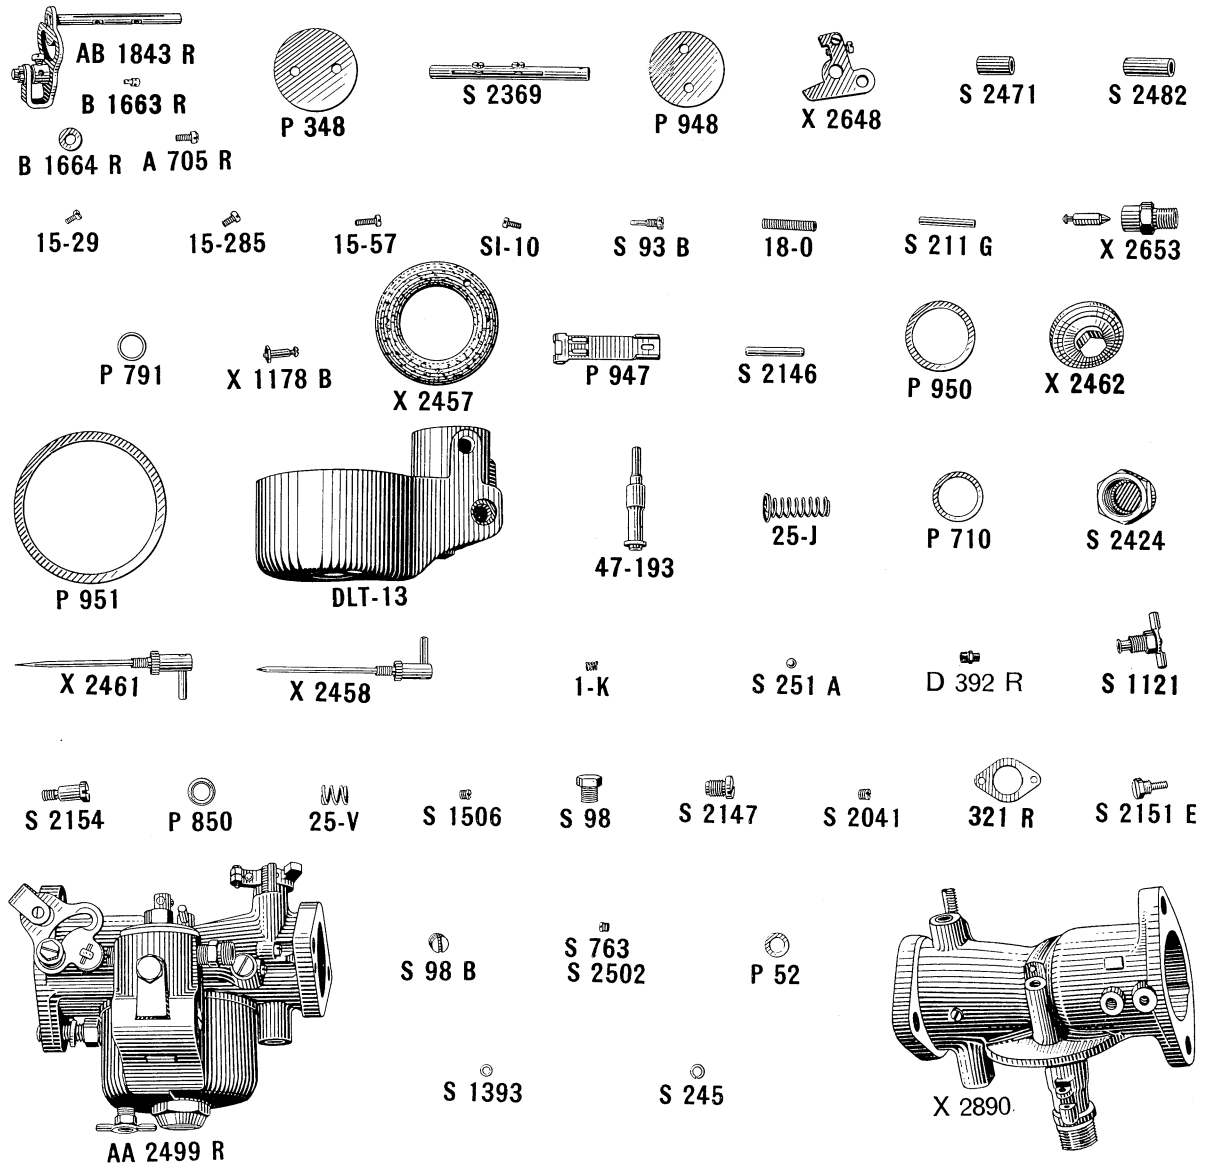


Plate No. 41


AIR CLEANER

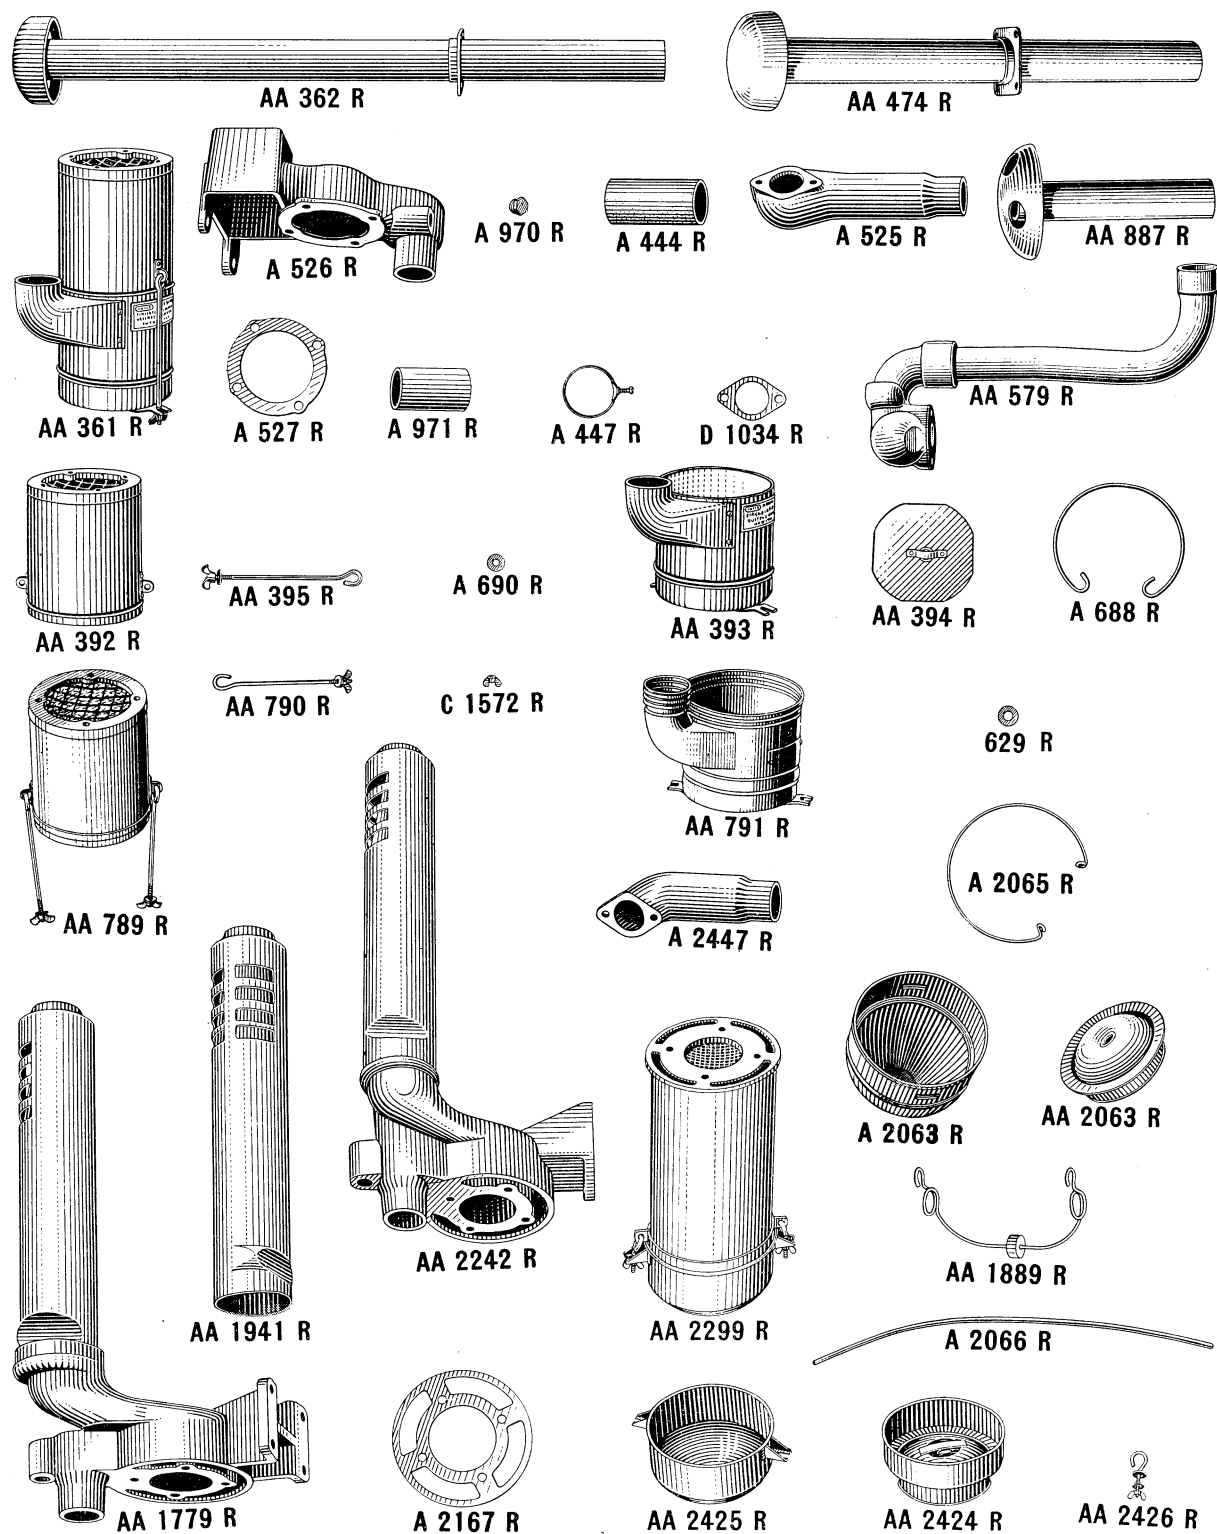

TOOL BOX AND TOOLS

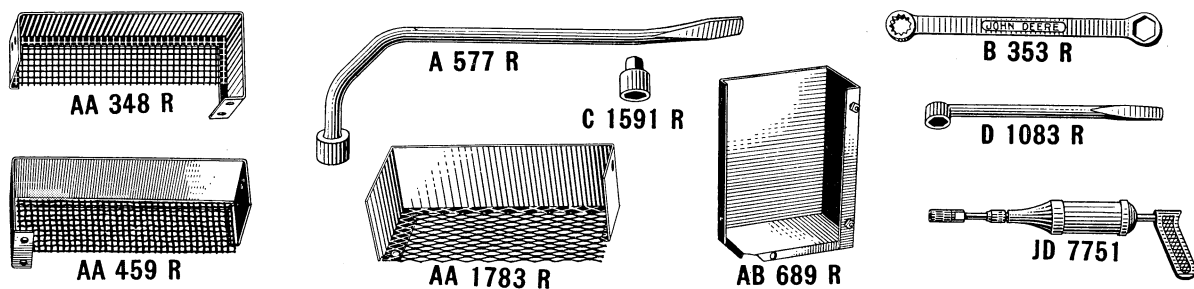

POWER SHAFT PARTS

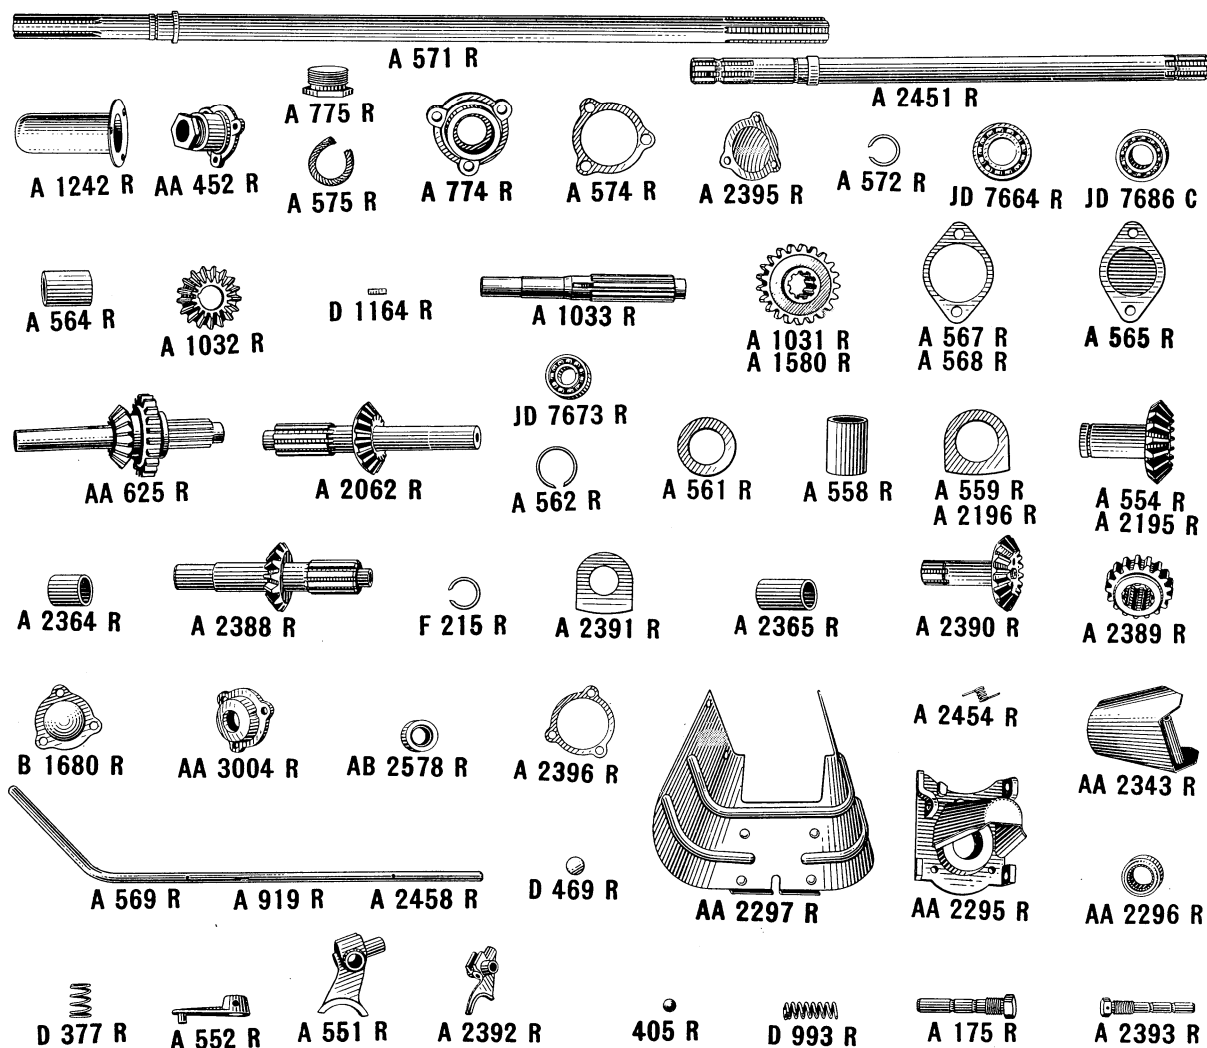

POWER LIFT



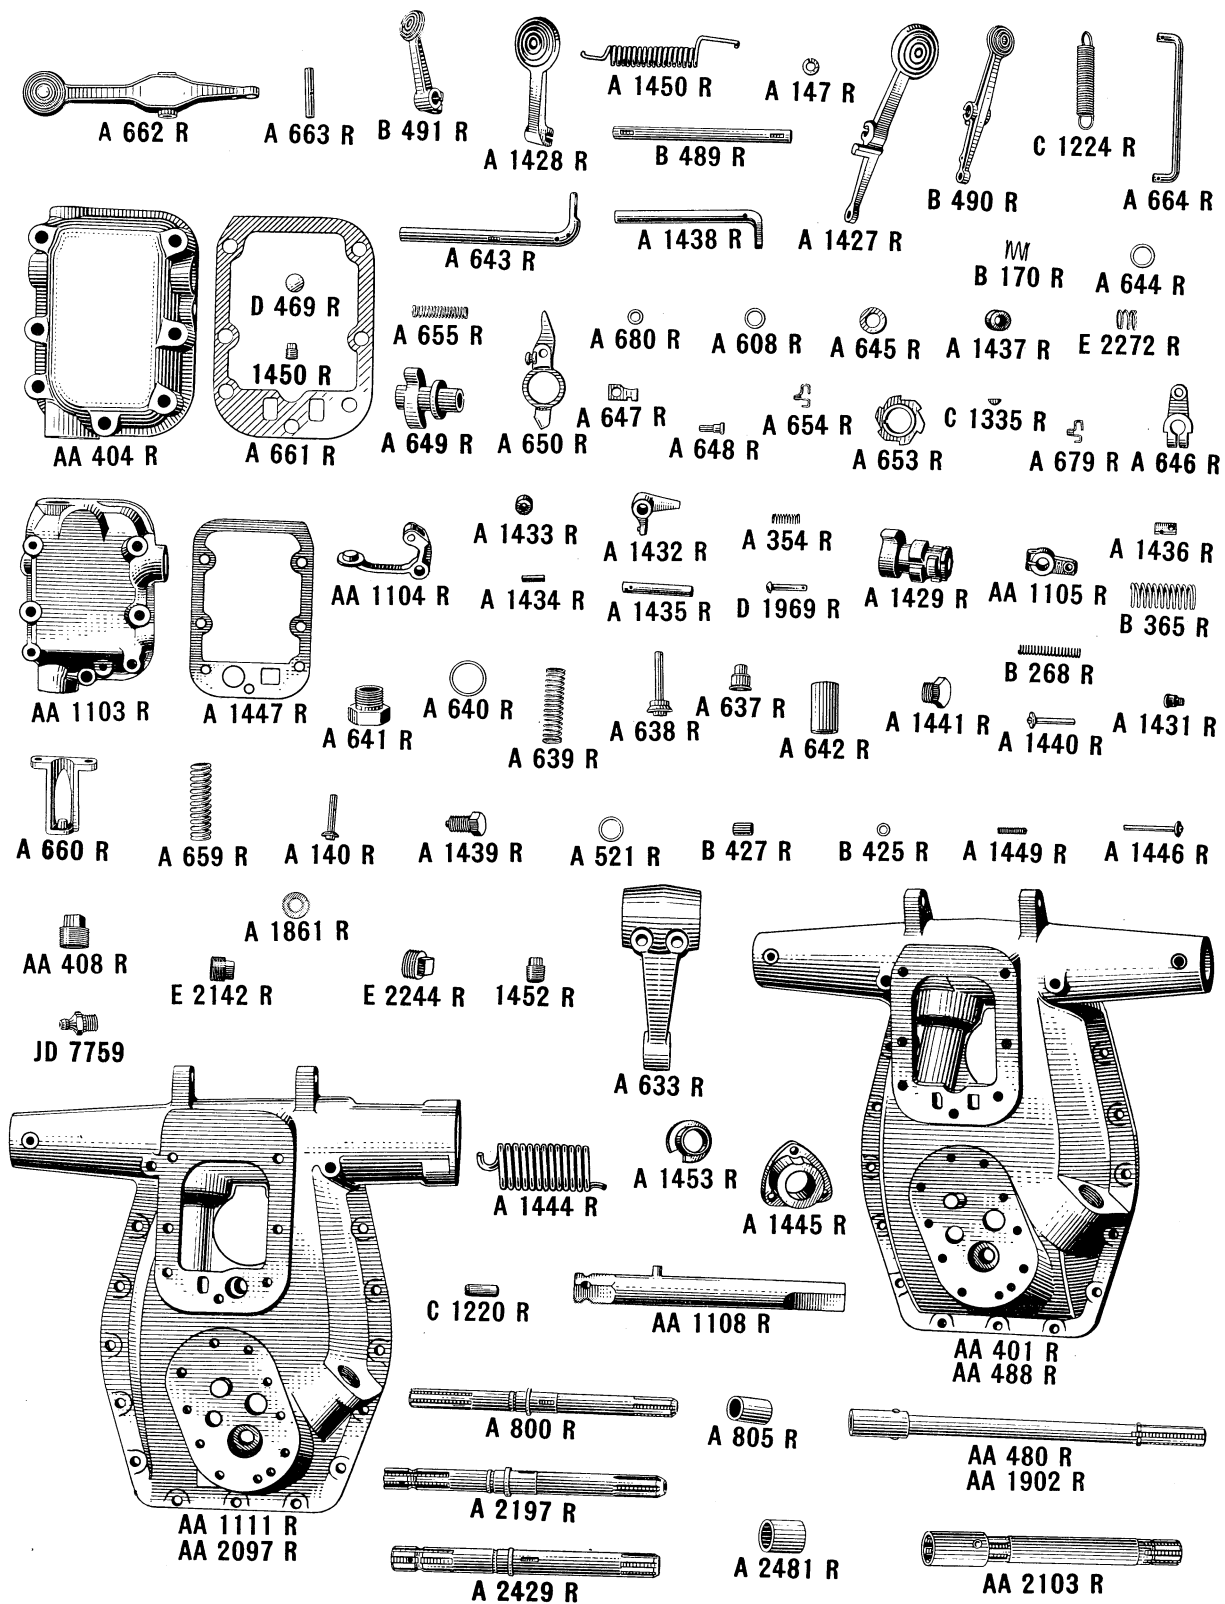


Plate No. 44


POWER LIFT—Continued

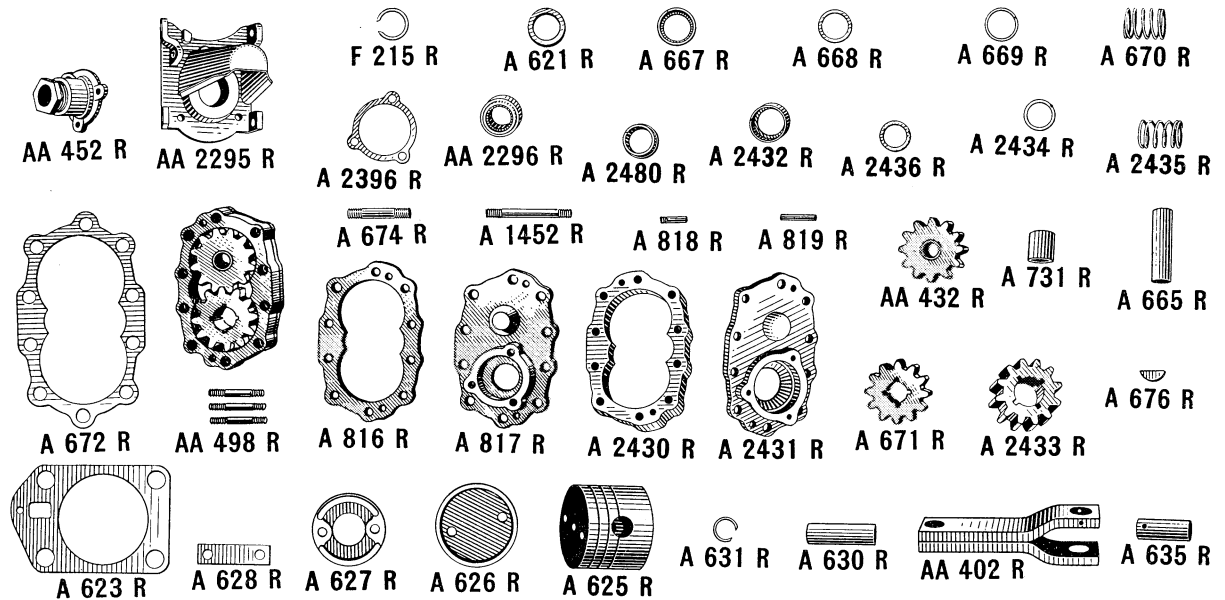


LIGHTING EQUIPMENT

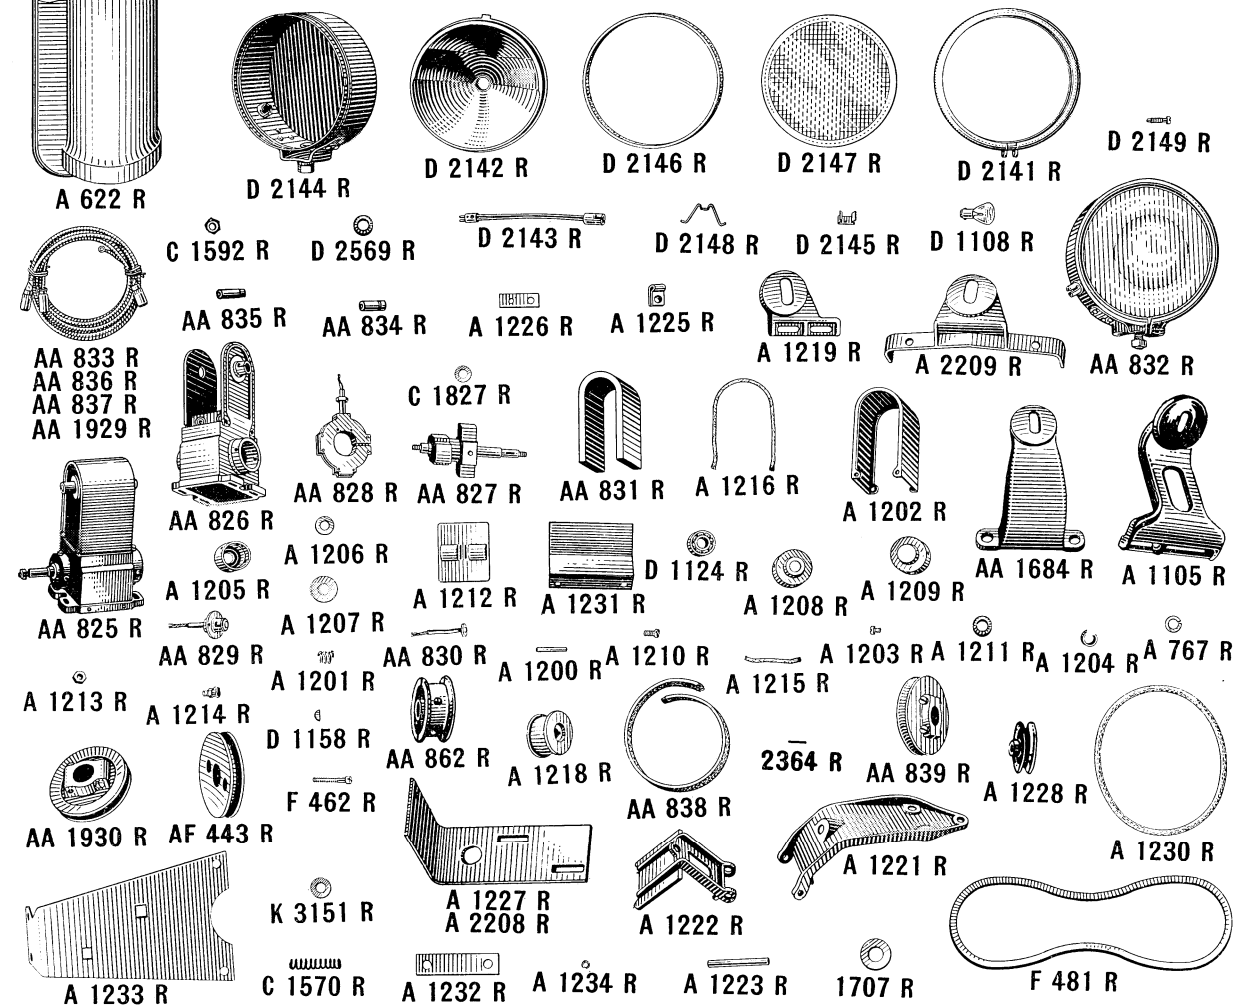

STARTING AND LIGHTING

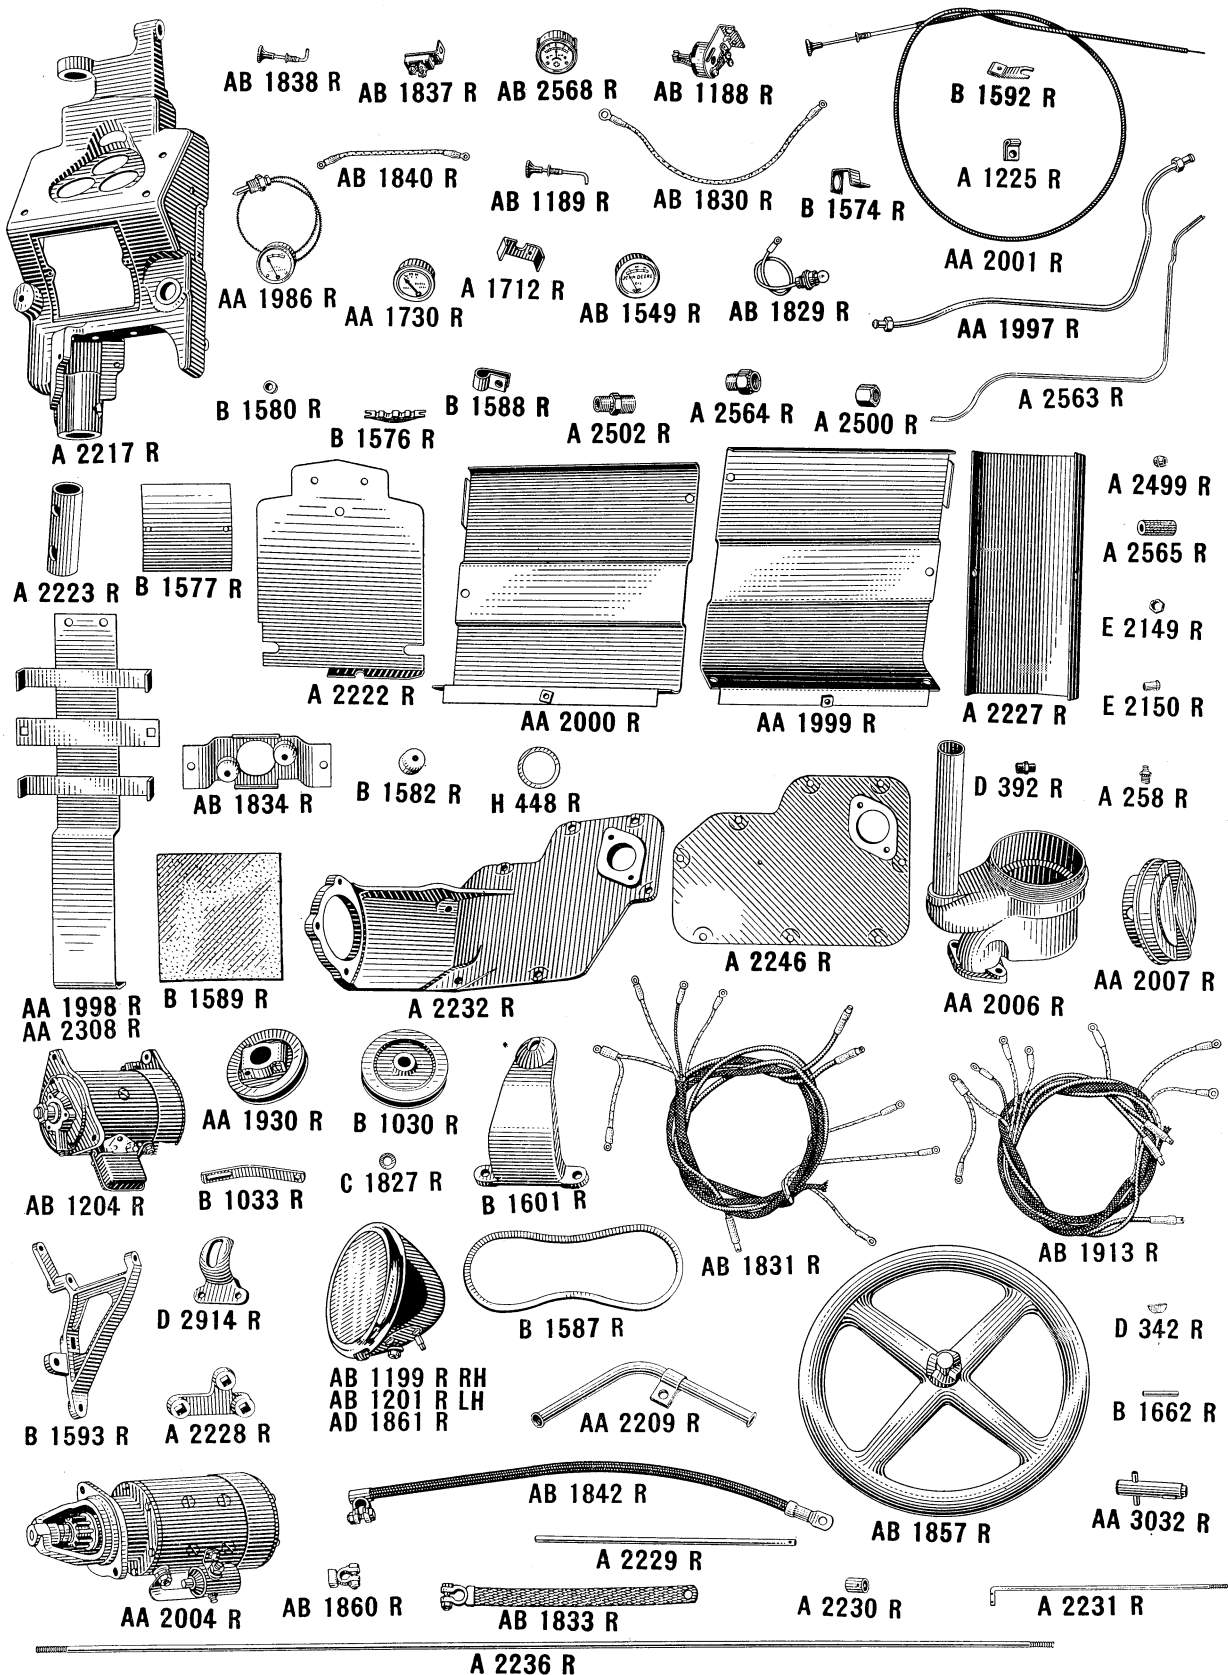

STARTING AND LIGHTING—Continued

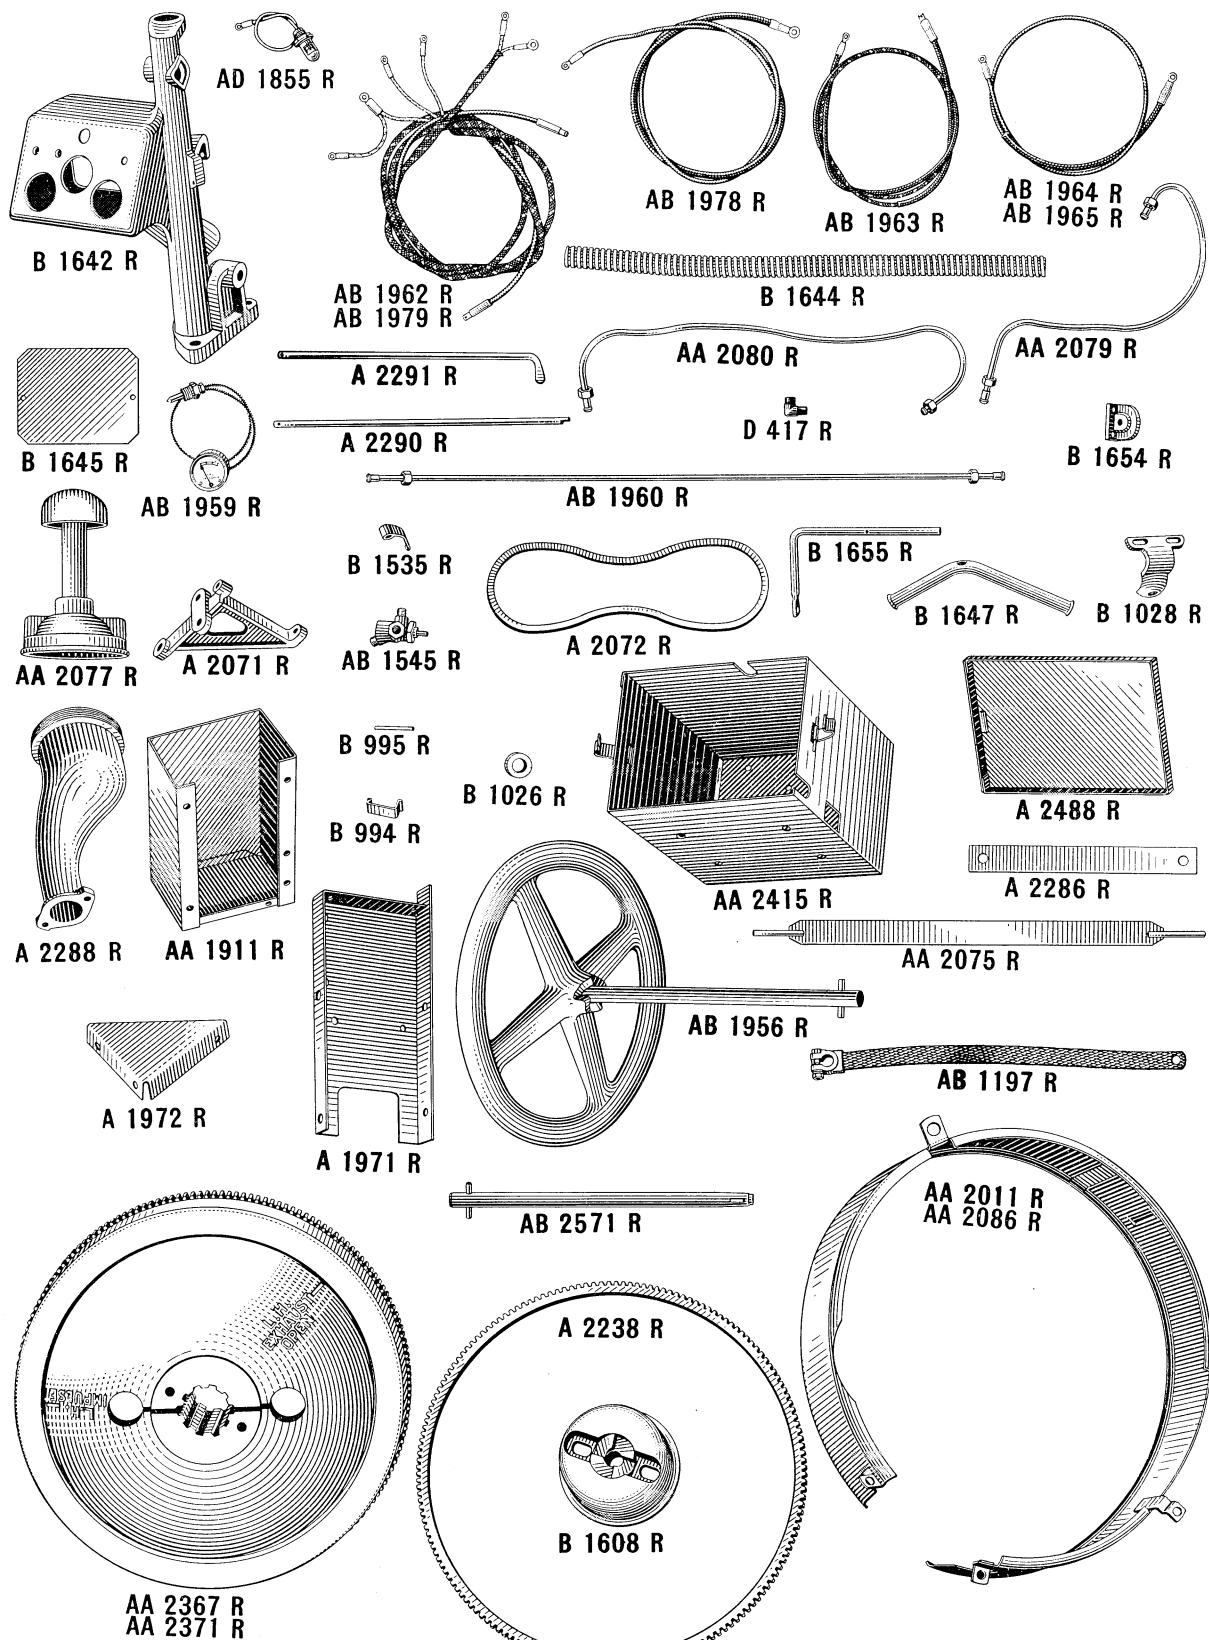

**NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW", 115
"AR" AND "AO" TRACTORS**

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
27 R.....	23	1674 R.....	49	A18 R.....	15	A142 R.....	16	A318 R.....	52
294 R.....	25	1676 R.....	49	A19 R.....	65	A144 R.....	14	A319 R.....	3
	3		50			A147 R.....	16	A320 R.....	53
	26		51	A20 R.....	15		42	A321 R.....	23
321 R.....	5	1677 R.....	50	A21 R.....	16			A324 R.....	57
	38		52	A22 R.....	65	A149 R.....	23	A326 R.....	57
372 R.....	13	1682 R.....	49	A23 R.....	65	A151 R.....	23		58
405 R.....	40		50	A25 R.....	8	A152 R.....	23		
			51			A156 R.....	8	A327 R.....	57
629 R.....	6	1683 R.....	49	A27 R.....	8				58
	13		50	A28 R.....	3	A159 R.....	17	A329 R.....	28
	29		51	A29 R.....	65	A166 R.....	17		57
	40		52	A30 R.....	65	A169 R.....	19	A330 R.....	53
1450 R.....	6			A31 R.....	65	A170 R.....	14	A333 R.....	28
	14	1684 R.....	49			A172 R.....	6		
	42		50	A35 R.....	5			A334 R.....	28
1452 R.....	3		51	A36 R.....	5	A173 R.....	6	A335 R.....	61
	12	1685 R.....	52	A40 R.....	65	A174 R.....	9	A336 R.....	61
	42	1704 R.....	14	A41 R.....	6	A175 R.....	40	A337 R.....	62
1502 R.....	60	1705 R.....	22			A176 R.....	6	A343 R.....	62
1503 R.....	44	1706 R.....	21	A42 R.....	6	A177 R.....	8		63
	59		28	A43 R.....	6				
	60				29	A178 R.....	5	A348 R.....	22
	61	1707 R.....	28	A45 R.....	6	A179 R.....	9		23
			44	A46 R.....	8	A181 R.....	7	A350 R.....	16
1504 R.....	59	1721 R.....	64	A51 R.....	12	A182 R.....	13	A351 R.....	15
	60	1722 R.....	64			A183 R.....	7	A352 R.....	15
1505 R.....	59	1723 R.....	64	A52 R.....	12	A184 R.....	6	A353 R.....	16
	60	1724 R.....	64	A53 R.....	65				
	61			A54 R.....	65	A187 R.....	19	A354 R.....	8
1506 R.....	59	1725 R.....	64	A55 R.....	12	A189 R.....	13		9
	60	1726 R.....	64	A56 R.....	26	A191 R.....	3		42
	61	1728 R.....	64			A192 R.....	12	A355 R.....	5
1507 R.....	60			A57 R.....	65	A198 R.....	15	A356 R.....	5
1512 R.....	59	1729 R.....	35	A58 R.....	7			A357 R.....	7
	60		64	A59 R.....	26	A202 R.....	19	A360 R.....	26
	61	1730 R.....	35	A60 R.....	28	A211 R.....	28		
			64	A61 R.....	65	A212 R.....	28	A363 R.....	19
1513 R.....	59	1731 R.....	64	A68 R.....	65	A215 R.....	25	A365 R.....	16
	60	1732 R.....	64			A216 R.....	28	A369 R.....	7
	61	1733 R.....	64	A69 R.....	17				14
1514 R.....	59	1735 R.....	64	A72 R.....	65	A217 R.....	28		16
1515 R.....	60	1737 R.....	64	A73 R.....	6	A222 R.....	28	A370 R.....	15
	61			A74 R.....	6	A230 R.....	12	A371 R.....	15
1516 R.....	59	1738 R.....	64		14	A234 R.....	6		
	60	1741 R.....	64			A235 R.....	6	A374 R.....	10
1518 R.....	62	1742 R.....	64	A76 R.....	19			A377 R.....	26
		1743 R.....	64	A77 R.....	20	A239 R.....	16	A378 R.....	16
1580 R.....	62	1745 R.....	64	A78 R.....	16	A241 R.....	7	A382 R.....	15
1611 R.....	55			A79 R.....	65		29	A384 R.....	5
	56	1748 R.....	64	A80 R.....	7	A242 R.....	18		12
	57	1776 R.....	52			A244 R.....	7		
1613 R.....	56	1791 R.....	52	A82 R.....	16			A386 R.....	6
1614 R.....	55	1881 R.....	64	A85 R.....	65	A245 R.....	5	A388 R.....	8
	56	1882 R.....	64	A88 R.....	23	A253 R.....	5	A389 R.....	27
1615 R.....	55			A89 R.....	23	A256 R.....	3	A391 R.....	12
		1892 R.....	57	A94 R.....	16	A257 R.....	26	A393 R.....	14
1616 R.....	56	1893 R.....	57			A258 R.....	46		
1619 R.....	56	1896 R.....	57	A101 R.....	15			A394 R.....	26
1620 R.....	56	1906 R.....	57	A102 R.....	65	A259 R.....	10	A395 R.....	14
1621 R.....	55	1927 R.....	57	A103 R.....	3	A260 R.....	6	A396 R.....	26
	56			A104 R.....	5	A261 R.....	15	A399 R.....	3
1622 R.....	55	1930 R.....	57	A105 R.....	6	A262 R.....	15	A401 R.....	3
	56	1932 R.....	57			A263 R.....	19		46
	57	1935 R.....	57	A107 R.....	65	A264 R.....	19		
		1938 R.....	57	A110 R.....	26			A404 R.....	5
1623 R.....	56	1939 R.....	57	A113 R.....	16	A272 R.....	15	A405 R.....	5
1625 R.....	56			A114 R.....	17	A275 R.....	26	A406 R.....	19
1634 R.....	55	1946 R.....	57	A115 R.....	16	A283 R.....	26		22
	56	1971 R.....	57			A284 R.....	3	A407 R.....	14
1636 R.....	56	2215 R.....	64	A117 R.....	5			A408 R.....	8
1637 R.....	55	2235 R.....	55	A118 R.....	7	A285 R.....	14		
		2326 R.....	59	A119 R.....	5	A286 R.....	14	A411 R.....	19
1638 R.....	56				12	A288 R.....	26	A412 R.....	19
1639 R.....	56	2334 R.....	58		17	A289 R.....	26	A413 R.....	22
1640 R.....	55	2338 R.....	63	A120 R.....	17	A301 R.....	26		23
1666 R.....	49	2364 R.....	44	A124 R.....	18			A415 R.....	18
	52	2392 R.....	58	A125 R.....	5	A302 R.....	3	A418 R.....	16
1667 R.....	49		59			A303 R.....	3		
	52	2394 R.....	58	A126 R.....	5	A307 R.....	11	A420 R.....	16
				A128 R.....	7	A309 R.....	49	A422 R.....	8
1668 R.....	50	2568 R.....	58	A129 R.....	6	A310 R.....	49	A423 R.....	3
	51			A130 R.....	5	A311 R.....	49	A424 R.....	3
1669 R.....	49			A131 R.....	6		50	A425 R.....	5
	50						51		
	51	A		A133 R.....	22			A426 R.....	4
	52				23	A312 R.....	50	A428 R.....	7
1670 R.....	49	A4 R.....	65		26	A313 R.....	49	A429 R.....	7
	50	A5 R.....	19	A134 R.....	23		50	A432 R.....	12
	51	A9 R.....	28	A135 R.....	15		51	A433 R.....	12
	52	A10 R.....	65	A136 R.....	6	A314 R.....	63		
1671 R.....	49	A11 R.....	19	A139 R.....	6	A317 R.....	55	A434 R.....	12
	50							A435 R.....	26
	51	A12 R.....	65	A140 R.....	8			A437 R.....	6
	52	A17 R.....	65		42			A438 R.....	17
1672 R.....	52			A141 R.....	15			A439 R.....	6

**116 NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW",
"AR" AND "AO" TRACTORS**

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A441 R.	23	A570 R.	65	A662 R.	42	A724 R.	31	A910 R.	65
A442 R.	11	A571 R.	41	A663 R.	42	A726 R.	15	A911 R.	65
A443 R.	11					A731 R.	42	A912 R.	65
A444 R.	40	A572 R.	41	A664 R.	42	A732 R.	65	A913 R.	16
A445 R.	12	A574 R.	41	A665 R.	42	A733 R.	65	A916 R.	16
		A575 R.	41	A667 R.	42				
A446 R.	12	A577 R.	40	A668 R.	42	A734 R.	57	A917 R.	16
A447 R.	40	A579 R.	14	A669 R.	42	A765 R.	31	A918 R.	16
A448 R.	12					A766 R.	31	A919 R.	41
A454 R.	65	A580 R.	18	A670 R.	42		32	A920 R.	65
A460 R.	11	A581 R.	18	A671 R.	42	A767 R.	31	A921 R.	65
		A582 R.	18	A672 R.	42		32		
A464 R.	6	A583 R.	18	A673 R.	65		44	A925 R.	14
A465 R.	10	A584 R.	7	A674 R.	42	A768 R.	31	A927 R.	14
A470 R.	29						32	A928 R.	28
A471 R.	29	A585 A.	55	A675 R.	50			A929 R.	28
A473 R.	49	A586 R.	7	A676 R.	23	A769 R.	31	A931 R.	12
		A587 R.	65	A677 R.	42		32		
A486 R.	19	A588 R.	65	A679 R.	42	A770 R.	31	A932 R.	12
A487 R.	49	A594 R.	65	A680 R.	42		32	A933 R.	5
				A684 R.	21		6		12
A488 R.	63	A595 R.	65	A685 R.	21	A772 R.	41	A934 R.	27
A489 R.	65	A596 R.	16	A686 R.	21	A773 R.	41	A936 R.	27
A490 R.	26	A597 R.	16					A937 R.	27
		A598 R.	16	A687 R.	55	A776 R.	26		
A491 R.	26	A599 R.	16	A688 R.	21	A777 R.	25	A939 R.	27
A492 R.	27			A689 R.	40	A782 R.	10	A940 R.	27
A495 R.	53	A600 R.	16	A690 R.	40	A792 R.	29	A942 R.	7
A496 R.	8	A601 R.	6			A800 R.	42	A943 R.	27
A497 R.	16	A602 R.	6	A692 R.	31			A944 R.	7
					32	A805 R.	42		
A499 R.	7	A603 R.	16	A693 R.	31	A808 R.	21	A945 R.	7
A500 R.	29	A604 R.	16	A694 R.	31	A810 R.	19	A946 R.	27
A505 R.	28	A605 R.	16	A695 R.	31	A812 R.	17	A947 R.	7
A506 R.	28	A606 R.	16			A813 R.	19	A948 R.	7
A507 R.	28	A607 R.	16	A698 R.	31			A949 R.	7
		A608 R.	16		32	A815 R.	19		
A508 R.	65			A699 R.	31	A816 R.	42	A950 R.	24
A509 R.	23	A609 R.	19	A700 R.	31	A817 R.	42	A951 R.	49
A510 R.	23				32	A818 R.	42		50
A514 R.	23	A610 R.	19	A701 R.	31	A819 R.	42	A952 R.	24
A515 R.	9		22	A702 R.	31			A955 R.	24
		A611 R.	19	A703 R.	31	A821 R.	57	A956 R.	27
A516 R.	9				32	A824 R.	65		
A518 R.	9	A612 R.	19			A825 R.	16	A958 R.	7
A519 R.	9				32	A828 R.	65	A959 R.	65
A520 R.	9	A616 R.	5		32	A829 R.	19	A963 R.	29
A521 R.	9	A618 R.	28	A704 R.	31			A968 R.	29
	42			A705 R.	31	A830 R.	65	A969 R.	29
		A619 R.	28		32	A832 (S2151-C)	38		
A522 R.	9		57			A836 R.	17	A970 R.	40
A523 R.	9	A620 R.	65		31	A837 R.	17	A971 R.	40
A524 R.	3	A621 R.	42		32	A838 R.	65	A972 R.	65
A525 R.	40	A622 R.	42		35			A973 R.	22
A526 R.	40	A623 R.	42		37	A840 R.	21	A975 R.	22
					38	A841 R.	14		
A527 R.	40	A624 R.	49	A706 R.	31	A842 R.	14	A976 R.	22
A531 R.	12	A625 R.	42		32	A844 R.	14	A981 R.	22
A532 R.	12	A626 R.	42	A707 R.	31		46		23
A534 R.	8	A627 R.	42		32	A845 R.	65	A982 R.	22
A535 R.	8	A628 R.	42	A708 R.	31			A983 R.	22
					32	A846 R.	14		23
A539 R.	17	A630 R.	42			A850 R.	28	A984 R.	65
A540 R.	16	A631 R.	42	A709 R.	31	A871 R.	49		
A541 R.	65	A633 R.	42		32		50	A986 R.	22
A542 R.	18	A634 R.	49	A710 R.	31		51		23
		A635 R.	42		32	A875 R.	52	A987 R.	22
A543 R.	17			A711 R.	31	A876 R.	26	A988 R.	22
A544 R.	17	A636 R.	65	A712 R.	31		24		23
A545 R.	18	A637 R.	42		32	A877 R.	24	A989 R.	23
A546 R.	65	A638 R.	42	A713 R.	31		26		
A547 R.	17	A639 R.	42			A880 R.	24	A996 R.	29
		A640 R.	42	A714 R.	31	A881 R.	24	A997 R.	29
A548 R.	17			A715 R.	31	A882 R.	24	A999 R.	28
A549 R.	16	A641 R.	42		32			A1000 R.	28
A550 R.	16	A642 R.	42	A716 R.	31	A887 R.	24	A1001 R.	28
A551 R.	40	A643 R.	42		32	A890 R.	24		
A552 R.	40	A644 R.	42	A717 R.	31	A891 R.	27	A1002 R.	28
		A645 R.	42		32	A892 R.	27	A1003 R.	5
A554 R.	40			A718 R.	31			A1004 R.	5
A556 R.	65	A646 R.	42		32	A893 R.	27	A1006 R.	65
A557 R.	17	A647 R.	42			A894 R.	31	A1010 R.	6
A558 R.	40	A648 R.	42	A719 R.	31		32		
A559 R.	40	A649 R.	42		32	A900 R.	65	A1013 R.	11
		A650 R.	42	A720 R.	31	A902 R.	3	A1014 R.	11
A560 R.	65			A721 R.	31	A903 R.	3	A1015 R.	65
A561 R.	40	A651 R.	22		32		46	A1020 R.	28
A562 R.	40	A652 R.	22	A722 R.	31			A1025 R.	63
A564 R.	40	A653 R.	42		32	A904 R.	8		
A565 R.	40	A654 R.	42	A723 R.	31	A906 R.	16	A1031 R.	41
		A655 R.	42		32	A907 R.	18	A1032 R.	41
A567 R.	40					A908 R.	7	A1033 R.	41
A568 R.	40	A659 R.	42			A909 R.	65	A1034 R.	7
A569 R.	40	A660 R.	42					A1035 R.	7
		A661 R.	42						

**NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW", 117
"AR" AND "AO" TRACTORS**

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A1036 R.	7	A1182 R.	14	A1297 R.	24	A1441 R.	43	A1909 R.	66
A1037 R.	7	A1183 R.	7	A1298 R.	21	A1442 R.	66	A1910 R.	27
A1044 R.	9			A1308 R.	66	A1444 R.	43	A1933 R.	66
	65	A1184 R.	7			A1445 R.	43		
A1046 R.	31	A1185 R.	7	A1311 R.	19			A1965 R.	63
A1047 R.	65	A1186 R.	6	A1313 R.	19	A1446 R.	43	A1971 R.	47
		A1187 R.	8	A1318 R.	66	A1447 R.	43	A1972 R.	47
A1049 R.	27	A1188 R.	7	A1319 R.	23	A1448 R.	51	A1974 R.	20
A1050 R.	65			A1321 R.	23	A1449 R.	43	A1992 R.	55
A1051 R.	65	A1189 R.	7			A1450 R.	43		
A1052 R.	26	A1190 R.	8	A1322 R.	23			A1999 R.	13
		A1193 R.	6	A1323 R.	23	A1451 R.	51	A2002 R.	26
A1053 R.	58	A1196 R.	9	A1324 R.	66	A1452 R.	43	A2016 R.	66
A1055 R.	23	A1197 R.	7	A1325 R.	20	A1453 R.	43	A2017 R.	66
A1056 R.	23			A1326 R.	28	A1459 R.	24	A2018 R.	66
A1057 R.	29	A1198 R.	66			A1460 R.	24		
A1062 R.	21	A1200 R.	44	A1327 R.	28			A2019 R.	18
		A1201 R.	44	A1338 R.	51	A1461 R.	24	A2020 R.	18
A1066 R.	65	A1202 R.	44	A1341 R.	28	A1462 R.	24	A2027 R.	20
A1078 R.	29	A1203 R.	44	A1342 R.	28	A1507 R.	3	A2028 R.	20
A1079 R.	29			A1343 R.	28			A2029 R.	60
A1080 R.	29	A1204 R.	44			A1522 R.	18		
A1081 R.	29	A1205 R.	44	A1344 R.	28	A1533 R.	22	A2030 R.	66
		A1206 R.	44	A1357 R.	22	A1534 R.	22	A2031 R.	66
A1084 R.	22	A1207 R.	44	A1358 R.	22	A1538 R.	20	A2032 R.	63
A1085 R.	22	A1208 R.	44	A1359 R.	29			A2030 R.	58
A1087 R.	66			A1363 R.	23	A1539 R.	20	A2053 R.	63
A1090 R.	22	A1209 R.	44			A1543 R.	53		64
A1100 R.	66	A1210 R.	44	A1364 R.	23	A1544 R.	20		
		A1211 R.	44	A1365 R.	23	A1553 R.	66	A2062 R.	41
A1101 R.	24	A1212 R.	44	A1366 R.	23	A1555 R.	66	A2063 R.	40
A1102 R.	31	A1213 R.	44	A1367 R.	66			A2065 R.	40
	32			A1368 R.	24	A1556 R.	25	A2066 R.	40
A1103 R.	31	A1214 R.	44			A1557 R.	66	A2071 R.	47
	32	A1215 R.	44	A1369 R.	24	A1574 R.	6		
A1104 R.	31	A1216 R.	44	A1370 R.	24	A1575 R.	6	A2072 R.	47
	32	A1217 R.	44			A1578 R.	17	A2074 R.	31
A1105 R.	44			A1371 R.	24			A2093 R.	5
		A1218 R.	44	A1372 R.	24	A1579 R.	66	A2100 R.	66
A1108 R.	57			A1373 R.	24	A1580 R.	41	A2101 R.	12
A1109 R.	66	A1219 R.	44			A1595 R.	5		
A1112 R.	18	A1220 R.	66	A1374 R.	24	A1596 R.	8	A2102 R.	12
A1113 R.	18	A1221 R.	44	A1375 R.	24	A1597 R.	8	A2112 R.	12
A1114 R.	18	A1222 R.	44	A1382 R.	14			A2113 R.	66
		A1223 R.	44			A1598 R.	8	A2114 R.	14
A1116 R.	18			A1386 R.	66	A1599 R.	8	A2115 R.	66
A1123 R.	66	A1224 R.	56	A1387 R.	66	A1646 R.	15	A2117 R.	66
A1128 R.	66	A1225 R.	44	A1389 R.	19	A1647 R.	15		
A1129 R.	26			A1401 R.	18			A2118 R.	26
A1130 R.	26			A1402 R.	18	A1712 R.	12	A2122 R.	66
		A1226 R.	44				46	A2123 R.	27
A1131 R.	26	A1227 R.	44	A1403 R.	18		47	A2130 R.	66
A1132 R.	25	A1228 R.	44	A1404 R.	66				
A1133 R.	57			A1405 R.	18	A1785 R.	13	A2133 R.	13
A1134 R.	29	A1229 R.	54	A1406 R.	18	A1786 R.	13	A2152 R.	12
A1140 R.	66			A1408 R.	18	A1787 R.	13	A2153 R.	12
		A1230 R.	44			A1788 R.	13	A2155 R.	12
A1141 R.	66	A1231 R.	44	A1409 R.	18			A2156 R.	12
A1142 R.	5	A1232 R.	44	A1410 R.	18	A1790 R.	13		
A1143 R.	5	A1233 R.	14	A1411 R.	18	A1812 R.	20	A2158 R.	26
A1144 R.	8			A1412 R.	18	A1813 R.	50	A2159 R.	27
A1146 R.	66			A1413 R.	66	A1815 R.	66	A2160 R.	27
		A1234 R.	44			A1818 R.	6	A2161 R.	27
A1147 R.	3	A1241 R.	7	A1414 R.	18			A2166 R.	8
A1148 R.	9	A1242 R.	41	A1415 R.	18	A1819 R.	6		
A1149 R.	9	A1247 R.	12	A1416 R.	18	A1821 R.	28	A2167 R.	40
A1150 R.	9	A1248 R.	12	A1417 R.	66	A1822 R.	28	A2168 R.	66
A1151 R.	9			A1418 R.	18	A1828 R.	22	A2169 R.	66
		A1252 R.	10				25	A2174 R.	52
A1152 R.	9	A1253 R.	53	A1419 R.	50	A1829 R.	57	A2175 R.	13
A1153 R.	18	A1258 R.	28						
A1154 R.	17			A1421 R.	27	A1830 R (S763)	38	A2176 R.	51
A1155 R.	66	A1259 R.	28	A1422 R.	26			A2181 R.	12
A1156 R.	18			A1423 R.	26	A1853 R.	13	A2189 R.	54
		A1260 R.	28	A1424 R.	27	A1854 R.	13	A2190 R.	54
						A1855 R.	13	A2192 R.	13
A1157 R.	18			A1425 R.	66				
A1158 R.	18	A1265 R.	22	A1426 R.	66	A1856 R.	13	A2193 R.	13
A1159 R.	18	A1266 R.	22	A1427 R.	42	A1857 R.	13	A2195 R.	41
A1160 R.	18	A1267 R.	22	A1428 R.	42	A1858 R.	58	A2196 R.	41
A1161 R.	66	A1272 R.	66	A1429 R.	42	A1861 R.	43	A2197 R.	41
		A1277 R.	66			A1864 R.	66		43
A1162 R.	23			A1430 R.	66				
A1163 R.	23	A1278 R.	9	A1431 R.	42	A1866 R.	66	A2199 R.	12
A1168 R.	23	A1279 R.	9	A1432 R.	42	A1867 R.	15	A2208 R.	44
A1169 R.	23	A1280 R.	9	A1433 R.	42	A1890 R.	13	A2209 R.	44
		A1281 R.	19	A1434 R.	42	A1892 R.	20	A2211 R.	52
A1170 R.	66	A1282 R.	66				26	A2214 R.	61
A1171 R.	7			A1435 R.	42	A1893 R.	61	A2215 R.	27
A1172 R.	7			A1436 R.	42		66		
A1175 R.	7	A1283 R.	20	A1437 R.	42				
A1176 R.	14	A1284 R.	12	A1438 R.	42				
		A1286 R.	28	A1439 R.	43				
A1178 R.	14	A1289 R.	66	A1440 R.	43				
A1180 R.	14								
A1181 R.	14	A1291 R.	6						
		A1293 R.	20						

**118 NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW",
"AR" AND "AO" TRACTORS**

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A2217 R.	46	A2369 R.	12	A2513 R.	18	AA380 R.	27	AA567 R.	27
A2222 R.	46	A2370 R.	12	A2514 R.	18	AA381 R.	26	AA568 R.	27
A2223 R.	46	A2371 R.	12	A2515 R.	18	AA382 R.	3	AA569 R.	24
A2224 R.	54	A2372 R.	12	A2516 R.	67	AA385 R.	21		
A2227 R.	46	A2373 R.	14	A2530 R.	9	AA392 R.	40	AA577 R.	11
								AA578 R. (X2692)	38
A2228 R.	46	A2375 R.	67	A2531 R.	28	AA393 R.	40	AA579 R.	40
A2229 R.	46	A2376 R.	12	A2533 R.	28	AA394 R.	40	AA580 R.	38
A2230 R.	46	A2377 R.	12	A2534 R.	28	AA395 R.	40	AA581 R. (X2691)	38
		A2378 R.	12	A2535 R.	29	AA396 R.	12		
A2231 R.	46	A2383 R.	5	A2536 R.	29	AA397 R.	3	AA582 R.	23
A2232 R.	46							AA583 R.	23
	47	A2384 R.	5	A2537 R.	29	AA399 R.	22	AA584 R.	23
		A2385 R.	5	A2542 R.	29	AA401 R.	43	AA586 R.	23
A2233 R.	66	A2386 R.	5	A2543 R.	67	AA402 R.	43	AA587 R.	6
A2234 R.	66	A2387 R.	67	A2563 R.	46	AA404 R.	43		
A2236 R.	46	A2388 R.	41	A2564 R.	46	AA408 R.	43	AA588 R.	16
A2237 R.	66							AA591 R.	29
A2238 R.	46	A2389 R.	41	A2565 R.	46	AA414 R.	31	AA592 R.	29
	47	A2390 R.	41	A2571 R.	17	AA415 R.	32	AA595 R.	29
		A2391 R.	41	A2572 R.	17		31	AA596 R.	29
		A2392 R.	41	A2573 R.	17		32		
A2246 R.	46	A2393 R.	41			AA416 R.	31	AA598 R.	29
A2272 R.	12						32	AA599 R.	11
A2286 R.	47					AA417 R.	31	AA601 R.	12
A2288 R.	47	A2394 R.	20				32	AA603 R.	11
		A2395 R.	41			AA419 R.	31	AA604 R.	11
		A2396 R.	41				32		
A2290 R.	47			AA					
A2291 R.	47			AA200 R.	38			AA605 R.	28
A2297 R.	55			AA201 R.	30			AA607 R.	28
A2298 R.	28	A2404 R.	11	AA204 R.	11	AA421 R.	31	AA610 R.	23
A2299 R.	23	A2406 R.	11	AA205 R.	14	AA422 R.	31		
		A2415 R.	8	AA217 R.	17		32		
A2300 R.	66	A2421 R.	6	AA219 R. (WSX		AA424 R.	31		
A2303 R.	7	A2422 R.	67	2721)			32	AA616 R.	20
	29			AA227 R.	38	AA425 R.	31	AA618 R.	3
A2305 R.	20	A2423 R.	16	AA229 R.	5		32		
A2307 R.	19	A2424 R.	67	AA231 R.	15	AA426 R.	31	AA623 R.	11
A2312 R.	17	A2428 R.		AA232 R.	15	AA427 R.	31	AA624 R.	11
		A2429 R.	43			AA428 R.	31	AA625 R.	41
A2313 R.	17	A2430 R.	43				32	AA631 R.	24
A2314 R.	17			AA235 R.	16	AA429 R.	31	AA632 R.	26
A2315 R.	17	A2431 R.	43	AA239 R.	3		13		
A2316 R.	17	A2432 R.	43	AA242 R.	3	AA431 R.	43	AA633 R.	24
A2317 R.	18	A2433 R.	43	AA244 R.	3	AA432 R.		AA634 R.	26
		A2434 R.	43	AA246 R.	3			AA661 R.	19
A2318 R.	66	A2435 R.	43			AA435 R.	12	AA663 R.	25
A2323 R.	66			AA248 R.	27	AA436 R.	4	AA664 R.	23
A2324 R.	66	A2436 R.	43	AA253 R.	12	AA437 R.	4		
A2325 R.	66	A2440 R.	9	AA255 R.	7	AA452 R.	41	AA665 R.	20
A2326 R.	4	A2441 R.	9	AA266 R.	11	AA454 R.	43	AA666 R.	20
		A2444 R.	9	AA267 R.	11		11	AA670 R.	9
A2327 R.	5	A2447 R.	40			AA456 R.	10	AA685 R.	6
	12			AA268 R.	14	AA459 R.	40	AA692 R.	29
A2328 R.	5	A2448 R.	67	AA270 R.	11	AA463 R.	3		
	12	A2449 R.	67	AA271 R.	11	AA464 R.	5	AA693 R.	29
A2329 R.	5	A2450 R.	67	AA272 R.	11	AA465 R.	5	AA700 R.	22
A2330 R.	4	A2451 R.	41	AA280 R.	10			AA701 R.	22
	10	A2452 R.	67			AA467 R.	29	AA702 R.	6
A2332 R.	5			AA281 R.	10	AA468 R.	29	AA729 R.	24
		A2454 R.	41	AA282 R.	10		6		
A2333 R.	5			AA283 R.	9	AA472 R.	40	AA730 R.	24
A2334 R.	66	A2455 R.	63	AA286 R.	3	AA474 R.	40	AA737 R.	3
A2335 R.	66	A2458 R.	41	AA296 R.	24	AA475 R.	10	AA741 R.	19
A2338 R.	66	A2466 R.	21					AA743 R. (X2773)	38
A2344 R.	66	A2467 R.	5	AA299 R.	6	AA480 R.	43		
				AA300 R.	6	AA483 R.	22	AA744 R. (X2774)	38
A2346 R.	6	A2471 R.	15	AA314 R.	23	AA488 R.	43	AA755 R.	27
A2347 R.	6	A2472 R.	17	AA318 R.	29	AA498 R.	43	AA756 R.	26
A2349 R.	6			AA319 R.	23	AA499 R.	11	AA757 R.	16
A2350 R.	6	A2474 R.	17					AA758 R.	16
A2353 R.	4					AA503 R.	18		
		A2476 R.	67			AA504 R.	20	AA787 R.	25
A2354 R.	4			AA320 R.	3	AA505 R.	20	AA789 R.	40
	10	A2480 R.	43	AA325 R.	13	AA506 R.	20	AA790 R.	40
A2355 R.	4			AA329 R.	15	AA508 R.	3	AA791 R.	40
	10	A2481 R.	43	AA331 R.	19			AA792 R.	17
A2356 R.	4	A2482 R.	47	AA335 R.	11	AA509 R.	20		
	6	A2488 R.	47			AA517 R.	11	AA793 R.	17
	10	A2491 R.	11	AA345 R.	19	AA518 R.	11	AA794 R.	7
A2360 R.	66	A2494 R.	7	AA348 R.	40	AA519 R.	11	AA795 R.	12
A2363 R.	6			AA352 R.	23	AA520 R.	20	AA796 R.	12
		A2495 R.	7	AA353 R.	23			AA797 R.	17
A2364 R.	41	A2498 R.	10	AA354 R.	28	AA523 R.	14		
A2365 R.	41	A2499 R.	10			AA524 R.	14	AA798 R.	17
A2366 R.	67			AA357 R.	9	AA525 R.	12	AA802 R.	10
A2367 R.	67	A2500 R.	10	AA359 R.	8	AA526 R.	12	AA804 R.	3
				AA360 R.	8	AA534 R.	4	AA806 R.	18
A2368 R.	12	A2501 R.	46	AA361 R.	40			AA807 R.	23
				AA362 R.	40	AA535 R.	4		
		A2502 R.	10			AA551 R.	8	AA811 R.	23
				AA363 R.	12	AA553 R.	16	AA813 R.	7
		A2508 R.	18	AA371 R.	16	AA556 R.	16	AA814 R.	7
		A2509 R.	18	AA376 R.	11	AA559 R.	19	AA817 R.	15
		A2510 R.	18	AA377 R.	5			AA818 R.	15
		A2511 R.	18	AA379 R.	28	AA564 R.	15		
						AA565 R.	12		

**NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW", 119
"AR" AND "AO" TRACTORS**

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
AA819 R.	10	AA1225 R.	30	AA1781 R.	12	AA2240 R.	14	AB386 R.	33
AA823 R.	3	AA1233 R.	19	AA1782 R.	12	AA2242 R.	40	AB411 R.	24
AA824 R.	9	AA1234 R.	19			AA2243 R.	20	AB474 R.	25
AA825 R.	44	AA1261 R.	21	AA1783 R.	40	AA2245 R.	3	AB518 R.	15
AA826 R.	44			AA1787 R.	12	AA2247 R.	19	AB609 R.	11
		AA1342 R.	13	AA1792 R.	13				
AA827 R.	44	AA1395 R.	25	AA1794 R.	14	AA2249 R.	15	AB689 R.	40
AA828 R.	44	AA1399 R.	25	AA1798 R.	26	AA2250 R.	11	AB706 R.	30
AA829 R.	44	AA1407 R.	25			AA2253 R.	11	AB707 R.	33
AA830 R.	45	AA1409 R.	21	AA1803 R.	27	AA2254 R.	11	AB757 R.	30
AA831 R.	45			AA1809 R.	24	AA2255 R.	11	AB823 R.	21
		AA1420 R.	13	AA1810 R.	5				
AA832 R.	44	AA1423 R.	3	AA1811 R.	5	AA2257 R.	12	AB829 R.	30
AA833 R.	44	AA1433 R.	21	AA1815 R.	11	AA2258 R.	8	AB1084 R.	31
AA834 R.	44	AA1438 R.	13			AA2259 R.	10		
AA835 R.	44	AA1447 R.	31	AA1816 R.	11	AA2260 R.	6	AB1085 R.	33
AA836 R.	44			AA1822 R.	13		10	AB1188 R.	46
		AA1483 R.	20	AA1823 R.	14	AA2262 R.	7		
AA837 R.	44	AA1497 R.	21	AA1824 R.	14			AB1189 R.	46
AA838 R.	45	AA1502 R.	21	AA1825 R.	14				47
AA840 R.	3	AA1507 R.	21			AA2263 R.	18		
AA843 R.	3	AA1521 R.	13	AA1826 R.	14	AA2264 R.	18		
AA847 R.	25			AA1828 R.	27	AA2265 R.	17	AB1197 R.	47
		AA1522 R.	13	AA1829 R.	27	AA2267 R.	14	AB1199 R.	46
AA861 R.	9	AA1523 R.	14	AA1830 R.	26	AA2268 R.	14		
AA862 R.	45	AA1524 R.	14	AA1843 R.	27			AB1201 R.	46
AA883 R.	12	AA1525 R.	14			AA2269 R.	14		
AA886 R.	12	AA1526 R.	14	AA1885 R.	11	AA2270 R.	4	AB1204 R.	46
AA887 R.	40			AA1887 R.	11	AA2272 R.	4		
		AA1553 R.	19	AA1888 R.	11	AA2279 R.	15	AB1208 R.	47
AA888 R.	6	AA1555 R.	15	AA1889 R.	40	AA2280 R.	3	(X1220).....	36
AA899 R.	22	AA1572 R.	3	AA1890 R.	30				
AA901 R.	29	AA1575 R.	7			AA2282 R.	26	AB1210 R.	
AA902 R.	29		27	AA1902 R.	43	AA2286 R.	4	(X2226).....	36
AA905 R.	29			AA1911 R.	47	AA2295 R.	41	AB1211 R.	36
		AA1576 R.	17	AA1919 R.	13			(X3342).....	
AA907 R.	29	AA1577 R.	17	AA1929 R.	44	AA2296 R.	41	AB1213 R.	
AA908 R.	29	AA1579 R.	17	AA1930 R.	45			(1193).....	35
AA917 R.	21	AA1582 R.	29		46	AA2297 R.	41	AB1214 R.	
AA933 R.	21	AA1583 R.	29		47		43	(X3342).....	36
AA934 R.	9							AB1214 R.	
		AA1593 R.	18	AA1941 R.	40	AA2298 R.	13	(X3343).....	37
AA935 R.	20	AA1594 R.	18	AA1955 R.	4	AA2299 R.	40	AB1216 R.	
AA936 R.	20	AA1595 R.	7	AA1986 R.	46	AA2308 R.	46	(X1570).....	36
AA937 R.	20	AA1596 R.	20	AA1997 R.	46	AA2310 R.	10		
AA945 R.	21	AA1597 R.	20	AA1998 R.	46	AA2320 R.	21	AB1217 R.	
AA952 R.	12							(X1122).....	36
		AA1600 R.	20	AA1999 R.	46	AA2327 R.	5	AB1219 R.	
AA956 R.	28	AA1601 R.	20	AA2000 R.	46	AA2329 R.	5	(X1230).....	36
AA958 R.	5	AA1602 R.	20	AA2001 R.	46	AA2330 R.	5	AB1220 R.	
AA976 R.	24	AA1604 R.	27		46	AA2332 R.	5	(X2595).....	36
AA977 R.	24	AA1605 R.	27	AA2004 R.	46	AA2333 R.	5	AB1221 R.	
AA987 R.	29				47			(X1097).....	36
		AA1607 R.	4	AA2006 R.	46	AA2336 R.	15	AB1222 R.	
AA1002 R.	21	AA1612 R.	26			AA2341 R.	21	(X1134).....	36
AA1017 R.	3	AA1615 R.	5	AA2007 R.	46	AA2343 R.	41		
AA1021 R.	29	AA1620 R.	4	AA2011 R.	46			AB1223 R.	
AA1022 R.	29	AA1621 R.	4	AA2024 R.	4	AA2345 R.	25	(X1145).....	36
AA1025 R.	29			AA2033 R.	4	AA2347 R.	4	AB1224 R.	
		AA1622 R.	4	AA2044 R.	30			(X2296).....	36
AA1027 R.	29	AA1623 R.	4			AA2348 R.	4	AB1225 R.	
AA1028 R.	29	AA1624 R.	31	AA2047 R.	4	AA2349 R.	11	(X1331).....	36
AA1032 R.	29		32	AA2048 R.	4	AA2361 R.	19	AB1226 R (1163).....	35
AA1034 R.	29	AA1626 R.	4	AA2059 R.	31	AA2362 R.	19	AB1229 R.	
AA1035 R.	29	AA1652 R.	5		33	AA2367 R.	46	(X2229).....	36
			6	AA2063 R.	40				
AA1043 R.	24			AA2064 R.	11	AA2370 R.	17	AB1230 R.	
AA1046 R.	24	AA1684 R.	44			AA2371 R.	47	(X2228).....	36
AA1047 R.	5	AA1695 R.	7	AA2075 R.	47	AA2415 R.	47	AB1231 R.	
AA1050 R.	6		15	AA2077 R.	47	AA2423 R.	40	(X2237).....	36
AA1067 R.	20	AA1702 R.	27	AA2079 R.	47	AA2424 R.	40	AB1232 R.	
		AA1708 R.	27	AA2080 R.	47			(X2231).....	36
		AA1718 R.	19	AA2086 R.	47	AA2425 R.	40	AB1545 R.	11
AA1073 R.	20					AA2426 R.	40		47
AA1074 R.	20	AA1719 R.	19	AA2092 R.	9	AA2454 R.	9	AB1549 R.	9
AA1075 R.	20	AA1721 R.	19	AA2095 R.	9	AA2478 R.	21		46
AA1078 R.	21	AA1723 R.	14	AA2096 R.	9	AA2498 R.	39		
AA1079 R.	23	AA1724 R.	14	AA2097 R.	43			AB1607 R.	13
		AA1725 R.	14	AA2103 R.	43	AA3000 R.	29	AB1621 R.	13
AA1084 R.	30					AA3002 R.	29	AB1829 R.	46
AA1087 R.	21	AA1726 R.	14	AA2124 R.	23	AA3004 R.	41	AB1830 R.	46
AA1088 R.	21	AA1727 R.	14	AA2209 R.	46	AA3032 R.	46	AB1831 R.	46
AA1103 R.	43	AA1728 R.	14	AA2210 R.	4				
AA1104 R.	43	AA1729 R.	14	AA2213 R.	6			AB1833 R.	46
		AA1730 R.	46	AA2214 R.	6			AB1834 R.	46
			47					AB1837 R.	46
AA1105 R.	43			AA2222 R.	24				47
AA1108 R.	43	AA1758 R.	18	AA2223 R.	19	AB214 R.	27	AB1838 R.	46
AA1111 R.	43	AA1769 R.	11	AA2224 R.	4	AB284 R.	8		
AA1112 R.	29	AA1770 R.	13	AA2225 R.	4	AB292 R.	9	AB1840 R.	46
AA1122 R.	19	AA1771 R.	27	AA2226 R.	4	AB326 R.	9		47
		AA1776 R.	27			AB330 R.	23		
AA1123 R.	19			AA2228 R.	21		29	AB1842 R.	46
AA1124 R.	19	AA1777 R.	6	AA2235 R.	13	AB336 R.	30		47
AA1129 R.	30	AA1778 R.	6	AA2237 R.	13	AB379 R.	33	AB1843 R.	38
AA1130 R.	30	AA1779 R.	40	AA2238 R.	12	AB380 R.	33	AB1857 R.	46
AA1163 R.	27			AA2239 R.	12	AB383 R.	33	AB1860 R.	46
AA1168 R.	24					AB384 R.	33	AB1898 R.	5
	27								

AB

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
AB1913 R.	46	AD1539 R		B281 R.	7	B991 R.	53	B1271 R (2442)	35
AB1956 R.	47	(51234)	34		30		58	B1272 R (2443)	35
AB1959 R.	47	AD1540 R		B290 R.	67	B994 R.	48	B1233 R.	27
AB1960 R.	47	(51202)	34	B292 R.	15	B995 R.	48	B1234 R.	55
AB1962 R.	47			B293 R.	15	B1026 R.	48	B1403 R.	19
		AD1541 R		B294 R.	15				
AB1963 R.	47	(7316)	33	B296 R.	15	B1028 R.	48	B1404 R.	19
AB1964 R.	48	AD1542 R				B1030 R.	46	B1405 R.	19
AB1965 R.	48	(7347)	33	B298 R.	15		48	B1406 R.	19
AB1978 R.	48	AD1543 R		B305 R.	23	B1033 R.	46	B1441 R.	12
AB1979 R.	48	(6822)	33	B353 R.	40		48	B1447 R.	8
		AD1606 R.	28	B359 R.	5				
AB2568 R.	46	AD1771 R	63	B365 R.	43	B1034 R (1216)	35	B1451 R.	11
	48			B372 R.	62	B1035 R (1217)	35	B1479 R.	10
AB2571 R.	41	AD1772 R	63		63			B1504 R.	13
AB2578 R.	48	AD1773 R	63	B389 R.	27	B1038 R (1194)	35	B1516 R.	14
AB2594 R.	41	AD1781 R	63	B390 R.	7	B1039 R (1210)	35	B1518 R.	14
		AD1855 R	48	B391 R.	8	B1040 R (1883)	35		
		AD1861 R	48	B392 R.	27	B1041 R (1084B)	35	B1519 R.	14
				B423 R.	13	B1042 R (1116)	35	B1520 R.	14
		AD1882 R						B1521 R.	14
		(51664)	34	B425 R.	43	B1043 R (1121)	35	B1522 R.	14
				B427 R.	43	B1044 R (1117)	35	B1523 R.	14
				B430 R.	9	B1045 R (1118)	35		
				B432 R.	7		36	B1526 R.	13
				B439 R.	9	B1046 R (M155X)	36	B1529 R.	53
						B1047 R	36	B1530 R.	27
						(IXA256)	37	B1532 R.	56
				B440 R.	52			B1535 R.	27
				B449 R (DLT-13)	38				11
					39				48
				B450 R (S2424)	38	B1048 R (IKA761)	36		
					39	B1049 R (M127X)	36	B1539 R.	11
				B457 R (P710)	38	B1050 R (2405)	35	B1540 R.	11
					39	B1051 R (1165)	35	B1544 R.	12
				B465 R.	30	B1052 R (M71X)	36	B1563 R.	22
				B489 R.	43	B1053 R (M32XA)	36	B1564 R.	26
				B490 R.	43	B1054 R	35	B1574 R.	46
				B491 R.	43	(A178XA)	35	B1576 R.	47
				B497 R.	59	B1057 R (1167)	35	B1577 R.	47
				B504 R.	5	B1058 R (1168)	35	B1580 R.	47
						B1059 R (1169)	35		
				B507 R.	32			B1582 R.	47
					33	B1060 R (1170)	35	B1587 R.	47
				B508 R.	33	B1061 R (1171)	35	B1588 R.	47
				B509 R.	33	B1063 R (1418)	35		48
				B510 R.	32		36	B1589 R.	47
					33	B1064 R (1083)	35		48
				B514 R.	33	B1065 R (1110)	35	B1592 R.	47
									48
				B515 R.	33				

NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW", 121 "AR" AND "AO" TRACTORS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C544 R.....	63	C1705 R.....	8	D393 R.....	8	D1082 R.....	67	D2216 R.....	13
C614 R.....	15	C1716 R.....	13	D403 R.....	15	D1083 R.....	40	D2319 R.....	53
C677 R.....	25	C1732 R.....	25		8			D2388 R.....	13
C719 R.....	3	C1778 R.....	11		15	D1086 R.....	16		
C732 R.....	5	C1823 R.....	5	D411 R.....	22	D1108 R.....	53	D2425 R.....	9
C744 R.....	16				55	D1124 R.....	44	D2427 R.....	9
C806 R.....	22	C1827 R.....	11	D417 R.....	57	D1133 R.....	45	D2428 R.....	9
	49		45	D430 R.....	48	D1138 R.....	59	D2440 R.....	10
	50		47		62		13	D2447 R.....	22
C834 R.....	50		48	D432 R.....	63	D1145 R (1212).....	33	D2526 R.....	21
	52	C1871 R.....	49		62	D1158 R.....	45	D2530 R (S2482).....	38
			50	D436 R.....	63	D1164 R.....	41		39
C838 R.....	27		51		62	D1250 R.....	24	D2569 R.....	44
C840 R.....	27	C1980 R.....	28		63	D1283 R.....	27	D2583 R.....	61
C893 R.....	56	C1982 R.....	28	D437 R.....	62		22	D2594 R.....	24
C902 R.....	7	C1985 R.....	28		63	D1416 R.....	64	D2595 R.....	24
C977 R.....	27			D443 R.....	63	D1524 R.....	25	D2596 R.....	24
		C2000 R.....	6	D453 R.....	8	D1550 R.....	54	D2606 R.....	24
C980 R.....	54	C2147 R.....	22	D454 R.....	15		55	D2608 R.....	24
C981 R.....	57	C2148 R.....	22		54	D1551 R.....	25	D2609 R.....	24
	58			D458 R.....	10	D1564 R.....	50		
C983 R.....	56	C2182 R.....	23					D2629 R.....	22
C985 R.....	62		29	D459 R.....	49	D1673 R.....	27	D2637 R.....	67
C998 R.....	7	C2199 R.....	22	D463 R.....	3	D1674 R.....	27	D2638 R.....	28
		C2271 R.....	26	D465 R.....	9	D1701 R.....	25	D2660 R (51227).....	34
C1027 R.....	22	C2308 R.....	25		30		27	D2661 R (51459).....	34
C1030 R.....	22	C2309 R.....	25	D466 R.....	49	D1720 R.....	15		
C1067 R.....	23				50			D2662 R (51267).....	34
C1105 R.....	56	C2321 R.....	18	D467 R.....	27	D1766 R.....	27	D2663 R (51254).....	34
C1109 R.....	27	C2325 R.....	26			D1767 R.....	57	D2664 R (51255).....	34
		C2326 R.....	26	D469 R.....	41	D1768 R.....	28	D2665 R (7775).....	34
C1220 R.....	27	C2327 R.....	26		43	D1769 R.....	28	D2666 R (7351).....	33
C1224 R.....	43		27	D473 R.....	13	D1771 R.....	62		
	43	C2331 R.....	30	D474 R.....	49			D2667 R (7348).....	33
C1231 R.....	27				50	D1797 R.....	28	D2669 R (51237).....	34
C1242 R.....	27	C2378 R.....	11		51	D1821 R.....	23	D2670 R (51301).....	34
C1285 R.....	63	C2501 R (X2653).....	38	D475 R.....	50	D1856 R.....	13	D2671 R (7616).....	34
			39		51	D1866 R.....	15	D2672 R (17394).....	34
C1286 R.....	63	C2502 R (S2369).....	38		51	D1868 R.....	15		
C1294 R.....	22		39	D478 R.....	52	D1879 R.....	67	D2673 R (7524).....	33
C1295 R.....	22	C2504 R (S2471).....	38		63	D1881 R.....	25	D2674 R (51266).....	34
C1300 R.....	30		39	D479 R.....	62	D1887 R.....	13	D2675 R (3722).....	33
C1320 R.....	35				63	D1888 R.....	25	D2676 R (51271).....	34
	64	C2505 R (S2472).....	38	D486 R.....	24	D1898 R.....	28	D2677 R (51231).....	34
		C2506 R (X2648).....	38	D488 R.....	5			D2678 R (51257).....	34
			39		13	D1922 R.....	6	D2679 R (51256).....	34
C1324 R (3794).....	33			D508 R.....	49	D1923 R.....	6	D2680 R (51230).....	34
C1330 R.....	32				51	D1924 R.....	6	D2681 R (51252).....	34
	33			D528 R.....	62	D1925 R.....	6	D2682 R (51283).....	34
C1331 R.....	32					D1932 R.....	16		
C1333 R.....	32			D530 R.....	22	D1935 R.....	10	D2683 R (51233).....	34
C1334 R.....	32			D531 R.....	22	D1938 R.....	15	D2684 R (7593).....	34
	33			D544 R.....	55	D1939 R.....	15	D2685 R (7595).....	34
					57	D1950 R.....	8	D2686 R (7717).....	34
C1335 R.....	32			D571 R.....	56		23	D2687 R (7523).....	33
	33	D82 R.....	11	D574 R.....	22	D1951 R.....	8		
	43	D112 R.....	61					D2688 R (2635).....	33
C1336 R.....	32	D126 R.....	13	D575 R.....	22	D1952 R.....	8	D2689 R (51287).....	34
C1344 R.....	35	D136 R.....	23	D582 R.....	25	D1957 R.....	8	D2690 R (51229).....	34
	36	D137 R.....	52	D583 R.....	25	D1969 R.....	23	D2691 R (51209).....	34
C1350 R.....	35			D584 R.....	25		25	D2692 R (35207).....	34
	36	D156 R.....	27	D585 R.....	55				
	37	D157 R.....	8			D1994 R.....	8	D2693 R (51435).....	34
C1399 R.....	63		14	D595 R.....	55	D2001 R.....	9	D2694 R (63399).....	34
		D178 R.....	16		56		13	D2695 R (63400).....	34
C1438 R.....	8	D186 R.....	24	D597 R.....	57	D2003 R.....	37	D2696 R (7366).....	33
C1472 R.....	20		27		57	D2009 R.....	3	D2697 R (51236).....	34
C1479 R.....	5	D233 R.....	22	D603 R.....	64	D2031 R.....	8	D2698 R (7535).....	33
	26			D616 R.....	57	D2081 R.....	10	D2699 R (63643).....	34
		D279 R.....	15	D625 R.....	3	D2101 R.....	13	D2700 R (16640).....	34
C1490 R.....	8	D319 R.....	13		20			D2701 R (51272).....	34
C1513 R.....	55			D635 R.....	25	D2102 R.....	13	D2702 R (53367).....	34
C1514 R.....	55	D336 R.....	61	D678 R.....	16	D2119 R.....	8	D2703 R (35252).....	34
C1517 R.....	22	D339 R.....	64	D793 R.....	9	D2120 R.....	8	D2704 R (35251).....	34
B1533 R.....	3	D342 R.....	4	D794 R.....	9	D2121 R.....	22	D2705 R (29631).....	34
	20			D827 R.....	25	D2122 R.....	11	D2706 R (18309).....	34
								D2707 R (16756).....	34
C1539 R.....	50			D843 R.....	24	D2124 R.....	3	D2708 R (7617).....	34
C1570 R.....	45	D349 R.....	28	D844 R.....	24	D2141 R.....	44	D2709 R (7340).....	33
C1572 R.....	40	D355 R.....	15	D849 R.....	25	D2142 R.....	44	D2710 R (7572).....	34
C1573 R.....	12	D362 R.....	13	D888 R.....	57	D2143 R.....	44	D2711 R (51273).....	34
		D363 R.....	67	D901 R.....	49	D2144 R.....	44	D2712 R (6140).....	33
C1578 R.....	55	D376 R.....	6						
C1591 R.....	40			D916 R.....	52	D2145 R.....	44	D2713 R (29335).....	34
C1592 R.....	44	D377 R.....	41	D938 R.....	22	D2146 R.....	44	D2714 R (29411).....	34
C1646 R.....	22	D380 R.....	9	D942 R.....	49	D2147 R.....	44	D2715 R (7571).....	33
C1647 R.....	54	D392 R.....	10	D993 R.....	41	D2148 R.....	44	D2716 R (3398).....	33
	55			D1034 R.....	40	D2149 R.....	44	D2717 R (7343).....	33
				D1050 R.....	25	D2184 R.....	22	D2718 R (7349).....	33
				D1078 R.....	22	D2213 R.....	35	D2719 R (7350).....	33
				D1080 R.....	3				

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	
D2720 R (3055)	33	H		JD7539 R	15	6214	33	51673	34	
D2721 R (30537)	34				JD7551 R	17	6763	33	53367	34
D2722 R (29555)	34				JD7552 R	17	6822	33	63399	34
D2723 R (62)	33		H448 R	47	JD7559 R	18	7316	33	63400	34
D2724 R (51244)	34		H574 R	55		15	7334A	33	63643	34
D2725 R (515)	33		H577 R	11	JD7587 R	17				
D2726 R (7344)	33		H641 R (A179X)	37		15	7340	33	C1335 R	35
D2727 R (72)	33		H642 R (16-480)	36	JD7649 R	19	7343	33	C1350 R	35
D2765 R	8		H643 R (1727A)	36	JD7655 R	7	7344	33	D2213 R	35
D2780 R	62		H644 R (1814)	36		15	7347	33		
D2781 R	62		H645 R (2495)	37	JD7656 R	7	7348	33		
D2782 R	62		H646 R (16-491C)	36	JD7657 R	15	7349	33		
D2783 R	62		H647 R (2061B)	36		7	7350	33		
					JD7663 R	15	7351	33		
D2808 R	30		H648 R (15-186)	36		26	7366	33		
D2824 R	4		H649 R (16-583)	36	JD7664 R	17	7523	33		
D2882 R	21		H650 R (IVA583)	37		41	7524	33		
D2883 R	60		H651 R (M42XA)	37	JD7665 R	16	7535	33		
D2887 R	8		H652 R (2288)	37	JD7672 R	17	7571	33		
				JD7673 R	16	7572	34			
D2888 R (51655)	34	H653 R (2122)	36		41	7593	34			
D2889 R (51656)	34	H654 R (2121)	36	JD7679 R	26					
D2911 R	67	H655 R (2496)	37			7595	34			
D2914 R	47	H656 R (2497)	37	JD7680 R	18	7606	34			
	48	H657 R (2504)	37	JD7686 C	41	7616	34			
D2937 R (51666)	34				43	7617	34			
		H658 R (2503)	37	JD7751	40	7717	34			
		H659 R (2745)	37	JD7759	3					
		H660 R (2505)	37		23	7775	34			
		H661 R (2641)	37		25	16640	34			
		H662 R (2537)	37		26	16756	34			
					28	17394	34			
		H663 R (2538)	37		43	18309	34			
		H664 R (1404)	36	JD7760	20					
		H665 R	37		23	29335	34			
		H666 R	37		25	29411	34			
						29555	34			
				JD7904 R	19	29631	34			
				JD7914 R	17	30537	34			
				JD7920 R	17					
				JD8108 R	19					
						35207	34			
						35251	34			
						35252	34			
						51202	34			
						51209	34			
						51226	34			
						51227	34			
						51229	34			
						51230	34			
						51231	34			
						51233	34			
						51234	34			
						51236	34			
						51237</				

NUMERICAL INDEX FOR JOHN DEERE MODELS "A", "A N", "AW", 123 "AR" AND "AO" TRACTORS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
1760	36	M155X	36	18-O	38	91W (S2147)	38		39
1786	35	X1097	36		39		39	S1096	38
1814	36	X1122	36	25-J	38	94W (S2154)	38	S1121	38
1883	35	X1134	36		39		39		39
2061B	36	X1145	36	25-V	38	95W (S2183A)	38		
					39	97W (DLT7-A)	38	S1393	38
2121	36	X1220	36						39
2122	36	X1230	36	41W (S251A)	38	321 R	38	S1506	38
2219	35	X1331	36		39	A705 R	38		39
2236	35	X1413	37	45W (S2502)	38		39	S2041	38
2264B	35	X1570	36		39	AA200 R	38		39
	37			46W (S1096)	38	AA580 R	38	S2146	38
		X2226	36	47-193	39	AA2498 R	39		39
2288	37	X2228	36	57W (1-K)	38			S2147	38
2405	35	X2229	36		39	AB1843 R	38		39
2442	35	X2231	36				39		
2443	35	X2237	36	63W (S1393)	38	B1663 R	38	S2151C	38
2495	37				39		39	S2151E	39
		X2296	36	64W (P713)	38	B1664 R	38	S2154	38
2496	37	X2595	36	65W (25-J)	38		39		39
2497	37	X2719	37		39	D392 R	38	S2183A	38
2503	37	X2723	37	67W (S211G)	38		39	S2192 (D392R)	38
2504	37	X2766	37		39	DLT7-A	38		39
2505	37			68W (25-V)	38				
		X2770	36		39	DLT-13	38	S2369	38
2537	37	X2938	37				39		39
2538	37	X3043	37	69W (X2457)	38	P52	38	S2424	38
2641	37	X3051	37		39		39		39
2745	37	X3114	37	70W (15-285)	38	P348	38	S2471	38
A33X	37				39		39		39
		X3168	37	71W (15-57)	38	P710	38	S2472	38
A178XA	35	X3342	36		39		39	S2482	38
A179X	37	X3343	37	72W (P52)	38	P713	38		39
A243X	35	X3543	36		39				
	37			73W (P791)	38	P791	38	S2502	38
A705 R	35				39		39		39
	37					P850	38	SI-10	38
C1320 R	35			74W (P850)	38		39		39
	36				39	P947	38	SI-18 (15-29)	38
C1344 R	35			75W (P947)	38		39		39
	36				39	P948	38	WSX-2721	38
C1350 R	37			76W (P948)	38		39	X1178B	38
	37				39	P950	38		39
D2003 R	37			77W (P950)	38		39		
H665 R	37				39				
H666 R	37			78W (P951)	38	P951	38	X2457	38
					39		39		39
IKA761	36	1-K	38			S93B	38	X2458	38
IVA583	37		39	79W (S98)	38		39		39
IXA256	36	4W (X1178B)	38		39	S98	38	X2461	38
	37		39	80W (S98B)	38		39		39
IXA345	36	10W (SI-10)	38		39	S98B	38	X2462	38
	37		39	81W (S245)	38		39		39
M32XA	36	15-29	38		39	S211G	38	X2648	38
			39	83W (S1506)	38		39		39
		15-57	38		39				
M42XA	37		39	85W (S2041)	38	S245	38	X2653	38
M71X	36				39		39		39
M94X	36	15-285	39			S251A	38	X2691	38
M126XB	36		38	90W (S2146)	38		39	X2692	38
	37	17W (S93B)	38		39	S763	38	X2773	38
M127X	36		39					X2774	38
								X2890	39