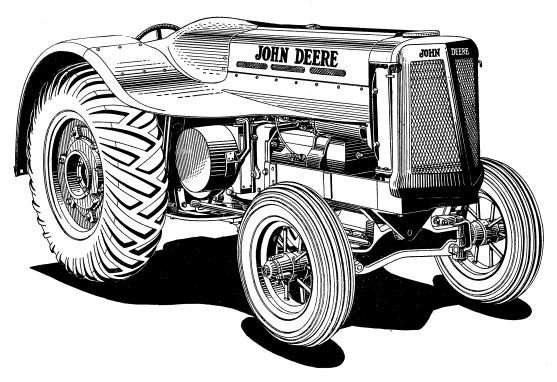


JOHN DEERE Parts Catalog

NO. 48R REPAIR CATALOG FOR MODEL "AO" TRACTOR

CAT48R



John Deere Model "AO" Tractor

Instructions for Ordering Parts

First. Always give serial number of tractor when ordering repairs.

Second. Give number and name of each part ordered. If in doubt as to correct name and number, send dimensioned sketch or return broken parts, charges prepaid.

Third. Orders for parts should be written separately from correspondence.

Fourth. State whether shipments are to be forwarded by Freight, Express, or Parcel Post. Telegraph orders will be shipped Express or Parcel Post unless otherwise instructed.

TRANSMISSION CASE A0-1000-	Number	NAME AND DESCRIPTION	Serial Number	PI N
294 R Stud, Steering Housing to Case		TRANSMISSION CASE		
1462 R Fipe Plug, Power Shaft Shifter Hole	294 R	Stud. Steering Housing to Case	AO-1000-	
284 R Stud, L. H. Main Bearing		Pipe Plug, Power Shaft Shifter Hole	AO-1000-	
399 R Casket, Transmission Case Cover AO-1000		Stud. L. H. Main Bearing	AO-1000	
A 823 R Cover, A912 R, Transmission Case, with Gear Shift Interlock		Gasket Transmission Case Cover	AO-1000-	
A 843 R Case, Al141 R, Transmission, Main	A 823 R	Cover, A912 R, Transmission Case, with Gear Shift Interlock		
1	A 843 R	Case, A1141 R, Transmission, Main	AO-1000-	
2142 R Pipe Plug, Transmission Case Drain	719 R	Stud. Cylinder to Case.	AO-1000-	
2142 R Pipe Plug, Transmission Case Drain) 463 R	Welch Plug, Transmission Cover		
2142 R Pipe Plug, Crank Case Drain	2142 R	Pipe Plug, Transmission Case Drain		
X 3083 R Stud, Gear Cover to Case AO-1000- X 2471 R Pipe Plug, Transmission Case Oil Level, R. H. AO-1735- A 191 R Bolt, R. H. Main Bearing. AO-1000- A 266 R Bolt, L. H. Main Bearing. Laminated. AO-1000- A 302 R Shim, L. H. Main Bearing. Laminated. AO-1000- A 903 R Gasket, L. H. Main Bearing Cover. AO-1000- A 147 R Saket, C. Rank Case. AO-1000- A 147 R Saket, L. H. Main Bearing, Laminated. AO-1000- A 1672 R Shim, R. H. Main Bearing. AO-1000- A 1672 R Spacer, Flywheel with D2124 R Cork Washer. AO-1000- A 1872 R Spacer, Flywheel with D2124 R Cork Washer. AO-1000- A 1805 R Flywheel, A1662 R, with D15 and D1ving Pin. AO-1000- A 1807 R Housing, A1663 R, Main Bearing, with Cap, R. H. AO-1000- A 1808 R Housing, A1644 R, Mais Bearing, with Cap, L. H. AO-1000- A 1808 R Pin, Flywheel Spacer Driving AO-1000- A 1807 R Pin, Flywheel Spacer Driving AO-1000- A 1808 R Pin, Flywheel Spacer	2142 R	Pine Plug Crank Case Drain		
X 3083 R Stud, Gear Cover to Case AO-1000- X 2471 R Pipe Plug, Transmission Case Oil Level, R. H. AO-1735- A 191 R Bolt, R. H. Main Bearing. AO-1000- A 266 R Bolt, L. H. Main Bearing. Laminated. AO-1000- A 302 R Shim, L. H. Main Bearing. Laminated. AO-1000- A 903 R Gasket, L. H. Main Bearing Cover. AO-1000- A 147 R Saket, C. Rank Case. AO-1000- A 147 R Saket, L. H. Main Bearing, Laminated. AO-1000- A 1672 R Shim, R. H. Main Bearing. AO-1000- A 1672 R Spacer, Flywheel with D2124 R Cork Washer. AO-1000- A 1872 R Spacer, Flywheel with D2124 R Cork Washer. AO-1000- A 1805 R Flywheel, A1662 R, with D15 and D1ving Pin. AO-1000- A 1807 R Housing, A1663 R, Main Bearing, with Cap, R. H. AO-1000- A 1808 R Housing, A1644 R, Mais Bearing, with Cap, L. H. AO-1000- A 1808 R Pin, Flywheel Spacer Driving AO-1000- A 1807 R Pin, Flywheel Spacer Driving AO-1000- A 1808 R Pin, Flywheel Spacer	D 7759	Alemite Fitting, No. 1610, Steering Shaft Lower Bushing		ŀ
Bolt, R. H. Main Bearing.		Stud Gear Cover to Case		
A 191 R Bolt, R. H. Main Bearing. A 256 R Bolt, L. H. Main Bearing. A 302 R Shim, L. H. Main Bearing. AD-1000- A 302 R Shim, L. H. Main Bearing. Laminated. A 902 R Cover, Crank Case. A 903 R Gasket, L. H. Main Bearing Housing. A 1671 R Shim, R. H. Main Bearing, Laminated. A 1671 R Shim, R. H. Main Bearing, Laminated. A 0-1000- A 1672 R Cover, Crank Case. A 1671 R Shim, R. H. Main Bearing, Laminated. A 0-1000- A 1672 R Cover, L. H. Main Bearing, Laminated. A 0-1000- A 1672 R Cover, L. H. Main Bearing, Laminated. A 1673 R Shim, R. H. Main Bearing, Laminated. A 1674 R National State of the Main Bearing (2 Halves) A 244 R Shim, R. H. Main Bearing, Canada Driving Pin. A 0-1000- A 1873 R Bushing, L. H. Main Bearing, With Cap, R. H. A 0-1000- A 1330 R Housing, A1663 R, Main Bearing, with Cap, R. H. A 0-1000- A 1330 R Housing, A1664 R, Main Bearing, With Cap, L. H. A 0-1000- A 1349 R Bushing, R. H. Main Bearing, With Cap, L. H. A 0-1000- A 1349 R Bushing, R. H. Main Bearing, A 0-1000- D 2009 R Pin, Flywheel Spacer Driving, D 2124 R Pipe Plug, Crank Case Oil Drain D 2124 R Pipe Plug, Crank Case Oil Drain Pipe Plug, L. H. Main Bearing Housing. A 0-1000- D 2124 R Pipe Plug, Crank Case Oil Drain Pipe Plug, Crank Case Oil Drain A 103 R Gear, Crankshaft. A 103 R Gear, Crankshaft. A 1607 R Snap Ring, Piston Pin. A 1607 R Snap Ring, Piston Pin. A 1607 R Snap Ring, Piston Pin. A 463 R A 463 R Bolt with Nut and Cotter, Connecting Rod. A 1607 R Snap Ring, Piston Pin. A 1607 R Snap Ring, Piston Pin. A 1607 R Snap Ring, Piston, 030" Oversize Connecting Rod. Alloyou- A 1607 R Ring, Piston, 030" Oversize Connecting Rod. A 1607 R Ring, Piston, 045" Oversize Connecting Rod. A 1607 R Ring, Piston, 045" Oversize Connecting Rod. A 1607 R Ring, Piston, 045" Oversize Connecting Rod. A 1607 R Ring, Piston, 045" Oversize Connecting Rod. A0-1000- A 1600- A 1600 R Ring, Piston, 045" Oversize Connecting Rod Solution Crankshaft with Gear, Main Bearing, Connecting Rods. Cylinder Block Replacement Assembly, Consisting of Crankshaft and Cylinder Blo	C 2471 R	Pipe Plug, Transmission Case Oil Level, R. H.	AO-1735-	
A 266 R Bolt, L. H. Main Bearing. A 302 R Shim, L. H. Main Bearing, Laminated. A 302 R Shim, L. H. Main Bearing, Laminated. A 902 R Cover, Crank Case. A 903 R Gasket, L. H. Main Bearing Cover. A 903 R Gasket, Crank Case Cover. A 1147 R Gasket, L. H. Main Bearing Laminated. A 1671 R Shim, R. H. Main Bearing, Laminated. A 1672 R Cover, L. H. Main Bearing. A 0-1000- A 1671 R Shim, R. H. Main Bearing, Laminated. A 0-1000- A 1671 R Shim, R. H. Main Bearing, Laminated. A 0-1000- A 1672 R Cover, L. H. Main Bearing. A 0-1000- A 244 R Spacer, Flywheel with D2124 R Cork Washer. A 0-1000- A 244 R Spacer, Flywheel with D2124 R Cork Washer. A 0-1000- A 1305 R Flywheel, A 1662 R, with Bolts and Driving Pin. A 0-1000- A 1305 R Flywheel, A 1662 R, with Bolts and Driving Pin. A 0-1000- A 1310 R Housing, A 1663 R, Main Bearing, with Cap, R. H. A 0-1000- A 1310 R Housing, A 1664 R, Main Bearing, with Cap, L. H. A 0-1000- A 1310 R Housing, A 1664 R, Main Bearing, With Cap, L. H. A 0-1000- A 1310 R Housing, A 1664 R, Main Bearing, B 0-1080 R Screw, Flywheel Spacer Cork B 1124 R Pipe Plug, Crank Case Oil Drain B 102142 R Pipe Plug, Crank Case Oil Drain B 103 R Connecting Rod, Laminated. A 103 R Gear, Crankshaft. Shim, Connecting Rod, Laminated. A 103 R Gear, Crankshaft. Shim, Connecting Rod, Laminated. A 103 R Gear, Crankshaft. Shim, Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with Old Rod will be filled with New Rods and Billed at full price. B 101 Rod Ring, Piston, 0307 Oversize (Set of 10) A 102 R Ring, Piston, 0457 Oversize (Set of 10) A 103 R Ring, Piston, 0457 Oversize (Set of 2) A 104 R Ring, Piston, 057 Oversize (Set of 2) A 105 R Pipe Plug, Piston Pin, Netton, Ost Oversize (Set of 2) A 106 A 1000-A 10				
Shim, L. H. Main Bearing, Laminated		Bolt, R. H. Main Bearing		
A 224 R. Gasket, L. H. Main Bearing Cover		Bolt, L. H. Main Bearing		
A 902 R Gosket, Crank Case Cover A 1147 R Gasket, L. H. Main Bearing Housing A 1671 R Shim, R. H. Main Bearing, Laminated A 1672 R Cover, L. H. Main Bearing, A 244 R Shim, R. H. Main Bearing, A 247 R Shim, R. H. Main Bearing, A 248 Sa Shim, R. H. Main Bearing, A 248 Sa Shim, R. H. Main Bearing, A 248 Sa Shim, R. H. Main Bearing, A 249 S Serew, Flywheel Jocating, A 2404 R Shim, R. H. Main Bearing, A 2404 R Shim, R. H. Main Bearing, A 2404 S R Shim, R. H. Main Bearing, With Cap, R. H. A 248 Sa Shim, R. H. Main Bearing, With Cap, R. H. A 248 Sa Shim, R. H. Main Bearing, With Cap, R. H. A 249 Sa Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, With Cap, R. H. A 2404 R Shim, R. H. Main Bearing, Main Bearing, Connecting Rod. A 2404 R Shim, R. H. Main Bearing, Main Bearing, Connecting Rod. A 2404 R Shim, Piston, 045° Oversize (Set of 10) A 2404 R Shim, Piston, With Rings, Standard A 2404 R Shim, Piston, With Rings, Main Bearing, Connecting Rods, Cylinder Block with Pistons, Piston Pin Ston Pin		Shim, L. H. Main Bearing, Laminated		1
A 903 R Gasket, Crank Case Cover. A0-1000- A 1671 R Shim, R. H. Main Bearing Housing. A0-1000- A 1671 R Shim, R. H. Main Bearing, Laminated. A0-1000- AA 244 R Spacer, Flywheel with D2124 R Cork Washer. A0-1000- AA 1305 R Flywheel, A1662 R, with Bolts and Driving Pin. A0-1000- AA 1305 R Housing, A1663 R, Main Bearing, with Cap, R. H. A0-1000- AA 1305 R Housing, A1663 R, Main Bearing, with Cap, L. H. A1305 R Housing, A1664 R, Main Bearing, with Cap, L. H. A1305 R Housing, A1664 R, Main Bearing, with Cap, L. H. A0-1000- AA 1310 R Housing, A1664 R, Main Bearing, with Cap, L. H. A0-1000- AA 13430 R Housing, A1664 R, Main Bearing, with Cap, L. H. A0-1000- A0		Gasket, L. H. Main Bearing Cover		
A 147 R Gasket, L. H. Main Bearing Housing. A 1671 R Shim, R. H. Main Bearing. A 1672 R Cover, L. H. Main Bearing. A 244 R Spacer, Flywheel with D2124 R Cork Washer. Bushing, L. H. Main Bearing (2 Halves) A 397 R Bushing, L. H. Main Bearing (2 Halves) A 1308 R Flywheel, A1662 R, with Bolts and Driving Pin. A 1308 R Housing, A1663 R, Main Bearing, with Cap, R. H. A 1310 R Housing, A1663 R, Main Bearing, with Cap, L. H. A 0-1000- A 1310 R Bushing, R. H. Main Bearing, with Cap, L. H. A 0-1000- A 13130 R Housing, A1664 R, Main Bearing, with Cap, L. H. A 0-1000- A 13130 R Bushing, R. H. Main Bearing, with Cap, L. H. A 0-1000- A 13130 R Bushing, R. H. Main Bearing, with Cap, L. H. A 0-1000- Bushing, R. H. Main Bearing, with Cap, L. H. A 0-1000- Color Bushing, R. H. Main Bearing, with Cap, L. H. A 0-1000- A 103 R Color Bushing, R. H. Main Bearing, with Cap, L. H. A 0-1000- D 2009 R Pin, Flywheel Spacer, Cork. Color Bin, Flywheel Spacer, Cork. Color Bipe Plug, Crank Case Oil Drain Color Bipe Plug, Crank Case Oil Drain Color Bipe Plug, L. H. Main Bearing Housing. A 103 R Color Bipe Plug, Crank Case Oil Drain Color Bipe Plug, Crank Case Oil Drain Color Bipe Plug, L. H. Main Bearing Housing. A 103 R Color Bipe Plug, Crank Case Oil Drain Color Connecting Rod, Complete Connecting Rod, Al07 R, Complete Connecting Rod, Complete Oild Connecting Rod Allond Connecting Rod, Al07 R, Complete Connecting Rod, Spiron, Oil Control Oil Rod, Color Connecting Rod, Alor Color Connecting Rod, Color Connecting Rod, Color Connecting Rod, Color Connecting Rod,		Cover, Crank Case		
A 1671 R Shim, R. H. Main Bearing, Laminated. A 0-1000- AA 244 R Spacer, Flywheel with D2124 R Cork Washer. AO-1000- AA 397 R Bushing, L. H. Main Bearing C. Holoon- AA 1308 R Housing, A1663 R, With Bolts and Driving Pin. AA 1308 R Housing, A1663 R, With Bolts and Driving Pin. AA 1310 R Housing, A1664 R, Main Bearing, with Cap, R. H. AO-1000- AA 1310 R Housing, A1664 R, Main Bearing, with Cap, L. H. AO-1000- AA 1310 R Housing, A1664 R, Main Bearing, With Cap, L. H. AO-1000- AO		Gasket, Crank Case Cover		
A 1672 R A 244 R Spacer, Flywheel with D2124 R Cork Washer. AO-1000- AA 397 R AA 1305 R AA 1305 R AA 1305 R Housing, A1663 R, Main Bearing, with Cap, R. H. AO-1000- AA 1310 R Housing, A1664 R, Main Bearing, with Cap, R. H. AO-1000- AA 1310 R Housing, A1664 R, Main Bearing, with Cap, R. H. AO-1000- AA 1310 R Housing, A1664 R, Main Bearing, with Cap, R. H. AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- Bushing, R. H. Main Bearing, with Cap, L. H. AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- Bushing, R. H. Main Bearing, With Cap, R. H. AO-1000- AO-1000- AO-1000- Bushing, R. H. Main Bearing, AO-1000- Pin, Flywheel Spacer, Cork. AO-1000- Pipe Plug, Crank Case Oil Drain Pipe Plug, Crank Case Oil Drain Pipe Plug, Crank Case Oil Drain Pipe Plug, L. H. Main Bearing Housing. AO-1000- AO-1000- AO-1000- AO-1000- BO 2124 R BO 2038 R BO 303 R		Gasket, L. H. Main Bearing Housing		
AA 244 R. Spacer, Flywheel with D2124 R Cork Washer. AO-1000- Bushing, L. H. Main Bearing (2 Halves) AO-1000- AA 1308 R. Flywheel, A1662 R, with Bolts and Driving Pin AO-1000- AA 1308 R. Housing, A1663 R, Main Bearing, with Cap, R. H. AO-1000- AA 131430 R. Housing, A1664 R, Main Bearing, with Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, Washer, Flywheel Spacer, Cork. AO-1000- Bushing, R. H. Main Bearing, Washer, Flywheel Spacer, Cork. AO-1000- Bushing, R. H. Main Bearing, Washer, Flywheel Spacer, Cork. AO-1000- Bushing, R. H. Main Bearing, Washer, Washer, Flywheel Spacer, Cork. AO-1000- Bushing, R. H. Main Bearing, Cork. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, Cork. AO-1000- Bushing, R. H. Main Bearing, Cork. AO-1000- Bushing, R. H. Main Bearing, Cork. AO-1000- Bushing, R. H. Main Bearing, With Cap, L. H. AO-1000- Bushing, R. H. Main Bearing, Connecting Rod, AO-1000- Bushing, Piston, Olfor Oversize (Set of 10). AO-1000- Bushing, Piston, Olfor Oversize (Set of 2). AO-1000- Bushing, Piston, Olfor Oversize (Set Screw Type) (Set of 2). AO-1000- Bushing, Piston, Piston Pin (Set of 2). AO-1000- Bushing, Piston, Piston Pin (Set of 2). AO-1000- Bushing, Piston, Piston Pin (Set of 2). AO-1000- Bushing, Piston, Sap Ring Type) (Set of 2). AO-1000- Bushing, Piston, Sap Ring Type,		Shim, R. H. Main Bearing, Laminated		
AA 397 R AA 1308 R AA 1308 R Flywheel, A1662 R, with Botts and Driving Pin AO-1000- AA 1309 R Housing, A1663 R, Main Bearing, with Cap, R, H AO-1000- AA 1349 R Housing, A1664 R, Main Bearing, with Cap, L, H AO-1000- AA 1349 R Bushing, R. H. Main Bearing, with Cap, L, H AO-1000- AO-1000- AO-1000- AO-1000- D 1080 R Screw, Flywheel Locating AO-1000- D 2124 R Washer, Flywheel Spacer Ork AO-1000- D 2124 R Pipe Plug, Crank Case Oil Drain AO-1000- E 2142 R Pipe Plug, Crank Case Oil Pipe Plug, Piston, Oil Control (Ring) Oil Pipe Plug Plug Plug Plug Plug Plug Plug Plug		Cover, L. H. Main Bearing		
## Ad 1305 R		Spacer, Flywheel with D2124 R Cork washer		
Housing, A1668 R, Main Bearing, with Cap, R. H. A0-1000-		Bushing, L. H. Main Bearing (2 Halves)		
Ad 1310 R Housing, A1664 R, Main Bearing, with Cap, L. H. AO-1000-		Flywheel, A1662 R, with Bolts and Driving Pin.		
A 1349 R D 1080 R Screw, Flywheel Spacer Driving. A 0-1000- D 2124 R E 2142 R E 214		Housing, A1663 R, Main Bearing, with Cap, N. H.		
D. 1080 R D. 2009 R Pin, Flywheel Locating AO-1000-		Dushing, A1004 K, Wain Dearing, with Cap, L. II.		
D 2019 R Pin, Flywheel Spacer Driving.		Dusning, R. H. Main Dearing.		
D 2124 R 2 2142 R Pipe Plug, Crank Case Oil Drain AO-1000- E 2142 R Pipe Plug, L. H. Main Bearing Housing. AO-1000- B 2142 R Pipe Plug, L. H. Main Bearing Housing. AO-1000- A		Din Elyuphool Spacer Driving		
### 2142 R Pipe Plug, Crank Case Oil Drain Pipe Plug, L. H. Main Bearing Housing. ### A 103 R A 103 R A 319 R A 105 R A 319 R		Wegher Flywhool Spager Cork		
Pipe Plug, L. H. Main Bearing Housing. AO-1000-		Pine Plug Crent Cage Oil Drain		
A 103 R		Pipe Plug, L. H. Main Bearing Housing.		
AA 382 R AA 463 R Bolt with Nut and Cotter, Connecting Rod. Connecting Rod, A107 R, Complete. "Exchange" Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with Old Rod will be filled with New Rods and Billed at full price. Piston, A1109 R, with Rings, .030" Oversize. Piston, A61 R, with Rings, Standard. AA 1423 R AA 1572 R AA 1574 R AA 1574 R AA 1607 R AA 1607 R AA 1607 R AA 1621 R AA 1621 R AA 1622 R AA 1623 R AA 1624 R AA 1625 R AA 1626 R AA 1626 R AA 1627 R AA 1628 R AA 1628 R AA 1628 R AA 2034 R AA 2047 R AA 2047 R AA 2048 R AA 2047 R AA 2048 R AA 2049 R AA 20	A 303 R A 319 R	Gear, Crankshaft. Shim, Connecting Rod, Laminated	AO-1000- AO-1000-1061	
AA 463 R AA 463 R "Exchange" Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with Old Rod will be filled with New Rods and Billed at full price. Piston, A1109 R, with Rings, .030" Oversize. AA 1423 R AA 1423 R AA 1574 R AA 1607 R AA 1608 R AA 1608 R AA 2008 A AA 2008 A AA 2008 A AA 2008 A AA 200		Polt with Nut and Cotton Connecting Rad	AO-1002	
## A 463 R "Exchange "Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with Old Rod will be filled with New Rods and Billed at full price. Piston, A1109 R, with Rings, .030" Oversize. AA 1572 R AA 1572 R AA 1574 R AA 1574 R AA 1574 R AA 1620 R AA 1621 R AA 1621 R AA 1621 R AA 1622 R AA 1623 R AA 1623 R AA 1624 R AA 1625 R AA 1626 R AA 1626 R AA 1627 R AA 1628 R AA 1628 R AA 2034 R		Connecting Pod. A107 R. Complete	AO-1000-	
accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with Old Rod will be filled with New Rods and Billed at full price. Piston, A1109 R, with Rings, .030" Oversize. Piston, A61 R, with Rings, Standard. AA 1572 R AA 1572 R AA 1574 R AA 1574 R AA 1574 R AA 1607 R AA 1607 R AA 1608 R AA 16100 Piston, .030" Oversize (Set of 10). AA 1609 R AA 16100 Pin, Piston, .045" Oversize (Set of 10). AA 1620 R AA 1621 R AA 1621 R AA 1621 R AA 1622 R AA 1623 R AA 1624 R AA 1955 R AA 2034		"Exchange" Connecting Rod, Complete. Old Connecting Rod must		1
AA 737 R AA 840 R AA 840 R AA 1672 R AA 1672 R AA 1674 R AA 1675 R AA 1620 R AA 1621 R AA 1621 R AA 1622 R AA 1622 R AA 1623 R AA 1624 R AA 1625 R AA 1626 R AA 1626 R AA 1627 R AA 1627 R AA 1628 R AA 1629 R AA 2034 R		accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with		
AA 840 R Piston, A61 R, with Rings, Standard AO-1000- AA 1423 R Ring, Piston, .030" Oversize (Set of 10) AO-1000- AA 1572 R Piston with Rings, .045" Oversize AO-1000- AA 1607 R Ring, Piston, .045" Oversize (Set of 10) AO-1000- AA 1620 R Ring, Piston, Oil Control (1 Ring) AO-1000- AA 1621 R Pin, Piston, (Set Screw Type) (Set of 2) AO-1000- Pin, Piston, .005" Oversize (Set Screw Type) (Set of 2) AO-1062- Pin, Piston, .005" Oversize (Snap Ring Type) (Set of 2) AO-1062- Pin, Piston, .005" Oversize (Snap Ring Type) (Set of 2) AO-1062- AA 1623 R Ring, Piston, Oil Control (1 Ring) .045" Oversize AO-1062- AA 1955 R AA 1955 R AA 2026 R AA 2026 R Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets AO-1000- AA 2027 R AA 2034 R Ring, Piston, Standard (8 Compression and 2 Oil Control) AO-1000- AA 2048 R Ring, Piston, .045" Oversize (8 Compression and 2 Oil Control) AO-1000- AA 2348 R Ring, Piston (Set of 10) AO-1000-	AA 737 R.	Piston, A1109 R. with Rings, .030" Oversize	AO-1000-	
AA 1423 R AA 1572 R AA 1574 R AA 1574 R AA 1620 R AA 1621 R AA 1621 R AA 1622 R AA 1622 R AA 1623 R AA 1623 R AA 1626 R AA 1626 R AA 1627 R AA 1628 R AA 2025 R AA 1628 R AA 2025 R AA 1628 R AA 2025 R AA 1628 R AA 2026 R AA 1628 R AA 2027 R AA 2028 R AA 202		Piston, A61 R. with Rings, Standard	AO-1000-	
AA 1674 R AA 1607 R AA 1620 R AA 1621 R AA 1621 R AA 1622 R AA 1622 R AA 1623 R AA 1626 R AA 1626 R AA 1626 R AA 1627 R AA 1627 R AA 1628 R AA 1628 R AA 1628 R AA 1629 R AA 1620 R AA 162		Ring, Piston, .030" Oversize (Set of 10)	AO-1000-	
AA 1674 R AA 1607 R Ring, Piston, Oil Control (1 Ring). AA 1620 R AA 1621 R AA 1622 R AA 1623 R AA 1623 R AA 1626 R AA 1626 R AA 1627 R AA 1627 R AA 2025 R AA 2025 R AA 2026 R AA 2027 R AA 2027 R AA 2028 R AA 2029 R		Piston with Rings, .045" Oversize	AO-1000-	1
AA 1607 R AA 1620 R AA 1621 R Pin, Piston, (Set Screw Type) (Set of 2). AA 1622 R AA 1623 R AA 1628 R AA 1626 R AA 1626 R AA 1627 R AA 1628 R AA 1628 R AA 1628 R AA 1628 R AA 1629 R AA 1629 R AA 1620 R AA 1620 R AA 1620 R AA 1620 R Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets. Crankshaft, A 1660 R, Gear, Main Bearing, Connecting Rods and Shims (Substitute for AA1303 R) Ring, Piston, Standard (8 Compression and 2 Oil Control). AA 2048 R AA 2049 R AA 2048 R AA 2049 R AA 2		Ring, Piston, .045" Oversize (Set of 10)	AO-1000-	
AA 1620 R AA 1621 R Pin, Piston (Snap Ring Type) (Set of 2). AA 1623 R AA 1623 R AA 1623 R AA 1626 R AA 1626 R AA 1627 R AA 2025 R AA 2025 R AA 2026 R AA 2027 R AA 2027 R AA 2027 R AA 2027 R AA 2028 R AA 2029 R AA 2020 R AA 2	AA 1607 R	Ring Piston, Oil Control (1 Ring).	AO-1000-	
AA 1621 R AA 1622 R AA 1623 R AA 1626 R AA 1626 R AA 1955 R AA 2025 R AA 2025 R AA 2026 R AA 2027 R AA 2027 R AA 2027 R AA 2028 R AA 2029 R AA 202	AA 1620 R	Pin. Piston, (Set Screw Type) (Set of 2)	AO-1000-1061	
AA 1623 R AA 1626 R Bushing, Piston Pin (Set of 2) AA 2025 R AA 2025 R AA 2026 R AA 2026 R AA 2027 R AA 2034 R Bing, Piston, 016 Control (1 Ring) .045" Oversize		Pin, Piston (Snap Ring Type) (Set of 2).	AO-1062-	
AA 1623 R AA 1626 R Bushing, Piston Pin (Set of 2) AA 2025 R AA 2025 R AA 2026 R AA 2026 R AA 2027 R AA 2034 R Bing, Piston, 016 Control (1 Ring) .045" Oversize		Pin, Piston, .005" Oversize (Set Screw Type) (Set of 2)	AO-1000-1061	1
Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets. Crankshaft, A1660 R, Gear, Main Bearing, Connecting Rods and Shims (Substitute for AA1303 R) Ring, Piston, Standard (8 Compression and 2 Oil Control)	AA 1623 R	Pin. Piston005" Oversize (Snap Ring Type) (Set of 2)	AO-1062-	
Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets. Crankshaft, A1660 R, Gear, Main Bearing, Connecting Rods and Shims (Substitute for AA1303 R) Ring, Piston, Standard (8 Compression and 2 Oil Control)		Bushing, Piston Pin (Set of 2)	AO-1000-	
Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets. Crankshaft, A1660 R, Gear, Main Bearing, Connecting Rods and Shims (Substitute for AA1303 R) Ring, Piston, Standard (8 Compression and 2 Oil Control)		Ring, Piston, Oil Control (1 Ring) .045" Oversize	AO-1000-	
AA 2034 R Crankshaft, A1660 R, Gear, Main Bearing, Connecting Rods and Shims (Substitute for AA1303 R) Ring, Piston, Standard (8 Compression and 2 Oil Control). AA 2048 R AA 2048 R Ring, Piston, .045" Oversize (8 Compression and 2 Oil Control). A 0-1000- A 0-1	AA 2025 R	Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder		
Shims (Substitute for AA1303 R) AA 2047 R Ring, Piston, Standard (8 Compression and 2 Oil Control). AA 2048 R AA 2348 R Ring, Piston (Set of 10). AO-1000- AO-1000- AO-1000- AO-1000-	A A 2034 TP	Gaskets Crankshaft A1660 R. Gear Main Bearing Connecting Rods and		1.
AA 2047 R Ring, Piston, Standard (8 Compression and 2 Oil Control)		Shims (Substitute for AA1303 R)	AO-1000-	
AA 2048 R Ring, Piston, .045" Oversize (8 Compression and 2 Oil Control) AO-1000- AA 2348 R Ring, Piston (Set of 10)	AA 2047 R	Ring Piston, Standard (8 Compression and 2 Oil Control)	AO-1000-	
AA 2348 R Ring, Piston (Set of 10)		Ring, Piston, .045" Oversize (8 Compression and 2 Oil Control)	AO-1000-	
D 342 R Woodruff Key, in Crankshaft Gear AO-1000-	4 4 00 10 D	Ring, Piston (Set of 10)	AO-1000-	
				- 1

JOHN DEERE MODEL "AO" TRACTOR

Number	NAME AND DESCRIPTION	Serial Number	Pla No
	CYLINDER		_
426 R	Gasket, Cylinder to Case. Cylinder Block, A732 R, with Studs	AO-1000-	2
A 437 R A 535 R	Cylinder Block, A732 R, with Studs	AO-1000-	2
A 2025 R	Cylinder Block, A732 R, with Pistons, Piston Rings and Gaskets Cylinder Block and Crankshaft Replacement Assembly Consisting of	AO-1000-	
-11 2020 20	Cylinder Block, Pistons, Piston Rings, Piston Ping Crankshaft with		
	Gear, Main Bearings, Connecting Rods and Negoggary, Coalcots	AO-1000-	
B 1898 R	Cock, Compression Relief. Stud, Cylinder to Case.	AO-1000-	2
719 R 1823 R	Stud, Cylinder to Case. Stud, Cylinder Head	AO-1000-	1
1025 10		AO-1000-	2
321 R	CYLINDER HEAD, MANIFOLD, VALVES Gasket, Carburetor to Manifold.	AO 1000	
35 R	Guide, Valve	AO-1000- AO-1000-	2
125 R	Stud. Manifold. Medium (7/16" x 5-5/8")	AO-1000-	
130 R	Lock Washer (Half) Valve Stem	AO-1000-	2
245 R 356 R	Cap, Valve Spring.	AO-1000-	2
404 R	Spring, Valve. Gasket, Cylinder Head	AO-1000-	
405 R	Gasket, Manifold	AO-1000- AO-1000-	2
933 R	Pipe, Cylinder Head Water Inlet	AO-1000-	
1003 R	Manifold. Stud, Manifold, Left (7/16" x 6-1/2")	AO-1000-	2
1004 R 2093 R	Stud, Manifold, Left $(7/16'' \times 6-1/2'')$	AO-1000-	2
A 464 R	Pipe Plug, Cylinder Head Drain Cylinder Head, A587 R, with Valve Guides	AO-1000-	2
A 465 R	Cylinder Head, A587 R, with Valves and Springs	AO-1000- AO-1000-	2
A 1615 R	Sleeve, Push Rod (Set of 2)	AO-1000- AO-1000-	
A 1652 R	Lead Washer, Cylinder Head Stud (Box of 50)	AO-1000-	
A 1810 R	Valve, Intake (Set of 2)	AO-1000-	2
A 1811 R 359 R	Valve, Exhaust (Set of 2)	AO-1000-	2
504 R	Stud, Manifold, Short (7/16" x 4-3/4"). Stud, Manifold, Long (7/16" x 5-3/4").	AO-1000- AO-1000-	2
		AO-1000-	4
119 R	CAMSHAFT Stud, Camshaft Gear	AO-1000-	2
253 R	Plate, Camshaft Gear Locking	AO-1000-	2
355 R 425 R	Spring, Camshaft Thrust.	AO-1000-	2
425 R 1142 R	Gasket, Camshaft Bearing Housing.	AO-1000-	2
A 227 R	Camshaft Housing A31 R with Rearing Cup Complett I U	AO-1000- AO-1000-	2
A 1047 R	Housing, A31 R, with Bearing Cup, Camshaft, L. H Gear, A30 R, Camshaft, with Stud and Nut	AO-1000- AO-1000-	
D 7250 R	Cup. Camshaft Bearing	AO-1000- AO-1000-	2
D 7358 R	Cone with Rollers, Camshaft Bearing	AO-1000-	2
	CAM FOLLOWERS		
178 R 1595 R	Support, Cam Follower Guide	AO-1000-	32
A 958 R.	Guide, Cam Follower	AO-1000-	
77 000 IV	Cam Follower	AO-1000-	2
105 R	TAPPETS Lever, Tappet	AO 1000	
105 R 172 R	Lever, Tappet Nut, Tappet Oiler Pipe Packing.	AO-1000- AO-1000-	2
173 R	Nut, Tappet Lever Stud	AO-1000- AO-1000-	2 2
176 R 234 R	Stud, Tappet Lever Bracket	AO-1000-	2
234 R	Spacer, Tappet Lever Shaft	AO-1000-	2
260 R 437 R	Washer, Tappet Lever Shaft. Gasket, Tappet Lever Bracket Stud.	AO-1000-	2
439 R	Packing Washer, Tappet Oiler Pipe (12 used)	AO-1000-	2
601 R	Shaft, Tappet Lever.	AO-1000- AO-1000-	2
602 R	Snap Ring, Tappet Lever Shaft	AO-1000- AO-1000-	
772 R	Nut, Tappet Lever Cover, (Acorn)	AO-1000-	2
1193 R	Pipe, Tappet Lever Oiler.	AO-1000-1422	2
1290 R 1291 R	Rod, Tappet.	AO-1000-	2
1291 R 1574 R	Adjusting Screw, Tappet Lever. Bushing, Tappet Oiler Pipe.	AO-1000-	2
1575 R	Gasket, Tappet Lever Cover.	AO-1000- AO-1000-	2
1819 R	Pipe, Tappet Lever Oiler.	AO-1000- AO-1423-	1 5
A 229 R	Cover, Tappet Lever with Oil Trough, Bushing and Gasket	AO-1000-	2 2 2 2 2
A 1652 R	Lead Washer, Tappet Lever Stud (Box of 50 K2080 R)	AO-1000-	2
376 R	Spring, Tappet Lever Spacer	AO-1000-	2

Number	NAME AND DESCRIPTION	Serial Number	Plat No.
	MUFFLER		
629 R	Washer, Exhaust Opening Cover Screw	AO-1000-	3
AA 1286 R	Muffler Complete	AO-1000-1724	3
AA 1920 R	Muffler, Complete.	AO-1725-	3
	COVEDNOD		
A 41 D	GOVERNOR Housing, L. H. Governor Bearing	AO-1000-	3
A 41 R A 73 R	Coon Corroman Drive	A O−1000~	3
A 369 R	Snan Ring Governor Shaft	AO-1000-	3
A 428 R	Snap Ring, Governor Shaft. Gasket, L. H. Governor Bearing Housing (Thick)	AO-1000-	3
A 584 R	Spring, Governor Bearing	AU-1000-	3
A 1171 R	Gasket, L. H. Governor Bearing (Thin)	AO-1000-	3
A 1172 R	Shaft, Governor.	AO-1000-	3
A 1175 R	Shaft, Governor Lever	AO-1000-	3 3
A 1183 R	Gasket, Governor Case	AO-1000- AO-1000-	3
A 1241 R	Arm, Governor Flange, Magneto Drive	AO-1000- AO-1850-	3
A 2303 R AA 813 R	Case, Governor, A1170 R, with Lever Shaft Bushing	AO-1000-	3
AA 814 R	Sleave Governor Shaft	AO-1000-	3
AA 1695 R	Sleeve, Governor Shaft Gear and Pinion Assembly, Fan Drive Bevel (1 A1174 R and 1		-
	A1177 R)	AO-1000-	3
AC 667 R	Weight, Governor	AO-1000-	3
B 271 R	Lever. Inside Governor	AO-1000-	3
B 276 R	Snap Ring, Governor Bearing.	AO-1000-	3
B 280 R	Washer, Governor Bearing Spring	AO-1000-	3
B 281 R	Flange, Magneto Drive	AO-1000-1849 AO-1000-	3 3
B 432 R	Bushing, Governor Lever Shaft (Upper) Pin, Governor Weight	AO-1000- AO-1000-	3
C 902 R C 998 R	Bearing, Governor Thrust.	AO-1000-	3
C 998 R D 342 R	Woodruff Key, in Governor Drive Gear and Magneto Flange.	AO-1000-	3
D 342 R	Woodruff Key, Fan Drive Bevel Gear	AO-1000-	3
JD 7655 R	Cup, Governor Shaft Bearing, L. H. and R. H	AO-1000-	3
JD 7656 R	Cone with Rollers, Governor Shaft Bearing, L. H. and R. H.	AO-1000-	3
JD 7657 R	Balls and Retainer, Governor Shaft Bearing, L. H. and R. H	AO-1000-	3
	CONTROLS		
A 80 R	Lover Speed Control Hand	AO-1000-	3
A 241 R	Washer Speed Control Shaft, Upper	AO-1000-	3
A 586 R	Washer Speed Control Shatt Lower	AO-1000-	3
A 908 R	Rod, Clutch Operating. Bracket, Speed Control Shaft	AO-1000-	3
A 944 R	Bracket, Speed Control Shaft	AO-1000-	3
A 946 R	Bracket, Steering Shaft Bearing.	AO-1000-1214 AO-1000-	3
A 958 R	End, Speed Control Rod. Rod, Carburetor Throttle.	AO-1000- AO-1000-	3
A 1188 R A 1197 R	Bushing, Clutch Lever Pivot.	110 1000	
A 1197 R	Dusning, Ciutch Devel I IVOU	⊢ AO-1000-	3
A 1680 R	Bracket Clutch Lever	AO-1000-	8
A 1680 R A 1681 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot	AO-1000-	9
A 1680 R A 1681 R A 1682 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring.	AO-1000- AO-1000- AO-1000- AO-1000-	60 60
A 1681 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring Shaft, Speed Control.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	9 9 9 9
A 1681 R A 1682 R A 1735 R A 1736 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support. Steering Shaft Rear.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	3 3 3 3 3
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Red Speed Control	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	00 00 00 00 00 00
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring. Control Lever (Radiator Shutter).	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	3 3 3 3 5 5
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket. Steering Shaft Bearing.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215-	න න න න න න න
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801-	3 3 3 3 3 3 3 3 3 3 3
A 1681 R A 1682 R A 1735 R A 1736 R A 1736 R A 1785 R A 1785 R A 1795 R *A 2230 R *A 2280 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod Support. Fuel Control Rod	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801-	20 20 20 20 20 20 20 20 20 20 20
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R A 1795 R A 1795 R *A 2230 R *A 2290 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod Support, Fuel Control Rod Extension, Fuel Control Rod.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801-	30 00 00 00 00 00 00 00 00 00 00 00 00 0
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2290 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1801- AO-1000-	מים
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2280 R *A 2290 R *A 2291 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000-	מים
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R *A 2230 R *A 2230 R *A 2290 R *A 2291 R A 2494 R AA 1320 R AB 214 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing. B36 R. with Bushing, Steering Shaft, Upper.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000-	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2230 R *A 2290 R *A 2291 R A 2494 R AA 1320 R B 37 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000- AO-1000- AO-1000-	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2280 R *A 2290 R *A 2291 R A 2494 R AA 1320 R AB 214 R B 37 R B 37 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring. Speed Change, Flat.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	33 33 33 33 33 33 33 33 33 43 43 43 43 4
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2280 R *A 2290 R *A 2291 R A 2494 R AA 1320 R AB 214 R B 37 R C 485 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip. Brake Lever Spring.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	מת מ
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R A 1795 R *A 2230 R *A 2290 R *A 2291 R A 2494 R A 2494 R B 37 R B 273 R C 485 R C 1224 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper Bushing, Steering Shaft, Upper Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Brake Pedal	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	00 00 00 00 00 00 00 00 00 00 00 00 00
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R A 1795 R *A 2230 R *A 2290 R *A 2291 R A 2291 R A 2494 R AA 1320 R B 37 R B 273 R C 485 R C 1438 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Brake Pedal. Spring, Speed Control Shaft	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2230 R *A 2290 R *A 2291 R A 2494 R AA 1320 R AB 214 R B 37 R B 273 R C 485 R C 1224 R D 157 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Brake Pedal Spring, Speed Control Shaft End, Throttle Rod. Yoke, Clutch Operating Rod.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000-	
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R A 1795 R *A 2230 R *A 2290 R *A 2291 R A 2291 R A 2494 R AA 1320 R B 37 R B 273 R C 485 R C 1438 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Brake Pedal Spring, Speed Control Shaft End, Throttle Rod Yoke, Clutch Operating Rod. Pin, Clutch Operating Rod Yoke	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000-	GD G
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R A 1795 R *A 2230 R *A 2290 R *A 2291 R A 2494 R A 31320 R B 273 R C 485 R C 1224 R C 1438 R D 157 R D 1994 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Speed Control Shaft. End, Throttle Rod. Yoke, Clutch Operating Rod. Pin, Clutch Operating Rod Yoke Pin, Clutch Operating Hand Lever to Rod.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000-	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1785 R A 1795 R *A 2230 R *A 2230 R *A 2290 R *A 2291 R A 2494 R AA 1320 R B 37 R B 273 R C 1224 R C 1438 R D 157 R D 1994 R D 1994 R D 1994 R D 2887 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control Clamp, Speed Change Spring Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Brake Pedal Spring, Speed Control Shaft End, Throttle Rod Yoke, Clutch Operating Rod. Pin, Clutch Operating Rod Yoke Pin, Clutch Operating Hand Lever to Rod. End, Throttle Rod	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1801- AO-1000-	30 cg
A 1681 R A 1682 R A 1735 R A 1736 R A 1737 R A 1795 R A 1795 R *A 2230 R *A 2290 R *A 2291 R A 2494 R AA 1320 R AB 214 R B 37 R B 273 R C 485 R C 1224 R C 1438 R D 157 R D 1994 R	Bracket, Clutch Lever Bolt, Clutch Operating Hand Lever Pivot Link, Clutch Lever Spring. Shaft, Speed Control. Support, Steering Shaft Rear. Rod, Speed Control. Spring, Control Lever (Radiator Shutter). Bracket, Steering Shaft Bearing. Link, Fuel Control Rod. Support, Fuel Control Rod. Extension, Fuel Control Rod. Rod, Fuel Control. Clamp, Speed Change Spring. Lever, Clutch Operating Hand, with Pivot Bushing. Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bushing, Steering Shaft, Upper. Spring, Speed Change, Flat. Clip, Brake Lever Spring. Spring, Speed Control Shaft. End, Throttle Rod. Yoke, Clutch Operating Rod. Pin, Clutch Operating Rod Yoke Pin, Clutch Operating Hand Lever to Rod.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1215- AO-1801- AO-1801- AO-1801- AO-1000-	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3

^{*}Also repairs for Tractors AO-1000-1800 equipped with Starting and Lighting Assemblies.

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
AA 551 R	CRANKCASE BREATHER		
D 1951 R	Breather Cover, A900 R, with Stack.	AO-1000-	3
D 1952 R	Gasket, Filter Core Core, Breather Filter	AO-1000- AO-1000-	3
A 505 D	CRANKCASE VENTILATOR		
A 535 R A 1190 R	Packing, Ventilator Pipe	AO-1000-	3
C 1705 R	Pipe, Ventilator. Packing Nut, Ventilator Pipe.	AO-1000- AO-1000-	3 3
	LUBRICATING SYSTEM—OIL PHMP		
A 1596 R A 1597 R	Gear, Oil Pump Top Drive	AO-1000-	4
A 1598 R	Bearing, Oil Pump Top Drive Gear. Gasket, Oil Pump Drive Gear Bearing.	AO-1000-	4
A 1599 R	Shaft, Oil Pump Drive	AO-1000-	4
AB 284 R	Shaft, Oil Pump Drive. Strainer Screen, Complete, Oil Pump. Body, Oil Pump.	AO-1000- AO-1000-	4
B 241 R			4
B 243 R B 244 R	Gear, On Fumb Drive Bottom	AO-1000-	4
B 244 R B 245 R	Share, On runn ther Gear	AO-1000-	$\frac{1}{4}$
B 246 R	Gear, Oil Pump Idler	AO-1000-	4
B 247 R	Gasket, Oil Pump Cover.	AO-1000-	4
3 250 R	Cover, Oil Pump. Coupling, Oil Pump Drive Shaft. Couglet, Oil Pump Body to Constitution	AO-1000-	4
3 251 R	Casket, Oil runn book to Case	1000	4
E 2207 R	Key, Oil Pump Drive Shaft	AO-1000- AO-1000-	4
A 518 R	OIL FILTER AND INDICATOR		
A 519 R	Stud, Oil Filter (1/2" x 10-1/4") Gasket, Oil Filter Bottom.	A	4
A 520 R	Nut. Oil Filter Bottom	AO-1000-	4
A 521 R A 522 R	Nut, Oil Filter Bottom Gasket, Oil Filter Bottom Nut Bottom, Oil Filter	AO-1000-1799 AO-1000-	4
			4
523 R 1149 R	Suring the Buttom	10 1000 1500	4
1151 R	Gasket, Oil Filter Head to Filter Body. Gasket, Oil Filter Head Cover	A O 1000	4
1152 R	DOOV. OH PHIEP	10 1000	4
1196 R	Clip. Oil Pressure Regulating Valve Relief Spring		4
1278 R 1279 R	Bushing, Fitter Head Cover, Oil Pressure Regulating Valve.	AO-1000-	4
	Head, Oil Filter.	AO-1000-	4
1280 R 1713 R	Head, Oil Filter. Spring, Oil Pressure Regulating Valve (Coil).	AO-1000-	4
2440 R	Clamb, On Indicator	A	4
2441 R	Nut, Oil Filter Spring, Oil Filter	AO-1800-1849	4
2444 R	Shan King Uli Kilfer Kind Plate Retaining	AO-1800- AO-1800-	4
2530 R	Spacer, Oil Filter Bottom Plate	AO-1800- AO-1812-	4
2574 R	Spacer, Oil Filter Bottom Plate. Stud, Oil Filter (1/2" x 9-1/8"). Nut Oil Filter	AO-1850-	4
2575 R A 357 R		AO-1850-	4
A 824 R	Filter, Oil (Metal) (Substitute AA2454 R) Leaf Spring with Centering Button, Oil Pressure Regulating Valve.		
A 861 R	Cover, A1277 R. With Bushing and Relief Spring Oil Filter Head		4
A 1730 R	Gauge, Complete, Oil Indicator	AO-1000- AO-1000-	4
A 2092 R	Element, Oil Filter	AO-1000- AO-1800-	4
A 2095 R	End Plate, Oil Filter	AO-1800-	4
A ZUSO R	Outlet, Oil Filter Assembly	AO-1800-	4
a 4tut R	Filter, Oil (Replacement). Note: This Asser Bellin Bits of all parts necessary to Replace Metal	AO-1000-1811	
1	Filter AA307 K with Replacement Filter AA2092 R		
B 326 R 430 R	Leaf Spring with Centering Ruffon Oil Filton	AO-1000-	4
439 R	Button, Oil Filter By-Pass Valve Leaf Spring Spring, Filter Head By-Pass (Coil)	AO-1000-	4
, 133 W	DOUV, Crank Case Oil Level Cock	AO-1000-	4
/ /94 K	Plug, Crank Case Oil Level Cock	AO-1000- AO-1000-	4
4441 K	Screw. Pressure Regulating	AO-1000- AO-1000-	4
K 2573 R	Washer, Oil Filter Bottom Nut.	AO-1000-	4
	·		

^{*}Also repairs for Tractors AO-1000-1799 equipped with AA2454 R.

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
1469 R A 374 R A 465 R A 1252 R AA 802 R AA 819 R AA 1282 R AA 1283 R AA 1284 R B 258 R B 259 R D 392 R	OIL PIPES AND FITTINGS Coupling, Oil Indicator Pipe Nut, Solder Bushing, Governor Oil Pipe. Body, Solder Bushing, Oil Gauge Pipe to Filter Head Bushing, Oil Indicator Pipe to Governor Case Oil Pipe, Pump Discharge Oil Pipe, Governor. Oil Pipe, R. H. Main Bearing. Oil Pipe, I. H. Main Bearing. Oil Pipe, Indicator. Nut, Solder Bushing, 1/2", Oil Pump Discharge Pipe. Gland, Solder Bushing, 1/2", Oil Pump Discharge Pipe. Body, Solder Bushing, Main Bearing Oil Pipe. Body, Solder Bushing, Indicator Oil Pipe.	AO-1000-1617 AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4
D 417 R D 1935 R D 2440 R E 2149 R E 2150 R E 2150 R	Elbow, Oil Pipe, Governor Case to Indicator. Gland, Solder Bushing, on Governor Oil Pipe Body, Solder Bushing, Oil Pump Discharge Pipe Nut, Solder Bushing, Main Bearing Oil Pipes. Nut, Solder Bushing, Indicator Oil Pipe. Gland, Solder Bushing, Main Bearing Oil Pipe Gland, Solder Bushing, Indicator Oil Pipe	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	4 4 4 4
A 1013 R A 1014 R AA 270 R AA 454 R AA 499 R AA 517 R AA 518 R AA 624 R AA 1322 R AA 1324 R AA 1325 R AA 2064 R *AA 2079 R *AA 2079 R *AA 2080 R *AB 1545 R AC 1079 R AC 1080 R AB 609 R *B 1535 R C 1778 R C 2378 R D 392 R E 2149 R E 2150 R E 2150 R	Cushion, Fuel Tank Front Support. Cushion, Fuel Tank Rear Support. Strap, Fuel Tank. Gasoline Strainer, Complete. Filter, Fuel Bail, Fuel Filter Bowl. Nut with Washer, Fuel Filter Adjusting. Screen, Fuel Filter. Gasoline Pipe Fuel Pipe. Tank, Fuel. Support, Fuel Tank, Front, with Cushion. Support, Fuel Tank, Rear, with Cushion. Bowl, Fuel Filter Glass, and Gasket (1 C1777 R and 1 C 1778 R). Fuel Pipe. Gasoline Pipe Three-Way Cock. Three-Way Cock. Body, Fuel Filter, with Valve. Valve, Fuel Filter Cap, Filler. Indexing Stop, Three-Way Cock. Gasket, Fuel Filter Cork. Body, Fuel Filter Body, Solder Bushing, Fuel Pipe Packing Washer. Nut, Solder Bushing, on Gasoline Pipe Nut, Solder Bushing, on Fuel Pipe. Gland, Solder Bushing, on Gasoline Pipe. Gland, Solder Bushing, on Gasoline Pipe.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-1800 AO-1000-1800 AO-1000- AO-1000- AO-1000- AO-1801- AO-1801- AO-1801- AO-1000-	444444444444444444444444444444444444444
A 1631 R A 1632 R A 1684 R A 1708 R A 1714 R AA 1328 R AA 1340 R C 1573 R	Bracket, Hood Clip, R. H. Bracket, Hood Clip, L. H. Hinge, Front Half, Cowl Dash. Strip, Dash Reinforcing Hood, Complete. Dash and Tool Box, Complete Clip, Hood	AO-1000- AO-1000- AO-1744- AO-1000- AO-1000- AO-1000-1743	5 5 5 5 5 5 5 5 5
	•		

^{*}Also repairs for Tractors AO-1000-1800 equipped with Starting and Lighting Assemblies.

Number	NAME AND DESCRIPTION	Serial Number	
	COOLING SYSTEM		
A 51 R	Tank, Radiator Bottom	AO-1000-	
A 192 R	Strap, Radiator	A O_1000_	
A 432 R A 433 R	Gasket, Radiator Core, Top and Bottom.	AO-1000-	
A 434 R	Gasket, Cylinder Water Pipe Outlet.	AO-1000-	
A 446 R	Gasket, Radiator Water Inlet. Hose, Upper Water Pipe	AO-1000-	
448 R	Ulamp, Lower Water Pipe Hose.	AO 1000	
448 R	Ulamb, Upper Water Pipe Hose.	I AO 1000	
931 R	Elbow, Radiator Water Injet	A O 1000	
A 932 R	Hose, Lower Water Pine	1 A O 1000	
A 933 R A 933 R	Pipe, Radiator Bottom Unitlet	I A O 1000	
1627 R	Pipe, Cylinder Head Inlet.	AO-1000-	
1628 R	Tank, Řadiator Top. Side, Radiator, R. H.	AO-1000-	
1629 R	Side, Radiator, L. H.	AO-1000- AO-1000-	ı
1634 R	l Retainer, Gasket	AO-1000- AO-1000-	
1635 R	Lever, Cam, Radiator Can	AO-1000- AO-1000-	
1636 R	Fin, Cam Lever Pivot, Radiator Cap	A O-1000-	
1637 R	Stud Buller Can	AO-1000-	
1638 R 1712 R	Clamp Bar, Radiator Filler Cap	AO-1000-	
A 396 R	Clamp, Heat Indicator.	AO-1000-	
A 565 R	Core, Radiator. Pipe, A845 R, Upper Water.	AO-1000-	
A 1301 R	Radiator Cap, A1633 R, with Baffle and Gasket	AO-1000-	1
A 1342 R	Heat Indicator.	AO-1000- AO-1000-	
473 R	Heat Indicator. Gasket, Radiator Filler Cap	AO-1000- AO-1000-	
2216 R	Clip, on Heat Indicator Tube.	AO-1767-	
	RADIATOR GUARD, CURTAIN, SHUTTER AND SHUTTER		
372 R	CONTROLS		
629 R	Spring, Radiator Curtain. Washer on Radiator Curtain Roller.	AO-1000-1214	
629 R	Washer, Control Lever Spring	AO-1000-1214 AO-1000-	
80 R	Lever, Shutter Control.	AO-1000- AO-1000-	
182 R	Roller, Radiator Curtain	AO-1000-1214	1
189 R	Clip. Radiator Curtain.	AO-1000-1214	1
241 R 586 R	Washer, on Shutter Control Shaft.	AO-1000-	1
1225 R	Washer, on Shutter Control Shaft.	AO-1000-	
1785 R	Clip, Shutter Control Rod. Spring, Radiator Shutter Control Lever.	AO-1000-	
1796 R	Shart, Shutter Control	AO-1000- AO-1000-	
1797 R	Rod. Shutter Control	AO-1000- AO-1000-	
1853 R	Washer on Bell Crank and Stud	AO-1000-1743	
1854 R	Rivet. Bell Crank to Operating Link	AO-1000-	
1855 R 1856 R	Rivet, Operating Bar to Shutter	AO-1000-	
1857 R		AO-1000-1743	
1999 R		AO-1000-1743	
A 325 R	Curtain, Radiator	AO-1744- AO-1000-1214	1
1293 R	Guard, Radiator	AO-1000-1214 AO-1000-1214	
1429 R	Guard, Radiator	AO-1215-1743	
1444 R	Shutter, Radiator	AO-1000-1743	1.
1521 R	Bell Crank Bracket and Stud	AO-1000-1743	1
1522 R 1523 R	Bell Crank and Bushing.	AO-1000-1743	
1523 R	Shutter Blade and Pivot Pin.	AO-1000-1743	
1527 R		AO-1000-1743	ł
A 1528 R	Top Tie Bar and Bearing Bar	AO-1000-1743 AO-1000-1743	
1723 R	Retainer and Bearing Strip.	AO-1744-	
1726 R	Shutter Blade and Pivot Pin	AO-1744-	1
1727 R	Operating Bar and Stud.	AO-1744-	1
1728 R		AO-1744-	
1729 R	Operating Link and Spring Clip.	AO-1744-	1
1733 R	Shutter, Radiator	AO-1744-	
2057 R		AO-1744-	1
2058 R		AO-1744-	
423 R	Spring, Radiator Curtain Roller	AO-1744- AO-1000-1214	
157 R	End. Shutter Control Rod.	AO-1000-1214 AO-1000-	
2057 R	Washer on Radiator Shutter Control Rod End	AO-1000- AO-1000-	
2057 R	Washer on Bell Crank Stud		

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
1450 R	FAN Pipe Plug in Fan Bearing Housing	AO-1000-	6
1704 R	Washer on Front Fan Bearing Housing to Support Screw	AO-1811-	6
A 286 R	Retainer, Fan Bearing Packing	AO-1000-	6
A 369 R	Snan Ring, Fan Shaft Rear End	AO-1000-	6
A 393 R	Packing Fan Bearing, Rear	AO-1000-	6
A 846 R	Spring, Fan Bearing Take-Up	AO-1000-	6
A 927 R	Support, Fan Shaft	AO-1000- AO-1000-	6
A 1178 R	Shaft, Fan Housing, Fan Shaft Rear Bearing	AO-1000- AO-1000-	6
A 1180 R	Gasket, Fan Shaft, Rear Bearing Housing (.015" Thick)	AO-1000-	6
A 1181 R A 1182 R	Gasket, Fan Shaft, Rear Bearing Housing (.006" Thick)	AO-1000-	ő
A 1382 R	Washer, Fan Shaft Support (1-1/2" Outside Diameter, 17/32" Inside		
	Diameter)	AO-1000-	6
AA 523 R	Fan Blades with Hub, Complete	AO-1000-	6
AA 818 R	Housing, B290 R, Front Fan Bearing, with Support Tube	AO-1000-	6
AA 1299 R	Shroud, Fan	AO-1000-	5
AA 1695 R	Gear and Pinion Assembly, Fan Drive bever (1 A1174 R and 1 A1177 R)	AO-1000-	6
AB 518 R	Felt Washer, Front Fan Bearing.	AO-1000-	6
AB 518 R B 293 R	Packing Fan Shaft Support Tube	AO-1000-	6
B 294 R	Washer, Front, Fan Bearing Packing (Rear)	AO-1000-	6
B 296 R	Washer, Fan Shaft Bearing Packing, Retainer	AO-1000-	6
B 298 R	Retainer, Fan Shaft Bearing Felt Washer	AO-1000-	6
D 342 R	Woodruff Key, Fan Drive Bevel Gear	AO-1000-	3
D 403 R	Key, Fan Drive Bevel Pinion	AO-1000-	6
D 1720 R	Lock Washer (Half) Fan Shaft	AO-1000- AO-1000-	6
JD 7655 R	Cup, Front and Rear Bearing. Cone with Rollers, Front and Rear Bearing.	AO-1000- AO-1000-	6
JD 7656 R JD 7657 R	Ball Assembly, Front and Rear Bearing	AO-1000-	6
3D 1001 TC	Dan Assembly, 110no and 100n Bourney		
	PULLEY	1000	_
A 370 R	Snap Ring, Belt Pulley Gear	AO-1000-	7
A 371 R	Snap Ring, Belt Pulley Bearing	AO-1000- AO-1000-	$\begin{array}{ c c c }\hline 7\\ 7\end{array}$
A 726 R	Bushing, Belt Pulley (Bronze)	AO-1000- AO-1000-	7
A 1642 R A 1646 R	Washer, Belt Pulley Bearing.	AO-1000-	7
A 1646 R A 1647 R	Retainer Belt Pulley Bearing	AO-1000-	7
AA 1315 R	Belt Pulley, A1640 R, with Sleeve, Gear and Bushing	AO-1000-	7
D 403 R	Key. Belt Pulley	AO-1000-	7
JD 7487 R	Outer Race and Roller, Belt Pulley	AO-1000-	7
JD 7587 R	Inner Race, Pulley Bearing.	AO-1000-	7
	CLUTCH PARTS	AO-1000-	9
A 1197 R	Bushing, Clutch Lever Pivot	AO-1000- AO-1000-	$\begin{vmatrix} 3 \\ 7 \end{vmatrix}$
A 1606 R	Shroud, Clutch Sleeve, Clutch Operating	AO-1000-	7
A 1641 R A 1643 R	Drive Pin, Clutch Cone.	AO-1000-	7
A 1644 R	Cam, Clutch Operating		7
A 1645 R	Bolt Clutch Operating	AO-1000-	7
A 1649 R	Disk Clutch Adjusting	AO-1000-	7
A 1650 R	Washer, Clutch Driving Disk	AO-1000-	7
A 1651 R	Spring, Clutch Release.	AO-1000-	7
A 1652 R	Cover, Clutch Dust	AO-1000- AO-1000-	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$
A 1661 R	Disk, Clutch Driving. Bracket, Clutch Lever.	AO-1000- AO-1000-	3
A 1680 R A 1682 R	Spring Link, Clutch Lever.	AO-1000-	3
A 1682 R B 738 R	Bolt Pin, Clutch Operating.		7
B 739 R	Link Pin Clutch Operating	AO-1000-	7
B 741 R	Cam Washer, Clutch Operating	AO-1000-	7
C 614 R	Facing, Clutch	AO-1000-	7
	CLUTCH FORK BEARING AND PULLEY BRAKE		
A 78 R	Fork, Clutch	AO-1000-	7
A 82 R	Collar Clutch	AO-1000-	7
A 602 R	Snap Ring, Clutch Fork Shaft	AO-1000-	7
A 1653 R	Shaft, Clutch Fork	AO-1000-	7
A 1654 R	Bearing, Clutch Fork Shaft.	AO-1000- AO-1000-	$\begin{array}{ c c }\hline 7\\ 7\end{array}$
A 1655 R	Cover, Clutch Fork Shaft Bearing. Gasket, Clutch Fork Shaft Bearing.	AO-1000- AO-1000-	7
A 1656 R A 1657 R	Spring, Clutch Fork	AO-1000-	1 7
A 1657 R	Brake, A1658 R, Pulley, with Lining.		7
AA 1318 R	Welch Plug in Clutch Fork Bearing	AO-1000-	7
	Welch Plug in Clutch Fork Bearing Pivot, Clutch Fork. Lining, Pulley Brake	AO-1000- AO-1000-	$\begin{vmatrix} 7\\7\\7 \end{vmatrix}$

Number	NAME AND DESCRIPTION	Serial Number	Pla No
A 147 R A 596 R A 597 R A 598 R A 913 R A 916 R A 917 K A 918 R A 553 R AA 558 R D 678 R	GEAR SHIFT Key Washer, Gear Shift Lever Yoke, Gear Shifter Spring, Gear Shifter Pawl Pawl, Gear Shifter. Interlock, Gear Shift. Lever, Gear Shift. Arm, Gear Shifter Shaft, Shifter Gear Shifter, A910 R, Low and Reverse, with Yoke Gear Shifter, A1015 R, Second Speed, with Yoke. Screw, Gear Shift Adjusting.	AO-1000-	77 77 77 77 77 77 77 77 77 77 77 77 77
A 94 R A 365 R A 378 R A 540 R A 550 R A 600 R A 906 R JD 7665 R JD 7673 R	SLIDING GEAR SHAFT Pinion, First Speed Sliding (18 Teeth). Snap Ring, Sliding Gear Shaft, L. H., Bearing Outer Race. Snap Ring, Sliding Gear Shaft, L. H., Bearing Inner Race. Shaft, Sliding Gear Shaft and Countershaft, L. H., Bearing Cover Cover, Sliding Gear Shaft and Countershaft, L. H., Bearing. Pinion, Sliding Gear Shaft Drive (20 Teeth). Pinion, Second Speed Sliding (23 Teeth). Bearing, Sliding Gear Shaft, L. H Bearing, Sliding Gear Shaft, R. H	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	777777777777777777777777777777777777777
A 115 R A 147 R A 596 R A 599 R AA 793 R AA 1291 R	OVERDRIVE GEAR SHIFT Lever, Overdrive Shifter. Key Washer, Overdrive Shifter. Yoke, Overdrive Shifter Pin, Reverse Lockout Shifter, A911 R, Overdrive, with Yoke and Lockout Pin. Handle, Overdrive Shifter, with Shaft.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	8 8 8 8 8
A 69 R A 119 R A 120 R A 159 R A 438 R A 547 R A 548 R A 557 R AA 797 R	OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR Cover, Overdrive, R. H. Bearing Stud, Overdrive, R. H. Bearing Cover Dowel Pin, First Reduction Gear Cover. Spacer, First Reduction Gear Gasket, Overdrive, R. H. Bearing Cover Gasket, Overdrive Gear and Shaft, L. H. Bearing Cover. Cover, Overdrive Gear and Shaft, L. H. Bearing Gasket, First Reduction Gear Cover Gear and Shaft, A541 R, Overdrive, with Nut and Bearing Cover (28)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	8 8 8 8 8 8
AA 1272 R AA 1274 R AA 1683 R JD 7664 R JD 7672 R K 3083 R	Teeth Outside—20 Teeth Inside). Gear First Reduction, with Spider, A1603 R, Riveted. Cover, A1605 R, with Dust Shroud, First Reduction Gear. Cover, A1605 R, with Dust Shroud, First Reduction Gear. Bearing, Overdrive Gear and Shaft, R. H. End. Bearing, Overdrive Gear and Shaft, L. H. End. Stud, First Reduction Gear Cover to Transmission Case.	AO-1000- AO-1000- AO-1000-1548 AO-1549- AO-1000- AO-1000- AO-1000-	8 8 8 8 8 8
A 114 R A 166 R A 539 R A 812 R A 1154 R JD 7539 R JD 7551 R JD 7559 R JD 7914 R	COUNTERSHAFT IDLER GEAR Gear, Countershaft Idler (25 Teeth Outside—17 Teeth Inside). Washer, Bearing Locating. Spacer, Overdrive Idler Gear. Spacer, Idler Gear Locating. Washer, Idler Gear Thrust. Roller Assembly, Countershaft Idler, L. H. Inner Race, Countershaft Idler, R. H. Inner Race, Countershaft Idler, L. H. Roller Assembly, Countershaft Idler, R. H	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	8 8 8 8 8 8 8 8 8
A 836 R A 837 R AA 798 R	AA521 R HIGH SPEED GEAR ASSEMBLY Gear, Idler, Countershaft (17 and 28 Teeth) Pinion, Sliding Gear Shaft (17 Teeth) Gear, A838 R, Overdrive and Shaft with Nut and Bearing Cover (28 Teeth Outside and 17 Teeth Inside)	AO-1000- AO-1000- AO-1000-	9 9

	JUHN DEERE MODEL AO IRACION		ا. ال
Part Number	NAME AND DESCRIPTION	Serial Number	Plat No.
A 124 R A 581 R A 582 R A 583 R A 907 R A 1153 R A 1156 R A 1157 R A 1158 R A 1159 R A 1160 R AA 806 R JD 7367 R JD 7379 R JD 7405 R JD 7411 R	COUNTERSHAFT Stud, Countershaft, R. H. Bearing Pinion, Differential Driving (17 Teeth) Gear, First Speed, Countershaft (27 Teeth). Spacer, Countershaft Gear Gear, Second Speed, Countershaft (22 Teeth) Countershaft Gasket, Countershaft, R. H. Bearing Housing (Thin) Gasket, Countershaft, R. H. Bearing Housing (Thick) Shim, Countershaft, R. H. Bearing Housing (Steel, Thin). Shim, Countershaft, R. H. Bearing Housing (Steel, Thick). Snap Ring, Countershaft, L. H. Bearing Housing, A1155 R, Countershaft, R. H. Bearing, with Cup. Cone with Rollers, Countershaft, R. H. Bearing. Cone with Rollers, Countershaft, L. H. Bearing. Cup, Countershaft, R. H. Bearing. Cup, Countershaft, L. H. Bearing.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	88 88 88 88 88 88 88 88 88 88 88
A 562 R A 596 R A 1112 R A 1113 R A 1114 R A 1116 R A 1402 R A 1403 R A 1405 R A 1408 R A 1408 R A 1408 R A 1410 R A 1411 R A 1411 R A 1414 R A 1416 R A 1418 R A 1412 R AA 1122 R AA 1123 R AA 1124 R AA 1234 R AA 1234 R AA 1234 R AA 1236 R AA 17649 R JD 7649 R JD 7904 R	AA1120 R SLOW SPEED GEAR ASSEMBLY Snap Ring, Power Shaft Drive Shaft. Yoke, Second Speed Shifter. Gear, Power Shaft Bevel (19 Teeth) Shaft, Power Shaft Drive. Pinion, Power Shaft Bevel Drive (16 Teeth) Shifter, Power Shaft Snap Ring, First Reduction Gear Cover. Snap Ring, Sliding Gear Shaft Drive Gear, L. H. Bearing Spacer, First Reduction Gear Pinion, Sliding Gear Shaft Drive (20 and 26 Teeth) Pinion, High Speed Sliding (28 Teeth) Gear, Countershaft Idler (19 and 25 Teeth) Spacer, Idler Gear Bearing. Washer, Countershaft Idler Gear Thrust Gear, Differential Drive and Pinion (17 Teeth) Shaft, Power Shaft Shifter. Gear, Power Shaft Sliding (13 Teeth) Shaft, Shifter. Yoke, Underdrive Shifter. Washer, Countershaft, L. H. Bearing Retaining Cover, A1123 R, Transmission Case with Gear Shift Interlock Housing, A1413 R, Countershaft, R. H. Bearing with Cup. Shifter, Gear, A1417 R, Second Speed with Yoke. Shifter, Underdrive, A911 R, with Yoke Countershaft with Dowel Pin Gear and Shaft, Underdrive, A1404 R, with Nut (20 Teeth) Bearing, Overdrive Gear and Shaft, L. H. End. Bearing, Countershaft Idler Gear (2 used)	AO-1000- AO-1000-	999999999999999999999999999999999999999
A 11 R A 169 R A 202 R A 263 R A 406 R A 486 R A 610 R A 611 R A 612 R A 2307 R AA 331 R JD 7275 R JD 7361 R	Quill, Differential Bearing. Pinion, Differential Bevel. Washer, Differential Thrust. Cover, Differential Shaft, R. H. Bearing. Snap Ring, Differential Shaft, R. H. Bearing. Shim, Differential Quill, (Vellumoid, Thin). Pinion, Differential Bevel Gear and Spur. Shim, Differential Bearing Quill (Steel, Thick). Shim, Differential Bearing Quill (Steel, Thin). Shim, Differential Bearing Quill (Vellumoid, Thick). Shaft, Differential Bevel Pinion. Differential Gear with Shaft. Differential, Complete. Cup, Differential Bearing. Cone with Rollers, Differential Bearing.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	

1411 R Gasket, Rear Axle Shaft. AO-1000- A 1412 R Gasket, Rear Axle Housing to Case. AO-1000-	Number	NAME AND DESCRIPTION	Serial Number	Pl N
6 R Spacer, Rear Axle Bearing AO-1000-		FINAL DRIVE		- -
11		Spacer, Rear Axle Bearing	A O-1000-	
A		NUL Rear Axie Shatt	40 4000	
1281 R Masker, Rear Axle Oil Seal. AO-1000-		Gasket, Rear Axie Housing to Case	1000	1
1893 R Rainer, Agar Axie Oil Seal AO-1000- AO-1		Gasket, Rear Axle Housing Cover	AO 1000	î
A 203		wasner, Kear Axie Oil Seal	1000	-
A 268 B. P. Carle R. Rear Axie, Inner Bearing. A 1260 B. P. Carle R. Rear Axie, Near Axie, No. 1000- A 1270 B. A 1267 B. How Washer, Rear Axie with Bearing Cups and Oil Seal, Rear Axie. A 1271 B. Shaft, Rear Axie, L. H. A 2049 B. Cover, A1686 R., Rear Axie Housing to Case. A 1271 B. Shaft, Rear Axie Housing Crase. A 1271 B. Stud, Rear Axie Housing Crase. A 1633 B. Dowel Pin, Rear Axie Housing Drain. Dowel Pin, Rear Wite Pin, Re		Retainer, Rear Axie Feit	A O 1000	
A 1297 B. Flotusing, A 1600 R, with Bearing Cups and Oil Seal, Rear Axie. AO-1000- A 1297 B. Store R.		Gear, Final Drive	AO-1000-	1
A 1260 R Housing, A1600 R, with Bearing Cups and Oil Seal, Rear Axle A0-1000- A 1271 R A0249 R A		Folt Wosher Poor Aylo		1 :
\$1321		Housing A1600 P with Pooring Come and Oil G. 1 D.		:
A1271 R A2049 R A204		Shaft. Rear Ayle R H		10
1717 R 1718 171		Shaft, Rear Ayle I. H		
1632 R 200 2	2049 R	UVVEL A1000 K. Kear Axie Hollsing with Plug		
Dower Fin, Rear Axie Housing to Transmission Case		Stud. Rear Axie Housing to Case		
2244 R 719e Flug, Rear Axie Housing Olf Filler		Dowel Fin. Rear Axie Hollsing to Transmission Cosc		10
Type Flug, Reaf Axhe Housing Oil Filler		Fipe Fing. Rear Axle Housing Drain		1
Colle with Roller's, Rear Axie Bearing. A0-1000-		Fipe Flug, Rear Axie Housing Oil Filler		1
Alemite Fitting, No. 1612 AO-1000- Standard		Colle with Kollers, Rear Axie Rearing		
### AC-1000- 1		Uup, Rear Axle Bearing		
Signature Sign	7760	Alemite Fitting, No. 1612		1
1716 R 24" or 12.75x24" (Rubber Tires) 17.75x24" (Ruber Tires)				-
933 R 24° 0° 12.75x24" Rubber Tires AO-1000- In the property of 12.75x24" Rubber Tires AO-1000- In the property	017 D	REAR WHEELS		
Wheel, Rear, Cast Al272 R, with Demountable Rim (For 11.25x24" or 12.75x24" Rubber Tires). Wheel, Rear, Cast, Al272 R, with Studs and Nuts (For 11.25x24" or 12.75x24" Rubber Tires). AO-1000-	ali K	Rim, Demountable, for A1272 R and B694 R Cast Wheels and 11.25x		
1087 R	933 B	Whool Poor Cost A1979 D -:- D	AO-1000-	11
Washer, Rear, Cast, Al2/2 K, with Studs and Nuts (For 11.25x24" or 12.75x24" Rubber Tires) 12.75x24" AO-1000-	000 10	or 12 75x24" Pubbor Tires		
Second S	1087 R	Wheel Rear Cast A1272 P with Study and New VI 11 OF 244	AO-1000-	11
No.		12.75x24" Rubber Tires	10.1000	
No.	823 R	Wheel, Rear, Cast. B694 R. with Stude and Nute (For 1975-944)	AO-1000-	11
Wheel, Rear, Cast, B694 R, with Demountable Rim (For 12.75x24" Rubber Tires). AO-1000- 12626 R. Clamp, Rim, for Cast Rear Wheel AO-1000- 1		Rubber Tires)	AO 1000	
1716 R Bolt, Rear Wheel AO-1000- 1	834 R	Wheel, Rear, Cast. B694 R. with Demountable Rim (For 12 75 - 24/1)	AU-1000-	11
Bolt, Rear Wheel AO-1000- 1		Rubber Tires)	A O_1000	11
Clamp, Rim, 10r Cast Rear Wheel AO-1000- 1		Bolt, Rear Wheel		11
Stud, Rim Clamp to Rear Wheel, 3/4"x3-1/4" AO-1000- Investment AO-10		Clamb, Rim, for Cast Rear Wheel		11
REAR WHEEL EQUIPMENT		Stud. Rim Clamp to Rear Wheel 3/4"v3_1/4"		11
REAR WHEEL EQUIPMENT	1217 R	Wheel, Rear, 42-3/4"x10" Flat Tire		11
Washer, Button Lug. AO-1000- 1				
Support, Rear Wheel to Road Band Support	1706 R	Washer, Button Lug	1000	
A0-1000-	1062 R	Support, Rear Wheel to Road Band Support		10
1918 R Road Band with Support. AO-1000- AO-1000	1298 R	Lug, Spud		11
A0-1000-		Lug, Cast, Cone		10
AQ-1000-	918 R	Road Band With Support		10
Lug, Sast, L. H. AO-1000- 1		Lug, Cast, R. H.		10
Washer, Kear Wheel to Road Band Support Bolt		Lug, Cast. L. H.		10
AO-1000- 1		Washer, Rear Wheel to Road Band Support Rolf		11
Cip, Rear Wheel Extension Rim Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Lug, Button Lug, Sand Lug, Sand Lug, Sand Lug, Sand Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x3"x3/8"x16"), R. H. Grouser (4"x3"x3/8"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x3/8"x22"), R. H. Grouser (4"x3"x3/8"x3/8"x22"), R. H. Grouser (4"x3"x3/8"x3/8"x32"), R. H. Grouser (4"x3"x3/8"x32"), R. H	.027 R.	Extension Rim. Rear Wheel, 6"		11
Grouser, Meadow (Channel), R. H. AO-1000- AO				11
Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button. Support for AC918 R Road Band. Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (2-1/4"x3"x3/8"x16"), R. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x22"), L. H. AO-1000- Grouser (4"x3"x3/8"x22"), L. H. AO-1000- MO-1000- MO-100	030 R	ollp, Rear Wheel Extension Rim	AO-1000-	
AO-1000-	030 R 294 R	Grouser, Meadow (Channel), R. H.		
AO-1000-	030 R 294 R 295 R	Grouser, Meadow (Channel), R. H	AO-1000-	10
Support for AC918 R Road Band. AO-1000-	030 R 294 R 295 R 517 R	Grouser, Meadow (Channel), R. H. Bolt, Sand Lug.	AO-1000- AO-1000-	10 10
Lug, Spade, 4" High. AO-1000-	030 R 294 R 295 R 517 R 646 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button	AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10
AO-1000- 10 AO-1000- 1	030 R 294 R 295 R 517 R 646 R 147 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10
AO-1000- 10 AO-1000- 1	030 R 294 R 295 R 517 R 646 R 147 R 199 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 11
575 R Grouser (2-1/4 "x2-1/4 "x5/16" x16"), R. H. AO-1000- 10 576 R Grouser (4"x3"x3/8"x16"), R. H. AO-1000- 10 577 R Grouser (4"x3"x3/8"x16"), L. H. AO-1000- 10 578 R Grouser (4"x3"x3/8"x22"), R. H. AO-1000- 10 579 R Grouser (4"x3"x3/8"x22"), R. H. AO-1000- 10 579 R Grouser (4"x3"x3/8"x22"), L. H. AO-1000- 10 938 R Washer, Spade Lug—Sand Lugs AO-1000- 10 938 R Washer, Support to Support Bolts. AO-1000- 10 078 R Lug, Spade (5" High) AO-1000- 10 283 R Lug, Spade, A-Shape (5" High) AO-1000- 10 283 R Lug, Spade, Heavy Duty (5" High) AO-1000- 10 283 R Lug, Spade, Heavy Duty (5" High) AO-1000- AO-1000- 283 R Lug, Spade, Heavy Duty (4" High) AO-1000- AO-1000- Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter)	030 R 294 R 295 R 517 R 646 R 147 R 199 R 233 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10
576 R Grouser (4"x3"x3/8"x16"), R. H. AO-1000- 10 577 R Grouser (4"x3"x3/8"x16"), L. H. AO-1000- 10 578 R Grouser (4"x3"x3/8"x22"), R. H. AO-1000- 10 579 R Grouser (4"x3"x3/8"x22"), R. H. AO-1000- 10 579 R Grouser (4"x3"x3/8"x22"), L. H. AO-1000- 10 938 R Washer, Spade Lug—Sand Lugs AO-1000- 10 938 R Washer, Support to Support Bolts AO-1000- 10 1078 R Lug, Spade (5" High) AO-1000- 10 283 R Lug, Spade, A-Shape (5" High) AO-1000- 10 121 R Lug, Spade, Heavy Duty (5" High) AO-1000- 10 147 R Lug, Spade, Heavy Duty (4" High) AO-1000- 10 Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter) AO-1000- 10	030 R 294 R 295 R 517 R 646 R 147 R 199 R 233 R 530 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10 10
576 R Grouser (4"x3"x3/8"x16"), R. H. AO-1000- 10 577 R Grouser (4"x3"x3/8"x16"), R. H. AO-1000- 10 578 R Grouser (4"x3"x3/8"x22"), R. H. AO-1000- 10 579 R Grouser (4"x3"x3/8"x22"), R. H. AO-1000- 10 579 R Grouser (4"x3"x3/8"x22"), L. H. AO-1000- 10 938 R Washer, Spade Lug—Sand Lugs. AO-1000- 10 938 R Washer, Support to Support Bolts. AO-1000- 10 078 R Lug, Spade (5" High) AO-1000- 10 283 R Lug, Spade, A-Shape (5" High). AO-1000- 10 121 R Lug, Spade, Heavy Duty (5" High). AO-1000- 10 447 R Lug, Spade, Heavy Duty (4" High). AO-1000- 10 Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter) 10	030 R 1294 R 1295 R 1517 R 1646 R 1147 R 1199 R 233 R 530 R 531 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10
A0-1000- 10 A0-1000- 1	030 R 294 R 295 R 517 R 646 R 147 R 199 R 233 R 530 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 11 10 10 10 10 10
Washer, Support to Support Bolts. AO-1000- 10	030 R 294 R 295 R 517 R 646 R 147 R 199 R 233 R 530 R 531 R 574 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (4"x3"x3"x3"x3"x3"x18"x16") R. H.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10 10
Washer, Support to Support Bolts. AO-1000- 10	030 R 294 R 295 R 517 R 646 R 147 R 199 R 233 R 530 R 531 R 574 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (4"x3"x3"x3"x3"x3"x18"x16") R. H.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10 10 10 10
Washer, Spade Lug—Sand Lugs. AO-1000-	030 R 294 R 295 R 517 R 646 R 147 R 1999 R 233 R 531 R 571 R 577 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (4"x3"x3"x3"x3"x3"x18"x16") R. H.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10 10 10 10
38 R Washer, Support to Support Bolts. AO-1000-AO	030 R 294 R 295 R 517 R 546 R 147 R 199 R 233 R 5530 R 574 R 575 R 577 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), R. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x22"), R. H Grouser (4"x3"x3/8"x22"), R. H Grouser (4"x3"x3/8"x22"), R. H Grouser (4"x3"x3/8"x22"), R. H	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10 10 10 10 10
Lug, Spade (5" High)	030 R 294 R 295 R 5646 R 147 R 1199 R 233 R 5530 R 5574 R 575 R 576 R 5778 R 938 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H Grouser (4"x3"x3/8"x16"), L. H Grouser (4"x3"x3/8"x22"), R. H Grouser (4"x3"x3/8"x22"), L. H Washer, Spade Lug—Sand Lugs	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	10 10 10 11 10 10 10 10 10 10 10 10 10 1
10 10 10 10 10 10 10 10	030 R 294 R 294 R 2515 R 546 R 147 R 199 R 2333 R 5311 R 5714 R 5775 R 5776 R 5777 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H Grouser (4"x3"x3/8"x22"), R. H Grouser (4"x3"x3/8"x22"), L. H Washer, Spade Lug—Sand Lugs. Washer, Support to Support Bolts.	AO-1000- AO-1000-	10 10 10 11 10 10 10 10 10 10 10 10 10 1
Lug, Spade, Heavy Duty (5" High)	030 R 294 R 295 R 646 R 147 R 1199 R 233 R 5530 R 5574 R 5776 R 5778 R 9388 R 978 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), R. H. Grouser (4"x3"x3/8"x16"), R. H. Grouser (4"x3"x3/8"x22"), R. H. Grouser (4"x3"x3/8"x22"), L. H. Washer, Spade Lug—Sand Lugs. Washer, Support to Support Bolts. Lug. Spade (5" High)	AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10 10 10 10 10 1
29 R Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter, 25/32" Inside	030 R 294 R 295 R 546 R 546 R 147 R 147 R 199 R 233 R 5574 R 576 R 576 R 577 R 178 R 178 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x22"), R. H Grouser (4"x3"x3/8"x22"), L. H Washer, Spade Lug—Sand Lugs. Washer, Support to Support Bolts. Lug, Spade (5" High) Lug, Spade, A-Shape (5" High)	AO-1000- AO-1000-	10 10 10 11 10 10 10 10 10 10 10 10 10 1
wasner, wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside	.030 R .294 R .295 R .646 R .147 R .147 R .139 R .530 R .531 R .574 R .575 R .577 R .578 R .938 R .938 R .078 R .938 R	Grouser, Meadow (Channel), R. H. Grouser, Meadow (Channel), L. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x22"), R. H. Grouser (4"x3"x3/8"x22"), L. H. Washer, Spade Lug—Sand Lugs. Washer, Support to Support Bolts. Lug, Spade, A-Shape (5" High) Lug, Spade, A-Shape (5" High) Lug, Spade, A-Shape (5" High) Lug, Spade, Heavy Duty (5" High)	AO-1000- AO-1000-	10 10 10 11 10 10 10 10 10 10 10 10 10 1
Diameter)	030 R 294 R 295 R 646 R 147 R 199 R 233 R 5531 R 574 R 576 R 577 R 578 R 938 R 938 R 938 R 121 R	Grouser, Meadow (Channel), R. H. Bolt, Sand Lug. Lug, Button Support for AC918 R Road Band. Lug, Sand Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x22"), R. H. Grouser (4"x3"x3/8"x22"), L. H. Grouser (4"x3"x3/8"x22"), L. H. Washer, Spade Lug—Sand Lugs Washer, Support to Support Bolts Lug, Spade, A-Shape (5" High) Lug, Spade, Heavy Duty (5" High) Lug, Spade, Heavy Duty (5" High) Lug, Spade, Heavy Duty (4" High)	AO-1000- AO-1000-	10 10 10 10 11 10 10 10 10 10 10 10 10 1
	1030 R 1294 R 1295 R 11295 R 1646 R 2147 R 2199 R 233 R 531 R 574 R 576 R 577 R 578 R 938 R 1078 R 1078 R 1078 R	Grouser, Meadow (Channel), R. H. Bolt, Sand Lug. Lug, Button. Support for AC918 R Road Band. Lug, Spade, 4" High. Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H. Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H. Grouser (4"x3"x3/8"x16"), R. H. Grouser (4"x3"x3/8"x16"), L. H. Grouser (4"x3"x3/8"x22"), R. H. Grouser (4"x3"x3/8"x22"), L. H. Grouser (4"x3"x3/8"x22"), L. H. Washer, Spade Lug—Sand Lugs. Washer, Support to Support Bolts. Lug, Spade, A-Shape (5" High) Lug, Spade, Heavy Duty (5" High) Lug, Spade, Heavy Duty (4" High) Washer, Wheel Weight Bolt (1-7/16" Outside Diameter 25/32" Inside Washer, Wheel Weight Bolt (1-7/16" Outside Diameter 25/32" Inside	AO-1000- AO-1000-	10 10 10 11 10 10 10 10 10 10 10 10 10 1

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
A 134 R A 149 R A 151 R A 152 R A 321 R A 348 R A 441 R A 510 R A 1162 R A 1163 R A 1168 R A 1169 R A 1610 R A 1610 R A 1611 R A 2299 R A 314 R	DIFFERENTIAL BRAKES Pin, Brake Adjusting Roller, Brake Shoe Screw, Brake Adjusting Shaft, Brake Lever Cam, Brake Spring, Brake Shoe Gasket, Brake Housing to Transmission Case Lining, Brake Shoe Guard, Brake Shaft Dust (Outer) Pinion, Brake Shaft Bushing, Brake Shaft (Outer) Washer, Brake Shaft (Inner) Bushing, Brake Shaft (Inner) Pedal, Brake, R. H. Pedal, Brake, L. H. Washer on Brake Shoe Roller Pin Brake Shoe with Lining	Number AO-1000-	No. 12 12 12 12 12 12 12 12 12 12 12 12 12
AA 807 R AA 811 R AA 1277 R AA 1278 R AA 1281 R AA 2124 R B 639 R C 485 R C 1224 R D 136 R	Brake Drum with Shaft, R. H Oil Cup, Outer Brake Shaft Bearing Housing, Brake, A1608 R, R. H., with Bushing and Oiler. Housing, Brake, A1609 R, L. H., with Bushing and Oiler. Brake Drum with Shaft, L. H. Brake Shoe Roller with Washer (Substitute for A345 R). Latch, Brake Clip, Brake Lever Spring. Spring, Brake Pedal Washer, Brake Shaft.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	12 12 12 12 12 12 12 12 12 12 12
A 955 R A 1674 R A 1678 R A 2504 R AA 1285 R AA 2455 R AD 1381 R D 486 R D 843 R D 843 R D 1250 R D 1881 R D 1888 R D 1898 R D 2638 R JD 7759 JD 7760	FRONT AXLE AND FRONT END SUPPORT Pin, Front Axle Pivot. Front Axle. Support, Front End. Front Axle. Radius Rod with Pivot. Radius Rod with Pivot. Knuckle, Front Wheel, with Bushings, Studs and Dust Excluders Pin, Front Axle Pivot Pin to Front End Support. Bushing, Radius Rod Pivot. Stud, Radius Rod Pivot. Stud, Radius Rod Pivot. Washer, Radius Rod Pivot. Washer, Spindle Pin. Dust Cap, Knuckle. Bushing, Front Wheel Knuckle (4 used) Stud, Steering Arm (4 used). Dust Excluder, Front Wheel. Alemite Fitting, No. 1610, Front Axle, 1/8" Alemite Fitting, No. 1612, in Radius Rod Pivot.	AO-1827- AO-1000-1826 AO-1827- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	12 12 12 12 12 12 12 12 12 12 12 12 12 1
27 R A 1556 R A 1828 R AA 663 R AA 1395 R AA 1407 R AC 119 R AC 1062 R	FRONT WHEELS AND FRONT WHEEL EQUIPMENT Washer, on Weight to Wheel Bolts (Disk Type)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	13 13 13 13 13 13 13
AD 452 R AD 900 R C 677 R D 582 R D 583 R D 584 R D 635 R D 827 R D 849 R D 1050 R D 1551 R D 1551 R JD 15 R JD 17 R JD 1232 R JD 7216 R	Tires). Nut, Front Wheel Bearing Front Wheel with Hub Cap and Bearing Cups Gasket, Front Wheel Hub Cap Rim, Front Wheel Extension (5" Wide). Clamp, Front Wheel Extension Rim to Wheel Washer, Front Wheel Extension Rim Clamp. Felt Retainer, Front Wheel. Washer, on Hook Bolt (Spoke Type) Band, Front Wheel Guide (Half) (4") (2 used per Wheel) Band, Front Wheel Guide (Half) (3-1/2" High) (2 used per Wheel) Band, Front Wheel Guide (2-1/2" High). Clamp, Front Wheel Weight Bolt, Front Wheel Hub (Disk Type). Bolt, Front Wheel Hub (Disk Type). Disk and Rim, Front Wheel (For 6.00x16" Rubber Tires) Cone with Rollers, Front Wheel, Outside Bearing.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1735- AO-1000-	13 13 13 13 13 13 13 13 13 13 13 13 13 1

Part	NAME AND DESCRIPTION		<u> </u>
Number	TAME AND DESCRIPTION	Serial Number	Plate No.
JD 7224 R JD 7266 R JD 7270 R JD 7759	FRONT WHEELS AND FRONT WHEEL EQUIPMENT —Continued Cone with Rollers, Front Wheel, Inside Bearing. Cup, Front Wheel, Outside Bearing. Cup, Front Wheel, Inside Bearing. Alemite Fitting, No. 1610, Front Wheels	AO-1000-	13 13 13
	·	AO-1000-	13
294 R A 934 R A 936 R A 940 R A 1676 R A 1677 R A 1730 R A 1731 R	STEERING PARTS Stud, Steering Housing to Case, 1/2"x1-11/16". Tube, Vertical Steering Shaft Bushing, Steering Gear Shaft, Lower. Arm, Steering Gear. Bracket, Steering Shaft Bearing. Tie Rod. Steering Arm, R. H. Housing, Steering Worm Gasket, Steering Worm Housing, Thin. Gasket, Steering Worm Housing, Thin.	AO-1000- AO-1000- AO-1000- AO-1000-1214 AO-1000-	14 14 14 14 14 14 14 14
A 1732 R A 1733 R A 1734 R A 1736 R A 1736 R A 2215 R AA 380 R AA 567 R	Housing, Steering Gear. Gear, Steering Worm Support, Steering Shaft, Rear. Bracket, Steering Shaft Bearing. Washer on Steering Gear Shaft. Steering Wheel	AO-1000- AO-1000- AO-1000- AO-1215- AO-1000-	14 14 14 14 3 14 14
AA 971 R AA 1605 R AB 214 R B 37 R C 838 R C 840 R C 977 R	Shaft with Steering Worm, Steering Drag Link, Complete. Shaft, Steering Gear Vertical Bearing, B36 R, with Bushing, Steering Shaft, Upper. Bearing, Steering Shaft, Upper. Bearing, Ball Stud, Drag Link and Tie Rod. Screw Plug, Drag Link and Tie Rod.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	14 14 14 3 3 14
C 1109 R C 1220 R D 156 R D 342 R D 1674 R D 1701 R D 1766 R	Adjusting Screw, Steering Gear Shaft. End, Tie Rod. Dowel Pin, Steering Housing. Taper Bolt, Steering Knuckle Pivot Pin. Key, Steering Wheel. Steering Arm, L. H. Spindle Pin. Adjusting Nut, Steering Worm.	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	14 14 12 14 14 14 12
D 1768 R D 1898 R JD 7205 R JD 7253 R JD 7759	Stud, Steering Arm (4 used) Cone with Rollers, Steering Worm Cup, Steering Worm Bearing Alemite Fitting, No. 1610, Steering Worm Housing and Vertical Shaft,	I AO 1000	14 14 12 14 14
911 G8	Alemite Fitting, No. 1610, in Drag Link and Tie Rod	AO-1000-	14
A 334 R A 507 R A 850 R A 1739 R A 1741 R A 1746 R AA 1353 R AA 1355 R B 111 R	Nut, Drawbar Clevis (Special) Pin, Drawbar Roller. Roller, Drawbar. Clevis, Drawbar. Pin, Drawbar Indexing. End, Drawbar Brace, Drawbar Support Drawbar, Complete. Support, Drawbar, with Brake Lever Pivot. Washer, on Drawbar to Front Support Bolt	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	14 14 14 14 14 14 14 14 14
1706 R A 333 R A 618 R A 619 R A 1687 R A 2298 R A 2545 R AA 3003 R AD 1606 R B 845 R B 847 R C 1980 R C 1982 R C 1985 R D 1797 R	Washer on Seat to Seat Support Bolt Nut, Seat Spring Bolt (Special). Spring, Seat Bolt, Seat Spring (9" Long). Channel, Seat Support (Substitute AA3003 R). Spacer, Seat Bolt. Bracket, Seat Spring. Seat Support with Spring Bracket (Substitute for A1687 R) Seat. Strap, Seat Channel Stop. Strap, Seat Spring Bolt. Pin, Channel Seat Support. Washer, Seat Spring Spacer, Seat Clamp. Nut, Seat Clamp	AO-1768- AO-1000- AO-1000- AO-1000- AO AO-1768- AO-1829- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-1767 AO-1000-1767	14 14 14 14 14 14 14 14 14 14 14 14

Part Number	NAME AND DESCRIPTION	Serial Number	Plat No.
	PLATFORM		
A 1688 R A 1689 R A 1690 R A 1691 R A 2532 R A 2538 R A 2539 R A 2540 R A 2541 R A 2542 R A 1330 R	Platform Support, Platform, R. H Support, Platform, L. H. Cross Angle, Fender Platform Support, Platform, R. H. Support, Platform, L. H. Support Angle, Fender, R. H. Support Angle, Fender, L. H. Support Angle, Fonder, L. H. Suptort Angle, Fonder, L. H. Support Angle, Fonder, L. H.	AO-1000-1828 AO-1000-1828 AO-1000-1828 AO-1000-1828 AO-1829- AO-1829- AO-1829- AO-1829- AO-1829- AO-1829- AO-1829- AO-1829- AO-1829- AO-1829- AO-1829-	15 15 15 16 15 16 16 16 16 16
AA 3001 R	Platform with Support Angles	AO-1829-	16
27 R 27 R 27 R A 1692 R A 1693 R A 1694 R A 1695 R A 1711 R A 1724 R A 1726 R A 1728 R A 1874 R A 1874 R A 1875 R A 1887 R A 1331 R AA 1332 R AA 1332 R AA 1344 R AA 1345 R AA 1346 R AA 1347 R AA 1346 R AA 1347 R AA 1347 R AA 1347 R AA 1348 R AA 1349 R AA 1349 R AA 1340 R AA 1347 R AA 1347 R AA 1366 R AA 1569 R AA 1569 R AA 1569 R AA 1569 R	Washer, Fender Side to Platform Support Bolt, R. H. and L. H. Washer, Fender Crown to Platform Cross Angle Bolt, R. H. and L. H. Washer, on Cowl Fastening Screw Dust Shield, R. H Dust Shield, L. H Dust Shield Extension, R. H. Dust Shield Extension, L. H. Wing Nut, for Cowl Fastener Pin, Cowl Hinge. Fastener, Cowl. Hinge, Cowl, Rear Half. Spring, Citrus Fender Front Fastener Pivot. Bracket, Citrus Fender Brace, Citrus Fender, R. H. Brace, Citrus Fender, R. H. Spacer, Citrus Fender Rear Bracket Fender, with Brace, R. H. Fender, with Brace, L. H. Brace, Fender, R. H. Front, with Strut. Brace, Fender, L. H. Front, with Strut. Guard and Front Support, Pulley Guard and Front Support, Flywheel Cowl, Complete. Channel with Hinge Half, Cowl. Cowl Angle with Fastener Lock, Citrus Fender, R. H., with Pulley Guard Citrus Fender, R. H., with Flywheel Guard Citrus Fender, L. H., with Flywheel Guard Bottom Brace with End, Citrus Fender, R. H. Bottom Brace with End, Citrus Fender, R. H.	AO-1000- AO-100	15 15 15 17 17 17 17 17 17 17 17 17 17 17 17 17
AA 1743 R D 2379 R K 3151 R K 3151 R K 3151 R	Bail and Pivot, Citrus Fender Front Fastener. Wing Nut on Citrus Fender Pulley Guard to Front Support Bolts Washer on R. H. Fender and Pulley Guard Assemblies. Washer on L. H. Fender and Flywheel Guard Assembly. Washer on L. H. Dust Shield to Tool Box Bolt.	AO-1691- AO-1000-1690 AO-1000- AO-1000- AO-1000-	17 17 17 17 17
	MAGNETO, SPARK PLUG AND CABLES	AO 1000	10
629 R 4 470 R A 471 R A 500 R A 2303 R AA 1084 R AA 1225 R AA 1225 R AA 1890 R AA 2044 R AB 336 R	Washer, Magneto to Governor Case. Clamp, Spark Plug Cable Clip, Spark Plug Cable Gasket, Magneto to Governor Case. Flange, Magneto Drive. Porcelain for AC600 R Spark Plug (Champion No. 2) Cable, Spark Plug, Complete L. H. with Safety Nipple. Cable, Spark Plug, Complete R. H. with Safety Nipple. Cable, Spark Plug, L. H. Spark Plug (Edison-Splitdorf). Conduit, Spark Plug Cable Magneto, Complete (Fairbanks Morse Type RV2 B) (Substitute either	AO-1000- AO-1000- AO-1000- AO-1000- AO-1850- AO-1000- AO-1725-1849 AO-1850- AO-1000- AO-1000-	18 18 18 18 3 18 18 18 18
AB 706 R AB 757 R AB 829 R AB 829 R AC 600 R AD 1400 R AD 1415 R AD 1454 R AD 1498 R AH 653 R	Magneto, Complete (Fairbanks Morse Type RV2 B) (Substitute either AB757 R or AD1400 R). Magneto, Complete (Wico Type AP477 B). Cable, Spark Plug, R. H Cable, Spark Plug, Complete, R. H Spark Plug (Champion). Magneto (Edison-Splitdorf Type CD 2). Cable, Spark Plug, L. H Cable, Spark Plug, R. H Cable, Spark Plug, R. H Cable, Spark Plug, L. H., with Safety Nipple. Magneto, Complete (Wico Type C).	AO-1000-1524 AO-1725-1849 AO-1850- AO-1000-1524 AO-1000- AO-1525-1724 AO-1525-1724 AO-1525-1724 AO-1725-1849 AO-1850-	18 18 18 18 18 18 18

Part Number	NAME AND DESCRIPTION	Serial Number	Pla No
B 281 R B 465 R C 1300 R D 465 R D 2808 R	MAGNETO, SPARK PLUG AND CABLES—Continued Flange, Magneto Drive Clamp, Spark Plug Cable Conduit. Nipple, Spark Plug Cable, Rubber. Gasket, Spark Plug. Gauge, Magneto Contact Point (Edison-Splitdorf).	AO-1000-1849 AO-1000- AO-1000-1524 AO-1000- AO-1525-1724	18 18 18 18
Part Number	NAME AND DESCRIPTION	Magneto Serial	Pla
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA	AB706 R MAGNETO PARTS (FAIRBANKS MORSE TYPE DRY2B) Insulating Strip, Distributor Bearing. Gasket, Brush Holder Nut, Primary Cend Nut, Stationary Contact Support Screw. Snap Ring, Distributor Shaft. Screw, Bridge Clamp. Cork Washer, Rotor Shaft Bearing Retainer, Distributor Bearing Oil Seal Cork Washer, Distributor Bearing Oil Seal Cork Washer, Distributor Bearing Oil Seal Washer Flat Washer, Distributor Bearing Oil Seal Washer Flat Washer, Distributor Bearing Cup. Screw, Breaker Bar Clip Snap Ring, Distributor Bearing Cup. Spacer, Distributor Bearing Cup. Spacer, Distributor Bearing Cup. Spacer, Distributor Bearing Cup. Screw, Stationary Contact Support. Screw, Stationary Contact Support. Support, Stationary Contact Support. Pin, Breaker Arm Fulcrum Insulating Strip, Rotor Bearing. Insulating Strip, Rotor Bearing. Insulating Washer, Rotor Bearing Retainer, Rotor Shaft Bearing Cork Washer. Gear, Rotor. Key, Woodruff, Distributor Shaft. Lock Washer, Breaker Bar Clip Screw. Lock Washer, Stationary Contact Support Screw. Lock Washer, Primary Lead Nut. Lock Washer, Primary Lead Nut. Lock Washer, Frame Cover Screw. Lock Washer, Frame Cover Screw. Lock Washer, Frame Cover Screw. Lock Washer, End Cap Screw. Lock Washer, Stationary Contact Support Rivet. Insulator, Stationary Contact Support Rivet. Insulator, Stationary Contact Support Screw Brush Holder, less Brush Distributor Brush with Spring Collector Brush with Spring Bridge Clamp with Lead Wire. Primary Lead Wire with Terminals. Rubbing Block Wick and Retainer Breaker Point Assembly (1 AA418 R and 1 AA423 R) Brush, Collector, with Spring Distributor Shaft with Gear End Cap Assembly with Lead Wire. Impulse Coupling Shell with Spring Clip. Impulse Drive Member with Pawls	56577- 56577-	1: 1: 1: 1: 1: 1: 1: 1: 1: 1: 1: 1: 1: 1

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Pla N
	AB706 R MAGNETO PARTS—Continued		
	(FAIRBANKS MORSE TYPE DRY2B)—Continued	100000	-
AB 1085 R	Impulse Drive Member with Pawls	136200-	1
B 507 R	Screw, Frame Cover	56577-	1
B 508 R	Cover, Frame Top	56577-	1
B 509 R	Gasket, Frame Top Cover (Cork)	56577-	1
B 510 R	Screw, Brush Holder	56577-	1
B 514 R	Screw, Condenser	56577-	1
B 515 R	Oil Seal Cork, Armature to Frame	56577-	1
B 516 R	Nut, Impulse Coupling	56577-136199	1
B 517 R	Spring, Impulse Coupling	56577-136199	1
B 518 R	Holder, Oil Wick	56577-	1
B 519 R	Wick Cam Oiler	56577-	1
B 520 R	Lock Washer, Cam Oil Wick Holder,	56577-	1
B 521 R	Clip. Impulse Coupling Spring	56577-	1
B 522 R	Rivet, Impulse Coupling Spring Clip. Shim, Rotor Bearing (Copper, .002" Thick). Shim, Rotor Bearing (Copper, .004" Thick).	56577-	1
B 523 R	Shim. Rotor Bearing (Copper, .002" Thick)	56577-	1
B 524 R	Shim, Rotor Bearing (Copper, .004" Thick)	56577-	1
B 525 R	Shim, Rotor Bearing (Copper, 1006" Thick)	56577-]
B 594 R	Stop Screw, Impulse	56577-]
B 595 R	Rivet, Impulse Pawl.	56577-	
B 977 R	Support, Stationary Contact.	179115-	
978 R	Insulator, Stationary Contact Support	179115-	- :
B 979 R	Screw, Stationary Contact Support	179115-	
B 980 R	Nut, Impulse Coupling	136200-	
C 1330 R	Wire, Impulse Lock	56577-	
C 1333 R	Drive Spring, Impulse Coupling.	136200-	1:
C 1334 R	Pawl, Impulse Drive Member	56577-	:
C 1335 R	Key, Woodruff, Impulse Coupling.	56577-	:
	AD1400 R MAGNETO PARTS		
	(Edison-Splitdorf Type CD Flange Mounted)	100-	1
62	Nut, Breaker Bar Terminal (Was D2723 R)	100-	1 2
62	Nut, Condenser Lead Wire (Was D2723 R).	100-	
72	Key, Distributor Gear (Was D2727 R).	100-	
72	Key, Pinion Gear (Was D2727 R)		
515	Hex. Nut, Ground Terminal (Was D2725 R)	100 100-	
1212	Screw, Front Cover (Was D1145 R)		
2635	Connection Clip, Ground Outside (Was D2088 R)	100-	
3055	Lock Washer, Front Bearing Plate Screw (Was D2720 R)	100-	
3055	Lock Washer, Distributor Shaft Screw (Was D2720 R).	100- 100-	
3055	Lock Washer, Ground Terminal Screw (Was D2720 R)		
3055	Lock Washer, Pinion Gear Screw (Was D2720 R)	100~	
3398	Washer, Ground Stud (Was D2716 R)	100-	
3722	Screw, Rear Bearing Oil Hole Plug (Was D2675 R)	100-	
3794	Lock Washer, Breaker Bar Spring Screw (Was C1324 R)	100-	
6140	Washer, Insulating, Breaker Bar Terminal Screw (Was D2712 R)	100-	
6214	Distributor Brush with Spring (Was AD1524 R)	100-41756	
6763	Washer, Oil Seal (Impulse End) (Leather)	45540-	
6822	Plate, Impulse with Stop Pin (Substitute for AD1543 R)	100-	
7316	Shell, Impulse Coupling, with Spring Locating Pin (Was AD1541 R).	100-	
7334A	Impulse Drive Member (Was AD1531 R)	100-	1
7340	Screw, Stop Pin Plate (Was D2709 R)	100-	
7343	Washer, Notched Impulse Coupling Nut (Was D2717 R).	100-	
7344	Hex. Nut, Impulse Starter (Was D2726 R)	100-	
7347	Spring, Impulse Coupling, with Felt (Was AD1542 R)	100-	
7348	Felt, Impulse Drive Member (Was D2667 R)	100-	
7349	Pawl, Impulse Coupling (Was D2718 R)	100-	
7350	Washer, Impulse Stop Lever (Was D2719 R)	100-	
7351	Snap Ring, Impulse Pawl (Was D2666 R).	100-	-
7366	Button, Centering, Impulse Spring (Was D2696 R)	100-	-
7523	Insulation, Ground Terminal Connector (Was D2687 R)	100-	
7524	Felt Washer, Rotor Bearing, Impulse End (Was D2673 R)	100-	
7535	Cap, Magnet Screw (Was D2698 R)	100-	
7571	Washer, Insulating, Ground Stud Outside (Was D2715 R)	100-	
7572	Screw, Magnet (Was D2710 R)	100-	
7593	Insulator, Coil (Top) (Was D2684 R)	100-	-
7595	Insulator, Coil (Bottom) (Was D2685 R)	100-	-
7606	Lead Wire, Coil to Ground (Was AD1528 R)	100-	
7616	Gasket, Timing Slot (Was D2671 R).	100	
	Stud, Ground Terminal (Was D2708 R)	100-	1
7617			
	Insulator, Coil Lead (Was D2686 R)	100	į.
7617 7717 7775	Insulator, Coil Lead (Was D2686 R). Terminal, Ground, Primary and Condenser Lead Wire (Was D2665 R)	100	

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
	AD1400 R MAGNETO PARTS—Continued		
16756	(Edison-Splitdorf Type CD Flange Mounted)—Continued	400	
17394	Screw, Coil Clamp (Was D2707 R) Screw, Timing Slot (Was D2672 R)	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
18309	Screw, Distributor Shaft (Was D2706 R).	100-	20
18309	Screw, Rotor and Distributor Gears (Was D2706 R)	100-	20
29335	Washer, Breaker Bar Terminal Screw (Brass) (Was D2713 R)	100-	20
29411 29411	Washer, Distributor Gear (Was D2714 R)	100-	20
29555	Washer, Rotor Pinion (Was D2714 R). Lock Washer, Magnet Screw (Was D2722 R).	100 100	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
29631	Screw, Breaker Terminal (Was 2705 R)	100-	20
30537	Lock wasner, Impulse Shatt (was 1)2721 R)	100-	$\frac{1}{20}$
35207 35251	Screw, Distributor Bearing Oil Hole (Was D2692 R)	100-18567	20
35252	Screw, Breaker Base Plate (Was D2704 R). Screw, Contact Bracket Holding (Long) (Was D2703 R)	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
51202	Rotor Assembly (Was AD1540 R)	100-	20
51209	Plate, Front Bearing (Was D2691 R)	100-	20
*51226	Breaker Point Assembly (51274 with 51275) (Was AD1535 R. with		
51227	AD1536 R)	100-	20
51229	Pinion, Rotor (Was D2690 R)	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
51230	Gear, Distributor (Was D2680 R).	100-	20
51231	Gear, Distributor (Was D2680 R). Adjusting Plate, Breaker Bar (Was D2677 R).	100-	20
51233 51234	Clamp, Coll (Was D2683 R)	100-	20
51234	Rotor Bearing (Was AD1539 R) Magnet (Was D2697 R)	100- 100-	20
51237	Oil Hole Plug (Was D2669 R)	100 <u>-</u> 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
51244	Nut, Breaker Terminal (Special Round) (Was D2724 R)	100-	20
51252 51253	Collar, Distributor Gear Spacing (Was D2681 R)	100-	20
51253 51254	Distributor Bearing (Was AD1537 R). Gasket, Front Cover (Was D2663 R).	100-	20
51255	Dowel Pin, Front Cover (Was D2664 R)	100- 100-	$\begin{array}{ c c } 20 \\ 20 \end{array}$
51256	Insulation, Breaker Stud (Was D2679 R)	100-	20
51257 51966	Terminal Bracket, Breaker Bar Spring (Was D2678 R)	100-	20
51266 51267	Retainer, Felt Washer Rotor Bearing (Was D2674 R)	100-	20
51271	Gasket, Distributor Block (Was D2662 R) Disk, Safety Gap (Was D2676 R)	100- 100-	$\begin{array}{ c c } 20 \\ 20 \end{array}$
51272	Screw, Contact Bracket Pivot (Was D2701 R)	100-	20
51273	Washer, Contact Bracket (Was D2711 R)	100-	20
51283 51285	Distributor Cam and Shaft (Was D2682 R)	100-	20
51286	Wire, Condenser Lead (Was AD1526 R) Wire, Breaker Lead (Was AD1530 R).	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
51287	Terminal Connector, Ground (Was D2689 R)	100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
51301	Cover, Timing Slot (Was 2670 R)	100-	120
51315	Wire, Primary Lead (Was AD1529 R)	100-	20
51432 51435	Coil Complete, with Primary and Ground Leads (Was AD1527 R)	100-	20
51436	Sealing Cap, Main Bearing (Was D2693 R). Center Brush (Was AD1510 R).	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
51439	Front Cover, Gasket and Dowel Pin (Was AD1525 R)	100-	20
51441	Condenser (Was AD1538 R)	100-	20
51452 51459	Distributor Block, Complete (Was AD1523 R)	100-	20
51409 51530	Coil Spring, Distributor Block, High Tension Contact (Was D2661 R) Housing, Magneto (Was AD1532 R).	100-	20
51580	Cam Wiper and Bracket (Was AD1533 R)	100- 100-	$\begin{vmatrix} 20\\20 \end{vmatrix}$
51655	Washer, Distributor Bearing Seal (Was D2888 R)	18568-	20
51656 51664	Felt, Distributor Bearing, Seal (Was D2889 R)	18568-	20
51666	Distributor Brush with Spring (Was AD1882 R) Snap Ring, Distributor Bearing (Was D2937 R).	41757-	20
51673	Distributor Rotor (Was AD1534 R)	42889- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
53367	Screw, Connector Plate (Was D2702 R)	100-	$\frac{20}{20}$
53367	Screw. Contact Bracket Holding (Short) (Was D2702 R)	100-	20
63399 63400	Shim, Rotor Bearing, .002" (Was D2694 R) Shim, Rotor Bearing, .003" (Was D2695 R)	100-	20
63643	Screw, Distributor Block (Was D2699 R)	100	20
C 1335 R	Key, Rotor Shaft (Splitdorf 73)	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
1350 R	Lock Washer, Timing Slot Screw (Splitdorf 23149)	100-	20
1350 R	Lock Washer, Condenser Lead (Splitdorf 23149)	100-	20
2 1350 R 2 1350 R	Lock Washer, Distributor Block Screw (Splitdorf 23149)	100-	20
1350 R	Lock Washer, Breaker Bar Terminal Screw (Splitdorf 23149) Lock Washer, Coil Clamp Screw (Splitdorf 23149)	100- 100-	$\begin{vmatrix} 20 \\ 20 \end{vmatrix}$
1350 R	Lock Washer, Ground Stud (Splitdorf 23149)	100-	20
1350 R	Lock Washer, Front Cover Screw (Splitdorf 23149)	100-	20
2213 R	Screw, Front Bearing Plate.	100-	20

*Set of points. For best results replace both points.
Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	P
	AB757 R MAGNETO PARTS		
	(Wico Type AP477 B)		
1031	Nut, Pinion (Was B1082 R)	5867-	2
1083	Gasket, Gear Case (Was B1064 R)	5867-	
1084B	Washer, Gear Case Sealing, Cork (Was B1041 R)	5867-	1 2
1085	Screw, Gear Case (Was B1093 R)	5867-	
1092	Spring Drive (Was B1074 R)	5867-	
1094	Trip Arm (Was B1075 R). Lock Nut, Impulse (Was B1072 R).	5867-	
1098	Lock Nut, Impulse (Was B1072 R)	5867- 5867-	
1110	Pad, Gear Case Oil (Was B1065 R)	5867-	
1116	Gasket Cover (Was B1042 R)	5867-	
1117 1118	Washer Cover Screw, Leather (Was B1045 R)	5867-	
1121	Coil Contact (Was B1043 R)	5867-	
1129	Gasket, End Plate (Was B1077 R)	5867-	Ì
1131	Seal, Drive Shaft Felt (Was B1078 R)	5867-	
1146	Key Pinion Gear (Was B1083 R)	5867-	
1147	Gear, Pinion (Was B1066 R)	5867-	1
1151	Disk Oiling (Was B1067 R)	5867-	
1152	Scraper, Oil (Was B1080 R) Spring, Oil Scraper (Was B1081 R)	5867-	
1153	Spring, Oil Scraper (Was B1081 R)	5867-	
1163	Bearing Rotor (Was AB1226 R)	5867	
1165	Clip. Condenser (Was B1051 R)	5867 - 17866	
1167	Stud. Cam (Was B1057 R)	5867-	l
1168	Wick Cam Stud Oil (Was B1058 R)	5867-	
1169	Pad, Cam Stud Oil (Was B1059 R) Support, Cam Stud Oil Pad (Was B1060 R)	5867-	
1170	Support, Cam Stud Oil Pad (Was B1060 R)	5867-	
1171	Pad, Main Oil (Was B1061 R)	5867-	
1193	Block, Breaker Point Spring (Was AB1213 R)	5867-	
1194	Pad Cam Oil (Was BIO38 R)	5867-	
1197	Washer, Breaker Arm Spacing (Was B1087 R)	5867- 5867-	ļ
1197 T	Shim, Breaker Arm Spacing Washer	5867-	
1207	Washer, Breaker Arm Clamp (Was B1086 R) Washer, Friction (Was B1090 R).	5867-	1
1208	Washer, Friction (Was Blugu R)	5867-	
1210	Clip, Distributor (Was B1039 R). Brush, Distributor (Was B1034 R)	5867-	
$1216 \\ 1217$	Spring, Distributor Grush (Was B1034 R)	5867-	
1232	Clamp, Coil Core (Was B1069 R)	5867-	
1418	Spacer, Breaker Arm (Was B1063 R)	5867-	
1433B	Cup, Drive (Was B1108 R).	5867-	
1434B	Plate, End (Was B1109 R)	5867-	
1641	Screw End Plate (Was B1094 R)	5867-	
1729 R	Lock Washer, Pinion Nut	5867-	
1730 R	Cotter Key Impulse Lock Nut	5867-	
1759	Plate Coil Protecting (Was B1071 R)	5867	
1786	Nut Condensor Lead (Was B1068 R)	5867-	
1883	Gear Case Sealing Washer Cover (Was B1040 R)	5867-	- 1
2219	Gasket Distributor Can (Was B1106 R)	5867-	
2236	Lock Washer, End Plate Screw (Was B1091 R)	5867-	
2264B	Wedge Coil (Was R1070 R)	5867-	
2405	Support, Condenser (Was B1050 R)	5867-	
2442	Clip, Condenser (Was B1271 R).	17867-	
2443	Screw, Condenser (Was Drive (Was B1272 R)	17867-	
178XA	Pivot, Trip Arm (Was B1054 R)	5867- 5867-	
243X	Snap Ring, Trip Arm (Was B1076 R)	5867-	
705 R	Screw, Breaker Arm Clamp Screw, Breaker Arm Spring.	5867-	
705 R	Screw, Condenser Support.	5867-	İ
1 705 R 1 705 R	Screw, Condenser Support	5867-	
1320 R	Lock Washer, Gear Case Screw	5867-	
1320 R	Lock Washer, Condenser Clip Nut.		
1344 R	Lock Washer, Condenser Lead Nut.	5867-	ļ
1344 R	Lock Washer, Coil Contact Screw	5867-	
1350 R	Lock Washer Breaker Plate Screw	5867-	
1350 R	Lock Washer, Breaker Arm Clamp Screw	5867-	
1350 R	Lock Washer, Breaker Arm Spring Screw	5867-	
1350 R	Lock Washer, Fixed Contact Screw	5867-	
1350 R	Lock Washer, Condenser Support Screw	5867-	
C 1350 R	Lock Washer, Coil Core Clamp Screw	5867-	
KA 761	Nut. Condenser Contact (Was B1048 R)	5867-	
XA 256	Wesher Cover Screw (Was B1047 R)	5867-	
XA 256	Washer, Fixed Contact Screw (Was B1047 R). Oil Plug (Was B1107 R).	5867-	
		5867-	

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Pla No
	AB757 R MAGNETO PARTS—Continued		
	(Wico Type AP477 B)		
M 32XA	Condenser Contact Screw Insulating Bushing (Was B1053 R)	5867-	21
M 71X	Nut, Condenser Clip (Was B1052 R)	5867-17866	$\frac{1}{21}$
M 94X	Key, Impulse Coupling (Was B1084 R)	5867-	$\frac{1}{21}$
M 126XB	Screw, Coil Core Clamp (Was B1092 R)	5867-	21
M 127X	Washer, Condenser Insulating (Was B1049 R)	5867-	21
M 155X	Screw, Coil Contact (Was B1046 R)	5867-	21
X 1097 X 1122	Driven Flange Group (Was AB1221 R)	5867-	21
	Cover Assembly (Was AB1217 R)	5867	21
X 1134 X 1145	Impulse Stop Group (Was AB1222 R)	5867–	21
X 1220	Rotor Assembly (Was AB1223 R).	5867-	21
X 1220 X 1230	Ventilating Screen Group (Was AB1208 R).	5867-	21
X 1331		5867-	21
X 1570	Com Crown (Was AB1216 B)	5867-	21
X 2226	Cam Group (Was AB1216 R)	5867-	21
X 2228	Distributor Arm Group (Was AB1210 R).	5867-	21
X 2229	Distributor Cap (Was AB1230 R)	5867-	21
X 2231	Secondary Interlead Group (Was AB1229 R)	5867-	21
X 2237		5867-	21
X 2296	Main Housing Assembly (Was AD1231 K)	5867-	21
X 2595	Main Housing Assembly (Was AB1224 R).	5867-	21
X 2770		5867-	21
X 3342	Coil Unit (Was AB1218 R). Breaker Point Assembly (X1205 and 1196) (Was AB1211 R and	5867-	21
A 3344	AB1214 R)	F0.05	
X 3543		5867-	21
22 0010	End Trace with On Seal	5867-	21
	AH653 R MAGNETO PARTS		ļ
	(Wico Type C)		
15-186		04600-	22
16-480	Lock Spring, Distributor Arm (Was H642 R)	04600-	22
16-491C	Lock Nut. Impulse (Was H646 R)	04600-	22
16-X477B	Distributor Arm with Spring (Was AH766 R)	04600-	22
16-583	Washer, Drive Cup Spacing (Brass) (Was H649 R)	04600-	22
16-738	Screw, Breaker Point (Was E214 R)	04600-	22
16-738	Screw, Breaker Arm Spring (Was E214 R)	04600-	22
1118	Washer, Cover Screw (Leather) (Was B1045 R)	04600-	22
1118	washer, Distributor Cap (Leather) (Was B1045 R)	04600-	$\frac{1}{22}$
1152	Scraper, Oil (Was B1080 R)	04600-	22
1153	Spring, Oil Scraper (Was B1081 R).	04600-	22
1197	Spring, Oil Scraper (Was B1081 R). Washer, Breaker Arm Spacing (Was B1087 R).	04600-	22
1197T	Shim Breaker Arm Spacing.	04600-	22
1207	Washer, Breaker Arm Clamp (Was B1086 R)	04600-	22
1379	Pad, Main Oil (Was E209 R)	04600-	22
1383	Screw, Condenser (Was E215 R)	04600-	22
1397	Coil Contact, Secondary Interlead (Was E221 R)	04600-	22
1404	Screw, Secondary Interlead Contact (Was H664 R)	04600	22
1418	Spacer, Breaker Arm (Was B1063 R)	04600	22
1533	Gasket. Condenser Case (Was E216 R)	04600-	22
1727A	Terminal, Primary Lead (Was H643 R)	04600-	22
1760	Plate, Coil Protecting (Was E224 R)	04600-	22
1814	Terminal, Primary Ground (Was H644 R).	04600-	22
2061B	Cup, Drive (Was H647 R)	04600-	22
2121	Spacer, Impulse (Was H654 R)	04600-	22
2122	Spacer, Driven Flange (Was H653 R)	04600-	22
2264B	Wedge, Coil (Was B1070 R).	04600-	22
2288		04600-	22
2495	Bushing, Rotor (Was H645 R).	04600-	22
2496	Gasket, Impulse Stop (Was H655 R)	04600-	22
2497	Gasket, Distributor Cap (Was H656 R)	04600-	22
2503	Clamp, Coil Core (Was H658 R)	04600-	22
2504		04600-	22
2505	Plate, Oil Pad Spring (Was H660 R).	04600-	22
2537	Screw, Distributor Cap (Was H662 R)	04600-	22
2538		04600	22
2641	Screw, impulse Stop Group (Was H661 R)	04600-	22
0745	Disk, Oiling (Was H659 R)	04600-	22
2745	Oil Seal, Impulse (Was AH763 R)	04600-	22
2745 33X	Damel I		1 00
33X 179X	Pawl, Impulse (Was H641 R)	04600-	22
179X 179X 243X	Snap Ring, Trip Arm (Was B1076 R)	04600-	22
2745 A 33X A 179X A 243X A 705 R	Snap Ring, Trip Arm (Was B1076 R) (Screw, Fixed Contact) (04600- 04600-	$\begin{vmatrix} 22\\22 \end{vmatrix}$
2745 33X 179X 243X 705 R 31350 R	Snap Ring, Trip Arm (Was B1076 R) (Screw, Fixed Contact	04600-	22

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.	
D 2003 R H 665 R H 666 R IVA 583 IXA 256 IXA 256 IXA 256 IXA 345 M 126XB X 1413 X 2706 X 2719 X 2723 X 2766 X 2938 X 3043 X 3051 X 3114	AH653 R MAGNETO PARTS—Continued (Wico Type C) Lock Washer, Condenser Screw. Lock Washer, Breaker Arm Spring Screw. Lock Washer, Impulse Stop Screw Washer, Drive Cup Spacing (Steel) (Was H650 R). Washer, Distributor Cap (Was B1047 R). Washer, Cover Screw (Was B1047 R). Washer, Fixed Contact Screw (Was B1047 R). Oil Plug (Was B1107 R) Washer, Drive Cup (Was H651 R). Screw, Coil Core Clamp (Was B1092 R). Condenser (Was AE270 R). Core, Coil (Was AH769 R). Impulse Stop Group (Was AH762 R).	Number 04600-	22 22 22 22 22 22 22 22 22 22 22 22 22	
X 3168 *X 3343	Cover with Breaker Plate Assembly (Was AH767 R) Breaker Point Assembly (X1408 and 1196)	04600-	$\begin{bmatrix} 22\\22\\22 \end{bmatrix}$	

*Set of Points. For best results replace both points.
Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
	SCHEBLER CARBURETOR (AA580 R)		
1-K	Spring, Friction Ball (Was 57W)	AO-1000-	18
15-29	Screw, Choker Disk (Was SI-18)	AO-1000-	18
15-25	Adjusting Screw, Throttle Lever (Was 71W)	AO-1000-	18
15-285	Screw, Throttle Disk (Was 70W)	AO-1000-	18
18-O	Spring Throttle Ston	AO-1000-	18
25-J	Spring, Throttle Stop	AO-1000-	18
25- V	Spring, Choker Lever Friction (Was 68W)	AO-1000-	18
321 R	Gasket. Carburetor to Manifold	AO-1000-	18
	Screw in Swivel Pin	AO-1000-	18
A 705 R AA 580 R	Carburetor, Complete	AO-1000-	18
AB 1843 R	Choker Lever and Shaft Assembly.	AO-1000-	18
	Pin, Swivel	AO-1000-	18
B 1663 R	Weaken on Christal Din	AO-1000-	18
B 1664 R	Washer, on Swivel Pin	AO-1000-	18
D 392 R	Body, Solder Bushing, Fuel Fipe (Schebler S2192)	AO-1000- AO-1000-	18
DLT-13	Bowl, Casting (Was B449 R)	AO-1000-	18
P 52	Washer, Choke Lever Friction Spring (Was 72W)	AO-1000- AO-1000-	18
P 348	Choker Disk, Air Valve	AO-1000- AO-1000-	18
P 710	Gasket, Bowl Retaining Nut (Was B457 R)	AO-1000- AO-1000-	18
P 791	Gasket, Float Valve Seat (Was 73W)	AO-1000- AO-1000-	18
P 850	Washer, Choker Friction (Was 74W)		18
P 947	Lever, Float (Was 75W)	AO-1000- AO-1000-	18
P 948	Disk, Throttle (Was 76W)	AO-1000- AO-1000-	18
P 950	Gasket, Strainer (Was 77W)		18
P 951	Gasket, Bowl (Was 78W)	AO-1000-	
S 93B	Screw, Throttle Lever (Was 17W)	AO-1000-	18
S 98	Pipe Plug, Hex. Head (Was 79W)	AO-1000-	18
S 98B	Pipe Plug, Headless (Was 80W)	AO-1000-	18
S 211G	Stop Pin, Throttle Lever (Was 67W)	AO-1000-	18
S 245	Lock Washer, Throttle Disk Screw (Was 81W)	AO-1000-	18
S 251A	Friction Ball, Needle Valve (Was 41W)	AO-1000-	18
S 763	Plug Screw for Drilled Holes (Was A1830 R)	AO-1000-	18
S 1121	Drain Cock	AO-1000-	18
S 1393	Lock Washer, Choker Disk Screw (Was 63W)	AO-1000-	18
S 1506	Drill Plug, (7, 32", -32) (Was 83W)	AO-1000-	18
S 2041	Drill Plug, (1, 4", -28) (Was 85W)	AO-1000-	18
S 2146	Pin, Float Pivot (Was 90W)	AO-1000-	18
S 2147	Screw, Float Bearing (Was 91W)		18
S 2151-C	Idle Plug (Was A832 R)	AO-1000-	18
S 2154	Screw, Choker Friction Spring (Was 94W)	AO-1000-	18

S 2183A S 2369 S 2424 S 2471 S 2482 S 2502 SI-10 X 1178B X 2457 X 2461 X 2461 X 2462 X 2653 X 2692 X 2774	SCHEBLER CARBURETOR (AA580 R)—Continued Nozzle (Was 95 W) Shaft, Throttle (Was C2502 R) Nut, Bowl Retaining (Was B450 R) Bushing, Throttle Shaft, Upper (Was C2504 R) Bushing, Throttle Shaft, Lower (Was D2530 R) Plug Screw for Drilled Holes (Was 45 W) Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W) Cork Float (Was 69 W) Needle, High Speed Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
S 2369 S 2424 S 2471 S 2482 S 2502 SI-10 X 1178B X 2457 X 2458 X 2461 X 2462 X 2653 X 2692 X 2774	Nozzle (Was 95 W) Shaft, Throttle (Was C2502 R) Nut, Bowl Retaining (Was B450 R) Bushing, Throttle Shaft, Upper (Was C2504 R) Bushing, Throttle Shaft, Lower (Was D2530 R) Plug Screw for Drilled Holes (Was 45 W) Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W) Cork Float (Was 69 W) Needle, High Speed Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
S 2424 S 2471 S 2482 S 2502 SI-10 X 1178B X 2457 X 2461 X 2461 X 2462 X 2653 X 2692 X 2774	Shart, Throttle (Was C2502 R) Nut, Bowl Retaining (Was B450 R) Bushing, Throttle Shaft, Upper (Was C2504 R) Bushing, Throttle Shaft, Lower (Was D2530 R) Plug Screw for Drilled Holes (Was 45 W). Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W). Cork Float (Was 69 W) Needle, High Speed. Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
2471 2482 2502 SI-10 1178B 2457 2458 2461 2462 2653 2692 2774	Bushing, Throttle Shaft, Upper (Was C2504 R) Bushing, Throttle Shaft, Lower (Was D2530 R) Plug Screw for Drilled Holes (Was 45 W) Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W) Cork Float (Was 69 W) Needle, High Speed Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
S 2482 S 2502 S 1-10 K 1178B K 2457 K 2458 K 2461 K 2462 K 2653 K 2692 K 2774	Bushing, Throttle Shaft, Upper (Was C2504 R) Bushing, Throttle Shaft, Lower (Was D2530 R) Plug Screw for Drilled Holes (Was 45 W) Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W) Cork Float (Was 69 W) Needle, High Speed Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
S 2502 SI-10 X 1178B X 2457 X 2458 X 2461 X 2462 X 2653 X 2692 X 2774	Clamp Screw for Drilled Holes (Was 45 W). Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W). Cork Float (Was 69 W) Needle, High Speed. Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
SI-10 X 1178B X 2457 X 2458 X 2461 X 2462 X 2653 X 2692 X 2774	Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W) Screw and Washer, Float (Was 4 W) Cork Float (Was 69 W) Needle, High Speed Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
X 1178B X 2457 X 2458 X 2461 X 2462 X 2653 X 2692 X 2774	Screw and Washer, Float (Was 4 W). Cork Float (Was 69 W) Needle, High Speed. Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
X 2457 X 2458 X 2461 X 2462 X 2653 X 2692 X 2774	Cork Float (Was 69 W) Needle, High Speed Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
X 2458 X 2461 X 2462 X 2653 X 2692 X 2774	Needle, High Speed. Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	
X 2461 X 2462 X 2653 X 2692 X 2774	Needle, Idle Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000- AO-1000-	
X 2462 X 2653 X 2692 X 2774	Strainer, Complete Float Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	AO-1000- AO-1000- AO-1000-	
X 2653 X 2692 X 2774	Thott Valve and Seat Assembly (Was C2501 R) Throttle Lever Assembly (Was AA578 R) Body, Carburetor, with Bushing (Was AA744 R)	${ m AO-}1000-\ { m AO-}1000-$	
X 2774	Body, Carburetor, with Bushing (Was AA744 R)	AO-1000-	
	Body, Carpuretor, with Bushing (Was AA744 R)		
	AID GIEANED		
	AIR CLEANER		
A 447 R A 971 R	Clamp, Air Cleaner Elbow Hose Hose, Air Cleaner Elbow to Carburetor	AO-1000-	:
A 1269 R	Casket Air Claner	AO-1000-	
A 1401 R	Gasket, Air Cleaner Snap Ring, Air Cleaner Bracket Intake Plate	AO-1000-	
A 1782 R	Intake Plate, Air Cleaner Bracket (Fits AO-1000- with AA1289 R)	AO-1000-	
A 1966 R	Lock Ring, Baffile	AO-1226-	
A 1967 R	Lock Ring, Filter	AO-1000- AO-1000-	
AA 929 R	Air Cleaner, Complete, United	AO-1000- AO-1000-	
AA 1287 R	Elbow, A959 R Carburetor Air Inlet with Pine	AO-1000-	
AA 1289 R	Bracket, A1781 R Air Cleaner, Complete	AO-1000-	
AA 1674 R	Body, Air Cleaner	AO-1000-	
AA 1675 R	Baffle with Handle	AO-1000-	
AA 1676 R C 1572 R	Oil Cup and Clip Assembly.	AO-1000-	
D 1034 R	Wing Nut	AO-1000-	:
J 1001 10		AO-1000-	
A 577 R	TOOL BOX AND TOOLS Socket Wrench for Spade Lug and Flywheel Bolt Nuts	AO 1000	
AA 1340 R	Tool Box and Dash, Complete	${ m AO-}1000-\ { m AO-}1000-1743$	2
AA 1341 R	Tool Box Assembly	AO-1744-	2
1591 R	Socket for Cylinder Head Nuts	AO-1000-	
0 1083 R	Socket Wrench for Connecting Rod Bolt Nuts	AO-1000-	1 2
D 7751	Grease Gun, No. 6556	AO-1000-	1
405 R	POWER SHAFT PARTS		
175 R	Ball, Power Shaft Shifter	AO-1000-	2
551 R	Shifter, Power Shaft Gear	AO-1000-	1 3
552 R	Arm, Power Shaft Shifter	AO-1000-	2
554 R	Gear, Power Shaft Bevel (17 Teeth)	AO-1000- AO-1000-	1
558 R	Bushing, Power Shaft Bevel Gear, Bronze	AO-1000- AO-1000-	1
559 R	Washer, Power Shatt Bevel Gear, Thrust	AO-1000- AO-1000-	2
561 R	Washer, Power Shatt Bevel Gear, Retaining	AO-1000-	1 2
562 R	Shap Ring, Power Shaft Bevel Gear	AO-1000-	
564 R	Bushing, Power Shaft Drive Shaft	AO-1000-	
000 K	Cover, Power Shatt R. H. Bearing	AO-1000-	
567 R 568 R	Shim, Power Shaft R. H. Bearing Cover, Thin	AO-1000-	1 2
571 R	Shim, Power Shaft R. H. Bearing Cover, Thick	AO-1000-	1 2
572 R	Shaft, Power	AO-1000-	1 2
574 R	Gasket, Power Shaft Stuffing Box	AO-1000-	2
574 R	Gasket, Power Shaft Oil Seal Housing.	AO-1000-1828	1 2
574 R	Gasket, Power Shaft Opening Cover	AO-1829-	2
574 R	Gasket, Power Shaft Guard	AO-1829- AO-1000-1828	1 2
575 R	Packing, Power Shaft Rear End (3 used)	AO-1000-1828 AO-1000-1828	2
774 R	Stuffing Box. Power Shaft Rear End	AO-1000-1828 AO-1000-1828	2
1 775 R	Gland, Power Shaft Rear End Packing	AO-1000-1828	2
919 R	Lever, Power Shaft Shifter Hand	AO-1000-1628 AO-1000-	2
1031 K	Gear, Power Shaft Sliding (21 Teeth)	AO-1000-	
1 1032 K	Pinion, Power Shaft Bevel Drive (17 Teeth)	AO-1000-	
1033 K	Shaft, Power Shaft Drive	AO-1000-	2
1242 R	Guard, Power Shaft End	AO-1000-1828	2

Part	NAME AND DESCRIPTION	Serial	Plate
Number		Number	No.
*A 2062 R *A 2195 R *A 2196 R *A 2196 R AA 3004 R AB 2578 R AD 1770 R B 1680 R D 377 R D 469 R D 993 R D 1164 R *JD 7654 R JD 7664 R *JD 7673 R *JD 7914 R	POWER SHAFT PARTS—Continued Pinion, Power Shaft Drive Shaft and Bevel (16 Teeth) Gear, Power Shaft Bevel (16 Teeth). Washer, Power Shaft Bevel Gear Thrust Housing, A2543 R, with Power Shaft Oil Seal. Oil Seal, Power Shaft Lead Washer, Cap Screw, Power Shaft Drive Shaft, R. H. Bearing Cover (Box of 50) Cover, Power Shaft Opening. Spring, Power Shaft Shifter Hand Lever. Welsh Plug, in Power Shaft Shifter Lever Opening in Case Spring, Power Shaft Shifter Yoke. Woodruff Key, Power Shaft Drive Shaft Pinion Bearing, Countershaft Idler Gear, R. H. Bearing, Power Shaft Drive Shaft, R. H. Bearing, Power Shaft Drive Shaft, R. H. Bearing, Power Shaft Drive Shaft, R. H. Bearing, Countershaft Idler Gear (Roller Assembly), R. H.	AO-1000- AO-1000- AO-1829- AO-1829- AO-1829- AO-1000- AO-1829- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000- AO-1000-	23 23 23 23 23 23 23 23 23 23 23 23 23 2

^{*}Repairs for Heavy-Duty Power Shaft.

Part Number	NAME AND DESCRIPTION	Starting and Lighting	Lighting only	Starting only	Serial Number	Plate No.
A 1225 R A 1225 R A 1225 R A 2071 R A 2071 R A 2072 R A 2232 R A 2238 R A 2288 R A 2288 R A 2288 R A 2292 R A A 1907 R A A 1907 R A A 1908 R A A 2074 R A A 2075 R A A 2076 R A A B 1189 R A B 1189 R A B 1189 R A B 1830 R A B 1840 R A B 1840 R A B 1956 R A B 2568 R A B 2568 R A B 1030 R B 1030 R B 1030 R B 1030 R B 1030 R B 1047 R B 1047 R B 1047 R B 1047 R B 1048 R B 1058 R	LIGHTING AND STARTING EQUIPMENT Clip, Cable, Choke Tube to Tank Support. Clip, Cable, Wiring Harness to Tractor. Bracket, Generator. Belt, Generator Belt, Generator Cover, Crank Case. Gear, Flywheel Starter. Bracket, Fuel Control. Dash. Plate, Battery Clamp Cross Support, Battery Box. Body, Breather Extension, L. H. Dust Shield Ratchet, Flywheel Crank. Harness, Wiring. Wire, Rear Lamp Box, Tool. Pulley, Generator Drive. Motor with Magnetic Switch, Starting. Box with Bottom, Battery. Clamp with Bolts, Battery. Wire, Starter Switch to Magnetic Switch. Cover with Stack Assembly, Breather. Guard with Supports, Flywheel Flywheel, A2293 R, with Bolts and Starter Gear Switch, Light. Rod, Light Switch Control. Cable, Battery Ground Lamp, Tractor, R. H. Lamp, Tractor, L. H Generator. Wire, Battery to Ammeter. Switch, Starter Switch Control. Choke Rod and Tube Assembly. Wire, Ammeter to Starting Switch. Cable, Battery to Starting Motor Clamp, Negative Battery Terminal. Harness, Generator Wiring Wheel with Shaft and Pin, Cranking Ammeter with Clamp. Shaft, Cranking (used with Tractor Steering Wheel) Lamp, Dash Lamp, Dash Lamp, Tractor, Rear Bracket, Head Lamp Pulley, Generator Adjusting. Clip, Conduit, Wiring Harness. Pin, Cranking Shaft Washer on Generator Adjusting Strap to Generator Cap Screw (036"x3/4"O.D.x21/64" I.D.) Woodruff Key in AB2571 R Cranking Shaft.	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	XX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXX	AO-1000- AO-1000-	24444444444444444444444444444444444444
D 2914 R	Bracket, Lamp, Rear	X	X	X	AO-1000- AO-1000-	$\begin{array}{ c c c } 24 \\ 24 \end{array}$

P	rder art mber	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Pla
			CAP SCREWS			
			LENGTH			
D :	1684 R 1670 R 942 R 310 R	A 11 R A 41 R A 51 R A 69 R	Differential Bearing Quill to Case In L. H Governor Bearing Housing to Case Radiator to Front End. Sliding Gear Shaft R. H. Bearing Cover to Case	1/2"x1-1/2" 3/8"x1" 5/8"x2-1/4"	3 5 2	
A D A	474 R 487 R 1669 R	A 178 R A 253 R A 550 R	(Drilled) In Cam Follower Guide Support Camshaft Lock Plate to Gear Sliding Gear Shaft and Countershaft Bearing	7/16"x1-1/4" 1/2"x1-3/4" .375372x1"	$\begin{bmatrix} 2\\3\\2 \end{bmatrix}$	
D	459 R	A 565 R	Cover to Case Power Shaft R. H. Bearing Cover to Case	3/8"x3/4"	6 2	
	1670 R	A 774 R A 902 R	(Drilled) Power Shaft Stuffing Box to Cover Crank Case Cover to Case	3/8"x1" 3/8"x1" 3/8"x1"	$\begin{bmatrix} 2\\3\\7 \end{bmatrix}$	
	1670 R 1671 R 1683 R	A 902 R A 918 R A 927 R	Gear Shift Lock Screw .	3/8''x1-1/4'' 1/2''x1-1/4''	$\begin{array}{ c c }\hline 1\\2 \end{array}$	
A	1683 R 871 R	A 931 R A 944 R	Water Pipe to Radiator In Speed Control Shaft Bracket.	1/2"x1-1/4" 5/16"x1-1/4" 5/16"x9/16"	$\begin{vmatrix} 2\\2\\3 \end{vmatrix}$:
C D	806 R 1670 R 916 R	A 1152 R A 1180 R A 1597 R	Oil Filter Body to Head. Fan Shaft Rear Bearing to Governor Case. Oil Pump Drive Gear Bearing to Cam Follower	3/8"x1"	3	-
	1669 R	A 1655 R	Guide (Drilled). Clutch Fork Shaft Bearing to First Reduction	3/8"x3/4" 3/8"x3/4"	$egin{bmatrix} 2 \ 2 \ \end{bmatrix}$	
D	475 R 1667 R	A 1661 R A 1672 R	Gear Cover Clutch Driving Disk Washer to Crankshaft. L. H. Main Bearing Cover to L. H. Main Bearing	5/8"x1-1/2"	1	
A	309 R	A 1672 R	Housing. L. H. Main Bearing Cover to L. H. Main Bearing	5/16"x1" 5/16"x1-3/4"	$\begin{vmatrix} 2 \\ 3 \end{vmatrix}$	
A A	313 R 951 R	A 1678 R A 1678 R	Housing. Front End to Cylinder. Front End to Cylinder.	5/8"x1-3/4" 5/8"x2"	$\frac{2}{2}$	
A B	951 R 568 R	A 1678 R A 1678 R	Front End to Case Front End to Cylinder (Special Head)	5/8"x2" 5/8"x3-3/4" 5/8"x1-3/4"	$\begin{vmatrix} 4\\2\\3 \end{vmatrix}$	
	313 R 1676 R 1682 R	A 1680 R A 1686 R A 1692 R	Clutch Lever Bracket to Rear Axle Housing Rear Axle Housing Cover to Housing R. H. Dust Shield and Fender Reinforcement to	7/16"x1-1/4"	16	
	1682 R 1671 R	A 1693 R A 1726 R	First Reduction Gear Cover L. H. Dust Shield to Transmission Case On Cowl Fastening	1/2"x1" 3/8"x1-1/4"	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	
A	1683 R 1758 R	A 1733 R A 1879 R	In Steering Worm Housing I. H. Citrus Fender Brace to Crank Case	1/2"x1-1/4" 5/8"x3-1/4"	1	
	1671 R 1670 R	A 2288 R AA 227 R	Breather Body to Crank Case Cover	3/8"x1-1/4" 3/8"x1" 3/8"x1"	$egin{array}{c} 2 \ 2 \ 2 \end{array}$	-
	1670 R 1683 R	AA 580 R AA 565 R	Carburetor to Manifold Upper Water Pipe to Cylinder Transmission Case Cover to Case Underdrive	3/8"x1-1/4" 3/8"x1"	$\begin{array}{ c c }\hline 4\\ 6 \end{array}$	
	1670 R 1683 R 1684 R	AA 741 R AA 813 R AA 813 R	Governor Case to Case. Governor Case to Case.	1/2"x1-1/4" 1/2"x1-1/2"	5 2	
	1669 R 1670 R	AA 818 R AA 823 R	Front Fan Bearing Housing to Support	3/8"x3/4" 3/8"x1"	$\begin{vmatrix} 2\\6 \end{vmatrix}$:
A	1671 R 871 R	AA 861 R AA 861 R	Clamp for Oil Filter Adjusting Screw Oil Filter Cover to Head (Full Length Thread).	3/8"x1-1/4" 5/16"x1-1/4"	$egin{bmatrix} 1 \\ 2 \\ 1 \end{bmatrix}$:
A	1668 R 1271 R	AA 861 R AA 929 R	Oil Filter Cover to Head	5/16"x1-1/2" 5/16"x3" 5/8"x1-3/4"	$egin{pmatrix} rac{1}{4} \\ 12 \end{bmatrix}$	
A	313 R 1676 R 155 R	AA 1266 R AA 1274 R AA 1274 R	First Reduction Gear Cover to Case	7/16"x1-1/4" 7/16"x4-1/4"	$\begin{array}{ c c }\hline 7\\1 \end{array}$	
B C	1871 R 1684 R	AA 1277 R AA 1277 R AA 1278 R	R. H. Brake Housing to Case	1/2"x1-7/8" 1/2"x1-1/2"	2 2	
	1670 R 1683 R	AA 1287 R AA 1289 R	Carburetor Intake Elbow to Carburetor Air Cleaner Bracket to Radiator Top Tank	3/8"x1" 1/2"x1-1/4" 5/8"x1-1/2"	$\begin{bmatrix} 1\\3\\2 \end{bmatrix}$	
A A D	312 R 1673 R 475 R	AA 1309 R AA 1309 R AA 1310 R	R. H. Main Bearing to Case (Drilled) R. H. Main Bearing to Case (Drilled) L. H. Main Bearing to Case	5/8"x2" 5/8"x1-1/2"	$\begin{vmatrix} 2\\3 \end{vmatrix}$	

1	Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
D D A B	475 R 2461 R 1671 R 871 R 155 R 1676 R 1670 R 475 R 1670 R	AA 1330 R AA 1355 R AA 1366 R AA 1407 R AA 1683 R AA 1683 R AA 2004 R AA 3001 R AA 3004 R	CAP SCREWS—Continued Platform to Rear Axle Housing Drawbar Support to Rear Axle Housing. On Citrus Fender Flywheel Guard Lock Plate. Hub Cap to Hub (Disk Type Wheel) First Reduction Gear Cover to Case. First Reduction Gear Cover to Case. Starting Motor to Crank Case Cover. Platform to Rear Axle Housing Power Shaft Oil Seal Housing to Rear Axle Housing Cover. In Power Shaft Oil Seal Housing	5/16"x1-1/4" 7/16"x4-1/4" 7/16"x1-1/4" 3/8"x1" 5/8"x1-1/4"	4 3 1 6 1 7 3 3	
A D	1672 R 1672 R 1672 R 1671 R 1671 R 1672 R 1683 R 1670 R 1685 R 1685 R 1685 R 1686 R 137 R	AB 653 R AB 706 R AB 757 R AC 119 R AD 452 R AD 1400 R B 241 R B 247 R B 273 R B 639 R B 639 R B 1028 R B 1033 R B 1680 R	Magneto to Governor Case. Magneto to Governor Case. Magneto to Governor Case. Magneto to Governor Case. Hub Cap to Hub (Spoke Type Wheel). In Front Wheel Knuckle Nut. Magneto to Governor Case. Oil Pump Body to Case. Oil Pump Cover to Body. Spring to Governor Arm. Brake Latch to Brake Housing—R. H. Brake Latch to Brake Housing—L. H. Head Lamp Brackets to Radiator Top Tank. Generator Adjusting Strap to Generator. In Power Shaft Spring Cover.	3/8"x1-1/2" 3/8"x1-1/2" 3/8"x1-1/2" 3/8"x1-1/4" 3/8"x1-1/4" 3/8"x1-1/4" 3/8"x1-1/4" 3/8"x1" 1/2"x2" 1/2"x2" 5/16"x1-1/4"	3 2 2 2 3 1 2 3 4 1 1 1 1 4 1 3	
			CAP SCREWS—FILLISTER HEAD			
			— LENGTH—→			
A	2211 R	AA 1930 R	In Generator Drive Pulley Assembly SET SCREWS—SQUARE HEAD —CUP POINT	5/16"x1-1/4"	2	
A A	318 R 318 R	A 918 R A 1416 R	LENGTH————————————————————————————————————	1/2''x3-1/4'' 1/2''x3-1/4''	1 1	
			SET SCREWS—SQUARE HEAD —DOG POINT			
A D A A	320 R 1086 R 320 R 320 R 320 R	A 80 R AA 1318 R A 1735 R A 1735 R A 1796 R	In Shutter Control Lever. Pulley Adjusting Screw. In Speed Control Bracket In Speed Control Lever In Shutter Control Bracket SET SCREWS—SQUARE HEAD— CONICAL POINT	5/16"x3/4" 1/2"x2-1/4" 5/16"x3/4" 5/16"x3/4" 5/16"x3/4"	1 1 1 1 1	
A	1253 R	A 1241 R	LENGTH—>	3/8″x1″	1 .	· • •

Order Part Number		For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
			MACHINE SCREWS—ROUND HEAD			
			LENGTH—			
E 206 E 206 E 206 E 206	2 R 4 R 4 R 4 R 4 R 4 R	A 1655 R AA 824 R AA 1528 R AA 2058 R B 271 R B 1592 R	Clutch Fork Shaft Bearing Cover to First Reduction Gear Cover Oil Filter Leaf By-Pass to Oil Filter Head Top Tie Bar to Frame Top Tie Bar to Frame Inside Governor Lever to Shaft. In Choke Tube Support. DRIVE SCREWS—ROUND HEAD	1/4"x20-5/8" 1/4"x20-1/2" 1/4"x20-1/2" 1/4"x20-1/2" 1/4"x20-1/2" 1/4"x20-1/2"	4 2 4 4 2 1	
	64 R 18 R	AA 325 R AA 1315 R	In Radiator Curtain	No. 7x3/8" No. 4x3/16"	3	
A 229	97 R	AD 1606 R	Seat to Seat Channel CARRIAGE BOLTS WITH HEX. NUTS	1/2′′x1-7/8′′	1	
			LENGTH			
C 98	47 R 80 R 85 R 50 R	C 1573 R C 1573 R D 583 R D 1551 R	In Hood Clip to Hood Clip Bracket	3/8"x1-1/2" 1/2"x3"	2 2 8 12	
			LENGTH—			
D 4 A 3 C 15 D 4 D 4 D 4 D 4	11 R 11 R 17 R 17 R 11 R 11 R 11 R 11 R	A 1062 R AC 918 R AD 1606 R C 2199 R D 233 R D 1078 R D 1283 R D 2121 R D 2447 R	Road Band Support to Rear Wheel Road Band Support to Road Band Seat to Seat Support Sand Lug to Wheel Spade Lug, 4" Spade Lug, 5" Spade Lug, "A Shaped", 5" Spade Lug "Heavy Duty", 5"	3/4"x1-7/8" 5/8"x2-1/2" 3/4"x2-1/4"	6 6 1 48 1 1 1 1 1	
			LENGTH			
D {	615 R 595 R 611 R	A 115 R A 192 R A 1628 R	In Radiator Straps	15/16''x7/8''	1 8 7	

	Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	No
a	1611 R	A 1629 R		5/16''x1-1/8''	7	
C		A 1692 R A 1693 R A 1741 R A 1879 R	R. H. Dust Shield to Fender Bracket. L. H. Dust Shield to Fender Bracket. Drawbar End to Drawbar R. H. Citrus Fender Brace to R. H. Citrus Fender	5/16"x1-3/4" 5/16"x1-3/4" 5/8"x2 1/2"	4 4 2	
	1624 R 1622 R	A 1879 R A 1887 R	R. H. Citrus Fender Brace to Front End L. H. Citrus Fender Brace to L. H. Citrus Fender	1/2"x1-1/2"	1 1	
D	1613 R 1613 R 1622 R 571 R M21 R 1622 R 1614 R 1621 R 1622 R	A 2071 R AA 270 R AA 1286 R AA 1286 R AA 1325 R AA 1331 R AA 1331 R	Generator Bracket to Fan Shaft Support In Fuel Tank Strap. In Muffler to Manifold. In Muffler to Manifold. Fan Shroud to Radiator Sides. On Fuel Tank Rear Support to Governor Case. R. H. Center Brace to Platform Support R. H. Crown End Sheet to Fender Cross Angle. On R. H. Fender Crown Sheet to Platform Cross	1/2"x1-1/2" 3/8"x1-1/4" 3/8"x1-1/4" 1/2"x1-1/2" 1/2"x3-3/4" 3/8"x3/4" 1/2"x1-1/2" 3/8"x1"	1 3 2 2 2 2 6 2 1 3	
	1621 R 1614 R 1622 R	AA 1332 R AA 1332 R AA 1332 R	Angle L. H. Crown Sheet to Fender Cross Angle L. H. Center Brace to Platform Support On L. H. Fender Crown Sheet to Platform Cross		$\begin{array}{ c c }\hline 1\\3\\1\\\end{array}$	
	1614 R 1614 R M21 R	AA 1337 R AA 1338 R AA 1564 R	Angle R. H. Front Brace to Platform Support L. H. Front Brace to Platform Support R. H. Citrus Fender Hinge Brace to R. H. Dust Shield		1 1 1	
	1614 R M21 R	AA 1564 R	R. H. Citrus Fender Hinge Brace to R. H. Citrus Fender Reinforcement	3/8"v1"	1 1	
	1614 R	AA 1565 R AA 1565 R	 L. H. Citrus Fender Hinge Brace to L. H. Dust Shield L. H. Citrus Fender Hinge Brace to L. H. Citrus 	$3/8'' \times 3/4''$	1	
C	1105 R	AB 1204 R	Fender Reinforcement Generator Front Mounting Hole to Generator	3/8′′x1′′	1	
B B	846 R 848 R 1611 R	B 845 R B 847 R B 1028 R	Bracket Seat Channel Stop Strap to Rear Axle Housing. Seat Spring Bolt Strap to Rear Axle Housing Lamp Bracket to R. H. Rear Fender Cross	5/16"x1-3/4" 5/8"x4-3/4" 5/8"x3-3/4"	1 1 1	
D D	595 R 1622 R 544 R	B 1033 R C 1646 R D 1524 R	Angles Generator Adjusting Strap to Generator Bracket In Button Lug Front Wheel Guide Band to Wheel	5/16"x1-1/8" 5/16"x7/8" 1/2"x1-1/2" 1/2"x1"	2 1 1 8	••••
			MACHINE BOLTS WITH HEX. NUTS			
D D	597 R 1767 R 1935 R	A 917 R A 1730 R A 1736 R	In Gear Shifter Arm	3/8"x1-3/4" 1/2"x3"	1 1	
A	1829 R 1938 R 1971 R 1893 R	A 1827 R AB 214 R AD 984 R AB 1204 R	Bracket Front Wheel Weight to Wheel Steering Shaft Bearing to Steering Shaft Bracket Wheel Weight to Wheel Generator Rear Mounting Hole to Generator	1/2"x3-1/2" 1/2"x4-3/4" 1/2"x4-1/2" 3/4"x6"	$egin{bmatrix} 1 & 6 & 1 & 4 & 4 & 4 & 4 \end{bmatrix}$	
			Bracket MACHINE BOLTS WITHOUT NUTS	5/16"x1-1/2"	1	
			LENGTH			
A A C D	734 R 619 R 981 R 616 R	A 192 R A 618 R AA 1305 R AA 1353 R	Sides and Rear Strap to Radiator Top Tank. Seat Spring Bolt In Flywheel Drawbar Support Brace to Drawbar Support Assembly	5/16"x7/8" 5/8"x9" 3/4"x5" 3/4"x2-3/4"	$egin{bmatrix} 22 \\ 1 \\ 2 \\ 1 \end{bmatrix}$	

]	Order For NAME AND DESCR Part Attaching NAME AND DESCR		NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
A 1742 R A 734 R C 981 R A 327 R		AA 1353 R AA 1564 R AA 2084 R AD 1470 R	Citrus Fender Pulley Guard to Front Support	3/4"x3-1/4" 5/16"x7/8" 3/4"x5" 3/4"x4-3/4"	1 1 2 4	:
			STOVE BOLTS—ROUND HEAD— SQUARE NUTS			
			LENGTH			
A	2568 R 1053 R	A 470 R A 1692 R	Spark Plug Cable Clamp to Conduit R. H. Dust Shield to R. H. Dust Shield Exten-	5/16"x1-1/2"	1	
A	1053 R 2392 R	A 1693 R A 1875 R	sion L. H. Dust Shield to Tool Box Hinge Reinforcement to Citrus Fender Pulley	5/16"x3/4" 5/16"x3/4"	1 1	
A A	2392 R 2392 R 1053 R 1053 R	A 2277 R A 2287 R AA 1331 R AA 1331 R	Guard Fuel Control Bracket to Dash Battery Box Support to Battery Box R. H. Fender Side Sheet to Platform Support R. H. Fender Side Sheet to Brace and R. H.	1/4"x5/8" 1/4"x5/8" 1/4"x5/8" 5/16"x3/4"	2 2 1 5	
A	1053 R	AA 1332 R	Dust Shield. L. H. Fender Side Sheet to Brace and L. H. Dust Shield.	5/16"x3/4" 5/16"x3/4"	4	
A A A	1053 R 1053 R 1053 R 2334 R 2392 R	AA 1332 R AA 1340 R AA 1343 R AA 1564 R AA 1571 R	L. H. Fender Side Sheet to Platform Support Dash to Fender Side Sheets. Pulley Guard to Support Citrus Fender to Fender Hinge Reinforcement to Citrus Fender Flywheel	5/16"x3/4" 5/16"x3/4" 5/16"x3/4" 5/16"x1"	5 4 1 4	
В	2568 R 2394 R 497 R	AA 2074 R B 465 R B 465 R	Guard Battery Box and Spacers to Dash Spark Plug Cable Clamp to Conduit Shield Spark Plug Cable Conduit Clamp to Fan Shaft Tube	1/4"x5/8" 5/16"x1-1/2" 1/4"x1-1/4" 5/16"x3/4"	2 4 1	
D D D D	2319 R 2319 R 2319 R 2319 R 2319 R	AA 1293 R AA 1343 R AA 1344 R AA 1429 R AA 1735 R	STOVE BOLTS—ROUND HEAD— WITHOUT NUTS Radiator Guard to Radiator Side. Pulley Guard Front Support to Radiator Side Flywheel Guard Front Support to Radiator Side Radiator Guard to Radiator Side. Radiator Guard to Radiator Side.	5/16''x3/4'' 5/16''x3/4'' 5/16''x3/4'' 5/16''x3/4'' 5/16''x3/4''	4 2 2 4 4	
			SPECIAL SLOTTED TRUSS HEAD BOLTS WITH SQUARE NUTS			
			LENGTH			
A	2057 R	A 1874 R	Rear Citrus Fender Bracket to Fender Crown Sheets	5/16"x1/2"	4	
A	2051 R	A 2280 R	Fuel Control Rod Support to L. H. Dust Shield Extension	5/16''x1/2''	1	
A	2051 R	A 2291 R	Fuel Control Rod Support to L. H. Dust Shield Extension	5/16"x1/2"	1	
A A	1858 R 1858 R	AA 1337 R AA 1337 R	R. H. Center Brace to R. H. Fender Center Sheet R. H. Center Brace to R. H. Fender Crown Sheet	5/16"x1"	2 2	
A A A A A	1858 R 1858 R 2051 R 2051 R 2051 R 1858 R	AA 1338 R AA 1338 R AA 1341 R AA 1343 R AA 1343 R AA 1343 R	L. H. Center Brace to L. H. Fender Center Sheet L. H. Fender Center Brace to L. H. Crown Sheet In Tool Box to Dash Pulley Guard to Hood. Pulley Guard to R. H. Fender Crown Sheet Pulley Guard to R. H. Fender Front Brace	5/16"x1"	2 2 4 5 2 3	

N	Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
A A A A	1858 R 2051 R 1858 R 2051 R 2051 R	AA 1343 R AA 1344 R AA 1344 R AA 1344 R AA 1911 R	SPECIAL SLOTTED TRUSS HEAD BOLTS WITH SQUARE NUTS—Continued Pulley Guard to Shutter Control Rod Clip to Hood Flywheel Guard to Hood Flywheel Guard to L. H. Front Brace Flywheel Guard to L. H. Fender Crown Sheet. Tool Box to Left Fender.	5/16"x1" 5/16"x1/2" 5/16"x1"	2 7 3 2 4	
	i		SPECIAL SLOTTED TRUSS HEAD BOLTS WITHOUT NUTS			
A A	2050 R 2050 R	AA 1564 R AA 1565 R	R. H. Citrus Fender to Citrus Fender Bracket. L. H. Citrus Fender to Citrus Fender Bracket HEXAGON NUTS	5/16"x1/2" 5/16"x1/2"	9 9	
A	1504 R 1512 R 1513 R 1512 R 1514 R 1503 R 1513 R 1503 R 1503 R 1503 R 1503 R 1503 R 1503 R 1512 R 1512 R 1512 R 1771 R 1505 R	A 69 R A 152 R A 327 R A 734 R A 908 R A 1003 R A 1062 R A 1188 R A 1241 R A 1291 R A 1298 R A 1628 R A 1730 R A 1746 R A 1828 R AA 4464 R AA 567 R AA 806 R	On Clutch Operating Rod On Manifold Studs On Wheel Support to Wheel Bolts On Throttle Lever Stop Screw On Governor Arm Set Screw On Tappet Lever Adjusting Screw In Spud Lugs On R. H. and L. H. Radiator Guard Bracket On Steering Gear Housing Stud On Speed Control Rod End On Drawbar Support Brace to Drawbar Bolt On Hook Bolt On Cylinder Flange Studs On Cylinder Head Studs Steering Wheel to Steering Shaft On Countershaft R. H. Bearing Housing to Case	3/8" 5/8" 3/4" 5/8" 7/16" 3/4" 5/16" 3/8" 5/16" 1/2" 5/16" 5/16" 5/8" 5/8" 5/8" 5/8"	2 2 4 1 1 4 12 2 1 4 4 8 4 1 1 1 6 6 9 1	
A A A	1504 R 1505 R 1515 R 1516 R 1516 R 1506 R 1504 R 1505 R 1515 R 1516 R 337 R 337 R 337 R 1513 R 1512 R 1502 R 1513 R 1513 R 1513 R 1513 R 1513 R 1513 R 1513 R	AA 1047 R AA 1274 R AA 1285 R AA 1285 R AA 1310 R AA 1318 R AA 1569 R AA 1683 R AA 2455 R AA 2455 R AB 1189 R AB 1838 R AB 1839 R AC 649 R B 273 R B 738 R B 1592 R C 981 R C 1517 R D 156 R D 411 R D 411 R D 411 R D 1898 R	Stud On Camshaft Gear Stud. On First Reduction Gear Cover Stud. On Radius Rod Pivot Stud. On Radius Rod. On L. H. Main Bearing to Case Stud. On Pulley Brake Adjusting Set Screw. On Citrus Fender Bottom Brace Bolt. On First Reduction Gear Cover Stud. On Radius Rod Pivot Stud. On Radius Rod Pivot Stud. Switch Control Rod to Dash. Switch Control Rod to Dash. Switch Control Rod to Dash. Choke Rod and Tube Assembly to Dash. On Cast Cone Lugs. On Spring to Governor Arm Screw. On Clutch Lever Pivot Bolt. Nut on Choke Tube Support Screw. On Flywheel Bolts. On Sand Lug Bolts. On Spindle Taper Bolt. On Spade Lug Bolts. On Support to Support Bolts. On Support to Support Bolts. On Wheel Support to Wheel Bolts	7/16" 3/8" 7/16" 7/8" 1" 5/8" 1/2" 3/8" 7/16" 7/8" 1" 3/8" 3/8" 3/4" 3/4" 3/4" 3/4" 3/4" 3/4" 3/4" 3/4	48 2 48 12 1	
D	1518 R 1513 R 2883 R 1512 R	D 1898 R D 2185 R D 2882 R JD 1217 R	On Steering Arm Stud On Rear Wheel Weight Bolts Nut, on Rim Clamp Stud	5/8" 3/4" 3/4" 5/8"	3 1	

Order Part Number		For NAME AND DESCRIPTION Attaching		Size	Quan- tity Used	Plate No.
			HEXAGON NUTS—CASTELLATED			
C A A C C	112 R 335 R 336 R 535 R 535 R 535 R 535 R 2214 R 536 R 336 R 336 R 1104 R 2036 R	A 1637 R A 1645 R AA 382 R AA 797 R AA 798 R AA 1153 R AA 1234 R AA 1234 R AA 1309 R AA 1310 R AA 1553 R AA 1605 R AA 1763 R	On Filler Cap Stud On Clutch Operating Bolts On Connecting Rod Bolts On Overdrive Gear Shaft On Overdrive Gear and Shaft On Countershaft (Underdrive) On Brake Shaft On Main Bearing Bolts On Main Bearing Bolts On Underdrive Gear and Shaft On Steering Gear Shaft On Steering Gear Shaft On Citrus Fender Front Fastener	3/4" 1/2" 9/16" 1" 1" 1" 1" 1-1/4" 5/8" 5/8" 7/8" 5/16"	1 3 2 1 1 1 1 1 2 2 1 2 1	
-	-000 -0		HEX. JAM NUTS			
	2781 R 2781 R 2781 R 985 R 2780 R 528 R 2781 R 2781 R 2782 R 528 R 528 R	A 176 R A 319 R A 1416 R A 1676 R A 1726 R A 1797 R B 639 R C 977 R D 157 R D 2887 R	On Tappet Lever Stud. On Piston Pin Set Screw. On Gear Shift Shaft Set Screw. On Tie Rod. On Cowl Fastening. On Shutter Control Rod End. On Brake Latch to Brake Housing Screw, R. H On Brake Latch to Brake Housing Screw, L. H On Steering Gear Shaft Adjusting Screw. On Throttle Rod End. On Throttle Rod End.	1/2" 1/2" 1/2" 7/8" 3/8" 1/4" 1/2" 5/8" 1/4" 1/4" 1/4"	2 1 1 2 1 1 1 1 1 1	
			SQUARE NUTS			
A	334 R	AA 1353 R	On Drawbar to Front Support Bolt (Special)	3/4″	1	
			RIVETS—ROCK ISLAND HEAD			
A D B D D D	343 R 437 R 817 R 437 R 432 R 432 R 372 R	A 150 R A 596 R A 955 R A 1418 R A 1631 R A 1632 R A 1691 R	In Differential Bevel Pinion Shaft. Yoke to Shifter In Front Axle Pivot Pin (Drilled) Yoke to Shifter (Underdrive) Hood Clip Bracket to Fan Shroud Hood Clip Bracket to Fan Shroud. Fender Cross Angle to Platform	5/16"x2-1/2" 3/8"x1-1/2" 3/8"x3-1/8" 3/8"x1-1/2" 1/4"x1/2" 5/16"x1"	3 2 1 2 2 2 6	

	Order Part umber	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plat
			RIVETS—ROCK ISLAND HEAD—Continued			
D	443 R	A 1739 R	Clevis to Drawbar	1/2"x1-7/8"	2	
В	372 R	A 2532 R	Platform to Support Angles	5/16"x1"	10	
D A	432 R 1025 R	A 2542 R A 2545 R	Safety Shield Pivot Plate to Platform	1/4"x1/2"	4	
Ď	436 R	AA 741 R	Seat Spring Bracket to Seat Support. Gear Shifter Interlock to Transmission Case	1/2"x1-1/2"	2	
D	436 R	AA 823 R	Cover. Gear Shifter, Interlock to Transmission Case	3/8"x1-1/8"	2	
В	373 R	AA 1272 R	Cover. In Gear Retaining Washer on First Reduction	3/8′′x1-1/8′′	2	
В	372 R	AA 1330 R	Gear Spider Platform Support to Platform	5/16''x1-1/4'' 5/16''x1''	3 8	
D	430 R	AA 1331 R	R. H. Fender Center Brace to R. H. Side and Crown Sheet	3/16''x5/8''	6	
D	430 R	AA 1332 R	L. H. Fender Center Brace to L. H. Side and Crown Sheet.	3/16"x5/8"	6	
D	478 R	AA 1343 R	Citrus Fender Stop to Pulley Guard	3/16''x3/8''	2	
D D	478 R 478 R	AA 1344 R AA 1345 R	Citrus Fender Stop to Flywheel Guard	3/16"x3/8"	2	
Ď	478 R	AA 1345 R	Cowl to Cowl Channel	3/16"x3/8"	8	
\mathbf{D}	478 R	AA 1347 R	Cowl Hinge Front Half to Hood	3/16"x3/8" 3/16"x3/8"	7 5	
В	372 R	AA 1564 R	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcements and Bottom Brace	0/10 A0/0	"	
D	430 R	AA 1564 R	Ends Through Citrus Fender Sheets, Hinge Halves	5/16"x1"	. 2	
ъ	490 D	A A 1ECA D	to Hinge Reinforcements	3/16"x5/8"	13	
D	430 R 430 R	AA 1564 R AA 1564 R	In R. H. Fender Bracket R. H. Citrus Fender to Citrus Fender Rear	3/16"x5/8"	6	
В	372 R	AA 1565 R	Bracket Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcement and Bottom Brace	3/16"x5/8"	6	
D	430 R	AA 1565 R	L. H. Citrus Fender to Citrus Fender Rear	5/16''x1''	2	
D	430 R	AA 1565 R	Bracket L. H. Citrus Fender to Citrus Fender Bracket	3/16"x5/8" 3/16"x5/8"	3 6	
D	430 R	AA 1565 R	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcements	3/16"x5/8"	13	
В	372 R	AA 1566 R	Through Citrus Fender Hinge Halves, Sheet and Hinge Reinforcement	5/16′′x1′′	1	
B -	372 R	AA 1567 R	Through Citrus Fender Hinge Halves, Sheet and Hinge Reinforcement.	5/16′′x1′′	1	
D D	430 R 430 R	AA 1569 R	Citrus Fender Pulley Guard to Bottom Brace	3/16''x5/8''	8	
Ď	430 R	AA 1569 R AA 1569 R	Through R. H. Citrus Fender to Bottom Brace. Citrus Fender Flywheel Guard to Bottom Brace	3/16"x5/8"	10	
D	430 R	AA 1569 R	L. H. Citrus Fender to Bottom Brace	3/16"x5/8" 3/16"x5/8"	8	
D	432 R	AA 3001 R	Pivot Plate Support to Platform	1/4"x1/2"	$\begin{array}{c c} 10 \\ 4 \end{array}$	
B D	372 R 479 R	AA 3001 R	Platform Support to Platform	5/16''x1''	8	
A	479 R 343 R	AB 326 R AB 1956 R	Oil Relief Spring to Oil Filter Head Cover	1/4"x3/4"	1	
Ď	478 R	C 1573 R	Cranking Wheel to Cranking Shaft	5/16''x2-1/2'' 3/16''x3/8''	$\begin{vmatrix} 1 \\ 2 \end{vmatrix}$	
			RIVETS—BRASS			
AD	1771 R	A 1013 R	Cushion to Fuel Tank Front Support (Box of	0.10.111 20.000		
AD	1772 R	A 1014 R	Cushion to Fuel Tank Rear Support (Box of 100)	9/64''x5/16'' 9/64''x7/16''	4	
	1773 R 1772 R	AA 314 R AA 1318 R	Facing to Brake Shoe (Box of 100). Pulley Brake Lining to Brake (Box of 100)	3/16"x5/16" 9/64"x7/16"	8 6	
			RIVETS—COUNTERSUNK HEAD			
Δ (2053 R	AC 918 R	In Road Band to Supports	1/2'' x 1-1/2''	12	





LOCK WASHERS

CO	TT	\mathbf{ER}	KE	YS

Size No.		T ()	Diameter			
1/4′′	1729 R	Length	3/32''	1/8"	3/16′′	1/4"
	1721 R	1/2''	1730 R			
5/16′′		5/8"		1732 R		
3/8′′	1722 R	3/4′′		1733 R		
7/16''	1723 R	1''	1731 R	1735 R	1741 R	
1/2"	1724 R	1-1/4''			1742 R	
5/8"	1726 R	1-1/2''		1737 R	1743 R	1745 R
3/4′′	1728 R	2''		1738 R		1748 R
1"	1882 R	3-1/2"				


CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES FOR JOHN DEERE MODEL "AO" TRACTOR


			No.
A 10 R Differential Gear with Shaft. A 30 R Camshaft Gear with Stud and Nut. A 31 R Camshaft Gear with Stud and Nut. A 61 R Piston with Rings (Standard). A 107 R Connecting Rod, Complete. A 454 R Intake Valve. Overdrive Gear and Shaft with Nut and Bearing Cover. A 588 R Exhaust Valve. A 732 R Cylinder Head with Valve Guides. A 732 R Cylinder with Studs. A 900 R Breather Cover with Stack Assembly. A 900 R Breather Cover with Stack Assembly. A 910 R Low and Reverse Gear Shifter. A 911 R Overdrive Gear Shifter with Yoke. A 912 R Transmission Case Cover with Gear Shift Interlock. A 913 R Carburetor Air Inlet Elbow with Pipe. A 1105 R Second Speed Gear Shifter. A 1123 R Transmission Main Case. A 1141 R Transmission Main Case. Countershaft Bearing Housing with Cup, R. H. A 1272 R Cast Rear Wheel with Studs and Nuts. Cast Rear Wheel with Studs and Nuts. Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs and Nuts. Cast Rear Wheel with Studs and Nuts. Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs and Nuts. Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs and Nuts. Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs for Demountable Rim. A 1272 R Cast Rear Wheel with Studs for Demountable Rim. A 1273 R Ountershaft Bearing Housing with Cup, R. H. (Underdrive) A 1404 R Overdrive Gear and Shaft with Nut. A 1405 R Front Wheel Hub Cap with Oil Fitting. Front Wheel Hub Cap with Oil Fitting. Front Wheel Hub Cap with Dist Shroud. A 1608 R Brake Housing with Bushing and Oiler, R. H. A 1609 R Brake Housing with Bushing and Oiler, R. H. A 1609 R Brake Housing with Bushing and Oiler, R. H.	AA 331 R AA 1047 R AA 227 R AA 463 R AA 463 R AA 1810 R AA 797 R AA 464 R AA 437 R AA 798 R AA 565 R AA 793 R AA 793 R AA 793 R AA 741 R AA 1124 R AA 124 R AA 866 R AA 813 R AA 933 R AA 943 R AA 943 R AA 943 R AA 124 R AA 125 R AA 124 R AA 125 R AA 125 R AA 126 R AA 127 R AA 127 R	11 11 14 4 4 10 4 4 4 10 10 10 11 13 12 12 12 13 11 11 11 11 11 11 11 11 11	$\begin{array}{c} 9\\2\\2\\1\\1\\2\\8\\2\\2\\2\\9\\5\\3\\2\\4\\7\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1\\1$

CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES FOR JOHN DEERE MODEL "AO" TRACTOR


Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A 1618 R A 1633 R A 1640 R A 1658 R A 1660 R A 1662 R A 1663 R A 1664 R A 1686 R A 1893 R A 2202 R A 2293 R A 2293 R B 36 R B 290 R B 694 R B 694 R C 167 R	Main Bearing Housing with Cap, L. H. Rear Axle Housing Cover with Plug. Air Cleaner Bracket, Complete. Piston with Rings, .045" Översize Muffler, Complete. Flywheel with Bolts Housing with Power Shaft Oil Seal Upper Steering Shaft Bearing with Bushing. Front Fan Shaft Bearing Housing with Tube. Cast Rear Wheel with Studs. Cast Rear Wheel with Demountable Rim. Cast Rear Wheel with Studs for Demountable Rim.	AA1301 R AA1315 R AA1318 R AA2034 R AA1305 R AA1309 R AA1310 R AA2049 R AA1289 R AA1572 R AA1920 R	5 8 9 9 3 3 3 12 22 3 5 24 25 5 9 12 12 12 13	3 5 7 7 1 1 1 10 18 1 3 24 23 3 6 11 11 11 11

   TRANSMISSION CASE











A 399 R

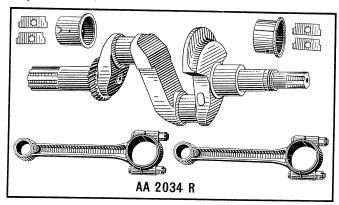
ENGINE, PISTON, CONNECTING RODS, CRANKSHAFT

 


AA 1310 R D 342 R









A 302 R A 1671 R



AA 1349 R

A 256 R



A 1147 R



A 1672 R



AA 244 R



A 191 R



AA 1423 R AA 2047 R AA 1574 R AA 2048 R AA 1607 R AA 2348 R AA 1955 R



AA 737 R AA 840 R AA 1572 R



AA 1620 R AA 1622 R

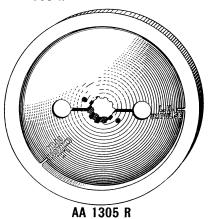


A 319 R









D 2009 R D 1080 R



A 284 R

AA 1626 R



C 719 R K 3083 R

1452 R


E 2142 R

K 2471 R

D 463 R

Plate No. 1

CYLINDERHEAD, VALVES AND MANIFOLD

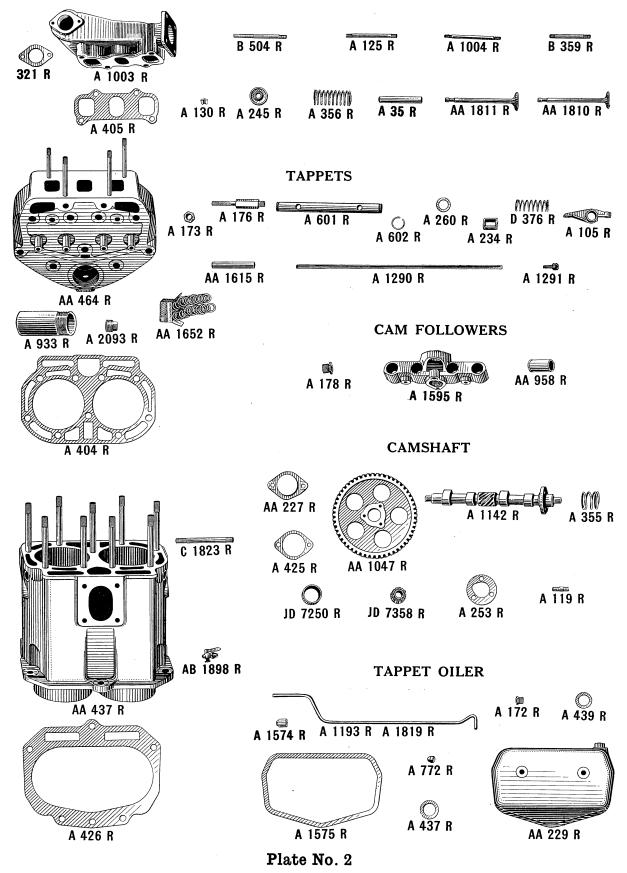



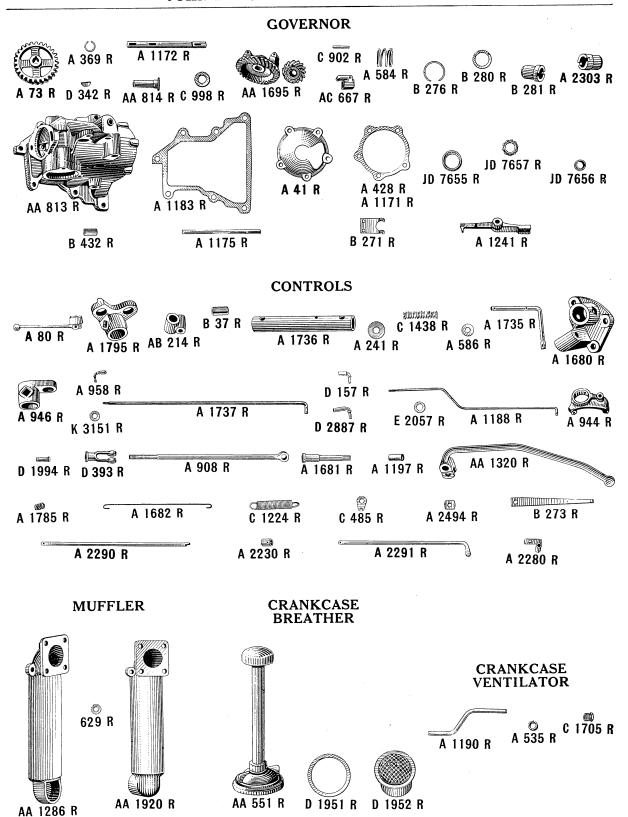


Plate No. 3

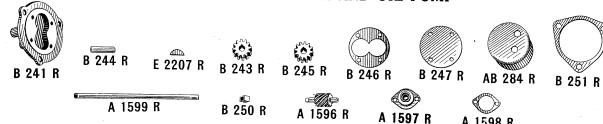LUBRICATING SYSTEM AND OIL PUMP



OIL FILTER AND INDICATOR

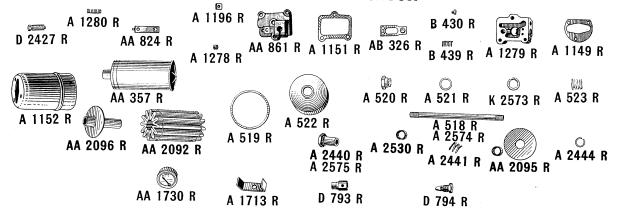





D 392 R A 465 R D 2440 R B 258 R E 2149 R A 374 R E 2150 R B 259 R D 1935 R D 417 R

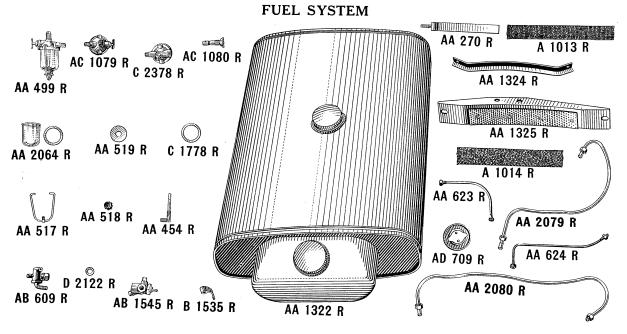


Plate No. 4

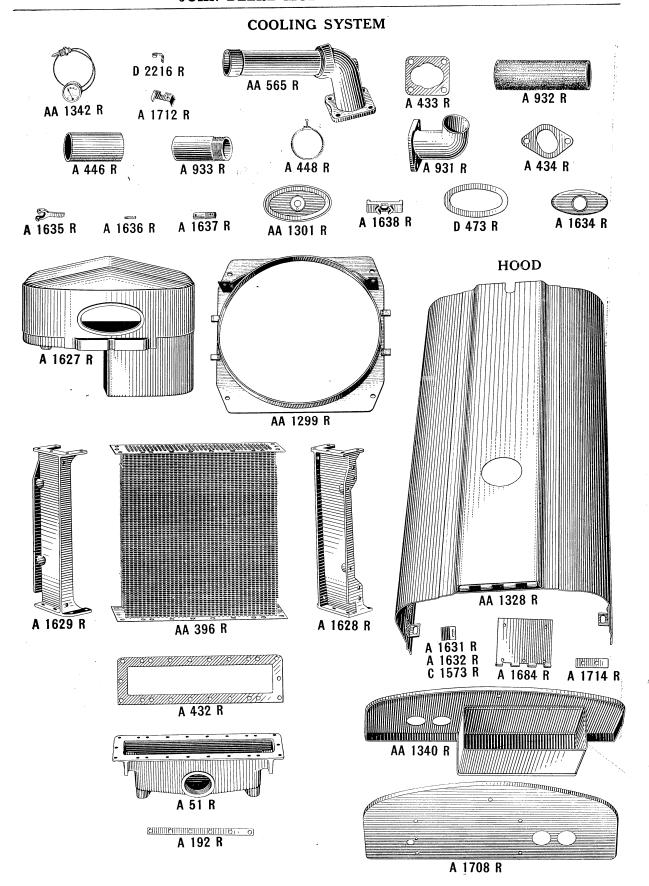


Plate No. 5

RADIATOR GUARD, CURTAIN, SHUTTER AND SHUTTER CONTROL

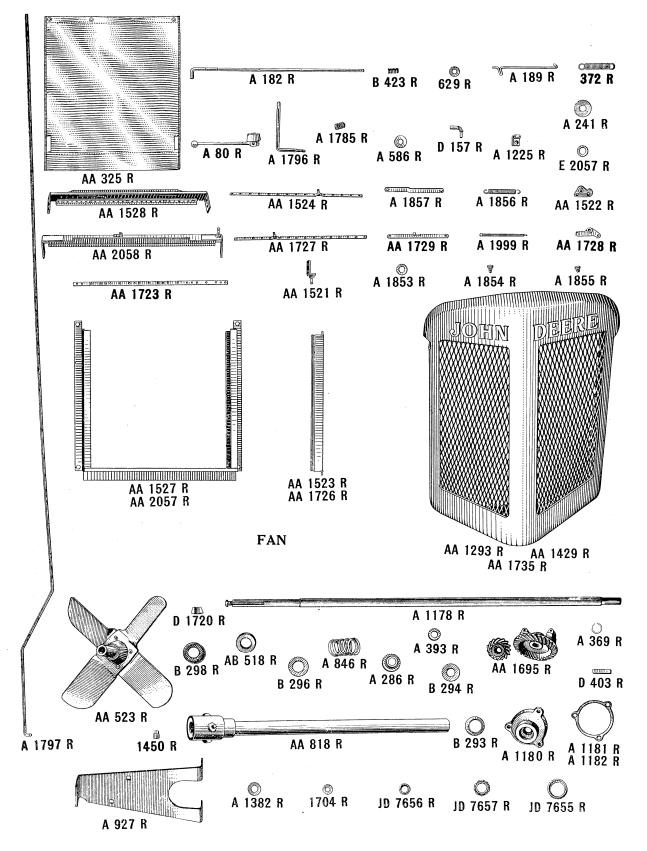


Plate No. 6

PULLEY

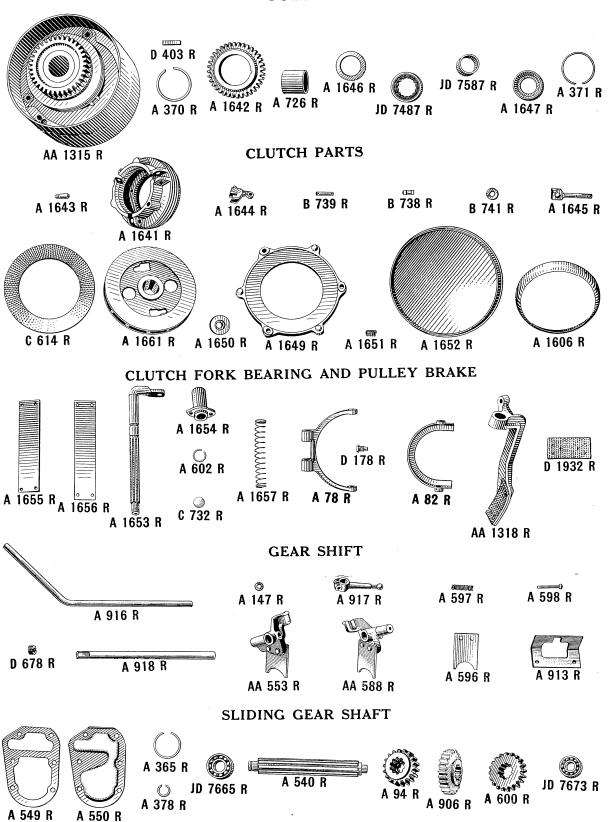


Plate No. 7

OVERDRIVE GEAR SHIFT



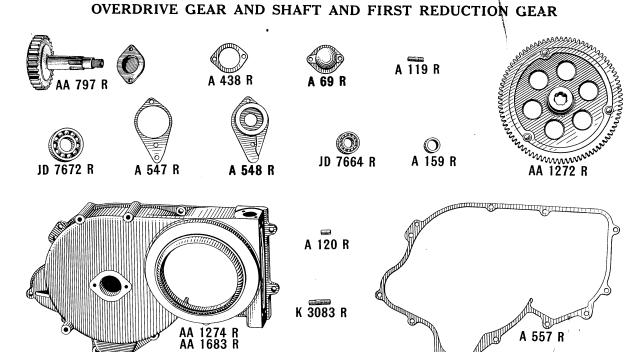
© A 147 R




A 599 R







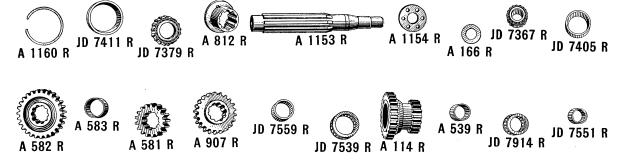COUNTERSHAFT IDLER GEAR AND COUNTERSHAFT






A 124 R



Plate No. 8

 
AA521R HIGH SPEED GEAR ASSEMBLY







AA1120R SLOW SPEED GEAR ASSEMBLY

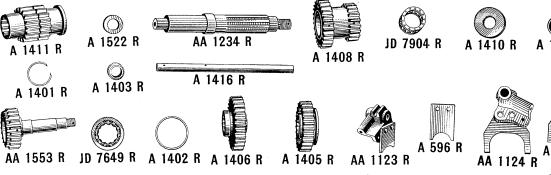














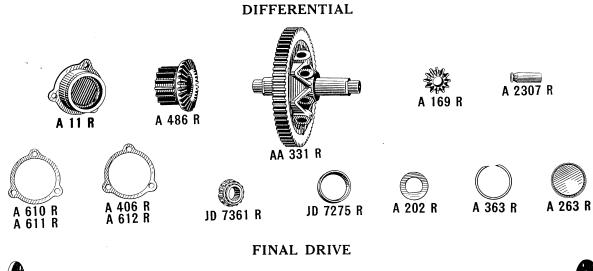


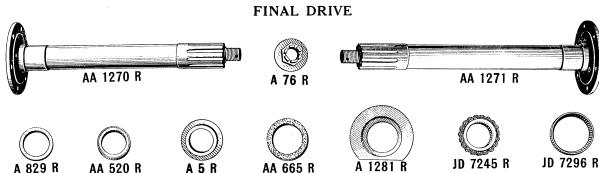


Plate No. 9

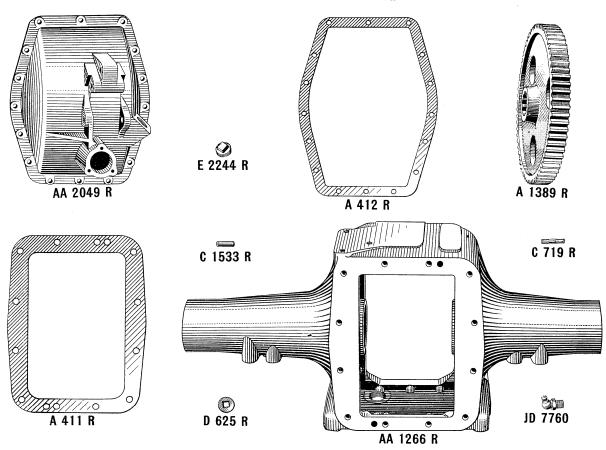FINAL DRIVE—Continued



REAR WHEELS AND REAR WHEEL EQUIPMENT

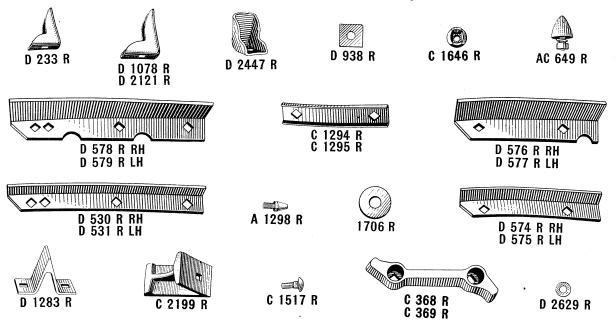


Plate No. 10

REAR WHEELS AND REAR WHEEL EQUIPMENT—Continued

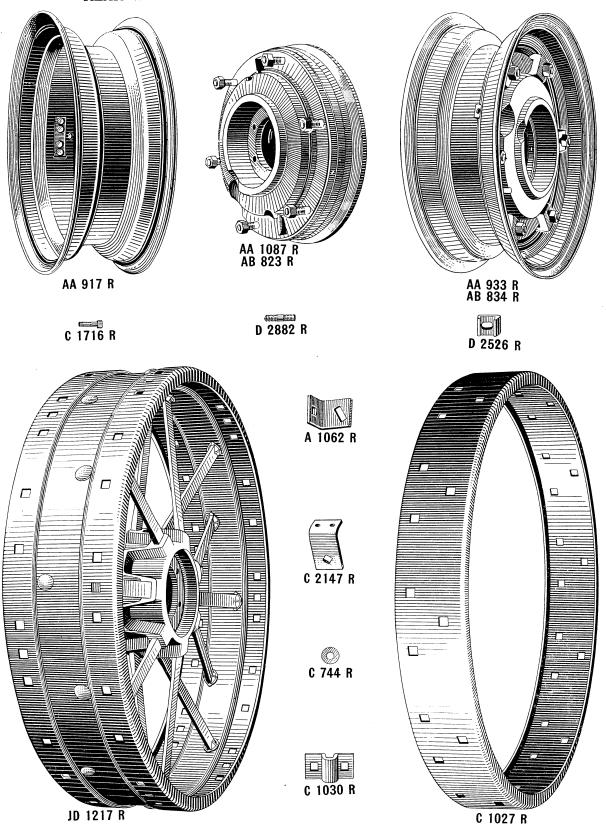


Plate No. 11

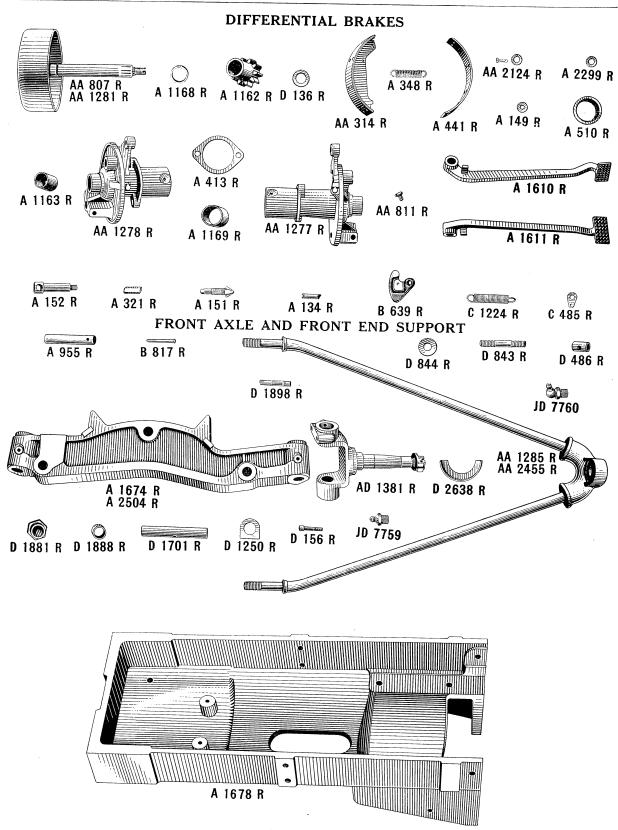


Plate No. 12

FRONT WHEELS AND FRONT WHEEL EQUIPMENT

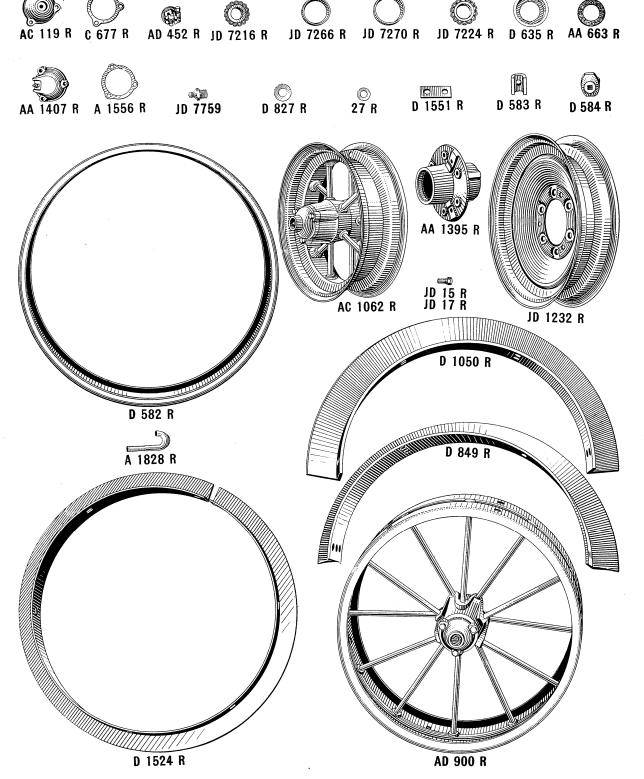


Plate No. 13

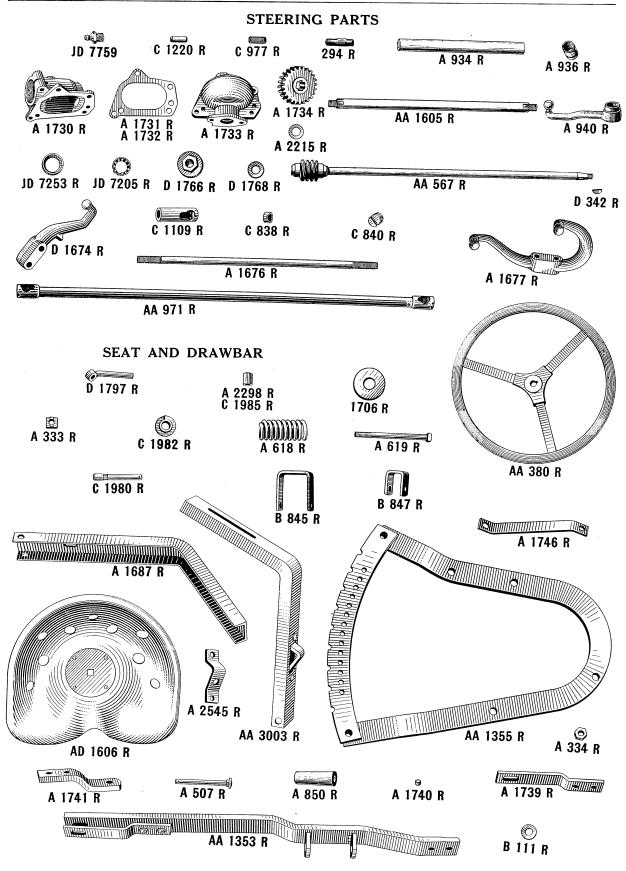


Plate No. 14

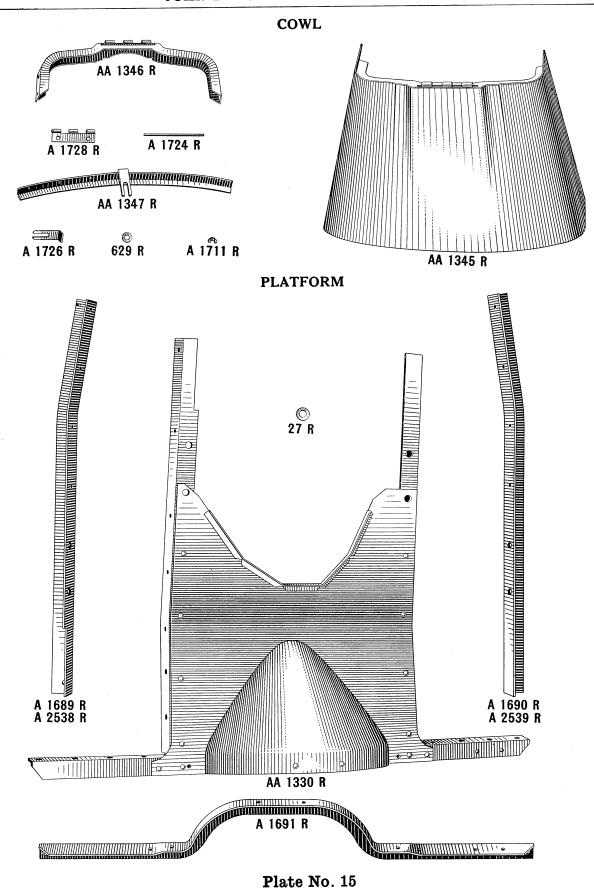


Plate No. 15

PLATFORM—Continued

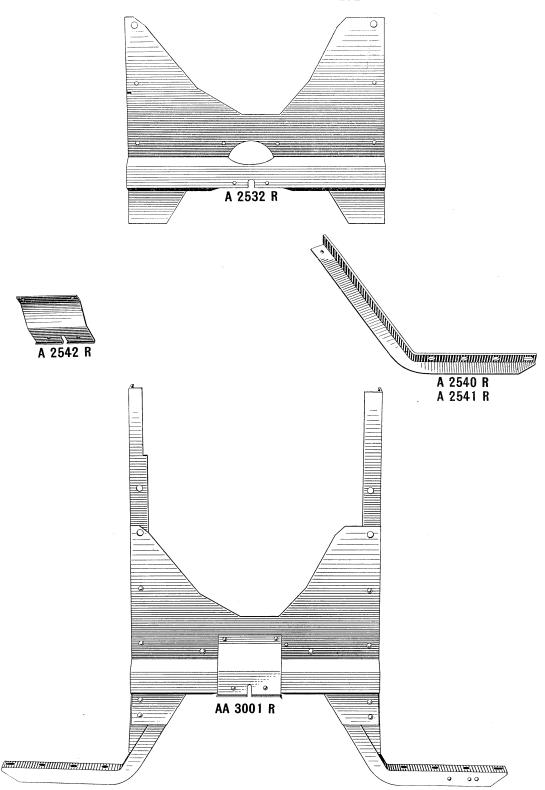


Plate No. 16


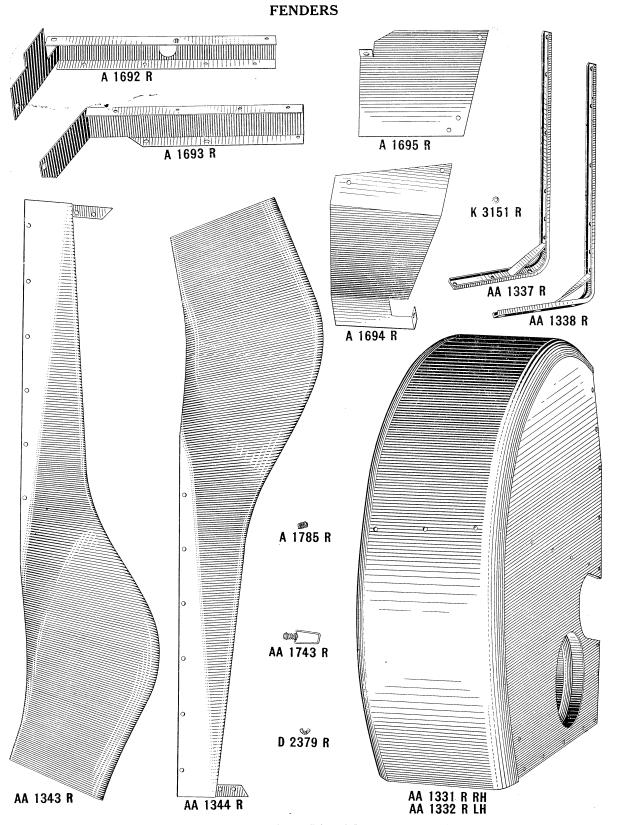


Plate No. 17

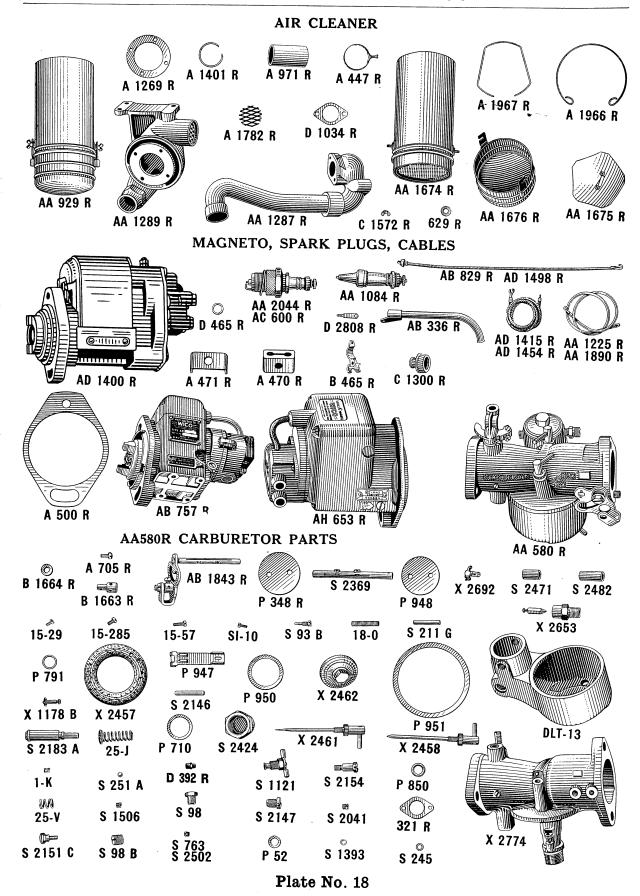

$\begin{array}{c} \textbf{AB706R MAGNETO PARTS} \\ \textbf{(FAIRBANKS-MORSE)} \end{array}$



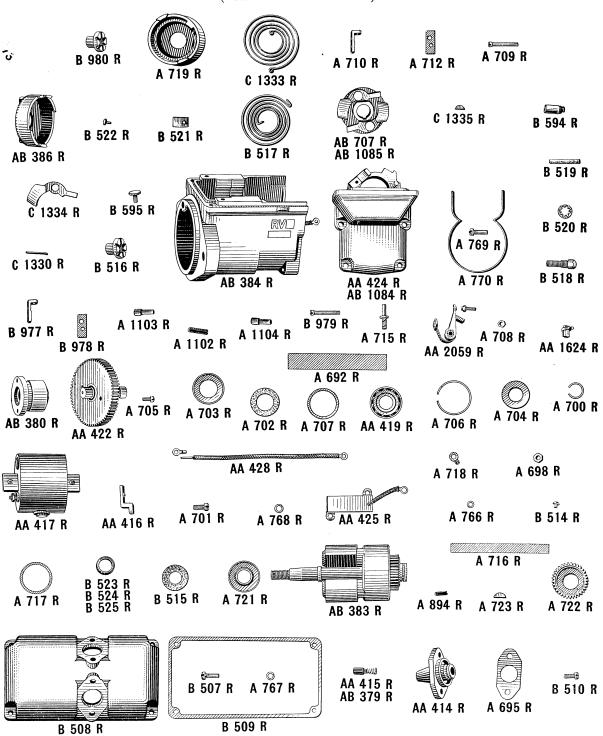


Plate No. 19

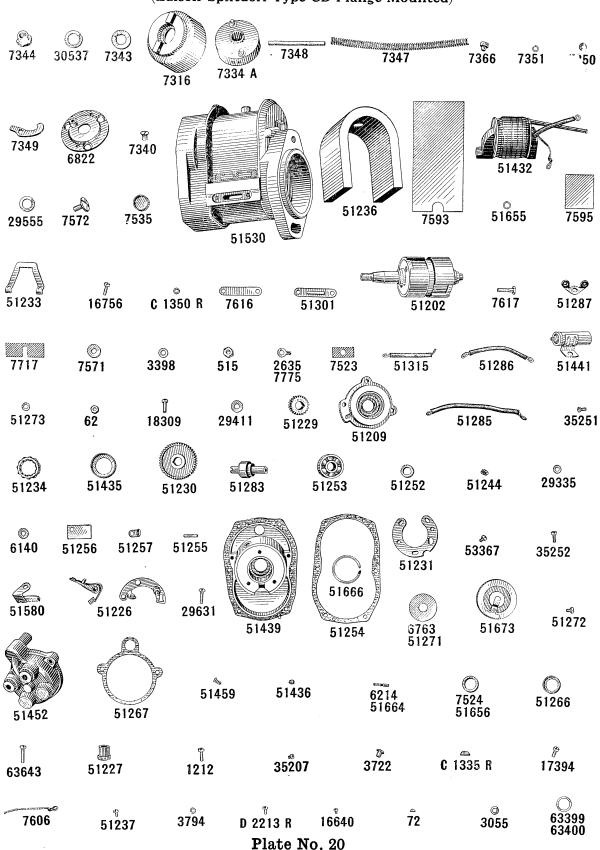AD1400R MAGNETO PARTS (Edison-Splitdorf Type CD Flange Mounted)



AB757 MAGNETO PARTS (Wico Type AP477B)

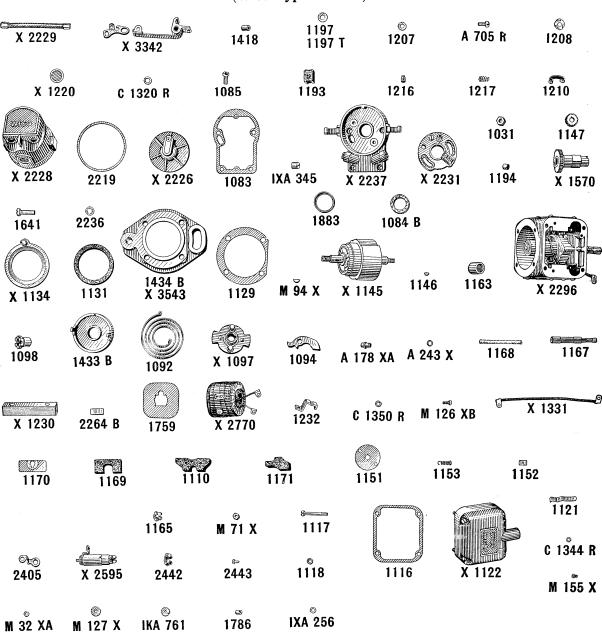

AH653R MAGNETO PARTS (Wico Type C) M 42 XA 2122 16-491 C 16-583 IVA 583 2061 B A 243 X 2641 © H 666 R 2121 1153 (1977) 2496 2745 1152 2505 X 3051 IXA 256 2537 X 2723 16-X 477 B 16-480 0 1118 X 2938 2497 ⊚ 1197 A 705 R © H 665 R 16-**738** 1197 T D 2003 R 1383 X 1413 1533 1207 X 3343 1418 __ 1727 A਼ 2264 B M 126 XB C 1350 R X 2706 1814 2503 1760 X 2766

1397

€

1404

2504


2538


X 3168

2495

X 3043

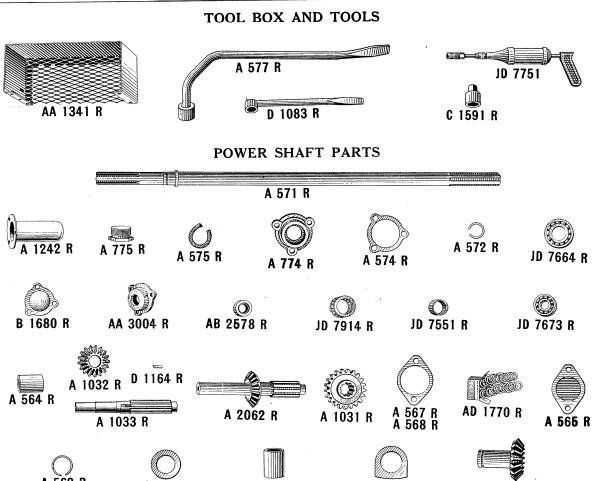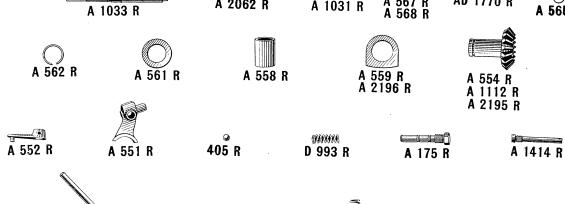IXA 345






A 919 R

D 469 R

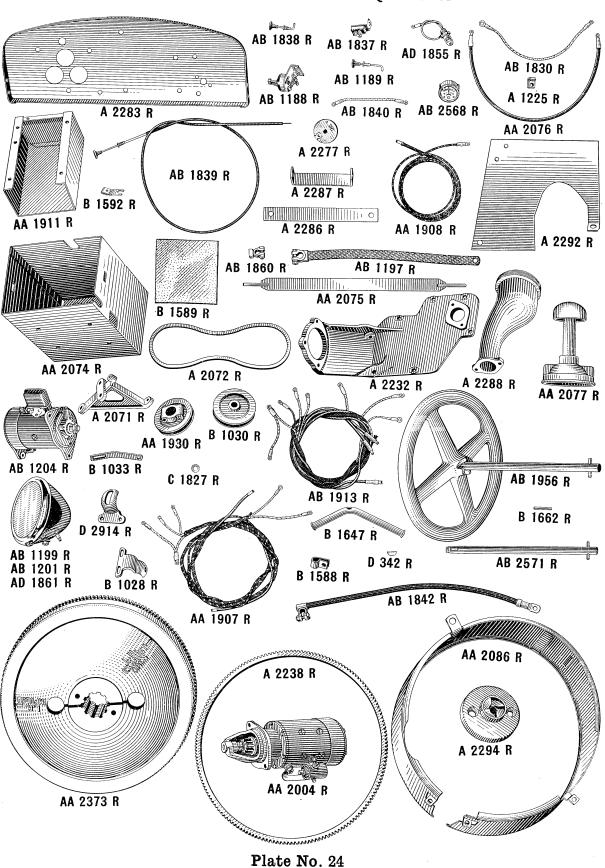LIGHTING AND STARTING EQUIPMENT



Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Part No.	Part No.	Page No.
7 R	13 15 3	A		A370 R	9 9 7	A610 R A611 R A612 R	11 11 11	A958 R A959 R A971 R	5 33 22
21 R	14 4 21 8 22	A5 R	12 33 11 33 33	A378 R	10 9 3 4	A618 R	14 14 28 17 17	A1003 R A1004 R A1013 R A1014 R A1015 R	4 4 7 7 33
29 R	5 8	A35 R	4 5 8	A405 R	4 11 12	A698 R	17 17	A1025 R A1031 R	32 22
450 R 452 R 469 R	15 9 3 7 30	A61 R	33 10 5	A412 R	12 13 3	A701 R	17 17 17 17	A1032 R A1033 R A1053 R	22 22 29
502 R 503 R 504 R 505 R	30 30 30	A76 R	12 9 5 9	A425 R	4 4 5 8 8	A705 R	17 19 20 21	A1062 R A1102 R A1103 R A1104 R A1109 R	12 17 17 17 17 33
506 R 507 R 512 R 513 R	30 30 30 30 30	A94 R	10 3 4 33 10	A434 R	8 4 10 4	A706 R	17 17 17 17	A1112 R	11 11 11 11 33
515 R 516 R 518 R 611 R	30 30 30 27	A115 R A119 R	10 4 10 10	A441 R	22 8	A710 R	17 17 17 17 17	A1141 R. A1142 R. A1147 R. A1149 R.	33 4 3 6
613 R	28 28 28 27	A124 R	4 4 13	A454 R	15	A718 R	17 17 17 17	A1151 R	6
621 R	28 28 28	A147 R A149 R A151 R	13 13	A486 R	25 15 14	A723 R	17 33	A1155 R	33 11 11
667 R	25 25 25	A159 R	10 11 4	A510 R	6 6	A734 R	17	A1159 R A1160 R A1162 R	11
671 R	26 25 26	A173 R	. 22 . 4 . 4	A521 R	6 6	A768 R	17 17 4	A1163 R A1168 R A1169 R A1170 R A1171 R	1: 1: 3:
676 R	25 26 25	A189 R A191 R A192 R A202 R	. 3 . 8 . 11	A540 R	. 33 . 10 . 10	A775 R	. 10 . 12) 21	A1172 R A1175 R A1178 R A1180 R A1181 R	
1684 R	. 26 . 9 . 12	A234 R	. 5 8 . 4	A549 R	. 10 22 22	A836 R	. 10 . 33 . 33	A1182 R A1183 R A1188 R A1190 R	
1721 R 1722 R 1723 R	. 33	A256 R	3 4	A557 R A558 R A559 R	. 10 . 22 . 22	A850 R	. 25 26	A1193 R A1196 R A1197 R	
724 R	. 33	A284 R A286 R A302 R A303 R	. 9	A561 R A562 R A564 R	. 11 22 . 22	A894 R A900 R A902 R A903 R	33	A1225 R A1241 R A1242 R	2
1730 R 1731 R 1732 R	. 19 33 . 33 . 33	A309 R	25 25 25	A565 R	. 22 22 22	A906 R	11 5 33	A1252 R	. 2
1733 R 1735 R 1737 R 1738 R 1741 R	33 33 33	A318 R	26 13	A574 R A575 R A577 R A581 R A582 R	22 22 11	A912 R	. 10 . 10 . 10	A1277 R	3
1742 R 1743 R 1745 R 1748 R 1882 R	33 33 33	A333 R A334 R A335 R A336 R	14 31 31 31	A583 R A584 R A586 R	5 5 33	A919 R A927 R A931 R A932 R A933 R	9 8	A1281 R A1290 R A1291 R A1298 R	
1893 R. 1935 R. 1938 R.	28 28	A337 R	30 31 32 13	A588 R A596 R A597 R	10 11 10	A934 R A936 R A940 R	14 14 14	A1382 R A1389 R	
2214 R 2334 R 2392 R	31 29 29	A356 R A363 R A365 R	11	A598 R A599 R A600 R	10 10	A944 R A946 R	5 14	A1402 R A1404 R A1405 R A1406 R	
2394 R 2568 R		A369 R	5 9	A601 R A602 R		A955 R			

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Pag No
A1408 R	11 11 11 11 33	A1689 R	15 15 15 15 15	A2288 R. A2290 R. A2291 R. A2292 R. A2293 R.	24 5 5 24 34	AA737 R. AA741 R. AA744 R (X2774) AA793 R. AA797 R.	3 11 22 10	AA1423 R. AA1429 R. AA1444 R. AA1521 R. AA1521 R.	3 8 8 8
A1414 R	11 11 11 33 11	A1694 R	15 15 7 15 8	A2294 R	5 24 27 14 13 5	AA798 R. AA802 R. AA806 R. AA807 R. AA811 R.	10 7 11 13 13	AA1523 R AA1524 R AA1527 R AA1528 R AA1553 R	8 8 8 8 11
A1507 R A1522 R A1555 R A1556 R A1557 R	3 11 33 13 33	A1713 R A1714 R A1724 R A1726 R A1728 R	6 7 15 15 15	A2307 R	15 11 6 6 6	AA813 R. AA814 R. AA818 R. AA819 R. AA823 R.	5 9 7 3	AA1564 R AA1565 R AA1569 R AA1570 R AA1572 R	15 15 15 15
M1574 R	4 4 6 6	A1730 R	14 14 14 14 14	A2494 R	13 6 15	AA824 R. AA840 R. AA843 R. AA861 R. AA917 R	6 3 3 6 12	AA1574 R AA1605 R AA1607 R AA1615 R AA1620 R	3 14 3 4 3
11598 R	6 6 33 33 33	A1735 R	5 14 5 14 14	A2539 R A2540 R A2541 R A2542 R A2543 R	15 15 15 15	AA929 R AA933 R AA958 R AA971 R AA1047 R	22 12 4 14 4	AA1621 R AA1622 R AA1623 R AA1624 R AA1626 R	3 3 16 3
1606 R	9 33 33 13 13	A1741 R	14 29 14 25 34	A2545 R. A2574 R. A2575 R.	34 14 6 6	AA1084 R	15 12 11 11	AA1652 R AA1674 R AA1675 R AA1676 R AA1683 R	4 22 22 22 22 10
1618 R 1627 R 1628 R 1629 R 1631 R	34 8 8 8 7	A1782 R	22 5 8 15			AA1225 R AA1234 R AA1266 R AA1270 R AA1271 R	15 11 12 12 12	AA1723 RAA1726 RAA1727 R	5 9 8 8
1632 R 1633 R 1634 R 1635 R	7 34 8 8 8	A1796 R. A1797 R. A1819 R. A1828 R.	14 8 8 8	AA227 R AA229 R AA244 R AA270 R. AA314 R	4 4 3 7 13	AA1272 R AA1274 R AA1277 R AA1278 R AA1281 R	10 10 13 13 13	AA1728 R AA1729 R AA1730 R AA1733 R AA1735 R	8 6 8 8
1637 R 1638 R 1640 R 1641 R 1642 R	8 8 34 9 9	A1829 R A1830 R (S763) A1853 R A1854 R A1855 R	28 21 8 8	AA325 R AA331 R AA345 R AA357 R AA380 R	8 11 11 6 14	AA1282 R AA1283 R AA1284 R AA1285 R AA1286 R	7 7 7 13 5	AA1810 R AA1811 R AA1890 R AA1907 R	15 4 4 15 24
1643 R	9 9 9 9	A1856 R A1857 R A1858 R	8 8 29 30	AA382 R AA396 R AA397 R AA414 R AA415 R	3 8 3 16 16	AA1287 R AA1289 R AA1291 R AA1293 R AA1299 R	10 8 9	AA1908 R AA1911 R AA1920 R AA1930 R AA1955 R	24 24 5 24 3
648 R	27 9 9 9	A1874 R	15 15 15 34 15	AA416 R AA417 R AA419 R AA422 R AA424 R	16 16	AA1301 R AA1305 R AA1309 R AA1310 R AA1315 R	8 3 3 3	AA2025 R AA2024 R AA2034 R AA2044 R	24 3 4 3
653 R 654 R 655 R 656 R 657 R	9 9 9 9	A1966 R	22 22 8 31 30	AA425 R AA428 R AA437 R AA454 R AA463 R	16 16 4 7	AA1318 R AA1320 R AA1322 R AA1324 R AA1325 R	9 5 7 7	AA2047 R AA2048 R AA2049 R AA2057 R.	15 3 3 12 8
658 R	34 34 9 34	A2051 R	29 30 32 29 23 24	AA464 R AA465 R AA499 R AA517 R AA518 R	4 4 7 7	AA1328 R AA1330 R AA1331 R AA1332 R	7 15 15 15	AA2058 R AA2059 R AA2064 R AA2074 R AA2075 R	8 16 7 24 24
664 R. 571 R. 572 R. 573 R.	34 3 3 25	A2072 R	24 4 23 23	AA519 R AA520 R AA523 R AA535 R	7 12 9	AA1337 R AA1338 R AA1340 R	15 7 22 22	AA2076 R AA2077 R AA2079 R AA2080 R AA2086 R	24 24 7 7 24
576 R	14 14 13	A2211 R	24	AA551 R	10 8 14 22	AA1342 R	15 15 15 15 15	AA2092 R AA2095 R AA2096 R AA2124 R	6 6 6 13
881 R	5 9 7	A2277 R A2280 R A2283 R A2286 R	24 5 24	AA588 R	10 7 7 7	AA1347 R AA1349 R AA1353 R AA1355 R AA1366 R	15 3 14 14 14	AA2454 R AA2455 R AA3001 R	24 6 13
586 R 587 R 588 R	34 14 15	A2287 R	24	AA665 R	12 4	AA1395 R AA1407 R	13 2		14 23

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Pa
AB		AD		B245 R B246 R	6	B1047 R (IXA256)	19 21	C806 R	25 14 14
B214 R B284 R	5 14 6	AD452 R AD709 R AD900 R	13 7 13	B247 R B250 R B251 R	6 6	B1048 R (IKA761) B1049 R (M127 X) B1050 R (2405) B1051 R (1165)	19 20 19 19	C840 R	1.
B326 R B336 R B379 R	6 15 16	AD1381 R AD1400 R	13 15	B258 R B259 R	7 7	B1052 R (M71X) B1053 R	20 20	C981 R	2 2 3
B380 R B383 R B384 R B386 R B518 R	16 16 16 16	AD1415 R AD1454 R AD1498 R AD1510 R (51436) AD1523 R (51452)	15 15 15 18 18	B271 R	5 5 5 5 16	(M32XA)	19 19 19	C998 R	1 1 3
B609 R B706 R B707 R B757 R	7 15 16 15	AD1524 R (6214). AD1525 R (51439) AD1526 R (51285) AD1527 R (51432) AD1528 R (7606).	17 18 18 18 17	B290 R	34 9 9 9	B1059 R (1169)	19 19 19 19 20 19	C1105 R	1
B823 R B829 R B834 R B1084 R B1085 R	15 12 16 17	AD1529 R (51315) AD1530 R (51286) AD1531 R (7334A)	18 18 17 18	B359 R B372 R B373 R	4 31 32 32	B1065 R (1110) B1066 R (1147) B1067 R (1151) B1068 R (1786)	19 19 19 19	C1294 R	1 1 1
B1188 R B1189 R B1197 R B1199 R	24 24 24 24	AD1533 R (51580) AD1534 R (51673) AD1535 R (51226) AD1536 R (51226)	18 18 18 18	B432 R	8 6 5 6	B1069 R (1232)	19 19 20 19	C1324 R (3794) C1330 R C1333 R C1334 R C1335 R	1
B1201 R B1204 R B1208 R(X1220) B1210 R(X2226)	24 24 20 20	AD1537 R (51253) AD1538 R (51441) AD1539 R (51234) AD1540 R (51202)	18 18 18 18	B449 R (DLT-13) B450 R (S2424) B457 R (P710)	21 22 21 16 29	B1072 R (1098) B1074 R (1092) B1075 R (1094)	19 19 19 19 20	C1344 R C1350 R	1
B1211 R (X3342) B1213 R (1193) . B1214 R (X3342) B1216 R (X1570)	20 19 20 20	AD1541 R (7316). AD1542 R (7347). AD1543 R (6822). AD1606 R	17 17 17 14 23	B497 R	17 17	B1077 R (1129) B1078 R (1131) B1080 R (1152) B1081 R (1153)	19 19 19 19 20	C1533 R	
B1217 R(X1122) B1218 R(X2770) B1219 R(X1230) B1220 R(X2595) B1221 R(X1097)	20 20 20 20 20	AD1770 R AD1771 R AD1772 R AD1955 R	32 32 32 32 32	B510 R B514 R B515 R B516 R	17 17 17 17 17	B1082 R (1031)	19 19 19 20	C1573 R. C1591 R. C1646 R. C1647 R.	
B1221 R (X1097) B1222 R (X1134) B1223 R (X1145) B1224 R (X2296) B1225 R (X1331)	20 20 20 20 20 20	AD1855 R AD1861 R AD1882 R (51664)	24 24 18	B517 R B518 R B519 R B520 R B521 R	17 17	B1086 R (1207)	19 20 19 20	C1705 R	1
B1226 R (1163). B1229 R (X2229) B1230 R (X2228) B1231 R (X2237) B1232 R (X2231)	19 20 20 20 20 20	AE AE270 R (X1413).		B522 R B523 R B524 R B525 R B568 R	17 17 17 17	B1090 R (1208)	19 19 20 21 19	C1871 R	
B1545 R B1830 R B1837 R B1838 R B1839 R	24 24	AH AH653 R	15	B594 R B595 R B639 R B694 R B738 R	17 17 13 34	B1094 R (1641)	19 19 19 21 19	C2199 R	
AB1840 R AB1842 R AB1843 R AB1860 R AB1898 R	24 21	AH761 R (X3114) AH762 R (X2719) AH763 R (A33X) AH764 R (X2723)	21 21 20	B739 R B741 R B817 R	9	B1109 R (1434B) B1271 R (2442) B1272 R (2443) B1535 R	19 19 19 7	D	
AB1913 RAB1956 RAB1956 RAB2568 RAB2571 RAB2578 R	24 24 24 24 24	AH765 R (X2938) AH766 R (16-X477B) AH767 R (X3168 AH768 R (X2766 AH769 R (X2706	20 21 21	B845 R	14 28 14 28 17	B1588 R B1589 R. B1592 R B1647 R. B1662 R.	24 24 24 24 24 24	D136 R	
AC		AH770 R (X3051 AH771 R (X3043	21 21	B978 R B979 R	17	B1663 R B1664 R B1680 R	21	D178 R D233 R D336 R	
AC119 R AC600 R AC649 R AC667 R	. 15 . 12	D		B1028 R	24 24 24	C C167 R	34	D342 R	-
AC918 R AC1062 R AC1079 R	. 12	B36 R		B1035 R (1217) . B1038 R (1194) . B1039 R (1210) . B1040 R (1883) .	. 19 . 19	C368 R	12 12	D376 R D377 R D392 R	
AC1080 R	7	B111 R	. 14 14 . 31	B1041 R (1084B) B1042 R (1116) . B1043 R (1121) . B1044 R (1117) .	. 19 . 19 . 19	C535 R	31 9 13 3	D393 R D403 R D411 R D417 R	
		B241 R	. 6	B1045 R (1118) . B1046 R (M155 X	19 20	C732 R	12 9	D430 R D432 R	

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Part No.	Part No.	Page No.
D436 R	32 31 32 27 25	D2124 R. D2207 R. D2213 R. D2216 R. D2244 R.	3 6 18 8 12	D2727 R (72)	17 31 31 31	JD7266 R JD7270 R JD7275 R JD7296 R JD7358 R	14 14 11 12 4	7347	17 17 17 17
D463 R D465 R D469 R	3 16 23	D2319 R D2379 R D2427 R D2440 R D2447 R	29 15 6 7 12	D2808 R	16 12 30 5	JD7361 R JD7367 R JD7379 R JD7405 R JD7411 R	11 11 11 11 11	7351 7366 7523	17 17 17
D474 R D475 R D478 R D479 R	25 25 26 32 32	D2461 R D2526 R D2530 R (S2482). D2629 R	26 12 22 12	D2889 R (51656). D2914 R. D2937 R (51666).	18 24 18	JD7487 R JD7539 R JD7551 R	9 10 10 23	7535. 7571. 7572. 7593.	17 17 17 17 17
D486 R. D528 R. D530 R. D531 R. D544 R.	13 31 12 12 28	D2638 R D2660 R (51227). D2661 R (51459). D2662 R (51267). D2663 R (51254).	13 18 18 18 18	E209 R (1379)	20	JD7559 R JD7587 R JD7649 R JD7655 R	10 9 11 5	7606	17 17 17 17
D571 R D574 R D575 R D576 R	28 12 12 12	D2664 R (51255). D2665 R (7775) D2666 R (7351) D2667 R (7348)	18 17 17 17	E214 R (16-738). E215 R (1383). E216 R (1533) E221 R (1397)	20 20 20 20 20	JD7656 R JD7657 R JD7664 R	9 5 9 5 9	7775 16640 16756 17394 18309	17 17 18 18 18
D577 R	12 12 12 13	D2669 R (51237). D2670 R (51301). D2671 R (7616). D2672 R (17394).	18 18 17 18	E2057 R E2064 R E2142 R E2149 R	5 8 27 3 7	JD7665 R JD7672 R JD7673 R	23 10 10 10	29335 29411 29555 29631 30537	18 18 18 18
D583 R D584 R D585 R D595 R D597 R	13 13 27 28 28	D2673 R (7524) D2674 R (51266). D2675 R (3722) D2676 R (51271). D2677 R (51231).	17 18 17 18 18	E2150 R E2162 R E2207 R E2224 R	7 27 6 12	JD7751	22 3 13 14	35207	18 18 18 18
D616 R	28 12 13 10	D2678 R (51257). D2679 R (51256). D2680 R (51230). D2681 R (51252).	18 18 18 18	Н		JD7760	12 13 11 10 23	51209	18 18 18 18 18
D793 R	6 6 13	D2682 R (51283). D2683 R (51233). D2684 R (7593). D2685 R (7595).	18 18 17	H641 R (A179X) H642 R (16-480). H643 R (1727A). H644 R (1814) H645 R (2495)	20 20 20 20 20 20	K		51231 51233 51234 51236	18 18 18 18
D844 R	13 13 25 12	D2686 R (7717)	17 17 17 18	H646 R (16-491 C) H647 R (2061B) H648 R (15-186) H649 R (16-583)	20 20 20 20	K2471 R K2573 R K3083 R	3 6 3 10	51237 51244 51252 51253	18 18 18 18
D993 R	23 22 13 12	D2690 R (51229). D2691 R (51209). D2692 R (35207). D2693 R (51435). D2694 R (63399).	18 18 18 18 18	H650 R (IVA583) H651 R (M42 XA) H652 R (2288) H653 R (2122) H654 R (2121)	21 21 20 20 20	K3151 R	5 15 	51254	18 18 18
D1080 R D1083 R D1086 R D1145 R (1212) D1164 R	3 22 26 17 23	D2695 R (63400). D2696 R (7366). D2697 R (51236). D2693 R (7535) D2699 R (63643).	18 17 18 17 18	H655 R (2496) H656 R (2497) H657 R (2504) H658 R (2503)	20 20 20	M M21 R	28	51266	18 18 18 18
D1250 R	13 12 13 27	D2700 R (16640) . D2701 R (51272) . D2702 R (53367) . D2703 R (35252) .	17 18 18 18	H659 R (2745) H660 R (2505) H661 R (2641) H662 R (2537)	20 20 20 20 20	Splitdorf Mag		51283	18 18 18 18
D1551 R	13 14 14 9 14	D2704 R (35251). D2705 R (29631). D2706 R (18309). D2707 R (16756). D2708 R (7617).	18 18 18 18 17	H663 R (2538) H664 R (1404) H665 R		Parts Part No.	Page No.	51301	18 18 18 18 18
D1767 R	28 14 30 14 13	D2709 R (7340) D2710 R (7572) D2711 R (51273) D2712 R (6140) D2713 R (29335)	17 18 17 18			62	17 17 17 17 17	51439 51441 51452 51459 51530	18 18 18 18
D1898 R	13 14 9 7 6	D2714 R (29411). D2715 R (7571) D2716 R (3398) D2717 R (7343) D2718 R (7349) D2719 R (7350)	18 17 17 17 17	JD15 R	13 13 12	3055. 3398. 3722. 3794. 6140.	17 17 17 17 17	51580 51655. 51656. 51664. 51666.	18 18 18 18 18
D1952 R	6 5 21 3	D2720 R (3055) D2721 R (30537) D2722 R (29555) D2723 R (62)	17 17 18 18 17	JD1232 R JD7205 R JD7216 R JD7224 R JD7245 R	13 14 13 14 12	6214	17 17 17 17 17	51673. 53367. 63399. 63400. 63643.	18 18 18 18 18
D2121 R D2122 R	7	D2724 R (51244). D2725 R (515) D2726 R (7344)	18 17 17	JD7250 R JD7253 R	4 14	7340 7343 7344	17 17 17	C1335 R C1350 R D2213 R	18 18 18

Wico Magneto Parts		Part No.			Part No.	Page No.	Schebler Carburetor Parts		Part No.	Pag No
D	Page	1216	19	C1320 R	19	Part	Page	B1663 R B1664 R	21 21	
Part No.	Page No.	1217	19	C1344 R	19	No.	No.	D392 R	21	
140.	No.	1232	19	C1350 R	19			DLT-13	21	
		1379	20 20	D2003 R	20 21	1		P52	21	
5-186	20	1383	20	H665 R	21	1-K	21	1 02		
6-480	20	1397	20	11665 K	41	4W (X1178B)	22	P348	21	
6-491C	20	1404	20	H666 R	21	10W (SI-10)	22	P710	21	
6-583	20	1418	19	IKA761	19	15-29	21	P791	21	
6-738	20	1410	20	IVA583	21	15-57	21	P850	2	
		1433B	19	IXA256	19			P947	2	
6-X477B	20	1434B	19		21	15-285	21			
031	19			IXA345	21	17W (S93B)	21	P948	2	
.083	19	1533	20	1		18-0	21 21	P950	21	
084B	19	1641	19	M32XA	20	25-J	21	P951	2	
.085	19	1727A	20	M42XA	21	23-V	41	S93B	2	
		1729 R	19	M71X	20	41W (S251A)	21	S98	4.	
092	19 19	1730 R	19	M94X	20	45W (S2502)	21	S98B	2	
094	19			M126XB	20 21	57W (1-K)	21	S211G	2	
.098	19	1759	19 20		21	63W (S1393)	$\overline{21}$	S245	2	
110	19	1760	19	M127X	20	65W (25-J)	21	S251A	2	
116	13	1786 1814	20	M155X	20	(====),,,,,,,,,,		S763	2	
117	19	1883	19	X1097	20	67W (S211G)	21		1	
118	19	1885	1.5	X1122	20	68W (25-V)	21	S1121	2	
	20	2061B	20	X1134	20	69W (X2457)	22	S1393	2	
121	19	2121	20			70W (15-285)	21	S1506	2	
129	19	2122	20	X1145	20	71W (15-57)	21	S2041	2	
131	19	2219	19	X1220	20			S2146	2	
		2236	19	X1230	20	72W (P52)	21			
146				X1331	20	73W (P791)	21 21	S2147	2	
1147		2264B	19	X1408 (X3343)	21	74W (P850)	21	S2151-C	2	
151			20	774.440		75W (P947) 76W (P948)	21	S2154 S2183A	2	
152	19	2288	20	X1413	21	76W (F946)	41	S2369	2	
1150	20	2405	19	X1570 X2226	20 20	77W (P950)	21	32303		
l 15 3	19 20	2442	19 19	X2228	20	78W (P951)	21	S2424	2:	
	20	2443	19	X2229	20	79W (S98)	21	S2471	2	
1163	19	2495	20	A2223	20	80W (S98B)	21	S2482	2	
1165	19	2496	20	X2231	20	81W (S245)	21	S2502	2	
1167	19	2497	20	X2231 X2237	20			SI-10	2:	
1168	19	2503	20	X2296	20	83W (S1506)	21		_	
169	19	2504	20	X2595	20	85W (S2041)	21	SI-18 (15-29)	2	
				X2706	21	90W (S2146)	21	X1178B	2	
1170	19	2505	20			91W (S2147)	21	X2457	2	
1171	19	2537	20	X2719	21	94W (S2154)	21	X2458	2 2	
193	19	2538	20	X2723	21	95W (S2183A)	22	X2461	4	
194	19	2641	20	X2766	21	321 R	21	X2462	2	
1 96 (X 3343)	21	2745	20	X2770	20 21	A705 R	21	X2653	2	
1107	19	A33X	20	X2938	41	AA580 R	21	X2692	2	
1197	20	A179X	20	X3043	21	AB1843 R	21	X2774	2	
1197 T		A179XA	19	X3043	21				1 -	
1131 1	20	A243X	19	X3114	21	H				
1207		7127071	20	X3168	21	1		1	1	
1	20	A705 R	19	X3342	20			1		
1208			20							
1210		II		X3343	21	1		1		

Dec. 9050