

JOHN DEERE Parts Catalog


GENERAL PURPOSE WIDE TREAD AND ORCHARD TRACTORS

PC50R

AC610R SCHEBLER CARBURETOR

USED ON: GENERAL-PURPOSE, SERIAL No. 223803 AND UP WIDE TREAD, SERIAL No. 402040-404809 ORCHARD, SERIAL No. 0-15000 AND UP

The illustration below replaces the lower portion of Plate 28 on page 85 of Catalog No. 50-R.

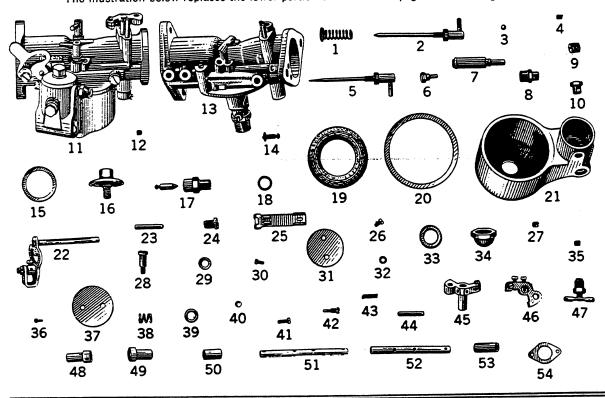

The list below and on the next page replaces the list of parts for AC610R Schebler carburetor on pages 34, 35, and 36 of Catalog No. 50-R.

NOTE: The AC725R carburetor is also used on the same series of tractors. Check illustrations of both carburetors to establish correct identification of the carburetor before ordering parts.

```
Part No.
                                                                                                                Description
                                                                                     Description

Spring, Nozzle Retaining (Sub. for 25-J and 65W) (Packed 2 in a Pkg.)

Needle, Load (Sub. for X2458)

Ball, Friction (Sub. for S251A and 41W)

Spring, Friction Ball (Sub. for 1K and 57W)

Needle, Idle (Sub. for X2461)

Idle Plug (Sub. for S2151A, S2151C, and A832R)

Nozzle (Sub. for S2183A and 95W)

Bushing, Fuel Line to Carburetor (Sub. for D392R) (Schebler S2192)

Pipe Plug, Headless (Sub. for S98B and 80W)

Pipe Plug, Hex. Hd. (Sub. for S98 and 79W)

Carburetor (Sub. for AC725R)

Screw Plug, Drilled Holes (Sub. for S763 and A1830R)
Key
                                         10078 R
                             AR 10018 R
   3
                             R
                                          10038 R
                                          10075 R
                             AR 10020 R
                                          10052 R
10059 R
                             R
   6
                                              285 R
1107 R
   8
                             A
B
                                          10160 R
610 R
                             Ř
10
                                                                                       Carburetor (Sub. for AC725R)
Screw Plug, Drilled Holes (Sub. for S763 and A1830R)
Screw Plug, for Drilled Holes (Sub. for S2502 and 45W)
Body and Bushing (Sub. for C2503R)
Body and Bushing (Sub. for AC1173R)
Body and Bushing (Sub. for DLT8-A)
Screw and Washer Float (Sub. for X1178B and 4W)
Gasket, Strainer (Sub. for P950 and 77W) (Packed 10 in a Pkg.)
Strainer, Complete (Sub. for X2462) (Packed 2 in a Pkg.)
Valve and Seat, Float (Sub. for X2653 and C2501R) (Packed 10 in a Pkg.)
Gasket, Float Valve Seat (Sub. for P791 and 73W)
Float, Cork, with Washer (Sub. for X2457 and 69W) (Packed 2 in a Pkg.)
Gasket, Bowl (Sub. for P951 and 78W) (Packed 10 in a Pkg.)
Bowl, Casting (Sub. for DLT7-A and 97W)
Bowl, Casting (Sub. for DLT-13 and B449R)
                             AC
11
                           (R
R
                                           10041 R*
12
                                           10067 R**
                                               2646
13
                                               2771*
                                               2960
                              AR 10010 R
15
                                           10025 R
                              AR 10021 R
16
17
                               AR 10077 R
                             AR 10066 R
R 10000
                                          10172 R
18
19
                                          10026 R
20
21
                                            10008 R**
                                           10009 R*
```

^{*}Used only on Carburetors with Cast-Iron Bodies.

^{**}Used only on Carburetors with Bronze Bodies.

AC610R SCHEBLER CARBURETOR-Continued

USED ON; (GENERAL-PURPOSE, SERIAL No. 223803 AND UP WIDE TREAD, SERIAL No. 402040-404809 ORCHARD, SERIAL No. 0-15000 AND UP

```
Description

Lever and Shaft, Choker (Sub. for X2460)
Pin, Float Pivot (Sub. for S2146 and 90W) (Packed 2 in a Pkg.)
Screw, Float Bearing (Sub. for S2147 and 91W)
Lever, Float (Sub. for P947 and 75W)
Screw, Throttle Disk (Sub. for 15-285 and 70W)
Drill Plug, 1/4*, 28 (Sub. for 15-285 and 70W)
Drill Plug, 1/4*, 28 (Sub. for 52154 and 35W)
Screw, Choker, Friction (Sub. for S2154 and 94W)
Washer, Choke Lever Friction Spring (Sub. for P52 and 72W)
Screw, Throttle Lever Adjusting Screw Clamp (Sub. for S1-10 and 10W)
Disk, Throttle (Sub. for P948 and 76W)
Washer, Lock, Throttle Disk Screws (Sub. for 81W)
Gasket, Bowl Nut (Sub. for P710 and B457R) (Packed 10 in a Pkg.)
Gasket, Bowl Nut (Sub. for P713 and 64W)
Nut, Bowl Retaining (Sub. for S1966 and 46W)
Nut, Bowl Retaining (Sub. for S1966 and 450R)
Drill Plug, 7/32*, 32 (Sub. for S1506 and 43W)
Screw, Choker Disk (Sub. for 15-29 and S1-18)
Disk, Air Valve Choker (Sub. for P348)
Spring, Friction Choke Lever (Sub. for 25V and 68W)
Washer, Choke Friction (Sub. for P850 and 74W)
Washer, Choke Friction (Sub. for P850 and 74W)
Screw, Adjusting, Throttle Lever (Sub. for 71W)
Screw, Adjusting, Throttle Lever (Sub. for 71W)
Screw, Adjusting, Throttle Lever (Sub. for 8211 and 67W)
Lever and Bushing, Throttle (Used with X2646 and X2771 Carb. Bodies) (Sub. for X2647 and C2500R)
Cock, Drain (Sub. for S1121) (Packed 5 in a Pkg.)
Bushing, Throttle Shaft, Lower (Used with DLT8-A Carb. Body) (Sub. for S2185 and 96W)
Bushing, Throttle Shaft, Lower (Used with X2646 and X2771 Carb. Bodies)
Shaft, Throttle (Used with DLT8-A Carb. Body) (Sub. for S2185 and 96W)
Bushing, Throttle Shaft, Lower (Used with X2646 and X2771 Carb. Body) (Sub. for S2185 and 96W)
Bushing, Throttle Shaft, Lower (Used with X2646 and X2771 Carb. Body) (Sub. for S2150 and 92W)
Shaft, Throttle (Used with DLT8-A Carb. Body) (Sub. for S2150 and 92W)
Shaft, Throttle (Sub. for S2369 and C2502R) (Packed 10 in a Pkg.)
Bushing, Throttle Shaft, Lower (Used with X2646 and X2771 Carb. Body) (Sub. for S2150 and 92W)
Shaft, Throttl
                                             Part No.
Kev
                                                 1843 R
10049 R
                                   AB
                                  R
                                                  10050 R
                                R 10023 R
21H 971 R
15-223†
27
28
29
30
                                               10057 R
                                                 10010 R
                                 21H 963 R
                                                 10024 R
                                                            245
                               (Ř
R
                                                  10014 R*
                                                  10015 R**
                               RRR
                                                  10042 R**
34
                                                  10063 R*
                                R 10045 R
21H 962 R
R 10011 R
36
37
                                                  10079 R
39
                                                  10147 R
10
                                                       1393
11
12
13
14
15
                                                    15-57
                                                  10036 R
                                   R
                                                   10076 R
                                  R
                                   RX
                                                   10037 R
                                                        2487
                                   AR 10022 R
 ₩
₩7
                                   AR 10075 R
                                                   10060 R**
 18
                                                  10065 R**
 19
 50
                                                        2471
                                                   10051 R**
                                   R
 52
                                                   10061 R
                                                        2482
                                                                                                          Bushing, Fuel Line to Carb. (Sub. for D392R) (Schebler S2192)
                                   Α
                                                             285 R
 54
   Parts listed below are not illustrated.)
                                                  10114 R
                                                                                                          Packing
                                                   10139 R
                                                                                                          Bushing
                                                  10151 R
                                                                                                          Plug
```

*Used only on Carburetors with Cast-Iron Bodies.


**Used only on Carburetors with Bronze Bodies.

†Furnished by John Deere Dubuque Tractor Works.

AC999R SCHEBLER CARBURETOR

USED ON WIDE TREAD ONLY, SERIAL No. 404810 AND UP

The illustration below replaces the upper portion of Plate 29 on page 86 of Catalog No. 50-R.

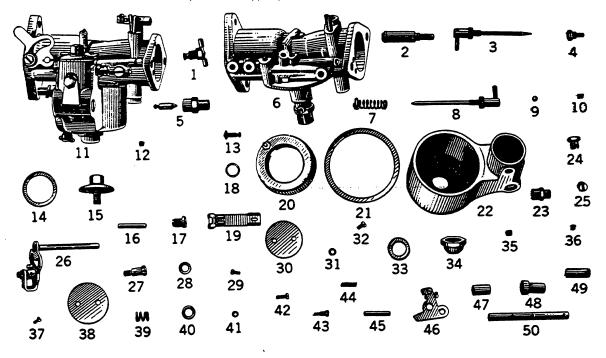

The list below and on the next page replaces the list of parts for AC999R Schebler carburetor on pages 37 and 38 of Catalog No. 50-R.

Key	Part No.	Description
1	AR 10075 R	Cock, Drain (Sub. for S1121)
	R 10059 R	Nozzle (Sub. for S2183A and 95W)
3	AR 10020 R	Needle, Idle (Sub. for X2461)
4	R 10052 R	Plug, Idle (Sub. for S2151C and A832R)
2 3 4 5 6	AR 10077 R	Valve and Seat, Float (Sub. for X2653 and C2501R)
6	í X 2646	Body and Bushing (Sub. for C2503R)
	X 2771	Body and Bushing, Assembly (Sub. for AC1173R)
7 8 9	R 10078 R	Spring, Nozzle Retaining (Sub. for 25-J and 65W) (Packed Two in a Pkg.)
8	AR 10018 R	Needle, Load (Sub. for X2458)
	R 10038 R	Ball, Friction, Adjusting Needle (Sub. for S251A and 41W)
10	R 10075 R	Spring, Friction Ball (Sub. for 1-K and 57W)
11	AC 999 R	Carburetor
12	(R 10041 R*	Plug Screw, Drilled Holes (Sub. for S763 and A1830R)
	R 10067 R	Plug Screw for Drilled Holes (Sub. for S2502 and 45W)
13	AR 10010 R	Screw and Washer, Float (Sub. for X1178B and 4W)
14	R 10025 R	Gasket, Strainer (Sub. for P950 and 77W) (Packed 10 in a Pkg.)
15	AR 10021 R	Strainer (Packed 2 in a Pkg.) (Sub. for X2462)
16	R 10049 R	Pin, Float Pivot (Sub. for S2146 and 90W) (Packed 2 in a Pkg.)
17	R 10050 R	Screw, Float Bearing (Sub. for S2147 and 91W)
18	R 10172 R	Gasket, Float Valve Seat (Sub. for P791 and 73W)
19	R 10023 R	Lever, Float (Sub. for P947 and 75W)
20	AR 10066 R	Float, Cork, with Washer (Sub. for X2457 and 69W)
21	R 10026 R	Gasket, Bowl (Sub. for P951 and 78W) (Packed 10 in a Pkg.)
22	R 10008 R	Bowl Casting (Sub. for DLT7-A and 97W)
	(R 10009 R*	Bowl Casting (Sub. for DLT-13 and B449R)
23	A 285 R	Bushing, Fuel Line to Carb. (Sub. for D392R) (Schebler S2192)
24	R 10160 R	Pipe Plug, Hex. Hd. (Sub. for \$98 and 79W)
25	B 1107 R	Pipe Plug, Headless (Sub. for S98B and 17W)
26	AB 1843 R	Lever and Shaft, Choke (Sub. for X2460)
27	R 10057 R	Screw, Choker Friction Spring (Sub. for S2154 and 94W)
28	R 10010 R	Washer, Choke Lever Friction Spring (Sub. for P52 and 72W)

^{*}Used only on Carburetors with Cast-Iron Bodies.



AC999R SCHEBLER CARBURETOR—Continued USED ON WIDE TREAD ONLY, SERIAL No. 404810 AND UP

Key	Part No.	Description
29	21H 963 R	Screw, Throttle Lever Adjusting Screw Clamp (Sub. for SI-10 and 10W)
30	R 10024 R	Disk, Throttle (Sub. for P948 and 76W)
31	S 245	Washer, Lock, Throttle Disk Screw (Sub. for 81W)
32	21 H 971 R	Screw, Throttle Disk (Sub. for 15-285 and 70W)
33	(R 10014 R*	Gasket, Bowl Nut (Sub. for P710 and B457R)
	\R 10015 R	Gasket, Bowl Nut (Sub. for P713 and 64W)
34	(R 10042 R	Nut, Bowl Retaining (Sub. for \$1096 and 46W)
25	IR 10063 R*	Nut, Bowl Retaining (Sub. for S2424 and B450R) Drill Plug, 1/4", 28 (Sub. for S2041 and 85W)
35 36	15-223† R 10045 R	Drill Plug, 7/32", 32 (Sub. for S1506 and 83W)
36 37	21 H 962 R	Screw, Choker Disk (Sub. for 15-29 and SI-18)
38	R 10011 R	Disk, Air Valve Choker (Sub. for P348)
39	R 10079 R	Spring, Choker Lever Friction (Sub. for 25V and 68W)
40	R 10147 R	Washer, Choker Friction (Sub. for P850 and 74W)
41	S 1393	Lock Washer, Choker Disk Screw (Sub. for 63W)
42	15-57	Screw, Throttle Lever, Adjusting (Sub. for 71W)
43	R 10036 R	Screw, Throttle Lever and Bushing Retaining (Sub. for S93B and 17W) (Packed 2 in a Pkg.)
44	R 10076 R	Spring, Throttle Stop (Sub. for 18-0)
45	R 10037 R	Stop Pin, Throttle Lever (Sub. for S211G and 67W)
46	AR 10023 R	Lever, Throttle (Sub. for X2648 and 2506R)
47	S 2471	Bushing, Throttle Shaft, Upper (Sub. R10114R and R10139R) (Sub. for C2504R)
48	R 10065 R	Bushing, Throttle Shaft, Lower (Sub. for S2472 and C2505R) Bushing, Throttle Shaft, Lower (Sub. R10114R, R10139R, and R10151R) (Sub. for D2530R)
49	S 2482* R 10061 R	Shaft, Throttle (Sub. for S2369 and C2502R)
50	ח וטטטו ח	Shart, Throttle (Gub. 101 02303 and 0230211)
(Parts	s listed below are	e not illustrated.)
(,	R 10114 R	Packing
	R 10139 R	Bushing
	R 10151 R	Plug
	H 10151 R	Plug

The following list shows the old part numbers on pages 34, 35, 36, 37, and 38 of Catalog No. 50-R and the new numbers in this supplement which replace them.

Old Part Numbers	New Part Numbers	Old Part	Numbers	New Part I	Numbers
1K	R 10075 R	S 20	41	15-2	23
15-29	21H 962 R	S 21			37 R
15-285	21H 971 R	S 21			49 R
	R 10076 R	S 21			50 R
18-Q		S 21			51 R
25-J	R 10078 R				
25-V	R 10079 R		51 C		52 R
D 392 R	A 285 R	S 21			57 R
DLT-7-A	R 10008 R		83 A		59 R
DLT-13	R 10009 R	S 21			60 R
P52	R 10010 R	S 23			61 R
P348	R 10011 R	S 24	24	R 100	63 R
P710	R 10014 R	l S 24	71 R	(R 101	14 R
P713	R 10015 R			(R 101	39 R
P791	R 10172 R	S 24	72	`R 100	65 R
P850	R 10147 R	S 24			14 R
P947	R 10023 R	1	-		39 R
P948	R 10024 R	1			51 R
P950	R 10025 R	S 25	.02		67 R
		SI-10		21 H 9	
P951					
S 93 B	R 10036 R		78 B	AR 100	
S 98	R 10160 R	X 24		AR 100	
S 98 B	B 1107 R	X 24		AR 100	
S 251 A	R 10038 R	X 24		AR 100	
S 763	R 10041 R	X 24		AR 100	21 R
S 1096	R 10042 R	X 26	347	AR 100	
S 1121	AR 10075 R	X 26	i48	AR 100	23 R
S 1506	R 10045 R	X 26	i53	AR 100	77 R

^{*}Used only on Carburetors with Cast-Iron Bodies. †Furnished by John Deere Dubuque Tractor Works.

(For list of new numbers in alphabetical and numerical sequence, see page 6.)




AC610R AND AC999R SCHEBLER CARBURETORS—Continued

Following is a list of new numbers contained in this supplement. These numbers should be added to the numerical index beginning on page 90 of Catalog No. 50-R.

Part Number	Page No. in This Supplement	Key	Part Number	Page No. in This Supplement	Key
15-223	. 3	27 35	R 10038 R	2	3 9
21 H 962 R	. 3	36 37	R 10041 R		12
21H 963 R		30 29	R 10042 R	· 3	12 34 34
21 H 971 R		26		•	
A 285 R		32 8	R 10045 R	5	35 36
	4	23	R 10049 R	3 4	23 16
AR 10010 R	. 2 4	·14 13	R 10050 R	3	24 17
AR 10018 R		 2 8	R 10051 R		51 6
AR 10020 R	2	5	R 10052 R	4	4
AR 10021 R	. 4 . 2	3 16	R 10057 R	3	28
AR 10022 R	4 3	15 46	R 10059 R	2	27 7
AR 10023 R	5	46	R 10060 R	3	2 48
AR 10066 R		19 20	R 10061 R		52 50
AR 10075 R	. 3	47	R 10063 R		34 34
AR 10077 R		1 17		-	
B 1107 R	. 4 2	5 9	R 10065 R	5	49 48
	4	25	R 10067 R	2	12 12
R 10008 R	2 4	21 22	R 10075 R	2	4 10
R 10009 R		21 22	R 10076 R	3	43 44
R 10010 R	3	29	R 10078 R	2	1
R 10011 R		28 37		•	7
R 10014 R	5	38 33	R 10079 R	5	38 39
	5	33	R 10114 R	3 5	53 47
R 10015 R	3 5	33 33	R 10139 R	3	49 53
R 10023 R	3 4	25 19	R 10147 R	5	49 39
R 10024 R	. 3	31		5	40
R 10025 R		30 15	R 10151 R	3 5	53 49
R 10026 R		14 20	R 10160 R		10
	4	21	R 10172 R	2	24 18
R 10036 R	3 5	42 43		4	18
R 10037 R		44 45			

GASKET SETS

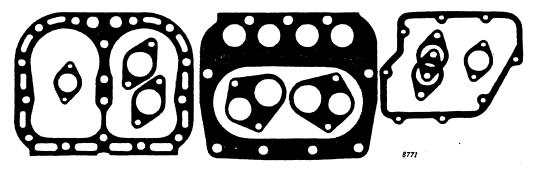


Part No. Serial No. C 1246 R 200111-223802

Description

Gasket Set for Model "GP"—Valve, Ring and Cylinder Replacement—Consisting of:

1— 321 R Gasket (Carburetor to Manifold)
1—C 1001 R Gasket Front Cover
1—C 1003 R Gasket, Cylinder to Case
1—C 1005 R Gasket, Cylinder Head
2—C 1006 R Gasket, Manifold
2—C 1799 R Gasket, Upper Water Pipe—Upper
2—D 305 R Gasket, Upper Water Pipe—Lower
1—D 1034 R Gasket (Intake Pipe to Carburetor)

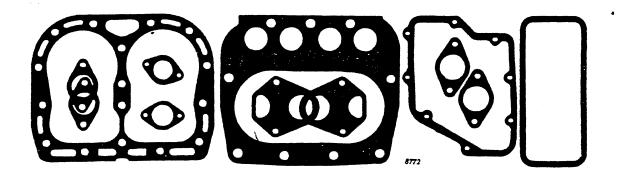

Part No. Serial No. .C 1247 R 223803-230745

Description

Gasket Set for Model "GP"—Valve, Ring and Cylinder Replacement—Consisting of:

onsisting of:

1— 321 R Gasket (Carburetor to Manifold)

1—C 1001 R Gasket, Front Cover

1—C 1002 R—Gasket, Cylinder Valve Cover

1—C 1003 R Gasket, Cylinder to Case

1—C 1709 R Gasket, Cylinder Head


2—C 1723 R Gasket, Manifold

2—C 1799 R Gasket, Upper Water Pipe—Upper

2—D 305 R Gasket, Upper Water Pipe—Lower

1—D 1790 R Gasket, Air Cleaner to Carburetor

GASKET SETS—Continued

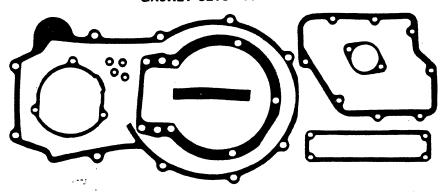


Part No. Serial No. AC 1248 R 200111-223802

Description

Gasket Set for Model "GP"—Crankshaft and Bearing Replacement—Consisting of:

onsisting of:

1—C 602 R Gasket, Left Main Bearing Cover
1—C 603 R Gasket, Clutch Fork Bearing
1—C 673 R Gasket, Left Main Bearing
1—C 717 R Gasket, Pulley and Spline Gear Cover
1—C 759 R Gasket, Left Camshaft Bearing
4—C 932 R Washer, Lead Pulley Dust Shield Cap Screw
1—C 1001 R Gasket, Front Cover
1—D 626 R Felt, Right Main Bearing

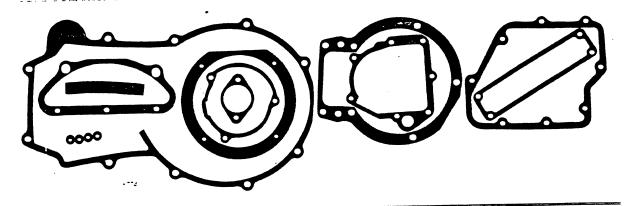

Part No. Senal No. AC 1249 R 223803-230745

Description

Gasket Set for Model "GP"—Crankshaft and Bearing Replacement—Consisting of:

onsisting of:

1— C 602 R Gasket. Left Main Bearing Cover

1— C 603 R Gasket. Clutch Fork Bearing

1— C 673 R Gasket, Left Main Bearing

1— C 717 R Gasket, Left Main Bearing

1— C 759 R Gasket, Pulley and Spline Gear Cover

1— C 759 R Gasket, Left Camshaft Bearing

4— C 932 R Washer, Lead (Pulley Dust Shield Cap Screw)

1— C 1001 R Gasket, Front Cover


1— C 1739 R Gasket, Pulley and Spline Gear Cover Cap

1— C 1745 R Gasket, Pulley and Spline Gear Cover Cap

1— C 1745 R Gasket, Pulley Dust Shield

1— D 626 R Felt, Right Main Bearing

GASKET SETS—Continued

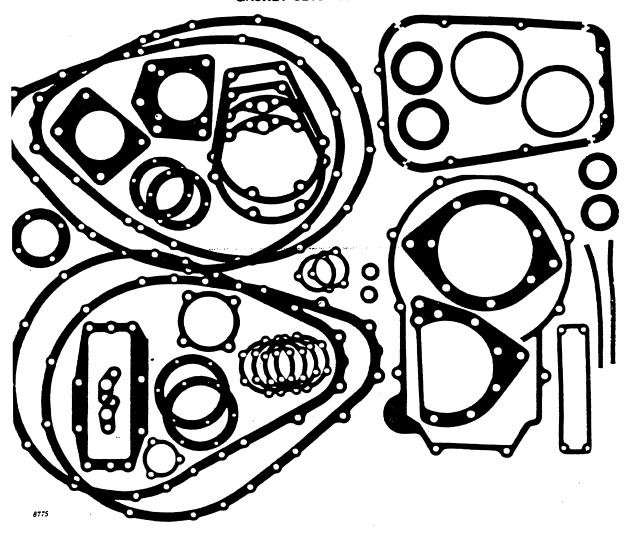

Serial No. Part No. AC 1250 R 200111-230745 Description


Gasket Set for Model "GP" — Transmission and Rear End Overhaul --Consisting of: Gasket, Transmission Rear Cover Gasket, Left Spline Bearing Cover Gasket, Outside Differential Quill Gasket, Rear Axle Housing --AC 166 R 591 R 594 R 595 R 596 R 597 R

Gasket. Rear Axie Housing
Gasket. Rear Axie Nut Cover
Gasket. Power Shaft Housing Cover to Case
Gasket. Clutch Fork Bearing
Gasket. Left Differential Quill
Gasket. Pulley and Spline Gear Cover
Gasket. Right Differential Quill
Washer, Leather, Gear Shift Lever
Gasket. Rower Shaft Opening
Gasket. Power Shaft Opening
Gasket. Power Lift Opening
Gasket. Power Shaft Front Cap
Shim. Power Shaft Front Cap
Shim. Power Shaft Housing to Gase
Gasket. Power Shaft Housing to Gase
Gasket. Rear Axie Nut Cover
Washer. Cork. Rear Axie
Washer. Cork. Rear Axie
Washer. Cork. Rear Wheel
Felt, Brake Drum Mud Guard 598 R 603 R 672 R 717 R 718 R 1060 R 1245 R 1251 R 1414 R 1419 R 1420 R 1421 R 1454 R 1475 R 1476 R

Felt, Brake Drum Mud Guard

1478 R


GASKET SETS—Continued

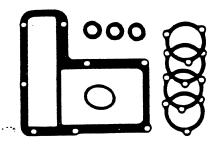

Part No. Serial %5. AC 1251 R 200111-225220

Description Gasket Set for Model "GP"-Governor Overhaul-Consisting of:


1—C 609 R Gasket, Governor Case
1—C 1197 RT Washer, Felt, Right Governor Bearing
4—D 297 R Gasket, Fan Shaft and Governor Housing
3—D 684 R Washer, Felt, Fan Shaft

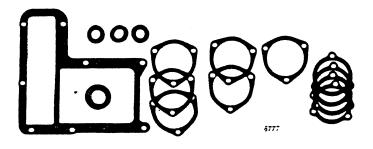


Serial No. Part No. AC 1252 R 228221-2307-5

Description Gasket Set for Model "GP"-Governor Overhaul-Consisting of:


1—C 2067 R 1—C 2068 R 3—C 2069 R 1—C 2070 R 2—C 2071 R 4—D 297 R 3—D 684 R Gasket, Governor Case to Case Felt, Right Governor Bearing Gasket, Right Governor Bearing Housing Gasket, Right Governor Bearing Housing Gasket, Right Governor Bearing Housing Gasket, R. H. Governor Bearing Housing Washer, Felt, Fan Shaft

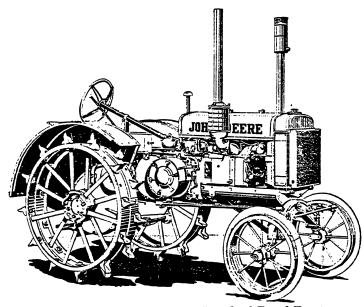

John Deere General Purpose Standard Tread Tractor

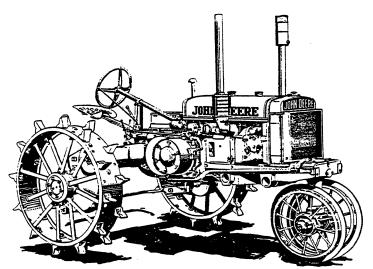

John Deere General Purpose Wide Tread Tractor

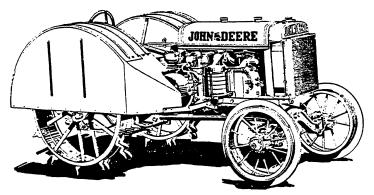

John Deere Orchard and Field Tractor

Instructions for Ordering Parts

First. Always give serial number of tractor when ordering repairs.

Second. Give number and name of each part ordered. If in doubt as to correct name and number, send dimensioned sketch or return broken parts, charges prepaid.

Third. Orders for parts should be written separately from correspondence.

Fourth. State whether shipments are to be forwarded by Freight, Express, or Parcel Post. Telegraph orders will be shipped Express or Parcel Post unless otherwise instructed.

Part	NAME AND DESCRIPTION		Serial Number	
Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard
				•
004 B	TRANSMISSION CASE	200111-	400000-404809	0-15000-
294 R 629 R	Stud, Steering Gear Housing to Case	223803-	402445-	0-15000-
C 166 R	Washer, Rear Cover Screw	200111-	400000-	0-15000-
C 255 R	Case, C300 R, Transmission, Main	200111-224099	400000-404809	
C 652 R	Case, C1733 R, Transmission, Main	224100-		A 4 MAAA
C 934 R	Cover, Crankcase, and Breather Body		404810-	
C 1021 R	Case, C2310 R, Transmission, Main		404810-	
598 R	Gasket, Power Shaft Housing Cover			
	to Case	200111-202429		
698 R	Cover, Power Shaft Opening.			0-15000-
719 R 783 R	Stud, Differential Quill to Case	200111-	400000-	0-15000-
783 R	Stud, Cylinder to Case (Long)		400000-	0-15000-
826 R 826 R	Stud, Cylinder to Case (Short) Stud, Front End to Case	200111-	400000-	0-15000-
826 R	Cover, Front End to Case	200111-	400000-	0-13000-
960 R 961 R	Cover, Rear	200111-223802		
1001 R	Gasket, Front Cover		400000-	0-15000-
1001 R 1019 R	Stud, Control Quadrant to Case	200111-	400000-404809	1 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
1013 R	Washer, Cover, Cap Screw	200111-	400000-	0-15000-
1244 R	Cover, Power Shaft Opening	202430-		0-15000-
1245 R	Gasket, Power Shaft Housing Cover			
1245 R	to Case			0-15000-
1493 R	Cover, Rear		400000-	0-15000-
1808 R	Cover, Front	223803-	402445	0-15000-
625 R	Pipe Plug, Transmission Filler and			0
	Oil Drain		400000-	0-15000-
625 R 1976 R	Pipe Plug, Crank Case Drain	200111-	400000-	0-15000-
1976 R	Pipe Plug, Oil Sump Drain and Trans-	200111	400000	0-15000-
D 7750	mission Case Oil Level	200111-	400000-	0-10000-
D 7759	Shaft Lower Bushing	223538-	402169-	0-15000-
	Shart Lower Dusning	220000-	102100	0 20000
	ENGINE			
C 125 R	Flywheel, C241 R, with Bolts and			0
	Dowel Pin	200111-	400000-	0-15000-
C 161 R	Housing, C33 R, Main Bearing with	000111 004000	400000	
G 400 D	Cap, L. H.	200111-224099	400000-	
C 162 R	Housing, C32 R, Main Bearing with Cap, R. H	200111-224099	400000-	
C 457 R	Bushing, Main Bearing (2 Halves)	200111-224099		
C 645 R	Housing, C1740 R, Main Bearing with	200111 224000	400000	
O OTO IC	Cap, R. H.	224100-		0-15000-
C 646 R	Housing, C1741 R, Main Bearing with			
0 020 25	Cap, L. H.			0-15000-
C 653 R	Bushing, Main Bearing (2 Halves)	224100-		0-15000-
35 R	Cover, L. H. Main Bearing	200111-224099	400000	
138 R	Collar, Flywheel Spacing		400000-	0-15000-
602 R	Gasket, L. H. Main Bearing Cover.	200111-224099		
602 R 618 R 673 R	Adusting Screw, L. H. Main Bearing	200111-224099	400000-	
673 R	Gasket, L. H. Main Bearing Housing	200111	400000	0 15000
4845 -	to Case	200111-	400000-	0-15000- 0-15000-
1743 R	Cover, L. H. Main Bearing			0-15000-
1745 R	Gasket, L. H. Main Bearing Cover			0-15000-
1793 R 1955 R	Shim, Main Bearing, Laminated Shim, Main Bearing, Laminated	200111-224099	400000-	0-10000
174 R	Adjusting Screw, R. H. Main Bearing	224100- 200111-224099 200111-224099	400000-	
186 R	Pin, Flywheel Spacer Driving (Round)		400000-404052	
463 R	Welsh Plug, L. H. Main Bearing	20000		
463 R.	Housing	224100-		0-15000-
	Felt, R. H. Main Bearing		400000-	0-15000 -
626 R	Screw, Flywheel Locating	200111-	400000-	0-15000-
626 R	Delew, 115 whice Decaring		404053	0-15000-
626 R 1080 R	Pin, Flywheel Spacer Driving (Square)			
626 R 1080 R	Pin, Flywheel Spacer Driving (Square,			
626 R 1080 R	Pin, Flywheel Spacer Driving (Square) PISTONS, CONNECTING RODS			
626 R 1080 R 2009 R	Pin, Flywheel Spacer Driving (Square) PISTONS, CONNECTING RODS AND CRANKSHAFTS		400000 409050	
626 R 1080 R 2009 R	Pin, Flywheel Spacer Driving (Square) PISTONS, CONNECTING RODS AND CRANKSHAFTS Connecting Rod, C226 R, Complete	200111-226401	400000-403960	
626 R 1080 R 2009 R	Pin, Flywheel Spacer Driving (Square) PISTONS, CONNECTING RODS AND CRANKSHAFTS Connecting Rod, C226 R, Complete Connecting Rod, C226 R, with Cap	200111-226401		
626 R 1080 R 2009 R	Pin, Flywheel Spacer Driving (Square) PISTONS, CONNECTING RODS AND CRANKSHAFTS Connecting Rod, C226 R, Complete	200111-226401 200111-226401	400000-403960 400000-403960 400000-	

		_	Serial Number		
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
					i
	PISTONS, CONNECTING RODS :				
	Continued		10000	0 17000	
AC 763 R AC 764 R	Connecting Rod, C1922 R, Complete Connecting Rod, C1922 R, with	226402-	403961-	0-15000-	2
	Piston Pin Bushing	226402-	403961-	0-15000-	2
AC 1112 R	Piston, C1873 R, with Rings, 5-3/4" (Substitute for C245 R)	200111-223802	400000-402039		2
AC 1113 R		200111-223802			:
AC 1114 R	Piston, C1882 R, with Rings, 5-3/4",	7			i
AC 1115 R	.090" Oversize	200111-223802 226402-	400000-402039 403961-	0-15000-	2 2
AC 1116 R	Piston, C2142 R, with Rings, 6".				!
AC 1117 R	.045" Oversize	226402-		0-15000-	
	(Substitute for C1704 R)	223803-226401	402040-403960		. 2
AC 1118 R	Piston, C2151 R, with Rings, 6", .045" Oversize	223803-226401	402040-403960		2
AC 1123 R	Ring, Piston, 3/16"x5-3/4" (Set of 6 Compression for Four Ring Piston).	200111-223768	400000-402039		2
AC 1124 R	Ring, Piston, 3/16"x5-3/4", (5 used)				i
AC 1125 R	per Piston) (Set of 10) Ring, Piston, 5-3/4", .045" Over-	200111-223802			:
AC 1126 R	size (Set of 10)	200111-223802			i
	size (Set of 10)	200111-223802	400000-402039		2
AC 1127 R	Ring, Piston, 1/4"x6" (Set of 10)	223803-	402040-	0-15000-	. 2
AC 1128 R	Ring, Piston, 6", .045" Oversize	000000		015000-	: 2
AC 1131 R	(Set of 10)	223803-			:
AC 1132 R	Screws, D334 R) (Set of 2) Pin, Piston (One Taper Hole for	200111-223768	400000-402039		2
AC 1132 M	Set Screws, C1764 R) (Set of	000111 000000	400000 400000		2
AC 1133 R	2)	200111-223802		!	
	Screws, D334 R) (Set of 2) Pin, Piston, 6" (1 Taper Hole for Set	223803-226401	402040-403960		2
	Screw C1925 B) (Set of 2)	226402-	403961-	0-15000-	2
AC 1135 R	Pin, Piston, .005" Oversize (Two Flat Spots for Set Screws, D334 R)			i	!
	(Set of 2)	200111-223768	400000-402039		2
AC 1136 R	Hole for Set Screw, C1764 R) (Set	-			
AC 1127 P	of 2) Pin, Piston, .005" Oversize (Set of	200111-223802	400000-402039		2
	1 2)	226402-		0-15000- 0-15000-	2
AC 1138 R *AC 1153 R		200111-	400000-		
	placement Assembly. Crankshaft and Cylinder Block Re-	200211-223802	400000-402039		
	placement Assembly.	223803-224099	402040-403960		
*AC 1155 R	Crankshaft and Cylinder Block Replacement Assembly.	224100-226401		,	
*AC 1156 R	Crankshaft and Cylinder Block Re-			0-15000-	!
*AC 1157 R	placement Assembly. Crankshaft and Cylinder Block Re-				i
	placement Assembly.		403961-		.
AC 1187 R	and Connecting Rod Bearings and		400000 40407		
	Shims (Substitute for AC177 R)	200111-224099	400000-404254		1
			1	1	!

^{*}Crankshaft and Cylinder Block Replacement Assembly; Consisting of Crankshaft with Gear, Main and Connecting Rod Bearings, Cylinder Block with Pistons, Piston Rings and Necessary Gaskets.

i	NAME AND DESCRIPTION	Serial Number			Pla	
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No	
	PISTONS, CONNECTING RODS					
	AND CRANKSHAFTS—					
C 4400 B	Continued Crankshaft, C1734 R, with Gear,					
C 1188 R	Main and Connecting Rod Bearings			0 15000		
	and Shims (Substitute for AC639 R) Ring, Piston, 5-3/4" (6 Compression	224100-		0-19000-	ı	
C 1194 R	and 2 Oil Control)	200111-223768	400000-402039			
C 1196 R	Ring, Piston, 5-3/4" (8 Compression and 2 Oil Control)	200111-223802	400000-402039			
C 1197 R	Ring. Piston .045" Oversize, 5-3/4"					
	(8 Compression and 2 Oil Control) Ring, Piston, 6" (8 Compression and	200111-223802	400000-402039			
C 1198 R	2 Oil Control)	223803-	402040-	0-15000-		
D 102 R	Bolt with Nut and Cotter, Connecting Rod	200111-	400000-	0-15000-		
150 R	Gear Crankshaft	200111-	400000-	0-15000-		
1015 R	Ring, Piston, Oil Control, 5-3 4". Ring, Piston, Oil Control, 5-3/4"	200111-223802			i	
1404 R	045" Oversize (1 used per Piston)	200111-223802	400000 -402039		:	
1405 R		200111-223802	400000-402039			
1721 R	Ring, Piston, 1/4"x6", Oil Control (1	000000				
1764 R	used per Piston) Set Screw, Piston Pin, Taper Point	223803-	402040-			
	(1 used per Piston)	200111-226401	400000-403960			
1794 R	Shim, Connecting Rod, Laminated (Substitute for C958 R and C968 R)	200111-	400000	0-15000-		
1925 R	Set Screw, Piston Pin (6" Taper Type)	226402		0 15000-		
186 R 334 R	Dowel Pin, Crankshaft Set Screw, Piston Pin, Dog Point (2	200111-	400000	0-15000-	:	
334 R	used per Piston)	200111-220401		0-15000-	i	
342 R	Key, Gear to Crankshaft	200111-	400000-	0-13000-		
	CYLINDERS, VALVES AND					
14 R	MANIFOLDS Stud, Manifold to Cylinder	223803-	402040-404809	0-15000-		
294 R	Stud. Exhaust Elbow to Manifold.	200111-223802	400000-402039 400000 -	0-15000-	!	
321 R C 251 R	Gasket, Carburetor to Manifold Manifold, C295 R, Intake and Ex-	200111-				
.C ZOL II	haust with Exhaust Elbow Studs	200111-223802	400000-402039	• • • • • • • • • • • • • • • • • • • •	i	
C 256 R	Cylinder, 5-3 4", C301 R, Complete with Studs, Valve Guides, Valves				:	
	and Springs	200211-223802	400000-402039		:	
C 257 R	Cylinder, 5-3,4", C301 R, Complete with Studs and Valve Guides.	200211-223802	400000-402039		i	
C 566 R	Cap, Vlave Spring, C1604 R, with				1	
C 567 R	Lock Washers Cap, Valve Spring, C1604 R, with	200111-210795	1			
	Lock Washers	210790-210011	400085-400718	• • • • • • • • • • • • • • • • • • • •	1	
C 619 R	Cylinder, 6", C1700 R, Complete with Studs and Valve Guides	443003-	402040-	0-15000-	ŀ	
C 620 R	Cylinder, 6" C1700 R. Complete with		402040-	0-15000-	:	
C 694 R	Studs, Valve Guides and Valves Manifold, C1791 R, with Exhaust	223803-	402040	0 10000		
	Elbow		402040-402444		:	
.C 886 R	Cylinder, AC257 R, with Pistons Rings and Gaskets	200111-223802	400000-402039			
C 887 R	Cylinder, AC619 R, with Pistons	222202 226401	402040-403960)		
C 888 R	Rings and Gaskets Cylinder, AC619 R, with Pistons	223803-226401			٠	
	Rings and Gaskets	226402 -	403961-	015000		
C 901 R	Spring, Valve, Cap and Centering Washer (Substitute for C992 R)	200111-229835	400000-	0-15000-0-15508	3.	
C 1147 R	Valve, Intake and Exhaust (2 C1012 R)	200111-	400000-	0-15000-		
		;	!			

			-		
_			Serial Number		Ĺ
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
	CYLINDERS, VALVES AND MANIFOLDS—Continued				
*AC 1153 R	Cylinder Block and Crankshaft Replacement Assembly.	200211-223802	400000-402039		
*AC 1154 R	Cylinder Block and Crankshaft Re- placement Assembly	223803-224099	402040-403960	·	
*AC 1155 R	Cylinder Block and Crankshaft Re- placement Assembly	224100-226401			ĺ
*AC 1156 R	Cylinder Block and Crankshaft Re- placement Assembly.				
*AC 1157 R	Cylinder Block and Crankshaft Re-		403961-	0-10000	
C 246 R C 248 R	placement Assembly. Guide, Valve Elbow, Exhaust	200111- 200111-223802	400000- 400000-402039	0-15000-	2 2
C 1002 R C 1003 R	Gasket, Valve Cover Gasket, Cylinder to Case Gasket, Manifold to Cylinder	200111- 200111-	400000- 400000-	0-15000 - 0-15000-	2
C 1006 R C 1009 R	Cover, Valve	200111-223802 200111- 200211-223802	400000-402039 400000- 400000-402039	0-15000-	2 2 2 2 2
C 1174 R C 1604 R C 1605 R	Stud, Manifold to Cylinder Cap, Valve Spring Lock Washer, Valve Stem (One-Half)	216012-229835	400719- 400719-	0-15000-0-15503 0-15000-	2 2 2 2
C 1606 R C 1723 R C 1791 R	Washer, Valve Spring Centering Gasket, Manifold Manifold	200111-229835 223803- 223803-226401	400719- 402040-404809 402445-403960	0-15000-0-15503 0-15000-	2 2 2
C 1823 R	Stud, Cylinder Head, Long, 5/8"x 6-3.8" (2 used)	223803-	402445-404809 403961-404809	0-15000-	2
C 2109 R C 2110 R C 2299 R	Manifold Spring, Valve Washer, Valve Spring Centering Manifold	1 .	404810-	0-15504- 0-15504-	2 2 2 2 2 2 2
C 2300 R D 488 R D 625 R	Gasket, Manifold Stud, Manifold, 1/2"x2"		404810- 404810- 400000-	0-15000-	2 2 1
D 1721 R D 1865 R K 2198 R	Cap, Valve Spring Relief Cock, Compression	229836- 200111-	400000-	0-15504- 0-15000-	2 2
	x5-7 8" (14 used) Pipe Plug, Valve Oil Drain, Cylinder	200111-	400000 400000-	0-15000- 0-15000-	2 2
1450 R		223803-	402040-	0-15000-	2
AC 1139 R	for C250 R)	200111-223802	400000-402039		2
AC 1140 R	for C1701 R)	223803-	402040-	0-15000-	2
C 251 R C 1005 R	Pipe, Water Inlet, Cylinder Head	200111- 200111-223802	400000- 400000-402039	0-15000-	2 2 2 2
C 1709 R K 2525 R	Gasket, Head to Cylinder	223803- 200111-202798	402040-	0-15000-	2 2

^{*}Cylinder Block and Crankshaft Replacement Assembly; Consisting of Cylinder Block with Pistons, Piston Rings, Crankshaft with Gear, Main and Connecting Rod Bearings and Necessary Gaskets.

			Serial Number		Disc
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
	CAMSHAFT Bearing, C178 R, Camshaft, R. H.,				
AC 80 R AC 81 R	with Cup	200111-	400000-	0-15000-	3
AC 276 R	with Cup. Gear, C304 R, Camshaft, Complete	200111-	400000-	0-15000-	3
AC 564 R	with Governor Drive Gear Camshaft, C397 R, with Woodruff	200211- 200211-	400000-404809 400000	0–15000– 0–15000–	3
C 305 R	Key Ring, Cam Gear Clamp Gasket, Camshaft Bearing, L. H	200211- 200211- 200111-	400000 400000—	0-15000- 0-15000-	3
C 759 R C 784 R C 2207 R	Spring, Camshaft Thrust	200111-	400000- 404810-	0-15000-	3
D 659 R D 1164 R	Key, Cam Gear to Shaft Key, Camshaft Gear Cup, Camshaft Bearing	200111-215717	400000-400804 400805- 400000-	0-15000- 0-15000-	3 3 3
JD 7250 R JD 7358 R	Cone with Rollers, Camshaft Bearing (Substitute for JD7203 R)		400000-	0-15000-	3
C 37 R	CAM FOLLOWER Guide, Cam Follower	200111-	400000-	0-15000-	3
C 420 R C 624 R	Adjusting Screw, Cam Follower Cam Follower	200111-	400000- 400000-	0-15000- 0-15000-	3
AC 181 R	WATER FEED Valve, Water Feed, Complete Pipe, Water Feed	200111-223802 200211-223802	400000-402039		3
AC 274 R C 299 R	Body, Water Feed Valve Check, Water Feed Valve	200211-223802	400000-402039		3
C 663 R C 975 R	Elbow, Water Feed Pipe to Cylinder Nozzle, Water Feed Valve	: 200211-223802	400000-402039 400000-402039		3
C 1181 R C 1225 R D 410 R	Lead Washer, Water Valve Nozzle Nut, Packing, Needle Valve	200211-223802	400000-402039		: 3
D 449 R D 451 R	Nut, Packing, Water Feed	200211-223802 200211-223802	400000-402039		3
E 2149 R	Nut, Solder Bushing, Water Feed	200211-223802	400000-402039		3
E 2150 R	Gland, Solder Bushing, Water Feed Pipe, 5/16"	200211-223802	400000-402039		3
	MUFFLER AND SPARK ARRESTER Muffler Complete (Substitute AD1203				
AC 410 R	R)	1 200111-223802	400000-402441	0-15000-	1 3
AC 765 R AC 970 R AC 971 R AD 829 R	Muffler Complete Elbow with Flange, Exhaust Elbow, Lower, D1919 R, with Stude		404810-		. 3
	(For AD823 R and AU765 R Muffler Assemblies)	223803-	402442-404809	0-15000-	8
AD 1203 R	Stack and Flange, D1920 R, Muffler (For AD823 R Muffler Assembly) Muffler Complete (Substitute for	223803-			İ
C 1280 R	AD823 R also AC410 R) Fillow Muffler and Spark Arrester.	200111-	400000-404809)	. 8
C 2000 R	Lower (For AC410 R Muffler Assembly). Flange Casting (For AC765 R Muffler	200111-223802			
D 1440 R	Assembly)			1	3
D 1441 R	AC410 R Muffler Assembly) Finned Section, Muffler and Spark Arrester (For AC410 R Muffler	200111-223802 c			
D 1442 R	Assembly)	200111-223802 -	i	1	1
D 1443 R	AC410 R Muffler Assembly). Elbow, Muffler and Spark Arrester (For AC410 R Muffler Assembly)	r)	l .	1	!
D 1922 R	Cap (For AD823 R and AC765 F	223803-	402442-40480		
	Finned Section, (For AD823 R and	a i	1	1	-

			Serial Number		
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
	MUFFLER AND SPARK				
	ARRESTER—Continued				
D 1924 R	Collar, Spacing (For AD823 R and AC765 R Muffler Assemblies)	223803-	402442-404809	0-15000-	3
D 1925 R	Stud, (For AD823 R and AC765 R		•		
	Muffler Assemblies)	223803-	402442-404809	0-15000-	3
	GOVERNOR			0 15000 0 15150	
1454 R 1483 R	Pipe Plug in Inspection Hole Elbow, Improvement Governor Case	200211-228220 200111-223803		0-15000-0-15172	4
1705 R	Washer, Governor Shaft, Ends	200111-228220		0-15000-0-15172	4
AC 201 R	Weight, Governor (Replaced by AC-669 R)			 	
AC 276 R	Gear, Governor Drive, with Camshaft		400000-404809	0 15000	3
AC 283 R	GearSleeve, Governor Shaft	200211- 200211-228220	400000-404557	0-15000-0-15172	4
AC 344 R	Case, Governor, C306 R, with Plug.	200211-228220	400000-404557	0-15000-0-15172	4
AC 438 R	Shaft, Governor, C1193 R, with Governor Gear, C1195 R			! : [4
AC 441 R	Shaft, Governor, C1193 R, with Mag-				4
AC 657 R	neto Drive Flange, C363 R Filler Pipe with Cap, Crankcase	200111-209462 200211-223802	400000-402039		4
AC 667 R	Governor Weight	200111	400000-	0-15000-	4
AC 669 R	Governor Weights, 2 AC667 R (Replaces 2 AC201 R)	200111-223768	400000-402200		 .
AC 851 R	Shaft, Inside Governor Fork, with		400000-	0-15000-	4
*AC 854 R	ScrewsSleeve, Governor	228221-	404558-	0-15173-	4
*AC 979 R	Shaft, Governor.	228221- 200211-	404558-404809 400000-404809		4
C 308 R C 311 R	Gear, Fan Drive Bevel	200211-228220	400000-404557	0-15000-0-15172	4
C 363 R	Flange, Magneto Drive (See AC441 R)	209463-228220		0-15000-0-15172 0-15000-0-15172	
C 609 R C 902 R	Gasket, Governor Case to Main Case Pin, Governor Weight to Gear	200111-220220	400000-	0-15000-	4
C 950 R	Fork, Governor, Inside	200111- 200111-	400000- 400000-	0-15000- 0-15000-	4
C 998 R C 1193 R	Thrust Bearing Complete. Shaft, Governor (See AC438 R and				
	AC441 R)	209463-228220 209463-228220		0-15000-0-15172 0-15000-0-15172	
C 1195 R C 1196 R	Snap Ring, Governor Bearing, L. H.	200211-228220	400000-404557	: 0-15000-0-15172	4
C 1197 R C 1202 R	Felt Washer, Governor Bearing, R. H. Lock Washer, Fan Drive Bevel Gear	200211-228220 200211-228220	400000-404557	0-15000-0-15172 0-15000-0-15172	4
C 1202 R	Elbow, Oil Filler	200211-203035			4
C 1364 R	Spring, Governor Weight (Replaced by AC669 R)			l	l .
C 1783 R	Nut, Governor and Fan Shaft (.005	000011 000000	400000 404555	0 15000 0 15179	
*C 2053 R	Undersize Threads		400000-404557 404558-404809	0-15000-0-15172 0-15173-	4
*C 2055 R	Gear. Governor Drive	228221-	404558-404809		4
*C 2057 R *C 2058 R	Flange, Magneto Drive Felt Retainer, Governor Bearing, R. H.	228221- 228221-	404558 404558	0-15173-	4
*C 2059 R	Washer, Governor Bearing, Felt Re-	228221-	404558-404809	0-15173-	4
*C 2060 R	tainer, R. H. (Steel) Housing, Governor Bearing, R. H.	228221-	404558-404809	0-15173-	4
*C 2061 R	Washer, Bearing, Retaining, L. H.	228221- 228221-	404558- 404558-404809	0-15173- 0-15173-	4
*C 2064 R *C 2067 R	Spacer, Governor Bearing, R. H. Gasket, Governor Case to Main Case	228221-	404558-	0-15173-	4
*C 2068 R	Felt Washer, Governor Bearing, R. H.	228221-	404558-	0-15173-	4
*C 2069 R	Gasket, Governor Bearing Housing, R. H. (Thin)	228221-	404558-404809	0-15173-	4
*C 2070 R	Gasket, Governor Bearing Housing, R. H. (Medium)	228221-	404558-404809	0-15173-	4
*C 2071 R	Gasket, Governor Bearing Housing,				4
C 2130 R	R. H. (Thick)	ZZ8ZZ1-	404558-404809 402040-402444	ll	4
C 2200 R	Case, Governor	1	404810-		4
C 2201 R C 2202 R	Shaft, Governor		404810- 404810-		
C 2203 R	Arm, Governor		404810-		1 -
C 2204 R C 2206 R	Gear, Governor Bevel		404810-		
C 2208 R	Gear, Magneto Drive		404810-	1	. 4
			i	1	1

^{*}Also repairs for tractors equipped with AC904 R, AC905 R and AC906 R Governor Assemblies which can be distinguished by the casting number C2053 R appearing on the governor case.

Part	NAME AND DESCRIPTION		Serial Number		DI-
Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Pla No
	COVERNOR Continued				
C 2209 R	GOVERNOR—Continued Shaft, Magneto Drive	 	404810		4
C 2211 R	Quill, Magneto Drive Shaft		404810-		
C 2212 R	Cork, Magneto Drive Shaft Quill		404810-		
C 2213 R	Shim, Magneto Drive Shaft Quill	i			: '
	(Thick) Shim, Magneto Drive Shaft Quill		404810		4
C 2214 R	Shim, Magneto Drive Shaft Quill		404040		i
C 2216 R	(Thin)		404810-		
C 2219 R	Housing, Governor Bearing, R. H.		404810 404810		4
D 297 R	Gasket, Governor Bearing	200111-228220	400000-404557	0-15000-0-15172	
D 403 R	Key, Fan Drive Bevel Gear	200111-	400000-	0-15000-	
D 403 R	Shaft, Governor Lever. Gasket, Governor Bearing. Key, Fan Drive Bevel Gear Key, Governor Drive Gear	228221-	404558-	0-15173-	Ι.
D 414 R	Fibe Flux, Governor Case	 	404810-	 	: .
D 426 R	Pipe Cap, Crankcase Filler Pipe Plug, Governor Case, Top	200211-223802	400000-402039		
D 625 R	Pipe Plug, Governor Case, Top	223803-228220	402445-404557	0-15000-0-15172	! .
D 1828 R	Spacer, Magneto Drive Shaft				
D 1828 R E 2244 R	Spacer, Governor Shaft, Right End. Pipe Plug, Improvement Governor		404810		
2 2277 16	Case	200111-223802	400000-402040	 	
D7250 R	Cup, Magneto Drive Shaft Bearing.		404810-		
D7250 R	Cup, Governor Bearing, R. H	200211-228220	400000-404557	0-15000-0-15172	١ ،
D7354 R	Cone with Rollers, Governor Bearing,				
	R. H		404810		4
ID7356 R	Cone with Rollers, Governor Bearing,		400000		
D7356 R	L. H.	200211-	400000-	0-15000-	1 4
1D1356 K	Cone with Rollers, Governor Bearing, R. H	228221-	404558-404809	0-15173-	. 4
D7358 R	Cone with Rollers, Governor Bearing,	. 220221-	404000-404003	0-19119-	•
2.000 10	R. H	200211-228220	400000-404557	0-15000-0-15172	: 4
D7358 R	Cone with Rollers, Magneto Drive				
	Shaft Bearing	· • · · · · • • · · · · · · · •			4
D7401 R	Cup, Governor Bearing, R. H				
D7402 R	Cup, Governor Bearing, L. H	200211-	400000-	0-15000-	4
D7402 R C 2069 R	Cup, Governor Bearing, R. H Washer, Governor Shaft, Ends	228221- 228221-	404558- 404558-	0-15173-	4
2009 R	washer, Governor Shart, Ends	220221-	404000-	0-15173-	! '
	CONTROLS	i			
629 R	Washer, Speed Change Lever Bolt	200111-	400000-	0-15000-	1
2226 R	Washer, Speed Change Lever Shaft.		404810-		
C 226 R	Lever and Trunnion, Speed Change.	200111-	400000-404809		
C 249 R	Crank, Speed Control	200111-	400000-404809	0-15000-	1
C 520 R	Quadrant, Control, C1596 R, with Clutch Lever Pivot Bolt (Repairs				
	for C253 R, C1596 R and C1676 R)	200111-	400000-404809	0_15000_	
C 611 R	Joint, Ball, Throttle Rod	223803-228220	402040-404557	0-15000-0-15172	
C 623 R	Joint, Ball, Throttle Rod				
C 625 R	Rod, Throttle and Ball Joint (Sub-				1
	stitute for C904 R)	200111-221920			
AC 959 R			404810-	· · · · · · · · · · · · · · · · · · ·	1
247 R	Trunnion, Governor Speed Control Lever	200111-	400000-	0 15000	
261 R	Arm, Governor Speed Control	200111-228220		0-15000- 0-15000-0-15172	
440 R	Clip, Clutch Operating Rod				
		200111-216370	400000 401000		1
447 R	Lever, Clutch Operating		400000-401238		ì
485 R	Clip, Clutch Lever Spring (2 used)		· · · · · · · · · · · · · · · ·	0-15413-	
900 R	Lever, Water Feed	200111-223802			
912 R 916 R	Bushing, Control Quadrant Stud	200111-	400000-	0-15000-	
916 R 924 R	Sleeve, Speed Change Spring Rod, Spark Control		400000- 400000-404809	0-15000-	
925 R	Rod, Speed Control	200111-	400000-404809		!
927 R	Rod, Clutch Operating	200111-	400000-404809		!
954 R	Bracket, Speed Control Crank	200111-	400000-404809		
955 R	Clip. Water Feed Lever. Front	200111-223802	400000-402039		į
956 R	Clip, Water Feed Lever, Rear Clip, Control Rod Tube	200111-223802	400000-402039		1
957 R	Clip, Control Rod Tube	200111-224099	400000-404809		
994 R	Spring, Governor Speed Change Tube, Control Rod Stud, Control Quadrant to Case	200111-228220	400000-404557		
1018 R	Stud Control Quadrant to Coco	200111-224099	400000-404809	0.15000	
	Bolt, Governor Control Fork	200111-	400000-404809 400000-404809		
; 1091 R			Z00000-404003	- 10000 -	1
C 1091 R C 1224 R	Spring, Clutch Lever (1 used)	<u>.</u>		0-15413-	1

^{*}Also repairs for tractors equipped with AC 904 R, AC 905 R and AC 906 R Governor Assemblies which can be distinguished by the casting number C 2053 R appearing on the governor case.

•				Serial Number		Pla
	Part umber	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	N
		CONTROLS—Continued				
C	1494 R	Stud. Clutch Operating Lever Bracket	į			
C	i	to Case		404810-		
C	1595 R	Bolt, Clutch Lever Pivot	216822-	401329-404809	0-15000-	
Č	1665 R	Pod Throttle	ZZ19Z1-ZZ36UZ		0 15000	
C	1677 R	Clip, Control Rods, Spark and Speed	(216271 216700			1
C	1679 R	Lever, Clutch Operating	216822	401329-404809		
_	1706 R	Rod, Throttle. Clip, Clutch Operating Rod. Lever, Clutch Operating Rod. Lever, Clutch Operating Arm, Governor Speed Control Rod, Throttle. Spring, Governor Speed Change. Arm, Governor Speed Control Lever, Speed Change Pilot, Speed Change Rod, Carburetor Throttle Lever, Magneto Operating	223803-228220	402040-404557	0-15000-0-15172	١,
C	1749 R	Clip Clutch Operating Rod	224100-		0-15000-	
č	2017 R	Lever, Clutch Operating			0-15000-	
č	2056 R	Arm, Governor Speed Control	228221-	404558-404809	0-15173-	
Č	2063 R	Rod, Throttle	228221-	404558-404809	0-15173- 0-15173-	
C	2073 R	Spring, Governor Speed Change	228221-	404333- 404810-	0-15115-	
C	2203 R	Arm, Governor Speed Control		404810-		•
Č	2226 R	Lever, Speed Change		404810-		
C	2227 R 2228 R	Rod Carburetor Throttle		404810-		1
č	2229 R	Lever. Magneto Operating		404810-		
č	2245 R	Link, Spark Control		404810-	<i></i>	
č	2246 R	Lever, Magneto Operating Link, Spark Control Arm, Spark Control		404810-		
C	2247 R	Shaft, Spark Control Lever, Clutch		404810- 404810-		1
Č	2278 R					1
č	2279 R 2280 R	Quadrant, Clutch LeverSupport, Control Lever and Steering		404810-		
C	2281 R	Support. Control Lever and Steering				
	2201 20	Shaft		404810-		
C	2282 R	Lever, Spark and Throttle Control		404810-		
Č	2283 R	Quadrant, Control		404810-		
Ç	2284 R			404810-	1	
č	2285 R	Rod, Magneto Control		404810-		
C	2286 R 2379 R	link thirch Lever Spring	· · · · · · · · · · · · · · · · · · ·	[0-15413-	1
Ď	87 R	Lever Spark and Speed Control	200111-	400000-404809	0-15000-	İ
D	157 R	End. Carburetor, Spark and Speed		400000	0-15000-	!
_		Control Rod Bolt, Clutch Operating Lever Yoke, Clutch Operating Rod Washer, Speed Change Lever Pin, Clutch Rod Yoke Polt Clutch Lever Pivot	200111-	! 400000- ! 400000-401328	0-10000-	
Ď	330 K	Vales Clutch Operating Rod	200111-	400000-	0-15000-	-
D	453 B	Washer Speed Change Lever	200111-	400000-	0-15000-	
Ď	1994 R	Pin. Clutch Rod Yoke	200111-	400000-	0-15000-	
D	2031 R	Boit, Clatch Bever 1100	(000111 001000	404810- 400000-402039	1	1
E	2057 R	Washer on Throttle Rod	228221-	404558-	0-15173-	
TT	7759	Alemite Fitting No. 1610, Control		Ì .		i
0 L	, 1100	Quadrant	200111-	400000-	0-15000-	;
K	2172 R		200111-	400000-	0-15000-	
		CO AND AND AND AND AND AND AND AND AND AND	1	:		1
* A	A 359 R		223803-	402445-		١.
Ā		Breather Complete		402040-402444	0 15000	١.
	C 762 R	Stack, Breather.		404810-	0-13000-	
A	C 934 R	Breather Complete. Stack, Breather. Body, Breather, and Crankcase Cover Body, Breather, Complete.	223803-	402442-404809	0-15000-	
	D 918 R 1949 R	Clamp Breather Stack	223803-	402442-	0-15000-	į
ת. ת		Spring Breather Stack Clamp	223803-	402442-	0-15000-	i
ת*		Gasket Breather Filter	223803-	402442-	0-15000-	1
ŧĎ		Core Breather Filter	223803-	402442-	0-15000- 0-15000-	
*D	1957 R	Gasket, Breather Cover	223803- 223803-	402442- 402442-	0-15000-	
*D			223803-	402442-	0-15000-	
*₽				402040-40244	4	. .
·K *K		Washer, Breather Stack Clamp	223803-	402445-	0-15000-	1
_		CRANKCASE VENTILATOR				ĺ
	1705 R	Gland, Ventilator Packing	. 223803-	402040-40480		
		Pine. Ventilator	.	402040-40244	4	•
*C		I min' vy 12 in Aim Cloome	r	402445-40480	9 0-15000-0-1541	,
	1708 R	Tube, Ventilator, in Air Cleane	1 000000 0000*			41
*000	1708 R 1828 R	Cover	. 223803-22921			8
*000	1708 R 1828 R 1829 R	Cover	223803-229213	402445-40480	9 0-15000-0-1558	
*000 00	1708 R 1828 R 1829 R 1833 R	Cover	223803-229213	402445-40480	9 0-15000-0-1558 7 0-15000-0-1517 9	2
*000	1708 R 1828 R 1829 R 1833 R 1988 R	Cover	223803-22921 223803-230513 223803-228220 200111-223803	3 402445-40480 0 402445-40455 2 400000-40203 404558-40480	9 0-15000-0-1558 7 0-15000-0-1517 9	2

^{*}Also repairs for tractors equipped with AC 870 R or AC 871 R Breather and Ventilator Assemblies.

	_ 1			Serial Number		Plat
	Part imber	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No.
		CRANKCASE VENTILATOR —Continued				
C	2268 R	Nut. Ventilator Pipe Packing		404810-		3
C	2269 R	Gland, Ventilator Pipe Packing		404810-	. 	3
Ç	2270 R	Washer, Ventilator Pipe Packing.	000514	404810-	0-15589-	3
*C	2421 R	Pipe, VentilatorNut, Ventilator Pipe Packing	230514-	402040-402444	0-10009-	3
Ď	401 R	Elbow. Ventilator Pipe		402040-402444		3
ĸ	2049 R	Elbow, Ventilator Pipe Bushing (Reducing) Elbow to Governor Case				3
		LUBRICATING SYSTEM				
		AND OIL PUMP	(010005 010440	400719- ·	0-15000-	6
AC	2 445 R	Strainer, Oil, Complete	213695-218448 219333-	400/13-	0-10000-	
AC	2 451 R	Strainer, Oil, AC445 R, Complete		400000 400710		6
	200	with Pipe (Substitute for C123 R)		400000-400718		"
AC	C 1152 R	Gears, Oil Pump Idler and Oil-Pump	with the second second	•		
		Drive (Substitute for 1 C725 R	000111	400000	0-15000-	6
C	168 R	and 1 C726 R) Gear, Oil Pump Drive	200111- 200111-	400000- 400000-	0-15000-	6
č	169 R	Body, Oil Pump	200111-	400000-	0-15000-	6
_		· · ·	213695-218448		0-15000-	6
C	366 R	Pipe, Oil Strainer	1219333-	400719-	1	6
Ç	401 R	Pin, Oil Pump Cover	200111-	400000-	0-15000- 0-15000-	6
C	604 R	Gasket, Oil Pump Body to Case	200111-	400000-	1	1
C	674 R	Gasket, Strainer Flange	218449-219332	400000-400718		6
C	1115 R	Screen, Strainer	200211-	400000-	0-15000-	(
C	1490 R	Gasket, Oil Pump Strainer Body	1010005 010440	400719-	0-15000-	1 6
			219333-			. 6
Ď	29 R	Cover, Oil Pump Gear	200111-223802	400000-402444	0-15000-	1 6
D	162 R 180 R	Valve, Oil Pump Cover Relief Nut. Relief Valve	200111-	400000- 400000-	0-15000-	
Ď	302 R	Gasket, Oil Pump Cover, .015'		400000-	0 10000	
_	502 15	Thick	200111-	400000-	0-15000-	1.6
D		Spring, Relief Valve	200111-223802	1 711111		. 6
D	453 R	Washer, Relief Valve Pressure (8	000111	400000-	0-15000-	
-	ASC D	used)	200111- 200111-	400000- 400000-	0-15000- 0-15000-	
D D	456 R 465 R	Elbow, Discharge Pipe		400000-	0-15000-	! (
Ď		Body, Oil Level Test Cock	200111-	400000-	0-15000-	'
ō		Plug, Oil Level Test Cock	. 200111-	402445-	0-15000-	
D		Spring, Relief Valve	. 223803-	402445-	0-15000-	
D		Cover, Oil Pump Gear	. 223803-			1
D	2081 R	Packing Washer, Oil Pump Dis	223803-	402445-	0-15000-	-
E	2207 R	Key, Oil Pump Drive Gear to Shaf		400000-	0-15000-	
_	2201 23	OIL FILTER AND INDICATOR	1			1
	*1450 R	Pipe Plug, Oil Filter Head		402445-	0-15000-	
	*1452 R	Pine Plug, Oil Filter Head	223803-	402445-	0-15000-	
A	259 R	Bushing, Oil Filter Outlet	. 227406-	404386-	0-15000-	
A	C 434 R	Body, Oil Indicator, D815 R, with	200111-211675	400000 40099	9	
* 4	C 954 R	Tee		402445-	0-15000-	
	D 290 R	Body with Bolts, Oil Filter Piston with Rod, Oil Indicator		400000-	0-15000-	1
	D 833 R	Element, Oil Filter with Plunge		100000		
		and Handle Base, D2056 R, Oil Filter with	. 223803-	402445-	0-15000-	
*A	D 883 R			400445	0 15000	
*~	1010 19	PlugsOutlet, Oil Filter	. 223803- . 223803-227405	402445- 402445-40438	0-15000- 5	
*C		Adapter, Oil Filter Body to Base.	. 220000-221400	402445-40456 404810-	1	
č		Gasket, Oil Filter Adapter to Bas	el	.! 404810 –		
C	2174 R	Gasket, Oil Filter Body to Base.	.	404810-		
C	2175 R	Stud, Oil Filter Adapter to Body.	.l	404810-		\cdot
*D		Valve, Oil Filter By-Pass	. 223803-	402445-	0-15000-	
*D		Nut, Oil Filter By-Pass Valve		402445— 2 400000–40244	0-15000-	
*D		Gasket, Oil Indicator Body Spring, Oil Indicator	200111-223802	400000-40244	0-15000-	
Ď		Nut. Discharge Pipe Packing	200111-	400000-	0-15000-	
				1		1
*D) 465 R	Gasket, On Thice Dy-Lass valv	. 223803-	402445	0-15000-	

^{*}Also repairs for tractors equipped with AC754 R Oil Filter Assembly which can be identified by the casting number D1987 R appearing on the filter body.

**Also repairs for tractors equipped with AC1168 R Vortox Air Cleaner.

	NAME AND DESCRIPTION		Serial Number		_
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plat No.
	OIL FILTER AND INDICATOR				
	-Continued				
D 815 R	Body, Oil IndicatorBody, Oil Filter	211676-223802			6
*D 1987 R	Body, Oil Filter	223803-	402445-	0-15000-	6
D 1989 R	Head, Oil Filter	223803-		0-15000-	6
*D 1991 R	Gasket, Oil Filter Base to Case	223803-	402445-	0-15000-	6
*D 1992 R	Gasket, Oil Filter Head		402445-	0-15000-	6
*D 1993 R	Gasket, Oil Filter Body to Base	223803-	402445-404809	0-15000-	6
*D 2001 R	Spring, Oil Filter Relief	223803-	402445-	0-15000-	6
*D 2002 R	Handle, Oil Filter Element Plunger		402445	0-15000-	6
*D 2004 R	Gasket, Oil Filter Element Plunger				
	Handle	223803-	402445-	0-15000-	6
*E 1976 R	Pipe Plug, Oil Filter Base Drain.	223803-	402445	0-15000-	6
*K 2525 R	Pipe Plug, Oil Filter Body and Oil				
	Filter Base	223803-	402445-	0-15000-	6
	OIL PIPES AND FITTINGS	i		İ	1
A 374 R	Nut, Solder Bushing	223803-	402445-	0-15000-	6
AC 227 R	Oil Pine Covernor	: 200111 <u></u> 211675:	400000-400329		6
AC 431 R	Oil Pine, Main Bearing, R. H	200111-	400000-	0-15000-	6
AC 431 R	Oil Pipe, Main Bearing, R. H Oil Pipe, Governor	211676-	400330-	0-15000-	6
*AC 731 R	Oil Pipe, Pump Discharge	223803-	402445-	0-15000-	6
AD 44 R	Oil Pipe, Main Bearing, L. H.	200111-223802	400000-402444		6
AD 819 R	Oil Pipe, Main Bearing, L. H. (Sub-		TOTON TOWATE	20000	3
	stitute for AC732 R)	223803-	402445-	0-15000-	6
C 629 R	Pipe, Pump to Indicator Discharge				
C 972 R	Oil Jet. Governor Case	200111-	400000-	0-15000-	6
C 1468 R	Tee, Oil Indicator Body	211676-223802	400330-402444		
D 392 R	Body, Solder Bushing	200111-	400000-	0-15000-	6
*D 417 R	Elbow, Solder Bushing		402445-	0-15000-	6
D 456 R	Elbow, Discharge Pipe, Ends			0-15000-	6
D 818 R	Bushing, Discharge Pipe to Indi-	:			-
	cator BodyGland, Solder Bushing	200111-223802	400000-402444	·	6
D 1935 R	Gland, Solder Bushing	223803-	402445-	0-15000-	6
E 2149 R	Nut, Solder Bushing		400000-	0-15000-	6
E 2150 R			400000-	0-15000-	6
	·		•		
AA 335 R	FUEL SYSTEM	200111 220642	400000-102200	0-15000-0-15656	7
AA 499 R	Clamp, Fuel Filter Adjusting Filter, Fuel	200111-230042	400000-402200	0-15000-0-15050	. +
AA 517 R	Poil Fuel Filter	200111-	402201-	0-15657-	. 7
AA 518 R	Bail, Fuel Filter. Nut and Washer, Adjusting	230643-		0-15657-	7
AA 519 R	Screen, Fuel Filter	200111-		0-15000-	
AA 2064 R	Bowl and Gasket, Sediment, Fuel		400000-	0-10000-	•
AA 2004 A	Filter (1 C1777 R and 1 C1778 R)		400000-	0-15000-	7
AC 102 R	Strainer, Gasoline, Complete		400000- 400000-	0-15000-	7
AC 116 R	Fuel Tank Complete		400000-		7
AC 183 R	Bracket, Fuel Tank, Front and		400000 -400000		•
HO 103 IL	Rear		400000403960		7
AC 205 R	Strainer, Fuel, Complete				
AC 768 R			403961-404809		7
AC 769 R	Gasoline Pipe Complete (Substitute				
	for AC389 R)		403961-404809	0-15000-0-15588	7
AC 769 R	Fuel Pipe				
AC 770 R	Bracket, Fuel Tank, Front and		İ		′
	Rear	226402-	403961-404809	0-15000-	7
AC 787 R	Fuel Tank with Insulation Baffle,				
	Complete		403961-404809	0-15000-	7
AC 932 R	Fuel Pine Complete		404810-		7
AC 963 R			404810 -		
AC 964 R	Gasoline Pipe Complete		404810-		7
AC 965 R	Support Fuel Tank Rear	i	404810-		
AC 988 R	Fuel Tank		404810-	0-15000- 0-15000-	7
AC 1079 R	Body and Valve, Fuel Filter	200111-	400000-	0-15000-	7
AC 1080 R	Fuel Tank Body and Valve, Fuel Filter Valve, Fuel Filter Gasoline Pipe Gasoline Pipe Complete	200111-	400000-	0-15000-	
AC 1166 R	Gasoline Pipe	230514-	400000-	0-15589-	7
AD 41 R	Gasoline Pipe Complete	200111-226401	400000-403960		
AD 44 R	Fuel Pipe Complete	223803-	402040-404809		7
AD 78 R	Cap Complete, Fuel Tank Filler	200111-226401			7
AD 97 R	Screw Head, D363 R, and Stud,				1
i	Fuel Tank Filler Cap	200111-226401	400000-403960		7
AD 680 R	Cock, Three-Way Fuel (Replaces				ļ
::: = :	AD320 R)	200111-	400000-	0-15000-	7
AD 709 R	Cap, Filler, Complete, Fuel Tank	000400		0 17000	_
:	and Gasoline	226402-	403961-	0-15000-	7
······································	and Gasonne	440404	-100001-	J 10000-	<u></u>

^{*}Also repairs for tractors equipped with AC754 R Oil Filter Assembly which can be identified by the casting number D1987 R appearing on the filter body.

ł			Serial Number		Pla
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No
4550 5	FUEL SYSTEM—Continued	200111-	400000-	0-15000-	7
1778 R	Gasket, Fuel Filter	226402-	403961-404809	:	7
1929 R	Insulation Sheet, Fuel Tank Insulation, Fuel Tank, End	226402-	403961-404809		7
1934 R	Band Retainer, Fuel Tank Insulation		403961-404809	0-15000-0-15412	77
1935 R 1936 R	Extension, Fuel Tank Strainer	226402-	403961-	0-15000-	
2254 R	Support, Fuel Tank, Front	220402			7
2254 R 2378 R	Body, Fuel Filter	200111-	400000-	0-15000-	7
19 R	Cap, Gas Filler	200111-226401	400000-403960		1 7
80 R	Filler Flange, Fuel Tank, Gas and		_		! _
	Fuel	200111-226401	400000-403960		;
82 R	Outlet Flange, Fuel Tank, Gas and		400000	0 17000	
	Fuel	200111-	400000-	0-15000-	
126 R	Baffle, Filler Cap	200111-226401	400000-403960	• • • • • • • • • • • • • • • • • • •	: 1
288 R	Gasket, Fuel Tank Filler Cap	200111-226401	400000 403960		١.
319 R	Cap, Fuel Tank Filler	200111-226401	400000 402060		
362 R	Bar, Filler Cap Clamp	200111-226401	400000-403300	0-15000-	,
468 R	Cushion, Fuel Tank Bracket	200111-	400000-404000	0-10000-	!
1837 R	Filler Flange, Fuel Tank, Gas and	226402-	403961-	015000-	٠.
2122 R	FuelPacking Washer, Three-Way Cock	250405-	400001-		
2122 R	(For AD680 R)	220543-	402040-	0-15000-	: 3
2149 R	Nut, Solder Bushing		400000-	0-15000-	
2150 R	Gland, Solder Bushing	200111-	400000-	0-15000-	: /
2100 10	Giddle, Dordor Daning.				:
	HOOD		/ · · · · · · · · · · · · · · · · · · ·	,)
C 178 R	Hood Complete	(200211-212554	400000-400537	!	Н,
C 110 E	Hood Complete	223803-226401	402445-403960		
C 491 R	Hood Complete	212555-223802	400538-402444	0 15000	
C 771 R	Hood Complete	226402-	403901-404009	0-15000-	
C 958 R	Hood Complete.	000111 910694	404010-		
941 R	Hood Complete. Clip, Hood Clip, Hood	200111-219004	402040-	0-15000-	: }
1573 R	Cnp, nood	213000	102010	0 2000	:
	COOLING SYSTEM				
27 R	Washer, Upper, Water Pipe Cap			0 15000	١,
	Screw	200111-	400000-	0-15000-	
2205 R	Stud, Radiator, to Front End	200111-	400000-	0-15000-	
2093 R	Pipe Plug, Water Drain (Substitute	900111	404810-	0-15000-	
	for E2142 R)	200111-	404010-	0-10000-	:
.C 772 R	Shroud, Radiator, and Cooling Baffle	226402-	403961-404809	0-15000-	
0 700 D	with Support		200001 101000		!
.C 788 R	Bearing Cup Pin	226402-	403961-404809	0-15000-	
C 909 R	Pipe, Upper Water, C2135 R, with		l	i	
.C 909 A	Bearing Cup Pin	212493-226401	400530-403960		:
C 953 R	Shroud, Fan, Complete	212200 220401	404810-		
C 1109 R	Cora. Radiator (Substitute for C-		(400000-403960	!	1
~	1017 R and C1729 R)		404810-		:
C 1120 R	Core, Radiator (Substitute for C-		404010-	1	;
	1940 R)	226402-	403961-404809	0-15000-	:
D 86 R	Cap, Filler, Radiator, Complete	200111-	400000-	0-15000-	
D 97 R	Screw Head, D363 R, and Stud,	.1	400000	0 15000	1
	Radiator Filler Cap	200111-	400000-	0-15000- 0-15000-	1
D 922 R 256 R	Cap, Radiator (For Motometer)	200111-	400000-	1 1 1 1 1 1 1 1	
256 R	Tank, Radiator Top	200111- 200111-226401	400000-404809 400000-403960	1	;
257 R	Side, Radiator		400000-400500	0-15000-	1
- 258 R 259 R	Pipe Connection, Radiator Lower	200111-			1
259 R	Water	200111-	400000-404809	0-15000-	1
307 R	Pipe, Upper Water	200211-212492	400000-400529		
332 R	Tank. Radiator Bottom				. :
616 R	Hose Radiator	200111-	400000-	0-15000-	1
617 R	Hose Clamp	1 200111-	400000-	0-15000-	i
	Strap, Radiator	200111-	400000	0-15000-	:
928 R	Gasket, Radiator, Top and Bottom	200111-	400000-	0-15000-	
1004 R	Screen over Radiator Tubes	200111-	400000-	0-15000-	.!
1004 R	Chand Dedictor Lower For	200111-229523	400000-404745	0-15000-0-15463	> ;
1004 R 1023 R 1522 R	Shroud, Radiator Lower Fan			1	1
1004 R 1023 R	Gasket, Upper and Lower Water	•			1
1004 R 1023 R 1522 R	Gasket, Upper and Lower Water Pipes to Radiator (Substitute for C 589 R)		400000-404809	0-15000-	-

Color Name				Serial Number		
C 1810 R Side, Radiator, R. H		NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
C 1816 R Drain, Plug, Radiator C 1910 R Side, Radiator, R. H. 226402 409861-404809 0-15000-		CONTRACTOR OF THE CONTRACTOR O				
C 2223 R	C 1965 P	Drain Plug Radiator		400000_404809		9
C 2223 R		Side Radiator R. H.	226402-	403961-404809	0-15000-	9
C 2223 R		Side Radiator, L. H.	226402-	403961-404809		ğ
C 2223 R		Support Cooling Baffle	226402-	403961404809		9
C 2223 R Outlet, Radiator C 2229 R Pipe, Upper Water, R. H		Shroud. Radiator Lower Fan	229524-	404746-404809		9
C 2223 R Outlet, Radiator C 2250 R C 2250 R Pipe, Lipper Water, R. H		Tank, Radiator Top		404810-		
C 2223 R Outlet, Radiator C 2250 R C 2250 R Pipe, Lipper Water, R. H	C 2221 R	Tank. Radiator Bottom		404810-		
C 2223 R C Deflector, Fan Blast	C 2222 R	Side. Radiator	· • · · · · · · · · · · · · · · · · · · ·	404010-		
C 2297 R C 2290 R C 1990 Fipe. Upper Water, R. H. 904610- C 2293 R C 2293 R C 1297 R	C 2223 R	Outlet Radiator		404810 -		9
C 2390 R C 2391 R Pipe, Upper Water, R. H. 404810— C 2391 R Pipe, Upper Water Pipe and In- let Elbow Water Pipe and In- let Elbow Water Pipe and In- let Elbow Water Pipe and In- let Elbow Baffle, Radiator Filler Cap. 200111— 400000— 0-15000— Gasket. Upper Water Pipe to Cylin- Gasket. Upper Water Pipe to Cylin- Gasket. Upper Water Pipe to Cylin- Gasket. Upper Water Pipe to Cylin- Gasket. Upper Water Pipe to Cylin- Gasket. Upper Water Pipe to Cylin- Gasket. Radiator Cap. 200111— 400000— 0-15000— D 305 R Bar, Filler Cap Clamp. 200111— 400000— 0-15000— D 473 R Date Cap. 200111— 400000— 0-15000— D 473 R Stud, Radiator Cap. (Motometer). 200111— 400000— 0-15000— D 473 R Stud, Radiator Cap. (Motometer). 200111— 400000— 0-15000— D 473 R Stud, Radiator Cap. (Motometer). 200111— 400000— 0-15000— D 473 R Court And Curtain (For AC- 435 R Radiator Curtain (For AC- 435 R Radiator Curtain Assembly). Baffle, Radiator, Assembly, Complete Addition Guard and Curtain Assemblies. 200111— 200111— 400000— 0-15000— AC 435 R Guard and Curtain, Radiator, Assembly. 200111— 200111— 400000— 0-15000— AC 773 R Guard Radiator, with Bolts 200111—223802 AC 776 R Guard Radiator, with Bolts 200111—223802 AC 777 R Guard, Radiator, With Bolts 200111—223802 C 1089 R C Guard, Radiator Curtain, Radiator, Assembly. 200111—223802 C 1089 R C Guard, Radiator Curtain (For AC- 435 R Radiator Curtain Assembly). 200111—223802 C 1089 R R Radiator Curtain Assembly. 200111—223802 C 1081 R Radiator Curtain Assembly. 200111—223802 C 1081 R Radiator Curtain Assembly. 200111—223802 C 1812 R R Radiator Curtain Assembly. 200111—223802 C 1813 R R Radiator Curtain Assembly. 200111—223802 C 1814 R Radiator Guard and Curtain Assemblies 200111—223802 C 1814 R R Radiator Curtain Assembly. 200111—223802 C 1814 R R Radiator Curtain Assembly. 200111—223802 C 1814 R R Radiator Curtain Assembly. 200111—223802 D 379 R R Radiator Curtain Assembly. 200111—223802 D 379 R R Radiator Curtain Assembly. 200111—20000—0-15000—0-15000—0-15000—0-15000—0-15000—0-15000—0-1500		Deflector, Fan Blast		404810-		
C 2992 R Clamp, Upper Water Pipe and In- let Elbow Gasket. Upper Water Pipe and In- let Elbow Baffle, Radiator Filler Cap. 200111— 400000— 0-15000— Gasket. Upper Water Pipe to Cylin- dasket. Upper Water Pipe to Cylin- Gasket. Radiator Cap. 200111— 400000— 0-15000— Baffle, Radiator Cap. Gasket. Radiator. Cap. Gasket. Radiator. Radiator. Assembly. Cap. Gasket. Radiator Cap. Gasket. Rad		Pipe, Upper Water, R. H		404810-		
C 2293 R Gasket. Upper Water Pipe and In-let Elbow Baffie, Radiator Filler Cap. 200111- 400000- 0-15000- Gasket. Upper Water Pipe to Cylinder Head. 200111- 400000- 0-15000- 0-1		Pipe, Upper Water, L. H		404810-		9
C 2293 R Gasket. Upper Water Pipe and In-let Elbow Baffie, Radiator Filler Cap. 200111- 400000- 0-15000- Gasket. Upper Water Pipe to Cylinder Head. 200111- 400000- 0-15000- 0-1	C 2292 R	Clamp, Upper Water Pipe and In-		·		ĺ _
D		let Elbow		404810-		9
D	C 2293 R	Gasket, Upper Water Pipe and In-				!
D	5	let Libow		404810-	0.15000	9
D		Bame, Kadiator Filler Cap	200111-	400000-	n-19000-	9
D 319 R D 362 R Bar, Filler Cap Clamp 200111- 400000- 0-15000- 0-1	ມ 305 R			400000	0 15000	_
D 362 R D 473 R Gasket, Radiator Cap 200111- 400000- 0-15000- D 473 R Gasket, Radiator Cap, Motometer) D 2102 R D 21	D 040 T	Con Podiotor Eller	200111-			9
D 2101 R D 2102 R D 2102 R D 2102 R D 2102 R D 2102 R Nut, Radiator Cap (Motometer) Nut, Radiator Cap (Motometer)		Dan Filler Con Clamp	200111-			9
D 2101 R D 2102 R D 2		Gasket Radiator Can	200111-			9
D 2101 R D 2102 R D 2		Stud Radiator Outlet	200111-			9
D 2388 R Clamp, Radiator Cap (Motometer) 200111- 40000- 0-15000-		Raffle Radiator Can (Motometer)	200111-			9
D 2388 R Clamp, Radiator Cap (Motometer) 200111- 40000- 0-15000-		Nut. Radiator Can	200111-			9
RADIATOR GUARD AND CURTAIN Spring Radiator Curtain (For AC-435 R Radiator Curtain Assembly) Washer, Radiator Curtain Roller (For all Radiator Radiator, Courtain, Radiator, Complete Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, with Bolts Curtain, Radiator, Assembly Curtain, Radiator Curtain, Radiator, Assembly Curtain, Radiator Curtain, Radiator, Assembly Curtain, Radiator Curtain, Radiator, Complete Cloth, Radiator Curtain (For AC-48 R Radiator Curtain Assembly) Culth, Radiator Curtain, Radiator, Curtai		Clamp, Radiator Cap (Motometer)	200111-			9
372 R Spring, Radiator Curtain (For AC-435 R Radiator Curtain Assembly) Washer, Radiator Curtain Roller (For all Radiator Gurdan and Curtain Assembly) 200111- 400000- 0-15000- Washer, Radiator Curtain Roller (For all Radiator In Radiator, Assembly) Complete Curtain Roller (For all Radiator) Curtain Roller (For AC-435 R Radiator) Curtain Roller (For AC-435 R Radiator) Curtain Roller (For AC-435 R Radiator) Curtain Roller (For AC-435 R Radiator) Curtain Assembly) Curtain Radiator, Assembly Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Radiator Curtain Assembly Curtain Radiator Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Radiator Curtain Assembly Curtain Radiator Curtain Assembly Curtain Radiator Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Radiator Curtain Assembly Curtain Radiator Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Radiator Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Assembly) Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (For AC-435 R Radiator Curtain Roller (Fo		,		,		-
Spring, Radiator Curtain (For AC-435 R Radiator Curtain Roller (For all Radiator Guard and Curtain Assembly) 200111- 400000- 0-15000- 200111- 400000- 0-15000- 200111- 223802 200111- 2						!
AC 435 R Radiator Curtain Assembly 200111- 400000- 0-15000-				:		
Washer, Radiator Gurtain Roller (For all Radiator Guard and Curtain Assembly)	372 R					
all Radiator Guard and Curtain Assemblies)				400000-	0-15000-	8
AC 435 R Curtain. Radiator, Assembly, Complete AC 723 R Guard and Curtain, Radiator, Complete AC 730 R Guard, Radiator, with Bolts AC 776 R Guard and Curtain, Radiator, Assembly AC 777 R Guard, Radiator AC 777 R Guard, Radiator AC 778 R Guard, Radiator Cloth, Radiator Cloth, Radiator Curtain (For AC-248 R Radiator Curtain Assembly) C 1090 R R Cloth, Radiator Curtain Assembly C 1483 R Cloth, Radiator Curtain Assembly C 1812 R R Radiator Curtain Spring (For AC435 R Radiator Curtain Assembly) C 1813 R R Roller, Radiator Curtain Assembly C 1814 R Roller, Radiator Curtain Assembly C 1814 R Roller, Radiator Curtain Assembles C 1814 R Roller, Radiator Curtain Assembles C 1814 R Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) C 1814 R Roller, Radiator Curtain (For all Radiator Guard and Curtain Assembles) C 1814 R Roller, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assembles) C 1814 R Roller, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assembles) C 1814 R Roller, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assembles) C 1814 R Roller, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assembles) D 379 R Sadiator Curtain, R. H. (For AC248 R Radiator Curtain, R. H. (For AC248 R Radiator Curtain, R. H. (For AC248 R Radiator Curtain Curtain Assemblies D 564 R B Roller Curtain, R. H. (For AC248 R Radiator Curtain Curtain Assemblies D 564 R Roller Curtain, R. H. (For AC248 R Radiator Curtain Curtain Assemblies D 564 R Roller Curtain, R. H. (For AC248 R Radiator Curtain Curtain Assemblies D 564 R Roller Curtain, R. H. (For AC248 R Radiator Curtain Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assemblies Curtain Assembles Curtain Assembles Curtain Assem	629 R					!
AC 435 R Curtain. Radiator, Assembly, Complete AC 730 R Guard and Curtain, Radiator, Complete Cuard, Radiator, with Bolts AC 776 R Guard and Curtain, Radiator, Assembly AC 777 R Guard, Radiator AC 777 R Guard, Radiator AC 779 R Guard, Radiator AC 779 R Guard, Radiator Cloth, Radiator Curtain, Complete Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembles Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assembles Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assembles Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assembles Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assembles Cloth, Radiator Curtain Cfor all Radiator Guard and Curtain Assembles Cloth, Radiator Curtain Cfo						-
Dete Guard and Curtain, Radiator, Complete Guard, Radiator, with Bolts 200111-223802		Assemblies)	200111-	400000-	0-15000-	8
AC 732 R Guard and Curtain, Radiator, Complete AC 730 R Guard, Radiator, with Bolts AC 760 R Guard and Curtain, Radiator, Assembly. AC 776 R Guard and Curtain, Radiator, Assembly. AC 777 R Guard, Radiator AC 778 R Guard, Radiator AC 778 R Guard, Radiator Curtain, Radiator, Complete. C 1089 R Cloth, Radiator Curtain (For AC-248 R Radiator Curtain Assembly) C 1483 R Cloth, Radiator Curtain (For AC-435 R Radiator Curtain (For AC-435 R Radiator Curtain (For AC-435 R Radiator Curtain (For AC-435 R Radiator Curtain Assembly) C 1812 R Cloth, Radiator Curtain Assembly C 1813 R Roller, Radiator Curtain Assembly C 1814 R Roller, Radiator Curtain (For AC-435 R Radiator Curtain Assembly) C 1814 R Roller, Radiator Curtain Assembly C 1815 R Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assembles) C 1814 R Cloth, Radiator Curtain Roller, Retain R	AC 435 R	Curtain, Radiator, Assembly, Com-	000111 000000	400000 400000		1
Dete Guard Radiator with Bolts 200111-223802 200111-226401		plete	200111-223802	400000-402039	:	¦ · · · ·
AC 730 R Guard, Radiator, with Bolts AC 760 R Guard Radiator, with Bolts AC 776 R Guard and Curtain, Radiator, Assembly AC 777 R Guard, Radiator AC 777 R Guard, Radiator AC 778 R Guard, Radiator AC 782 R Guard, Radiator Cloth, Radiator Curtain, Roder Cloth, Radiator Curtain (For AC-243 R Radiator Curtain Assembly) Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain (For AC-435 R Radiator Curtain Assembly) Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain Assembly) Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies Clip, Radiator Curtain (For all Radiator Guard and Curtain Assembles) Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assemblies Cloth, Radiator Curtain, R. H. (For AC248 R Radiator Curtain) Curtain Assembles Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembly Cloth, Radiator Curtain Assembly Cloth, Ra	AC 723 R	Guard and Curtain, Radiator, Com-	900111 900000			
AC 760 R Guard Radiator, with Bolts 400000-403960 AC 776 R Guard and Curtain, Radiator, Assembly 226402- 0-15000- AC 777 R Guard, Radiator 226402- 0-15000- AC 782 R Guard and Curtain, Radiator, Complete 226402- 0-15000- C 1089 R Cloth, Radiator Curtain (For AC-245 R Radiator Curtain, Wood (For AC248 R Radiator Curtain, Wood (For AC248 R Radiator Curtain Assembly) 200111-223802 C 1483 R Radiator Curtain (For AC-435 R Radiator Curtain Assembly) 25trap, Radiator Curtain (For AC-435 R Radiator Curtain Assembly) 25trap, Radiator Curtain Assembly 200111-223802 C 1812 R Clip, Radiator Curtain Assembly 200111-223802 C 1813 R Radiator Guard and Curtain Assemblies 200111-223802 C 1814 R Radiator Guard and Curtain Assemblies 200111- 20000- 0-15000- 0-	AC 720 P	Guard Radiator with Rolts	200111-223802			1 0
AC 776 R Guard and Curtain, Radiator, Assembly 226402 0-15000 AC 777 R Guard, Radiator 226402 0-15000 AC 778 R Guard, Radiator 226402 0-15000 AC 782 R Guard, Radiator 226402 0-15000 AC 782 R Guard, Radiator 20000 40000 402441 C 1089 R Cloth, Radiator Curtain (For AC-248 R Radiator Curtain, Mood (For AC248 R Radiator Curtain, Wood (For AC248 R Radiator Curtain (For AC435 R Radiator Curtain (For AC435 R Radiator Curtain Assembly) C 1484 R Strap, Radiator Curtain (For AC435 R Radiator Curtain Assembly) C 1812 R Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain Assembly) C 1813 R Radiator Guard and Curtain Assembles 200111 223802 400000 402039 C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111 200111 20000 0-15000 C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111 200111 200111 20000 0-15000 C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111 200111 20000 0-15000 C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) 200111 20000 0-15000 0-15000 C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) 200111 20000 0-15000		Guard, Radiator, With Dons	-00111-220401	400000-403060		
AC 776 R Guard and Curtain, Radiator, Assembly 226402 0-15000 AC 777 R Guard, Radiator 226402 0-15000 AC 778 R Guard, Radiator 226402 0-15000 AC 782 R Guard, Radiator 226402 0-15000 AC 782 R Guard, Radiator 20000 40000 402441 C 1089 R Cloth, Radiator Curtain (For AC-248 R Radiator Curtain, Mood (For AC248 R Radiator Curtain, Wood (For AC248 R Radiator Curtain (For AC435 R Radiator Curtain (For AC435 R Radiator Curtain Assembly) C 1484 R Strap, Radiator Curtain (For AC435 R Radiator Curtain Assembly) C 1812 R Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain Assembly) C 1813 R Radiator Guard and Curtain Assembles 200111 223802 400000 402039 C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111 200111 20000 0-15000 C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111 200111 200111 20000 0-15000 C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111 200111 20000 0-15000 C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) 200111 20000 0-15000 0-15000 C 1814 R Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) 200111 20000 0-15000	AC 760 R	Guard Radiator, with Bolts		404510-		8
Sembly Guard, Radiator Curtain, Radiator Curtain Complete Acc 779 R Guard and Curtain Curtain Complete Acc 782 R Curtain C	AC 776 R			404010-		ì
Guard and Curtain, Radiator, Complete 400000-402441	AU IIUA	sembly	226402-		0-15000-	8
Guard and Curtain, Radiator, Complete 400000-402441	AC 777 R	Guard. Radiator	226402-		0-15000-	8
Guard and Curtain, Radiator, Complete 400000-402441		Guard, Radiator		403961-404809		8
Dete		Guard and Curtain, Radiator, Com-				1
C 1090 R Cloth, Radiator Curtain (For AC- 248 R Radiator Curtain Assembly) Roller, Curtain, Wood (For AC248 R Radiator Curtain (For AC- 435 R Radiator Curtain (For AC- 435 R Radiator Curtain (For AC- 435 R Radiator Curtain (For AC- 435 R Radiator Curtain (For AC- 435 R Radiator Curtain Assembly) Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies D 564 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies Bracket, Radiator Curtain, R. H. (For AC248 R Radiator Curtain		plete		400000-402441		8
C 1090 R Roller, Curtain, Wood (For AC248 R Radiator Curtain, Wood (For AC248 R Radiator Curtain Assembly) 200111-223802 200111-2238	C 1089 R	Cloth, Radiator Curtain (For AC-	1			i
C		248 R Radiator Curtain Assembly)	200111-223802			8
C 1483 R Cloth, Radiator Curtain (For AC- 435 R Radiator Curtain Assembly) Strap, Radiator Curtain Assembly) C 1812 R Clip, Radiator Curtain Assembly) Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies). C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies). D 379 R Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies). D 564 R Spring, Radiator Curtain, R. H. (For AC248 R Radiator Curtain Curtain Assemblies. D 564 R Radiator Curtain (For AC248 R Radiator Curtain Curtain Assemblies. D 564 R Radiator Curtain (For AC248 R Radiator Curtain Curtain Assemblies. D 564 R Radiator Curtain (For AC248 R Radiator Curtain Curtain Assemblies. D 564 R Radiator Curtain (For AC248 R Radiator Curtain Curtain Assemblies. C 1812 R Cloth, Radiator Curtain Assembly 200111-223802 400000-402039 C 1813 R 200111-223802 400000-402039 C 200111-223802 400000-402039	C 1090 R	Roller, Curtain, Wood (For AC248 R		:		_
C 1484 R Strap, Radiator Curtain Assembly Strap, Radiator Curtain (For AC 435 R Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies 200111-223802 400000-402039 C 1813 R Radiator Guard and Curtain Assemblies 200111-223802 400000-402039 C 1813 R Radiator Guard and Curtain Assemblies 200111- 200111- 400000- 0-15000- C 1814 R Radiator Guard and Curtain Assemblies 200111- 200111- 400000- 0-15000- D 379 R Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies 200111- 200111- 400000- 0-15000- D 564 R Bradiator Curtain Roller, Retaining (For AC248 R Radiator Curtain Roller, Reference Rediator Curtain Assemblies 200111- 200111- 200111- 200111- 200111- 200111- 200111- 200111- 200111- 200111- 20000- 200111- 2001	a	Radiator Curtain Assembly)	200111223802			8
C 1812 R Strap, Radiator Curtain (For AC-435 R Radiator Curtain Assembly) Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies C 1813 R Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) Cloth, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) D 379 R Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) Bracket, Radiator Curtain, R. H. (For AC248 R Radiator Curtain	C 1483 R	Cloth, Radiator Curtain (For AC-	000111 000000			
C 1812 R Clip, Radiator Curtain Assembly Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies 200111- 200111- 20000- 0-15000-			200111-223802	400000-402039		8
C 1812 R Clip, Radiator Curtain Spring (For AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies	U 1484 R			400000 400000		8
AC435 R Radiator Curtain and also all Radiator Guard and Curtain Assemblies	C 1910 P	Clin Padiator Curtain Assembly)	200111-223802	. 400000-402039 :		٥
all Radiator Guard and Curtain Assemblies Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies) D 379 R Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies) Bracket, Radiator Curtain, R. H. (For AC248 R Radiator Curtain	O 1912 K	ACASE Redistor Curtain Spring (For				1
Assemblies College Radiator Curtain (For all Radiator Guard and Curtain Assemblies) 200111- 400000- 0-15000-				1 1		1
C 1813 R Roller, Radiator Curtain (For all Radiator Guard and Curtain Assemblies)				400000-	0-15000-	8
Semblies Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies Curtain Assembli	C 1813 P	Roller Radiator Curtain (For all	200111-	1	- 10000	"
Semblies Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies Curtain Assembli	O 1010 W	Radiator Guard and Curtain As-				
C 1814 R Cloth, Radiator Curtain (For all Radiator Guard and Curtain Assemblies). 200111- 400000- 0-15000- D 379 R Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies		semblies)	200111-	400000-	0-15000-	8
Radiator Guard and Curtain Assemblies)	C 1814 R	Cloth. Radiator Curtain (For all			1	
semblies)		Radiator Guard and Curtain As-	1	!		
D 379 R Spring, Radiator Curtain Roller, Retaining (For all Radiator Guard and Curtain Assemblies		semblies)		400000-	0-15000-	8
taining (For all Radiator Guard and Curtain Assemblies	D 379 R	Spring, Radiator Curtain Roller, Re-				1
Curtain Assemblies		taining (For all Radiator Guard and	1			
D 564 R Bracket, Radiator Curtain, R. H. (For AC248 R Radiator Curtain		Curtain Assemblies	200111-	400000-	0-15000-	8
(For AC248 R Radiator Curtain	D 564 R	Bracket, Radiator Curtain, R. H.		i		1
		(For AC248 R Radiator Curtain	1	1		
Assembly)		Assembly)		il	· 	8
			1	:	•	l

D	NAME AND DESCRIPTION		Serial Number		Plat
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No.
	PARIAMOR CHARR AND				
	RADIATOR GUARD AND CURTAIN—Continued				
572 1	Bracket, Radiator Curtain, L. H.				
• • • •	(For AC248 R Radiator Curtain				8
	Assembly)		· · · · · · · · · · · · · · · · · ·		٥
D 1856 I	Spacer, Radiator Guard (For all Radiator Guard and Curtain As-				
	semblies)		400000-	0-15000-	8
D 1887					
	all Radiator Guard and Curtain		400000	0-15000-	8
	Assemblies)	200111-	400000-	0-19000-	0
	FAN				
27	Washer, Fan Shaft, Front	200111-	400000-	0-15000-	4
1476	B Elbow, Fan Bearing, Front	230514-		0-15589-	4
AC 49	Fan, Complete, D92 R	200111-	400000-404809	U-15000-	
AC 933 AC 977 .	Housing with Sleeve Pin Front Fan		404010		-
ao Jii .	Booring C2205 P	`	404810-		4
AD 1872	R Disk. Fan Drive (Set of 2 D396 R)	200111-	400000-	0-15000- 0-15000-	4
C 308	to Gear, ran Drive Devel	200211-	400000-404809	U-15000-	4
C 310 C 312	Housing, Kear Fan Bearing	200211-226401	400000-400529		4
C 312 C 381	K Cover. Front Fan Bearing	212493-	400000-404000	0-15000-	4
C 1194	R. Shaft, Fan	200211-212492	400000-400529		4
C 1198	R Nut, Adjusting, Front Fan Bearing	200211-212492	400000-400529		4
C 1199	R Lock for Front Fan Bearing Adjust-	200211-212492	400000-400529		4
C 1207	ing Nut	200211-212432	400000-404809	0-15000-	4
C 1217		200211-212492	400000-400529	0-15000-	4
C 1469	R Retainer, Felt, Rear of Front Fan	.			
	Shaft Bearing (In Upper Water				4
C 1525	Pipe)	210251-226401	400024-403960		4
C 1526	R Spacer, Front Fan Bearing	212493-226401	400530-403960		4
C 1527		212493-	400530-404809	0-15000- 0-15000-	4
C 1528	R Pin. Front Fan Shaft Bearing Cup	212493-	400530-	0-15000-	4
C 1529 C 1530	R Spring, Front Fan Bearing	212493-226401	400530-403960 400530-	0-15000-	4
C 1530 C 1944	n : Snieid, Dust, Front Fan Dearing	226402-	403961-404809	0-15000-	4
C 1945	R. Housing, Rear Fan Bearing	226402-	403961-	0-15000-	4
C 1946	R Spring, Front Fan Bearing	226402-	403961-	0-15000-	4
C 1947	R Spring, Front Fan Bearing. Spacer, Front Fan Bearing.	226402-	403961-	0-15000-	4
C 1948	K : Retainer, reit, Rear of Front Fan	,			
	Shaft Bearing (In Upper Water Pipe)	226402-	403961-	0-15000-	4
C 2167	R Shaft, Fan R Pinion, Fan Drive Bevel R Gasket, Front Fan Bearing Cover		404810-		
C 2205	R Pinion, Fan Drive Bevel		404810-		
C 2244 C 2296					
C 2296 D 297	R Cover, Front Fan Bearing	200111-	400000-	0-15000-	4
D 378	P Spring Fan Friction	200111-	400000-	0-15000-	4
D 399	n : Facing, Fan Frichun	. 400111-	400000-	0-15000-	4
D 400	R Key, Fan Disk	200111-	400000-	0-15000-	
D 403 D 655		200111-	400000-	0-15000-	
D 000	Shaft Bearing (In Upper Water				
	Pipe)	· 200111–210250 ¹	400000-400023		1
D 655	R Retainer, Felt, Rear Fan Shaft Bear	•	400000	0 15000	.
D 684	ing Folt Peer of Front Far	200111-	400000-	0-15000-	'
D 684	R Washer, Felt, Rear of Front Far Shaft Bearing (In Upper Water				
	Pipe)	200111-	400000-	0-15000-	
D 684	R Washer, Felt, Rear Fan Shaft Bearing	g 200111-	400000-	0-15000-	i
D · 825	R Washer, Felt, Front Fan Bearing	3	400000	0 15000	
D 900	Cover.	200211-	400000-	0-15000-	
D 826	R Retainer, Felt, Front Fan Bearing		400000-	0-15000-	
JD 7250					1
JD 7250	R Cup. Fan Shaft, Bearing Rear	200211-226401	400000-403960	1	1 .
JD 7251	R Cup, Fan Shaft, Bearing Front	212493-	400530-	015000	'
JD 7354	R Cone with Rollers, Fan Shaft Bear	- i	403061	0-15000-	
	ing, Rear	. 226402-	403961-	. 0-10000-	<u> </u>

i			Serial Number		Plate
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No.
	EAN Continued				
JD 7358 R	FAN—Continued Cone with Rollers, Fan Shaft Bear-				:
_	ing Front	200211-	400000-	0-15000-	4
JD 7358 R	Cone with Rollers, Fan Shaft Bearing, Rear	200211-226401	400000-403960		$\tilde{4}$
JD 7401 R	Cup. Fan Shaft Bearing, Rear	226402-	403961-	0-15000-	4
JD 7759	Alemite Fitting, No. 1610, Fan Bear-	000045	400000	0-15000-	4
TD 5500	ing, Front	207345-	400000-	0-19000-	-
JD 7792	ing, Front	200111-207344			4
	<u>-</u> .				
AC 130 R	PULLEY AND CLUTCH Pulley, C126 R, with Cone, Bushing			·	
AC 130 IC	and Gear	200111-	400000-	0-15000-	10
AC 229 R	Disk, C127 R, Clutch Driving, with	200111-	400000-	0-15000-	10
AC 237 R	Bolts Shaft and Lever, Clutch Throw-Out.	200111-	400000-	0-15000-	10
AC 446 R	Brake, C365 R, with Lining, Pulley.	200111-	400000-	0-15000-	10
AC 699 R	Dust Shield with Gasket, Pulley	200111-	400000-	0-15000-	10 10
C 9 R	Cone, Clutch	200111-	400000- 400000-	0_15000_	- 10
C 74 R	Dog, Clutch	200111- 200111-	400000- 400000-	0-15000-	10
C 116 R C 142 R	Gear, Pulley Disk, Clutch Adjusting	200111-	400000-	0-15000-	10
C 142 R C 171 R C 172 R C 184 R	Fork Clutch	Z00111-	400000-	0-15000-	10
C 172 R	Bearing, Clutch Fork	200111-	400000-	0-15000-	10 10
C 184 R	Bearing, Clutch Fork Cover, Pulley and Spline Gear Pin, Clutch Cone Drive.	200111-224099	400000- 400000-	0-15000-	10
C 404 R	Pin, Clutch Cone Drive	200111-	400000-		10
C 434 R C 545 R	Pin, Pulley Brake to Throw-Out				
0 010 10	Bearing	200111-	400000-	0-15000-	10 10
C 603 R	Gasket, Clutch Fork Shaft Bearing.	200111-	400000- 400000-	0-15000 - 0-15000-	10
C 614 R	Facing, Clutch FrictionBolt, Clutch Operating	200111- 200111-	400000-	0-15000-	10
C 643 R C 667 R	Snap Ring, Gear Retainer.	200111-	400000-	0-15000-	10
C 717 R	Gasket, Pulley and Spline Gear Cover	200111-	400000-	0-15000-	10
C 732 R	Welsh Plug, Clutch Fork Bearing	200111-	400000-	0-15000-	10
C 932 R	Lead Washer on Dust Shield Cap	200111-	400000-	0 -15000-	10
C 1735 R	Screws. Cover, Pulley and Spline Gear	224100-	l 	0 - 15000	10
C 1736 R	Cap, Pulley and Spline Gear Cover	224100-		0-15000	10 10
C 1738 R	Stud, Pulley and Spline Gear Cover.			0-19000	10
C 1739 R	Gasket, Pulley and Spline Gear Cover Cap			0-15000-	10
C 1815 R	Gasket, Pulley Dust Shield.	200111-	400000-	0-15000-	10
C 2280 R	Quadrant Clutch Lever	1	404810-	0-15413-	. 5
C 2379 R	Link, Clutch Lever Spring Collar, Clutch Washer, Drive Disk to Crankshaft	200111	400000-	0-15415-	10
D 100 R D 141 R	Collar, Clutch	200111-	400000-	0-15000-	10
D 141 R D 178 R	Pivot. Clutch Fork	200111-	400000-	0 -15000	10
D 202 R	Pivot, Clutch Fork Bolt, Clutch Drive Disk. Key, Belt Pulley Gear	200111-206441	400000	0.15000	10
D 279 R	Key, Belt Pulley Gear	200111-	400000 - 400000 -	0-15000- 0-15000-	10
D 355 R	Pin, Clutch Dog to Pulley	1 200111-	400000-	0-15000-	10
D 359 R D 377 R	Spring Clutch Release	200111-	400000-	015000-	10
D 385 R	Lining, Pulley Brake	200111-	400000	0-15000-	10
D 552 R	Rushing Pulley	200111-	400000-	0-15000-	10 10
D 651 R	Washer, Pulley Bearing	200111-	400000 - 400000 -	0-15000-	10
D 917 R D 918 R	Retainer, Felt Washer Felt Washer, Pulley Bearing		400000-	0-15000-	10
D 918 R D 1997 R	Spring, Clutch Fork Shaft	200111-	400000	0-15000-	10
D 2031 R	Bolt. Clutch Lever Pivot		404810-	0-15000-	.: 5 - 10
JD 7494 R	Outer Race, Pulley Bearing	200111-	400000- 400000-	0-15000-	10
JD 7544 R		200111-	400000-	0-15000-	10
JD 7594 R					i
	SPLINE SHAFT	010077	409040	0-15000-	10
1450 ·R	Pipe Plug, Spline Shaft Bearing Cove	218675-	402040-	0-10000-	1
AC 79 R	Gear, Spline Shaft, C148 R, Spide with Ring Gear		400000-		. 10
AC 176 R	Quill, C149 R. Spline Shaft, Complete	е			}
	with Bearing Cup (Substitute to	r	400000	015000-	10
	AC394 R)	200111-	400000-	0-10000-	: 10
		1			

Dom	NAME AND DECOMPOSION		Serial Number		- F
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	[] -,-
	SPLINE SHAFT—Continued				
C 640 R	Gear, Spline Shaft, C1737 R. Spider		;		,
	with Ring Gear.	224100-		0-15000-	
85 R	Pinion, Low and Reverse Sliding	200111-	400000-	0-15000-	
207 R	Pinion, High and Intermediate Sliding		400000-	0-15000-	1:
228 R	Gear, Sliding, Power Shaft Drive	200111-	400000-	0-15000-	
228 R 422 R 490 R 591 R 658 R 660 R 666 R 1620 R	War Spline Shoft Geor	200111-	400000-	0-15000-	1
422 B	Key, Spline Shaft Gear Cover, Spline Shaft, L. H			0 10000	
490 R	Coolean Unline Shaft Correct I W	200111-210014	400000-102003	0-15000-	1
591 R	Gasket, Spline Shaft Cover, L. H	200111-		0-15000-	
658 R	Collar, Spline Shaft Oil	200111-	400000-		
660 R	Shart, Spine	TOOTIT-	400000-	0-15000-	
666 R	Snap Ring, Spline Shaft Bearing	200111-	400000-	0-15000-	1
1620 R	Cover, Spline Shaft Bearing	218675-		0-15000-	
136 R	Washer, Spline Shaft Nut, L. H	200111-	400000-	0-15000-	1
490 R	Washer, Spline Shaft Nut, R. H	200111-	400000-	0-15000-	1
D 7214 R	Cone with Rollers, Spline Shaft				1
0 1214 15	Bearing, L. H.	200111-	400000-	0-15000-	1
D 7005 D	Cone with Rollers, Spline Shaft	200111	200000		٠,
D 7225 R		200111	400000-	0-15000-	
	Bearing, R. H	200111-			1
D 7260 R	Cup, Spline Shaft Bearing, L. H	200111-	400000-	0-15000-	i
D 7275 R	Cup, Spline Shaft Quill Bearing.	200111-	400000-	0-1500 0-	
	i				:
	GEAR SHIFT				:
1146 R	Spring, Stop Pin	200111-	400000-	0-1500 0-	1
2323 R	Pin. Stop	200111-	400000-	0-15000-	
C 71 R	Fork, C133 R, Shift, Low and Re-				
	verse, Complete.	200111-	400000-	0-15000-	1
C 72 R	Fork, C132 R, Shift, High and Inter-	-00111	200000		!
0 12 5	mediate Complete	200111-	400000-	0-15000-	:
	mediate, Complete		400000-	0-10000	
C 573 R	Lever, Power Shaft Shift (Substitute		400040	0 15000	÷
	for C1621 R)		402040-	0-15000-	
27 R	Quadrant, Gear Shift	200111-	400000-		
98 R	Arm on Gear Shift Lever	200111-	400000-	0-15000-	i
139 R	Fork, Shift, Power Shaft Sliding Gear	200111-	400000-	0-15000-	i
443 R	Lever, Gear Shift	200111-	400000-404809		:
457 R	Yoke, Shift Fork.	200111-	400000-	0-15000-	:
549 R	Spring Goar Shift Lover	200111-		0-15000-	1
657 R	Spring, Gear Shift Lever. Lever, Power Shaft Shift	200111-218674	400000-402039		
	Chate Chifting Page	200111-210014	400000-402003	0-15000-	,
686 R	Shaft, Shifting Fork.	200111-			1
1060 R	Washer, Leather, Gear Shift Lever	200111-	400000-	0-15000-	
1246 R	Washer, Power Shifting Gear Lever	200111-	400000-	0-15000-	İ
1622 R	Washer, Power Shifting Gear Lever Pin, Power Shaft Shift Shaft Stop. Shaft, Power Shaft Shift	218675-	402040-	0-15000-	
1623 R	Shaft, Power Shaft Shift	218675-	402040-	0-15000-	İ
2004 R	Quadrant, Gear Shift	 	· · • • • · · · · · · · · · · · · · · ·	0-1500 0-	1
2010 R	Lever, Gear Shift			0-15000-	Ė
2118 R	Lavor Damer Shaft Shift	1	404760-		1
2004 R 2010 R 2118 R 2277 R 342 R 678 R	Laver Gear Shift		404810-		1
2411 20	Kor Arm to Lavon	200111-	400000-	0-15000-	i
342 R	Conor: Adjusting Chiff Chaff	200111		0-15000-	1
678 R	Screw, Adjusting Smit Shait	200111	400000-		1
789 R	Nippie, Stop Pin	200111-		0-15000-	
993 R	Spring, Power Smit Shait Stop Pin.	218675-		0-15000-	
2573 R	Lever, Gear Shift Lever, Gear Shift Key, Arm to Lever. Screw, Adjusting Shift Shaft. Nipple, Stop Pin Spring, Power Shift Shaft Stop Pin. Washer, Gear Shift Lever.	200111-	400000-	0-15000-	
		1			
	REVERSE SHAFT				
C 73 R	Gear, Reverse, with Bushing	200111-	400000-	0 -15000-	
C 458 R	Shaft, Reverse, with Spacer and		•	•	
	Washers	200111-	400000-	0-15000-	
107 R	Collar, Reverse Shaft	200111-211343			
			400000-400230	0_15000-	•
496 R	Washer, Reverse Gear Spacing (Thick)	200111-	***************************************	0-1 5000-	:
619 R	Welsh Plug, Each End of Reverse	900111	400000	0 15000	*
	Shaft.	200111-	400000-	0-15000-	
1098 R 1519 R	Bushing, Reverse Gear	200111-	400000-	0-15000-	
1519 R	Spacer, Reverse Shaft	200111-	400000-	0-15000-	
1520 R	Washer, Reverse Shaft Spacing (Thin)	200111-	400000 -	0 -1 5000-	
	,		,		
	DIFFERENTIAL				
C 149 R	Gears, High and Low, with C211 R				
- 177 D		200111	400000-	0-15000-	
	Spider	200111-	400000-	0-10000-	
		1	i		
C 150 R	Gear, Intermediate, with C210 R	000111	400000	0 15000	
C 150 R	Spider	200111-	400000-	0-15000-	
			400000-	0-15000-	;

Part	NAME AND DESCRIPTION	Serial Number			- Plat	
Number .	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No.	
	DIFFERENTIAL—Continued	:				
AC 350 R	Quill, C341 R, Differential Shaft,]	
	with Snap Ring, L. H		400000-	• • • • • • • • • • • • • • • • • •	11	
AC 789 R	Quill, D2002 R, Differential Shaft, with Snap Ring, L. H.	i	••••	0-15000-	11	
AC 912 R	Sprocket, Differential Shaft (8-Tooth)		•••••	0 10000		
	(1 C2133 R and 1 C2134 R) (Sub-	211700-211799	400510 404500	0 15000 0 15011		
	stitute for C386 R)	218358-228723	400719-404769	0-15000-0-15241	٠.	
AC 947 R	Case, Differential, Pilot Side	200111-	400000-	0-15000-	11	
AC 948 R	Case, Differential, Recess Side	200111-	400000-	0-15000-	11	
AC 949 R AC 950 R	Spider, Differential Pinion Pinion, Differential.	200111- 200111-	400000 - 400000-	0-15000- 0-15000-	11	
AC 951 R		200111-	400000-	0-15000-	11	
C 20 R	Sprocket, Differential Shaft (9-Tooth)	200111-211699	400000-400718		11	
C 296 R		211800-218331			11	
C 340 R		200211-	400000-	· · · · · · · · · · · · · · · · · · ·	îî	
C 437 R	Shaft, Differential.	200111-228723	•••	0-15000-0-15241	11	
C 462 R			400000-	0-15000-	11	
C 494 R	washer, Differential Shaft Bearing.	200111- 200111-226735			ii	
C 594 R	Gasket, Quill to Housing.	200111-	400000-	0-15000-	11	
C 672 R C 692 R	Gasket, Quill, L. H.	200111-	400000-	0-15000-	11	
C 652 K	Snap Ring, Differential Bearing, Outside.		400000-	0-15000-	11	
C 718 R	Gasket, Quill, R. H.	200111-	400000-	0-15000-	11	
C 719 R C 791 R	Stud, Differential Quill to Case		400000-	0-15000-	11	
C 1375 R	Bolt, Differential Cases to Spiders Shaft, Differential	200111-	400000- 400000-404769	0-15000-	11	
C 1476 R C 1504 R	Washer, Differential Shaft, Cork	200211-	400000-		11	
C 1504 R	Dowel Pin, Differential Quill	200111-212174	400000-400455		1	
C 1533 R C 2001 R	Dowel Pin, Differential Quill Quill, Differential Shaft, R. H	212175-	400456	0-15000- 0-15000-	111	
C 2131 R	Shaft, Differential	228724-		0-15242-	11	
C 2132 R	Shaft, Differential	l	404770-		11	
C 2133 R	Sprocket, Differential Shaft (Part of AC912 R)		404770-	0-15242-	11	
C 2134 R				0-15000-0-15241	11	
	Spacer, Differential Shaft Sprocket	218358-228723	400113-404103	0-10000-0-10241	11	
C 2149 R D 136 R	Cover, Differential Shaft	200111- 200111-	400000-	0-15000-	lii	
D 359 R	Snap Ring, Differential Bearing, Inside	200111-	400000-	0-15000-	11	
D 651 R	Shim Washer, Differential Bearing	200111-	400000-	0-15000-	111	
JD 7675 R JD 7691 R	Bearing, Differential Shaft, Outside . Bearing, Differential Shaft, Inside	200111- 200111-	400000- 400000-	0-15000- 0-15000-	ii	
	Dearing, Dimerential Shart, Inside	200111-	100000			
1450 70	FINAL DRIVE					
1450 R	Pipe Plug, Rear Axle Housing Oil Test Level and Drain	200111-	400000-	0-15000-	12	
AC 7R	Chain, Drive, 45 Links	200111-218357			12	
AC 212 R						
	Studs and Snap Rings (Substitute 1 AC397 R. 1 AC437 R. 1 C1251 R)				12	
AC 213 R	Housing, C243 R, Rear Axle, L. H.,					
	with Studs and Snap Rings (Substi-					
	tute 1 AC398 R, 1 AC437 R, 1 C1251 R)	200111-206023		 	10	
AC 397 R	•				12	
20 00. 20	with Studs and Snap Rings	200024-211033	400000-403696		12	
		211800-225840				
AC 398 R	,,,,,,,,,,	200024-211033	400000-403696			
	with Studs and Snap Rings	211800-225840	30000-300000			
AC 436 R		200111-206023		İ	1 .	
	with Nut Cover, R. H. and L. H.	211700-211799			12	
AC 437 R	Cover, C1250 R, Rear Axle Housing,					
	with Nut Cover, R. H. and L. H.	206024-211699 211800-220095	400000-402029		12	
AC 454 R	Nut, Clamp, C373 R, with Cap Screw,				l	
	Rear Axle	211284-	400210-	0-15000-	12	
					•	

			Serial Number		
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
AC 503 R	FINAL DRIVE—Continued Housing, C388 R, Rear Axle, R. H., with Studs and Snap Rings, (Sub- stitute 1 AC397 R, 1 AC437 R, 1				
AC 504 R	C1251 R, 1 C20 R). Housing, C389 R, Rear Axle, L. H., with Studs and Snap Rings, (Sub- stitute 1 AC398 R, 1 AC437 R, 1				
AC 559 R AC 570 R	C1251 R, 1 C20 R)			0-15000-	
AC 684 R	Sprockets). Chain, Drive, Complete (40 Links— Used with 9- and 30-Tooth Sprockets).			1	İ
AC 752 R AC 753 R AC 817 R	Axle, Rear, with Alemite Fitting Axle, Rear, with Alemite Fitting Housing, C1900 R, Rear Axle, R. H.,	221000 220010		0.15000	12 12 12
AC 818 R	with Studs and Snap Rings Housing, C1901 R, Rear Axle, L. H.,	i		0-15000-	
AC 855 R	with Studs and Snap Rings Brace, Rear Axle Housing (42" and 28" Row Unit)	225841-	403697-	0-15000-	12
AC 910 R	Collar, Dust, Rear Wheel and Axle (Substitute for C1714 R, C1715 R, and AC869 R)	200111-225840	400000-403696		12
AC 1106 R	Felt Washer, Rear Axle, Inside(Substitute for C561 R)		400000-403696		12
AC 1107 R	Felt Washer, Rear Axle, Inside (Substitute for C1918 R)	,i		0-15000-	
AC 1108 R	Felt Washer, Rear Axle, Outside (Substitute for C562 R)	224100-224207	400000-402030	0-15000-0-15732	
AC 1110 R AC 1111 R	Axle, Rear, Complete (Heavy Duty). Felt Washer, Rear Axle (Use with AC1110 R Axle)	225841-		0-15000-0-15732	12
C 24 R	Collar, Rear Axle	200111-223802 224100-224207		i	
C 361 R C 362 R C 364 R	Shield, Mud and Dust, R. H. Shield, Mud and Dust, L. H. Sprocket, Rear Axle (38-Tooth) (Use with AC436 R Cover to Replace C23 R Sprocket)	200211-206023 211284-218357 200111-206023	400210-400718	3	13
C 387 R C 399 R C 470 R	(Use with AC437 R Cover to Replace C23 R Sprocket) Tightener, Drive Chain Sprocket, Rear Axle (37-Tooth) Washer, Rear Axle Sprocket.	206024-211283 211700-211799 218358-221584 200111-211283	400719-402039 400000-400209		12 12 12
C 484 R	Clamp, Quill Bolt Collar, Dust, Rear Axle	200111- 200111-223802	400000-	0-15000-	12
C 493 R C 559 R C 565 R	Retainer, Rear Axle Felt	200111-225840	400000-403696	,	12
C 595 R		200111-206023			1
C 597 R C 620 R C 1031 R C 1107 R	Cover, Rear Axle Nut Stud, Fender Support	200111-211283 200111-211283 200111-	400000-400209 400000-400209		12
C 1251 R		206024-211699		0-15000-	12
C 1453 R C 1454 R C 1471 R C 1472 R	Cover, Rear Axle Nut Gasket, Rear Axle Nut Cover Link, Roller Drive Chain	211284- 211284- 200111- 200111-218357	400210- 400210- 400000- 400000-400718	0-15000- 0-15000- 0-15000-	12 12 12 12
C 1473 R				5	. 12
C 1474 R	1.	200211-223802 224100-224207	400000-402695	5	. 12
C 1475 R	Cork Washer, Rear Axle Inside (Special Replacement for AC1106 R)	200211-225840	400000-402698	5	. 12

Part	NAME AND DESCRIPTION	Serial Number			
Number		General Purpose	Wide Tread	Orchard	Pla
C 1477 R	FINAL DRIVE—Continued Cork Washer, Rear Axle, Outside (Special Replacement for AC1107 R)	(200211-223802 224100-224207	400000-402695		12
C 1478 R C 1479 R C 1494 R C 1593 R C 1597 R	Felt, Brake Drum, Mud Guard Stud, Platform Support Stud, Rear Axle Housing Stud, Rear Axle Housing Sprocket, Differential (10-Tooth)	200211- 200111-	400000-	0-15000-	18
1598 R 1640 R 1697 R 1718 R 1893 R	Sprocket, Rear Axle (19-Tooth) Cover, Rear Axle Housing Sprocket, Rear Axle (30-Tooth) Sprocket, Rear Axle (37-Tooth) Sprocket, Rear Axle (19-Tooth)	200111-221584 220096- 221585- 221585-	402030- 402040-	0-15000-	12
1902 R 1916 R 1919 R 1920 R 1921 R	Retainer, Rear Axle Felt. Shaft, Rear Axle Snap Ring, Rear Axle Bearing Collar, Rear Axle Dust	225841- 225841- 225841- 225841-	403697- 403697- 403697-	0-15000- 0-15000- 0-15000- 0-15000-	12
2136 R 2137 R	Collar, Rear Axle Bolt Collar, Rear Axle Dust (Part of AC910 R) Collar, Rear Axle Dust (Part of AC910 R)	200111-225840	400000-403696	0-15000-	1:
2415 R 2430 R 2431 R	Extension, Grease Fitting Axle, Rear, Heavy Duty (Part of AC1110 R) Retainer, Rear Axle Felt (Used with	225841-			1:
D 175 R 2 2142 R ID 7242 R ID 7292 R ID 7295 R ID 7295 R	C2430 R and AC1110 R Rear Axle Screw, Drive Chain Tightener Pipe Plug, Oil Filler Cone with Rollers, Rear Axle Bearing Cup, Rear Axle Bearing Cup, Rear Axle Bearing Cup, Rear Axle Outer Bearing (Used	211700-211799 200111- 200111-225840 200111-225840 225841-	400000- 400000-403696		12
D 7353 R D 7374 R	with C2430 R and AC1110 R Rear Axle) Cone with Rollers, Rear Axle Bearing Cone with Rollers, Rear Axle Bearing Outer (Used with C2430 R and AC1110 R Rear Axle)	225841- 225841-	403697-	0-15000- 0-15000- 0-15000-	1
AC 1070 R	REAR WHEELS Wheel, Rear, with Rim Strip for 11.25x24 Rubber Tires Wheel, Rear (Substitute 1 JD-1202 R and 6 C1716 R)	200111-		0–15000– 0–15505–0–15615	1
AC 1103 R	Wheel, Rear, with Rim Strip for 9.00 x36 Rubber Tires		400000-		1
744 R 1510 R 1538 R	Bolt, Rear Wheel to Axle Washer, Hook Bolt. Wheel, Rear (Skeleton Type, 46") Wheel, Rear, Complete (44"x10")	200111-	400000-402030	0–15000–	1: 1: 1: 1:
1547 R 1554 R 1716 R	Wheel, Rear, Complete, R. H. and L. H. (43-1 2", Skeleton Type) Wheel, Rear, Complete (44"x8") Bolt, Rear Wheel (5 8"x2-1/4")	200111- {223803-224099 {224208-	401238- 400000- 402696-	0–15000–	1 1 1
2414 R	Bolt, Rear Wheel (used with AC1100 R Rear Wheel)	{229850 -230073 {230201 -23036 8		0-15505-0-15615	1
D 2184 R D 1202 R	Hook Bolt less Nut, Wheel Weight Wheel, Rear, Complete (Substitute for C1010 R)	200111- 200111-	400000-	0–15000– 0–15000–	1
D 1212 R	Wheel, Rear (Inset, 68" Tread) REAR WHEEL EQUIPMENT Road Band with Supports (One-Half) (2 used for JD1202 R Wheel)	200111-	400000-	0–15000–	1

	Done	NAME AND DESCRIPTION		Serial Number		Plate
	Part umber	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No.
		REAR WHEEL EQUIPMENT				
		Continued				
AC	401 R	Overband, Hayfield, with Supports and Bolts (One-Half) (2 used for				
		JD1202 R Wheel).	200111-	••••	0-15000-	15
AC	636 R	Road Band, Half, with Supports (2 used per C1547 R Wheel)	!	401238		15
AC	649 R	Lug, Cast Cone.	200111-	400000-	0-15000-	13
AC	666 R	Road Band, Half, with Supports (2 used per C1538 R and JD1212 R				
	·	Wheel)	•••	402669-		15
AC	918 R	Road Band with Supports (Single Piece) (1 used per C1547 R Wheel)		401238-		14
C	367 R	Lug, Narrow Wheel Cast Spade (used	•••	401235-		1-4
	;	with C1510 R and C1547 R Rear		400000-		13
С	368 R	Wheels). Lug, Road, R. H	200111-	400000-	0-15000-	13
C	369 R	Lug, Road, L. H.	200111-	•••	0-15000-	13
	1027 R 1030 R	Rim, Extension (42-3,4"x6") Clip, Extension Rim, Rear Wheel.	200111- 200111-	400000-	0-15000- 0-15000-	14 14
	1235 R	Rim Extension, Rear Wheel, (42-3 4"				
C	1267 R	x4"). Support, Hayfield Overband (For	200111-	• • • • • • • • • • • • • • • • • • • •	0-15000-	14
		Road Band AC401 R)	200111-			15
_	1294 R 1295 R	Grouser, Meadow (Channel) R. H. Grouser, Meadow (Channel) L. H	200111- 200111-			15 15
	1371 R	Support, Road Band (For AC335 R	200111-	•••	0-13000-	10
_	1514 D	Road Band)	200111-			15
С	1514 R	Washer, Narrow Wheel Cast Spade Lug		400000-402668		15
	1515 R	Overtire (One-Half) (46" Wheel)		400000-401237		15
C	1516 R 1548 R	Clip, Overtire (46" Wheel) Overtire, 10" (One-Half) (43-1 2"		400000-401237		13
•		Wheel)		401238-		
C	1549 R 1550 R	Clip, Overtire (43-1 2" Wheel) Lug, Tee, R. H		401238- 400000-		
Ċ	1551 R	Lug. Tee. L. H	·			
C	1556 R	Rim, Extension (44"x6") (For JD- 1212 R Wheel)	! 	401238-		14
C	1646 R	Lug. Button (AC593 R. Complete Set)	200111-	401238-	0-15000-	13
Č	1680 R	Support (AC636 R Road Band).				15 15
C	1759 R 1840 R	Support (AC666 R Road Band) Overtire, 6" (One-Half) (43-1/2"		402669-		10
_		Wheel)	200111-	400000-		15
C	2147 R	Support, Road Band (For AC918 R Road Band)		401238-		15
C	2148 R	Support, Rear Wheel (For AC918 R				1.5
C	2199 R	Road Band)	200111-	401238- 400000-	0-15000-	15 13
D	233 R	Lug. Spade (4" High)	200111-	400000-	0-15000-	13
D	574 R	Grouser, R. H. (2-1,2"x2-1,4"x5 16" x16")	200111-		0-15000-	15
D	575 R	Grouser, L. H. (2-1 2"x2-1/4"x5 16"				
D	576 R	x16'') Grouser, R. H. (4"x3"x3 8"x16")	200111- 200111-		0-15000- 0-15000-	15
D	577 R	Grouser, L. H. (4"x3"x3 8"x16")	200111-			15
Ď	578 R	Grouser, R. H. (4"x3"x3 8"x22")	200111-			15 15
D	579 R 600 R	Grouser, L. H. (4"x3"x3 8"x22") Grouser, R. H. (4"x3"x3 8"x30")	200111- 200111-			15
D	601 R	Grouser, L. H. (4"x3"x3 8"x30")	200111-		0-15000-	15
Ď	938 R	Washer, used on Spade Lug Bolt.	200111-	400000-	0-15000- 0-15000-	15 13
D D	1078 R 2121 R	Lug, Spade (5" High) Lug, Spade, Heavy Duty, 5".		400000- 400000-	0-15000-	13
D	2373 R	Grouser, Right, Angle	200111-		0-15000-	15
D	2374 R	Grouser, Left, Angle.	200111-		0-15000-	15
		WHEEL SCRAPERS				
	399 R 591 R	Scraper, Front Wheel. Scraper, Right Front Wheel Double		400000-		16
AU	OSIK	Guide Band	200111-			16
AC	592 R	Scraper, Left Front Wheel Double				16
		Guide Band	200111-	• • • • • • • • • • • • • • • • • • • •		10

Part	NAME AND DESCRIPTION		Serial Number		Plat
Number		General Purpose	Wide Tread	Orchard	No.
AC 895 R	WHEEL SCRAPERS—Continued Frame, Scraper, Rear Wheel, R. H.			0-15000-	16
AC 896 R AC 922 R	Frame, Scraper, Rear Wheel, L. H Scraper, Right Front Wheel	200111-		0-15000-	16
AC 923 R	Scraper, Left Front Wheel	200111-	ļ 		16
C 264 R C 354 R	Holder, Rear Wheel Scraper Blade Holder, Extension Rim Scraper Blade	200111- 200111-			
C 1055 R	Blade, Rear Wheel Scraper.	200111-	1		16 16
C 1056 R	Brace, Platform to Rear Wheel				
C 1228 R	Scraper	200111- 200111-			16 16
C 1229 R	Blade, Front Wheel Scraper, L. H	200111-			16
C 1287 R C 1642 R	Brace, Extension Rim Scraper Corner Brace, Scraper, Double Guide Band	200111- 200111-			16 16
C 1643 R	Blade, Scraper, Double Guide Band	200111-			16
C 1912 R	Brace, Drive Wheel Scraper (56")	900111	İ		10
C 2090 R	Tread Tractor) Brace, Wheel Scraper Support (used)	200111-			16
	with C1538 R and JD1202 R				
C 2091 R	Wheels)	• • • • • • • • • • • • • •	400000-		16
2001 10	with C1538 R and JD1202 R				
C 9009 P	Wheels)		400000-		16
C 2092 R	Brace, Wheel Scraper, R. H. (used with C1538 R and JD1202 R		; } \$		ĺ
	Wheels)	· • • • · · · · · · · · · · · · · · · ·	400000-		16
C 2093 R	Brace, Wheel Scraper, L. H. (used with C1538 R and JD1202 R				
	Wheels)	• • • • · · · · · · · · · · · · · · · ·	400000-		16
C 2094 R	Support, Wheel Scraper, R. H. (used				
	with C1538 R and JD1202 R Wheels).	• • • • • • • • • • • • • •	400000-		16
C 2095 R	Support, Wheel Scraper, L. H. (used,				
	with C1538 R and JD1202 R: Wheels)		400000-		16
C 2138 R	Support, Extension Rim Scraper	• • • • • • • • • • • • •	400000-		
	BRAKES	:	:		!
1706 R	Washer, Brake Latch Bolt	200111-	!••••	0-15000-	16
AA 663 R AC 48 R	Felt Washer, Brake Hub. Lever, Brake, with Foot Pedal, Com-	200111-	400000-	0-15000-	16
AC 40 K	plete, R. H. and L. H., C68 R	200111-			16
AC 197 R	Band, Brake, Complete with Lining.	200111-	400000-	0-15000-	16
AC 208 R C 271 R	Drum Brake, with Hub Cam, Brake, R. H	200111- 200111-	400000-	0-15000- 0-15000-	16
C 272 R	Cam, Brake, L. H	200111-		0-15000-	16
C 327 R C 328 R	Cam, Brake, R. H.		400000- 400000-	· · · · · · · · · · · · · · · · · · ·	16
C 360 R	Cam, Brake, L. H Lever, Brake	· · · · · · · · · · · · · · ·	400000-		16
C 423 R C 485 R	Pin, Anchor, Brake Clip, Brake Lever Spring	200111- 200111-	·400000-	0-15000- 0-15000-	16
C 494 R	Washer, Felt Retainer, Brake	200111-	400000-	0-15000-	16
C 596 R C 636 R	Gasket, Brake Cam	200111-	400000-	0-15000-	16
C 636 R	Pedal, Foot Brake Stop, Brake Lever (see C1537 R)	200111-220095	400000-402216		16 16
C 700 R	Guard, Brake Drum, R. H. (Substi-		i .	1	1
C 701 R	tute C1248 R) Guard, Brake Drum, L. H. (Substi-			· · · · · · · · · · · · · · · · · · ·	16
	Guard, Brake Drum, L. H. (Substitute C1249 R) Latch, Brake Spacer, Brake Lever Latch Lining, Brake Band Spring, Brake Band			0.15000	16
C 1028 R C 1029 R	Latch, Brake Lever Latch	200111- 200111-		U-15000- 0-15000-	16 16
2 1000 10	Lining, Brake Band	200111-	400000- 400000-	0-15000-	16
C 1087 R	Spring, Brake Band	200111- 200111-	400000- 400000-	0-15000- 0-15000- 0-15000-	16
C 1224 R	Dring, Diane Devel	200111-	400000-	0-10000-	16
C 1224 R C 1224 R C 1248 R	Guard, Brake Drum, R. H		1 400000	1	16
C 1224 R C 1224 R C 1248 R C 1249 R	Spring, Brake Band Spring, Brake Lever Guard, Brake Drum, R. H. Guard, Brake Drum, L. H.	200111-	400000-		10
C 1224 R C 1224 R C 1248 R C 1249 R C 1372 R	Guard, Brake Drum, R. H. Guard, Brake Drum, L. H. Pin, Brake Latch Latch. Brake	200111-	400000- 400000- 400000-404809		16 16
C 1224 R C 1224 R C 1248 R C 1249 R C 1372 R C 1378 R C 1537 R	Guard, Brake Drum, R. H. Guard, Brake Drum, L. H. Pin, Brake Latch Latch, Brake Stop, Brake Lever, L. H. (see C656 R)	200111-	400000- 400000- 400000-404809 400000-402216		16 16 16
C 1224 R C 1224 R C 1248 R C 1249 R C 1372 R C 1378 R	Spring, Brake Band Spring, Brake Lever Guard, Brake Drum, R. H. Guard, Brake Drum, L. H. Pin, Brake Latch Latch, Brake Stop, Brake Lever, L. H. (see C656 R) Stop, Brake Lever Guard, Brake Drum, R. H. Guard, Brake Drum, I. H.	200111-	40000- 400000- 400000-404809 400000-402216 402217-	015000- 015000-	16 16 16 16

Part Number	NAME AND DESCRIPTION	Serial Number			
		General Purpose	Wide Tread	Orchard	Pla No
C 2005 R	BRAKES—Continued Lever, Brake, R. H.			0-15000-	16
C 2006 R	Lever, Brake, L. H.	 	404910	0-15000-	16
C 2182 R D 635 R	Felt Retainer, Brake Hub	200111-	400000-	0-15000-	16 16
K 2573 R	Lever, Brake, R. H. Lever, Brake, L. H. Latch, Brake Felt Retainer, Brake Hub Washer, Brake Cam	200111-	400000-	0-15000-	16
				:	
	FRONT AXLE AND FRONT END SUPPORT				
AC 185 R	Axle, Front, C255 R, with Steering Spindle Bushing	200111-	 		17
AC 188 R	Spindle, C84 R. and Knuckle, Front				17
AC 346 R	Wheel Spindle and Knuckle, Front Wheel	200111-	400000-404809	·	17
AC 631 R	Spindle and Knuckle, C1667 R, Front Wheel (For 42" and 28" Rows)				1,7
AC 774 R	Axle. Front. C1878 R. with Bushing	• • • • • • • • • • • • • • •			17
	Axle, Front, C1878 R, with Bushing (For 42" and 28" Rows) Knuckle, Double, with Spindle.				17
AC 1019 R AD 1381 R	Knuckle, Double, with Spindle Knuckle, Front Wheel, with Bushings	• • • • • • • • • • • • • • • • • • • •	404810-		17
	Knuckle, Front Wheel, with Bushings, Stud and Dust Excluders			0-15000-	17
AD 1760 R	Bushing, Front Axle Spindle (2	200111-		 	17
C 237 R	D555 R) Bearing, Radius Rod Support, Front End	200111-207882			17
C 302 R C 581 R	Support, Front End	200111- 200111-		0-15000-	17
C 581 R C 740 R	Bearing, Front Axle, Thrust Pivot, Front Axle	200111-		0-15000-	17
C 919 R	Spindle, Front Wheel Knuckle	200111-	1		
C 1108 R C 1270 R	Washer, Front Axle Spindle, Upper. Radius Rod, R. H.	200111- 207883-		015000-	17
C 1270 K	(Note: Substitute with C1271 R			015000-	1.
	for AC191 R on Tractors 200111 to			1 .	
C 1271 R	207882) Radius Rod, L. H	207883-		0-15000-	17
	(Note: Substitute with C1270 R				i
	for AC191 R on Tractors 200111 to 207882)				:
C 1275 R	Support Front End		400000-404809	٠	. 17
C 1671 R	Bushing, Front Axle Spindle (For 42")				17
C 1675 R	and 28" Row Axle). Bearing, Thrust, Front Axle (For 42" and 28" Row Axle).				1
G 0000 B	and 28" Row Axle)			0.15000	17
C 2022 R C 2170 R	Support. Front End		404810-	0-15000-	17
D 96 R	Axle, Front Support, Front End Nut, Front Axle Pivot Pin	(200111-213038			17
D 156 R	Bolt, Spindle Pin, Tapered	(213538-214850	1	0 15000-	17
D 1250 R	Bolt, Spindle Pin, Tapered Washer, Thrust, Front Wheel Knuckle			0-15000-	17
D 1701 R D 1881 R	Pin, Front Axle Spindle Cap, Front Wheel Knuckle	.		0-15000-	17
D 1888 R	Bushing, Front Wheel Knuckle Alemite Fitting, Front Axle, No. 1365			0-15000-	17
JD 7792	Alemite Fitting, Front Axle, No. 1365	200111-207344			17
					:
	FRONT WHEELS AND FRONT WHEEL EQUIPMENT				
A 777 R	Band, Guide, Front Wheel 2" High				
AA COO TO	(Substitute for C1450 R)	200111-	400000-	0-15000-	19
AA 663 R AC 119 R	Washer, Felt, Front Wheel Cap, Hub, C167 R, with Zerk Fitting	200111- 200111-	400000- 400000-	0-15000- 0-15000-	18
AC 371 R	Hub, C333 R, with Races, Disk Type				
^	Front Wheel		400000-400678		18
AC 439 R	Wheel, Front, with Races, less Hub	/208384-213037			18
	Cap Desire Person Diele Terron	1213538-213542		,	19
AC 513 R	Hub, C391 R, with Races, Disk Type Front Wheel		400679-	· 	18
AC 628 R	Hub, C1663 R, Front Wheel, with				-
	Bearing Cups (For 42" and 28"		!	;	:
	Row Axle)		j	· · · · · · · · · · · · · · · · · · ·	

Part Number	NAME AND DESCRIPTION	Serial Number			
		General Purpose	Wide Tread	Orchard	Pla No
	FRONT WHEELS AND FRONT WHEEL EQUIPMENT— Continued				
C 651 R	Cap	213038-213537	1		18
AC 830 R AC 847 R	Wheel, Front, C2020 R, with Races. Wheel, Front, C334 R, with Bolts				18
C 885 R	Wheel Front with Races less Hills				1
AC 1062 R	Cap		400000-		1
AC 1088 R	Rubber Tires, 6.00x16)				
AD 452 R	Nut, D1082 R, Front Wheel Bearing, with Cap Screw	200111-	400000_	0_15000_	1
677 R 722 R	Gasket, Front Wheel Hub Cap Rim, Extension Front Wheel (24"x	200111-	400000-	0-15000-	13
C 1238 R	Band, Guide, 3-1/2" High (2 used per			0–15000–	19
C 1276 R	Band, Guide, 4" High (for Listed		400000-		1:
C 1498 R	Corn) Band, Hayfield, Front Wheel (AC403 R Hayfield Overband)		400000-		1
C 1672 R	Retainer, Felt, Front Wheel (For 42")				1
C 1673 R	Washer, Felt, Front Wheel (For 42' and 28" Row Axle)				1
C 1732 R	Band, Guide, 2-1.2" High, Front Wheel (1 used per Wheel)	223803-	402669-	0-15000-	1
C 2021 R C 2308 R C 2309 R C 2367 R	and 28" Row Axle) Washer, Felt, Front Wheel (For 42' and 28" Row Axle) Band, Guide, 2-1,2" High, Front Wheel (1 used per Wheel) Enclosure Disk, Front Wheel Rim, Front Wheel Extension Clip, Front Wheel Extension Cap, Hub, Front Wheel, N329 R,		402669- 402669-	0-15000-	1 1 1
D 583 R D 584 R	Cap, Hub, Front Wheel, N329 R, (Threaded) Clamp, Rim, Front Wheel Extension Washer, Rim Clamp, Front Wheel	200111-229215 200111-		i	
D 635 R D 2217 R D 2218 R	Extension Rim Retainer, Felt, Front Wheel Cap, Hub, Front Wheel, N346 R Gasket, Front Wheel Hub Cap (For	200111- 200111- 229216-	400000-	0-15000- 0-15412-	1 1 1
JD 1208 R	D2217 R Hub Cap)	229216-		0-15412-	
JD 7216 R	Cone with Rollers, Outside, Front Wheel Bearing	200111-208383		0-15000-	1
JD 7219 R	Cone with Rollers, Outside, Front Wheel Bearing	208384-213037	400000-400678		. 1
JD 7224 R	Cone with Rollers, Inside, Front Wheel Bearing	i /000111 000000	400050	0-15000-] 1
JD 7226 R	Cone with Rollers, Inside, Front Wheel Bearing				. :
JD 7246 R	Cone with Rollers, Outside, Front Wheel Hub Bearing (For 42" and 28" Row Axle)				
JD 7247 R	Cone with Rollers, Inside, Front Wheel Hub Bearing (For 42" and 28" Row Axle)				İ
JD 7262 H	Cup, Outside, Front Wheel Bearing.	(208384-213037 213538-213542	400000-400678	3	
JD 7266 R	Cup, Outside, Front Wheel Bearing.	200111-208383	3	0-15000-	

Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Pla
	1				-1
Ì	FRONT WHEELS AND FRONT WHEEL EQUIPMENT —Continued				
ID 7270 R	Cup, Inside, Front Wheel Bearing (Also 42" and 28" Row Axle)	200111-	400000-	0-15000-	1
ID 7297 R	Cup, Inside, Front Wheel Hub Bear- ing (For 42" and 28" Row Axle).				1
TD 7759	Alemite Fitting, No. 1610, in Front Wheels	207345-	400000-	0-15000-	1:
	PEDESTAL				
684 R AC 408 R	Washer, Felt Retainer, Lower Spindle Pedestal, Front, C1274 R, with Steer-	1			1
AC 416 R	ing Arm Bushings		400000-404809		1
331 R	Pin Retainer, Felt, Lower Pedestal		400000-404809		1
337 R 338 R	Eccentric, Steering Spindle			• • • • • • • • • • • • • • • • • • • •	
1288 R	centric		400000-404809 400000-		1
1381 R 1382 R	Washer, Steering Arm Shaft Spindle. Cover, Pedestal.		400000-404809		
: 1388 R	Felt Washer, Pedestal, Lower Washer, Cork, Steering Spindle	• • • • • • • • • • • • • • • • • • • •	400000-404809	Í	1 1
1390 R 1391 R	Gasket, Pedestal Cover		400000-404809 400000-404809		
1392 R	Gasket, Pedestal Cover		400000-404809		:
1455 R 1456 R	Bushing, Steering Arm, Upper		400000-404809 400000-404809	 	
1521 R	Welsh Plug, Steering Arm Shaft Pedestal.		400000-404809		
2329 R	Support, Pedestal	[404810-		
96 R 1034 R	Nut, Steering Spindle, Top		400000-404809		
D 7226 R	Cone with Rollers, Front Steering Spindle, Upper Bearing		400000-404809	 -	:
D 7242 R	Cone with Rollers, Front Steering Spindle, Lower Bearing Cup, Front Steering Spindle, Upper		400000-404809	 	
D 7270 R	Cup, Front Steering Spindle, Upper Bearing.		400000-404809		
D 7292 R	Cup, Front Steering Spindle, Upper Bearing Cup, Front Steering Spindle, Lower Bearing Cup, Front Steering Spindle, Lower		400000-404809		
D 7297 R	Dearmy	[· · · · · · · · · · · · · · · · · · ·	404810-		
D 7350 R	Cone with Rollers, Front Steering Spindle, Lower Bearing	1	1		
	STEERING PARTS				
A 275 R A 360 R	Retainer, Steering Shaft Cork		405139- 405139-		
394 R	Spring, Steering Shaft Oil Seal Washer, Steering Shaft Cork		405139- 404810-		
AC 171 R	Wheel, SteeringLink, Drag, Complete	200111-			
AC 352 R AC 427 R	Cover, Dust, Drag Link, Front Shaft, Steering, C915 R, with Worm,				j
AC 428 R	C275 R Wheel with Stop Pin, Steering Worm.	200111- 200111-	400000-404809 400000-404809	0-15000-	
AC 429 R AC 733 R	Link, Drag, Complete Arm, Steering, C292 R, R. H., with				
	Bolt	200211-211782 211800-211981			•
AC 734 R	Arm, Steering, C293 R, L. H., with Bolt	{200111-211782 211800-211981			
AC 735 R	Arm, Steering, C376 R, R. H., with Bolt	/211783-211799			
	Arm, Steering, C377 R, L. H., with	(211982-			
AC 736 R	Bolt	\(211783-211799 \)	1	l	.

Part Number	NAME AND DESCRIPTION	Serial Number			
		General Purpose	Wide Tread	Orchard	Piz
	STEERING PARTS—Continued				
AC 775 R	Link, Drag, Complete (For 42" and				
AC 803 R	28" Row Unit)			0.15000	20
AC 1019 R	Link, Drag, Complete Knuckle, Double, with Spindle		404810-	0-19000-	20
AC 1067 R	Worm and Shaft, Steering (Substitute)		l .	<u> </u>	
	for AC1015 R)		405139-		, 20
AC 1068 R AC 1129 R	Shaft Steering Worm, with Oli Seal	200111_	404810-405138	0.15000	
C 1123 R	Shaft, Steering Gear	200111-	400000-404809	0-15000-	20
232 R	Arm, Steering Gear. Worm, Steering (Substitute AC427 R	200111-	400000-404809	0-15000- 0-15000-	2
275 R	Worm, Steering (Substitute AC427 R		i .	i	. 9
276 R 321 R	Nut, Adjusting, Steering Worm Housing, Steering Gear	200111-	400000-404809	0-15000-	2
322 R	Housing, Steering Worm	200111-	400000-404809	0-15000-	2
322 R 325 R 326 R 678 R	Housing, Steering Worm Gear, Spindle		400000-404809	1	2
326 R	Gear. Steering Arm		400000-404809	0-15000-	2
678 R 838 R	Wheel, SteeringBearing, Ball Stud, Drag Link and	200111-	400000-404809	0-15000-	Z
	Tie Rod	200111-	400000-404809	0-15000-	2
840 R	Screw Plug, Drag Link and Tie Rod	200111-	↓ 400000–404809	0-15000- 0-15000-	2
909 R	Pin, Stop, Steering Shaft, Steering (Substitute AC427 R	200111-			2
915 R 918 R	Coupling Steering Shaft (Substitute	· · · · · · · · · · · · · · · · · · ·			2
, 010 11	Coupling, Steering Shaft (Substitute AC427 R)				2
934 R	Support, Steering Column	200111-	400000-404809		2
977 R	Screw, Adjusting, Steering Gear Vertical Shaft	900111	400000 404800	0.15000	
978 R	Screw, Stop, Steering Gear	200111-	400000-404803	0-15000-	2
979 R	Set Screw, Headless, Steering Shaft;				
5	Coupling	200111-210155			
989 R 1020 R	Tube, Steering Gear Vertical Shaft Tube, Steering Shaft	200111- 200111-	400000-404809	0-15000-	2
1021 R	Bushing, Steering Shaft, Upper	200111-	400000-404809	l 0-15000 -	: 2
: 1024 R	Tie Rod	200111-			2
1059 R	Washer, Thrust, Steering Worm Wheel	200111		!	
1102 R		200111-	400000-404609	0-15000-	. 2
, 1101 10	Shaft	200111-	400000-404809	0-15000-	2
1109 R		200211-	: 	0-15000-	, 2
1215 R	Spring, Oil Seal, Lower Steering Gear Shaft	200211-	400000-404809	0-15000-	20
1220 R	Dowel Pin, Steering Gear Housing	200111-	400000-404809		2
1231 R	Gasket, Steering Worm Housing (Thick)				
7 1040 D	(Thick)	200111-	400000-404809	0-15000-	20
1242 R	Gasket, Steering worm Housing	200111_	400000-404809	0_15000_	20
1373 R	Gasket, Steering Worm Housing (Thin) Shaft, Steering Arm	200111-	400000-404809	0-10000-	
2 1637 R	Housing Steering Gear			0-15000-	, 20
1638 R	Wheel, Steering Worm	· · · · · · · · · · · · · • • • • • • •	• • • • • • • • • • • • • • • • • • •	0-15000-	20
1875 R	Wheel, Steering Worm. Support, Steering Column. Tie Rod (For 42" and 28" Row Axle)			0-15000-	2
1876 R	Arm R H. Steering (For 42" and:	i			:
1055	28" Row Axle)				20
1877 R	Arm, L. H., Steering (For 42" and 28" Row Axle)				20
2023 R	Arm, Steering, R. H.	<i>.</i>		0-15000-	20
2024 R	Arm. Steering, L. H			0-15000-	20
2025 R 2027 R	Tie Rod		• • • • • • • • • • • • • • •	0-15000-	20
2021 R	Arm, Steering Gear Brace, Steering Column Support			0-15000-	2
2281 R	Support, Steering Shaft and Control	!			İ
	Quadrant		404810-	•••••	20
2312 R 2313 R	Nut, Steering Worm Adjusting. Plate, Steering Worm Adjusting. Seal, Oil, Steering Shaft.	· · · · · · · · · · · · · · · · · · ·	404810-405138	• • • • • • • • • • • • • • • • • • •	2
2313 R	Seal. Oil. Steering Shaft		404810-405138	· · · · · · · · · · · · · · · · · · ·	2
2315 R	Housing, Steering Gear	i	404810-	·	20
2316 R	Cover. Steering Gear Housing	!	404810-	• • • • • • • • • • • • • • • • • • • •	
2317 R 2318 R	Gasket, Steering Gear Housing Cover Gasket, Steering Gear Housing Cork		404810- 404810-		20
	Sector, Steering Gear Housing Cork		404810-	• • • • • • • • • • • • • • • • • • • •	: 20
2319 R	Key, Steering Sector				

Part Number	NAME AND DESCRIPTION				
		General Purpose	Wide Tread	Orchard	Plate No.
C 2321 R C 2324 R	STEERING PARTS—Continued Washer, Steering Sector Washer, Spindle, Lower Cork Re-		404810-		20
C 2324 R C 2325 R	tainer		404810-		20
C 2326 R C 2327 R	Cap, Spindle, Lower, Cork Gasket, Spindle, Lower, Cork Cap Nut, Steering Worm Adjusting		404810- 404810-		20
C 2370 R C 2371 R C 2372 R D 156 R	Cork, Steering Adjustment Plate. Steering Adjustment Bolt, Spindle Pin Taper		405139- 405139-	0-15000-	20
D 156 R D 342 R D 743 R	Key, Steering Shaft Washer, Oil Seal, Lower, Steering Gear, Vertical Shaft	200111-	400000-	0-15000- 0-15000-	20
D 825 R	Washer, Felt, Lower, Steering Gear. Shaft		400000-404809		20
D 1767 R D 1898 R JD 7205 R	Bolt, Steering Arm	200111-	··········		20 20
JD 7250 R JD 7253 R	Cone with Rollers, Steering Worm Bearing	200111-	404810- 400000- 404810-	0-15000-	20
JD 7356 R	Cone with Rollers, Steering Worm Bearing, Rear	200111-	400000-	0-15000-	20
JD 7358 R JD 7402 R	Cone with Rollers, Steering Worm Bearing, Front Cup, Steering Worm Bearing, Rear	200111-	400000- 400000-	0-15000- 0-15000-	20 20
JD 7759 JD 7792	Alemite Fitting, No. 1610, Steering Spindle and Shaft	207345-		0-15000-	20
02 1102	Shaft, 1/8"	200111-207344			20
1719 R AC 286 R	DRAWBAR Washer, Drawbar Cap Screw Drawbar, Swinging Drawbar, Swinging	200211- 200211-	400000- 400000-	0-15000-	21 21 21
AC 644 R AC 790 R AC 1037 R AC 1065 R	Drawbar (Substitute for C1376 R)		400000-	0-19000-	21 21
C 1210 R C 1211 R C 1213 R	Drawbar Cross Member for Swinging Drawbar Spacer, Drawbar	200211- 200211- 200211-	400000-	0-15000- 0-15000-	21 21 21
C 1682 R C 2011 R	bar	1	400000-	0-15000-	21 21
C 2013 R	Strap, Drawbar Support	;		0-15000-	21
AC 582 R	AC580 R PLOW SHIFTER SPECIAL EQUIPMENT Screw	200211-			. 21
AC 582 R AC 583 R C 1610 R C 1611 R	Guard Screw Gear, Vertical Bevel Yoke	200211- 200211- 200211-			. 21 . 21 . 21
C 1612 R C 1613 R C 1616 R	Bearing, R. H. Bearing, L. H. Crank, Vertical Race, Vertical Crank	200211- 200211-			. 21 . 21
C 1617 R C 1618 R C 1619 R D 403 R	Race, Vertical Crank Bearing, Vertical Crank, Lower Clamp, Vertical Crank Brace Key, Bevel Gear	200211-			. 21
AC 282 R	SEAT Spring and Leaf, Seat	200211-		9	22
AC 351 R AC 781 R	Clamp, Seat Spring, with Trip Pedal Bracket Spring and Leaf, Seat		400000-400678	8 . 0-15000-	22 22
AC 945 R	Support with Pins and Spring Support, Lower Seat Support with Pins, Upper Seat	•			
AC 946 R AD 1606 R C 1177 R C 1785 R	Support with Pins, Opper Seat	1	404810-	9	22

			Serial Number		
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plat
	SEAT—Continued		-		
C 2096 R	Clare Cast Castan and Thin Dadel				l
	Support. Support, Seat, Lower Support, Seat, Upper		404010	0-15000-	22
C 2183 R C 2184 R	Support, Seat, Lower		404810-		
C 2185 R	Pin Seat Pivot		404810-		
C 2186 R	Bracket, Seat Spring, Lower Washer, Seat Spring, Centering		404810-		
C 2187 R	Washer, Seat Spring, Centering		404810-		1
C 2188 R C 2189 R	Spacer, Seat Bolt Spring, Seat		404810- 404810-		22
C 2190 R	Nut, Seat Spring, Adjusting		404810-		
C 2191 R	Eveholt Seat Spring	I	404810-		22
C 2192 R	Bolt, Seat Pivot Link. Spacer, Seat Eyebolt		404810-		
C 2193 R	Link, Seat Pivot	• • • • • • • • • • • • • • • • • • • •	404810-	· · · · · · · · · · · · · · · · · · ·	22 22
C 2194 R C 2195 R	Rushing Seat Pivot Link		404810-		22
C 2307 R	Bushing, Seat Pivot Link Washer, Seat Pivot Link, Adjusting.		404810-	1	
D 827 R	Washer on Seat Bolt			0-15000-	22
D 897 R	Washer on Seat Bolt	200211-	400000-	0-15000-	22
D 1797 R	Nut, Seat Clamp	• • • • • • • • • • • • • • • • • • • •		0-15000-	22
	AC860 R SWING SEAT			1	
	SPECIAL EQUIPMENT		400000 404900		22
A 317 R AC 861 R	Bolt, Seat to SupportBracket Complete		400000-404809		
AD 1606 R	Seat		400000-404809		22
C 826 R	Stud. Seat Bracket		400000-404809		
C 1974 R	Spacer, Seat Support Body, Seat Support		400000-404809		
C 1975 R C 1976 R	Pivot, Seat		400000-404809		
C 1977 R	Latch, Seat. Adjusting	l <i></i> .	400000-404809	1	
C 1978 R	Pin, Latch Pivot		400000-404809		
C 1979 R	Support, Seat (Channel)		400000-404809		
C 1980 R C 1982 R	Pin, Support				
C 1983 R	Spring, Seat		400000-404809		
C 1984 R	Plate, Swivel Seat	l	400000-404809	! !••••••	22
C 1985 R	Spacer, Swivel Seat Bolt		400000-404809		22
C 2111 R	Spacer, Seat Bracket Nut, Seat Clamp				
D 1797 R E 2296 R	Spring, Seat Adjusting Latch		400000-404809		22
2 2200 20					
27 R	PLATFORM			0_15000_	28
629 R	Washer, Rear Support Angle. Washer, Platform to Support Bolts.			0-15000-	23
AC 826 R	Platform with Front Supports and Side Angles				١
	Side Angles			0-15000-	23
AC 944 R	Platform Complete	200111	404810-		23
C 943 R C 945 R	Platform Rear	200111-			2
C 946 R	Platform, Center	200111-			2
C 947 R	Platform Complete Angle, Platform Cross Platform, Rear Platform, Center Platform, Right	200111-			23
C 1032 R	Platform, Left Support, Platform, Front	200111-	1		2:
C 1177 R C 1827 R	Washer Front and Rear Support	1			-
0 1021 10	Rolts	1	1	0-15000-	2
C 2040 R	Angle, Rear Support, R. H.	1	l	0-15000-	2
C 2041 R	Angle, Rear Support, L. H			0-15000-	23
C 2042 R C 2043 R	Support, Platform, R. H			0-15000-	2
C 2045 R	Support, Platform, Front		1	0-15000-	2
C 2046 R	Angle Platform Side	1		0-15000-	2
C 2047 R	America Distinguis Cases		1	0-15000-	2
C 2176 R C 2177 R	Bracket Platform		404810-		1 -
C 2178 R	Brace, Platform	1	404810-		2
C 2271 R	Stud, Platform Support		404810-		2
D 316 R	Platform. Bracket, Platform. Brace, Platform. Stud, Platform Support. Washer, Platform, R. H. and L. H., to Support			0_15000	2
	to Support			0-10000-	1. 2.
		I	1 .	1	
	FENDERS	200225	1	}	1 -
1705 R AC 242 R	Washer, Fender Bolt Fender, Citrus Grove, R. H	200111-			2 2

			Serial Number		Pla
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	N
	FENDERS—Continued				
AC 243 R	Fonder Citrus Grove I. H	200111-			2
AC 374 R	Fender, Citrus Grove, L. H Fender, Complete, R. H Fender, Complete, L. H	200111			- 2
	Fender, Complete, 16. 11	200111			9
AC 375 R	Fender, Complete, L. H. Fender, Complete, R. H. Fender, Complete, R. H. Fender, Complete, L. H. Guard, with Brace, Pulley Guard, with Brace, Pulley Fender, Citrus Grove, R. H. Fender, Citrus Grove, L. H.	200111-	400000		3
AC 602 R	Fender, Complete, R. H		400000-		4
AC 603 R	Fender, Complete, L. H	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	400000		1
AC 738 R	Guard, with Brace, Pulley	224100-			3
AC 802 R	Guard, with Brace, Pulley	200111-224099			3
AC 810 R	Fender, Citrus Grove, R. H			0-15000-	
AC 811 R	Fender, Citrus Grove, L. H			0-15000-	1
C 821 R	Fender, Complete, R. H			0-15000-	1
AC 822 R	Fonder Complete I. H			0-15000-	
AC 827 R	Chield Dust Front D W with				
4C 021 K	Shield, Dust, Front, R. H., with Support. Shield, Dust, Front, L. H., with Support. Shield, Dust, Front, L. H.			0_15000_	
_	Support	• • • • • • • • • • • • • • • • • • • •		0-10000	١ '
AC 828 R	Shield, Dust, Front, L. H., With			0 15000	١.
	Support			0-19000-	1
AC 850 R	Shield, Dust, Front, L. H	200111-			1
AC 873 R					
	JD1212 R Wheel)		l 		i :
AC 874 R	Fender, Complete, L. H. (used with				
-0 012 W	JD1212 R Wheel)				
10-0 =	Description T. T. /Citaria Carral	000111	i		•
1052 R	Drace, render, L. H. (Citrus Grove)	200111-	· · · · · · · · · · · · · · · · · · ·		į.
1053 R	Brace, Fender, L. H. (Citrus Grove) Brace, Fender, Cross (Citrus Grove) Tie Rod, Citrus Fender	200111-			ŀ
2 1054 R	Tie Rod, Citrus Fender	200111-			1
C 1252 R	Brace, Fender, to Housing (Substi-				
		200111-			
C 1648 R	Brace, Fender, Rear		400000-		
C 1698 R	Brace, Fender, Rear	200211-224000	1		ĺ
C 1699 R	Brace, Citrus Grove Fender, R. H. Brace, Pulley Guard	204100			ļ
C 1831 R	Drace, Ottius Grove Fender, 16. 11.	224100-	1		
C 1894 R			1	1	:
7 103# E	Spacer, Rear Fender Brace (used				į
	with ACS13 R and ACS14 R)		1	0-15000-	
C 1964 R	with AC873 R and AC874 R). Support, Citrus Fender Side. Strap, Adjusting, L. H. Strap, Adjusting, R. H. Support, Citrus Fender Brace, Fender, Cross LI Polt, Fonder, Cross LI Polt, Fonder, Cross Braces			0 15000	i
C 1965 R	Strap, Adjusting, L. H	·	1	0-15000-	
C 1966 R	Strap. Adjusting, R. H		1	0-15000-	ļ
C 1967 R	Support, Citrus Fender			0-15000-	
C 2036 R	Brace Fender Cross		1	0-15000-0-15225	
C 2037 R	II-Bolt Fonder Cross Brace		1	0-15000-0-15225	
C 2050 R	Support Dust Shield Front P H	· · · · · · · · · · · · · · · · · · ·	1	0-15000-	ļ
	Support, Dust Shield, Flont, It.	· · · · · · · · · · · · · · · · · ·	1	0-15000-	!
C 2051 R	Support, Dust Snield, Front, L. H.			0-10000	i
C 2086 R	U-Bolt, Fender Cross Brace Support, Dust Shield, Front, R. H. Support, Dust Shield, Front, L. H. Brace, Fender Support, R. H.			0-15000-0-15225	
	(Short)	.		0-15000-0-15225	'
C 2087 R	Brace, Fender Support, L. H.				
	(Long)		1	0-15000-0-15225	
C 2272 R	Brace, R. H., render		1	0-10220	1
C 2273 R	Brace, L. H., Fender			0-15226-	
C 2276 R	Brace, Fender, Cross			0-15226-	i.
		· · · · · · · · · · · · · · · · · · ·			i
	MAGNETO, SPARK PLUG AND			1	İ
	CABLES			1	1
COO TO	Weshen Memote Deschet to Con-		404910		į
629 R	Washer, Magneto Bracket to Case.		404810-	0-15000-	i
AA 2044 R	Spark Plug (Edison-Splitdorf)		402040-	-	1
AC 284 R	Cable, R. H., Spark Plug	(200111-213037			:
	1	213538-214850	. 1	I I	
AC 284 R	Cable, L. H., Spark Plug	223803-	402040-404809	0-15000-	!
AC 432 R	Magneto, with Spark Advance				
	Stop (Replaced by AC1176 R,				į
			404810-405100)	1
AC 441 R	except as shown)	• • • • • • • • • • • • • • •	404010 400100	1	:
zar D	1193 R Governor Shaft)	000111 000400			•
	1 1100 It dovernor bharty	200111-203404	1		;
AC 561 R	Cable, R. H., Spark Plug	(213038-213537	400719-404809	0-15000-	
		214851	1		÷
AC 600 R	Spark Plug (Champion)	223803-	402040-	0-15000-	
AC 1032 R	Cable, R. H., Spark Plug		404810-		
	Note: (Also used on tractors equipped with AC1176 R Mag-				
	equipped with AC1176 R Mag-				i
	neto.)			1	;
AC 1033 R	Cable I. H Speak Dive		404810-	1	i
WO TOOD W	Cable, L. H., Spark Plug Note: (Also used on tractors	• • • • • • • • • • • • • • • •	202020-	1	
	Note: (Also used on tractors		1		:
	equipped with AC1176 R Mag-				i
	neto.)		i .		:
·			1		
AC 1176 R		-	(400000-404809	0-15000-	1

Part	NAME AND DESCRIPTION		Serial Number		
Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Pi
,	MACNETO SPARE DITIONE				_
	MAGNETO, SPARK PLUG AND CABLES—Continued				:
AD 529 R	Cable I. H. Spark Plug	200111_222802	400000 400000		: 0
C 363 R	Cable, L. H., Spark Plug Flange, Magneto Drive	200111-223002	400000-402039	0 15000 0 15170	
C 424 R	Plate, Magneto Timing	200111-		0-15000-0-15172	
C 471 R	Ring, Clamp, Magneto Timing	200111-	400000-	0-15000-	; 2
- 111 10			400000	0 15000	2
C 1016 R	Bracket Magneto	200111-	400000-	0-15000-	- 2
C 1203 R	Arm Magneto Control	200111-	400000-404809	0-15000-	: 2
C 1204 R	Stop Magneto Advance	200211-	400000-404009	0-15000-	2
C 1300 R	Safety Ninnle Spark Plug Cable	200211-	400000-	0-15000- 0-15000- 0-15000- 0-15000-	- 6
C 1600 R	Spark Plug	200111-222802	400000-	0-15000-	- 5
C 1603 R	Bracket, Spark Plug Cable	214851-223802	400000-402033		. 6
1631 R	Clip. Spark Plug Cable	223803-	400119-402039		
2 1756 R	Porcelain for C1600 R Spark Plug	200111-223802	40000040202	0-13000-	2
C 2057 R	Bracket, Magneto Arm, Magneto Control. Stop, Magneto, Advance. Safety Nipple, Spark Plug Cable. Spark Plug Bracket, Spark Plug Cable Clip, Spark Plug Cable. Porcelain for C1600 R Spark Plug Flange, Magneto Drive Bracket, Magneto Arm, Magneto Control. Tube. Spark Plug Cable	228221_	404000-402035	0-15173-	-
2218 R	Bracket Magneto	220221-	404810-		. 9
2229 R	Arm Magneto Control		404810-		
2304 R	Tube, Spark Plug Cable	• • • • • • • • • • • • • • • • • • • •	404810-		9
C 2305 R	Clamp Spark Plus Cable Tube		404010		9
2306 R	Tube Plug		404810-		
2331 R	Porcelain for AC600 R Spark Plug	223403-	405040	0_15000	2
2381 R	Collar, Magneto Drive	200111_	400000	0-15000-	2
316 R	Washer Magneto Bracket	200111-	400000-	0-15000- 0-15000- 0-15000-	2
D 369 R	Clamp, Wood, Spark Plug Cable	200111-	400000-404809	0-15000-	. 5
0 403 R	Tube Plug Porcelain for AC600 R Spark Plug Collar, Magneto Drive Washer, Magneto Bracket Clamp, Wood, Spark Plug Cable Key, Magneto Drive Flange Gasket, Spark Plug Shield Dust Magneto Drive	228221_	400000-404003	0-15000-	2
465 R	Gasket, Spark Plug	223803_	402030-		2
D 1945 R	Shield, Dust, Magneto Drive	220000-	302040-	0-10000-	_
	Flange		404810-		' 2
			101010		
	AC432 R MAGNETO PARTS	1			
	(JOHN DEERE)	1			;
	(Tractor serial numbers shown do	i			:
	not apply if this magneto has	1			
	been replaced by AC1176 R Fair-	İ			
	banks-Morse Type RV base	ļ		:	:
	mounted magneto.)				
AC 300 R	Holder, Brush, with Brushes and			•	
001 D	Springs	200111-200210			2
AC 301 R	Holder, Brush, with Brushes and				_
	Springs	200211-	400000-405109	0-15000-	2
AC 305 R	Starter, Impulse, Complete	200111-	400000-405109	0-15000-	2
AC 306 R	Member, Impulse Drive, with				
	Pawls, fits Armature Shaft	200111-	400000-405109	0-15000-	2
AC 1054 R	Armature, Complete	200111-	400000-405109	0–15000– ;	: 2
AC 1202 R				:	
	(Substitute for C1341 R and				-
	C1366 R)	200111-	400000-405109	0-15000-	2
3 1046 R	Lock Screw, Stationary Contact	i		!	
	Support	200111-	400000-405109		2
1302 R	Screw, Spark Advance Stop	200111-	400000-405109	0-15000-	2
1303 R	Lock Washer, Spark Advance Stop				
4055 =	Screw	200111-	400000-405109		2
1303 R	Lock Washer, End Cap Cover Screw	200111-	400000-405109		2
1303 R	Lock Washer, Brush Holder Screw.	200111-200210			2
1304 R	Machine Screw, End Cap	200111-	400000-405109	0-15000-	2
1305 R	Screw Plug, Adjustment Hole	200111-	400000-405109	0-15000-	2
1306 R	Cap, End	200111-	400000-405109	0-15000-	2
1307 R	Dust Washer, End Cap, Cork	200111-	400000-405109	0-15000-	2
1308 R	Gasket, End Cap	200111-	400000-405109	0-15000-	2
1309 R	Gears, Intermediate and Reduction				
46-4 -	Gear Holder	200111-	400000-405109	0-15000-	2
1311 R	Snap Ring, Driving Gear	200111-	400000-405109	0-15000-	2
1312 R	Driving Gear with Wood Washer.	200111-	400000-405109		2
1313 R	Key, Driving Gear	200111-	400000-405109	0-15000-	2
	Thrust Washer and Retainer, Driv-				
1314 R	ing Gear	200111-	400000-405109	0-15000-	2
	Holder, Cam	200111-	400000-405109	0-15000-	2
1315 R					2
1315 R 1316 R	Gear, Cam	200111-	400000-405109	0–15000–	
1315 R		200111-	400000-405109	0-15000-	2 2

Part		NAME AND DESCRIPTION	Serial Number			
N	umber		General Purpose	Wide Tread	Orchard	Plate No.
		AC432 R MAGNETO PARTS				:
_	1010 7	(JOHN DEERE)—Continued	000011	400000 405100	0 15000	97
ç	1319 R	Screw, Brush Holder	200211-	400000-405109		27 27
C	1320 R 1321 R	Lock Washer, Brush Holder Screw	200211- 200111-	400000-405109 400000-405109	0-15000- 0-15000-	27
č	1321 R	Brush, Collector Spring, Collector Brush	200111-	400000-405109		27
č	1324 R	Lock Washer, Collector Brush	200111-	400000-400100	0-10000-	
•	1001 10	Spring Screw	200111-	400000-405109	0-15000-	27
C	1325 R	Gasket, Brush Holder	200111-	400000-405109		27
C	1326 R	Screw, End Cover	200111-	400000-405109		27
C	1327 R	Cover, Impulse End	200111-	400000-405109		27
Č	1328 R	Felt Washer, Impulse End Cover.		400000-405109		27
Č	1329 R	Washer, Impulse End Cover Cage.	200111-	400000-405109		27 27
C	1330 R 1331 R	Lock Wire, Armature Shaft Nut Nut, Armature Shaft	200111- 200111-	400000-405109 400000-405109	0-15000- 0-15000-	27
č	1332 R	Member, Impulse Cam, fits Drive	200111-	400000-402102	0-15000-	
U	1332 K	Collar	200111-	400000-405109	0-15000-	27
C	1333 R	Spring, Impulse	200111-	400000-405109		27
č	1334 R	Pawl, Impulse Drive Member	200111-	400000-405109		27
č	1335 R	Woodruff Key, Impulse Drive				
-		Member	200111-	400000-405109	0-15000-	27
C	1336 R	Screw, Impulse Stop		400000-495109		: 27
C	1337 R	Snap Ring, Collector Ring Lock	200111-	400000-405109		27
Ç	1338 R	Ring, Collector	200111-	400000-405109		27
Č	1339 R	Screw, Collector Brush Spring		400000-405109	0-15000-	27
Ç	1342 R	Support, Stationary Contact		400000-405109	0-15000-	27
C	1344 R	Lock Washer, Stationary Contact		400000 405100	0 15000	27
C	1245 D	Support Lock Screw	200111-	400000-405109	0-15000-	21
U	1345 R	Insulator, Stationary Contact Sup-	200111-	400000-405109	0-15000-	27
C	1346 R	A TA 1 TTY 1	200111-	400000-400103	0-10000-	: - '
•	1010 1	Stationary Contact Support	200111-	400000-405109	0-15000-	; 27
C	1347 R	Pin and Washer, Fulcrum	200111-	400000-405109		27
Č	1348 R	Post, Breaker Bar Actuating Spring	200111-	400000-405109		27
C	1349 R	Screw, Condenser	200111-	400000-405109	0-15000-	27
C	1350 R	Lock Washer, Condenser Screw	200111-	400000-405109	0-15000-	27
C	1350 R	Lock Washer, Stationary Contact				. 00
~	1051 D	Primary Screw	200111-	400000-405109		27
č	1351 R	Screw, Stationary Contact, Primary		400000-405109	0-15000-	1 41
C	1352 R	Insulator, Stationary Contact, Pri-	200111-	400000-405109	0-15000-	27
C	1353 R	mary Screw	200111-	400000-405109		27
č	1355 R	Washer, Thrust, Driving End	200111-	400000-405109		27
č	1356 R	Washer, Thrust, Armature Driven		100000 100100	0 20000	-
•		End	200111-	400000-405109	0-15000-	27
C	1357 R	Frame with Washer and Outer		·		:
		Race	200111-	400000-405109	0-15000-	27
C	1358 R	Rollers with Cage (Armature Bear-				-
_		ing)	200111-	400000-405109		27
č	1359 R	Retainer for C1358 R	200111-	400000-405109		27
ç	1360 R	Magnet		400000-405109		27 27
C	1361 R		200111- 200111-	400000-405109 400000-405109		27
Ξ.		Rivet, Impulse Pawl Screw, Impulse End Cover	200111- 200111-			27
C	1363 R 1365 R	Gasket. Adjustment Hole Screw		400000-405109	0-19000-	21
U	1300 K	Plug	200111-	400000-405109	0-15000-	27
C	1367 R			100000 100100	0 10000	
•	200. 2	Washer	200111-	400000-405109	0-15000-	27
C	1368 R	Brass Shim, Armature End Plate	200111-	400000-405109		27
C	1369 R	Balls, Cam and Back Gear Ball				1
		Bearing	200111-	400000-405109	0-15000-	; 27
C	1796 R					-
~	1000	Retainer	200111-	400000-405109	0-15000-	27
C	1797 R		000111	400000 405100	0 15000	: 07
C	1700 D	Bushing	200111-	400000-405109	0-15000-	27
C	1798 R		200111	400000-405109	0-15000-	27
C	1866 R	Shaft	200111- 200111-	400000-405109		27
č	1867 R	Rivet, Breaker Bar, Retaining	200111-	400000-405109		27
	1868 R	Bushing, Breaker Bar, Retaining,		70000 TOOLOG	3 20000 -	;
C			200111_	400000-405109	0 15000	27
C		Spring Spacing	200111-	#00000-#00109	0-15000-	27

Part		NAME AND DESCRIPTION		Serial Number		- Pla
N	umber		General Purpose	Wide Tread	Orchard	No
		AC432 R MAGNETO PARTS				
		(JOHN DEERE)—Continued				1
C	1898 R	Washer, Thrust, Roller Bearing	200111-	400000-405109	0-15000-	27
č	1899 R	Holder, Intermediate Gear	200111-	400000-405109		27
č	1991 R	Washer, Wood, Driving Gear	200111-			27
č	1992 R			400000-405109		
Č	1992 R	Outer Race, Armature Bearing	200111-	400000-405109	0-15000-	27
C	1222 W	Terminal, Armature, Cupped Cop-	000111	400000 405400	0.15000	0-
~	1004 70	per	200111-	400000-405109		27
č	1994 R	Washer, Armature, Cupped	200111-	400000-405109		27
Ğ	1995 R	Brush Pin, Ground	200111-	400000-405109	0-15000-	27
C	1996 R	Lock Washer, Breaker Lever Ful-				
_		_ crum	200111-	400000-405109	0-15000-	27
C	1997 R	Bushing, Stationary Contact Sup-				1
		port	200111-	400000-405109	0-15000-	27
C	1998 R	Screw Washer, Stationary Contact				
		Support	200111-	400000-405109	0-15000-	27
C	2380 R	Gear, Intermediate	200111-	400000-405109	0-15000-	27
C	2395 R	Race, Intermediate Gear Outer	200111-	400000-405109	0-15000-	27
C	2396 R	Race, Intermediate Gear Side	200111-	400000-405109		27
Č	2397 R	Spacer, Intermediate Gear Bearing	200111-	400000-405109		2
č	2398 R	Snap Ring, Intermediate Gear		400000 400100	0 -10000-	-
•	2000 23	Bearing		400000-405109	0-15000-	27
D	395 R	Seal, Magneto	200111-			2
	330 I	Beal, Magneto	200111-	400000-405109	0-15000-	120
		AC1176 R MAGNETO PARTS				
						i
		(Fairbanks Morse Type RV base	İ			1
		mounted. Also repairs for trac-				1
		tors on which AC432 R (John		1		
		Deere) Magneto has been re-	Ì	İ		
		placed by AC1176 R)	i	İ	Magneto Serial No.	
A	692 R	Strip, Insulating Distributor Bear-			•	!
		ing	i	405110-	579-	26
A	693 R	Cover, Frame Top Gasket, Frame Top Cover		405110-	579-	26
A	694 R	Gasket, Frame Top Cover		405110-	579-	26
Ā	695 R.	Gasket, Brush Holder		405110-	579-	26
Ā	698 R	Nut. Primary Lead		405110-	579-	26
Ā	698 R	Nut, Primary Lead Nut, Stationary Contact Screw		405110-	579-	26
Ā	700 R	Snap Ring Distributor Shaft		405110-	579-	26
Â	701 R	Snap Ring, Distributor Shaft Screw, Bridge Clamp		405110-	579-	26
Ā	702 R	Cork Washer, Distributor Bearing,		405110-	319-	-
_	102 R	Oil Seal		405110	579-	26
	700 D	Carle Washen Dates Chaft		405110-		26
Ā	702 R	Cork Washer, Rotor Shaft	• • • • • • • • • • • • • • • •	405110-	579-	120
A	703 R	Retainer, Distributor Bearing, Oil			770	00
		Seal Washer		405110-	579-	26
À	704 R	Washer, Distributor Bearing, Flat.		405110-	579-	26
A	705 R	Screw, Breaker Bar Clip			579-	26
A	706 R	Snap Ring, Distributor Cup		405110-	579-	26
A	707 R	Spacer, Distributor Bearing Cup		405110-	579-	26
A	708 R	Lock Nut, Stationary Contact		!		İ
		Screw and Point		405110-	579-179114	26
A	709 R	Screw, Stationary Contact Support		405110-	579-179114	26
A	710 R	Support, Stationary Contact			579-179114	26
A	712 R	Insulator, Stationary Contact Sup-				
_		Insulator, Stationary Contact Support		405110-	579-	26
A	715 R	Pin, Breaker Bar Fulcrum		405110-	579 -	26
Ā	716 R	Strip, Insulating, Rotor Bearing		405110-	579 -	20
Ā	717 R	Washer, Insulating, Rotor Bearing			579-	2
	718 R	Torminal Drimore I and Wine		405110-	579-	2
A A		Terminal, Primary Lead Wire Washer, Oil Seal Cup		405110-		2
_	721 R	wasner, on sear cup	· · · · · · · · · · · · · · ·	405110-	579- 570	
7	722 R	Gear, RotorLock Washer, Breaker Bar Clip	· · · · · · · · · · · · · · · · · · ·	405110-	579	2
7	766 R	Lock Washer, Breaker Bar Clip				١.
		Screw		405110-	579	2
A.	766 R	Lock Washer, Stationary Contact				1_
	į	Support Screw		405110-	579-	20
A	766 R	Lock Washer, Primary Lead Nut.		405110-	579-	20
Ā	766 R	Lock Washer, Distributor Rotor			-	1
-		Screw	j	405110-	579-	2
A	766 R	Lock Washer, Condenser Screw		405110-	579-	2
Ā	766 R	Lock Washer, Rotor, Insulating		Z00770_	0.0-	-
-	100 K	Dieto Caroni		405110	570	20
	B05 20	Plate Screw		405110-	579-	
		Lock Washer, Frame Cover Screws		405110-	579-	26
A A	767 R 767 R	Lock Washer, Brush Holder Screws		405110-	579	1 20

Part Number A 768 R A 768 R A 769 R A 770 R A 894 R A 1102 R A 1103 R A 1104 R A 415 R AA 415 R AA 415 R AA 417 R AA 419 R AA 419 R AA 419 R AA 419 R AA 419 R AA 419 R	AC1176 R MAGNETO PARTS —Continued Lock Washer, Bridge Clamp Screws Lock Washer, End Cap Screws. Screws, End Cap. Gasket, End Cap. Pin, Rotor Gear. Rivet, Impulse Pawl. Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete. Bearing, Distributor.		405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110-	579— 579— 579— 579— 579— 579— 579— 579—
A 768 R A 769 R A 770 R A 894 R A 1046 R A 1102 R A 1103 R A 1104 R A 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	—Continued Lock Washer, Bridge Clamp Screws Lock Washer, End Cap Screws. Screws, End Cap. Gasket, End Cap. Pin, Rotor Gear. Rivet, Impulse Pawl. Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws. Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor.		405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579- 579-136199 579- 579- 579- 579- 579- 579- 579- 57
A 768 R A 769 R A 770 R A 894 R A 1046 R A 1102 R A 1103 R A 1104 R A 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	—Continued Lock Washer, Bridge Clamp Screws Lock Washer, End Cap Screws. Screws, End Cap. Gasket, End Cap. Pin, Rotor Gear. Rivet, Impulse Pawl. Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws. Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor.		405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579- 579-136199 579- 579- 579- 579- 579- 579- 579- 57
A 768 R A 769 R A 770 R A 894 R A 1046 R A 1102 R A 1103 R A 1104 R A 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	Lock Washer, Bridge Clamp Screws Lock Washer, End Cap Screws. Screws, End Cap Gasket, End Cap Pin, Rotor Gear Rivet, Impulse Pawl Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579- 579-136199 579- 579- 579- 579- 579- 579- 579- 57
A 768 R A 769 R A 770 R A 894 R A 1046 R A 1102 R A 1103 R A 1104 R A 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	Lock Washer, End Cap Screws. Screws, End Cap Screws, End Cap Gasket, End Cap Pin, Rotor Gear Rivet, Impulse Pawl Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor.		405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579- 579-136199 579- 579- 579- 579- 579- 579- 579- 57
A 769 R A 770 R A 894 R A 1046 R A 1102 R A 1103 R A 1104 R A 414 R AA 415 R AA 415 R AA 417 R AA 419 R	Rivet, Impulse Pawl Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579- 579-136199 579- 579- 579- 579- 579- 579- 579-
A 770 R A 894 R A 1046 R A 1103 R A 1103 R A 1104 R AA 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	Rivet, Impulse Pawl Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579-136199 579- 579- 579- 579- 579- 579-
A 894 R A 1046 R A 1102 R A 1103 R A 1104 R AA 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	Rivet, Impulse Pawl Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110- 405110- 405110- 405110- 405110-	579–136199 579– 579– 579– 579– 579– 579–
A 1046 R A 1102 R A 1103 R A 1104 R AA 414 R AA 415 R AA 416 R AA 417 R AA 419 R	Rivet, Impulse Pawl Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor.		405110- 405110- 405110- 405110- 405110- 405110- 405110-	579- 579- 579- 579- 579- 579-
A 1103 R A 1104 R AA 414 R AA 415 R AA 416 R AA 417 R AA 419 R AA 419 R	Rivet, Stationary Contact Support Insulator, Stationary Contact Support Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110- 405110- 405110- 405110-	579– 579– 579– 579– 579–
A 1104 R AA 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	Insulator, Stationary Contact Sup- port Insulator, Stationary Contact Sup- port Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110- 405110- 405110-	579- 579- 579- 579-
A 1104 R AA 414 R AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R	port Insulator, Stationary Contact Support Screw Brush Holder with Screws Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor.		405110- 405110- 405110- 405110-	579- 579- 579-
AA 414 R AA 415 R AA 415 R AA 417 R AA 417 R AA 417 R AA 419 R	Insulator, Stationary Contact Sup- port Screw Brush Holder with Screws Brush with Spring, Distributor. Brush with Spring, Collector. Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor.		405110- 405110- 405110- 405110-	579- 579- 579-
AA 414 R AA 415 R AA 415 R AA 417 R AA 417 R AA 417 R AA 419 R	port Screw Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110- 405110-	579– 579–
AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R AA 419 R	Brush Holder with Screws Brush with Spring, Distributor Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor	•••••	405110- 405110- 405110-	579– 579–
AA 415 R AA 415 R AA 416 R AA 417 R AA 419 R AA 419 R	Brush with Spring, Distributor. Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110- 405110-	579-
AA 415 R AA 416 R AA 417 R AA 419 R AA 419 R	Brush with Spring, Collector Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		405110-	
AA 416 R AA 417 R AA 419 R AA 419 R	Clamp, Bridge, with Rivet Coil, Complete Bearing, Distributor		200110-	579-
AA 417 R AA 419 R AA 419 R	Bearing, Distributor		405110	579-
AA 419 R AA 419 R	Bearing, Distributor		405110~	579-
AA 419 R	Dearing, Distributor		405110-	579-
		• • • • • • • • • • • • • • • • • • • •	405110-	579-
MA 421 R	Bearing, Rotor Shaft		405110-	579-
AA 422 R	Rotor, Distributor		405110-	
	Shaft with Gear, Distributor	• • • • • • • • • • • • • • • • • • • •	405110-	579-
AA 424 R	Cap, End, Complete	• • • • • • • • • • • • • • • • • • • •	405110-	579-179114
AA 425 R	Condenser with Lead Wire		405110-	579-
AA 428 R	Wire with Primary Lead Terminals		405110-	579-
AA 429 R	Wire with Primary Lead Terminals Member, Impulse Drive, with Pawls		405110-	579-136199
AA 1447 R	Member, Impulse Drive, with Pawls		405110-	136200-
AA 1624 R	Wick and Retainer, Rubbing Block		405110-	579-
AA 2059 R	Point, Breaker, Assembly in Carton			
	(Substitute for AA418 R and			-
	AA423 R)		405110-	579
AB 1084 R	End Cap Assembly		405110-	579-
AC 1178 R	Rotor, with Gear		405110-	579-
AC 1179 R	Frame with Lead Wire		405110-	579-
B 507 R	Rotor, with Gear		405110-	579-
B 510 R	Screw, Brush Holder		405110-	579-
B 514 R	Screw, Condenser		405110-	579-
B 514 R	Screw, Rotor, Insulating Plate		405110-	579-
B 518 R	Holder, Oil Wick		405110-	579-
B 519 R				579-
B 520 R	Lock Washer, Cam Oil Wick Holder		405110-	579-
B 595 R	Direct Impulse Perul	• · · · · · · · · · · · · · · · · · · ·	405110	136200-
B 977 R	Rivet, Impulse PawlSupport, Stationary Contact		405110-	579-
B 978 R	Insulator Stationary Contact		409110-	. 513-
o sion.	Insulator, Stationary Contact Support	:	405110	==0
B 979 R	Commercial Commercial	• • • • • • • • • • • • • • • • • • • •	405110-	579-
D SISK	Screw, Stationary Contact Sup-	:	405110	=70
1 1207 10	port	· · · · · · · · · · · · · · · · · · ·	405110-	579-
1327 R	Washer, Impulse Cup	· · · · · · · · · · · · · · · ;	405110-	579-
C 1328 R	reit wasner, impulse		405110-	579-
C 1329 R C 1330 R	Felt Washer, Impulse	• • • • • • • • • • • • • • • • • • • •	405110-	579-
	Lock wire, impulse Nut	· · · · · · · · · · · · · · · · · · ·	405110-	579-
1331 R	Nut, Impulse Coupling	· · · · · · · · · · · · · · · · · · ·	405110-	579-
1332 R	Shell, Impulse Coupling		405110-	579-
1333 R	Spring, Impulse Coupling		405110-	579-
C 1334 R	Pawl, Impulse Coupling. Key, Impulse Coupling Screw, Impulse Drive		405110-	579-
1335 R	Key, Impulse Coupling		405110-	579-
2 1363 R	Screw, Impulse Drive		405110-	579-
2435 R	Stop Pin, Impulse		405110-	579-
2436 R	Plate, Rotor, Insulating		405110-	579-
2437 R	Safety Spark Gap			579-
2496 R	Cork, Frame, Oil Seal	· · · · · · · · · · · · · · · · · · ·	405110-	579-
				į
	AC174 R ENSIGN CARBURETOR	200111 20000	100000 10011	Orchard
321 R	Gasket, Carburetor to Manifold	200111-223802		9
AC 174 R	Carburetor, Complete	200111-223802	400000402039	9:
AC 857 R	Gaskets, C1141 R, C1142 R, and			j .
	C1143 R in Envelope (sold only			!
	as AC857 R)	200111-223802	400000-402039	9
AC 1172 R	Tube, Throttle, and Venturi Nozzle	;		
	with Throttle Bearing Bushings			
	(Substitute for 1 C1155 R and 2			
İ	C1133 R)	200111-223802	400000-402039	9

	D 4	NAME AND DESCRIPTION		Serial Number		
N	Part umber	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	P
		AC174 R ENSIGN CARBURETOR —Continued				
C	1117 R	Spring, Throttle, Stop	200111-223802	400000-402039		2
Č	1118 R	Disk, Throttle				
č	1119 R	Gasket, Strainer, Cage				
C	1120 R 1121 R	Screw, Float Lever	200111-223802 200111-223802		'	
č	1122 R	Float, Cork				
Ċ	1123 R	Lever, Float	200111-223802	400000-402039		2
Č	1125 R	Pivot, Float Lever	200111-223802			
C	1126 R 1127 R	Screen, Strainer, Cage Nut, Strainer, Cage	200111-223802 200111-223802			
č	1128 R	Control, Fuel	200111-223802			
Ċ	1129 R	Cover, Fuel Bowl	200111-223802			1
Č	1130 R	Screw, Idle Speed Adjusting				
C	1131 R 1132 R	Disk, Choker			· · · · · · · · · · · · · · · · · · ·	
č	1132 R	Staple, Choker and Throttle Disk. Bushing, Throttle, Bearing			**************************************	
č	1134 R	Cage, Strainer				
C	1135 R	Screw, Throttle Shaft Pin	200111-223802			
C	1136 R	Screw, Fuel Bowl	200111-223802			
C	1137 R 1138 R	Spring, Needle Valve Plug, 5/16", Welsh	200111-223802 200111-223802			
ž	1139 R	Plug. 3/16". Welsh	200111-223802			
Č	1140 R	Plug, 3/16", Welsh Plug, 1/8", Welsh	200111-223802			
C	1144 R	Washer, Choker, Friction Screw,				
~		Large				2
C	1145 R 1146 R	Screw, Choker, Lever, Friction Washer, Choker, Friction Screw,		400000-402039		1
0	1140 T	Small	200111-223802	400000-402039		:
C	1148 R	Spacer, Choker, Friction Screw	200111-223802			
2	1149 R	Spring, Choker, Lever, Friction	200111-223802			
Ç	1150 R	Shaft, Throttle, with Lever	200111-223802			
C	1151 R 1152 R	Shaft and Lever, Air Choker Valve, Float				
č	1153 R	Screw, Load Adjusting				
Ċ	1154 R	Screw, Idle Adjusting	200111-223802			
C	1155 R	Body Casting				
Ç	1574 R	Lock Washer, Bowl Cover Screw.				
S	1121	Cock, Drain (Schebler No.)	200111-223802	400000-402039		2
	•	CARBURETOR				
		NOTE: The AC725 R Carburetor is also used on the same series of	1			
		tractors. Check illustrations of	į			
		both carburetors to establish	ļ			
		correct identification of the carburetor before ordering re-				
		pairs.	į	İ		
	1-K	Spring, Friction Ball (Was 57W)	223803-	402040-404809		2
	15-29	Screw, Choker Disk (Was SI-18) Screw, Adjusting, Throttle Lever	223803-	402040-404809	0-15000-	2
	15-57	(Was 71W)	223803-	402040-404809	0-15000-	2
1	5-285	Screw, Throttle Disk (Was 70W)	223803-	402040-404809		2
	18-0	Spring, Throttle Stop	223803-	402040-404809	0-15000-	2
	25-J	Spring, Nozzle Retaining (Was	000000	100010 101000	0 15000	
		65W)	223803-	402040-404809	0-15000-	2
		68W)	223803-	402040-404809	0-15000-	2
	25-₹		223803-	402040-404809		2
	25-V 321 R		220000		1	
ΔB		Gasket, Carburetor to Manifold Lever and Shaft, Choker (Substi-				2
	321 R 1843 R	Gasket, Carburetor to Manifold Lever and Shaft, Choker (Substi- stitute for X2460)	223803-	402040-404809	0-15000-	
C	321 R 1843 R 610 R	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460)		402040-404809 402040-404809	0-15000- 0-15000-	2
۲C	321 R 1843 R	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460) Carburetor, (Replaces AC725 R). Bushing, Fuel Line to Carburetor	223803- 223803-	402040-404809	0-15000-	
C	321 R 1843 R 610 R	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460)	223803-		0-15000- 0-15000-	4
OL OL	321 R 1843 R 610 R 392 R T 7-A T-13	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460) Carburetor, (Replaces AC725 R). Bushing, Fuel Line to Carburetor (Schebler S2192) Bowl, Casting (Was 97W) Bowl, Casting (Was B449 R)	223803- 223803- 223803-	402040-404809 402040-404809	0-15000- 0-15000- 0-15000-	4
AC D DL	321 R 1843 R 610 R 392 R	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460) Carburetor, (Replaces AC725 R). Bushing, Fuel Line to Carburetor (Schebler S2192) Bowl, Casting (Was 97W) Bowl, Casting (Was B449 R) Washer, Choke Lever Friction	223803- 223803- 223803- 223803- 223803-	402040-404809 402040-404809 402040-404809 402040-404809	0-15000- 0-15000- 0-15000- 0-15000-	2 62 62
AC D DL DL	321 R 1843 R 610 R 392 R T 7-A T-13 52	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460). Carburetor, (Replaces AC725 R). Bushing, Fuel Line to Carburetor (Schebler S2192). Bowl, Casting (Was 97W). Bowl, Casting (Was B449 R) Washer, Choke Lever Friction Spring (Was 72W).	223803- 223803- 223803- 223803- 223803-	402040-404809 402040-404809 402040-404809 402040-404809 402040-404809	0-15000- 0-15000- 0-15000- 0-15000-	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
AC D	321 R 1843 R 610 R 392 R T 7-A T-13	Gasket, Carburetor to Manifold. Lever and Shaft, Choker (Substistitute for X2460) Carburetor, (Replaces AC725 R). Bushing, Fuel Line to Carburetor (Schebler S2192) Bowl, Casting (Was 97W) Bowl, Casting (Was B449 R) Washer, Choke Lever Friction	223803- 223803- 223803- 223803- 223803-	402040-404809 402040-404809 402040-404809 402040-404809	0-15000- 0-15000- 0-15000- 0-15000- 0-15000-	4

^{*}Used only on Carburetors with Cast Iron Bodies. †Used only on Carburetors with Bronze Bodies.

	NAME AND DESCRIPTION	Serial Number			
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Pla No
	AC610 R SCHEBLER				į
D 504 .	CARBURETOR—Continued				
P 791	Gasket, Float Valve Seat (Was	223803-	402040-404809	0-15000-	28
P 850	Washer, Choke Friction (Was		102010 101000	0 10000	
D 045	74W)	223803-	402040-404809		28
P 947 P 948	Lever, Float (Was 75W) Disk, Throttle (Was 76W)	223803- 223803-	402040-404809 402040-404809		28
P 950	Gasket, Strainer (Was 77W)	223803-	402040-404809		28
P 951	Gasket, Bowl (Was 78W)	223803-	402040-404809		28
S 93B	Screw, Throttle Lever and Bushing Retainer (Was 17W)	223803-	402040-404809	0-15000-	28
S 98	Pipe Plug, Hex Head (Was 79W).	223803-	402040-404809		28
S 98B	Pipe Plug, Headless (Was 80W)	223803-	402040-404809		28
S 211G	Pin, Throttle Lever Stop (Was	000000	400040 404000	0 15000	
S 245	67W) Lock Washer, Throttle Disk	223803-	402040-404809	0-15000-	28
~ 410	Screws (Was 81W)	223803-	402040-404809	0-15000-	28
S 251A	Ball. Friction (Was 41W)	223803-	402040-404809		28
S 763	Screw Plug, Drilled Holes (Was	223803-	402040-404809	0_15000	28
S 1096	A1830 R)	223803- 223803-	402040-404809 402040-404809		28
S 1121	Cock. Drain	223803-	402040-404809		28
S 1393	Lock Washer, Choker Disk Screw	999999	400040 404000	0 15000	28
S 1506	(Was 63W)	223803- 223803-	402040-404809 402040-404809		28
S 2041	Drill Plug, 7/32", 32 (Was 83W) Drill Plug, 1/4", 28 (Was 85W)	223803-	402040-404809		28
S 2146	Pin, Float Pivot (Was 90W)	223803-	402040-404809		28
S 2147	Screw, Float Bearing (Was 91W).	223803-	402040-404809	0-15000-	28
S 2150	Shaft, Throttle (used with DLT8-A: Carburetor Body) (Was 92W)	223803-	402040-404809	0-15000-	28
S 2151-C	Idle Plug, (Substitute for S2151A)				
0154	(Was A832 R)	223803-	402040-404809		28
S 2154 S 2183A	Screw, Choker, Friction (Was 94W) Nozzle (Was 95W)	223803- 223803-	402040-404809 402040-404809		28
2185	Bushing, Throttle Shaft, Lower		102010 101000	0 10000	
	(used with DLT8-A Carburetor	000000	400040 404000	0 15000	
3 2369	Body) (Was 96W)	223803- 223803-	402040-404809 402040-404809		28
2424	Nut. Bowl Retaining (Was B450 R)	223803-	402040-404809		28
5 2471	Bushing, Throttle Shaft, Upper				
	(used with X2646 and X2771 Carburetor Bodies) (Was C-				
	2504 R)	223803-	402040-404809	0-15000-	28
S 2472	Bushing, Throttle Shaft, Lower				
	(used with X2646 Carburetor	999999	102040 404800	0 15000	28
S 2482	Body) (Was C2505 R) Bushing, Throttle Shaft, Lower	223803-	402040-404809	0-19000-	40
	(used with X2771 Carburetor				!
2 0500	Body) (Was D2530 R)	223803-	402040-404809	0-15000-	29
3 2502	Screw Plug, for Drilled Holes (Was 45W)	223803-	402040-404809	0-15000-	1
SI -10	Screw, Throttle Lever Adjusting:				;
	Screw Clamp (Was 10W)	223803-	402040-404809		28
K 1178B K 2457	Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was	223803-	402040-404809	0-19000-	28
	69W)	223803-	402040-404809	0-15000-	28
Z 2458	Needle, Load	223803-	402040-404809		28
X 2461 X 2462	Needle, Idle	223803- .223803-	402040-404809 402040-404809		28
X 2487	Lever and Bushing, Throttle (used	.22000	102010-101000	0-10000-	
	with DLT8-A Carburetor Body)	223803-	402040-404809	0-15000-	: 28
X 2646	Body and Bushing, Complete (Bronze) (Was C2503 R)	223803-	402040-404809	0_15000-	28
X 2647	Lever, Throttle (used with X2646)	220000-	4040-4040UJ	0-19000-	40
	and X2771 Carburetor Bodies)				:
V 0659	(Was C2500 R)	223803-	402040-404809	0-15000-	28
X 2653	Valve and Seat, Float (Was C-2501 R)	223803-	402040-404809	0-15000-	28
					İ

^{*}Used only on Carburetors with Cast Iron Bodies. †Used only on Carburetors with Bronze Bodies.

Part	NAME AND DESCRIPTION	Serial Number			
Number	MAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	_
	AC610 R SCHEBLER				i
	CARBURETOR—Continued				.
2771	Body and Bushing Assembly (Cast				
	Iron) (Was AC1173 R)	223803-	402040-404809	0-15000-	i
2960	Body and Bushing Assembly (Bronze) (Substitute for DLT8-A)	223803-	402040-404809	0-15000-	
			,		
	AC725 R ENSIGN CARBURETOR NOTE: The AC610 R Carburetor				
	is also used on the same series of		!		
	tractors. Check illustrations of				- 1
	both carburetors to establish		:		!
	identification of the carbu- retor before ordering repairs.				:
321 R	Gasket, Carburetor to Manifold	223803-	:	0-15000-	1
C 725 R	Carburetor, Complete (replaced by			0 10000	i
	AC610 R)		'		!
1117 R	Spring, Throttle Stop	223803-			:
1119 R	Gasket, Strainer, Cage	223803-	·		i
1120 R	Screw, Float Lever	223803- 223803-			i
1125 R	Pivot, Float Lever	223803-		0-15000-	
1126 R	Screen, Strainer, Cage	223803-		0-15000-	
1127 R	Nut, Strainer, Cage	223803	1		:
1130 R	Screw, Idle Speed Adjusting	223803-			
1131 R	Disk, Choker				!
1132 R 1134 R	Staple, Choker and Throttle Disk. Cage, Strainer				•
1134 R	Screw, Fuel Bowl				
1137 R	Spring, Needle Valve		·		
1138 R	Plug, 5/16", Welsh	223803-			
1139 R	Plug, 5/16", Welsh Plug, 3/16", Welsh	223803-	· · · · · · · · · · · · · · · · · · ·	0-15000-	,
1144 R	Washer, Choker Friction Screw,		ļ	0 15000	:
1145 R	Screw, Choker Lever Friction.				
1146 R	Washer, Choker Friction Screw,	22000-	; · · · · · · · · · · · · · · · · · · ·	0~15000-	:
	Small	223803-		0-15000-	
1148 R	Spacer, Choker Friction Screw.	223803-		0-15000-	
1149 R	Spring, Choker Lever Friction	223803-		0-15000-	
1152 R	Valve, Float	223803- 223803-	· · · · · · · · · · · · · · · · · · ·	0-15000-	
2 1574 R 2 1841 R	Lock Washer, Bowl Cover Screw Body Casting			0-15000- 0-15000-	
1842 R	Control, Fuel	223803-	:	0-15000-	
1843 R	Bowl. Fuel	223803-		0-15000-	
1844 R	Shaft, Throttle and Stop Assembly	223803-	1	0-15000-	
1845 R	Disk, Throttle	223803-			
1846 R 1847 R	Screw, Throttle Shaft	223803- 223803-	*		
1848 R	Screw, Idle Adjusting	223803-	j	0-15000-	
1849 R	Screw, Load Adjusting.	223803-	; 	0-15000-	
1850 R	Float, Cork, with Lever	223803-	!	0-15000-	
1852 R	Needle Valve, Load	223803-	:		
1853 R	Spring, Needle Valve	223803-			
1854 R 1855 R	Gasket, Fuel Bowl Bushing, Throttle, Bearing	223803- 223803-	·		
1856 R	Bleed Screw (No. 70) in Body Cast-	220000		0-10000-	
	ing	223803-		0-15000-	
2 1857 R	Bleed Screw (No. 46) in Body Cast-				
1 1050 -	ing, in Fuel Control	223803-		0-15000-	:
1858 R	Bleed Screw (No. 53) in Body Cast-	223803-		0-15000-	
1859 R	Bleed Screw (No. 52) in Fuel Con-	220000-	1		-
	trol	223803-			1
1861 R	Fuel Orifice, in Fuel Control	223803-			:
1862 R	By-Pass Plug, 1/4", Welsh	223803- 222802-		0-15000-	
7 1863 R	Plug, Balance Tube, 3/8", Welsh.	223803-		0-15000-	
					}
					ļ
			i		
	1				i

^{*}Used only on Carburetors with Cast Iron Bodies.

Part		NAME AND DESCRIPTION		Serial Number		- Pla
Numi		NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No
		AC725 R ENSIGN CARBURETOR				İ
		-Continued				İ
C 18	64 R	Plug, Dust Cover, 7/16", Welsh	223803-		0-15000-	2
	69 R	Screw Plug. Fuel Control	223803-			2
	92 R	Bushing, Fuel Line to Carburetor	223803-			2
S 11	21	Cock, Drain (Schebler No.)	223803-		0-15000-	2
		AC999 R SCHEBLER				
	1 17	CARBURETOR Spring, Friction Ball (Was 57W)		404810-		2
15-	1-K	Screw, Choker Disk (Was SI-18).		404810-		i -
15-		Screw, Choker Disk (Was Si-16).		101010-		-
10-		(Was 71W)		404810-	 	2
15-2	85	Screw, Throttle Disk (Was 70W)		404810-	i 	
	18-0	Spring, Throttle Stop		404810-		2
	25-J	Spring Nozzle Retaining (Was		4		
		65W)		404810-		2
	25-₹	Spring, Choker Lever Priction (Was:		1		
		68W)		404810-		2
AB 18	43 R	Lever and Shaft, Choke (Substitute for X2460)		404810-		2
AC ^	00 B	Carburetor Complete			ĺ	_
	99 R 92 R	Bushing, Fuel Line to Carburetor	• • • • • • • • • • • • • •	101010-		"
י ע	32 16	(Schebler S2192)	·	404810-	İ <i></i>	2
DLT '	7-A	Bowl Casting (Was 97W)		404810-		2
DLT-		Bowl Casting (Was B449 R)		404810-		2
	52	Washer Choke Lever Friction		i		1_
		Spring (Was 72W)		404810-		
	48	Disk, Air Valve Choker		404810-		
	10	Gasket, Bowl Nut (Was B457 R)	· · · · · · · · · · · · · · · ·	404810-		: 2
	13	Gasket, Bowl Nut (Was 64W).		404810-		. 2
P 7	91	Gasket, Float Valve Seat (Was		404810-	l	2
.	50	73W) Washer, Choker Friction (Was		404010-		-
P 8	. DU	74W)		404810-	l	2
P 9	47	Lover Float (Was 75W)		404810-		2
	48	Disk, Throttle (Was 76W)		404810-		. 2
	50	Gasket Strainer (Was 77W)		404810-	1	. : 2
P 9	51	Gasket, Bowl (Was 78W)		404810-		2
	93B	Screw. Throttle Lever and Bush-		:		_
		ing Retaining (Was 17W)	.	404810-		
	98	Pipe Plug, Hex. Head (Was 79W)	• • • • • • • • • • • • • •	404810-		
	98B	Pipe Plug, Headless (Was 80W)		404810-		2
S 2	11G	Stop Pin, Throttle Lever (Was		404810-		2
S 2	4 5	67W) Lock Washer, Throttle Disk Screw		404010-		-
S 2	45	(Was 81W)		404810-		2
S 2	51A	Rall Friction, Adjusting Needle		1		-
	014	(Was 41W)		404810-	 	2
S 7	63	Plug Screw Drilled Holes (Was				
		A1830 R)		404810-		
	96	Nut. Bowl. Retaining (Was 46 W)		404810-		
	.21	Cock, Drain		404810-		2
S 13	93	Lock Washer, Choker Disk Screw		404010		0
n		(Was 63W)	· · · · · · · · · · · · · · · · · · ·	404810-		
	06	Drill Plug, 7/32", 32 (Was 83W) Drill Plug, 1/4", 28 (Was 85W)	· · · · · · · · · · · · · · · · · · ·	404010-		1 5
	41	Drill Flug, 1/4", 20 (Was of W)	• • • • • • • • • • • • • • • • • • • •	404810-		5
	.46 .47	Pin, Float Pivot (Was 90W) Screw, Float Bearing (Was 91W)		404810-		2
	.51-C	Idle Plug, (Was A832 R)		404810-		
	.51-C .54	Screw Choker Friction Spring		i		1
~ 41		(Was 94W)		404810-		2
S 21	.83A	Nozzle (Was 95W)		404810-		2
	69	Shaft, Throttle (Was C2502 R)		: 404810 -		2
S 24	24	Nut. Bowl Retaining (Was B450 R)		404810-		2
	71	Bushing, Throttle Shaft, Upper (Was C2504 R)		10.000		1
_		(Was C2504 R)		404810-		2
S 24	72	Bushing, Throttle Shaft, Lower (Was C2505 R)		404910	 	2
a ^-	00	(Was C2505 K)		404810-		4
S 24	82	Bushing, Throttle Shaft, Lower (Was D2530 R)		404810-	 	2
	02	Plug Screw for Drilled Holes (Was		101010		-
S 25		I I INV DUTEW TOT LITTIEU TIVIES (WAS		ı	 	

^{*}Used only on Carburetors with Cast Iron Bodies.

X 1178B X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 394 R *AA 395 R	AC999 R SCHEBLER CARBURETOR—Continued Screw, Throttle Lever Adjusting Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was 69W) Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R) Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R) AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose Spring, Cup Disk Retaining.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404000-402444	Orchard	29 29 29 29 29 29 29
X 1178B X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 394 R *AA 395 R	CARBURETOR—Continued Screw, Throttle Lever Adjusting Screw Clamp (Was 10W) Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was 69W) Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404000-402444		29 29 29 29 29 29 29
X 1178B X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 394 R *AA 395 R	CARBURETOR—Continued Screw, Throttle Lever Adjusting Screw Clamp (Was 10W) Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was 69W) Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404000-402444		29 29 29 29 29 29 29
X 1178B X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 394 R *AA 395 R	Screw, Throttle Lever Adjusting Screw Clamp (Was 10W) Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was 69W) Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404000-402444		29 29 29 29 29 29 29
X 1178B X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Screw Clamp (Was 10W). Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was 69W). Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404000-402444		29 29 29 29 29 29 29
X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 688 R *A 690 R *A 394 R *AA 394 R	Screw and Washer, Float (Was 4W) Float, Cork, with Washer (Was 69W) Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404000-402444		29 29 29 29 29 29 29
X 2457 X 2458 X 2461 X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 688 R *A 690 R *A 394 R *AA 394 R	Float, Cork, with Washer (Was 69W) Needle, Load Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810-		29 29 29 29 29 29
X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Needle, Load Needle, Idle Needle, Idle Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 404810- 404810- 404810-		29 29 29 29 29 29
X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 400000-402444		29 29 29 29 29
X 2462 X 2646 X 2648 X 2653 *X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Strainer, Complete Body and Bushing (Was C2503 R) Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501 R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 404810- 404810- 400000-402444		29
27 R 1563 R *A 2447 R *A 4447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501R). Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 400000-402444		29
27 R 1563 R *A 2447 R *A 4447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Lever, Throttle (Was 2506 R). Valve and Seat, Float (Was C2501R). Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 404810- 400000-402444		29
27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Valve and Seat, Float (Was C2501R) Body and Bushing Assembly (Was AC1173 R). AIR CLEANER Washer, Air Cleaner. Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose.	200111-223802 223802-	404810- 404810- 400000-402444		29
*X 2771 27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R	Body and Bushing Assembly (Was AC1173 R)	200111-223802 223802-	404810- 400000-402444		ĺ
27 R 1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	AC1173 R)	200111-223802 223802-	400000-402444	:	2
1563 R *A 444 R *A 447 R *A 688 R *A 690 R *AA 394 R *AA 395 R	AIR CLEANER Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose	200111-223802 223802-	400000-402444	:	-
1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Washer, Air Cleaner Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose	223802-	400000-402444		
1563 R *A 444 R *A 447 R *A 688 R *A 690 R *A 394 R *AA 395 R	Pin, Air Cleaner Cover, Connecting Hose, Air Cleaner Clamp, Air Cleaner Hose	223802-	400000-402444		4
*A 444 R *A 447 R *A 688 R *A 690 R *AA 394 R *AA 395 R	Hose, Air Cleaner Clamp, Air Cleaner Hose	223802-			30
*A 447 R : *A 688 R : *A 690 R : *AA 394 R *AA 395 R	Clamp, Air Cleaner Hose			0-15000-0-15588	
*A 688 R *A 690 R *AA 394 R *AA 395 R		230514-			30
*A 690 R *AA 394 R *AA 395 R	Spring, Cub Disk Relaining.				30
*AA 394 R *AA 395 R					30
*AA 395 R	Washer, Cup, Retaining Rod Disk, Air Cleaner Cup	230514- 230514-	· · · · · · · · · · · · · · · · · · ·		30
	Rod, Air Cleaner Cup Retaining				3(
	Air Cleaner, AC479 R, with Air	200014		0-10003-	31
	Stack Elbow, C384 R	212555-223802	400538-402444	<u> </u>	30
AC 663 R	Air Cleaner, Complete (Part of			1	1
	AC560 R, AC563 R and AC-	!	!	:	
	565 R Air Cleaner Assemblies	200111-212554			١
AC 741 R	Bail, Air Cleaner Cover	223803-230513	402445-404809	0-15000-0-15588	3
AC 745 R	Container, C1822 R, Air Cleaner	000000 000510	400445 404000		١.
A C . C . C . D	with Gasket	223803-230513	402445-404809	0-15000-0-15588	30
AC 747 R	Cover, C1821 R, Air Cleaner, with	000000 000510	400445 404000	0 15000 0 15500	
AC 955 R	AC741 R Bail Cover and Stack, Air Cleaner,	223803-230513	402445-404809	0-15000-0-15588	30
AC 330 K	C2234 R		404810-		i
AC 956 R	Bail, Air Cleaner Cover		404810-		3
AC 1093 R	Core, Air Cleaner, Complete (Sub-		101010		. "
	stitute for C1824 R)	223803-229215	402445-404809	0-15000-0-15411	
AC 1095 R	Body, Air Cleaner	229216-230513		0-15412-0-15588	- 30
AC 1096 R	Screen, Air Cleaner	229216-230513	'	0-15412-0-15588	30
AC 1097 R	Core, Air Cleaner	229216-230513		0-15412-0-15588	30
AC 1168 R	Air Cleaner, Vortox, and Connect-				İ
:	ing Parts, Complete (Field Change	000000 000710	100115 101000	0 15000 0 15500	l
* A C 4100 D	Assembly)	223803-230513	402445-404809	0-15000-0-15588	1.
*AC 1169 R	Body, Air Cleaner			0-15589- 0-15589-	3
*AC 1170 R AD 115 R	Cup, Air Cleaner, Complete		400000 402441	0-15569-	3
C 265 R	Pipe, Intake, Carburetor to Air	200111-220002	400000-402444	1	0
200 10	Cleaner	200111-212554	400000-400537	i 	3
C 385 R	Pipe, Intake, Carburetor to Air				
	Cleaner	212555-223802	400538-402039	į .	30
C 910 R	Brace, Air Cleaner	200111-212554	400000-400537	' 	3
C 1033 R	Gasket, Intake Pipe to Air Cleaner		400000-400537	1	3
C 1629 R	Pipe, Intake, Carburetor to Air				j
	Cleaner (use in AC576 R As-			İ	
G 4500 D	sembly)	· • · · · · • • • · · • • • · ·			3
			402040-402444		3
C 1751 R	Washer (Inside) Air Cleaner Brack- et Reinforcing	200111-223802	400000 402444		3
C 1753 R	Washer (Inside) Air Cleaner Flange	200111-220002	400000-402444	:;	0
0 1.00 20	Reinforcing	200111-223802	400000-402444	· · · · · · · · · · · · · · · · · · ·	3
C 1825 R	Gasket, Filter Core.	223802-230513	402445-	0-15000-0-15588	3
	Washer, Cover Pin		402445-404809		3
C 1828 R	Tube, Ventilator in Air Cleaner				
	Cover	223803-229215	402445-404809	0-15000-0-15411	3
C 1987 R	Pipe, Intake, Carburetor to Air		1		
1	Cleaner (used in AC871 R As-		400000 1000		
a 1000 5	sembly)	212555-223802	400538-402039	¶ 	3
C 1989 R	Pipe, Intake, Carburetor to Air		1		1
:	Cleaner (used in AC870 R As-		1		•

*Used only on Carburetors with Cast Iron Bodies.

**Also repairs for tractors equipped with AC1168 R Vortox Air Cleaner Replacement Assembly. This unit can be distinguished by the casting number C2424 R appearing on the air cleaner bracket.

	NAME AND DESCRIPTION	Serial Number			
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Plate No.
	AIR CLEANER—Continued				
C 2230 R	Core, Air Cleaner Filter		404810-		30
C 2235 R	Gasket, Air Cleaner Cover	"	404810-		
C 2239 R	Stud, Air Cleaner Cover Bail Bail Tightener, Wheel, Hand		404810-		30
C 2240 R	Bail Tightener, Wheel, Hand		404810-		30
C 2241 R	Elbow, Carburetor Intake		404810-		30
C 2243 R	Plate, Air Cleaner Cover Gasket, Air Cleaner Cover Plate Retainer, Air Cleaner Screen Pin, Pilot, Air Cleaner Screen Bracket, Air Cleaner Screen Bracket, Air Cleaner Clamp, Air Cleaner Elbow, Carburetor Gasket, Intake Pipe to Carburetor Gasket, Air Cleaner Pipe Flange, Air Cleaner Flange Flange, Air Cleaner Flange Flange, Air Cleaner Flange Flange, Air Cleaner Screw Cap	• • • • • • • • • • • • •	404810-		30
C 2244 R	Gasket, Air Cleaner Cover Plate	000016 000519	404810-	0 15410 0 15500	30
C 2399 R C 2405 R	Din Dilot Air Cleaner Screen	229210-230313		0-15412-0-15500	30
C 2406 R	Pin. Air Cleaner Screen	229216-230513		0-15412-0-15588	
**C 2424 R	Bracket. Air Cleaner	230514-		0-15589-	30
**C 2425 R	Clamp, Air Cleaner	230514-		0-15589-	30
**C 2429 R	Elbow, Carburetor	230514-	 	0-15589-	30
D 1034 R	Gasket, Intake Pipe to Carburetor	200111-223802	400000-402444		30
D 1037 R	Gasket, Air Cleaner Pipe	200111-223802	400000-402444		30
D 1040 R	Flange, Air Cleaner	200111-223802	400000-402444		30
D 1051 R	Gasket, Air Cleaner Flange	200111-223802	400000-402444		30
D 1414 R	Flange, Air Cleaner Screw Cap Cap, Filter Collar Screw				
D 1415 R D 1513 R	Washer, Felt, Air Cleaner Filter	200111-225502	400000-402444		90
D 1919 W	Collar	200111-223802	400000-402444		30
D 1748 R	Bail Tightener (Handwheel) Air	200111 220002	100000 10111		
2 1.10 11	Cleaner	223803-230513	402445-404809	0-15000-0-15588	30
D 1749 R	Bolt, Cover Clamp, Air Cleaner	223803-230513		0-15000-0-15588	30
D 1790 R	Gasket, Air Cleaner to Carburetor.	223803-	402445-	0-15000-	30
D 1820 R	Rivet, Air Cleaner Cover Bail (Oval				
	Head Rivet)				
D 2234 R	Plug, Air Cleaner Container				
D 2237 R	Plug, Air Cleaner Cover				
K 2471 R	Pipe Plug, Air Cleaner Cover Plate		404810-		30
	AUXILIARY AIR CLEANER				
	AND STACK			,	
1454 R	Drain Plug, Auxiliary Air Cleaner.	200111-	400000-	0-15000-	29
AC 799 R	Air Cleaner, Auxiliary, Complete.			0-15000-	29
AC 955 R	Cover and Stack, Air Cleaner				
	(C2234 R)		404810-	0-15589-	
**AC 1167 R	Adapter, Air Stack	230514-		0-15589-	29
AD 343 R	Air Cleaner, Auxiliary, Complete.	200111-223802	400000-402444		29
AD 825 R	Air Cleaner, Auxiliary, Complete.	223003-	402440- 400528-402444		29
C 384 R C 398 R	Elbow, Air Cleaner Stack Elbow, Air Cleaner Stack for	212000-220000	400000-402444		43
O 330 K	AC560 R. AC563 R and AC565 R				
	Air Cleaner	200111-212554	400000-400537		29
C 1116 R	Cap, Air Cleaner Dust Receptacle.	200111-212554	400000-400537		29
C 1503 R	Bracket, Air Stack Elbow for (AC-				
	560 R, AC563 R and AC565 R				
	Air Cleaners	200111-212554	400000-400537		29
C 1664 R	Gasket, Air Cleaner to Air Stack	000111 000000	400000 400444		29
C 2007 R	Elbow	200111-223802		0-15000-0-15588	
	Elbow, Auxiliary Air Cleaner				29
**C 2427 R D 1914 R	Adapter, Auxiliary Air Cleaner Gasket, Auxiliary Air Cleaner		• • • • • • • • • • • • • •	0-10000-	23
D 1314 W	Flange	223803-	402445-404809	0-15000 -	29
	2 101150		102110 101010	,	
	TOOL BOX AND TOOLS	:			
AC 228 R	Tool Box Complete. Tool Box Complete.	200111-		<u> </u>	24
AD 840 R	Tool Box Complete.		400000-	0-15000-	24
C 1219 R	Bracket, Tool Box Support	200211-	400000		24
C 1579 R	Gauge, Tappet	200111-	400000-	0-19000-	24
C 1591 R	Wrench, Socket, 5/8", for Cylinder Head Nuts	200111-	400000-	0-15000-	24
D 1083 R	Wrench, Socket, for Connecting	200111-	30000-		~~
	Rod Nuts	200111	400000-	0-15000-	24
D 2063 R	Wrench Lug	200111-	400000-	0-15000-	24 24 24
D 2064 R	Rod Nuts Wrench, Lug Wrench, Flywheel	200111-	400000-	0-15000	
E 2125 R	Wrench, Flywheel Funnel Grease Gun, Model No. 6556	200111-	40000- 400000- 400000- 400000-	0-15000-	24
JD 7751	Grease Gun, Model No. 6556	207345-	400000-	0-15000-	24
JD 7752	Grease Gun, No. 6556 F	200111-207344	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	24
		İ			
JD 7752	Grease Gun, No. 6556 F	200111-207344			

^{**}Also repairs for tractors equipped with AC1168 R Vortox Air Cleaner Replacement Assembly. This unit can be distinguished by the casting number C2424 R appearing on the air cleaner bracket.

p	art	NAME AND DESCRIPTION		Serial Number		- Plate
Nui	mber		General Purpose	Wide Tread	Orchard	No.
		POWER SHAFT PARTS				
	56 R	Key, Power Shaft, Bevel Pinion	200111-	400000-	0-15000-	31
AC	210 R	Gear with Bushing, Idler.	200111-		0-15000-	31
AC	386 R	Housing, C342 R, with Studs,			2,5000	-
_		Power Shaft	200111-	400000-	0-15000-	31
ç	154 R	Lock Nut, Power Shaft Housing	200111-	400000-	0-15000-	31
C	315 R 343 R	Gear, Spur, Power Shaft	200111-	400000-	0-15000-	31
č	346 R	Cap, Power Shaft, Front. Cap, Power Shaft, Rear	200111-	400000- 400000-	0-15000 - 0-15000-	31 31
č	691 R	Lock Washer, Power Shaft Quill	200111-	400000-	0-15000-	31
C	719 R	Stud, Power Shaft Housing to Case		400000-	0-15000-	31
	1098 R	Bushing, Power Shaft Idler Gear	200111	400000	015000	31
	1246 R	Washer, Power Shifter Spacing	200111-	400000-	0-15000-	11
C :	1269 R	Brace, Power Shaft Housing to	000011 000775			
C :	1410 R	Main Case Shaft, Power			0 15000	
	1410 R	Pinion, Bevel, on Power Shaft	200111- 200111-		0-15000- 0-15000-	31 31
	1412 R	Gear with Shaft, Power Shaft Bevel		400000-405110		31
	1413 R	Cover, Power Shaft Housing	200111-	400000-	0-15000-	31
C :	1414 R	Gasket, Power Shaft Housing Cover	200111-	400000-	0-15000-	31
*C :	1415 R	Washer, Oil Seal, Power Shaft, Long				
		Bevel Gear	200111-	400000-	0-15000-	· 31
C:	1416 R	Washer, Oil Seal, Power Shaft, Front and Rear	200111-	400000-	0-15000-	
C:	1419 R	Gasket, Power Shaft, Front Cap,	200111-	400000-	0-19000-	• •
_		Medium	200111-	400000-	0-15000-	31
C:	1420 R	Gasket, Power Shaft, Rear Cap,				
C :	1421 R	Medium	200111-	400000-	0-15000-	31
υ.	1421 W	Case	200111-	400000-	015000-	31
C:	1422 R	Gasket, Power Shaft, Front Cap,	200111	100000	0-10000-	01
		Thick	200111-	400000-	0-15000-	· 31
C:	1423 R	Gasket, Power Shaft, Rear Cap,	000111	400000	0 45000	
C	2118 R	ThickLever, Power Shaft Shift		400000- 404760-	015000	31
	2357 R	Cup, Power Shaft Quill Seal.				
	2358 R	Cork, Power Shaft Quill Seal		405110-		
tC S	2359 R	Cover, Power Shaft Quill Seal		405110		
	2360 R	Spring, Power Shaft Quill Seal	. 	405110-	· · · · · · · · · · · · · · · · · · ·	. 31
	2361 R	Gear, Power Shaft Bevel (Long)				
D E :	136 R 2142 R	Washer, Spur Gear Nut		400000- 400000-	0-15000-	31
	7223 R	Cone with Rollers, Power Shaft,	200111-	400000-	0-15000-	31
-		Long Bevel Gear	200111-	400000-	0-15000-	31
JD '	7236 R	Cone with Rollers, Power Shaft,				
* 775	700F T	Rear Bearing		400000-	0-15000-	: 31
	7267 R 7269 R	Quill, Power Shaft Bevel Gear Quill, Power Shaft Bevel Gear	200111-	400000-405109 405110-	0-15000-	31
	7286 R	Cup, Power Shaft, Rear Bearing	200111-	400000-	0-15000-	31
	7356 R	Cone with Rollers, Power Shaft,	-00111	100000	0-10000-	. 01
		Front Bearing	200111-	400000-	0-15000-	31
JD '	7402 R	Cup, Power Shaft, Front Bearing.	200111-	400000-	0-15000-	ុំ 31
		AC264 R POWER LIFT FOOT	and the second second			1
		TRIP ASSEMBLY	•			1
		(Identified by two foot pedals				į
		protruding through platform)				i
	260 R	Pedal, Clutch Foot Trip			: ••••••••••••••••	
C	284 R 1067 R	Yoke, Clutch Trip Rod				
	1069 R	Rod, Clutch Foot Trip				
	1074 R	Bearing, Clutch Foot Trip	200111-213542			31
Ċ	1216 R	Spacer, Clutch Foot Trip Bearing	200111-213542		• • • • • • • • • • • • • • •	31
C	1277 R	Bearing, Clutch Foot Trip	200111-213542			31
		AC492 R POWER LIFT FOOT				j
		TRIP ASSEMBLY				į
		(Identified by one foot pedal				
_		attached to rear of case)				i
c	284 R	attached to rear of case) Yoke, Clutch Trip Rod	200111-		• • • • • • • • • • • • • • • • • • • •	
C	284 R 1067 R 1444 R	attached to rear of case)	200111- 200111- 200111-			. 31

^{*}Used only with C1412 R Power Shaft Bevel Gear with Shaft. See Plate No. 31. †Used only with C2361 R Power Shaft Bevel Gear with Shaft. See Plate No. 31.

	Part	NAME AND DESCRIPTION		Serial Number		Plat
Number		NAME AND DESCRIPTION	General Purpose Wide Tread		ead Orchard	
		AC492 R POWER LIFT FOOT				
		TRIP ASSEMBLY—Continued				
C	1534 R	Bracket, Trip Pedal	200111-			
Ç	1535 R	Pedal, Clutch Trip	200111-			31
C	1536 R	Brace, Pedal Bracket to Power Shaft	200111-		<i></i>	31
			-00111			"
		AC720 R POWER LIFT FOOT				1
	,	TRIP ASSEMBLY (Identified by one foot pedal				!
		protruding through platform)		i		:
C	284 R	Yoke, Clutch Trip Rod	200111-		0-15000-	31
Ç	1067 R	Pin, Clutch Foot Trip Rod Yoke.	200111-	· · · · · · · · · · · · · · · · · · ·		31
C	1787 R 1788 R	Pedal, Clutch Trip, R. H	200111- 200111-			31
Č	1789 R	Bearing, Clutch Foot Trip, R. H.			0-15000-	31
č	1790 R	Bearing, Clutch Foot Trip, Center			0-15000-	31
					,	:
		POWER LIFT FOOT TRIP AND PITMAN ASSEMBLY				
A C	594 R	Pitman, Power Lift, with Oil Fittings		400000-		31
Ĉ	284 R	Yoke, Clutch Trip Rod			 	
Č	1067 R	Pin. Clutch Foot Trip Rod Yoke		400000-		31
č	1394 R	Bracket, Trip Pedal	• • • • • • • • • • • • • • • • • • • •	400000-400678	. 	31
C	1442 R 1444 R	Pin, Pitman Strap Pivot Rod, Power Lift Trip	• • • • • • • • • • • • • • • • • • • •	400000-	· · · · · · · · · · · · · · · · · · ·	
č	1446 R	Pedal, Clutch Trip		400000-404678	· · · · · · · · · · · · · · · · · · ·	
č	1449 R	Spacer, Pitman Strap		400000-		
Č	1495 R	Strap, Power Lift Pitman		400000-		
Č	1496 R 1497 R	Strap (Bent) Power Lift Pitman Pin, Pitman Connecting	• • • • • • • • • • • • • • • • • • • •	400000- 400000-		
č	1534 R	Bracket, Trip Pedal	• • • • • • • • • • • • • • • •	400679-		,
č	1535 R	redal. Clutch inb		400679-404809		31
C	1536 R	Brace, Pedal Bracket to Power		100000 101000		
~	4 F E O TO	Shaft	• • • • • • • • • • • • • • • • • • •	400679-404809		31
C	1576 R	Brace, Pedal Bracket to Power Shaft		400000-400678		31
C	2179 R	Pedal, Clutch Trip		404810-		,
Ċ	2180 R	Rod, Power Lift Trip		404810-		31
C	2181 R	Brace, Pedal Bracket to Power		404910		21
		Shaft		404810-	· · · · · · · · · · · · · · · · · · ·	31
		POWER LIFT PARTS		1		1
	1713 R	Washer, Clutch Dog Spacer	200111-	400000-	0-15000-	31
	387 R	Plate, Clutch, Complete, C351 R.	200111-	400000-	0-15000-	31
AC AC	388 R 391 R	Wheel, Worm, with Hub, C353 R Crank with Pin, C348 R	200111- 200111-	400000-405110 400000-	0-15000 0-15000	31
	409 R	Housing, C352 R. with Clutch		400000-		3,
		Housing, C352 R, with Clutch Pawl Centering Pin (Substitute				ļ
	4050 5	AC1059 R)	200111-	400000-	0-15000-	
AU	1058 R	Wheel, Worm, with Hub, Bronzel Gear (Heavy Duty) C353 R	200111-	400000-	0-15000-	31
AC	1059 R	Housing, C2351 R, with Clutch	200111-	400000-	0-10000-	0,1
		Pawl Centering Pin and Bushing.	200111-	400000-	0-15000-	31
č	349 R	Pawl, Clutch	200111-	400000-	0-15000-	31
C	1164 R 1220 R	Spring, Clutch Dog	200111- 200111-	400000- 400000-	0-15000 - 0-15000-	31
č	1220 R 1284 R	Pin, DowelPin, Pawl Spring Centering	200111-	40000-	0-15000-	31
Č	1424 R	Pin, Clutch Dog Spring, Short	200111-	400000-	0-15000-	3
CC	1425 R	Pin, Lock, Power Lift Crank	200111-	400000-	0-15000-	31
Č	1426 R	Pin, Clutch Dog Spring, Long	200111-	400000-	0-15000-	31
0000000	1427 R 1428 R	Pin, Clutch Dog Link Pin, Clutch Dog Pivot	200111- 200111-	400000- 400000-	0-15000- 0-15000-	3
č	1428 R	Pin, Clutch Dog Roller	200111-	400000-	0-15000-	3
Ç	1429 R	Lever, Clutch Trip	200111-	400000-	0-15000-	3
č	1430 R	Roller, Clutch	200111-	400000-	0-15000-	3
C	1431 R 1432 R	Bearing, Pivot, Clutch Dog Pin, Power Lift Shaft Crank	200111- 200111-	400000- 400000-	0-15000- 0-15000-	3
·	1433 R	Strap, Clutch Dog	200111-	40000-	0-15000-	31
C		Link, Clutch Dog	200111-	400000-	0-15000-	3
C	1434 R	Dinn, Clatch Dog				
0000	1434 R 1435 R 1436 R	Dog, Clutch	200111- 200111-	400000 - 400000-	0–15000 – 0–15000 –	31

^{*}Used only in AC409 R Power Lift Housing C352 R.

D	NAME AND DESCRIPTION	Serial Number			- Pla
Part Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	No
	POWER LIFT PARTS				1
	-Continued				
C 1438 R	Spring, Clutch Pawl	200111-	400000-	0-15000-	31
C 1439 R	Washer, Oil Seal, Clutch Trip	000111	400000	0 15000	
*C 1440 R	Washer, Oil Seal, Power Lift Crank	200111- 200111-	400000- 400000-	0-15000-	31
C 1441 R	Gasket, Power Lift Housing		400000-	0-15000- 0-15000-	31
C 1635 R	Lubricant, Power Lift, 3 Pt. Can	200111-	400000-	0-15000-	
†C 2352 R	Bushing (Outer) Power Lift Crank	200111-	400000-	0-15000-	31
†C 2353 R	Bushing (Inner) Power Lift Crank	200111-	400000-	0-15000-	31
†C 2354 R	Welsh Plug	200111-	400000-	0-15000-	3
†C 2355 R D 136 R	Washer, Power Lift Oil Seal Washer on Crank Pin		400000-	0-15000-	3:
D 136 R D 469 R	Welsh Plug, Clutch Trip Lever		400000-	0-15000-	3:
D 403 I	Hole	200111-	400000-	0-15000-	3
*D 679 R	Welsh Plug, Power Lift Crank Hole	200111-	400000-	0-15000-	3
E 1976 R	Plug, Oil Level Test and Drain	200111-	400000-	0-15000-	3:
JD 7759	Alemite Fitting, No. 1610, Power			İ	
	Lift Pitman, 1/8"	200111-	400000-	0-15000-	3:
K 2371 R	Spring, Power Lift Crank Lock Pin	200111-	400000-	0-15000-	3:
	AC425 R ELECTRIC LIGHT-				
	ING EQUIPMENT				
15-57	Screw, Fibre Binding Post Bracket.				
	8-32x1/2" Fillister Head	200111-	400000-	0-15000-	32
1383 R	Hooks, Belt Clipper	200111-	400000-	0-15000-	3
2364 R	Rawhide Pin, Belt Connection		400000-	0-15000-	32
‡2490 R	Screw, Lens Holder	200111-	400000-	0-15000- 0-15000-	33
A 1225 R AA 832 R	Lamp Complete	200111-	400000- 400000-	0-15000-	3
AA 835 R	Lamp, Complete Plug, Double Contact Cable	200111-	400000-	0-15000-	3
AD 447 R	Lamp, Complete (Substitute AA-			;	
	832 R)	200111-	400000-	0-15000-	32
C 1561 R	Stud, Rear Lamp Bracket Base	200111-	400000-	0-15000-	32
C 1562 R	Base, Rear Lamp Bracket	200111-	400000-	0-15000-	32
C 1567 R C 1568 R	Cable, Complete	200111-	400000 400000-	0-15000- 0-15000-	32
C 1569 R	Conduit Clip, Conduit	200111-	400000-	0-15000-	32
C 1586 R	Bracket, Rear Lamp Support, Rear Lamp	·	400000-		32
C 2347 R	Support, Rear Lamp			0-15000-	
C 2348 R	Cable Extension	; 		. 0-15000-	اهٔ ا
*D 1100 R	Bracket, Lamp	200111-	400000-	0-15000-	32
*D 1101 R *D 1102 R	Spring, Lamp Bracket Washer, Lamp Bracket	200111-	400000- 400000-	0-15000- 0-15000-	33
*D 1102 R *D 1104 R	Reflector	200111-	400000-	0-15000-	32
*D 1105 R	Lens	200111-	400000-	0-15000-	32
*D 1106 R	Reflector. Lens. Gasket, Lens	200111-	400000-	0-15000-	3
*D 1107 R	Winding Assembly (Lens Holder).	. 2001111-	400000-	0-15000-	32
D 1108 R	Bulb, Light Wiring Assembly Focus Screw	200111-	400000-	0-15000-	3
*D 1109 R	Wiring Assembly	200111-	400000-	0-15000-	3:
*D 1110 R *D 1111 R	Focus Spring	200111- 200111-	400000- 400000-	0-15000- 0-15000-	3
*D 1111 R D 1116 R	Focus Spring Strap, Cable Clip	200111-	400000-	0-15000-	3
D 1160 R	Shaft. Bracket		400000-	0-15000-	3
†D 2139 R	Bracket, Lamp Mounting		400000-	0-15000-	3
D 2141 R	Moulding		400000-	0-15000-	3
‡D 2142 R	Reflector	200111-	400000-	0-15000-	3
†D 2143 R	Wiring Complete	200111-	400000-	0-15000-	3
†D 2144 R	Body, Lamp	200111-	400000 400000	0-15000- 0-15000-	3
D 2145 R	Cork Washer, Lamp.	200111- 200111-	400000 - 400000-	0-15000-	3
D 2147 R	Lens, Lamp	200111-	400000-	0-15000-	3
D 2147 R D 2148 R D 2149 R	Spring, Lens Retaining	200111-	400000-	0-15000-	3
D 2149 R	Screw, Moulding	200111-	400000	0-15000-	3
D 2569 R	Washer, Lamp Mounting Bracket.		400000-	0-15000-	3
‡D 2569 R	Washer, Lamp Mounting Bolt Nut		400000	0 15000	
בר מתניים	Bearing	200111- 200111-	400000- 400000-	0-15000- 0-15000-	3
E 2057 R ‡E 2094 R	Nut, Lens Holder Screw		400000-	0-15000-	3
K 3151 R	Washer, Bracket, Tension Spring		200000	1 20000	3
L DINI D.					

^{*}Used only in AC409 R Power Lift Housing C352 R. †Used only in AC1059 R Power Lift Housing C2351 R. ‡Repairs for AA832 R Lamp.
**Repairs for AD447 R Lamp.

Part	NAME AND DESCRIPTION		Serial Number		
Number	NAME AND DESCRIPTION	General Purpose	Wide Tread	Orchard	Pla No
	AD479 R GENERATOR,				
	COMPLETE	:			
G 4500 B	(Part of AC425 R)	000111		0 - 7000	
C 1563 R C 1564 R	Bracket, Generator Brace, Generator Bracket	200111- 200111-	400000-	0-15000-	32
C 1570 R	Spring, Bracket Tension	200111-	400000- 400000-	0-15000- 0-15000-	32
C 1571 R	Bolt, Bracket, Tension Spring	200111-	400000-	0-15000-	
C 1572 R	Wing Nut, Bracket, Tension Spring				1
G 4500 D	Bolt.	200111-	400000-	0-15000-	32
C 1768 R C 1769 R	Pulley, Split, with Screws for Flat Belt Pulley Belt, Taper Hole (Flat Belt)		400000- 400000-	0-15000- 0-15000-	32
C 1776 R	Leather Belt with Clipper Hooks	200111-	400000-	0-15000-	3
D 1114 R	Screw, Split Pulley	200111-	400000-	0-15000-	3
D 1124 R	Bearing, Annular (Ball Bearing)	200111-	400000-	0-15000-	3
D 1125 R D 1126 R	Cups, Oil, in Annular End Piece.	200111-	400000-	0-15000-	33
D 1127 R	Cover, Rotor (Case)	200111- 200111-	400000- 400000-	0-15000- 0-15000-	3
D 1128 R	Stem Binding Post (Long)	200111-	400000-	0-15000-	3
D 1129 R	Stem Binding Post (Short)	200111-	400000-	0-15000-	32
D 1130 R	Case End and Side	200111-	400000-	0-15000-	32
D 1131 R D 1132 R	Clamp, Magnet	200111-	400000-	0-15000-	3
D 1132 R	utor End)	200111-	400000-	0-15000-	3
D 1133 R	Nut, Adjusting, Rotor Shaft	200111-	400000-	0-15000-	3
D 1134 R	Shaft, Rotor	200111-	400000-	0-15000-	32
D 1135 R	Post, Binding	200111-	400000-	0-15000-	32
D 1136 R D 1137 R	Bridge, Fibre, Drilled		400000- 400000-	0-15000- 0-15000-	32
D 1138 R	Nut, Stem Binding Post		400000-	0-15000-	3
D 1140 R	Washer, Binding Post	200111-	400000-	0-15000-	3
D 1141 R	Screw, Fibre Bridge, 6-32x1" Round			1	
D 1142 R	Head (Brass)	200111-	400000-	0-15000-	3
D 1142 A	Screw, Annular End Piece, Upper Hole, 12-24x1/2" Fillister Head.	200111-	400000-	0-15000-	32
D 1143 R	Screw, Annular End Piece, Lower		100000	0 10000-	0,
	Hole, 12-24x7/16" Fillister Head		400000-	0-15000-	32
D 1144 R	Screw, Annular End Piece, 10-32		400000	0	
D 1146 R	x7/16" Fillister Head Screw, Case End and Side, End	200111-	400000-	0-15000-	32
	8-32x1/4" Fillister Head	200111-	400000-	0-15000-	32
D 1147 R	Screw, Case End and Side, Center,				-
D 1110 D	6-32x1/4" Fillister Head	200111-	400000-	0-15000-	32
D 1148 R	Screw, Magnet Clamp, Upper, 12-24x3/8" Fillister Head	200111-	400000	0 15000	0.0
D 1149 R	Screw, Magnet Clamp, Lower,		400000-	0-15000-	32
	12-24x1-1/8" Fillister Head	200111-	400000-	0-15000-	32
D 1150 R	Screw, Rotor Cover, (Pointed)				
D 1151 R	10-32x7/16" Headless	200111-	400000-	0-15000-	32
D IIII K	Screw, Bracket Clamp, 12-24x5/8" Fillister Head	200111-	400000-	0-15000-	3
D 1151 R	Screw, Bracket, Top, Upper Hole,	200111-	400000-	0-13000-	34
	12-24x5/8" Fillister Head	200111-	400000-	0-15000-	32
D 1152 R	Screw, Bracket, Top, Lower Hole,		400000	0 17000	
D 1153 R	12-24x1-3/8" Fillister Head Magnet	200111- 200111-	400000- 400000-	0-15000-	32
D 1154 R	Pole Piece, Complete	200111-	400000-	0-15000- 0-15000-	3
D 1155 R	Washer, Rotor Shaft	200111-	400000-	0-15000-	32
D 1156 R	Clamp, Bracket		400000-	0-15000-	3
D 1158 R D 1159 R	Key in Taper Hole, Belt Pulley	200111-	400000-	0-15000-	3
D 1161 R	Winding "A" Special Bracket, Top	200111- 200111-	400000- 400000-	0-15000- 0-15000-	3
D 1666 R	Annular End Piece, Plain with	200111-	400000	0-13000-	0
_	D1132 R Bearing Spacer	200111-	400000-	0-15000-	3
D 1667 R	Annular End Piece with D1132 R		400000	0 45000	_
	Bearing Spacer	200111-	400000-	0-15000-	3
	AC579 R PREST-O-LITE				ļ
	LIGHTING OUTFIT				
	Prest-O-Lite Gas Lighting Unit				
	(Complete Units and Repair Parts				
	are to be ordered direct from Prest-O-Lite Co., Inc., Indian-			1	
	apolis, Indiana. Billings are direct			!	
•	from Manufacturer to Branch				
	House.)	ł	!	i	1

1669 R	Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quar tity Used
1683 R					
1682 R	1683 R 1683 R 1669 R 1670 R 1671 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R	AC 48 R AC 48 R AC 80 R AC 119 R AC 161 R AC 161 R AC 174 R AC 176 R AC 183 R AC 212 R AC 213 R AC 213 R AC 2229 R AC 344 R AC 397 R AC 398 R AC 398 R AC 432 R	Brake Lever to R. H. Brake Cam Brake Lever to L. H. Brake Cam R. H. Camshaft Bearing to Case L. H. Camshaft Bearing to Case L. H. Camshaft Bearing to Case Hub Cap to Wheel L. H. Bearing to Case R. H. Main Bearing to Case R. H. Main Bearing to Case (Drilled) Carburetor to Manifold Spline Shaft Quill to Case (Drilled) Rear Tank Bracket to Governor Case Front Tank Bracket to Water Pipe R. H. Rear Axle Housing to Cover L. H. Rear Axle Housing to Cover Clutch Driving Disk to Crankshaft Seat Spring and Leaf to Case Governor Case to Main Case Governor Case to Main Case Power Shaft Housing to Main Case Power Shaft Housing to Main Case R. H. Rear Axle Housing to Cover R. H. Rear Axle Housing to Cover L. H. Rear Axle Housing to Cover L. H. Rear Axle Housing to Cover (Countersunk Head) L. H. Rear Axle Housing to Cover (Countersunk Head) Pedestal, to Front End Magneto to Bracket Oil Indicator Body to Case Rear Axle Housing Cover to R. H. and L. H. Differen-	1/2"x1-1/4" 1/2"x1-1/4" 3/8"x3/4" 3/8"x11" 1/2"x3/4" 1/2"x3/4" 3/4"x2-1/4" 3/8"x3/4" 1/2"x3/4" 3/8"x3/4" 3/8"x3/4" 3/8"x3/4" 3/8"x3/4"	31 11 12 23 34 44 12 24 10 10 11 11 10 11 44 42 2
1685 R			Rear Axle Housing Cover to R. H. and L. H. Housing (each), (AC212 R and AC213 R)		13
tom Holes of Differential Quill Flange). 1671 R AC 445 R 1671 R AC 445 R D 474 R AC 454 R D 329 R AC 602 R 1670 R AC 603 R 1670 R AC 610 R 1682 R AC 646 R 1682 R AC 653 R 1670 R AC 745 R 1682 R AC 653 R 1670 R AC 653 R 1670 R AC 653 R 1684 R AC 655 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 745 R 1685 R AC 751 R 1685 R AC 751 R 1685 R AC 811 R 1685 R AC 817 R 1686 R AC 817 R 1681 R AC 817 R 1682 R AC 817 R 1682 R AC 817 R 1684 R AC 817 R 1685 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1884 R AC 817 R 1885 R AC 817 R 1884 R AC 818 R 1884 R AC 818 R 1884 R AC 818 R 1884 R AC 818 R 1884 R AC 818 R 1884 R AC 818 R 1885 R 1886 R 1886 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1886 R 1886 R 1886 R 1886 R 1887 R 1886 R 1887 R 1886 R 1887 R 1886 R 1886 R 1886 R 1887 R 1886 R 1887 R 1886 R 1			(each)	1/2"x1"	10
1671 R			tom Holes of Differential Quill Flange). Rear Axle Housing Cover to Rear Axle Housing (Coun-	•	2
	D 474 R D 329 R 1670 R 1670 R 1682 R 1684 R 1670 R 1670 R 1670 R 1670 R 1672 R 1672 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R 1682 R	AC 454 R AC 602 R AC 603 R AC 646 R AC 646 R AC 646 R AC 653 R AC 725 R AC 745 R AC 770 R AC 770 R AC 781 R AC 811 R AC 817 R AC 817 R AC 817 R AC 817 R AC 818 R	Oil Pump Strainer to Pipe Rear Axle Nut Clamp Screw R. H. Fender to Rear Axle Housing L. H. Fender to Rear Axle Housing Carburetor to Manifold R. H. Main Bearing to Case (Drilled) L. H. Main Bearing to Case L. H. Main Bearing to Case Main Bearing Bushing Bolt (Drilled). Dust Shield to Gear Cover (Drilled). Carburetor to Manifold Air Cleaner Container to Carburetor Air Cleaner Container to Carburetor Rear Fuel Tank Bracket to Governor Case Front Fuel Tank Bracket to Water Pipe. Seat Spring and Leaf to Case Citrus Grove Fender Support to Cylinder Citrus Grove Fender Support to Cylinder Rear Axle Housing to Quill R. H. Rear Axle Housing to Cover R. H. Rear Axle Housing to Cover (In Brake Cam Boss) L. H. Rear Axle Housing to Cover	3/8"x1-1/4" 1,2"x1-3/4" 5/8"x1-1/4" 3/8"x1-1/4" 1/2"x1-1/4" 1/2"x1-1/4" 1/2"x1-1/2" 5/8"x2-1/2" 5/16"x9/16" 3/8"x1" 3/8"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1" 1/2"x1"	1112222733444 442111221221122112211221122112211221
1685 R AC 818 R L. H. Rear Axle Housing to Cover (In Brake Cam Boss) 1/2"x2" 1670 R AC 828 R Left Front Dust Shield Support and Spline Shaft Cover to Main Case. 3/8"x1" D 329 R AC 873 R R. H. Fender to Rear Axle Housing	i		to Main Case	3/8"x1"	1 2

	Order Part umber	For Attaching	NAME AND DESCRIPTION	Size	Qu ti U
			CAP SCREWS—Continued		
D	329 R	AC 874 R	L. H. Fender to Rear Axle Housing Upper Water Pipe to Radiator. Upper Water Pipe to Cylinder Head.	5/8"x1-1/4"	
_	1684 R	AC 909 R	Upper Water Pipe to Radiator.	1/2"x1-1/2"	1
	1684 R	AC 909 R	Upper Water Pipe to Cylinder Head.	1/2'' x 1-1/2''	ĺ
	1669 R	AC 934 R	Crankcase Cover and Breatner Body to Main Case.	0/0 A0/4	
C	2238 R	AC 956 R	Air Cleaner Cover Bail to Radiator Top (Drilled)		
•			(Special)	1/2"x4-3/8"	
	1669 R	AC 970 R	Muffler to Poductor Ton Tank	3/8"x3/4"	j
	1670 R	AC 999 R	Carburetor to Manifold. Power Lift Housing to Power Shaft Housing.	3/8"x1"	-
	1683 R	AC 1059 R	Power Lift Housing to Power Shaft Housing.	1/2''x1- $1/4''$	i
	1671 R	AD 452 R	Front Wheel Bearing Clamp Screw. Oil Filter Base to Case.	3/8"x1-1/2"	- 1
3	2290 R	AD 883 R	Oil Filter Base to Case.	3/8"x2-1/2"	- 1
_	1683 R	C 27 R	Gear Shift Gate to Case. Gear Shift Gate to Case. L. H. Main Bearing Cover to Main Bearing Oil Pump Body to L. H. Main Bearing Housing. Clutch Fork Bearing to Gear-Gover. Pulley and Spline Gear Cover to Case.	1/2"x1-1/4"	i
	1671 R	C 35 R	L. H. Main Bearing Cover to Main Bearing.	3/8"x1-1/4"	
	1669 R	C 169 R	Oil Pump Body to L. H. Main Bearing Housing	3/8"x3/4"	- 1
	1674 R	C 172 R	Clutch Fork Bearing to Gear-Gover-	3/8"x1-3/4"	
	1683 R.	C 184 R	Pulley and Spline Gear Cover to Case	1/2"x1-1/4"	
C	529 R	C 184 R	Pulley and Spline Gear Cover to Case	1/2"x3-1/2"	
_	1666 R	C 256 R	Radiator Top Tank to Radiator Core.	5/16"x3/4"	
	1666 R	C 258 R	Pulley and Spline Gear Cover to Case Pulley and Spline Gear Cover to Case Radiator Top Tank to Radiator Core. Radiator Bottom to Radiator Core.	5/16"x3/4"	
	1683 R	C 259 R	Lower Water Connections to Radiator	1 2"x1-1 '4"	
	1669 R	C 265 R	Lower Water Connections to Radiator Intake Pipe to Air Cleaner	3/8"x3/4"	i
	1670 R	C 265 R			
D	942 R	C 302 R	Front End Support to Cylinder	5/8"x2-1/4"	1
č	882 R	C 302 R	Intake Pipe to Carburetor Front End Support to Cylinder Front End Support to Cylinder (Drilled) Clamp Ring to Cam Gear (Drilled) Upper Water Pipe to Radiator Upper Water Pipe to Cylinder Head	3/4"x3-1/2"	
Š	528 R	C 305 R	Clamp Ring to Cam Gear (Drilled)	3/8"x1-1,2"	
	1684 R	C 307 R	Unper Water Pipe to Radiator	1/2"x1-1/2"	i
	1684 R	C 307 R	Upper Water Pipe to Radiator. Upper Water Pipe to Cylinder Head. Rear Fan Bearing Housing to Governor Case. R. H. Governor Bearing Housing to Governor Case Front Fan Bearing Cover to Water Pipe. In Steering Worm Wheel Housing Steering Worm Housing to Steering Gear Housing. Lower Felt Retainer to Pedestal Radiator Bottom to Support.	1.2"x1-1/2"	
	1669 R	C 310 R	Boar Fan Rearing Housing to Governor Case	3/8"x3/4"	1
	1669 R	C 311 R	P H Governor Rearing Housing to Governor Case	3 8"x3/4"	-
	1670 R	C 312 R	Front Fan Rearing Cover to Water Pine	3/8"x1"	į
D	466 R.	C 321 R	In Steering Worm Wheel Housing	1 2"x3.4"	1
_	1683 R	C 322 R	Steering Worm Housing to Steering Goar Housing	1.2"x1-1/4"	l
	1670 R	C 331 R	Lower Felt Retainer to Pedectal	3,8"x1"	
E	2027 R	C 332 R	Dedictor Rottom to Support	5.8"x3-1/4"	
	1670 R	C 338 R	Facentria Lock Plate to Pedestal	3,8"x1"	1
	1671 R	C 343 R	Power Shoft Front Can to Housing	3 8"x1-1/4"	
	1671 R	C 346 R	Power Shaft, Pear Can to Housing	3 8"x1-1,4"	
	1683 R	C 360 R	Proke Lever to Broke Cam	1 '2"x1-1/4"	
	1670 R	C 381 R	Front Fon Rearing Cover to Water Pine	3 8"x1"	i
	1682 R	C 385 R	Lower Felt Retainer to Pedestal Radiator Bottom to Support. Eccentric Lock Plate to Pedestal. Power Shaft, Front, Cap to Housing. Power Shaft, Rear, Cap to Housing. Brake Lever to Brake Cam. Front Fan Bearing Cover to Water Pipe. Intake Pipe to Air Cleaner.	1/2"x1"	ĺ
	1670 R	C 385 R	Intake Fipe to Air Oleaner	3/8"x1"	
C	806 R	C 471 R		5/16"x9/16"	
U	1669 R	C 490 R	L. H. Spline Shaft Cover to Case	3/8"x3/4"	
	1671 R		Shift Fork Shaft, End	3/8"x1-1/4"	i
D	466 R	C 686 R C 698 R	Power Shoft Opening Cover to Core	1/2"x3/4"	
_	1669 R	C 700 B	D W Backs Daym Grand to Voucing	3/8"x3/4"	1
	1670 R	C 700 R	Power Shaft Opening Cover to Case R. H. Brake Drum Guard to Housing R. H. Brake Drum Dust Guard to Housing	3/8"x1"	
	1669 R	C 700 R	R. H. Brake Drum Guard to Housing L. H. Brake Drum Guard to Housing L. H. Brake Drum Guard to Housing L. H. Brake Drum Dust Guard to Housing Front Axle Pivot Pin Steering Column Support to Case	3/8"x3/4"	ļ
	1670 R	C 701 R C 701 R	I. H. Drake Drum Duet Guard to Housing	3.8"x1"	1
C		C 740 R	Eront Arlo Pivot Pin	3/8"x3-1/2"	-
J	1539 R	C 740 K	Steering Column Support to Coco	1 2"x1"	l
	1682 R	C 934 R	J. H. Chard Control Bracket to Con-	3/8"x1"	
	1670 R	954 R	L. H. Speed Control Bracket to Case	9,0 21	!
	1669 R	C 960 R	Front Cover to Case		į
_	1669 R	C 961 R	Rear Cover to Case	1 2" 24-1 /4"	
C	976 R.	C 1009 R	Valve Cover to Cylinder	3/8"x3/4"	
	1669 R	C 1016 R	Magneto Bracket to Case.	1/2"x2-1/2"	
7	1686 R	C 1028 R	Brake Latch to Housing	1/2" x2-1/4"	
E		C 1028 R	In Brake Latch (Orchard Tractor)	1/2"x2-1/4" 3/8"x1"	1
~	1670 R	C 1053 R	Citrus Grove Fender Brace to Case	5/8//+2/4//	
D		C 1244 R	Power Shaft Opening Cover to Main Case	3/8"x3/4"	1
	1669 R	C 1248 R			-
	1670 R	C 1248 R	R. H. Brake Drum Dust Guard to Housing	3/8"x1"	1
	1669 R	C 1249 R	L. H. Brake Drum Guard to Housing.	0 0 X0/4	
_	1670 R	C 1249 R	L. H. Brake Drum Dust Guard to Housing	3/8"X1"	
Ď		C 1275 R	Front End to Cylinder.	5/8"x2-1/4"	
C	882 R	C 1275 R	Front End to Cylinder (Drilled)	3/4"x3-1/2"	
_	1669 R	C 1382 R	Pedestal Cover to Pedestal	3/8"x3/4"	1
D		C 1413 R	Power Lift Opening Cover to Housing	1/2"x3/4"	1
	1669 R	C 1493 R	Rear Cover to Case	3/8" X3/4"	- 1
	1683 R	C 1535 R			- 1

F	rder Part Imber	A	For ttaching	NAME AND DESCRIPTION	Size	Qu ti U
	į			CAP SCREWS—Continued		
	1672 R	C	1536 R	Pedal Bracket Brace to Power Shaft	3/8"x1-1/2"	!
	1672 R	C	1578 R	Pedal Bracket Brace to Power Shaft	3/8"x1-1/2"	ļ
	1669 R	Č	1620 R	L. H. Spline Shaft Cover to Case	3/8"x3/4"	
	1683 R	Č	1637 R	In Steering Worm Wheel Housing	1/2"x1-1/4"	
C	976 R	Č	1639 R	L. H. Spline Shaft Cover to Case In Steering Worm Wheel Housing Steering Column Support to Steering Column Collar	1/2"x4-1/4"	
C	1272 R	Č	1640 R	Rear Axle Housing Cover to L. H. Housing (Counter-	-,, -	į
				sunk Head)	1/2"x3/4"	- 1
	1685 R	C	1640 R	Rear Axle Housing Cover to R. H. and L. H. Differen-	, .	
				tial Quill (In Bottom Holes of Differential Quill		į
				Flange)	1/2"x2"	
	1682 R	С	1640 R	Rear Axle Housing Cover to R. H. and L. H. Housing		- !
	4004 D	_		(Each)		
	1684 R	Ç	1648 R	Rear Fender Brace to Rear Axle Housing	1/2''x1-1/2''	
	1682 R	Č	1703 R	Intake Pipe to Air Cleaner	1/2"x1"	
	1670 R	Č	1703 R	Intake Pipe to Carburetor	3/8"x1"	
	1684 R	Č	1735 R	Pulley and Spline Gear Cover to Case	1/2"x1-1/2"	
3	976 R	ç	1735 R	Pulley and Spline Gear Cover to Case Pulley and Spline Gear Cover Cap to Cover	1/2"x4-1/4"	
	1670 R '	Ç	1736 R	Pulley and Spline Gear Cover Cap to Cover	3/8"X1"	
	1672 R	Ç	1736 R	Pulley and Spline Gear Cover Cap to Cover	3/8" X1-1/2"	i
	1748 R 1671 R	Č	1742 R 1743 R	In Main Bearing Cap (Drilled)	0/0 XZ-1/Z"	- 1
	1670 R	Č		E. H. Main Bearing Cover to Bearing	3/3" X1-1/4"	i
	1671 R	C	1808 R 1808 R	L. H. Main Bearing Cover to Bearing. Front Cover to Main Case Front Cover to Main Case	9/0 XL" 9/9//w1 1/4//	
	1670 R	C	1808 R 1945 R	Rear Fan Bearing Housing to Governor Case	9/0 XI-1/4"	
	1669 R	č	1945 R	P H Proke Drum Guard to Housing	9/0 Al	:
	1669 R	č	1952 R	R. H. Brake Drum Guard to Housing	3/8" x3/4"	-
	1682 R	č	1967 R	Citrus Fender Support to Cylinder	1/9//v1//	!
	1682 R	č	1987 R	Intake Pipe to Air Cleaner	1 :9" v1"	i
	1670 R :	č	1987 R	Intake Pipe to Carburetor	3/8"x1"	Ţ,
	1669 R	č	1989 R	Intake Pipe to Air Cleaner		ì
	1670 R	č	1989 R	Intake Pine to Carburetor	3/8"x1"	-
	1683 R	č	2004 R	Gear Shift Gate to Main Case	1/2"x1-1/4"	
	1684 R	Č	2004 R	Gear Shift Quadrant and Steering Column Support	-,, -	1
		_		Brace to Case	1/2"x1-1/2"	i
	1683 R	C	2005 R	D W Droles I system to Proles Com	1/9// 1/4//	1
	1683 R	C	2006 R	L. H. Brake Lever to Brake Cam R. H. Platform Support to Rear Axle Housing	1/2"x1-1 '4"	
	1682 R	C	2042 R	R. H. Platform Support to Rear Axle Housing	1.2"x1"	
	1682 R	C	2043 R	L. H. Platform Support to Rear Axie Housing	1,2"X1"	
	1683 R	C	2047 R	Platform Support to Rear Axle Housing Cover	1/2"x1-1 4"	
	1669 R	Č	2053 R	Governor Case to Main Case	3/8"x3/4"	:
	1670 R	Č	2053 R	Governor Case to Main Case	3/8"x1"	
	1670 R	Ğ	2060 R	R. H. Governor Bearing Housing to Governor Case	3/8"x1"	;
	1684 R	Č	2088 R	Steering Column Support Brace to Quadrant Wheel Scraper Support Brace to Rear Axle Housing	1/2"x1-1/2"	. !
)	329 R	Č	2094 R	Wheel Scraper Support Brace to Rear Axle Housing	5/8"x1-1/4"	1
	1671 R	Č	2172 R	Oil Filter Adapter to Oil Filter Body Power Lift Foot Trip Pedal to Bracket and Brace	3/8"X1-1/4"	
	1683 R	č	2179 R	rower Lift Foot Trip Fedal to Bracket and Brace	1 2"X1-1 4"	
	2215 R	č	2200 R	Covernor Case to Case	3 3 X4-1 Z	
	1670 R 1670 R	č	2200 R	Governor Case to Case	9/0 XI'' 9/9//#1//	j
	1670 R	C	2211 R	. Magneto Drive Shart Quil to Governor Case	9/0 XI	!
	1670 R	Č	2216 R 2218 R	Magneta Resolut to Case	3/8"v1"	i
	1666 R	C	2218 R 2220 R	R. H. Governor Bearing Housing to Governor Magneto Bracket to Case Radiator Top Tank to Radiator Core.	5/16"+9/A"	!
	1683 R	č	2220 R 2223 R	: Radiator Outlet Pine to Radiator	1 /9"x1_1 /A"	i
	1672 R	č	2241 R	Intake Flhow to Carburetor	3/8"×1-1/9"	1
	1670 R	č	2241 R	Intake Elbow to Carburetor. Intake Elbow to Carburetor. Air Cleaner Cover Plate to Radiator Top Tank.	3/8"×1"	į
	1669 R	č	2241 R 2243 R	Air Cleaner Cover Plate to Radiator Ton Tank	3/8"x3'4"	1
,	806 R	č	2257 R	Fan Blast Deflector to Radiator Top Tank	5/16"x9 16"	1
	1684 R	č	2290 R	Fan Blast Deflector to Radiator Top Tank Upper Water Pipe to Cylinder Head Upper Water Pipe to Cylinder Head.	1/2"x1-1/2"	i
	1684 R	č	2291 R	Upper Water Pipe to Cylinder Head	1/2"x1-1/2"	Ţ
	1671 R	č	2296 R	Front Fan Bearing Cover to Front Fan Bearing Hous-	-,	-
		_		ing	3/8"~1_1/4"	İ
:	1669 R	C	2305 R	Spark Plug Wire Tube Clamp	3/8"x3.4"	
	1671 R	č	2313 R	Plate to Steering Worm Adjusting Nut	3,8"x1-1/4"	j
	1683 R	č	2315 R	Spark Plug Wire Tube Clamp Plate to Steering Worm Adjusting Nut Steering Gear Housing to Pedestal	1,2"x1-1,4"	1
	1669 R	Č	2326 R	Spingle Lower Bearing Cap to Pedestal .	3,8"X3,4"	
)	901 R	Č	2329 R	Pedestal Support to Front End	3.4"x2-1.4"	1
	1671 R	Ċ	2372 R	Plate to Steering Worm Adjusting Nut	3.8"x1-1.4"	i
	1671 R	C	2427 R	Auxiliary Air Cleaner Adapter to Air Cleaner Bracket		1
				and Air Stack Adapter (Orchard Type Only)	3,8"x1-1,4"	i
	16 69 R	C	2427 R	Auxiliary Air Cleaner Adapter to Auxiliary Air Cleaner		
:	1003 10	•		(Orchard Type only)	3,8"x3,4"	

i	1			
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
1670 R 1672 R 1670 R 1673 R 16673 R 1672 R 1670 R 1670 R 1673 R D 2219 R	C 2429 R C 2429 R D 29 R D 29 R D 815 R D 1987 R D 1989 R D 2065 R D 2065 R D 2217 R	CAP SCREWS—Continued Inlet Elbow to Carburetor. Inlet Elbow to Carburetor. Oil Pump Cover to Oil Pump Body. Oil Pump Cover to Oil Pump Body. Oil Indicator Body to Case Oil Filter Body to Base. Oil Filter Head to Body. Oil Pump Gear Cover to Oil Pump. Oil Pump Gear Cover to Oil Pump. Hub Cap, Front Wheel.	3/8"x1" 3,8"x1-1/2" 3,8"x2" 3,8"x3,4" 3,8"x1-1/2" 3/8"x1-1/2" 3/8"x1" 3/8"x2" 3/8"x7/8"	1 1 1 1 2 2 4 1 1 4
		SET SCREWS—CUP POINT		
·		LENGTH —		
1786 R 1784 B C 530 R 1775 B D 622 R 1771 R D 622 R 1775 R 1771 R 1771 R 1771 R 1771 R 1771 R	AC 47 R AC 446 R AC 458 R AC 959 R C 107 R C 261 R C 686 R C 1018 R C 1055 R C 2056 R C 2246 R C 2292 R C 2329 R	Pulley Brake, Adjusting. Pulley Brake, Adjusting. Reverse Shaft to Case. Control Tube to Control Quadrant. Collar to Reverse Shaft (Drilled) Outside Governor Control Arm to Shaft. Shift Shaft to Case (Drilled). Control Tube Set Screws Rear Wheel Scraper Blade to Holder. Outside Governor Control Arm to Shaft. Spark Control Arm to Shaft. Intake Elbow Clamp to Elbow. Pedestal Support to Pedestal.	1/2"x1-3/4" 1/2"x4-1/2" 3/8"x1" 1/2"x1-1/2" 5/16"x1/2" 1/2"x1-1/2" 3/8"x1" 5/8"x2" 5/16"x1/2" 5/16"x1/2" 1/2"x2-3/4"	1 1 1 1 1 1 1 1 1 1 2
		CARRIAGE BOLTS WITH SQUARE NUTS		
		LENGTH—		
D 476 R D 476 R M 25 R D 476 R D 477 R 2270 R 1584 R	AC 821 R AC 822 R AC 826 R C 946 R C 1785 R C 2047 R D 369 R	R. H. Fender to Rear Support L. H. Fender to Rear Support Platform to Platform Support Channel. Platform Center to Platform. Seat to Seat Spring. Platform Cross Angle to Platform. Wood Clamp to Tank Bracket.	5/16"x3/4" 3/8"x3/4" 5/16"x3/4" 7/16"x1" 3/8"x1"	4 4 4 10 1 2 1
C 980 R C 1091 R C 1578 R C 1578 R C 980 R C 980 R C 980 R C 1578 R C 1578 R D 585 R D 585 R D 585 R	AC 178 R AC 226 R AC 436 R AC 437 R AC 491 R AC 958 R C 1498 R C 1640 R C 1640 R C 2021 R C 2308 R C 2308 R D 583 R D 584 R	CARRIAGE BOLTS WITH HEX. NUTS Hood to Tank Brackets. Speed Change Lever to Speed Control Crank. Rear Axle Housing to Differential Quill. Rear Axle Housing to Differential Quill. Hood to Tank Brackets. Hood to Tank Brackets. Hood to Tank Brackets. Hayfield Front Wheel Bands to Front Wheel. Trip Pedal Bracket to Foot Rest. Rear Axle Housing Cover to R. H. and L. H. Housing. Rear Axle Housing Cover to Differential Quill. Wheel Enclosure Disk to Front Wheel. Front Wheel Extension Rim to Extension Rim Clip Extension Rim Clip to Front Wheel. Rim Clamp to Front Wheel. Rim Clamp to Front Wheel.	1/2"x1-3/4" 1/2"x1-3/4" 3/8"x1-1/2" 3/8"x1-1/2" 1/2"x1-1/2" 1/2"x1-1/2" 1/2"x1-3/4" 1/2"x1-3/4" 1/2"x2" 1,2"x2" 1,2"x3"	4 1 2 2 4 4 4 8 2 2 2 2 3 3 3 1 1

	,	ORCHARD TRACTORS		
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Qua tity Use
		CARRIAGE BOLTS WITHOUT NUTS		
		<length></length>		
D 411 R 411 R 411 R 411 R 411 R 411 R 60 411 R 61 513 R 411 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 517 R 61 7 R 6	AC 335 R AC 401 R AC 636 R AC 666 R AC 918 R C 367 R C 1030 R C 1294 R C 1295 R C 1516 R C 1549 R C 1646 R C 2147 R C 2148 R C 2199 R D 564 R D 579 R D 1796 R All Spade Lugs All Grousers All Road Lugs	Hayfield Overband Supports to Rear Wheel. Road Band Support to Rear Wheel. Road Band Support to Rear Wheel. Road Band Support to Rear Wheel. Narrow Wheel Cast Spade Lug to Wheel. Extension Rim Clip. R. H. Meadow Grouser. Overtire Clip to Overtire Overtire Clip to Overtire. Button Lug to Rear Wheel. Road Band Support to Drive Wheel Support Drive Wheel Support to Road Band Support Sand Lug to Rear Wheel Radiator Curtain Bracket, R. H., to Curtain Roller Radiator Curtain Bracket, L. H., to Curtain Roller	3/4 x1-7/8" 3/4"x4-7/8" 3/4"x1-7/8" 3/4"x1-7/8" 3/4"x1-7/8" 3/4"x2-1/4" 3/4"x2-1/4" 3/4"x1-7/8" 3/4"x1-7/8" 3/4"x1-7/8" 3/4"x1-7/8" 3/8"x1" 5/8"x2-1,2" 5/8"x2-1,2" 3/4"x1-7/8" 3/4"x1-7/8"	
		MACHINE BOLTS WITH SQUARE NUTS		
D 544 R 1623 R 1625 R	A 777 R AA 399 R AC 212 R	Front Wheel Scraper to Front Wheel Knuckle Rear Axle Housing to Cover and Differential Quill	1/2'' x 2-1/2''	
1625 R 1625 R	AC 213 R AC 228 R	Rear Axle Housing to Cover and Differential Quill	1/2"x2-1/2" 1/2"x2-1/2"	•
D 498 R 1623 R		Swinging Drawbar to Cross Members (Drilled)	5′8′′x3′′	
D 544 R D 544 R	AC 375 R	1. H. Fender to Platform and Cross Angle	1/Z"X1"	i
1625 R 1625 R			1/2"x2-1/2"	
1623 R 1613 R		Power Shaft Shift Lever to Shift Shaft.	1/2"x1-3/4" 3/8"x1-1/4"	:
1623 R 1623 R	AC 591 R	R. H. Front Wheel Scraper to Front Wheel Knuckle. L. H. Front Wheel Scraper to Front Wheel Knuckle.	1/2"x1-3/4"	:
1623 R 1623 R	AC 636 R	Road Band to Road Band	1/2"x1-3/4" 1/2"x1-3/4"	
D 595 R 1614 R	AC 772 R	Fuel Tank Cooling Baffle Support to Radiator Side Auxiliary Air Cleaner to Elbow	5/16"x7/8" 3/8"x1"	
1622 R		port	1/2"x1-1/2"	
D 544 R 1622 R		Citrus Grove Fender Adjusting Strap to Side Support. Citrus Grove Fender Adjusting Strap to Fender Sup-	1/2"x1" 1/2"x1-1/2"	
D 544 R 1625 R		port. Citrus Grove Fender Adjusting Strap to Side Support. R. H. Rear Axle Housing to Cover and Differential	1/2"x1"	
2020 10		Quill L. H. Rear Axle Housing to Cover and Differential	1/2"x2-1/2"	!
1625 R	AC 818 R			

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

	Order Part Iumber	For Attaching	NAME AND DESCRIPTION	Size	Qu ti Us
			MACHINE BOLTS WITH SQUARE NUTS		
_			-Continued		:
D	544 R	AC 821 R	R. H. Fender to Rear Support	1/2"x1"	-
Ď	544 R	AC 822 R	L. H. Fender to Rear Support	1/2"x1" 1"x4-1/2"	
č	1458 R 1458 R	AC 895 R AC 896 R	Scraper Frame to Rear Axle Housing	1''X4-1/2''	1
C	1623 R	AC 922 R	Scraper Frame to Rear Axle Housing Scraper Frame to Rear Axle Housing. R. H. Front Wheel Scraper to Front Wheel Knuckle. L. H. Front Wheel Scraper to Front Wheel Knuckle Fan Shroud to Radiator Sides Control Red Tube with Support to Fuel Tank Support.	1/2"x1-3/4"	
	1623 R	AC 923 R	I. H. Front Wheel Scraper to Front Wheel Knuckle	1/2"x1-3/4"	!
D	595 R	AC 953 R	Fan Shroud to Radiator Sides Control Rod Tube with Support to Fuel Tank Support. Rear Fuel Tank Support to Governor Case	5/16"x7/8"	
Ď	595 R	AC 959 R	Control Rod Tube with Support to Fuel Tank Support.	5/16"x7/8"	
_	1622 R	AC 965 R	Rear Fuel Tank Support to Governor Case	1/2"x1-1/2"	
C	1458 R	AC 1037 R	Drawdar to Housings	1 34-1/4	
	1614 R	AD 825 R	Auxiliary Cleaner to Air Cleaner Body. Auxiliary Air Cleaner to Air Cleaner Bracket	3/8"x1"	
	1613 R	AD 825 R	Auxiliary Air Cleaner to Air Cleaner Bracket	3/8"x1-1/4"	
_	1628 R	C 112 R	' I C+' C-1 C-11	1 /9// 20 1 /9//	
D	595 R	C 256 R	Radiator Top Tank to Radiator Core.	5/16"x7/8"	
_	1611 R	C 256 R	Radiator Top Tank to Radiator Core.	5/16"x1-1/8"	: .
D	595 R	C 258 R	Radiator Bottom Tank to Radiator Core.	5/16"X"/8"	
~	1611 R	C 258 R	Radiator Top Tank to Radiator Core. Radiator Top Tank to Radiator Core. Radiator Bottom Tank to Radiator Core. Radiator Bottom Tank to Radiator Core. Radiator Bottom Tank to Radiator Core.	5/10"X1-1/5"	;
C	1105 R		Steering Worm Adjusting Nut Clamp Bolt Radiator Bottom Tank to Radiator Core.	5/10/X1-5/4/ 5/16//-7/9//	
J	595 R 1611 R	C 332 R C 332 R	Radiator Bottom Tank to Radiator Core.	5/16 X1/0 5/16"v1-1 '8"	
	1623 R	C 384 R	Radiator Bottom Tank to Radiator Core Air Cleaner Stack Elbow to Radiator Side	1/2"v1-3/4"	
	1615 R	C 910 R	Air Cleaner Brace to Front End	3/8"x1-3/4"	
	1622 R	C 933 R	Air Cleaner Brace to Front End	1/2"x1-1/2"	
	1628 R	C 934 R			
D	544 R	C 943 R			
Ď	595 R	C 947 R	R. H. Platform to Support	5, 16"x7/8"	
M	21 R		Governor Control Shaft Bracket to Magneto Bracket.	3'8"x3/4"	
D	595 R	C 1032 R	L. H. Platform to Support	5/16"x7/8"	
	1621 R	C 1056 R	Rear Wheel Scraper Brace to Platform	1/2"x1-1/4"	
_	1614 R	C 1074 R	Clutch Foot Trip Bearing to Platform	3/8"x1"	
C	1458 R :	C 1210 R C 1211 R	L. H. Platform to Support Rear Wheel Scraper Brace to Platform. Clutch Foot Trip Bearing to Platform. Drawbar to Housings. Swinging Drawbar Cross Member to Rear Axle Hous-	1"x4-1/2"	
•		·	ing	1"x4-1/2"	
	1623 R	C 1228 R	D W Front Whool Soroner Blade to Knuckle	1/2''x1-3/4''	
	1623 R	C 1229 R	I. H. Front Wheel Scraper Blade to Knuckle	1/2"X1-3/4"	
D	544 R	C 1238 R	Guide Rand to Front Wheel	1/Z'XI''	
_	1622 R :	C 1252 R	Fender Brace to Housing.	1/2"x1-1/2"	
Ď	544 R	C 1276 R	Guide Band to Front Wheel. Clutch Foot Trip Center_Bearing to Platform.	1,2"X1"	
D	544 R	C 1277 R	Clutch Foot Trip Center Bearing to Platform.	1/2"X1"	
	1622 R	C 1287 R	Wheel Scraper Brace to Platform	1/2" X1-1/2"	
n	1613 R	C 1413 R	Clutch Foot Trip Center Bearing to Platform. Wheel Scraper Brace to Platform. Power Lift Opening Cover to Housing Brace for Air Cleaner Stack	5/0 X1-1/4	
D	595 R	C 1464 R	Brace for Air Cleaner Stack	5/16//v1=1/8//	
	1611 R 1625 R	C 1464 R C 1495 R	Brace for Air Cleaner Stack Pitman Lift Strap to Strap. Power Lift Trip Pedal Bracket to Platform.	1/2"x2-1/2"	
	1614 R	C 1534 R	Power Lift Twin Padal Bracket to Platform	3/8"x1"	
C	1458 R	C 1553 R	Drowber to Housings	1"x4-1/2"	
Ď	544 D	C 1720 D	Guide Rands to Front Wheel	1/2"x1"	
_	1615 R	C 1789 R	R. H. Foot Trip Bearing to Platform	3/8"x1-3/4"	
D	544 R	C 1790 R	Pitman Lift Strap to Strap. Power Lift Trip Pedal Bracket to Platform. Drawbar to Housings. Guide Bands to Front Wheel. R. H. Foot Trip Bearing to Platform. Center Foot Trip Bearing to Platform.	1/2"x1"	
Ď	595 R	C 1942 R	Cooling Baffle Support to Radiator Side	5/16"x7/8"	
D	544 R	C 1965 R	Citrus Fender Adjusting Strap to Side Support	1/2"XI"	
_	1622 R	C 1965 R	. Curus render addusting Strati to reduct Subbotts .:	L: 4 - AL-L: 4	
D	544 R	C 1966 R	Citrus Fender Adjusting Strap to Side Support	1/2"X1"	
	1622 R	C 1966 R	Citrus Fonder Adjusting Strap to Fender Supports	1 2"X1-1/Z"	
_	1613 R	C 2007 R	Auxiliary Air Cleaner Elbow to Air Cleaner	3 8"x1-1/4"	
C	2015 R	C 2011 R	Drawbar to Support Strap Drawbar to Housing (Rear)	3/4"xZ-1/2"	
כֻ	1458 R	C 2011 R			
C	2016 R	C 2013 R	Drawbar Support Strap to Housing	1 X3-1/2	
	1622 R	C 2036 R	Fender Cross Brace to Fender Center Support	1/2/XI-1/2 1/9//#9_1/9//	
	1625 R	C 2036 R	render Cross Brace to Dinerential Quill	1/2//+1-1/2//	
	1622 R	C 2040 R	Drawbar to Housing (Rear) Drawbar Support Strap to Housing Fender Cross Brace to Fender Center Support. Fender Cross Brace to Differential Quill R. H. Support Angle to Fender L. H. Support Angle to Fender R. H. Platform Support to Fender Support Angle L. H. Blatform Support to Fender Support Angle	1/2//x1-1/2//	
	1622 R	C 2041 R	L. H. Support Angle to render	1/2 1-1/4	
	1622 R 1622 R	C 2042 R	R. H. Platform Support to Fender Support Angle L. H. Platform Support to Fender Support Angle	1/2" x1-1/2"	
	1622 R	C 2043 R C 2047 R	L. H. Flatiorin Support to Fender Support Ingle	1/0// 1/1/0//	
D	544 R	C 2047 R C 2086 R	Platform Cross Angle to Platform Support Fender Support Braces to Rear Support Fender Support Braces to Rear Support	1/2"x1"	
Ď	544 R	C 2087 R	Fender Support Braces to Rear Support	1'2"x1"	
Ď	595 R	C 2089 R	Lower Fan Shroud to Radiator Sides	5/16"x7/8"	
			Wheel Scraper Support Brace to Support.	the state of the s	

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Qui tit Us
1636 R 1636 R 1615 R D 595 R 1611 R 1611 R 1621 R 1621 R 1621 R 1621 R 1621 R 1621 R 1611 R 1611 R 1611 R	C 2092 R C 2093 R C 2172 R C 2220 R C 2221 R C 2221 R C 2221 R C 2272 R C 2276 R C 2276 R C 2282 R C 2427 R C 2427 R C 2427 R D 87 R D 564 R D 572 R	MACHINE BOLTS WITH SQUARE NUTS —Continued R. H. Wheel Scraper Brace to R. H. Support. L. H. Wheel Scraper Brace to L. H. Support. Oil Filter Adapter to Oil Filter Base Radiator Top Tank to Radiator Core. Radiator Bottom Tank to Radiator Core. Radiator Bottom Tank to Radiator Core. Radiator Bottom Tank to Radiator Core. Radiator Bottom Tank to Radiator Core. Fuel Tank Front Support to Upper Water Pipe. Fender Support Brace to Center Fender Support Fender Support Brace to Center Fender Support Fender Cross Brace to Fenders. Control Lever to Quadrant. Air Cleaner Clamp to Bracket. Auxiliary Air Cleaner Adapter to Auxiliary Air Cleaner (Orchard Tractor only). Auxiliary Air Cleaner Adapter to Air Cleaner Bracket and Air Stack Adapter (Orchard Tractor only) Control Levers to Quadrant. Radiator Curtain Bracket to Radiator. Radiator Curtain Bracket to Radiator	5/8"x2" 3/8"x1-3/4" 5/16"x1-3/4" 5/16"x1-1/8" 5/16"x1-1/8" 5/16"x1-3/4" 1/2"x1-3/4" 1/2"x1-1/4" 1/2"x1-1/4" 3/8"x4-1/4" 3/8"x1-1/8" 3/8"x1-3/4" 3/8"x3-1/2" 5/16"x1"	1 1 1
1935 R	AC 229 R	MACHINE BOLTS WITH HEX. NUTS LENGTH LENGTH	1/0//-0.1/0//	
1893 R 1893 R 1928 R D 1767 R D 1767 R D 1767 R D 1767 R 1928 R 1928 R 1927 R 1929 R 1928 R 1928 R 1928 R 1928 R 1928 R 1928 R 1928 R 1928 R 1928 R 1928 R	AC 243 R AC 243 R AC 243 R AC 733 R AC 735 R AC 736 R AC 765 R AC 765 R AC 765 R AC 765 R AC 765 R AC 765 R AC 971 R AC 1059 R AD 823 R AD 1203 R AD 1203 R C 98 R C 264 R	In Clutch Driving Disk Citrus Grove Fender to Cross Angle, R. H Citrus Grove Fender to Cross Angle, L. H. Muffler to Manifold Steering Arm to Spindle, R. H. Steering Arm to Spindle, L. H. Steering Arm to Spindle, L. H. Steering Arm to Spindle, L. H. Steering Arm to Spindle, L. H. Steering Arm to Shaft Muffler to Manifold Upper Water Pipe to Cylinder Head Disk, Front Wheel C334 R to Hub Exhaust Elbow to Manifold Power Lift Housing to Power Shaft Housing Muffler to Manifold Muffler, Lower Elbow to Manifold Muffler to Manifold Gear Shift Arm to Gear Shift Lever Rear Wheel Scraper Blade Holder to Fender Cross	1/2"x1-3/4" 1/2"x3" 1/2"x3" 1/2"x3" 1/2"x3" 1/2"x3" 1/2"x1-3/4" 5/8"x2-1/2" 1/2"x1-1/2" 1/2"x1-3/4" 1/2"x1-3/4" 1/2"x1-3/4" 3/8"x1-3/4"	
1930 R 1929 R C 684 R C 684 R C 1981 R	C 264 R C 1244 R C 1270 R C 1271 R C 1983 R	Angle. Scraper Blade Holder to Scraper Corner Brace Power Shaft Opening Cover to Case. R. H. Radius Rod to Front Axle L. H. Radius Rod to Front Axle. Seat Spring to Seat Support Body and Seat Support	1/2"x2" 3/4"x4-3/4" 3/4"x4-3/4"	:
D 1767 R 1959 R 1903 R 1942 R 1950 R 1950 R 1930 R 1930 R 1930 R 1930 R 1947 R 1947 R 1903 R	C 2092 R C 2149 R C 2172 R C 2183 R C 2221 R C 2281 R C 2283 R C 2290 R C 2291 R C 2296 R C 2319 R C 2319 R D 1987 R	Channel (Drilled) Wheel Scraper Brace to Differential Quill. Differential Shaft Cover. Oil Filter Adapter to Oil Filter Base (Front). Seat Support to Platform Radiator Bottom to Front End. Steering Shaft Support to Clutch Lever Support. Control Quadrant to Steering Shaft Support Upper Water Pipe to Cylinder Head. Upper Water Pipe to Cylinder Head. Front Fan Bearing Cover to Upper Water Pipe. In Steering Sector Pedestal Support. Oil Filter Body to Base	3/4"x8-1/4" 1/2"x3" 5/8"x7-1/2" 3/8"x7-1/2" 5/8"x1-1/2" 5/8"x3-1/2" 1/2"x5-1/2" 1/2"x5-1/4" 1/2"x2-1/4" 1/2"x2-1/4" 5/8"x2-3/4" 3/4"x5-1/2"	

	· · · · · · · · · · · · · · · · · · ·	ORCHARD TRACTORS		
Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
C 981 R C 1385 R C 1385 R C 1580 R C 2014 R C 2294 R	AC 125 R C 325 R C 326 R C 1211 R C 2011 R C 2292 R	Drawbar Front Cross Member to Rear Axle Housing and Stationary Drawbar. Drawbar to Front Cross Member	5/8′′ x 3′′	2 1 1 1 2 2 2 2
		STOVE BOLTS AND MACHINE SCREWS	0,0 11, 0,1	
		ENGTH——LENGTH——LENGTH——		
2326 R 2326 R 2326 R 2326 R 2334 R 2334 R 2326 R 2326 R 2392 R D 1144 R E 2062 R	AC 228 R AC 352 R AC 375 R AC 810 R AC 821 R AC 822 R AC 827 R AC 828 R AC 850 R AC 850 R C 620 R	Tool Box to Fender Drag Link Dust Cover Screw Fender to Right Fender Brace Citrus Grove Fender Front to Right Dust Shield R. H. Fender to Front Support L. H. Fender to Front Support. R. H. Front Dust Shield to Fender L. H. Front Dust Shield to Fender L. H. Front Dust Shield to Fender Governor Lever Shaft Screws (Fillister Head) Rear Axle Nut Cover to Housing, R. H. and L. H.	10-24"x5/8" 10-24"x5/8" 10-24"x5/8" 5/16"x1" 5/16"x1" 10-24"x5/8" 10-24"x5/8" 1/4-20"x5/8"	2 1 4 1 4 1 2 3 2
E 2063 R C 986 R E 2062 R E 2062 R 2334 R	C 910 R C 950 R C 1453 R C 2316 R	Cover Brace to Air Cleaner Governor Lever to Shaft. Rear Axle Nut Cover to R. H. and L. H. Cover. Steering Gear Housing Cover to Pedestal All Radiator Guards to Radiator	1/4-20"x3/4" 10-32"x1/2" 5/16-18"x1/2"	6 2 2 6 7 4
		HEXAGON NUTS		
D 1771 R 1506 R 1506 R 1513 R 1512 R 1512 R 1512 R 1512 R 1506 R 1506 R 1506 R	AA 380 R AC 47 R AC 251 R AC 272 R AC 282 R AC 350 R AC 374 R AC 375 R AC 386 R AC 397 R AC 398 R AC 436 R AC 437 R AC 636 R AC 647 R AC 666 R	Steering Wheel to Shaft. On Pulley Brake Set Screw Manifold to Cylinder Studs. Cylinder to Main Case. L. H. Differential Quill to Main Case. Seat Spring to Case Studs. L. H. Differential Quill to Main Case. R. H. Fender Support to Housing. L. H. Fender Support to Housing. L. H. Fender Support to Housing. Power Shaft Housing to Main Case. Rear Axle Housing Stud to Cover. Rear Axle Housing Stud to Cover. On Rear Axle Housing Cover to Differential Quill Bolts (Nuts for 1685 R Cap Screws). On Rear Axle Housing Cover to Differential Quill Bolts (Nuts for 1685 R Cap Screws). Control Quadrant Studs. Cylinder to Main Case. Road Band Support to Rear Wheel Bolt. Cast Cone Lug to Wheel. Road Band Support to Rear Wheel Bolt	1/2" 1/2" 3/4" 5/8" 5/8" 5/8" 5/8" 1/2" 1/2" 1/2" 1/2" 1/2" 3/4" 3/4"	114497222222 2 229111

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Qu: tii Us	
		HEXAGON NUTS—Continued			
1506 R	AC 694 R	Manifold to Cylinder Studs	1/2"	l	
1504 R	AC 745 R	On Air Cleaner to Carburetor Cap Screw	3/8"	1	
1506 R	AC 770 R	On Cap Screws Attaching Fuel Tank Support to Upper		l	
		Water Pipe.	1/2"		
1513 R	AC 781 R	Seat Spring to Main Case	3/4"	i	
1512 R	AC 789 R	L. H. Differential Quill to Main Case.	5/8′′	i	
1506 R	AC 817 R	Rear Axle Housing Stud to Cover	1/2"		
1506 R	AC 818 R	Rear Axle Housing Stud to Cover	1/2"	- 1	
1512 R	AC 821 R	R. H. Fender Support to Housing	5/8".	j	
1512 R	AC 821 R	R. H. Fender to Rear Axle Housing	5/8"	!	
1512 R	AC 822 R	L. H. Fender Support to Housing	5/8"	1	
1512 R	AC 822 R	L. H. Fender to Rear Axle Housing	5/8′′		
1513 R	AC 918 R	Road Band Support to Rear Wheel Bolt	3/4"	i	
1504 R	AC 959 R	Control Tube to Control Quadrant	3/8"	1	
1512 R	AC 1070 R	On Rear Wheel to Rear Axle Bolts.	5/8"	- 1	
1512 R	AC 1103 R	On Rear Wheel to Rear Axle Bolts	5/8"		
1512 R	AC 1139 R	Cylinder Head to Cylinder	5/8"	İ	
1512 R	AC 1140 R	Cylinder Head to Cylinder	5/8" 1/2"	i	
1506 R	AD 894 R	Muffler Top and Stack to Muffler	1/2/	i	
1506 R	C 107 R	Reverse Shaft Collar Set Screw	1/2"		
1506 R	C 248 R		3/4"	į	
1513 R	C 258 R	Radiator Bottom to Front End	5/8"		
1512 R	C 296 R	Front End Studs to Radiator	3/4"	i	
1513 R	C 302 R	Front End to Case	3/4"	i	
1513 R	C 302 R	Steering Gear and Worm Housing to Main Case		į	
1506 R	C 321 R C 340 R	R. H. Differential Quill to Main Case	5/8"		
1512 R		Scraper Blade Holder Set Screw	5/8"	i	
1512 R 1513 R	C 354 R C 367 R	Lug to Rear Wheel (Wide Tread)	3 /4"	;	
1513 R	C 447 R	On Clutch Operating Lever Bolt	5/8"	i	
1506 R	C 686 R	Shift Shaft Set Screw to Case	1/2"		
1504 R	C 740 R	On Front Axle Pivot Bolt	3/8"		
1495 R	C 921 R	On Piston Pin Lock Screw	1/2"		
1514 R	C 927 R	On Piston Pin Lock Screw Clutch Operating Rod Platform to Rear Axle Housing Studs	9/16"		
1512 R	C 945 R	Platform to Rear Axle Housing Studs	5.8"		
1513 R	C 981 R	Flywheel Bolts	3.4		
1504 R	C 1018 R	Control Tube Set Screw Nut	3/8′′		
1504 R	C 1054 R	On Fender Tie Rod	3/8″		
1516 R	C 1210 R	Drawbar to Housing Cap Screw, Rear	1''		
1513 R	C 1267 R	Havfield Overband Support to Wheel Rim Bolts	3.4		
1513 R	C 1275 R	Front End Support to Case	3/4''	;	
1513 R	C 1294 R	On R. H. Meadow Grouser to Rear Wheel Bolt	3/4′′		
1513 R	C 1295 R	On L. H. Meadow Grouser to Rear Wheel Bolt	3/4′′	1	
1504 R	C 1444 R	On Power Lift Trip Rod	3/8′′	į	
1512 R	C 1510 R	On Rear Wheel to Rear Axle Bolts	5/8"	- ;	
1506 R	C 1535 R	On Cap Screw Attaching Power Shaft Foot Trip Pedal	4.04		
		to Bracket and Brace	1/2"		
1512 R	C 1538 R	On Rear Wheel to Rear Axle Bolts	υ/Ο 9 /Ω''	ļ	
1504 R	C 1539 R	On Front Axle Pivot Pin Bolt	5/8"	;	
1512 R	C 1547 R	On Rear Wheel to Rear Axle Bolts	5/8"	:	
1512 R	C 1554 R	On Rear Wheel to Rear Axle Bolts	1/2"	:	
1506 R	C 1627 R	Manifold to Cylinder Studs On Cap Screw Attaching Steering Column Support to		1	
1506 R	C 1636 R	Steering Column Collar	1/2"	:	
1506 D	C 1007 P	Steering Gear Housing Stud to Main Case	1/2"		
1506 R	C 1637 R C 1640 R	On Rear Housing Cover to R. H. and L. H. Differential	- ı -	:	
1506 R	O TOTO IV	Quill Bolts 1685 R (Two Bottom Bolts in Differen-		:	
j		tial Quill)	1/2"	į	
1513 R	C 1646 R	On Rottom Lug to Rear Wheel Bolt	3/4"	1	
1512 R	C 1679 R	On Clutch Operating Lever Bolt	5/8"	1	
1512 R	C 1716 R	Rear Wheel to Axie (R. H. 6: L. H. 6)	5 /8''	:	
1504 R	C 1788 R	On Chitch Foot Trip Rod	3 ∤8	į	
1506 R	C 1791 R	Manifold to Cylinder Studs	1/2		
1506 R	C 1908 R	Manifold to Cylinder Studs	1/2"		
1513 R	C 1981 R	On Seat Spring Bolt (For AD860 R Assembly)	3/4"	į	
1506 R	C 2000 R	Muffler Top to Muffler	1/2"	i	
1512 R	C 2001 R	R H Differential Quill to Main Case	5/8"		
1512 R	C 2017 R	On Clutch Operating Lever Bolt	5/8"	i	
1518 R	C 2023 R	R. H. Steering Arm to Front Wheel Knuckle L. H. Steering Arm to Front Wheel Knuckle	5/8	!	
TOTO TO			5/8′′		

HARDWARE LIST FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
1504 R 1512 R 1513 R 1513 R 1513 R 1504 R 1513 R 1504 R 1504 R 1504 R 1504 R 1512 R 1504 R 1503 R 1503 R 1513 R 1513 R 1513 R 1513 R 1513 R 1512 R 1512 R	C 2037 R C 2040 R C 2041 R C 2147 R C 2148 R C 2170 R C 2176 R C 2176 R C 2180 R C 2299 R C 2221 R C 2241 R C 2280 R C 2299 R D 87 R D 156 R D 174 R D 411 R D 411 R D 411 R D 411 R D 411 R D 1795 R D 1795 R D 1795 R D 1795 R D 1791 R All Spade Lugs All Grousers All Grousers All Grousers All Grousers	HEXAGON NUTS—Continued On Fender Brace U-Bolts Fender Rear Angle Support to Rear Axle Housing. Fender Rear Angle Support to Rear Axle Housing. On Road Band Support to Drive Wheel Support Bolt On Drive Wheel Support to Road Band Support Bolt On Front End to Main Case Studs. On Oil Filter Adapter to Body Studs On Platform to Case Studs On Power Lift Trip Rod On Sand Lug to Rear Wheel Bolt On Speed Change Lever Pivot Bolt. Intake Elbow to Carburetor On Clutch Operating Lever Bolt On Clutch Deprating Lever Bolt On Clutch Lever Support Studs. Manifold to Head Spark and Speed Lever Control (Extra Nut) On Spindle Pin Taper Bolt R. H. Main Bearing Adjusting Screw Spade Lug Bolt to Wheel Road Band Support Bolt to Rear Wheel Shift Shaft Set Screw to Case On Seat to Seat Support Bolt. Hook Bolt On Rear Wheel to Rear Axle Bolts On Rear Wheel to Rear Axle Bolts Scraper Blade Set Screw. On Lug to Drive Wheel Bolts On Grousers to Drive Wheel Bolts On Road Lugs to Drive Wheel Bolts	53353333313555555555555555555555555555	22221113323111111336111111666111222
D 2781 R D 2781 R D 2781 R D 528 R C 1201 R D 2783 R C 1592 R D 528 R D 2782 R D 2782 R D 2782 R D 2782 R D 2782 R D 2782 R D 2782 R D 2782 R D 2782 R D 2782 R C 1592 R	AC 443 R AC 458 R AC 625 R C 308 R C 618 R C 624 R C 925 R C 977 R C 978 R C 1024 R C 1764 R C 1925 R C 2228 R C 2228 R C 2228 R C 2228 R C 2329 R C 2347 R	On Pulley Brake Set Screw. Reverse Shaft to Case (Screw) On Throttle Rod. Fan Drive Bevel Gear to Governor Shaft. L. H. Main Bearing Adjusting Screw On Cam Follower Adjusting Screw Steering Wheel to Steering Shaft On Spark Control Rod. On Speed Control Rod. On Adjusting Screw Steering Gear Shaft On Top Screws to Steering Gear Tie Rod to Tie Rod End. On Throttle Rod and Joint On Piston Pin Set Screw. On Piston Pin Set Screw. On Piston Pin Set Screw On Throttle Rod. Seat Pivot Link to Seat Pivot Link Bolt On Throttle Rod. On Magneto Control Rod. On Intake Elbow Clamp Set Screw. On Pedestal Support to Pedestal Set Screw. Lamp Support	1 2" 1/2" 1/4" 15/16" 3/4" 1/2" 7/8" 1/4" 1/4" 1/4" 1/4" 1/4" 1/4" 1/4" 1/4	111111112121111411111111111

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Qua tity Use
		HEXAGON NUTS—CASTELLATED		
D 1661 R C 1104 R C 538 R C 2072 R C 1104 R D 336 R C 1104 R C 535 R C 1387 R C 535 R C 535 R C 760 R C 535 R C 1200 R D 1661 R C 1200 R	AC 229 R AC 428 R AC 752 R AC 979 R AC 1129 R AC 1129 R C 315 R C 325 R C 325 R C 437 R C 643 R C 725 R C 1193 R C 1194 R C 1194 R C 1194 R C 1525 R C 1944 R C 2027 R C 2167 R C 2209 R	On Clutch Driving Disk Bolts Steering Worm Wheel to Steering Shaft Rear Axle to Sprocket Governor Shaft Ends On Each End of Steering Gear Shaft On Connecting Rod Bolt Steering Gear Arm to Shaft Power Shaft Spur Gear to Power Shaft Bevel Gear On Spindle Gear Sector Bolt On Steering Arm Gear Sector Bolt Differential Shaft to Brake Drum On Clutch Operating Bolts Each End of Spline Shaft Gear to Oil Pump Drive Shaft Differential Gears to Differential Housing Bolt Governor Shaft Ends Fan Shaft Front Fan Shaft Rear Fan Shaft Rear Fan Shaft Rear Fan Shaft Rear Fan Shaft Front Steering Worm Wheel to Steering Shaft Fan Shaft Front Steering Gear Arm to Shaft Fan Shaft Front Steering Gear Arm to Shaft Fan Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Rear Shaft Magneto Drive to Magneto Drive Coupling Steering Sector to Spindle	7 /8" 9 /16" 7 /8" 1" 5 /8" 1" 5 /8" 1" 9 /16"	
C 543 R R R R R R R R R R R R R R R R R R R	AC 149 R AC 149 R AC 149 R AC 150 R AC 208 R AC 226 R AC 286 R AC 644 R AC 790 R AD 840 R C 384 R C 384 R C 919 R C 1219 R C 1219 R C 1219 R C 1219 R C 1212 R C 1212 R C 1212 R C 1213 R C 1214 R C 1214 R C 1215 R C 1216 R C 2045 R C 2045 R C 2050 R	Low Ring Gear to Spider. High Ring Gear to Spider Intermediate Ring Gear to Spider Gear R. H. and L. H. Brake Drum to Hub. In Speed Change Lever Swinging Drawbar. Swinging Drawbar. Swinging Drawbar. Tool Box Transmission Case Cover. Worm Wheel to Hub (Power Lift). Air Cleaner Stack Elbow to Air Cleaner Brake Pedal to Brake Lever. Spindle to Front Wheel Knuckle Hood Clamp to Hood. Tool Box Support to Tool Box Road Band Support to Road Band Foot Trip Bracket to Foot Rest. Hood Clamp to Hood. Scraper Blade to Scraper Brace Brace to Pulley Guard Support to Fuel Tank Cooling Baffle. Citrus Fender Side Support to Fender Front Support to Platform Side Angles to Platform Support to Right Front Dust Shield Support to Left Front Dust Shield	1 4"x2" 1 4"x1-1 4" 3 8"x1-1/8" 3 16"x3/8" 1 2"x2-1 4" 1 2"x2-1 /4" 1 4"x1/2" 1 4"x2" 1 4"x1/2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x2" 1 4"x3/4" 3 16"x3/8" 1 4"x3/4" 1 4"x3/4" 1 4"x3/4" 3 16"x5/8"	

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used
D 1416 R D 1416 R D 1416 R A 2053 R D 1416 R 2188 R	AC 71 R AC 72 R AC 861 R AD 918 R C 457 R D 1040 R	Yoke to Sliding Gear Fork (Low and Reverse) Yoke to Sliding Gear Fork (High and Intermediate) Seat Latch Bracket to Seat Support Support to Road Band Yoke, Shift Fork Air Cleaner to Flange	3/8"x1-1/4" 3/8"x1-1/4" 1/2"x1-1/2" 3/8"x1-1/4"	22142226
AD 1782 R AD 1782 R AD 1772 R AD 1771 R	C 1087 R D 385 R D 385 R D 468 R	Lining to Brake Band (Box of 100) Lining to Pulley Brake (Box of 100) Lining to Pulley Brake (Box of 100) Fuel Tank Cushion to Support (Box of 100)	5 32"x1/2" 5 32"x1 2" 9/64"x7/16" 9/64"x5/16"	12 4 5 4

LOCK WASHERS



COTTER KEYS



Size	No.	T			Diameter			
3/64" C1320 R	Length 3.32"	3,32"	1 8"	3 16"	1,4"	3.8"		
3/16"	D603 R	1/2"	1730 R					
1/4"	1729 R	5/8"		1732 R				
5/16"	1721 R	3,'4''			D339 R			
3/8"	1722 R	1"	1731 R	1735 R	1741 R			
1/2"	1724 R	1-1/4"			1742 R			
5/8′′	1726 R	1-1/2"		1737 R	1743 R			
3/4"	1728 R	2"		1738 R	2215 R	1748 R		
1"	1882 R	3-1/2"					M23	

	asting umber	NAME AND DESCRIPTION	Order Part Number	Page No.	Pi N
C	32 R	Main Bearing Housing with Cap, R. H	AC 162 R	3	Γ
č	33 R	Main Bearing Housing with Cap, L. H.	AČ 161 R	3	
C	68 R	Brake Lever and Pedal. Spindle and Knuckle, Front Wheel.	AC 48 R	22	1
C	84 R	Spindle and Knuckle, Front Wheel.	AC 188 R	23]]
Č	126 R	Pulley with Cone, Bushing and Gear.	AC 130 R	16]
č	127 R	Pulley with Cone, Bushing and Gear. Disk, Clutch Driving, with Bolts Fork, Shift, High and Intermediate	AC 229 R	16	:
ç	132 R	Fork, Shift, High and Intermediate	AC 72 R	17	1
C	133 R 148 R	Fork, Shift, Low and Reverse	AC 71 R	17 16	
č	149 R	Gear, Spline Shaft Quill, Spline Shaft, with Bearing Cup	AC 176 R	16	
č	167 R	Hub Cap with Oil Fitting.	AC 119 R	23	:
Č	178 R	Hub Cap with Oil Fitting. Bearing, Cam Shaft with Cup, R. H.	AC 80 R	7	١.
C	179 R	Bearing, Cam Shaft with Cup, L. H. Bearing, Cam Shaft with Cup, L. H. Spider, Intermediate, with Gear Spider, High and Low, with Gears Crankshaft with Gear, Main Bearings and Shims	AC 81 R	7	
Č	210 R	Spider, Intermediate, with Gear	AC 150 R	17	:
Č	211 R	Spider, High and Low, with Gears	AC 149 R	17	:
Č	225 R 226 R	Crankshait with Gear, Main Bearings and Shims	AC1187 R	4	
C	226 R	Connecting Rod, Complete Connecting Rod and Cap with Piston Pin Bushing	AC 193 K	3 3	
č	241 R	Flywheel with Bolts and Dowel Pin	AC 194 R	3	
č	242 R	Rear Axle Housing, R. H., with Studs and Snap Rings	AC 212 R	18	
č	243 R	Rear Axle Housing, R. H., with Studs and Snap Rings	AC 213 R	18	1:
Č	250 R	Cylinder Head	AC1139 R	6	'
Ċ	253 R	Cylinder Head Quadrant, Control, with Clutch Lever Pivot Bolt Front Axle with Steering Spindle Bushings	AC 520 R	9	
C	255 R	Front Axle with Steering Spindle Bushings	AC 185 R	23	1:
Č	292 R	Steering Arm. R. H., with Bolt.	AC 733 R	25	1
č	293 R	Steering Arm, L. H., with Bolt	AC 734 R	25	1
C C	294 R 295 R	Strainer Manifold, Intake and Exhaust with Exhaust Elbow Studs	AC 251 R	11	
č	297 R.	Quill. Differential Shaft, L. H., with Snap Ring and Dowel Pin.	AC 272 R	5 17	1
č		Case, Transmission, Main		3	i -
č	301 R	Cylinder, 5-3/4", with Studs, Valve Guides, Valves and Springs.	AC 256 R	5	
Č	301 R	Cylinder 5-3/4" with Studs and Valve Guides	AC 257 R	5	
C	301 R	Cylinder with Pistons, Rings and Gaskets	AC 886 R	5	
C	303 R	Cam Shaft, with Woodruff Key.	AC 564 R	7	
Ç	304 R	Gear, Cam Shaft, with Governor Drive Gear	AC 276 R	7	
C	306 R 324 R	Case, Governor, with Plug	AC 344 R	25	١,
č	333 R	Steering Arm, with Bolt, Front	AC 371 R	23	1 2
č	334 R	Front Wheel, with Bolts (Disk Type).	AC 847 R	24	:
č	336 R	Hub with Races, Front Wheel Front Wheel, with Bolts (Disk Type). Sleeve, Steering Spindle with Pin	AC 416 R	25	
C	341 R	Quill, Differential Shalt, L. H., with Shap Ring	AC 350 R	18	1
C	342 R	Power Shaft Housing	AC 386 R	40	1
Č	344 R	Rear Axle Housing, R. H., with Studs and Snap Rings	AC 397 R	18	
Ç	345 R	Rear Axle Housing, L. H., with Studs and Snap Rings	AC 398 R	18	1
C	348 R 350 R	Power Lift Crank with Pin	AC 176 R	16	
č	351 R	Quill, Spline Shaft, with Bearing Cup. Power Lift Clutch Plate Assembly	AC 387 R	41	
č	352 R	Power Lift Housing	AC:1059 R	41	
Č	353 R	Power Lift Worm Wheel Hub (Bronze Gear Heavy Duty)	AC1058 R	41	
C	353 R	Power Lift Worm Wheel Hub	AC 388 R	41	1:
Č	365 R	Brake, with Lining, Pulley	AC 446 R	16	
Č	373 R	Clamp Nut, with Cap Screw, Rear Axle	AC 454 R	18	:
č	376 R	Steering Arm, R. H., with Bolt.	AC 735 R AC 736 R	25	
C	377 R 383 R	Steering Arm, L. H., with Bolt.	C 302 R	25 23	
č	388 R	Front End Support Rear Axle Housing, R. H., with Studs and Snap Rings	AC 503 R	19	
č	389 R	Rear Axle Housing, L. H., with Studs and Snap Rings.	AC 504 R	19	
č	390 R	Front End Support	C 1275 R	23	
Ċ	391 R	Hub with Races, Front Wheel	AC 513 R	23	
C	397 R	Cam Shaft with Woodruff Key	AC 564 R	7	
000000	1274 R	Front Pedestal with Steering Arm Bushings.	AC 408 R	25	
Ç	1596 R	Quadrant, Control, with Clutch Lever Pivot Bolt	AC 520 R	1.9	١.
č	1645 R 1663 R	Quill, Differential Shaft, L. H., with Snap Ring and Dowel Pin.	AC 272 R AC 628 R	17	:
č	1667 R	Hub with Races, Front Wheel	AC 628 R AC 631 R	23 23	
č	1676 R	Spindle and Knuckle, Front Wheel Quadrant, Control, with Clutch Lever Pivot Bolt	AC 520 R	9	1
00000	1700 R	Cylinder, 6", with Stude and Guides	AC 619 R	5	
č	1700 R	Cylinder, 6", with Studs, Guides and Valves	AC 620 R	5	1
C	1700 R	Cylinder, with Pistons, Rings and Gaskets	AC 887 R	5	١.
C	1700 R	Cylinder, with Pistons, Rings and Gaskets	AC 888 R	5	
C	1701 R	Cylinder Head	AC1140 R	6	

CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES FOR GENERAL PURPOSE, WIDE TREAD, AND ORCHARD TRACTORS

Casting	NAME AND DESCRIPTION	Order	Page	Plate
Number		Part Number	No.	No.
C 1733 R R 1734 R R 1734 R R 1734 R R 1737 R 1734 R R 1737 R 1737 R 1731	Case, Transmission, Main. Crankshaft with Gear, Main Bearings and Shims. Gear, Spline Shaft. Main Bearing Housing, R. H., with Cap. Main Bearing Housing, L. H., with Cap. Main Bearing Housing, L. H., with Cap. Manifold with Exhaust Elbow. Radiator Top Tank. Cover, Air Cleaner, with Bail Container, Air Cleaner, with Gasket. Piston with Rings. Front Axle, with Bushings Piston with Rings. Piston with Rings. Piston with Rings. Rear Axle Housing, R. H., with Studs and Snap Rings. Rear Axle Housing, L. H., with Studs and Snap Rings. Upper Water Pipe, with Bearing Cup Pin. Connecting Rod Connecting Rod, with Piston Pin Bushing. Quill, Differential Shaft, L. H., with Snap Ring. Front Wheel, with Races. Upper Water Pipe, with Bearing Cup Pin. Piston with Rings. Piston with Rings. Piston with Rings. Piston with Rings. Fan, Complete. Cover and Stack, Air Cleaner. Housing with Sleeve Pin, Front Fan Bearing Case, Transmission. Housing with Sleeve Pin, Front Fan Bearing Case, Transmission. Housing with Sleeve Pin, Full Tank Filler Cap. Screw Head, and Stud, Fuel Tank Filler Cap. Screw Head, and Stud, Radiator Filler Cap. Body, Oil Indicator. Nut, Front Wheel Bearing with Cap Screw. Muffler, Lower, Elbow. Muffler, Lower, Elbow. Muffler, Stack and Flange. Body, with Bolts, Oil Filter Base, Oil Filter with Plugs.	AC 254 R AC 747 R AC 745 R AC 1112 R AC1113 R AC1113 R AC1114 R AC 818 R AC 763 R AC 763 R AC 764 R AC 769 R AC 909 R AC 909 R AC 1116 R AC 9116 R AC 9117 R AC 9117 R AC1118 R AC 909 R AC 909 R AC 977 R AC1021 R AC 977 R	35 173 335 1388 2344 44 199 1344 1444 1585 153 1142 1711 1111	1 10 1 1 1 2 2 9 30 30 2 17 2 2 2 12 12 9 9 2 2 2 11 1 188 9 9 2 2 4 4 4 7 7 9 6 6 188 3 3 6 6 6

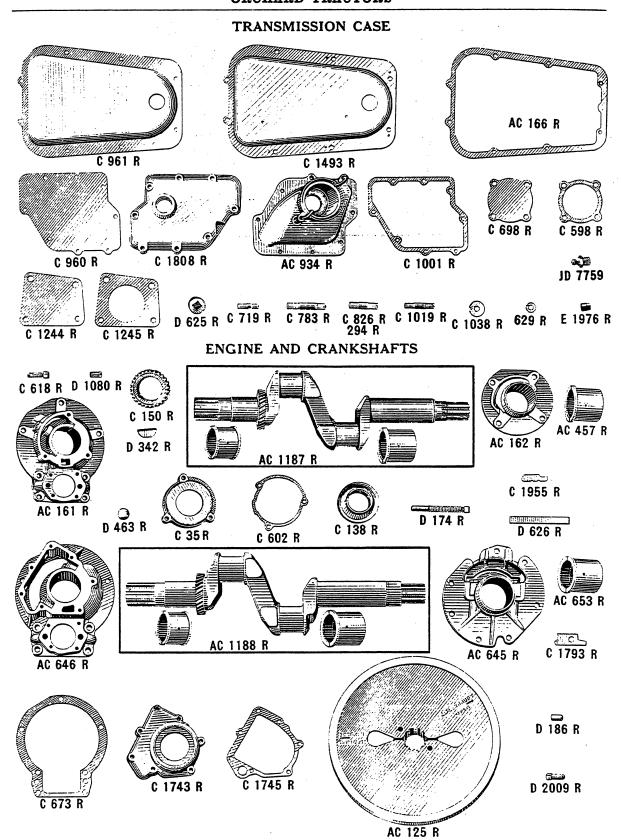


Plate No. 1

PISTONS AND CONNECTING RODS AC 1138 R AD 102 R C 1794 R D 334 R AC 193 R AC 194 R AC 456 R C 1925 R AC 763 R AC 764 R C 1764 R CYLINDERS, CYLINDER HEAD, VALVES AND MANIFOLDS C 1908 R C 248 R AC 251 R C 1791 R C 1723 R 321 R C 2300 R C 1006 R AC 694 R C 2299 R AC 1147 R C 246 R AC 566 R C 1605 R AC 567 R C 1606 RC 1604 R C 1009 R D 1721 R C 2109 R C 2110 R C 1005 R C 251 R AC 1139 R AC 1140 R C 1002 R C 1174 R 14 R C 1823 R K 2198 R C 1709 R D 488 R 测量 K 2525 R 1450 R ⇒<u>*</u> D 1865 R AC 256 R AC 257 R AC 619 R AC 620 R C 1003 R

Plate No. 2

CAMSHAFT AND CAM FOLLOWERS

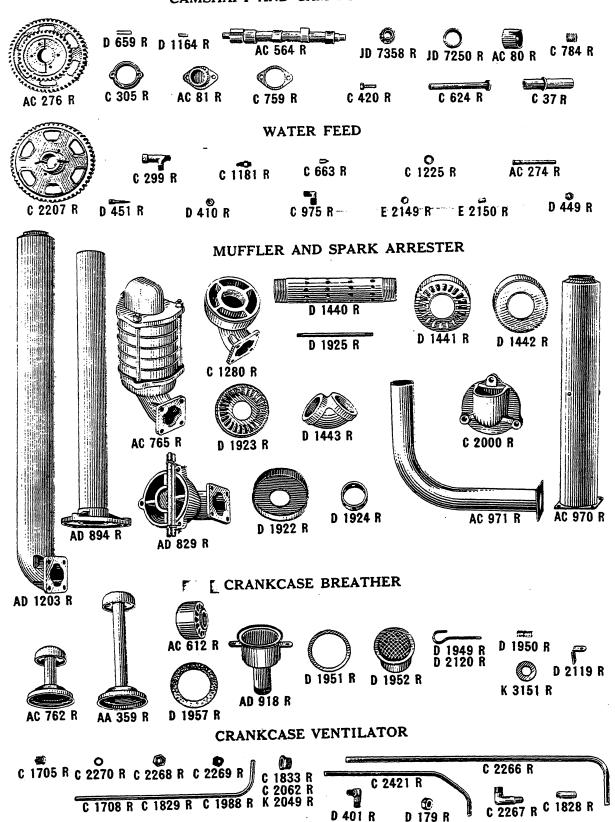
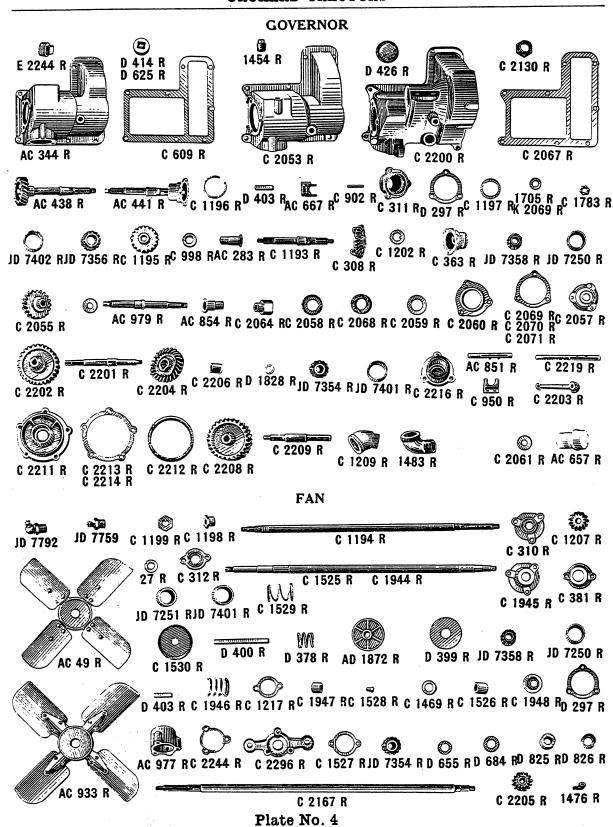


Plate No. 3




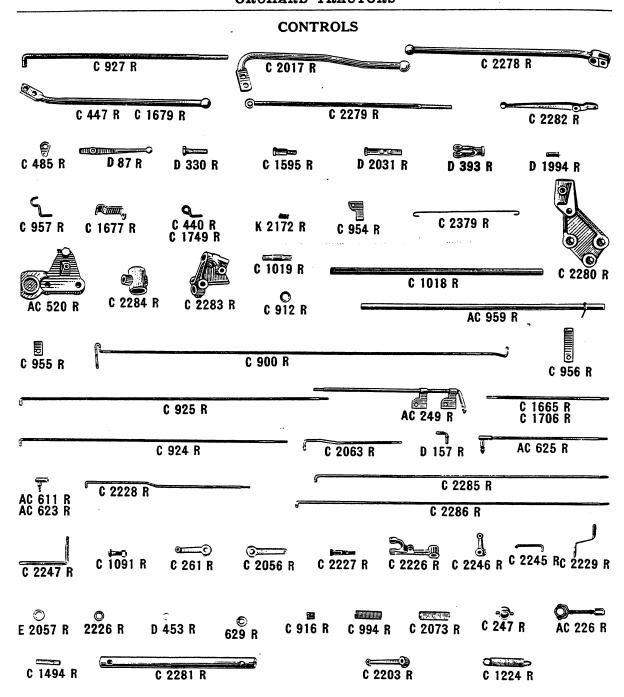



Plate No. 5

LUBRICATING SYSTEM AND OIL PUMP



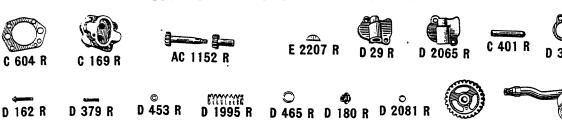

OIL FILTER AND INDICATOR

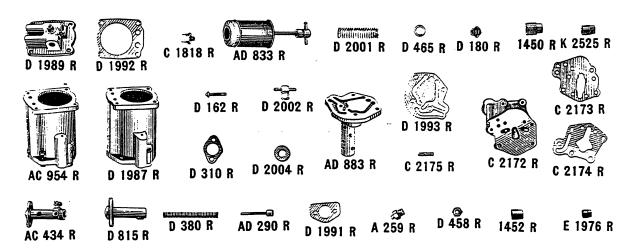

OIL PIPES AND FITTINGS



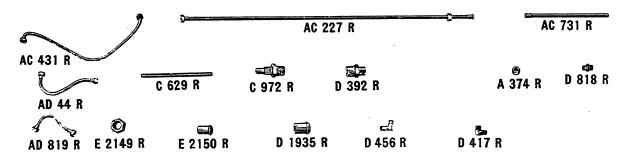


Plate No. 6

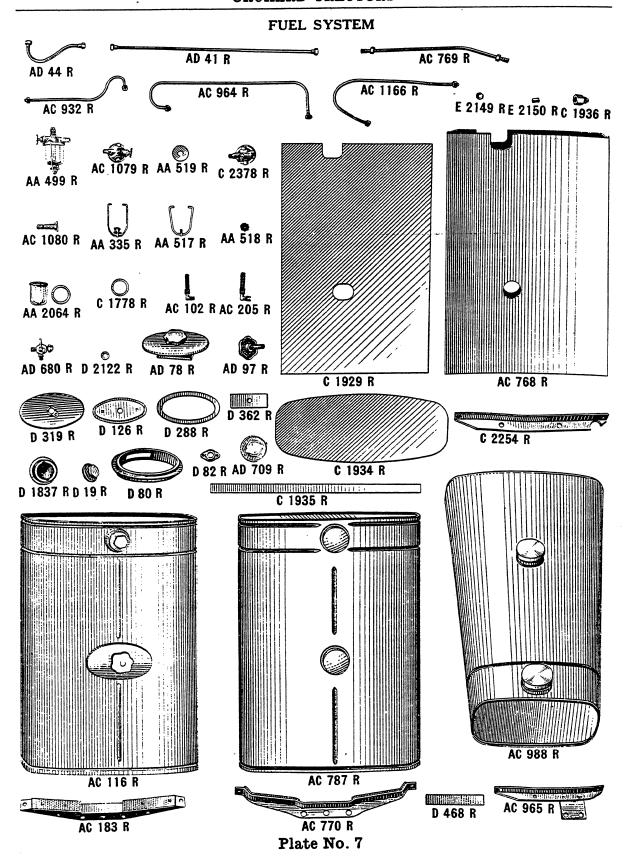

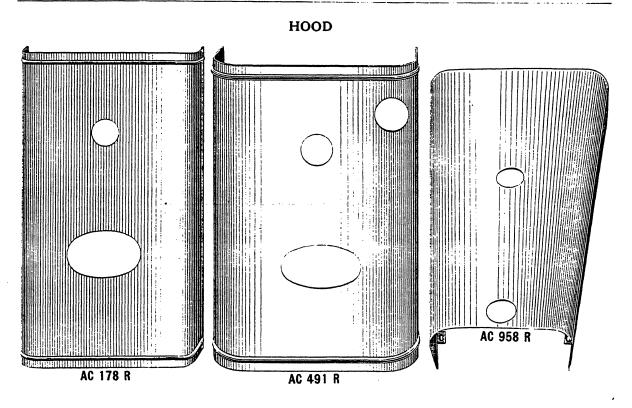

RADIATOR GUARD AND CURTAIN

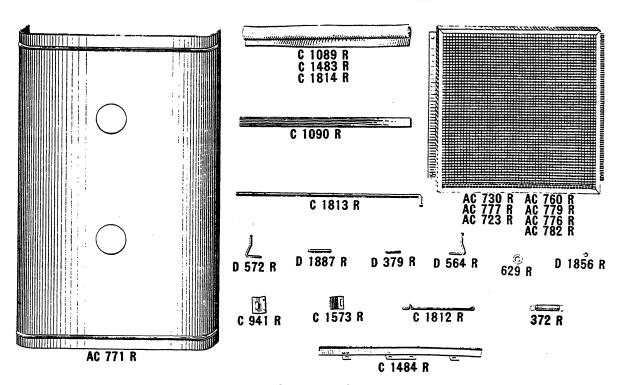


Plate No. 8

COOLING SYSTEM C 307 R C 256 R C 2220 R D 305 R C 1799 R OHID. C 2292 R C 1004 R AC 909 R C 2293 R C 1023 R C 259 R C 616 R RIGHT C 2290 R LEFT C 2291 R C 257 R RIGHT C 1910 R LEFT C 1911 R C 2223 R AC 1109 R AC 1120 R AD 97 R AD 86 R AC 953 R C 258 R C 1942 R C 2222 R D 319 R C 332 R C 928 R D 362 R AD 922 R C 1522 R D 2102 R D 2388 R D 2101 R AC 772 R C 2089 R D 488 R 2205 R D 473 R © 27 R A 2093 R C 1865 R C 2221 R C 2257 R

Plate No. 9

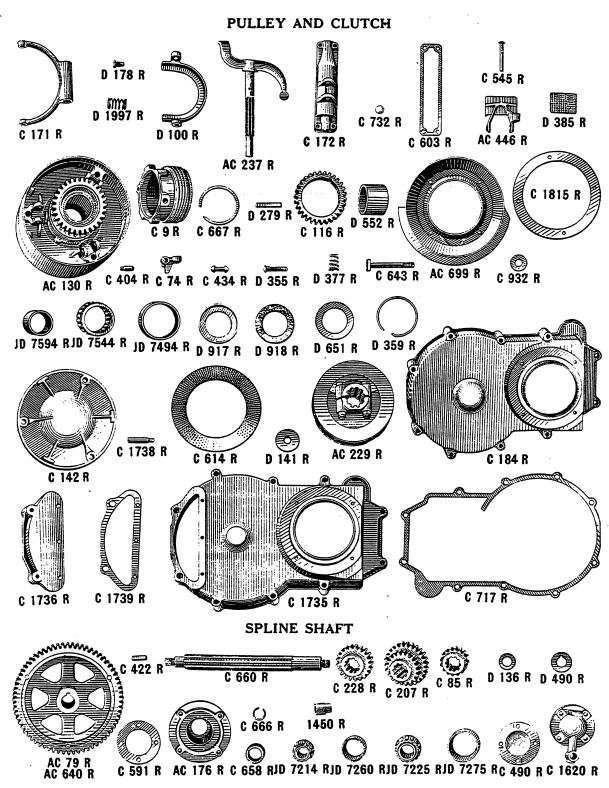


Plate No. 10

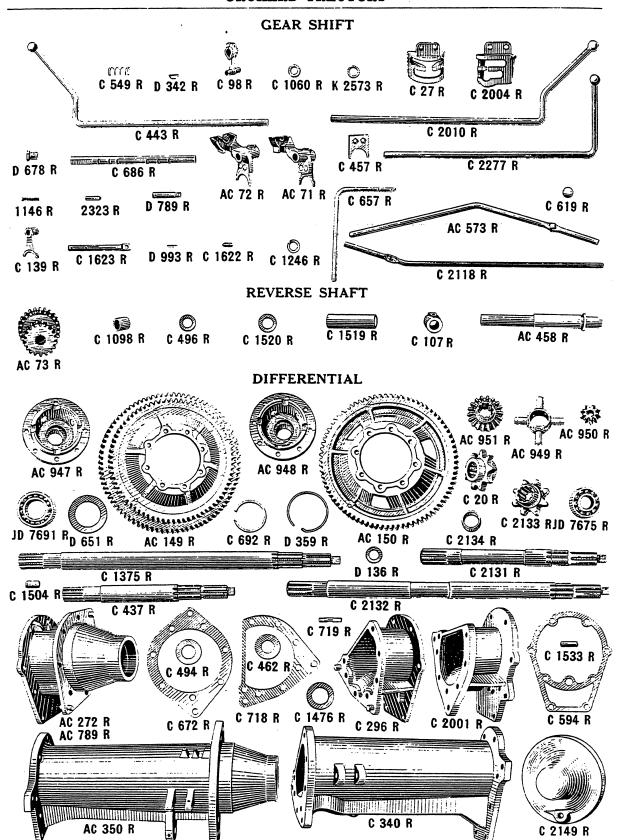
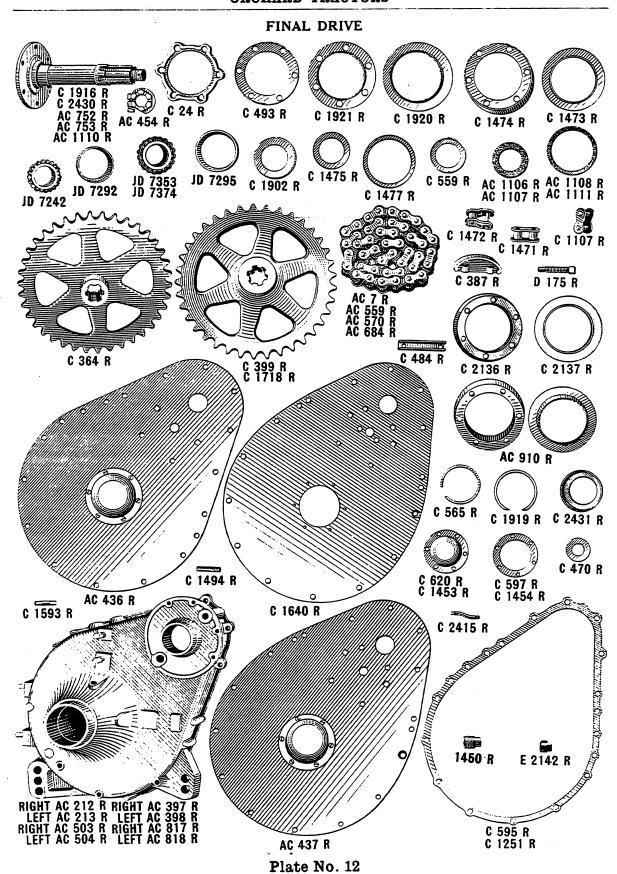


Plate No. 11




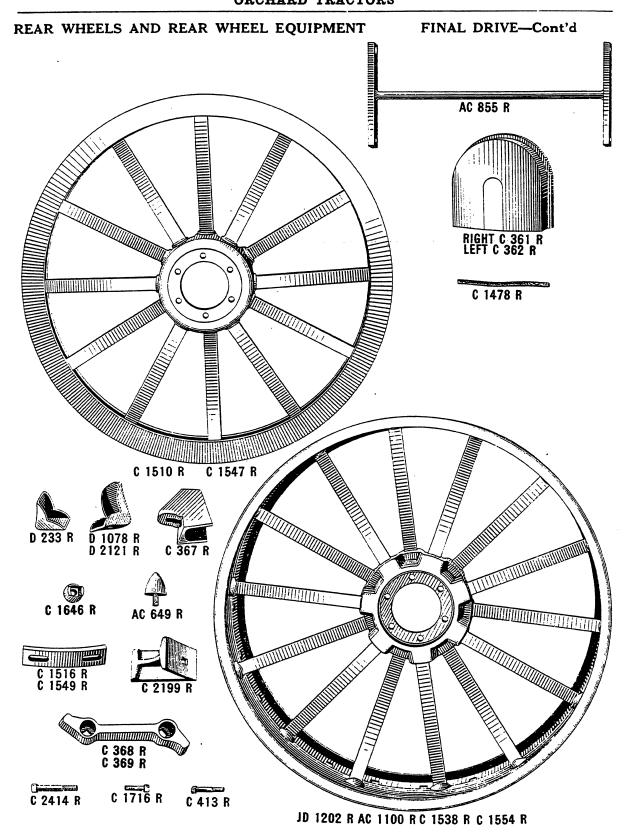


Plate No. 13


REAR WHEELS AND REAR WHEEL EQUIPMENT-Continued AC 918 R C 1027 R C 1235 R C 1556 R JD 1212 R

Plate No. 14

į

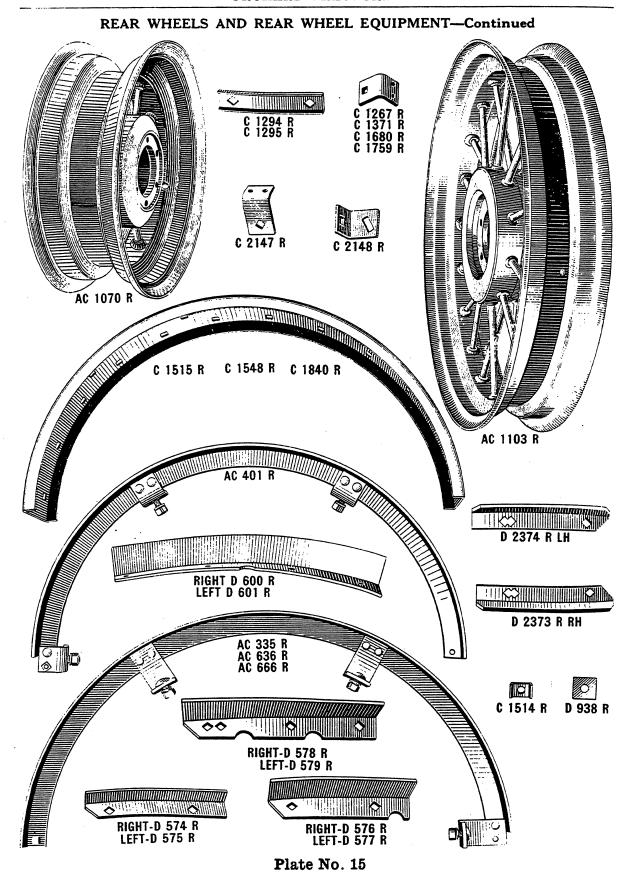

WHEEL SCRAPERS

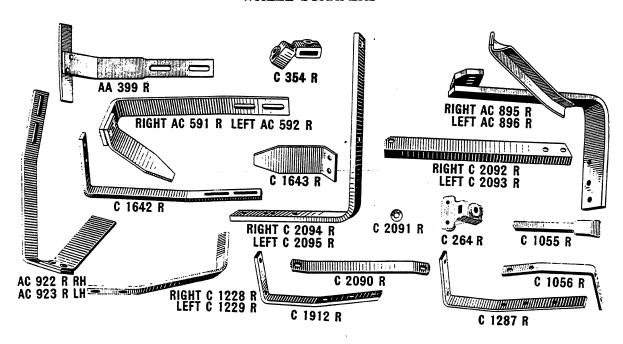

BRAKES

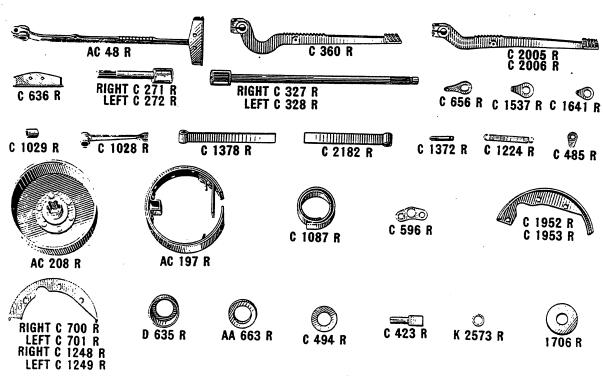


Plate No. 16




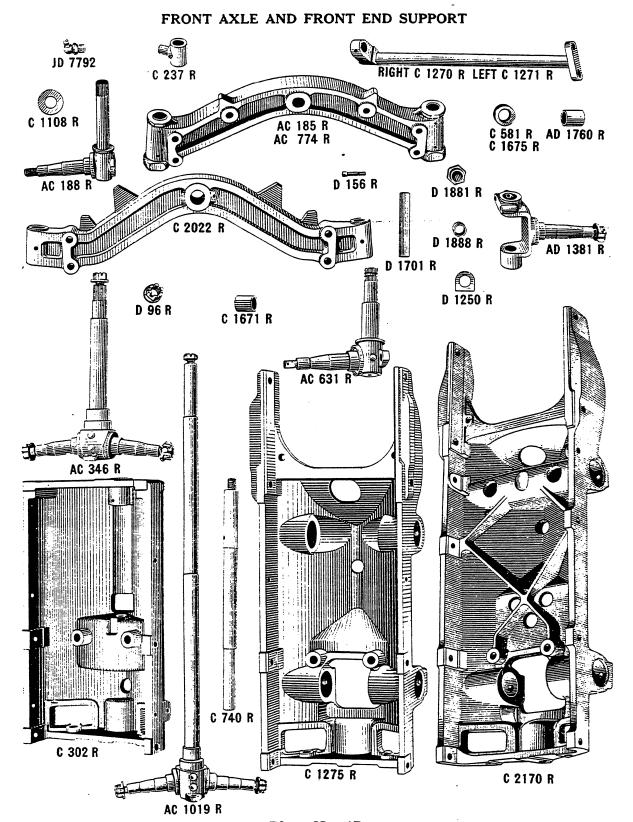


Plate No. 17

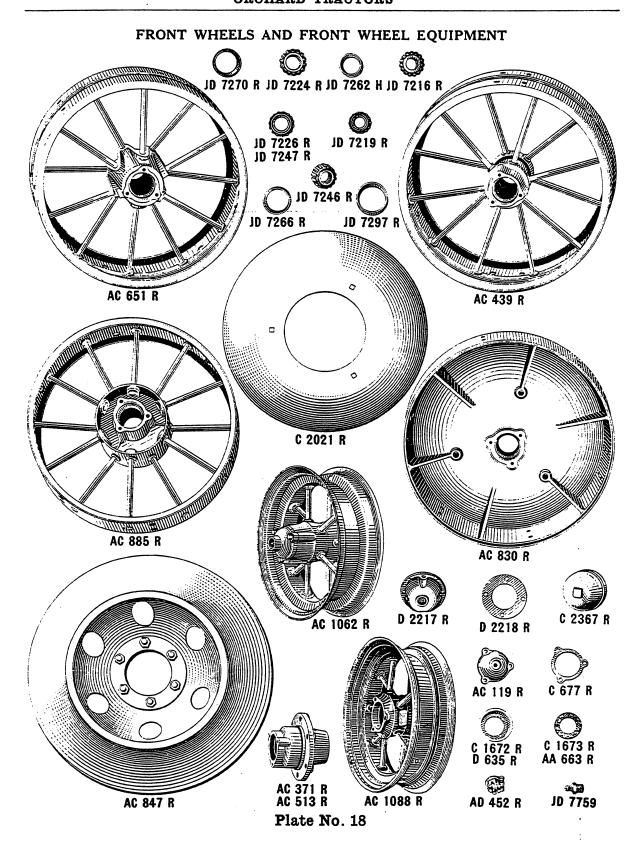

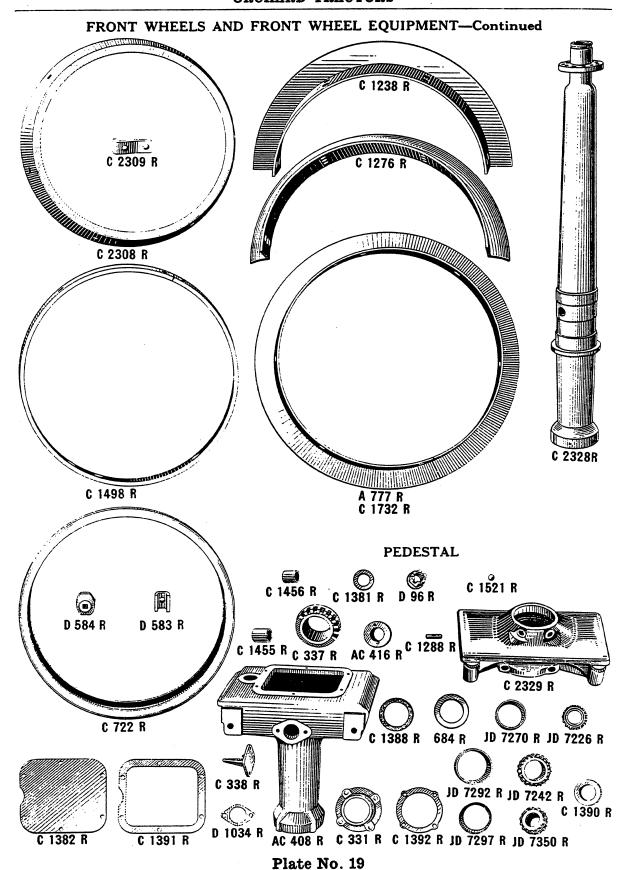

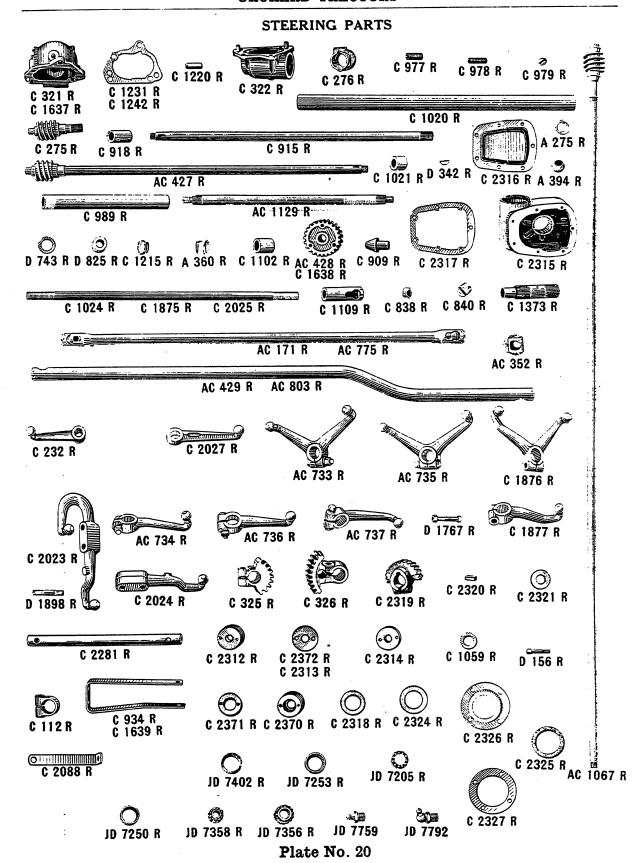

DRAWBAR


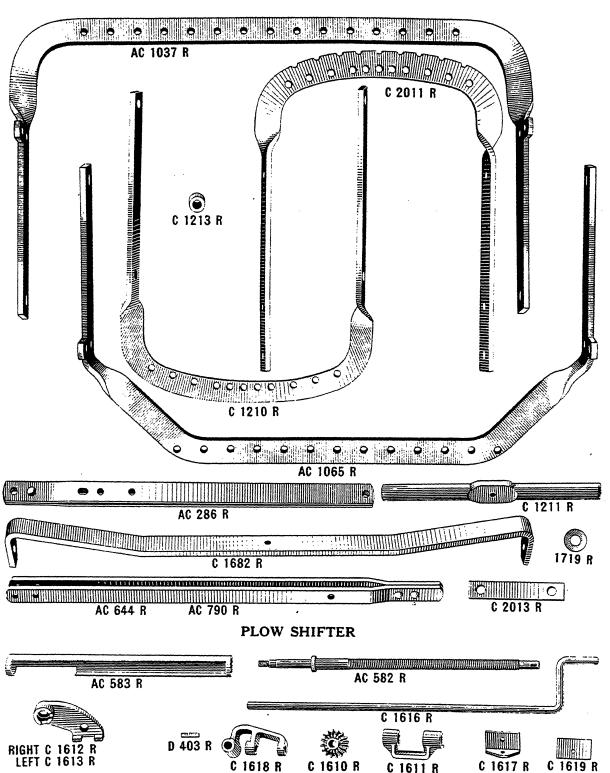


Plate No. 21

SEAT

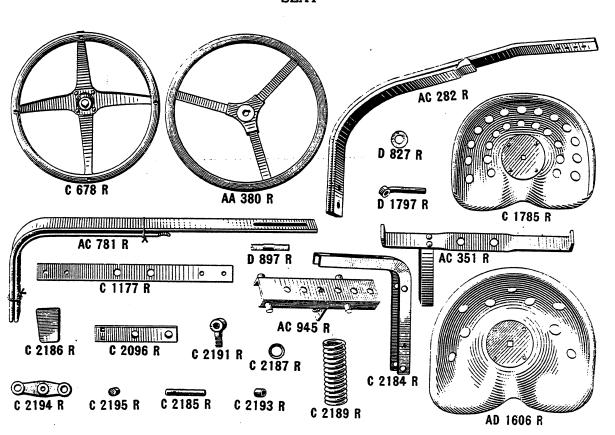

SWING SEAT

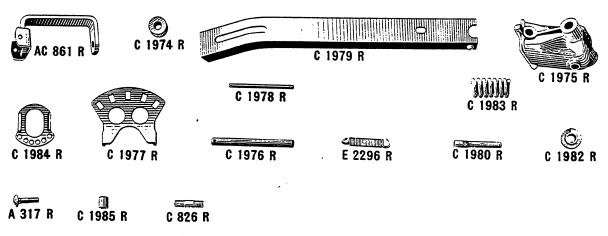


Plate No. 22

PLATFORM Q_j C 945 R C 1177 R 0 0 0 0 AC 826 R RIGHT C 2042 R LEFT C 2043 R C 2047 R RIGHT C 947 R LEFT C 1032 R C 943 R 2177 R C 946 R C 2178 R C 2271 R C 2176 R C 2046 R © D 316 R © 629 R C 1827 R RIGHT C 2040 R LEFT C 2041 R C 2045 R

Plate No. 23


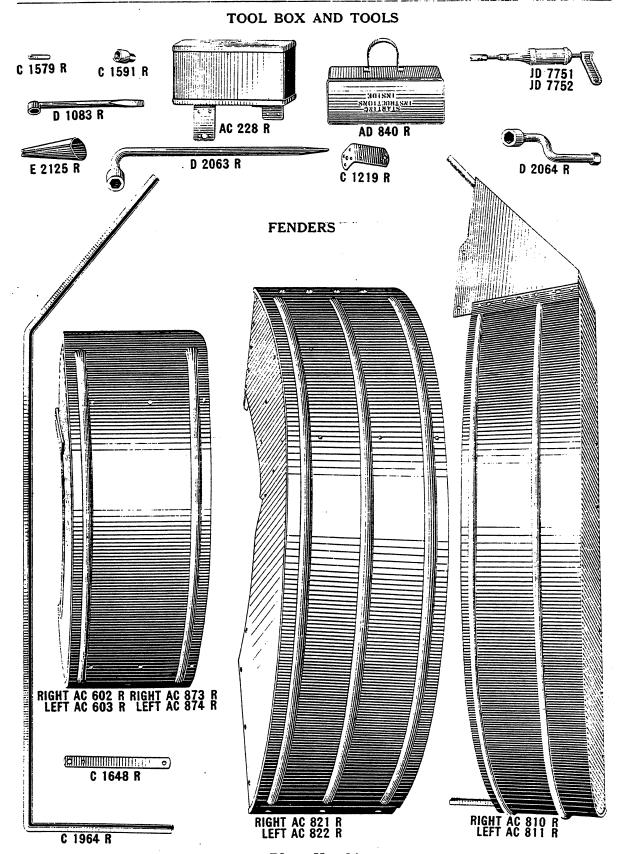


Plate No. 24

FENDERS—Continued C 1252 R C 2086 R C 2087 R C 2273 R C 2272 R C 1052 R C 1831 R C 1053 R **Т**инипинания политина на применения на применения на применения на применения на применения на применения на при C 2036 R RIGHT C 1966 R LEFT C 1965 R C 2051 R C 2037 R C 2050 R C 1967 R C 1698 R C 1699 R **©** 1705 R AC 850 R AC 802 R AC 738 R C 1054 R AC 827 R RIGHT AC 374 R LEFT AC 375 R AC 242 R AC 243 R AC 828 R

Plate No. 25

MAGNETO, SPARK PLUGS AND CABLES

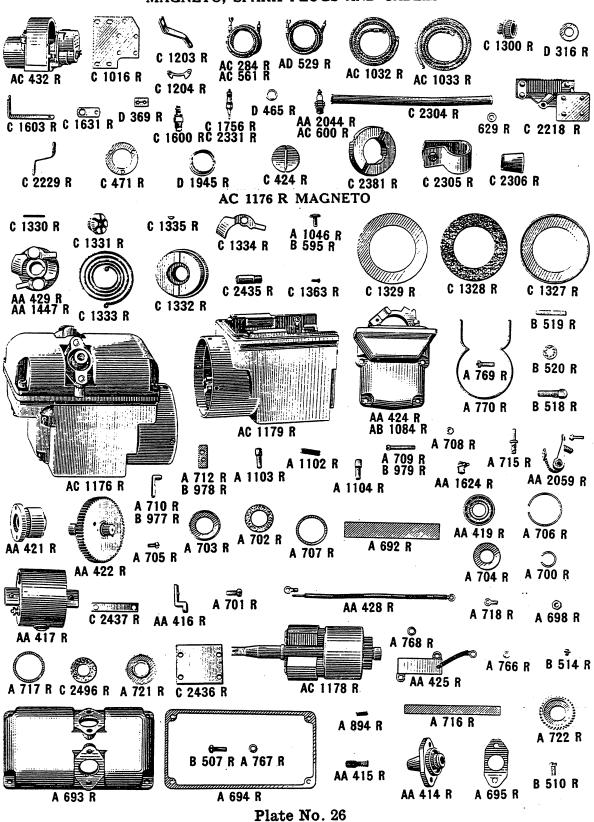

AC 432 R MAGNETO (JOHN DEERE)

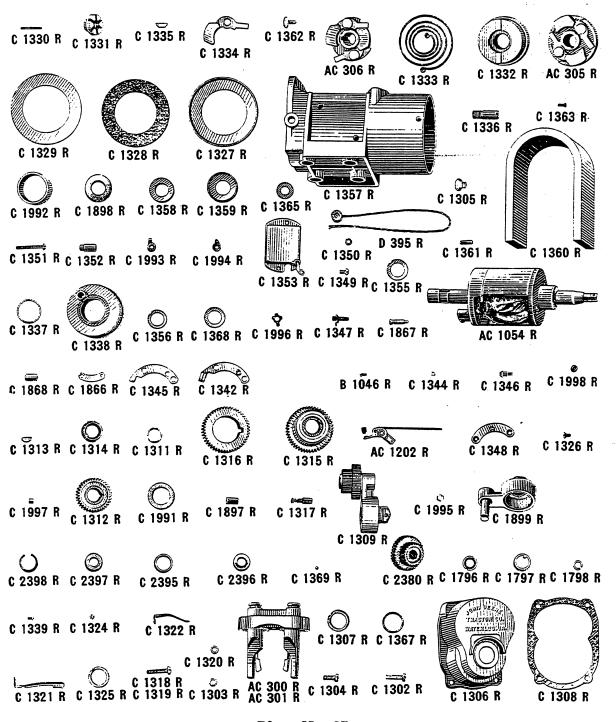


Plate No. 27

ORCHARD TRACTORS **CARBURETORS** C 1136 R AC 857 R AC 1172 R C 1117 R C 1121 R C 1152 R C 1125 R C 1123 R C 1120 R 👺 C 1130 R C 1127 R C 1128 R C 1150 R C 1118 R © C 1149 R C 1148 R C 1146 R C 1145 R C 1154 R C 1137 R C 1144 R C 1153 R C 1139 R C 1138 R C 1140 R C 1841 R 321 R C 1850 R C 1846 R C 1869 R C 1848 R C 1574 R C 1856 R C 1857 R C 1864 R C 1863 R C 1862 R C 1842 R C 1854 R C 1849 R C 1852 R C 1855 R C 1858 R C 1859 R C 1853 R Guuu 25 J S 2183 A X 2461 S 2151 C D 392 R T S 98 X 2771 X 2960 X 1178 B P 791 X 2653 X 2457 P 951 DLT 7 A X 2462 S 2146 S 2147 15-285 S 2041 AB 1843 R S 1096 S 2424 ລ S 245 S 1506 SI-10 P 52 P 948 S 2154

S 2185 S 2472 S 2471 S 2150 S 2369
Plate No. 28

15-57

S 93 B

S 211 G X 2487

X 2647


X 2648

S 1393


M

25 V

P 850

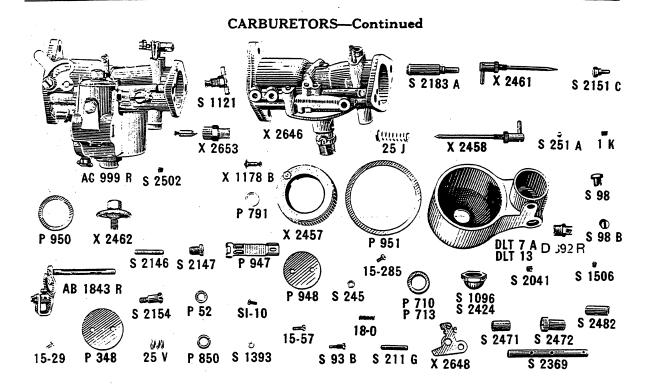

AUXILIARY AIR CLEANER AND STACK

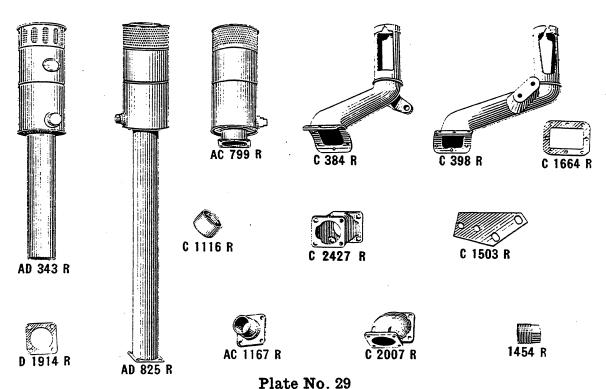

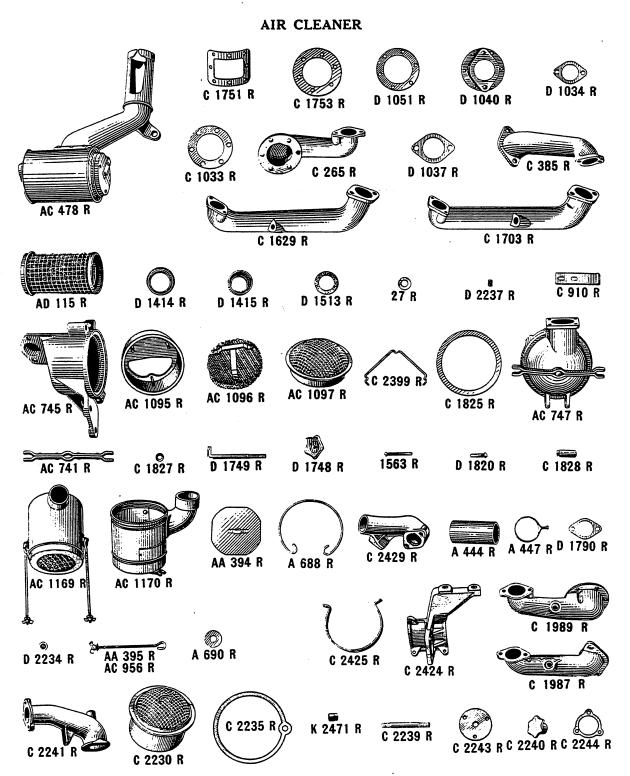


Plate No. 30

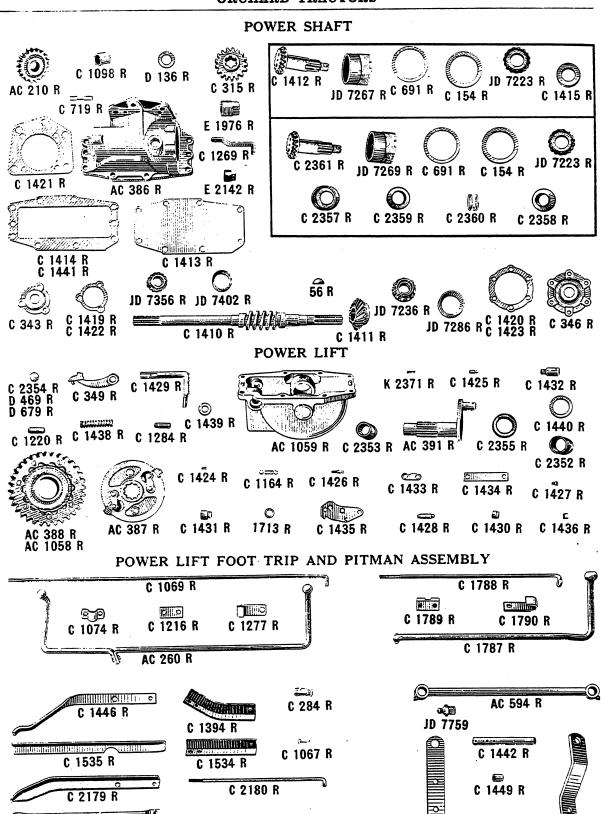


Plate No. 31

lo

C 1495 R

C 1497 R

C 1496 R

C 1444 R

C 1536 R C 1576 R C 2181 R

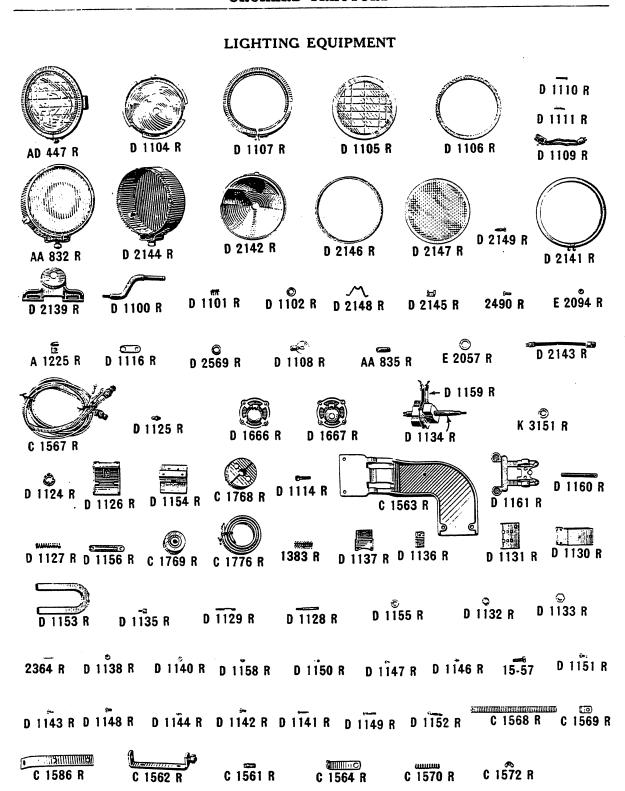


Plate No. 32

90 NUMERICAL INDEX FOR JOHN DEERE MODELS GENERAL PURPOSE, WIDE TREAD AND ORCHARD TRACTORS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Pag No.
14 R 27 R	5 13	1674 R 1682 R	45 44	A692 R	32 32	AB		AC375 R	29 40
20 10	15 28	1000	45 46	A694 R	32 32	AR1084 R	32	AC387 R	
56 R	38	1683 R		A698 R	32	AB1084 R AB1843 R	34	AC388 R AC391 R	41
294 R	3	1684 R	46	A700 R	32 32			MC35/ K	41 18
321 R		1004 K	45 46	A702 R A703 R	32 32	• • • • • • • • • • • • • • • • • • • •		AC398 R	
	33 34 36	1685 R	44 46	A704 R	32	AC		AC401 R	21 25
				A705 R	32			AC408 R AC409 R AC410 R	41
372 R	3	1686 R	8 28	A707 R A708 R A709 R	32 32	AC7 R	22	AC416 R	•
	9 14	1706 R	22	A709 R	32 32	AC49 RAC71 R	17	AC427 R AC428 R	25
_	28 29	1713 R	41 27	A710 R	32	AC72 R		AC429 R AC431 R	25 12
84 R	25 17	1721 R	55	A712 R	32 32	AC73 R	16	AC432 R	29
304 R		1722 R	55 55	A716 R	32 32	AC80 RAC81 R	7	AC434 R AC435 R	11 14
383 R	42 6	1726 R	55 55	A718 R	32	AC102 R	12	AC436 R AC437 R	18
	11 16	1729 R	55	A721 R A722 R	32 32	AC116 R	12 23	AC438 R	8
452 R	18 11	1730 R	55	A766 R	32 32	AC125 R	3 16	AC439 R	23
454 R		1732 R	55	A768 R	33	AC149 R	17	AC445 R	29
476 R	15	1737 R		A769 R	33 33	AC150 R AC161 R	17 3	AC446 R AC451 R	16
483 R 495 R	8 52	1738 R	55	A777 R	23 35	AC162 R	3		
503 R	53	1742 R	55	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	37	AC171 R	25	AC454 R	18
	E2	1743 R		A894 R	33 32	AC174 R	33	AC457 R AC458 R AC478 R	17
506 R	52	1771 R	47	A963 R A1025 R	32	AC176 R	16 13		
	53	1775 R	47	A1046 R	54 33	AC181 R AC183 R	7 12	AC491 R AC503 R	13
512 R	52	1786 R		A1102 R	33	AC185 R	23	AC504 R AC513 R	19 23
513 R	53 51	1789 R 1791 R	47	A1104 R	33 33	AC188 R	. 3	AC520 R	:
_	52 53	1882 R 1893 R	50	A1225 R	42 35	AC194 R	3 22	AC559 R AC561 R	. 19 29
514 R 516 R	52 52	1903 R			37	AC201 R	8	AC564 R AC566 R	7
518 R		1927 R	50	A2053 R	13	AC205 R	12 22	ACSOT R	5
563 R	47	1929 R 1930 R	50			AC210 R AC212 R	40 18	AC570 R AC573 R	19
608 R	50 49	1935 R				AC213 R	18	AC582 R AC583 R	27
613 R	50	1940 R	50	AA		AC226 R	9	AC591 R	21
	49	1946 R	50 50			AC228 R AC229 R	39	AC592 R AC594 R	21
614 R	48 49	1950 R	50	AA335 R	12 10	AC237 R		AC600 R AC602 R	
615 R	50	1959 R	50 50	AA380 R AA394 R	25	AC242 R	28	AC603 R	29
	50	1959 R 1970 R 2188 R 2205 R	55 13	AA395 R	38	AC243 R AC249 R AC251 R	9 5	AC610 R AC611 R AC612 R	34
619 R	29 50	2215 R	55	AA399 R	21 33	AC255 R	3	AC612 R	10
622 R		2226 R 2235 R	9 47	AA415 R	33	AC256 R AC257 R	5	AC619 R AC620 R	:
623 R		1 7770 K	41	AA417 R	33	AC260 R AC272 R	40	AC623 R AC625 R	. 9
623 I C	49 50	2313 R	17	AA419 R	33 33		17	AC628 R AC631 R	23
625 R	48	2326 R	51 51	AA422 R	33 33	AC274 R AC276 R		AC636 R	23 21
628 R	49	2364 R	42	AA425 R	33	AC282 R	8 27	AC640 R	17
636 R 666 R	45 46	2490 R	42	AA428 R AA429 R	33 33	AC283 R AC284 R	8 29	AC644 R AC645 R	. 5
cco P				AA499 R AA517 R	12 12	AC286 R	27	AC646 R AC649 R	21
669 R	45	A		AA518 R	12	AC300 R	30	AC651 R AC652 R	24
cmo D	46 47	A259 R	11	AA519 R AA663 R	12 22	AC305 R AC306 R	30 30	AC653 R	
670 R	45	A274 R	12 25	AA832 R	23 42	AC335 R	20	AC657 R	38
D	46 47	A317 R	28 •48	AA835 R	42	AC344 RAC346 R	8 23	AC666 R	2
671 R	45	A360 R	25	AA1447 R	33	AC350 R AC351 R	18	AC667 R AC669 R	
672 R	46 44	A394 R	38	AA2059 R AA2064 R		AC352 R AC371 R	25	AC684 R . AC694 R	15
	46 47	A447 R	38	AA2064 R	12	AC371 R	23 29	AC699 R AC723 R	16
673 R	47	A690 R	38	.	• • • • • •	1		AC723 R	14

NUMERICAL INDEX FOR JOHN DEERE MODELS GENERAL PURPOSE, 91 WIDE TREAD AND ORCHARD TRACTORS

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Pag No.
C725 R C730 R C731 R	36 14 12 25	AC949 R AC950 R AC951 R AC953 R AC954 R.	18 18 18 13	AC1156 R AC1157 R AC1166 R	4 6 4 6 12	B977 R B978 R B979 R B1046 R	33 33 33 30	C297 R	56 7 56 56 23
C734 R C735 R C736 R C737 R	25 25 25 25 25	AC955 R	38 39 38	AC1167 R AC1168 R AC1169 R	39 38 38	С		C303 R	56 56 7
C738 R C741 R C745 R	29 38 38	AC958 R AC959 R AC963 R	13 9 12	AC1170 R AC1172 R AC1173R(X2771)	38 33 36	C9 R	16 18 19	C306 R	56 13 8
C747 R C752 R C753 R	38 19 19	AC964 R AC965 R AC970 R AC971 R	12 12 7 7	AC1176 R AC1178 R AC1179 R	38 29 33 33	C24 R C27 R C32 R	17 56 56	C310 R	15 15 8 15
C760 R C762 R C763 R C764 R	14 10 4 4	AC977 R AC979 R AC988 R	15 8 12 37	AC1187 R AC1188 R AC1194 R AC1196 R	4 5 5 5	C35 R. C37 R. C68 R. C74 R.	3 7 56 16	C315 R	26 26 56
C765 R C768 R C769 R C770 R	7 12 12 12	AC1019 R	23 26 3	AC1197 R AC1198 R AC1202 R	5 5	C84 R	56 17 17 17	C325 R	26 26 22
C771 R C772 R C774 R	13 13 23	AC1032 R. AC1033 R. AC1037 R. AC1054 R.	29			C112 R	26 16 56	C328 R	. 25
C775 R C776 R C777 R	14	AC1058 R AC1059 R AC1062 R	41 41 24	AD	12	C127 R	56 56 56	C334 R	56 56 25 25
C779 R	27 14	AC1065 R AC1067 R AC1068 R	26	AD41 R	12 12 13	C138 R	3 17 16 56 56	C340 R	18 56 56
C789 R C790 R C799 R	18 27 39	AC1070 R AC1079 R AC1080 R AC1088 R	12 12 24	AD102 R	5 38	C150 R	5 40 56	C343 R C344 R C345 R	56 56
.C802 R C803 R .C810 R	29 26 29	AC1093 R AC1095 R AC1096 R AC1097 R	38 38 38	AD290 R	39	C168 R	11	C346 R	56
C811 R C817 R C818 R C821 R	19 19	AC1100 R AC1103 R AC1106 R AC1107 R	20 19	AD452 RAD529 RAD680 RAD709 RAD819 R	30 12 12	C172 R	16	C352 R	56 56
C822 R C826 R C827 R	28 29 29	AC1108 R AC1109 R	19 13 19	AD825 R AD829 R AD833 R	39 7 11	C207 R	56 56 56	C360 R C361 R C362 R	19
C830 R C847 R C850 R	24 29 8	AC1111 R AC1112 R AC1113 R AC1114 R	4	AD840 R AD883 R AD894 R AD918 R	7	C226 R	17 26 23	C363 R C364 R C365 R C366 R	19 50
.C854 R	19 33	AC1115 R AC1116 R AC1117 R AC1118 R.	4 4	AD922 R AD1203 R AD1381 R	13 7 23	C241 R	56 56	C367 R	21
C861 R	28 29 29	AC1120 R AC1123 R AC1124 R	4 4	AD1760 R AD1771 R	28 23 55	C246 R C247 R C248 R C250 R	9	C373 R	56 56
C886 R. C887 R. C888 R. C895 R.	5	AC1125 R AC1126 R AC1127 R AC1128 R	4	AD1772 R AD1782 R AD1872 R	15	C251 R	56	C381 R C383 R C384 R C385 R	3: 3:
C896 R C901 R C909 R	5 13	AC1129 R AC1131 R AC1132 R	26 4 4			C257 R	13 13 13	C387 R	. 5
C910 R C912 R C918 R	18 21	AC1133 R AC1134 R AC1135 R	4	B	24	C261 R	22 38	C391 R	5
AC922 R AC923 R AC932 R AC933 R AC934 R	22 12 15	AC1136 R AC1137 R AC1138 R AC1139 R	4	B449 R (DLT-13 B450 R (S2424). B457 R (P710)	37 35 37	C271 R C272 R C275 R C276 R C284 R	22 26 26	C401 R	. 1
AC944 R	10	AC1139 R AC1140 R AC1147 R AC1152 R AC1153 R	6 5 11 4	B507 R B510 R	37 33 33	C292 R	41 56 56	C420 R C422 R C423 R C424 R	1 2
C946 R C947 R C948 R	18	AC1154 R	6	B514 R	33 33 33	C294 R	56 56	C434 R	1 1

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C457 R	17 18	C834 R	44 26	C1089 R C1090 R	14 14	C1202 R	8 30	C1331 R	
C470 R	19	C840 R	26					C1332 R	33 31
C471 R	30 19	C882 R	45 9	C1091 R	9 47	C1204 R	30 15	C1333 R	33
C485 R	9	C902 R	8	C1096 R	44 17	C1209 R	8 27	C1334 R	33 31
C490 R	22 17	C909 R	26 38	C1102 R	40 26	C1211 R	27	C1335 R	33
C493 R	19	C912 R	9	C1104 R	54	C1213 R	27	CIDDO IC.	33
C494 R	22			C1105 R	49	C1215 R	26 40	C1336 R	31
C496 R	17	C916 R	9 26	C1107 R	19 23	C1217 R	15 39	C1337 R	31 31
C528 R	45 45	C919 R C924 R	23 9	C1109 R	26 11	C1220 R	26	C1339 R C1342 R	31
C530 R	47	C925 R	š	B :		1	41	j	31
C535 R	54 54	C927 R	9	C1116 R	39 34	C1224 R	9 22	C1344 R	31 31
C542 R	54	C928 R	13 16	C1118 R	36 34	C1225 R	7 22	C1346 R	31
C543 R	54	C934 R	26	C1119 R	34	C1229 R	22	C1347 R	31
C545 R	16 17	C941 R	13	C1120 R	36 34	C1231 R	26	C1349 R	31
C559 R	19	C943 R C945 R	28 28		36	C1235 R C1238 R	21 24	C1350 R C1351 R	31 31
C565 R	19	C946 R	28	C1121 R	34	C1242 R	26	C1352 R	31
C581 R	23 17	C947 R	28 8	C1122 R	36 34	C1244 R	3	C1353 R	31
C594 R C595 R	18 19	C954 R	9	C1123 R	34 34	C1245 R	3 17	C1355 R	31 31
	22	C955 R	9	C1126 R	36	1	40	C1357 R	31
C596 R	19	C957 R	9	C1126 K	34 36	C1248 R	22 22	C1358 R C1359 R	31 31
C598 R	3	C960 R	3	C1127 R	34	C1251 R	19	C1360 R	31
C603 R	16	C961 R C972 R	3 12	C1128 R	36 34	C1252 R	29 21	C1361 R C1362 R	31
C604 R	11	C975 R	7	C1129 R	34	C1269 R	40		31
C609 R	8 16	C976 R	45 46	C1130 R	34 36	C1270 R	23 23	C1363 R	31 33
C616 R	13 13	C977 R	26	C1131 R	34 36	C1272 R	44	C1364 R	8
i	3	C978 R C979 R	26	C****		1	46	C1365 R	31
C618 R	17	C980 R	26 47	C1132 R	34 36	C1274 R	56 23	C1367 R C1368 R	31 31
C620 R	19 7	C981 R C985 R	51 53	C1133 R	34 34	C1276 R C1277 R	24 40	C1369 R C1371 R	31 21
C629 R	12	C986 R		C1135 R	36 34	C1280 R	7		
C636 R	22	C989 R	26	C1136 R	34	C1284 R	41	C1372 R C1373 R	22 26
C643 R	16 22	C994 R	9 8		36	C1285 R C1287 R	54 22	C1375 R	18 22
C656 R C657 R C658 R	17 17	C1001 R	3	C1137 R	34 36	C1288 R	25	C1381 R	25
C660 R	17	C1002 R	6	C1138 R	34 36	C1294 R C1295 R	21	C1382 R	25
C663 R	7	C1004 R	13	C1139 R	34	C1300 R	21 30	C1385 R C1387 R	51 54
C666 R	17 16	C1005 R	6	C1140 R	36 34	C1302 R	30 30	C1388 R C1390 R	25 25
C667 R	18	C1009 R	6	C1144 R	34 36	C1304 R	30	C1391 R	25
C673 R	3 11	C1015 R	5	Citat D		C1305 R C1306 R	30	C1392 R C1394 R	25
C677 R	24	C1018 R	30 9	C1145 R	34 36	C1307 R	30 30	C1399 R	41 54
C678 R	26 50	C1019 R	3	C1146 R	34 36	C1308 R	30	C1404 R	5
C686 R	17	C1020 R	26	C1148 R	34 36	C1309 R	30 30	C1405 R	5 40
C691 R	40	C1021 R	26	C1149 R	34	C1312 R	30	C1411 R	40
C692 R	18 3	C1023 R	13 26	C1150 R	36 34	C1313 R	30 30	C1412 R	40 40
C700 R	22	C1027 R	21	C1151 R	34	C1315 R	30	C1414 R	40
C701 R	22 16	C1028 R	22 22	C1152 R	34 36	C1316 R	30	C1415 R C1416 R	40 40
C718 R	18	C1030 R	21	C1153 R	34	C1317 R	30 30	C1419 R	40
C719 R	18	C1031 R C1032 R	19 28	C1154 R	34 34	C1319 R	31	C1420 R	40
C722 R	40 24	C1033 R	38	C1164 R	41	C1320 R	31	C1421 R	40 40
C732 R	16	C1038 R	3 29	C1174 R	6 27	C1321 R	55 31	C1423 R	40 41
C740 R	23 20	C1053 R C1054 R	29	!	28 7	C1322 R	31 31	C1425 R	41
C759 R	7	i	29	C1181 R	8	C1325 R	31	C1426 R	41
C760 R	54	C1055 R	22 22	C1194 R	15	C1326 R	31	C1427 R	41 41
C783 R	3 7	C1059 R	26 17	C1195 R	8	C1327 R	31 33	C1429 R C1430 R	41 41
C791 R	18,	C1067 R	40	C1197 R	8	C1328 R	31	1	
C806 R	45 46		41	C1198 R	15	C1329 R	33 31	C1431 R	41 41
	3 ∦	C1069 R	40	C1199 R	15		33	C1433 R	41
C826 R	28	C1074 R	40	C1200 R	54 53	C1330 R	31	C1434 R C1435 R	41

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Pag No.
1436 R	41	C1576 R	41	C1741 R	57	C1878 R	57	C2024 R	26
1438 R 1439 R	42 42	C1578 R	47 39	C1743 R	3	C1880 R	57	C2025 R	26
1440 R 1441 R	42 42	C1580 R	51	C1748 R	44 46	C1882 R	57	C2036 R	29 29
		C1586 R	42	C1749 R	10	l' :		i i	
1442 R 1444 R	41 40	C1591 R	39 53	C1751 R		C1894 R	31	C2040 R	28 28
1446 R	41 41	C1593 R	20	C1753 D	38	C1898 R	32 32	C2042 R	28 28
449 R	41	C1595 R	10	C1756 R	30 21	C1899 R C1901 R	57	C2043 R	28
1453 R	19	C1596 R	56 20	C1764 R	5	C1902 R	20	C2046 R	28
1454 R 1455 R	19 25	C1598 R	20 30	C1768 R	43	C1908 R	6	C2047 R C2050 R	28
1456 R	25	1		C1769 R C1776 R	43	C1909 R C1910 R	57 14	C2051 D	29
458 R	49 12	C1603 R	30 6	C1778 R	13	C1911 R	14	C2053 R	8
1469 R	15	C1605 R	6	1		C1912 R	22 20	C2055 R	8 10
1471 R	19	C1610 R	27	C1785 R	27 41	C1916 R	20	C2056 R	8
1472 R	19 19	C1611 R	27	C1788 R	41	C1920 R C1921 R	20 20	C2058 R	30 8
1474 R	19	C1612 R	27	C1789 R C1790 R	41	1		C2059 R	8
475 R	19	C1613 R	27 27	C1791 R.		C1922 R	5 1	C2060 R	8
476 R	18 20	C1617 R	27		57	C1929 R C1934 R	13 13	C2061 R C2062 R	8 10
478 K	20	C1618 R.	27	C1793 R	3 5	C1935 R	13	C2063 R	10
479 R	20	C1619 R. C1620 R.	27 17	C1795 R	57 31	1	13	C2064 R	8
483 R	14 14	C1622 R	17 17			C1936 R	14 15	C2067 R	. 8 8
490 R	11			C1797 R	31 31	C1942 R C1944 R C1945 R C1946 R		C2069 R	8
493 R 494 R	3 10	C1629 R	38 30	11 (1700 D) :	13	C1946 R	15	C2070 R	8 8
	20	C1635 R	42	C1808 R C1812 R	14	C1947 R.	15		54
495 R	41	C1637 R	26 26	C1813 R	14	C1948 R	22	C2072 R	10
496 R	41	C1639 R	26	CIRIAR .	14	C1953 R C1955 R	22 3	C2086 R	29 29
498 R	41	C1640 R	20	C1815 R	16 11			C2088 R	26
503 R	39 18	C1641 R. C1642 R.	22 22	C1818 R C1821 R	57	C1964 R	29 29	C2089 R	14
10 R	20	C1643 R	22	C1822 R	57		29 29	C2090 R	22 22
13 R	48	C1645 R	56	C1823 R	6 38	C1967 R C1974 R	28	C2092 R. C2093 R.	22
514 R 515 R	21 21	C1646 R	21 47	C1827 R	28 38	C1975 R	28	!	22
516 R	21	C1648 R	29 56	C1828 R	10	C1976 R		C2094 R	22 22
517 R	48	j.		C1829 R	38 10		28	C2096 R	28
19 R 20 R	17 17	C1664 R	39 10	C1831 R	29	C1979 R	28	C2109 R C2110 R	6 6
21 R	25 13	C1667 R	56 23	C1833 R	10	C1980 R	28		28
٠ ا		C1672 R	23 24	C1840 R	21 36	C1981 R. C1982 R.	50 28	C2111 R	17
25 R	15 15	C1673 R	24	C1842 R	36	C1983 R	28 28	C2130 R	40 8
527 R	15	C1675 R	23	C1843 R	36			C2131 R	18
528 R 529 R	15 15	C1676 R	56 10	C1844 R	36 36	C1985 R	28 38	C2132 R	18
530 R	15	C1679 R	10	C1846 R	36	C1988 R	10 38	C2133 R C2134 R	18 18
533 R	18	C1680 R	21	C1847 R	36	C1989 R	38 32	C2135 R	57
534 R 535 R	41	C1682 R C1697 R	27 20	C1848 R	36 36	C1992 R	32	C2136 R C2137 R	20 20
36 R	41	C1698 R	29 29	C1850 R	36	C1993 R C1994 R	32 32	C2138 P	22
37 R	22			C1852 R	36 36	C1333 K	34	C2142 R	57
38 K	20 45	C1700 R	56 56	C1854 R	36	C1996 R	32	C2147 R. C2148 R.	21 21
47 R	20 21	C1703 R C1705 R	38	C1855 R	36	C1997 R	32	C2149 R	18
1		C1706 R	10 10	C1856 R	36 36	C1998 R	10 32	C2150 R	57
49 R	21 21	C1708 R	10	C1858 R	.36	C2000 R	7 18	C2151 R	57 15
51 R	21 20	C1709 R	6	C1859 R	36	C2002 R	57	C2168 R	57 23
56 R	21	C1718 R	20 20	C1861 R	36 36	C2004 R	17	C2170 R	
61 R	42	C1721 R	5	C1863 R C1864 R	36 37	C2005 R	23 23	C2172 R C2173 R	11 11
62 R 63 R	42	C1723 R	6	l i	1	C2007 R	39	C2174 R	11
64 R	43 43	C1732 R	24 57	C1865 R	14 31	C2010 R	17	C2175 R	11 28
67 R	42	C1734 R	57 16	C1867 R	31	C2011 R	27	C2177 R	28
68 R	42	1		C1868 R	31 37	C2013 R	27 51	C2178 R	28
69 R 70 R	42 43	C1736 R	16 57	C1871 R	44	C2015 R	49 49	C2179 R	41 41
71 R	43 43	C1738 R	16	C1873 R	57			C2181 R	41
1	1	C1739 R	16 57	C1875 R	26 26	C2017 R	10 57	C2182 R	23
573 R	13 34			C1877 R	26	C2021 R C2022 R	24 23	C2183 R	28 28
	36	1	2		H	C2023 R	26	C2185 R	28

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
C2187 R C2188 R C2189 R C2190 R C2191 R	28 28 28	C2295 R C2296 R C2299 R C2300 R C2304 R	15 6 6	C2506 R (X2648).		D414 R	7 48 9 12	D917 R. D918 R. D938 R. D942 R. D993 R.	16 16 21 45 17
C2192 R C2193 R C2194 R C2195 R C2199 R	28 28 28 21	C2305 R C2306 R C2307 R C2308 R C2309 R	30 28 24 24	D D19 R D29 R	11	D430 R D432 R D436 R D443 R D449 R	54 54 54 54 7	D1034 R D1037 R D1040 R D1051 R D1078 R	25 39 39 39 39 21
C2200 R C2201 R C2202 R C2203 R C2204 R	8 8 8	C2310 R C2312 R C2313 R C2314 R C2315 R	26 26 26	D80 R. D82 R. D87 R. D92 R. D96 R.	13 13 10 57 23 25	D451 R D453 R D456 R	7 10 11 11 12 11	D1079 R D1080 R D1082 R D1083 R D1088 R	54 3 57 39 45
C2206 R	15 8 7 8 9	C2317 R C2318 R C2319 R C2320 R	26 26 26 26	D100 R D126 R D136 R	16 13 14 17 18 40	D463 R D465 R D466 R D468 R D469 R	11 30 45 13	D1100 R D1101 R D1102 R D1104 R D1105 R	42
C2211 R C2212 R C2213 R C2214 R C2215 R	9 9 46	C2324 R C2325 R C2326 R C2327 R	27 27 27 27 27	D141 R. D156 R. D157 R.	16 23 27 10	D473 R	14 44 44 47 47	D1106 R. D1107 R. D1108 R. D1109 R. D1110 R.	42 42 42 42 42
C2216 R C2218 R C2219 R C2220 R C2221 R	30 9 14 14	C2329 R C2331 R C2347 R C2348 R	25 30 42 42 57	D162 R	11 3 20 16 11	D478 R	54 54 6 14 17	D1111 R D1114 R D1116 R D1124 R. D1125 R	42 43 42 43 43
C2222 R C2223 R C2226 R C2227 R C2228 R	14 10 10 10	C2352 R C2353 R C2354 R C2355 R	42 42 42 42 40	D180 R D186 R D202 R D233 R	11 3 5 16 21	D544 R	48 53 48 49 16	D1126 R D1127 R D1128 R D1129 R D1130 R	43 43
C2229 R	30 39 57	C2358 R C2359 R C2360 R C2361 R	40 40 40 40	D279 R D288 R D297 R	16 13 9 15	D563 R. D564 R. D572 R. D574 R. D575 R	48 14 15 21 21	D1131 R D1132 R D1133 R D1134 R D1135 R	43 43 43 43 43
C2239 R C2240 R C2241 R C2242 R	39 39 39	C2367 R C2370 R C2371 R C2372 R C2378 R	13 10	D305 R D310 R D316 R	14 11 28 30	D576 R D577 R D578 R D579 R	21 21 21 21 21 24	D1136 R D1137 R D1138 R D1140 R D1141 R	43 43 43
C2244 R	15 39 10	C2380 R C2381 R C2395 R C2396 R	16 32 30 32 32	D328 R D329 R	44 44 45 46	D584 R	24 47 48 49 50	D1142 R D1143 R D1144 R D1146 R D1147 R	43 43 43 51 43 43
C2257 R C2266 R C2267 R	14 11 11 11	C2397 R C2398 R C2399 R C2405 R C2406 R	32 39 39 39	D333 R D334 R D336 R D339 R D342 R	54 55 5	D597 R D600 R D601 R D603 R D622 R	50 21 21 55 47	D1148 R D1149 R D1150 R D1151 R D1152 R	43 43
C2269 R C2270 R C2271 R C2272 R C2273 R C2276 R	11 28 29 29	C2414 R C2415 R C2421 R C2424 R C2425 R	20 11 39 31	D355 R	17 27 16 16 18	D625 R	3 6 9 3 23 24	D1153 R. D1154 R. D1155 R. D1156 R. D1158 R.	43 43 43 43 43
C2277 R C2278 R C2279 R C2280 R	17 10 10	C2429 R C2429 R C2430 R C2431 R C2435 R	39 20	D363 R D369 R D377 R D378 R	13 14 57 30 16 15	D651 R	16 18 15 7 17 42	D1159 R D1160 R D1161 R D1164 R D1166 R	43 42 43 7 43
C2281 R	10 26 10 10	C2437 R C2496 R C2500 R (X2647). C2501 R (X2653).	33 33 35 35 35	D379 R D380 R D385 R D392 R	11 14 11 16 12 34	D684 R D743 R D789 R D793 R D794 R	15 27 17 11 11	D1167 R D1250 R D1414 R D1415 R D1416 R	43 23 39 39 55
C2285 R C2286 R C2290 R C2291 R C2292 R	10 10 14	C2502 R (S2369). C2503 R (X2646). C2504 R (S2471).	35 37 35 38 35 37	D393 R	37 10 32 15	D815 R D818 R D825 R	12 57 12 15 27	D1440 R. D1441 R. D1442 D. D1443 R. D1513 R.	7 7 7 7 39
C2293 R C2294 R	14	C2505 R (S2472).	35 37	D401 R D403 R	13 11 9 15 27 30	D826 R D827 R D897 R D901 R	15	D1661 R D1666 R D1667 R	54 43 43

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Pa N
D1701 R D1721 R	23 6	D2569 R	42	JD7358 R	7	45W (S2502)	35	S93 B	3
	-	D2781 R	53		9 16	46W (S1096)	37 35	S98	3
1748 R 1749 R	39 39	D2782 R. D2783 R.	53 53		27	1	37	T .	3
1767 R	27	D2926 R	53 54	JD7374 R JD7401 R	20 9	57W (1-K)	34 37	S98B	3
1771 R	50 51	• • • • • • • • • • • • • • • • • • • •	· · • • • · ·	JD7402 R	16	63W (S1393)	35 37	S211G	3
1790 R	39	_		3D/402 K	27	64W (P713)	34		
1795 R	48	E		JD7494 R	40 16		37	S245	3
1797 R	28 39	E1976 R	3	•		65W (25-J)	34	S251A	3
1828 R	9	21310 K	12	JD7544 R JD7594 R	16 16	67W (S211G)	37 3 5	S763	333
1837 R	13	E2027 R	42 42	JD7675 R	18 18	68W (25-V)	37 34		3
1856 R 1865 R	15 6	E2057 R	45	JD7691 R JD7751	39	1	37	S1096	3
1881 R	23		10 42	JD7752	39	69W (X2457)	35 38	S1121	3
1887 R 1888 R	15 23	E2062 R E2063 R	51 51	JD7759	3	70W (15-285)			333
1898 R	27				10 16				
1914 R	30	E2094 R E2125 R	42 39		25 27	71W (15-57)	34 37	S1393	3
1919 R 1920 R	57 57	E2142 R	20		42	72W (P52)	34	S1506	3
1922 R	7	E2149 R	40 7	JD7792	16 23	73W (P791)	37 35	S2041	3
1923 R	7		12 13		27		37 35	!	3
1924 R	8	E2150 R	7			74W (P850)	37	S2146	3
1925 R 1935 R 1945 R	8 12	ĺ	12 13			75W (P947)	35 37	S2147	3
1945 R	30	F2152 D		K		many (De :=)			
1949 R	10	E2152 R E2207 R	45 11	17		76W (P948)	35 37	S2150 S2151-C	3
1950 R	10 10	E2244 R E2290 R	9	K2049 R	11	77W (P950)	35	1	3
1952 R	10	E2296 R	45 28	K2069 R K2172 R	9 10	78W (P951)	37 35	S2154	3
1957 R	10	!		K2198 R. K2371 R.	6	79W (S98)	37 35	S2183A	3
1987 R		JD		l .	42	1	37	S2185	3
1989 R	57 12			K2471 R K2525 R		80W (S98B)	35 37	S2369	3
991 R	12	JD1202 R	20	R2323 R	6 12				3
1993 R	12 12	JD1208 R	24 20	K2573 R	17 23	81W (S245)	35 37	S2424	3
1004 D	10	JD7205 R	27 17	K2594 R	10	83W (S1506)	35 37	S2471	3
1995 R	11			K3151 R	10 42	85W (S2041)	35	S2472	3
1997 R	12	JD7216 R	24 24			90W (S2146)	37 35		3
2002 R	12	JD7223 R	40	M			37	S2482	3
2004 R	12	JD7224 R	24 17	M21 R	21	91W (S2147)	35 37	S2502	3
2009 R 2031 R	3 10	JD7226 R	24		49	92W (S2150)	35	1	3
	16		25	M23 R M25 R	47	94W (S2154):	35	SI-10	3 3
2057 R 2063 R	10 39	JD7236 R JD7242 R	40 20			95W (S2183A)	37 35	SI-18 (15-29)	3
064 R	39	!	25	• • • • • • • • • • • • • • • • • • • •			37	X1178B	3
2065 R	11	JD7246 R	24 24			96W (S2185) 97W (DLT7-A)	35 34		3
2081 R 2101 R	11	'JD7250 R	7	Schebler Carl		,	37	X2457	3
3102 K	14	3D1230 R	9	tor Part	oure-	321 R AB1843 R	34	X2458	3
2119 R	10	!	15 27			l i	34 37	X2461	3 3
120 K	10	JD7251 R	15	Part	Page	AC610 R	34	ł	3
		JD7253 R	27	No.	No.	AC999 R DLT7-A	37 34	X2462	3 3
135 K	42	JD7260 R JD7262 H	17 24				37	X2487	3
141 R	42	JD7266 R	24	1-K	34 37	DLT-13	34	X2646	3
142 R 143 R	42 42	JD7267 R	40 40	4W (X1178B)	35	P52	37 34	X2647	3
144 R	42			10W (SI-10)	38	1	37	X2648	3
i	42	JD7270 R JD7275 R	25 17		38	P348	34 37	X2653	3
146 R 147 R	42 42	JD7286 R	40 20	15–29	34 37	P710	34 37	X2771	3
148 R	42		25	15-57	34	P713	34	7	
184 R	42 20	JD7295 R	20		37		37	X2960	
217 R	24	JD7297 R	25	15-285	42 34	P791			
218 R	24	JD7353 R	25 20		37	P850	37 35		
219 R. 234 R.	47 39	JD7354 R	9 15	17W (S93B)	35	P947	37		
237 R	39	JD7356 R	9	18-O	37 34		37		
373 R	21		27 40			P948	35 37	İ	
374 R	21	1		25-J	34 37	P950	35		
530 R (S2482)	14 35	ĺ		25-V	34		37		
}	37		i	41W (S251A)	37 35	P951	35 37		
1					37				