




# **JOHN DEERE**

## **Parts Catalog**

### **MODEL AO (STREAMLINED) TRACTOR**

**PCR48**

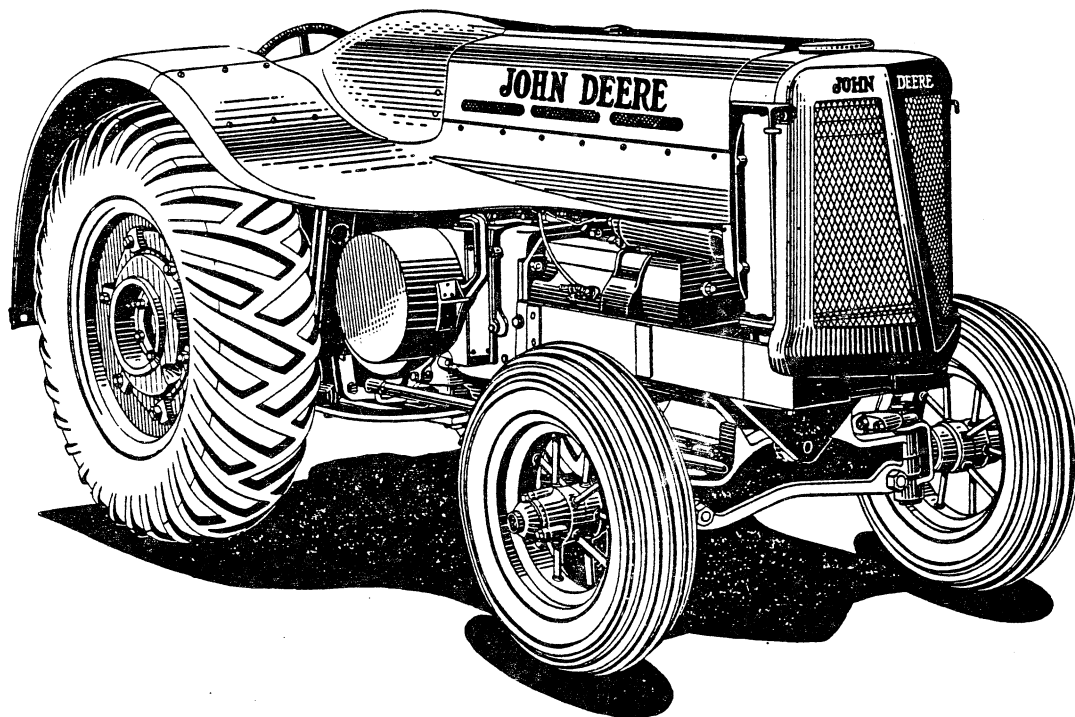

**John Deere Model "AO" Tractor**

### **Instructions for Ordering Parts**

**First. Always give serial number of tractor when ordering repairs.**

Second. Give number and name of each part ordered. If in doubt as to correct name and number, send dimensioned sketch or return broken parts, charges prepaid.

Third. Orders for parts should be written separately from correspondence.

Fourth. State whether shipments are to be forwarded by Freight, Express, or Parcel Post. Telegraph orders will be shipped Express or Parcel Post unless otherwise instructed.

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>TRANSMISSION CASE</b>			
294 R	Stud, Steering Housing to Case	AO-1000-	1
1452 R	Pipe Plug, Power Shaft Shifter Hole	AO-1000-	1
A 284 R	Stud, L. H. Main Bearing	AO-1000-	1
A 399 R	Gasket, Transmission Case Cover	AO-1000-	1
AA 823 R	Cover, A912 R, Transmission Case, with Gear Shift Interlock	AO-1000-	1
AA 843 R	Case, A1141 R, Transmission, Main	AO-1000-	1
C 719 R	Stud, Cylinder to Case	AO-1000-	1
D 463 R	Welch Plug, Transmission Cover	AO-1000-	1
E 2142 R	Pipe Plug, Transmission Case Drain	AO-1000-	1
E 2142 R	Pipe Plug, Crank Case Drain	AO-1000-	1
JD 7759	Alumite Fitting, No. 1610, Steering Shaft Lower Bushing	AO-1000-	1
K 3083 R	Stud, Gear Cover to Case	AO-1000-	1
K 2471 R	Pipe Plug, Transmission Case Oil Level, R. H.	AO-1735-	1
<b>ENGINE</b>			
A 191 R	Bolt, R. H. Main Bearing	AO-1000-	1
A 256 R	Bolt, L. H. Main Bearing	AO-1000-	1
A 302 R	Shim, L. H. Main Bearing, Laminated	AO-1000-	1
A 424 R	Gasket, L. H. Main Bearing Cover	AO-1000-	1
A 902 R	Cover, Crank Case	AO-1000-	1
A 903 R	Gasket, Crank Case Cover	AO-1000-	1
A 1147 R	Gasket, L. H. Main Bearing Housing	AO-1000-	1
A 1671 R	Shim, R. H. Main Bearing, Laminated	AO-1000-	1
A 1672 R	Cover, L. H. Main Bearing	AO-1000-	1
AA 244 R	Spacer, Flywheel with D2124 R Cork Washer	AO-1000-	1
AA 397 R	Bushing, L. H. Main Bearing (2 Halves)	AO-1000-	1
AA 1305 R	Flywheel, A1662 R, with Bolts and Driving Pin	AO-1000-	1
AA 1309 R	Housing, A1663 R, Main Bearing, with Cap, R. H.	AO-1000-	1
AA 1310 R	Housing, A1664 R, Main Bearing, with Cap, L. H.	AO-1000-	1
AA 1349 R	Bushing, R. H. Main Bearing	AO-1000-	1
D 1080 R	Screw, Flywheel Locating	AO-1000-	1
D 2009 R	Pin, Flywheel Spacer Driving	AO-1000-	1
D 2124 R	Washer, Flywheel Spacer, Cork	AO-1000-	1
E 2142 R	Pipe Plug, Crank Case Oil Drain	AO-1000-	1
E 2142 R	Pipe Plug, L. H. Main Bearing Housing	AO-1000-	1
<b>PISTONS, CONNECTING RODS, CRANKSHAFT</b>			
A 103 R	Gear, Crankshaft	AO-1000-	1
A 303 R	Shim, Connecting Rod, Laminated	AO-1000-	1
A 319 R	Lock Screw, Piston Pin	AO-1000-1061	1
A 1507 R	Snap Ring, Piston Pin	AO-1062-	1
AA 382 R	Bolt with Nut and Cotter, Connecting Rod	AO-1000-	1
AA 463 R	Connecting Rod, A107 R, Complete	AO-1000-	1
AA 463 R	"Exchange" Connecting Rod, Complete. Old Connecting Rod must accompany order for new rod in order to get the benefit of difference in price between a New Rod and an Exchange Rod. All orders received for "Exchange Rods" that are not accompanied with Old Rod will be filled with New Rods and Billed at full price.		
AA 737 R	Piston, A1109 R, with Rings, .030" Oversize	AO-1000-	1
AA 840 R	Piston, A61 R, with Rings, Standard	AO-1000-	1
AA 1423 R	Ring, Piston, .030" Oversize (Set of 10)	AO-1000-	1
AA 1572 R	Piston with Rings, .045" Oversize	AO-1000-	1
AA 1574 R	Ring, Piston, .045" Oversize (Set of 10)	AO-1000-	1
AA 1607 R	Ring, Piston, Oil Control (1 Ring)	AO-1000-	1
AA 1620 R	Pin, Piston, (Set Screw Type) (Set of 2)	AO-1000-1061	1
AA 1621 R	Pin, Piston (Snap Ring Type) (Set of 2)	AO-1062-	1
AA 1622 R	Pin, Piston, .005" Oversize (Set Screw Type) (Set of 2)	AO-1000-1061	1
AA 1623 R	Pin, Piston, .005" Oversize (Snap Ring Type) (Set of 2)	AO-1062-	1
AA 1626 R	Bushing, Piston Pin (Set of 2)	AO-1000-	1
AA 1955 R	Ring, Piston, Oil Control (1 Ring) .045" Oversize	AO-1000-	1
AA 2025 R	Crankshaft and Cylinder Block Replacement Assembly, Consisting of Crankshaft with Gear, Main Bearings, Connecting Rods, Cylinder Block with Pistons, Piston Rings, Piston Pins and Necessary Gaskets	AO-1000-	1
AA 2034 R	Crankshaft, A1660 R, Gear, Main Bearing, Connecting Rods and Shims (Substitute for AA1303 R)	AO-1000-	1
AA 2047 R	Ring, Piston, Standard (8 Compression and 2 Oil Control)	AO-1000-	1
AA 2048 R	Ring, Piston, .045" Oversize (8 Compression and 2 Oil Control)	AO-1000-	1
AA 2348 R	Ring, Piston (Set of 10)	AO-1000-	1
D 342 R	Woodruff Key, in Crankshaft Gear	AO-1000-	1



## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>CYLINDER</b>			
A 426 R	Gasket, Cylinder to Case.	AO-1000-	2
AA 437 R	Cylinder Block, A732 R, with Studs.	AO-1000-	2
AA 535 R	Cylinder Block, A732 R, with Pistons, Piston Rings and Gaskets.	AO-1000-	
AA 2025 R	Cylinder Block and Crankshaft Replacement Assembly Consisting of Cylinder Block, Pistons, Piston Rings, Piston Pins, Crankshaft with Gear, Main Bearings, Connecting Rods and Necessary Gaskets.	AO-1000-	
AB 1898 R	Cock, Compression Relief.	AO-1000-	2
C 719 R	Stud, Cylinder to Case.	AO-1000-	1
C 1823 R	Stud, Cylinder Head.	AO-1000-	2
<b>CYLINDER HEAD, MANIFOLD, VALVES</b>			
321 R	Gasket, Carburetor to Manifold.	AO-1000-	2
A 35 R	Guide, Valve.	AO-1000-	2
A 125 R	Stud, Manifold, Medium (7/16" x 5-5/8").	AO-1000-	2
A 130 R	Lock Washer (Half) Valve Stem.	AO-1000-	2
A 245 R	Cap, Valve Spring.	AO-1000-	2
A 356 R	Spring, Valve.	AO-1000-	2
A 404 R	Gasket, Cylinder Head.	AO-1000-	2
A 405 R	Gasket, Manifold.	AO-1000-	2
A 933 R	Pipe, Cylinder Head Water Inlet.	AO-1000-	2
A 1003 R	Manifold.	AO-1000-	2
A 1004 R	Stud, Manifold, Left (7/16" x 6-1/2").	AO-1000-	2
A 2093 R	Pipe Plug, Cylinder Head Drain.	AO-1000-	2
AA 464 R	Cylinder Head, A587 R, with Valve Guides.	AO-1000-	2
AA 465 R	Cylinder Head, A587 R, with Valves and Springs.	AO-1000-	
AA 1615 R	Sleeve, Push Rod (Set of 2).	AO-1000-	2
AA 1652 R	Lead Washer, Cylinder Head Stud (Box of 50).	AO-1000-	2
AA 1810 R	Valve, Intake (Set of 2).	AO-1000-	2
AA 1811 R	Valve, Exhaust (Set of 2).	AO-1000-	2
B 359 R	Stud, Manifold, Short (7/16" x 4-3/4").	AO-1000-	2
B 504 R	Stud, Manifold, Long (7/16" x 5-3/4").	AO-1000-	2
<b>CAMSHAFT</b>			
A 119 R	Stud, Camshaft Gear.	AO-1000-	2
A 253 R	Plate, Camshaft Gear Locking.	AO-1000-	2
A 355 R	Spring, Camshaft Thrust.	AO-1000-	2
A 425 R	Gasket, Camshaft Bearing Housing.	AO-1000-	2
A 1142 R	Camshaft.	AO-1000-	2
AA 227 R	Housing, A31 R, with Bearing Cup, Camshaft, L. H.	AO-1000-	2
AA 1047 R	Gear, A30 R, Camshaft, with Stud and Nut.	AO-1000-	2
JD 7250 R	Cup, Camshaft Bearing.	AO-1000-	2
JD 7358 R	Cone with Rollers, Camshaft Bearing.	AO-1000-	2
<b>CAM FOLLOWERS</b>			
A 178 R	Support, Cam Follower Guide.	AO-1000-	2
A 1595 R	Guide, Cam Follower.	AO-1000-	2
AA 958 R	Cam Follower.	AO-1000-	2
<b>TAPPETS</b>			
A 105 R	Lever, Tappet.	AO-1000-	2
A 172 R	Nut, Tappet Oiler Pipe Packing.	AO-1000-	2
A 173 R	Nut, Tappet Lever Stud.	AO-1000-	2
A 176 R	Stud, Tappet Lever Bracket.	AO-1000-	2
A 234 R	Spacer, Tappet Lever Shaft.	AO-1000-	2
A 260 R	Washer, Tappet Lever Shaft.	AO-1000-	2
A 437 R	Gasket, Tappet Lever Bracket Stud.	AO-1000-	2
A 439 R	Packing Washer, Tappet Oiler Pipe (12 used).	AO-1000-	2
A 601 R	Shaft, Tappet Lever.	AO-1000-	2
A 602 R	Snap Ring, Tappet Lever Shaft.	AO-1000-	2
A 772 R	Nut, Tappet Lever Cover, (Acorn).	AO-1000-	2
A 1193 R	Pipe, Tappet Lever Oiler.	AO-1000-1422	2
A 1290 R	Rod, Tappet.	AO-1000-	2
A 1291 R	Adjusting Screw, Tappet Lever.	AO-1000-	2
A 1574 R	Bushing, Tappet Oiler Pipe.	AO-1000-	2
A 1575 R	Gasket, Tappet Lever Cover.	AO-1000-	2
A 1819 R	Pipe, Tappet Lever Oiler.	AO-1423-	2
AA 229 R	Cover, Tappet Lever with Oil Trough, Bushing and Gasket.	AO-1000-	2
AA 1652 R	Lead Washer, Tappet Lever Stud (Box of 50 K2080 R).	AO-1000-	2
D 376 R	Spring, Tappet Lever Spacer.	AO-1000-	2

## JOHN DEERE MODEL "AO" TRACTOR

5

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>MUFFLER</b>			
629 R	Washer, Exhaust Opening Cover Screw	AO-1000-	3
AA 1286 R	Muffler, Complete	AO-1000-1724	3
AA 1920 R	Muffler, Complete	AO-1725-	3
<b>GOVERNOR</b>			
A 41 R	Housing, L. H. Governor Bearing	AO-1000-	3
A 73 R	Gear, Governor Drive	AO-1000-	3
A 369 R	Snap Ring, Governor Shaft	AO-1000-	3
A 428 R	Gasket, L. H. Governor Bearing Housing (Thick)	AO-1000-	3
A 584 R	Spring, Governor Bearing	AO-1000-	3
A 1171 R	Gasket, L. H. Governor Bearing (Thin)	AO-1000-	3
A 1172 R	Shaft, Governor	AO-1000-	3
A 1175 R	Shaft, Governor Lever	AO-1000-	3
A 1183 R	Gasket, Governor Case	AO-1000-	3
A 1241 R	Arm, Governor	AO-1000-	3
A 2303 R	Flange, Magneto Drive	AO-1850-	3
AA 813 R	Case, Governor, A1170 R, with Lever Shaft Bushing	AO-1000-	3
AA 814 R	Sleeve, Governor Shaft	AO-1000-	3
AA 1695 R	Gear and Pinion Assembly, Fan Drive Bevel (1 A1174 R and 1 A1177 R)	AO-1000-	3
AC 667 R	Weight, Governor	AO-1000-	3
B 271 R	Lever, Inside Governor	AO-1000-	3
B 276 R	Snap Ring, Governor Bearing	AO-1000-	3
B 280 R	Washer, Governor Bearing Spring	AO-1000-	3
B 281 R	Flange, Magneto Drive	AO-1000-1849	3
B 432 R	Bushing, Governor Lever Shaft (Upper)	AO-1000-	3
C 902 R	Pin, Governor Weight	AO-1000-	3
C 998 R	Bearing, Governor Thrust	AO-1000-	3
D 342 R	Woodruff Key, in Governor Drive Gear and Magneto Flange	AO-1000-	3
D 342 R	Woodruff Key, Fan Drive Bevel Gear	AO-1000-	3
JD 7655 R	Cup, Governor Shaft Bearing, L. H. and R. H.	AO-1000-	3
JD 7656 R	Cone with Rollers, Governor Shaft Bearing, L. H. and R. H.	AO-1000-	3
JD 7657 R	Balls and Retainer, Governor Shaft Bearing, L. H. and R. H.	AO-1000-	3
<b>CONTROLS</b>			
A 80 R	Lever, Speed Control Hand	AO-1000-	3
A 241 R	Washer, Speed Control Shaft, Upper	AO-1000-	3
A 586 R	Washer, Speed Control Shaft, Lower	AO-1000-	3
A 908 R	Rod, Clutch Operating	AO-1000-	3
A 944 R	Bracket, Speed Control Shaft	AO-1000-	3
A 946 R	Bracket, Steering Shaft Bearing	AO-1000-1214	3
A 958 R	End, Speed Control Rod	AO-1000-	3
A 1188 R	Rod, Carburetor Throttle	AO-1000-	3
A 1197 R	Bushing, Clutch Lever Pivot	AO-1000-	3
A 1680 R	Bracket, Clutch Lever	AO-1000-	3
A 1681 R	Bolt, Clutch Operating Hand Lever Pivot	AO-1000-	3
A 1682 R	Link, Clutch Lever Spring	AO-1000-	3
A 1735 R	Shaft, Speed Control	AO-1000-	3
A 1736 R	Support, Steering Shaft Rear	AO-1000-	3
A 1737 R	Rod, Speed Control	AO-1000-	3
A 1785 R	Spring, Control Lever (Radiator Shutter)	AO-1000-	3
A 1795 R	Bracket, Steering Shaft Bearing	AO-1215-	3
*A 2230 R	Link, Fuel Control Rod	AO-1801-	3
*A 2280 R	Support, Fuel Control Rod	AO-1801-	3
*A 2290 R	Extension, Fuel Control Rod	AO-1801-	3
*A 2291 R	Rod, Fuel Control	AO-1801-	3
A 2494 R	Clamp, Speed Change Spring	AO-1000-	3
AA 1320 R	Lever, Clutch Operating Hand, with Pivot Bushing	AO-1000-	3
AB 214 R	Bearing, B36 R, with Bushing, Steering Shaft, Upper	AO-1000-	3
B 37 R	Bushing, Steering Shaft, Upper	AO-1000-	3
B 273 R	Spring, Speed Change, Flat	AO-1000-	3
C 485 R	Clip, Brake Lever Spring	AO-1000-	3
C 1224 R	Spring, Brake Pedal	AO-1000-	3
C 1438 R	Spring, Speed Control Shaft	AO-1000-	3
D 157 R	End, Throttle Rod	AO-1000-1699	3
D 393 R	Yoke, Clutch Operating Rod	AO-1000-	3
D 1994 R	Pin, Clutch Operating Rod Yoke	AO-1000-	3
D 1994 R	Pin, Clutch Operating Hand Lever to Rod	AO-1000-	3
D 2887 R	End, Throttle Rod	AO-1700-	3
E 2057 R	Washer, on Speed Control Rod	AO-1000-	3
E 2057 R	Washer, on Throttle Rod	AO-1000-	3
K 3151 R	Washer, Speed Control	AO-1000-	3

\*Also repairs for Tractors AO-1000-1800 equipped with Starting and Lighting Assemblies.

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>CRANKCASE BREATHER</b>			
AA 551 R	Breather Cover, A900 R, with Stack.	AO-1000-	3
D 1951 R	Gasket, Filter Core	AO-1000-	3
D 1952 R	Core, Breather Filter.	AO-1000-	3
<b>CRANKCASE VENTILATOR</b>			
A 535 R	Packing, Ventilator Pipe.	AO-1000-	3
A 1190 R	Pipe, Ventilator.	AO-1000-	3
C 1705 R	Packing Nut, Ventilator Pipe.	AO-1000-	3
<b>LUBRICATING SYSTEM—OIL PUMP</b>			
A 1596 R	Gear, Oil Pump Top Drive.	AO-1000-	4
A 1597 R	Bearing, Oil Pump Top Drive Gear.	AO-1000-	4
A 1598 R	Gasket, Oil Pump Drive Gear Bearing.	AO-1000-	4
A 1599 R	Shaft, Oil Pump Drive.	AO-1000-	4
AB 234 R	Strainer Screen, Complete, Oil Pump.	AO-1000-	4
B 241 R	Body, Oil Pump.	AO-1000-	4
B 243 R	Gear, Oil Pump Drive Bottom.	AO-1000-	4
B 244 R	Shaft, Oil Pump Idler Gear.	AO-1000-	4
B 245 R	Gear, Oil Pump Idler.	AO-1000-	4
B 246 R	Gasket, Oil Pump Cover.	AO-1000-	4
B 247 R	Cover, Oil Pump.	AO-1000-	4
B 250 R	Coupling, Oil Pump Drive Shaft.	AO-1000-	4
B 251 R	Gasket, Oil Pump Body to Case.	AO-1000-	4
E 2207 R	Key, Oil Pump Drive Shaft.	AO-1000-	4
<b>OIL FILTER AND INDICATOR</b>			
A 518 R	Stud, Oil Filter (1/2" x 10-1/4").	AO-1000-1849	4
A 519 R	Gasket, Oil Filter Bottom.	AO-1000-	4
A 520 R	Nut, Oil Filter Bottom.	AO-1000-1799	4
A 521 R	Gasket, Oil Filter Bottom Nut	AO-1000-	4
A 522 R	Bottom, Oil Filter.	AO-1000-	4
A 523 R	Spring, Oil Filter Bottom.	AO-1000-1799	4
A 1149 R	Gasket, Oil Filter Head to Filter Body.	AO-1000-	4
A 1151 R	Gasket, Oil Filter Head Cover.	AO-1000-	4
A 1152 R	Body, Oil Filter.	AO-1000-	4
A 1196 R	Clip, Oil Pressure Regulating Valve Relief Spring.	AO-1000-	4
A 1278 R	Bushing, Filter Head Cover, Oil Pressure Regulating Valve.	AO-1000-	4
A 1279 R	Head, Oil Filter.	AO-1000-	4
A 1280 R	Spring, Oil Pressure Regulating Valve (Coil).	AO-1000-	4
A 1713 R	Clamp, Oil Indicator.	AO-1000-1617	4
*A 2440 R	Nut, Oil Filter.	AO-1800-1849	4
*A 2441 R	Spring, Oil Filter	AO-1800-	4
*A 2444 R	Snap Ring, Oil Filter End Plate Retaining.	AO-1800-	4
*A 2530 R	Spacer, Oil Filter Bottom Plate.	AO-1812-	4
A 2574 R	Stud, Oil Filter (1/2" x 9-1/8").	AO-1850-	4
A 2575 R	Nut, Oil Filter.	AO-1850-	4
AA 357 R	Filter, Oil (Metal) (Substitute AA2454 R)		4
AA 824 R	Leaf Spring with Centering Button, Oil Pressure Regulating Valve.	AO-1000-	4
AA 831 R	Cover, A1277 R, with Bushing and Relief Spring, Oil Filter Head	AO-1000-	4
AA 1730 R	Gauge, Complete, Oil Indicator.	AO-1000-	4
*AA 2092 R	Element, Oil Filter.	AO-1800-	4
*AA 2095 R	End Plate, Oil Filter.	AO-1800-	4
*AA 2096 R	Outlet, Oil Filter Assembly.	AO-1800-	4
AA 2454 R	Filter, Oil (Replacement).	AO-1000-1811	4
Note: This Assembly consists of all parts necessary to Replace Metal Filter AA357 R with Replacement Filter AA2092 R.			
AB 326 R	Leaf Spring with Centering Button, Oil Filter.	AO-1000-	4
B 430 R	Button, Oil Filter By-Pass Valve Leaf Spring.	AO-1000-	4
B 439 R	Spring, Filter Head By-Pass (Coil).	AO-1000-	4
D 793 R	Body, Crank Case Oil Level Cock.	AO-1000-	4
D 794 R	Plug, Crank Case Oil Level Cock.	AO-1000-	4
D 2427 R	Screw, Pressure Regulating.	AO-1000-	4
K 2573 R	Washer, Oil Filter Bottom Nut.	AO-1000-	4

\*Also repairs for Tractors AO-1000-1799 equipped with AA2454 R.

## JOHN DEERE MODEL "AO" TRACTOR

7

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>OIL PIPES AND FITTINGS</b>			
1469 R	Coupling, Oil Indicator Pipe	AO-1000-1617	4
A 374 R	Nut, Solder Bushing, Governor Oil Pipe	AO-1000-	4
A 465 R	Body, Solder Bushing, Oil Gauge Pipe to Filter Head	AO-1000-	4
A 1252 R	Bushing, Oil Indicator Pipe to Governor Case	AO-1000-	4
AA 802 R	Oil Pipe, Pump Discharge	AO-1000-	4
AA 819 R	Oil Pipe, Governor	AO-1000-	4
AA 1282 R	Oil Pipe, R. H. Main Bearing	AO-1000-	4
AA 1283 R	Oil Pipe, L. H. Main Bearing	AO-1000-	4
AA 1284 R	Oil Pipe, Indicator	AO-1000-	4
B 258 R	Nut, Solder Bushing, 1/2", Oil Pump Discharge Pipe	AO-1000-	4
B 259 R	Gland, Solder Bushing, 1/2", Oil Pump Discharge Pipe	AO-1000-	4
D 392 R	Body, Solder Bushing, Main Bearing Oil Pipe	AO-1000-	4
D 392 R	Body, Solder Bushing, Indicator Oil Pipe	AO-1000-	4
D 417 R	Elbow, Oil Pipe, Governor Case to Indicator	AO-1000-	4
D 1935 R	Gland, Solder Bushing, on Governor Oil Pipe	AO-1000-	4
D 2440 R	Body, Solder Bushing, Oil Pump Discharge Pipe	AO-1000-	4
E 2149 R	Nut, Solder Bushing, Main Bearing Oil Pipes	AO-1000-	4
E 2149 R	Nut, Solder Bushing, Indicator Oil Pipe	AO-1000-	4
E 2150 R	Gland, Solder Bushing, Main Bearing Oil Pipe	AO-1000-	4
E 2150 R	Gland, Solder Bushing, Indicator Oil Pipe	AO-1000-	4
<b>FUEL SYSTEM</b>			
A 1013 R	Cushion, Fuel Tank Front Support	AO-1000-	4
A 1014 R	Cushion, Fuel Tank Rear Support	AO-1000-	4
AA 270 R	Strap, Fuel Tank	AO-1000-	4
AA 454 R	Gasoline Strainer, Complete	AO-1000-	4
AA 499 R	Filter, Fuel	AO-1000-	4
AA 517 R	Bail, Fuel Filter Bowl	AO-1000-	4
AA 518 R	Nut with Washer, Fuel Filter Adjusting	AO-1000-	4
AA 519 R	Screen, Fuel Filter	AO-1000-	4
AA 623 R	Gasoline Pipe	AO-1000-1800	4
AA 624 R	Fuel Pipe	AO-1000-1800	4
AA 1322 R	Tank, Fuel	AO-1000-	4
AA 1324 R	Support, Fuel Tank, Front, with Cushion	AO-1000-	4
AA 1325 R	Support, Fuel Tank, Rear, with Cushion	AO-1000-	4
AA 2064 R	Bowl, Fuel Filter Glass, and Gasket (1 C1777 R and 1 C 1778 R)	AO-1000-	4
*AA 2079 R	Fuel Pipe	AO-1801-	4
*AA 2080 R	Gasoline Pipe	AO-1801-	4
AB 609 R	Three-Way Cock	AO-1000-1800	4
*AB 1545 R	Three-Way Cock	AO-1801-	4
AC 1079 R	Body, Fuel Filter, with Valve	AO-1000-	4
AC 1080 R	Valve, Fuel Filter	AO-1000-	4
AD 709 R	Cap, Filler	AO-1000-	4
*B 1535 R	Indexing Stop, Three-Way Cock	AO-1801-	4
C 1778 R	Gasket, Fuel Filter Cork	AO-1000-	4
C 2378 R	Body, Fuel Filter	AO-1000-	4
D 392 R	Body, Solder Bushing, Fuel Pipe	AO-1000-	4
D 2122 R	Packing Washer	AO-1000-	4
E 2149 R	Nut, Solder Bushing, on Gasoline Pipe	AO-1000-	4
E 2149 R	Nut, Solder Bushing, on Fuel Pipe	AO-1000-	4
E 2150 R	Gland, Solder Bushing, on Fuel Pipe	AO-1000-	4
E 2150 R	Gland, Solder Bushing, on Gasoline Pipe	AO-1000-	4
<b>HOOD</b>			
A 1631 R	Bracket, Hood Clip, R. H.	AO-1000-	5
A 1632 R	Bracket, Hood Clip, L. H.	AO-1000-	5
A 1684 R	Hinge, Front Half, Cowl	AO-1000-	5
A 1708 R	Dash	AO-1744-	5
A 1714 R	Strip, Dash Reinforcing	AO-1000-	5
AA 1328 R	Hood, Complete	AO-1000-	5
AA 1340 R	Dash and Tool Box, Complete	AO-1000-1743	5
C 1573 R	Clip, Hood	AO-1000-	5

\*Also repairs for Tractors AO-1000-1800 equipped with Starting and Lighting Assemblies.

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>COOLING SYSTEM</b>			
A 51 R	Tank, Radiator Bottom	AO-1000-	5
A 192 R	Strap, Radiator	AO-1000-	5
A 432 R	Gasket, Radiator Core, Top and Bottom	AO-1000-	5
A 433 R	Gasket, Cylinder Water Pipe Outlet	AO-1000-	5
A 434 R	Gasket, Radiator Water Inlet	AO-1000-	5
A 446 R	Hose, Upper Water Pipe	AO-1000-	5
A 448 R	Clamp, Lower Water Pipe Hose	AO-1000-	5
A 448 R	Clamp, Upper Water Pipe Hose	AO-1000-	5
A 931 R	Elbow, Radiator Water Inlet	AO-1000-	5
A 932 R	Hose, Lower Water Pipe	AO-1000-	5
A 933 R	Pipe, Radiator Bottom Outlet	AO-1000-	5
A 933 R	Pipe, Cylinder Head Inlet	AO-1000-	5
A 1627 R	Tank, Radiator Top	AO-1000-	5
A 1628 R	Side, Radiator, R. H.	AO-1000-	5
A 1629 R	Side, Radiator, L. H.	AO-1000-	5
A 1634 R	Retainer, Gasket	AO-1000-	5
A 1635 R	Lever, Cam, Radiator Cap	AO-1000-	5
A 1636 R	Pin, Cam Lever Pivot, Radiator Cap	AO-1000-	5
A 1637 R	Stud, Filler Cap	AO-1000-	5
A 1638 R	Clamp Bar, Radiator Filler Cap	AO-1000-	5
A 1712 R	Clamp, Heat Indicator	AO-1000-	5
AA 396 R	Core, Radiator	AO-1000-	5
AA 565 R	Pipe, A845 R, Upper Water	AO-1000-	5
AA 1301 R	Radiator Cap, A1633 R, with Baffle and Gasket	AO-1000-	5
AA 1342 R	Heat Indicator	AO-1000-	5
D 473 R	Gasket, Radiator Filler Cap	AO-1000-	5
D 2216 R	Clip, on Heat Indicator Tube	AO-1767-	5
<b>RADIATOR GUARD, CURTAIN, SHUTTER AND SHUTTER CONTROLS</b>			
372 R	Spring, Radiator Curtain	AO-1000-1214	6
629 R	Washer on Radiator Curtain Roller	AO-1000-1214	6
629 R	Washer, Control Lever Spring	AO-1000-	6
A 80 R	Lever, Shutter Control	AO-1000-	6
A 182 R	Roller, Radiator Curtain	AO-1000-1214	6
A 189 R	Clip, Radiator Curtain	AO-1000-1214	6
A 241 R	Washer, on Shutter Control Shaft	AO-1000-	6
A 586 R	Washer, on Shutter Control Shaft	AO-1000-	6
A 1225 R	Clip, Shutter Control Rod	AO-1000-	6
A 1785 R	Spring, Radiator Shutter Control Lever	AO-1000-	6
A 1796 R	Shaft, Shutter Control	AO-1000-	6
A 1797 R	Rod, Shutter Control	AO-1000-	6
A 1853 R	Washer on Bell Crank and Stud	AO-1000-1743	6
A 1854 R	Rivet, Bell Crank to Operating Link	AO-1000-	6
A 1855 R	Rivet, Operating Bar to Shutter	AO-1000-	6
A 1856 R	Spring, Shutter	AO-1000-1743	6
A 1857 R	Link, Bell Crank Operating	AO-1000-1743	6
A 1999 R	Spring, Shutter	AO-1744-	6
AA 325 R	Curtain, Radiator	AO-1000-1214	6
AA 1293 R	Guard, Radiator	AO-1000-1214	6
AA 1429 R	Guard, Radiator	AO-1215-1743	6
AA 1444 R	Shutter, Radiator	AO-1000-1743	6
AA 1521 R	Bell Crank Bracket and Stud	AO-1000-1743	6
AA 1522 R	Bell Crank and Bushing	AO-1000-1743	6
AA 1523 R	Shutter Blade and Pivot Pin	AO-1000-1743	6
AA 1524 R	Operating Bar and Stud	AO-1000-1743	6
AA 1527 R	Frame and Bearing Bar	AO-1000-1743	6
AA 1528 R	Top Tie Bar and Bearing Bar	AO-1000-1743	6
AA 1723 R	Retainer and Bearing Strip	AO-1744-	6
AA 1726 R	Shutter Blade and Pivot Pin	AO-1744-	6
AA 1727 R	Operating Bar and Stud	AO-1744-	6
AA 1728 R	Bell Crank and Bushing	AO-1744-	6
AA 1729 R	Operating Link and Spring Clip	AO-1744-	6
AA 1733 R	Shutter, Radiator	AO-1744-	6
AA 1735 R	Guard, Radiator	AO-1744-	6
AA 2057 R	Frame and Bearing Bar	AO-1744-	6
AA 2058 R	Top Tie Bar and Bearing Bar	AO-1744-	6
B 423 R	Spring, Radiator Curtain Roller	AO-1000-1214	6
D 157 R	End, Shutter Control Rod	AO-1000-	6
E 2057 R	Washer on Radiator Shutter Control Rod End	AO-1000-	6
E 2057 R	Washer on Bell Crank Stud	AO-1744-	6

## JOHN DEERE MODEL "AO" TRACTOR

9

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>FAN</b>			
1450 R	Pipe Plug in Fan Bearing Housing...	AO-1000-	6
1704 R	Washer on Front Fan Bearing Housing to Support Screw...	AO-1811-	6
A 286 R	Retainer, Fan Bearing Packing...	AO-1000-	6
A 369 R	Snap Ring, Fan Shaft Rear End...	AO-1000-	6
A 393 R	Packing, Fan Bearing, Rear...	AO-1000-	6
A 846 R	Spring, Fan Bearing Take-Up...	AO-1000-	6
A 927 R	Support, Fan Shaft...	AO-1000-	6
A 1178 R	Shaft, Fan...	AO-1000-	6
A 1180 R	Housing, Fan Shaft Rear Bearing...	AO-1000-	6
A 1181 R	Gasket, Fan Shaft, Rear Bearing Housing (.015" Thick)...	AO-1000-	6
A 1182 R	Gasket, Fan Shaft, Rear Bearing Housing (.006" Thick)...	AO-1000-	6
A 1382 R	Washer, Fan Shaft Support (1-1/2" Outside Diameter, 17/32" Inside Diameter)...	AO-1000-	6
AA 523 R	Fan Blades with Hub, Complete...	AO-1000-	6
AA 818 R	Housing, B290 R, Front Fan Bearing, with Support Tube...	AO-1000-	6
AA 1299 R	Shroud, Fan...	AO-1000-	5
AA 1695 R	Gear and Pinion Assembly, Fan Drive Bevel (1 A1174 R and 1 A1177 R)...	AO-1000-	6
AB 518 R	Felt Washer, Front Fan Bearing...	AO-1000-	6
B 293 R	Packing, Fan Shaft Support Tube...	AO-1000-	6
B 294 R	Washer, Front, Fan Bearing Packing (Rear)...	AO-1000-	6
B 296 R	Washer, Fan Shaft Bearing Packing, Retainer...	AO-1000-	6
B 298 R	Retainer, Fan Shaft Bearing Felt Washer...	AO-1000-	6
D 342 R	Woodruff Key, Fan Drive Bevel Gear...	AO-1000-	3
D 403 R	Key, Fan Drive Bevel Pinion...	AO-1000-	6
D 1720 R	Lock Washer (Half) Fan Shaft...	AO-1000-	6
JD 7655 R	Cup, Front and Rear Bearing...	AO-1000-	6
JD 7656 R	Cone with Rollers, Front and Rear Bearing...	AO-1000-	6
JD 7657 R	Ball Assembly, Front and Rear Bearing...	AO-1000-	6
<b>PULLEY</b>			
A 370 R	Snap Ring, Belt Pulley Gear...	AO-1000-	7
A 371 R	Snap Ring, Belt Pulley Bearing...	AO-1000-	7
A 726 R	Bushing, Belt Pulley (Bronze)...	AO-1000-	7
A 1642 R	Gear, Belt Pulley...	AO-1000-	7
A 1646 R	Washer, Belt Pulley Bearing...	AO-1000-	7
A 1647 R	Retainer, Belt Pulley Bearing...	AO-1000-	7
AA 1315 R	Belt Pulley, A1640 R, with Sleeve, Gear and Bushing...	AO-1000-	7
D 403 R	Key, Belt Pulley...	AO-1000-	7
JD 7487 R	Outer Race and Roller, Belt Pulley...	AO-1000-	7
JD 7587 R	Inner Race, Pulley Bearing...	AO-1000-	7
<b>CLUTCH PARTS</b>			
A 1197 R	Bushing, Clutch Lever Pivot...	AO-1000-	3
A 1606 R	Shroud, Clutch...	AO-1000-	7
A 1641 R	Sleeve, Clutch Operating...	AO-1000-	7
A 1643 R	Drive Pin, Clutch Cone...	AO-1000-	7
A 1644 R	Cam, Clutch Operating...	AO-1000-	7
A 1645 R	Bolt, Clutch Operating...	AO-1000-	7
A 1649 R	Disk, Clutch Adjusting...	AO-1000-	7
A 1650 R	Washer, Clutch Driving Disk...	AO-1000-	7
A 1651 R	Spring, Clutch Release...	AO-1000-	7
A 1652 R	Cover, Clutch Dust...	AO-1000-	7
A 1661 R	Disk, Clutch Driving...	AO-1000-	7
A 1680 R	Bracket, Clutch Lever...	AO-1000-	3
A 1682 R	Spring Link, Clutch Lever...	AO-1000-	3
B 738 R	Bolt Pin, Clutch Operating...	AO-1000-	7
B 739 R	Link Pin, Clutch Operating...	AO-1000-	7
B 741 R	Cam Washer, Clutch Operating...	AO-1000-	7
C 614 R	Facing, Clutch...	AO-1000-	7
<b>CLUTCH FORK BEARING AND PULLEY BRAKE</b>			
A 78 R	Fork, Clutch...	AO-1000-	7
A 82 R	Collar, Clutch...	AO-1000-	7
A 602 R	Snap Ring, Clutch Fork Shaft...	AO-1000-	7
A 1653 R	Shaft, Clutch Fork...	AO-1000-	7
A 1654 R	Bearing, Clutch Fork Shaft...	AO-1000-	7
A 1655 R	Cover, Clutch Fork Shaft Bearing...	AO-1000-	7
A 1656 R	Gasket, Clutch Fork Shaft Bearing...	AO-1000-	7
A 1657 R	Spring, Clutch Fork...	AO-1000-	7
AA 1318 R	Brake, A1658 R, Pulley, with Lining...	AO-1000-	7
C 732 R	Welch Plug in Clutch Fork Bearing...	AO-1000-	7
D 178 R	Pivot, Clutch Fork...	AO-1000-	7
D 1932 R	Lining, Pulley Brake...	AO-1000-	7

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>GEAR SHIFT</b>			
A 147 R	Key Washer, Gear Shift Lever.....	AO-1000-	7
A 596 R	Yoke, Gear Shifter.....	AO-1000-	7
A 597 R	Spring, Gear Shifter Pawl.....	AO-1000-	7
A 598 R	Pawl, Gear Shifter.....	AO-1000-	7
A 913 R	Interlock, Gear Shift.....	AO-1000-	7
A 916 R	Lever, Gear Shift.....	AO-1000-	7
A 917 R	Arm, Gear Shifter.....	AO-1000-	7
A 918 R	Shaft, Shifter.....	AO-1000-	7
AA 553 R	Gear Shifter, A910 R, Low and Reverse, with Yoke.....	AO-1000-	7
AA 588 R	Gear Shifter, A1015 R, Second Speed, with Yoke.....	AO-1000-	7
D 678 R	Screw, Gear Shift Adjusting.....	AO-1000-	7
<b>SLIDING GEAR SHAFT</b>			
A 94 R	Pinion, First Speed Sliding (18 Teeth).....	AO-1000-	7
A 365 R	Snap Ring, Sliding Gear Shaft, L. H., Bearing Outer Race.....	AO-1000-	7
A 378 R	Snap Ring, Sliding Gear Shaft, L. H., Bearing Inner Race.....	AO-1000-	7
A 540 R	Shaft, Sliding Gear.....	AO-1000-	7
A 549 R	Gasket, Sliding Gear Shaft and Countershaft, L. H., Bearing Cover.....	AO-1000-	7
A 550 R	Cover, Sliding Gear Shaft and Countershaft, L. H., Bearing.....	AO-1000-	7
A 600 R	Pinion, Sliding Gear Shaft Drive (20 Teeth).....	AO-1000-	7
A 906 R	Pinion, Second Speed Sliding (23 Teeth).....	AO-1000-	7
JD 7665 R	Bearing, Sliding Gear Shaft, L. H.....	AO-1000-	7
JD 7673 R	Bearing, Sliding Gear Shaft, R. H.....	AO-1000-	7
<b>OVERDRIVE GEAR SHIFT</b>			
A 115 R	Lever, Overdrive Shifter.....	AO-1000-	8
A 147 R	Key Washer, Overdrive Shifter.....	AO-1000-	8
A 596 R	Yoke, Overdrive Shifter.....	AO-1000-	8
A 599 R	Pin, Reverse Lockout.....	AO-1000-	8
AA 793 R	Shifter, A911 R, Overdrive, with Yoke and Lockout Pin.....	AO-1000-	8
AA 1291 R	Handle, Overdrive Shifter, with Shaft.....	AO-1000-	8
<b>OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR</b>			
A 69 R	Cover, Overdrive, R. H. Bearing.....	AO-1000-	8
A 119 R	Stud, Overdrive, R. H. Bearing Cover.....	AO-1000-	8
A 120 R	Dowel Pin, First Reduction Gear Cover.....	AO-1000-	8
A 159 R	Spacer, First Reduction Gear.....	AO-1000-	8
A 438 R	Gasket, Overdrive, R. H. Bearing Cover.....	AO-1000-	8
A 547 R	Gasket, Overdrive Gear and Shaft, L. H. Bearing Cover.....	AO-1000-	8
A 548 R	Cover, Overdrive Gear and Shaft, L. H. Bearing.....	AO-1000-	8
A 557 R	Gasket, First Reduction Gear Cover.....	AO-1000-	8
AA 797 R	Gear and Shaft, A541 R, Overdrive, with Nut and Bearing Cover (28 Teeth Outside—20 Teeth Inside).....	AO-1000-	8
AA 1272 R	Gear First Reduction, with Spider, A1603 R, Riveted.....	AO-1000-	8
AA 1274 R	Cover, A1605 R, with Dust Shroud, First Reduction Gear.....	AO-1000-1548	8
AA 1683 R	Cover, A1605 R, with Dust Shroud, First Reduction Gear.....	AO-1549-	8
JD 7664 R	Bearing, Overdrive Gear and Shaft, R. H. End.....	AO-1000-	8
JD 7672 R	Bearing, Overdrive Gear and Shaft, L. H. End.....	AO-1000-	8
K 3083 R	Stud, First Reduction Gear Cover to Transmission Case.....	AO-1000-	8
<b>COUNTERSHAFT IDLER GEAR</b>			
A 114 R	Gear, Countershaft Idler (25 Teeth Outside—17 Teeth Inside).....	AO-1000-	8
A 166 R	Washer, Bearing Locating.....	AO-1000-	8
A 539 R	Spacer, Overdrive Idler Gear.....	AO-1000-	8
A 812 R	Spacer, Idler Gear Locating.....	AO-1000-	8
A 1154 R	Washer, Idler Gear Thrust.....	AO-1000-	8
JD 7539 R	Roller Assembly, Countershaft Idler, L. H.....	AO-1000-	8
JD 7551 R	Inner Race, Countershaft Idler, R. H.....	AO-1000-	8
JD 7559 R	Inner Race, Countershaft Idler, L. H.....	AO-1000-	8
JD 7914 R	Roller Assembly, Countershaft Idler, R. H.....	AO-1000-	8
<b>AA521 R HIGH SPEED GEAR ASSEMBLY</b>			
A 836 R	Gear, Idler, Countershaft (17 and 28 Teeth).....	AO-1000-	9
A 837 R	Pinion, Sliding Gear Shaft (17 Teeth).....	AO-1000-	9
AA 798 R	Gear, A838 R, Overdrive and Shaft with Nut and Bearing Cover (28 Teeth Outside and 17 Teeth Inside).....	AO-1000-	9

## JOHN DEERE MODEL "AO" TRACTOR

11

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>COUNTERSHAFT</b>			
A 124 R	Stud, Countershaft, R. H. Bearing	AO-1000-	8
A 581 R	Pinion, Differential Driving (17 Teeth)	AO-1000-	8
A 582 R	Gear, First Speed, Countershaft (27 Teeth)	AO-1000-	8
A 583 R	Spacer, Countershaft Gear	AO-1000-	8
A 907 R	Gear, Second Speed, Countershaft (22 Teeth)	AO-1000-	8
A 1153 R	Countershaft	AO-1000-	8
A 1156 R	Gasket, Countershaft, R. H. Bearing Housing (Thin)	AO-1000-	8
A 1157 R	Gasket, Countershaft, R. H. Bearing Housing (Thick)	AO-1000-	8
A 1158 R	Shim, Countershaft, R. H. Bearing Housing (Steel, Thin)	AO-1000-	8
A 1159 R	Shim, Countershaft, R. H. Bearing Housing (Steel, Thick)	AO-1000-	8
A 1160 R	Snap Ring, Countershaft, L. H. Bearing	AO-1000-	8
AA 806 R	Housing, A1155 R, Countershaft, R. H. Bearing, with Cup	AO-1000-	8
JD 7367 R	Cone with Rollers, Countershaft, R. H. Bearing	AO-1000-	8
JD 7379 R	Cone with Rollers, Countershaft, L. H. Bearing	AO-1000-	8
JD 7405 R	Cup, Countershaft, R. H. Bearing	AO-1000-	8
JD 7411 R	Cup, Countershaft, L. H. Bearing	AO-1000-	8
<b>AA1120 R SLOW SPEED GEAR ASSEMBLY</b>			
A 562 R	Snap Ring, Power Shaft Drive Shaft	AO-1000-	9
A 596 R	Yoke, Second Speed Shifter	AO-1000-	9
A 1112 R	Gear, Power Shaft Bevel (19 Teeth)	AO-1000-	9
A 1113 R	Shaft, Power Shaft Drive	AO-1000-	9
A 1114 R	Pinion, Power Shaft Bevel Drive (16 Teeth)	AO-1000-	9
A 1116 R	Shifter, Power Shaft	AO-1000-	9
A 1401 R	Snap Ring, First Reduction Gear Cover	AO-1000-	9
A 1402 R	Snap Ring, Sliding Gear Shaft Drive Gear, L. H. Bearing	AO-1000-	9
A 1403 R	Spacer, First Reduction Gear	AO-1000-	9
A 1405 R	Pinion, Sliding Gear Shaft Drive (20 and 26 Teeth)	AO-1000-	9
A 1406 R	Pinion, High Speed Sliding (28 Teeth)	AO-1000-	9
A 1408 R	Gear, Countershaft Idler (19 and 25 Teeth)	AO-1000-	9
A 1409 R	Spacer, Idler Gear Bearing	AO-1000-	9
A 1410 R	Washer, Countershaft Idler Gear Thrust	AO-1000-	9
A 1411 R	Gear, Differential Drive and Pinion (17 Teeth)	AO-1000-	9
A 1414 R	Shaft, Power Shaft Shifter	AO-1000-	9
A 1415 R	Gear, Power Shaft Sliding (13 Teeth)	AO-1000-	9
A 1416 R	Shaft, Shifter	AO-1000-	9
A 1418 R	Yoke, Underdrive Shifter	AO-1000-	9
A 1522 R	Washer, Countershaft, L. H. Bearing Retaining	AO-1000-	9
AA 741 R	Cover, A1123 R, Transmission Case with Gear Shift Interlock	AO-1000-	1
AA 1122 R	Housing, A1413 R, Countershaft, R. H. Bearing with Cup	AO-1000-	9
AA 1123 R	Shifter, Gear, A1417 R, Second Speed with Yoke	AO-1000-	9
AA 1124 R	Shifter, Underdrive, A911 R, with Yoke	AO-1000-	9
AA 1234 R	Countershaft with Dowel Pin	AO-1000-	9
AA 1553 R	Gear and Shaft, Underdrive, A1404 R, with Nut (20 Teeth)	AO-1000-	9
JD 7649 R	Bearing, Overdrive Gear and Shaft, L. H. End	AO-1000-	9
JD 7904 R	Bearing, Countershaft Idler Gear (2 used)	AO-1000-	9
<b>DIFFERENTIAL</b>			
A 11 R	Quill, Differential Bearing	AO-1000-	9
A 169 R	Pinion, Differential Bevel	AO-1000-	9
A 202 R	Washer, Differential Thrust	AO-1000-	9
A 263 R	Cover, Differential Shaft, R. H. Bearing	AO-1000-	9
A 363 R	Snap Ring, Differential Shaft, R. H. Bearing	AO-1000-	9
A 406 R	Shim, Differential Quill, (Vellumoid, Thin)	AO-1000-	9
A 486 R	Pinion, Differential Bevel Gear and Spur	AO-1000-	9
A 610 R	Shim, Differential Bearing Quill (Steel, Thick)	AO-1000-	9
A 611 R	Shim, Differential Bearing Quill (Steel, Thin)	AO-1000-	9
A 612 R	Shim, Differential Bearing Quill (Vellumoid, Thick)	AO-1000-	9
A 2307 R	Shaft, Differential Bevel Pinion	AO-1000-	9
AA 331 R	Differential Gear with Shaft	AO-1000-	9
AA 345 R	Differential, Complete	AO-1000-	9
JD 7275 R	Cup, Differential Bearing	AO-1000-	9
JD 7361 R	Cone with Rollers, Differential Bearing	AO-1000-	9



## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>FINAL DRIVE</b>			
A 5 R	Spacer, Rear Axle Bearing.....	AO-1000-	9
A 76 R	Nut, Rear Axle Shaft.....	AO-1000-	9
A 411 R	Gasket, Rear Axle Housing to Case.....	AO-1000-	10
A 412 R	Gasket, Rear Axle Housing Cover.....	AO-1000-	10
A 829 R	Washer, Rear Axle Oil Seal.....	AO-1000-	9
A 1281 R	Retainer, Rear Axle Felt.....	AO-1000-	9
A 1389 R	Gear, Final Drive.....	AO-1000-	10
AA 520 R	Oil Seal, Rear Axle, Inner Bearing.....	AO-1000-	9
AA 665 R	Felt Washer, Rear Axle.....	AO-1000-	9
AA 1266 R	Housing, A1600 R, with Bearing Cups and Oil Seal, Rear Axle.....	AO-1000-	10
AA 1270 R	Shaft, Rear Axle, R. H.....	AO-1000-	9
AA 1271 R	Shaft, Rear Axle, L. H.....	AO-1000-	9
AA 2049 R	Cover, A1686 R, Rear Axle Housing with Plug.....	AO-1000-	10
C 719 R	Stud, Rear Axle Housing to Case.....	AO-1000-	10
C 1533 R	Dowel Pin, Rear Axle Housing to Transmission Case.....	AO-1000-	10
E 625 R	Pipe Plug, Rear Axle Housing Drain.....	AO-1000-	10
E 2244 R	Pipe Plug, Rear Axle Housing Oil Filler.....	AO-1000-	10
JD 7245 R	Cone with Rollers, Rear Axle Bearing.....	AO-1000-	9
JD 7296 R	Cup, Rear Axle Bearing.....	AO-1000-	9
JD 7760	Alemite Fitting, No. 1612.....	AO-1000-	10
<b>REAR WHEELS</b>			
AA 917 R	Rim, Demountable, for A1272 R and B694 R Cast Wheels and 11.25x24" or 12.75x24" Rubber Tires.....	AO-1000-	11
AA 933 R	Wheel, Rear, Cast A1272 R, with Demountable Rim (For 11.25x24" or 12.75x24" Rubber Tires).....	AO-1000-	11
AA 1087 R	Wheel, Rear, Cast, A1272 R, with Studs and Nuts (For 11.25x24" or 12.75x24" Rubber Tires).....	AO-1000-	11
AB 823 R	Wheel, Rear, Cast, B694 R, with Studs and Nuts (For 12.75x24" Rubber Tires).....	AO-1000-	11
AB 834 R	Wheel, Rear, Cast, B694 R, with Demountable Rim (For 12.75x24" Rubber Tires).....	AO-1000-	11
C 1716 R	Bolt, Rear Wheel.....	AO-1000-	11
D 2526 R	Clamp, Rim, for Cast Rear Wheel.....	AO-1000-	11
D 2882 R	Stud, Rim Clamp to Rear Wheel, 3/4"x3-1/4".....	AO-1000-	11
JD 1217 R	Wheel, Rear, 42-3/4"x10" Flat Tire.....	AO-1000-	11
<b>REAR WHEEL EQUIPMENT</b>			
1706 R	Washer, Button Lug.....	AO-1000-	10
A 1062 R	Support, Rear Wheel to Road Band Support.....	AO-1000-	11
A 1298 R	Lug, Spud.....	AO-1000-	10
AC 649 R	Lug, Cast, Cone.....	AO-1000-	10
AC 918 R	Road Band with Support.....	AO-1000-	10
C 368 R	Lug, Cast, R. H.....	AO-1000-	10
C 369 R	Lug, Cast, L. H.....	AO-1000-	10
C 744 R	Washer, Rear Wheel to Road Band Support Bolt.....	AO-1000-	11
C 1027 R	Extension Rim, Rear Wheel, 6".....	AO-1000-	11
C 1030 R	Clip, Rear Wheel Extension Rim.....	AO-1000-	11
C 1294 R	Grouser, Meadow (Channel), R. H.....	AO-1000-	10
C 1295 R	Grouser, Meadow (Channel), L. H.....	AO-1000-	10
C 1517 R	Bolt, Sand Lug.....	AO-1000-	10
C 1646 R	Lug, Button.....	AO-1000-	10
C 2147 R	Support for AC918 R Road Band.....	AO-1000-	11
C 2199 R	Lug, Sand.....	AO-1000-	10
D 233 R	Lug, Spade, 4" High.....	AO-1000-	10
D 530 R	Grouser (2-1/4"x2-1/4"x5/16"x22"), R. H.....	AO-1000-	10
D 531 R	Grouser (2-1/4"x2-1/4"x5/16"x22"), L. H.....	AO-1000-	10
D 574 R	Grouser (2-1/4"x2-1/4"x5/16"x16"), R. H.....	AO-1000-	10
D 575 R	Grouser (2-1/4"x2-1/4"x5/16"x16"), L. H.....	AO-1000-	10
D 576 R	Grouser (4"x3"x3/8"x16"), R. H.....	AO-1000-	10
D 577 R	Grouser (4"x3"x3/8"x16"), L. H.....	AO-1000-	10
D 578 R	Grouser (4"x3"x3/8"x22"), R. H.....	AO-1000-	10
D 579 R	Grouser (4"x3"x3/8"x22"), L. H.....	AO-1000-	10
D 938 R	Washer, Spade Lug—Sand Lugs.....	AO-1000-	10
D 938 R	Washer, Support to Support Bolts.....	AO-1000-	10
D 1078 R	Lug, Spade (5" High).....	AO-1000-	10
D 1283 R	Lug, Spade, A-Shape (5" High).....	AO-1000-	10
D 2121 R	Lug, Spade, Heavy Duty (5" High).....	AO-1000-	10
D 2447 R	Lug, Spade, Heavy Duty (4" High).....	AO-1000-	10
D 2629 R	Washer, Wheel Weight Bolt (1-7/16" Outside Diameter, 25/32" Inside Diameter).....	AO-1000-	10

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>DIFFERENTIAL BRAKES</b>			
A 134 R	Pin, Brake Adjusting	AO-1000-	12
A 149 R	Roller, Brake Shoe	AO-1000-	12
A 151 R	Screw, Brake Adjusting	AO-1000-	12
A 152 R	Shaft, Brake Lever	AO-1000-	12
A 321 R	Cam, Brake	AO-1000-	12
A 348 R	Spring, Brake Shoe	AO-1000-	12
A 413 R	Gasket, Brake Housing to Transmission Case	AO-1000-	12
A 441 R	Lining, Brake Shoe	AO-1000-	12
A 510 R	Guard, Brake Shaft Dust (Outer)	AO-1000-	12
A 1162 R	Pinion, Brake Shaft	AO-1000-	12
A 1163 R	Bushing, Brake Shaft (Outer)	AO-1000-	12
A 1168 R	Washer, Brake Shaft Pinion	AO-1000-	12
A 1169 R	Bushing, Brake Shaft (Inner)	AO-1000-	12
A 1610 R	Pedal, Brake, R. H.	AO-1000-	12
A 1611 R	Pedal, Brake, L. H.	AO-1000-	12
A 2299 R	Washer on Brake Shoe Roller Pin	AO-1768-	12
AA 314 R	Brake Shoe with Lining	AO-1000-	12
AA 807 R	Brake Drum with Shaft, R. H.	AO-1000-	12
AA 811 R	Oil Cup, Outer Brake Shaft Bearing	AO-1000-	12
AA 1277 R	Housing, Brake, A1608 R, R. H., with Bushing and Oiler	AO-1000-	12
AA 1278 R	Housing, Brake, A1609 R, L. H., with Bushing and Oiler	AO-1000-	12
AA 1281 R	Brake Drum with Shaft, L. H.	AO-1000-	12
AA 2124 R	Brake Shoe Roller with Washer (Substitute for A345 R)	AO-1000-	12
B 639 R	Latch, Brake	AO-1000-	12
C 485 R	Clip, Brake Lever Spring	AO-1000-	12
C 1224 R	Spring, Brake Pedal	AO-1000-	12
D 136 R	Washer, Brake Shaft	AO-1000-	12
<b>FRONT AXLE AND FRONT END SUPPORT</b>			
A 955 R	Pin, Front Axle Pivot	AO-1000-	12
A 1674 R	Front Axle	AO-1000-1826	12
A 1678 R	Support, Front End	AO-1000-	12
A 2504 R	Front Axle	AO-1827-	12
AA 1285 R	Radius Rod with Pivot	AO-1000-1826	12
AA 2455 R	Radius Rod with Pivot	AO-1827-	12
AD 1381 R	Knuckle, Front Wheel, with Bushings, Studs and Dust Excluders	AO-1000-	12
B 817 R	Pin, Front Axle Pivot Pin to Front End Support	AO-1000-	12
D 486 R	Bushing, Radius Rod Pivot	AO-1000-	12
D 843 R	Stud, Radius Rod Pivot	AO-1000-	12
D 844 R	Washer, Radius Rod Pivot	AO-1000-	12
D 1250 R	Washer, Spindle Pin	AO-1000-	12
D 1881 R	Dust Cap, Knuckle	AO-1000-	12
D 1888 R	Bushing, Front Wheel Knuckle (4 used)	AO-1000-	12
D 1898 R	Stud, Steering Arm (4 used)	AO-1000-	12
D 2638 R	Dust Excluder, Front Wheel	AO-1000-	12
JD 7759	Alemite Fitting, No. 1610, Front Axle, 1/8"	AO-1000-	12
JD 7760	Alemite Fitting, No. 1612, in Radius Rod Pivot	AO-1000-	12
<b>FRONT WHEELS AND FRONT WHEEL EQUIPMENT</b>			
27 R	Washer, on Weight to Wheel Bolts (Disk Type)	AO-1000-	13
A 1556 R	Gasket, Front Wheel Hub Cap (Disk Type)	AO-1000-	13
A 1828 R	Hook Bolt, for Front Wheel Weight	AO-1000-	13
AA 663 R	Felt Washer, Front Wheel	AO-1000-	13
AA 1395 R	Hub, A1557 R, Front Wheel, with Bearing Cups (Disk Type)	AO-1000-	13
AA 1407 R	Hub Cap, A1555 R, with Alemite Fitting, No. 1610 (Disk Type)	AO-1000-	13
AC 119 R	Hub Cap, C167 R, with Oil Fitting	AO-1000-	13
AC 1062 R	Front Wheel, with Bearing Cups and Hub Cap (For 6.00x16" Rubber Tires)	AO-1000-	13
AD 452 R	Nut, Front Wheel Bearing	AO-1000-	13
AD 900 R	Front Wheel with Hub Cap and Bearing Cups	AO-1000-	13
C 677 R	Gasket, Front Wheel Hub Cap	AO-1000-	13
D 582 R	Rim, Front Wheel Extension (5" Wide)	AO-1000-	13
D 583 R	Clamp, Front Wheel Extension Rim to Wheel	AO-1000-	13
D 584 R	Washer, Front Wheel Extension Rim Clamp	AO-1000-	13
D 635 R	Felt Retainer, Front Wheel	AO-1000-	13
D 827 R	Washer, on Hook Bolt (Spoke Type)	AO-1000-	13
D 849 R	Band, Front Wheel Guide (Half) (4") (2 used per Wheel)	AO-1000-	13
D 1050 R	Band, Front Wheel Guide (Half) (3-1/2" High) (2 used per Wheel)	AO-1000-	13
D 1524 R	Band, Front Wheel Guide (2-1/2" High)	AO-1000-	13
D 1551 R	Clamp, Front Wheel Weight	AO-1000-	13
JD 15 R	Bolt, Front Wheel Hub (Disk Type)	AO-1000-1735	13
JD 17 R	Bolt, Front Wheel Hub (Disk Type)	AO-1735-	13
JD 1232 R	Disk and Rim, Front Wheel (For 6.00x16" Rubber Tires)	AO-1000-	13
JD 7216 R	Cone with Rollers, Front Wheel, Outside Bearing	AO-1000-	13

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>FRONT WHEELS AND FRONT WHEEL EQUIPMENT</b>			
—Continued			
JD 7224 R	Cone with Rollers, Front Wheel, Inside Bearing.....	AO-1000-	13
JD 7266 R	Cup, Front Wheel, Outside Bearing.....	AO-1000-	13
JD 7270 R	Cup, Front Wheel, Inside Bearing.....	AO-1000-	13
JD 7759	Alemite Fitting, No. 1610, Front Wheels.....	AO-1000-	13
<b>STEERING PARTS</b>			
294 R	Stud, Steering Housing to Case, 1/2"x1-11/16".....	AO-1000-	14
A 934 R	Tube, Vertical Steering Shaft.....	AO-1000-	14
A 936 R	Bushing, Steering Gear Shaft, Lower.....	AO-1000-	14
A 940 R	Arm, Steering Gear.....	AO-1000-	14
A 946 R	Bracket, Steering Shaft Bearing.....	AO-1000-1214	3
A 1676 R	Tie Rod.....	AO-1000-	14
A 1677 R	Steering Arm, R. H.....	AO-1000-	14
A 1730 R	Housing, Steering Worm.....	AO-1000-	14
A 1731 R	Gasket, Steering Worm Housing, Thin.....	AO-1000-	14
A 1732 R	Gasket, Steering Worm Housing, Thick.....	AO-1000-	14
A 1733 R	Housing, Steering Gear.....	AO-1000-	14
A 1734 R	Gear, Steering Worm.....	AO-1000-	14
A 1736 R	Support, Steering Shaft, Rear.....	AO-1000-	3
A 1795 R	Bracket, Steering Shaft Bearing.....	AO-1215-	3
A 2215 R	Washer on Steering Gear Shaft.....	AO-1000-	14
AA 380 R	Steering Wheel.....	AO-1000-	14
AA 567 R	Shaft with Steering Worm, Steering.....	AO-1000-	14
AA 971 R	Drag Link, Complete.....	AO-1000-	14
AA 1605 R	Shaft, Steering Gear Vertical.....	AO-1000-	14
AB 214 R	Bearing, B36 R, with Bushing, Steering Shaft, Upper.....	AO-1000-	3
B 37 R	Bearing, Steering Shaft, Upper.....	AO-1000-	3
C 838 R	Bearing, Ball Stud, Drag Link and Tie Rod.....	AO-1000-	14
C 840 R	Screw Plug, Drag Link and Tie Rod.....	AO-1000-	14
C 977 R	Adjusting Screw, Steering Gear Shaft.....	AO-1000-	14
C 1109 R	End, Tie Rod.....	AO-1000-	14
C 1220 R	Dowel Pin, Steering Housing.....	AO-1000-	14
D 156 R	Taper Bolt, Steering Knuckle Pivot Pin.....	AO-1000-	12
D 342 R	Key, Steering Wheel.....	AO-1000-	14
D 1674 R	Steering Arm, L. H.....	AO-1000-	14
D 1701 R	Spindle Pin.....	AO-1000-	12
D 1766 R	Adjusting Nut, Steering Worm.....	AO-1000-	14
D 1768 R	Washer, Oil Seal and Steering Worm Adjusting Nut.....	AO-1000-	14
D 1898 R	Stud, Steering Arm (4 used).....	AO-1000-	12
JD 7205 R	Cone with Rollers, Steering Worm.....	AO-1000-	14
JD 7253 R	Cup, Steering Worm Bearing.....	AO-1000-	14
JD 7759	Alemite Fitting, No. 1610, Steering Worm Housing and Vertical Shaft, Lower Bushing.....	AO-1000-	14
JD 7759	Alemite Fitting, No. 1610, in Drag Link and Tie Rod.....	AO-1000-	14
<b>DRAWBAR</b>			
A 334 R	Nut, Drawbar Clevis (Special).....	AO-1000-	14
A 507 R	Pin, Drawbar Roller.....	AO-1000-	14
A 850 R	Roller, Drawbar.....	AO-1000-	14
A 1739 R	Clevis, Drawbar.....	AO-1000-	14
A 1740 R	Pin, Drawbar Indexing.....	AO-1000-	14
A 1741 R	End, Drawbar.....	AO-1000-	14
A 1746 R	Brace, Drawbar Support.....	AO-1000-	14
AA 1353 R	Drawbar, Complete.....	AO-1000-	14
AA 1355 R	Support, Drawbar, with Brake Lever Pivot.....	AO-1000-	14
B 111 R	Washer, on Drawbar to Front Support Bolt.....	AO-1000-	14
<b>SEAT</b>			
1706 R	Washer on Seat to Seat Support Bolt.....	AO-1768-	14
A 333 R	Nut, Seat Spring Bolt (Special).....	AO-1000-	14
A 618 R	Spring, Seat.....	AO-1000-	14
A 619 R	Bolt, Seat Spring (9" Long).....	AO-1000-	14
A 1687 R	Channel, Seat Support (Substitute AA3003 R).....	AO-1000-	14
A 2298 R	Spacer, Seat Bolt.....	AO-1768-	14
A 2545 R	Bracket, Seat Spring.....	AO-1829-	14
AA 3003 R	Seat Support with Spring Bracket (Substitute for A1687 R).....	AO-1000-	14
AD 1606 R	Seat.....	AO-1000-	14
B 845 R	Strap, Seat Channel Stop.....	AO-1000-	14
B 847 R	Strap, Seat Spring Bolt.....	AO-1000-	14
C 1980 R	Pin, Channel Seat Support.....	AO-1000-	14
C 1982 R	Washer, Seat Spring.....	AO-1000-	14
C 1985 R	Spacer, Seat Clamp.....	AO-1000-1767	14
D 1797 R	Nut, Seat Clamp.....	AO-1000-1767	14

## JOHN DEERE MODEL "AO" TRACTOR

15

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>PLATFORM</b>			
A 1688 R	Platform	AO-1000-1828	
A 1689 R	Support, Platform, R. H.	AO-1000-1828	15
A 1690 R	Support, Platform, L. H.	AO-1000-1828	15
A 1691 R	Cross Angle, Fender	AO-1000-1828	15
A 2532 R	Platform	AO-1829-	16
A 2538 R	Support, Platform, R. H.	AO-1829-	15
A 2539 R	Support, Platform, L. H.	AO-1829-	15
A 2540 R	Support Angle, Fender, R. H.	AO-1829-	16
A 2541 R	Support Angle, Fender, L. H.	AO-1829-	16
A 2542 R	Safety Shield	AO-1829-	16
AA 1330 R	Platform with Support and Cross Angle	AO-1000-1828	15
AA 3001 R	Platform with Support Angles	AO-1829-	16
<b>COWL AND FENDERS</b>			
27 R	Washer, Fender Side to Platform Support Bolt, R. H. and L. H.	AO-1000-	15
27 R	Washer, Fender Crown to Platform Cross Angle Bolt, R. H. and L. H.	AO-1000-	15
629 R	Washer, on Cowl Fastening Screw	AO-1000-	15
A 1692 R	Dust Shield, R. H.	AO-1000-	17
A 1693 R	Dust Shield, L. H.	AO-1000-	17
A 1694 R	Dust Shield Extension, R. H.	AO-1000-	17
A 1695 R	Dust Shield Extension, L. H.	AO-1000-	17
A 1711 R	Wing Nut, for Cowl Fastener	AO-1000-	15
A 1724 R	Pin, Cowl Hinge	AO-1000-	15
A 1726 R	Fastener, Cowl	AO-1000-	15
A 1728 R	Hinge, Cowl, Rear Half	AO-1000-	15
A 1785 R	Spring, Citrus Fender Front Fastener Pivot	AO-1691-	17
A 1874 R	Bracket, Citrus Fender	AO-1000-	
A 1879 R	Brace, Citrus Fender, R. H.	AO-1000-	
A 1887 R	Brace, Citrus Fender, L. H.	AO-1000-	
A 1953 R	Spacer, Citrus Fender Rear Bracket	AO-1000-	
AA 1331 R	Fender, with Brace, R. H.	AO-1000-	17
AA 1332 R	Fender, with Brace, L. H.	AO-1000-	17
AA 1337 R	Brace, Fender, R. H. Front, with Strut	AO-1000-	17
AA 1338 R	Brace, Fender, L. H. Front, with Strut	AO-1000-	17
AA 1343 R	Guard and Front Support, Pulley	AO-1000-	17
AA 1344 R	Guard and Front Support, Flywheel	AO-1000-	17
AA 1345 R	Cowl, Complete	AO-1000-	15
AA 1346 R	Channel with Hinge Half, Cowl	AO-1000-	15
AA 1347 R	Cowl Angle with Fastener	AO-1000-	15
AA 1366 R	Lock, Citrus Fender Flywheel Guard	AO-1000-1690	
AA 1564 R	Citrus Fender, R. H., with Pulley Guard	AO-1000-	
AA 1565 R	Citrus Fender, L. H., with Flywheel Guard	AO-1000-	
AA 1569 R	Bottom Brace with End, Citrus Fender, R. H.	AO-1000-	
AA 1570 R	Bottom Brace with End, Citrus Fender, L. H.	AO-1000-	
AA 1743 R	Bail and Pivot, Citrus Fender Front Fastener	AO-1691-	17
D 2379 R	Wing Nut on Citrus Fender Pulley Guard to Front Support Bolts	AO-1000-1690	17
K 3151 R	Washer on R. H. Fender and Pulley Guard Assemblies	AO-1000-	17
K 3151 R	Washer on L. H. Fender and Flywheel Guard Assembly	AO-1000-	17
K 3151 R	Washer on L. H. Dust Shield to Tool Box Bolt	AO-1000-	17
<b>MAGNETO, SPARK PLUG AND CABLES</b>			
629 R	Washer, Magneto to Governor Case	AO-1000-	18
A 470 R	Clamp, Spark Plug Cable	AO-1000-	18
A 471 R	Clip, Spark Plug Cable	AO-1000-	18
A 500 R	Gasket, Magneto to Governor Case	AO-1000-	18
A 2303 R	Flange, Magneto Drive	AO-1850-	3
AA 1084 R	Porcelain for AC600 R Spark Plug (Champion No. 2)	AO-1000-	18
AA 1225 R	Cable, Spark Plug, Complete L. H. with Safety Nipple	AO-1000-1524	18
AA 1225 R	Cable, Spark Plug, Complete R. H. with Safety Nipple	AO-1725-1849	18
AA 1890 R	Cable, Spark Plug, L. H.	AO-1850-	18
AA 2044 R	Spark Plug (Edison-Splitdorf)	AO-1000-	18
AB 336 R	Conduit, Spark Plug Cable	AO-1000-	18
AB 706 R	Magneto, Complete (Fairbanks Morse Type RV2 B) (Substitute either AB757 R or AD1400 R)	AO-1000-1524	
AB 757 R	Magneto, Complete (Wico Type AP477 B)	AO-1725-1849	18
AB 829 R	Cable, Spark Plug, R. H.	AO-1850-	18
AB 829 R	Cable, Spark Plug, Complete, R. H.	AO-1000-1524	18
AC 600 R	Spark Plug (Champion)	AO-1000-	18
AD 1400 R	Magneto (Edison-Splitdorf Type CD 2)	AO-1525-1724	18
AD 1415 R	Cable, Spark Plug, L. H.	AO-1525-1724	18
AD 1454 R	Cable, Spark Plug, R. H.	AO-1525-1724	18
AD 1498 R	Cable, Spark Plug, L. H., with Safety Nipple	AO-1725-1849	18
AH 653 R	Magneto, Complete (Wico Type C)	AO-1850-	18

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>MAGNETO, SPARK PLUG AND CABLES—Continued</b>			
B 281 R	Flange, Magneto Drive.....	AO-1000-1849	3
B 465 R	Clamp, Spark Plug Cable Conduit.....	AO-1000-	18
C 1300 R	Nipple, Spark Plug Cable, Rubber.....	AO-1000-1524	18
D 465 R	Gasket, Spark Plug.....	AO-1000-	18
D 2808 R	Gauge, Magneto Contact Point (Edison-Splitdorf).....	AO-1525-1724	18
Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
<b>AB706 R MAGNETO PARTS (FAIRBANKS MORSE TYPE DRY2B)</b>			
A 692 R	Insulating Strip, Distributor Bearing.....	56577-	19
A 695 R	Gasket, Brush Holder.....	56577-	19
A 698 R	Nut, Primary Lead.....	56577-	19
A 698 R	Nut, Stationary Contact Support Screw.....	56577-	19
A 700 R	Snap Ring, Distributor Shaft.....	56577-	19
A 701 R	Screw, Bridge Clamp.....	56577-	19
A 702 R	Cork Washer, Distributor Bearing Oil Seal.....	56577-	19
A 702 R	Cork Washer, Rotor Shaft Bearing.....	56577-	19
A 703 R	Retainer, Distributor Bearing Oil Seal Washer.....	56577-	19
A 704 R	Flat Washer, Distributor Bearing.....	56577-	19
A 705 R	Screw, Distributor Rotor.....	56577-	19
A 705 R	Screw, Breaker Bar Clip.....	56577-	19
A 706 R	Snap Ring, Distributor Bearing Cup.....	56577-	19
A 707 R	Spacer, Distributor Bearing Cup.....	56577-	19
A 708 R	Lock Nut, Stationary Contact Screw and Point.....	56577-	19
A 709 R	Screw, Stationary Contact Support.....	56577-179114	19
A 710 R	Support, Stationary Contact.....	56577-179114	19
A 712 R	Insulator, Stationary Contact Support.....	56577-179114	19
A 715 R	Pin, Breaker Arm Fulcrum.....	56577-	19
A 716 R	Insulating Strip, Rotor Bearing.....	56577-	19
A 717 R	Insulating Washer, Rotor Bearing.....	56577-	19
A 718 R	Terminal, Primary Lead Wire.....	56577-	19
A 719 R	Shell, Impulse Coupling.....	136200-	19
A 721 R	Retainer, Rotor Shaft Bearing Cork Washer.....	56577-	19
A 722 R	Gear, Rotor.....	56577-	19
A 723 R	Key, Woodruff, Distributor Shaft.....	56577-	19
A 766 R	Lock Washer, Breaker Bar Clip Screw.....	56577-	19
A 766 R	Lock Washer, Stationary Contact Support Screw.....	56577-	19
A 766 R	Lock Washer, Primary Lead Nut.....	56577-	19
A 766 R	Lock Washer, Distributor Rotor Screw.....	56577-	19
A 766 R	Lock Washer, Condenser Screw.....	56577-	19
A 767 R	Lock Washer, Frame Cover Screw.....	56577-	19
A 767 R	Lock Washer, Brush Holder Screw.....	56577-	19
A 768 R	Lock Washer, End Cap Screw.....	56577-	19
A 768 R	Lock Washer, Bridge Clamp Screw.....	56577-	19
A 769 R	Screw, End Cap.....	56577-	19
A 770 R	Gasket, End Cap.....	56577-	19
A 894 R	Pin, Rotor Gear.....	56577-	19
A 1102 R	Rivet, Stationary Contact Support.....	56577-	19
A 1103 R	Insulator, Stationary Contact Support Rivet.....	56577-	19
A 1104 R	Insulator, Stationary Contact Support Screw.....	56577-	19
AA 414 R	Brush Holder, less Brush.....	56577-	19
AA 415 R	Distributor Brush with Spring.....	56577-	19
AA 415 R	Collector Brush with Spring.....	56577-	19
AA 416 R	Bridge Clamp with Rivet.....	56577-	19
AA 417 R	Coil Assembly.....	56577-	19
AA 419 R	Distributor Bearing, Complete.....	56577-	19
AA 419 R	Rotor Shaft Bearing, Complete.....	56577-	19
AA 422 R	Distributor Shaft with Gear.....	56577-	19
AA 424 R	End Cap Assembly.....	56577-179114	19
AA 425 R	Condenser with Lead Wire.....	56577-	19
AA 428 R	Primary Lead Wire with Terminals.....	56577-	19
AA 1624 R	Rubbing Block Wick and Retainer.....	56577-	19
AA 2059 R	Breaker Point Assembly (1 AA418 R and 1 AA423 R).....	56577-	19
AB 379 R	Brush, Collector, with Spring.....	56577-	19
AB 380 R	Distributor Shaft with Gear.....	56577-	19
AB 383 R	Rotor Assembly with Gear, but without Bearings.....	56577-	19
AB 384 R	Frame Assembly with Lead Wire.....	56577-	19
AB 386 R	Impulse Coupling Shell with Spring Clip.....	56577-136199	19
AB 707 R	Impulse Drive Member with Fawls.....	56577-136199	19
AB 1084 R	End Cap Assembly.....	179115-	19

## JOHN DEERE MODEL "AO" TRACTOR

17

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
<b>AB706 R MAGNETO PARTS—Continued</b> <b>(FAIRBANKS MORSE TYPE DRY2B)—Continued</b>			
AB 1085 R	Impulse Drive Member with Pawls	136200-	19
B 507 R	Screw, Frame Cover	56577-	19
B 508 R	Cover, Frame Top	56577-	19
B 509 R	Gasket, Frame Top Cover (Cork)	56577-	19
B 510 R	Screw, Brush Holder	56577-	19
B 514 R	Screw, Condenser	56577-	19
B 515 R	Oil Seal Cork, Armature to Frame	56577-	19
B 516 R	Nut, Impulse Coupling	56577-136199	19
B 517 R	Spring, Impulse Coupling	56577-136199	19
B 518 R	Holder, Oil Wick	56577-	19
B 519 R	Wick, Cam Oiler	56577-	19
B 520 R	Lock Washer, Cam Oil Wick Holder	56577-	19
B 521 R	Clip, Impulse Coupling Spring	56577-	19
B 522 R	Rivet, Impulse Coupling Spring Clip	56577-	19
B 523 R	Shim, Rotor Bearing (Copper, .002" Thick)	56577-	19
B 524 R	Shim, Rotor Bearing (Copper, .004" Thick)	56577-	19
B 525 R	Shim, Rotor Bearing (Copper, .006" Thick)	56577-	19
B 594 R	Stop Screw, Impulse	56577-	19
B 595 R	Rivet, Impulse Pawl	56577-	19
B 977 R	Support, Stationary Contact	179115-	19
B 978 R	Insulator, Stationary Contact Support	179115-	19
B 979 R	Screw, Stationary Contact Support	179115-	19
B 980 R	Nut, Impulse Coupling	136200-	19
C 1330 R	Wire, Impulse Lock	56577-	19
C 1333 R	Drive Spring, Impulse Coupling	136200-	19
C 1334 R	Pawl, Impulse Drive Member	56577-	19
C 1335 R	Key, Woodruff, Impulse Coupling	56577-	19
<b>AD1400 R MAGNETO PARTS</b> <b>(Edison-Splitdorf Type CD Flange Mounted)</b>			
62	Nut, Breaker Bar Terminal (Was D2723 R)	100-	20
62	Nut, Condenser Lead Wire (Was D2723 R)	100-	20
72	Key, Distributor Gear (Was D2727 R)	100-	20
72	Key, Pinion Gear (Was D2727 R)	100-	20
515	Hex. Nut, Ground Terminal (Was D2725 R)	100-	20
1212	Screw, Front Cover (Was D1145 R)	100-	20
2635	Connection Clip, Ground Outside (Was D2688 R)	100-	20
3055	Lock Washer, Front Bearing Plate Screw (Was D2720 R)	100-	20
3055	Lock Washer, Distributor Shaft Screw (Was D2720 R)	100-	20
3055	Lock Washer, Ground Terminal Screw (Was D2720 R)	100-	20
3055	Lock Washer, Pinion Gear Screw (Was D2720 R)	100-	20
3398	Washer, Ground Stud (Was D2716 R)	100-	20
3722	Screw, Rear Bearing Oil Hole Plug (Was D2675 R)	100-	20
3794	Lock Washer, Breaker Bar Spring Screw (Was C1324 R)	100-	20
6140	Washer, Insulating, Breaker Bar Terminal Screw (Was D2712 R)	100-	20
6214	Distributor Brush with Spring (Was AD1524 R)	100-41756	20
6763	Washer, Oil Seal (Impulse End) (Leather)	45540-	20
6822	Plate, Impulse with Stop Pin (Substitute for AD1543 R)	100-	20
7316	Shell, Impulse Coupling, with Spring Locating Pin (Was AD1541 R)	100-	20
7334A	Impulse Drive Member (Was AD1531 R)	100-	20
7340	Screw, Stop Pin Plate (Was D2709 R)	100-	20
7343	Washer, Notched Impulse Coupling Nut (Was D2717 R)	100-	20
7344	Hex. Nut, Impulse Starter (Was D2726 R)	100-	20
7347	Spring, Impulse Coupling, with Felt (Was AD1542 R)	100-	20
7348	Felt, Impulse Drive Member (Was D2667 R)	100-	20
7349	Pawl, Impulse Coupling (Was D2718 R)	100-	20
7350	Washer, Impulse Stop Lever (Was D2719 R)	100-	20
7351	Snap Ring, Impulse Pawl (Was D2666 R)	100-	20
7366	Button, Centering, Impulse Spring (Was D2696 R)	100-	20
7523	Insulation, Ground Terminal Connector (Was D2687 R)	100-	20
7524	Felt Washer, Rotor Bearing, Impulse End (Was D2673 R)	100-	20
7535	Cap, Magnet Screw (Was D2698 R)	100-	20
7571	Washer, Insulating, Ground Stud Outside (Was D2715 R)	100-	20
7572	Screw, Magnet (Was D2710 R)	100-	20
7593	Insulator, Coil (Top) (Was D2684 R)	100-	20
7595	Insulator, Coil (Bottom) (Was D2685 R)	100-	20
7606	Lead Wire, Coil to Ground (Was AD1528 R)	100-	20
7616	Gasket, Timing Slot (Was D2671 R)	100-	20
7617	Stud, Ground Terminal (Was D2708 R)	100-	20
7717	Insulator, Coil Lead (Was D2686 R)	100-	20
7775	Terminal, Ground, Primary and Condenser Lead Wire (Was D2665 R)	100-	20
16640	Screw, Breaker Bar Spring (Was D2700 R)	100-	20

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
<b>AD1400 R MAGNETO PARTS—Continued</b>			
<b>(Edison-Splitdorf Type CD Flange Mounted)—Continued</b>			
16756	Screw, Coil Clamp (Was D2707 R).....	100—	20
17394	Screw, Timing Slot (Was D2672 R).....	100—	20
18309	Screw, Distributor Shaft (Was D2706 R).....	100—	20
18309	Screw, Rotor and Distributor Gears (Was D2706 R).....	100—	20
29335	Washer, Breaker Bar Terminal Screw (Brass) (Was D2713 R).....	100—	20
29411	Washer, Distributor Gear (Was D2714 R).....	100—	20
29411	Washer, Rotor Pinion (Was D2714 R).....	100—	20
29555	Lock Washer, Magnet Screw (Was D2722 R).....	100—	20
29631	Screw, Breaker Terminal (Was 2705 R).....	100—	20
30537	Lock Washer, Impulse Shaft (Was D2721 R).....	100—	20
35207	Screw, Distributor Bearing Oil Hole (Was D2692 R).....	100-18567	20
35251	Screw, Breaker Base Plate (Was D2704 R).....	100—	20
35252	Screw, Contact Bracket Holding (Long) (Was D2703 R).....	100—	20
51202	Rotor Assembly (Was AD1540 R).....	100—	20
51209	Plate, Front Bearing (Was D2691 R).....	100—	20
*51226	Breaker Point Assembly (51274 with 51275) (Was AD1535 R, with AD1536 R).....	100—	20
51227	Thumb Nut, Distributor Block (Was D2660 R).....	100—	20
51229	Pinion, Rotor (Was D2690 R).....	100—	20
51230	Gear, Distributor (Was D2680 R).....	100—	20
51231	Adjusting Plate, Breaker Bar (Was D2677 R).....	100—	20
51233	Clamp, Coil (Was D2683 R).....	100—	20
51234	Rotor Bearing (Was AD1539 R).....	100—	20
51236	Magnet (Was D2697 R).....	100—	20
51237	Oil Hole Plug (Was D2669 R).....	100—	20
51244	Nut, Breaker Terminal (Special Round) (Was D2724 R).....	100—	20
51252	Collar, Distributor Gear Spacing (Was D2681 R).....	100—	20
51253	Distributor Bearing (Was AD1537 R).....	100—	20
51254	Gasket, Front Cover (Was D2663 R).....	100—	20
51255	Dowel Pin, Front Cover (Was D2664 R).....	100—	20
51256	Insulation, Breaker Stud (Was D2679 R).....	100—	20
51257	Terminal Bracket, Breaker Bar Spring (Was D2678 R).....	100—	20
51266	Retainer, Felt Washer Rotor Bearing (Was D2674 R).....	100—	20
51267	Gasket, Distributor Block (Was D2662 R).....	100—	20
51271	Disk, Safety Gap (Was D2676 R).....	100—	20
51272	Screw, Contact Bracket Pivot (Was D2701 R).....	100—	20
51273	Washer, Contact Bracket (Was D2711 R).....	100—	20
51283	Distributor Cam and Shaft (Was D2682 R).....	100—	20
51285	Wire, Condenser Lead (Was AD1526 R).....	100—	20
51286	Wire, Breaker Lead (Was AD1530 R).....	100—	20
51287	Terminal Connector, Ground (Was D2689 R).....	100—	20
51301	Cover, Timing Slot (Was 2670 R).....	100—	20
51315	Wire, Primary Lead (Was AD1529 R).....	100—	20
51432	Coil Complete, with Primary and Ground Leads (Was AD1527 R).....	100—	20
51435	Sealing Cap, Main Bearing (Was D2693 R).....	100—	20
51436	Center Brush (Was AD1510 R).....	100—	20
51439	Front Cover, Gasket and Dowel Pin (Was AD1525 R).....	100—	20
51441	Condenser (Was AD1538 R).....	100—	20
51452	Distributor Block, Complete (Was AD1523 R).....	100—	20
51459	Coil Spring, Distributor Block, High Tension Contact (Was D2661 R).....	100—	20
51530	Housing, Magneto (Was AD1532 R).....	100—	20
51580	Cam Wiper and Bracket (Was AD1533 R).....	100—	20
51655	Washer, Distributor Bearing Seal (Was D2888 R).....	18568—	20
51656	Felt, Distributor Bearing, Seal (Was D2889 R).....	18568—	20
51664	Distributor Brush with Spring (Was AD1882 R).....	41757—	20
51666	Snap Ring, Distributor Bearing (Was D2937 R).....	42889—	20
51673	Distributor Rotor (Was AD1534 R).....	100—	20
53367	Screw, Connector Plate (Was D2702 R).....	100—	20
53367	Screw, Contact Bracket Holding (Short) (Was D2702 R).....	100—	20
63399	Shim, Rotor Bearing, .002" (Was D2694 R).....	100—	20
63400	Shim, Rotor Bearing, .003" (Was D2695 R).....	100—	20
63643	Screw, Distributor Block (Was D2699 R).....	100—	20
C 1335 R	Key, Rotor Shaft (Splitdorf 73).....	100—	20
C 1350 R	Lock Washer, Timing Slot Screw (Splitdorf 23149).....	100—	20
C 1350 R	Lock Washer, Condenser Lead (Splitdorf 23149).....	100—	20
C 1350 R	Lock Washer, Distributor Block Screw (Splitdorf 23149).....	100—	20
C 1350 R	Lock Washer, Breaker Bar Terminal Screw (Splitdorf 23149).....	100—	20
C 1350 R	Lock Washer, Coil Clamp Screw (Splitdorf 23149).....	100—	20
C 1350 R	Lock Washer, Ground Stud (Splitdorf 23149).....	100—	20
C 1350 R	Lock Washer, Front Cover Screw (Splitdorf 23149).....	100—	20
D 2213 R	Screw, Front Bearing Plate.....	100—	20

\*Set of points. For best results replace both points.  
Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
<b>AB757 R MAGNETO PARTS</b> (Wico Type AP477 B)			
1031	Nut, Pinion (Was B1082 R)	5867-	21
1083	Gasket, Gear Case (Was B1064 R)	5867-	21
1084B	Washer, Gear Case Sealing, Cork (Was B1041 R)	5867-	21
1085	Screw, Gear Case (Was B1093 R)	5867-	21
1092	Spring Drive (Was B1074 R)	5867-	21
1094	Trip Arm (Was B1075 R)	5867-	21
1098	Lock Nut, Impulse (Was B1072 R)	5867-	21
1110	Pad, Gear Case Oil (Was B1065 R)	5867-	21
1116	Gasket Cover (Was B1042 R)	5867-	21
1117	Screw Cover (Was B1044 R)	5867-	21
1118	Washer Cover Screw, Leather (Was B1045 R)	5867-	21
1121	Coil Contact (Was B1043 R)	5867-	21
1129	Gasket, End Plate (Was B1077 R)	5867-	21
1131	Seal, Drive Shaft Felt (Was B1078 R)	5867-	21
1146	Key Pinion Gear (Was B1083 R)	5867-	21
1147	Gear, Pinion (Was B1066 R)	5867-	21
1151	Disk, Oiling (Was B1067 R)	5867-	21
1152	Scraper, Oil (Was B1080 R)	5867-	21
1153	Spring, Oil Scraper (Was B1081 R)	5867-	21
1163	Bearing, Rotor (Was AB1226 R)	5867-	21
1165	Clip, Condenser (Was B1051 R)	5867-17866	21
1167	Stud, Cam (Was B1057 R)	5867-	21
1168	Wick, Cam Stud Oil (Was B1058 R)	5867-	21
1169	Pad, Cam Stud Oil (Was B1059 R)	5867-	21
1170	Support, Cam Stud Oil Pad (Was B1060 R)	5867-	21
1171	Pad, Main Oil (Was B1061 R)	5867-	21
1193	Block, Breaker Point Spring (Was AB1213 R)	5867-	21
1194	Pad, Cam Oil (Was B1038 R)	5867-	21
1197	Washer, Breaker Arm Spacing (Was B1087 R)	5867-	21
1197T	Shim, Breaker Arm Spacing Washer	5867-	21
1207	Washer, Breaker Arm Clamp (Was B1086 R)	5867-	21
1208	Washer, Friction (Was B1090 R)	5867-	21
1210	Clip, Distributor (Was B1039 R)	5867-	21
1216	Brush, Distributor (Was B1034 R)	5867-	21
1217	Spring, Distributor Brush (Was B1035 R)	5867-	21
1232	Clamp, Coil Core (Was B1069 R)	5867-	21
1418	Spacer, Breaker Arm (Was B1063 R)	5867-	21
1433B	Cup, Drive (Was B1108 R)	5867-	21
1434B	Plate, End (Was B1109 R)	5867-	21
1641	Screw, End Plate (Was B1094 R)	5867-	21
1729 R	Lock Washer, Pinion Nut	5867-	21
1730 R	Cotter Key, Impulse Lock Nut	5867-	21
1759	Plate, Coil Protecting (Was B1071 R)	5867-	21
1786	Nut, Condenser Lead (Was B1068 R)	5867-	21
1883	Gear Case Sealing Washer Cover (Was B1040 R)	5867-	21
2219	Gasket, Distributor Cap (Was B1106 R)	5867-	21
2236	Lock Washer, End Plate Screw (Was B1091 R)	5867-	21
2264B	Wedge, Coil (Was B1070 R)	5867-	21
2405	Support, Condenser (Was B1050 R)	5867-	21
2442	Clip, Condenser (Was B1271 R)	17867-	21
2443	Screw, Condenser Clip Drive (Was B1272 R)	17867-	21
A 178XA	Pivot, Trip Arm (Was B1054 R)	5867-	21
A 243X	Snap Ring, Trip Arm (Was B1076 R)	5867-	21
A 705 R	Screw, Breaker Arm Clamp	5867-	21
A 705 R	Screw, Breaker Arm Spring	5867-	21
A 705 R	Screw, Condenser Support	5867-	21
A 705 R	Screw, Breaker Plate	5867-	21
C 1320 R	Lock Washer, Gear Case Screw	5867-	21
C 1344 R	Lock Washer, Condenser Clip Nut	5867-	21
C 1344 R	Lock Washer, Condenser Lead Nut	5867-	21
C 1344 R	Lock Washer, Coil Contact Screw	5867-	21
C 1350 R	Lock Washer, Breaker Plate Screw	5867-	21
C 1350 R	Lock Washer, Breaker Arm Clamp Screw	5867-	21
C 1350 R	Lock Washer, Breaker Arm Spring Screw	5867-	21
C 1350 R	Lock Washer, Fixed Contact Screw	5867-	21
C 1350 R	Lock Washer, Condenser Support Screw	5867-	21
C 1350 R	Lock Washer, Coil Core Clamp Screw	5867-	21
IKA 761	Nut, Condenser Contact (Was B1048 R)	5867-	21
IXA 256	Washer, Cover Screw (Was B1047 R)	5867-	21
IXA 256	Washer, Fixed Contact Screw (Was B1047 R)	5867-	21
IXA 345	Oil Plug (Was B1107 R)	5867-	21



## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
<b>AB757 R MAGNETO PARTS—Continued</b> (Wico Type AP477 B)			
M 32XA	Condenser Contact Screw Insulating Bushing (Was B1053 R).....	5867-	21
M 71X	Nut, Condenser Clip (Was B1052 R).....	5867-17866	21
M 94X	Key, Impulse Coupling (Was B1084 R).....	5867-	21
M 126XB	Screw, Coil Core Clamp (Was B1092 R).....	5867-	21
M 127X	Washer, Condenser Insulating (Was B1049 R).....	5867-	21
M 155X	Screw, Coil Contact (Was B1046 R).....	5867-	21
X 1097	Driven Flange Group (Was AB1221 R).....	5867-	21
X 1122	Cover Assembly (Was AB1217 R).....	5867-	21
X 1134	Impulse Stop Group (Was AB1222 R).....	5867-	21
X 1145	Rotor Assembly (Was AB1223 R).....	5867-	21
X 1220	Ventilating Screen Group (Was AB1208 R).....	5867-	21
X 1230	Coil Core Group (Was AB1219 R).....	5867-	21
X 1331	Condenser to Breaker Lead Group (Was AB1225 R).....	5867-	21
X 1570	Cam Group (Was AB1216 R).....	5867-	21
X 2226	Distributor Arm Group (Was AB1210 R).....	5867-	21
X 2228	Distributor Cap (Was AB1230 R).....	5867-	21
X 2229	Secondary Interlead Group (Was AB1229 R).....	5867-	21
X 2231	Breaker Plate Assembly (Was AB1232 R).....	5867-	21
X 2237	Gear and Breaker Case Group (Was AB1231 R).....	5867-	21
X 2296	Main Housing Assembly (Was AB1224 R).....	5867-	21
X 2595	Condenser Assembly (Was AB1220 R).....	5867-	21
X 2770	Coil Unit (Was AB1218 R).....	5867-	21
X 3342	Breaker Point Assembly (X1205 and 1196) (Was AB1211 R and AB1214 R).....	5867-	21
X 3543	End Plate with Oil Seal.....	5867-	21
<b>AH653 R MAGNETO PARTS</b> (Wico Type C)			
15-186	Spring, Drive (Was H648 R).....	04600-	22
16-480	Lock Spring, Distributor Arm (Was H642 R).....	04600-	22
16-491C	Lock Nut, Impulse (Was H646 R).....	04600-	22
16-X477B	Distributor Arm with Spring (Was AH766 R).....	04600-	22
16-583	Washer, Drive Cup Spacing (Brass) (Was H649 R).....	04600-	22
16-738	Screw, Breaker Point (Was E214 R).....	04600-	22
16-738	Screw, Breaker Arm Spring (Was E214 R).....	04600-	22
1118	Washer, Cover Screw (Leather) (Was B1045 R).....	04600-	22
1118	Washer, Distributor Cap (Leather) (Was B1045 R).....	04600-	22
1152	Scraper, Oil (Was B1080 R).....	04600-	22
1153	Spring, Oil Scraper (Was B1081 R).....	04600-	22
1197	Washer, Breaker Arm Spacing (Was B1087 R).....	04600-	22
1197T	Shim Breaker Arm Spacing.....	04600-	22
1207	Washer, Breaker Arm Clamp (Was B1086 R).....	04600-	22
1379	Pad, Main Oil (Was E209 R).....	04600-	22
1383	Screw, Condenser (Was E215 R).....	04600-	22
1397	Coil Contact, Secondary Interlead (Was E221 R).....	04600-	22
1404	Screw, Secondary Interlead Contact (Was H664 R).....	04600-	22
1418	Spacer, Breaker Arm (Was B1063 R).....	04600-	22
1533	Gasket, Condenser Case (Was E216 R).....	04600-	22
1727A	Terminal, Primary Lead (Was H643 R).....	04600-	22
1760	Plate, Coil Protecting (Was E224 R).....	04600-	22
1814	Terminal, Primary Ground (Was H644 R).....	04600-	22
2061B	Cup, Drive (Was H647 R).....	04600-	22
2121	Spacer, Impulse (Was H654 R).....	04600-	22
2122	Spacer, Driven Flange (Was H653 R).....	04600-	22
2264B	Wedge, Coil (Was B1070 R).....	04600-	22
2288	Retainer, Drive Spring (Was H652 R).....	04600-	22
2495	Bushing, Rotor (Was H645 R).....	04600-	22
2496	Gasket, Impulse Stop (Was H655 R).....	04600-	22
2497	Gasket, Distributor Cap (Was H656 R).....	04600-	22
2503	Clamp, Coil Core (Was H658 R).....	04600-	22
2504	Gasket, Cover (Was H657 R).....	04600-	22
2505	Plate, Oil Pad Spring (Was H660 R).....	04600-	22
2537	Screw, Distributor Cap (Was H662 R).....	04600-	22
2538	Screw, Cover (Was H663 R).....	04600-	22
2641	Screw, Impulse Stop Group (Was H661 R).....	04600-	22
2745	Disk, Oiling (Was H659 R).....	04600-	22
A 33X	Oil Seal, Impulse (Was AH763 R).....	04600-	22
A 179X	Pawl, Impulse (Was H641 R).....	04600-	22
A 243X	Snap Ring, Trip Arm (Was B1076 R).....	04600-	22
A 705 R	Screw, Fixed Contact.....	04600-	22
C 1350 R	Lock Washer, Fixed Contact Screw.....	04600-	22
C 1350 R	Lock Washer, Secondary Interlead Contact Screw.....	04600-	22
C 1350 R	Lock Washer, Coil Core Clamp Screw.....	04600-	22

## JOHN DEERE MODEL "AO" TRACTOR

21

Part Number	NAME AND DESCRIPTION	Magneto Serial Number	Plate No.
<b>AH653 R MAGNETO PARTS—Continued</b> (Wico Type C)			
D 2003 R	Lock Washer, Condenser Screw	04600-	22
H 665 R	Lock Washer, Breaker Arm Spring Screw	04600-	22
H 666 R	Lock Washer, Impulse Stop Screw	04600-	22
IVA 583	Washer, Drive Cup Spacing (Steel) (Was H650 R)	04600-	22
IXA 256	Washer, Distributor Cap (Was B1047 R)	04600-	22
IXA 256	Washer, Cover Screw (Was B1047 R)	04600-	22
IXA 256	Washer, Fixed Contact Screw (Was B1047 R)	04600-	22
IXA 345	Oil Plug (Was B1107 R)	04600-	22
M 42XA	Washer, Drive Cup (Was H651 R)	04600-	22
M 126XB	Screw, Coil Core Clamp (Was B1092 R)	04600-	22
X 1413	Condenser (Was AE270 R)	04600-	22
X 2706	Core, Coil (Was AH769 R)	04600-	22
X 2719	Impulse Stop Group (Was AH762 R)	04600-	22
X 2723	Secondary Interlead (Was AH764 R)	04600-	22
X 2766	Coil Unit (Was AH768 R)	04600-	22
X 2938	Cap, Distributor (Was AH765 R)	04600-	22
X 3043	Housing Group, Main (Was AH771 R)	04600-	22
X 3051	Rotor (Was AH770 R)	04600-	22
X 3114	Driven Flange Group with Pawls (Was AH761 R)	04600-	22
X 3168	Cover with Breaker Plate Assembly (Was AH767 R)	04600-	22
*X 3343	Breaker Point Assembly (X1408 and 1196)	04600-	22

\*Set of Points. For best results replace both points.  
Individual points will be furnished only on special order.

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>SCHEBLER CARBURETOR (AA580 R)</b>			
1-K	Spring, Friction Ball (Was 57W)	AO-1000-	18
15-29	Screw, Choker Disk (Was S1-18)	AO-1000-	18
15-57	Adjusting Screw, Throttle Lever (Was 71W)	AO-1000-	18
15-285	Screw, Throttle Disk (Was 70W)	AO-1000-	18
18-O	Spring, Throttle Stop	AO-1000-	18
25-J	Spring, Nozzle Retaining (Was 65W)	AO-1000-	18
25-V	Spring, Choker Lever Friction (Was 68W)	AO-1000-	18
321 R	Gasket, Carburetor to Manifold	AO-1000-	18
A 705 R	Screw in Swivel Pin	AO-1000-	18
AA 580 R	Carburetor, Complete	AO-1000-	18
AB 1843 R	Choker Lever and Shaft Assembly	AO-1000-	18
B 1663 R	Pin, Swivel	AO-1000-	18
B 1664 R	Washer, on Swivel Pin	AO-1000-	18
D 392 R	Body, Solder Bushing, Fuel Pipe (Schebler S2192)	AO-1000-	18
DLT-13	Bowl, Casting (Was B449 R)	AO-1000-	18
P 52	Washer, Choke Lever Friction Spring (Was 72W)	AO-1000-	18
P 348	Choker Disk, Air Valve	AO-1000-	18
P 710	Gasket, Bowl Retaining Nut (Was B457 R)	AO-1000-	18
P 791	Gasket, Float Valve Seat (Was 73W)	AO-1000-	18
P 850	Washer, Choker Friction (Was 74W)	AO-1000-	18
P 947	Lever, Float (Was 75W)	AO-1000-	18
P 948	Disk, Throttle (Was 76W)	AO-1000-	18
P 950	Gasket, Strainer (Was 77W)	AO-1000-	18
P 951	Gasket, Bowl (Was 78W)	AO-1000-	18
S 93B	Screw, Throttle Lever (Was 17W)	AO-1000-	18
S 98	Pipe Plug, Hex. Head (Was 79W)	AO-1000-	18
S 98B	Pipe Plug, Headless (Was 80W)	AO-1000-	18
S 211G	Stop Pin, Throttle Lever (Was 67W)	AO-1000-	18
S 245	Lock Washer, Throttle Disk Screw (Was 81W)	AO-1000-	18
S 251A	Friction Ball, Needle Valve (Was 41W)	AO-1000-	18
S 763	Plug Screw for Drilled Holes (Was A1830 R)	AO-1000-	18
S 1121	Drain Cock	AO-1000-	18
S 1393	Lock Washer, Choker Disk Screw (Was 63W)	AO-1000-	18
S 1506	Drill Plug, (7 32", -32) (Was 83W)	AO-1000-	18
S 2041	Drill Plug, (1 4", -28) (Was 85W)	AO-1000-	18
S 2146	Pin, Float Pivot (Was 90W)	AO-1000-	18
S 2147	Screw, Float Bearing (Was 91W)	AO-1000-	18
S 2151-C	Idle Plug (Was A832 R)	AO-1000-	18
S 2154	Screw, Choker Friction Spring (Was 94W)	AO-1000-	18

## JOHN DEERE MODEL "AO" TRACTOR

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>SCHEBLER CARBURETOR (AA580 R)—Continued</b>			
S 2183A	Nozzle (Was 95 W)	AO-1000-	18
S 2369	Shaft, Throttle (Was C2502 R)	AO-1000-	18
S 2424	Nut, Bowl Retaining (Was B450 R)	AO-1000-	18
S 2471	Bushing, Throttle Shaft, Upper (Was C2504 R)	AO-1000-	18
S 2482	Bushing, Throttle Shaft, Lower (Was D2530 R)	AO-1000-	18
S 2502	Plug Screw for Drilled Holes (Was 45 W)	AO-1000-	18
SI-10	Clamp Screw, Throttle Lever Adjusting Screw (Was 10 W)	AO-1000-	18
X 1178B	Screw and Washer, Float (Was 4 W)	AO-1000-	18
X 2457	Cork Float (Was 69 W)	AO-1000-	18
X 2458	Needle, High Speed	AO-1000-	18
X 2461	Needle, Idle	AO-1000-	18
X 2462	Strainer, Complete	AO-1000-	18
X 2653	Float Valve and Seat Assembly (Was C2501 R)	AO-1000-	18
X 2692	Throttle Lever Assembly (Was AA578 R)	AO-1000-	18
X 2774	Body, Carburetor, with Bushing (Was AA744 R)	AO-1000-	18
<b>AIR CLEANER</b>			
A 447 R	Clamp, Air Cleaner Elbow Hose	AO-1000-	18
A 971 R	Hose, Air Cleaner Elbow to Carburetor	AO-1000-	18
A 1269 R	Gasket, Air Cleaner	AO-1000-	18
A 1401 R	Snap Ring, Air Cleaner Bracket Intake Plate	AO-1000-	18
A 1782 R	Intake Plate, Air Cleaner Bracket (Fits AO-1000- with AA1289 R)	AO-1226-	18
A 1966 R	Lock Ring, Baffle	AO-1000-	18
A 1967 R	Lock Ring, Filter	AO-1000-	18
AA 929 R	Air Cleaner, Complete, United	AO-1000-	18
AA 1287 R	Elbow, A959 R Carburetor Air Inlet with Pipe	AO-1000-	18
AA 1289 R	Bracket, A1781 R Air Cleaner, Complete	AO-1000-	18
AA 1674 R	Body, Air Cleaner	AO-1000-	18
AA 1675 R	Baffle with Handle	AO-1000-	18
AA 1676 R	Oil Cup and Clip Assembly	AO-1000-	18
C 1572 R	Wing Nut	AO-1000-	18
D 1034 R	Gasket, Elbow to Carburetor	AO-1000-	18
<b>TOOL BOX AND TOOLS</b>			
A 577 R	Socket Wrench for Spade Lug and Flywheel Bolt Nuts	AO-1000-	23
AA 1340 R	Tool Box and Dash, Complete	AO-1000-1743	5
AA 1341 R	Tool Box Assembly	AO-1744-	23
C 1591 R	Socket for Cylinder Head Nuts	AO-1000-	23
D 1083 R	Socket Wrench for Connecting Rod Bolt Nuts	AO-1000-	23
JD 7761	Grease Gun, No. 6556	AO-1000-	23
<b>POWER SHAFT PARTS</b>			
A 405 R	Ball, Power Shaft Shifter	AO-1000-	23
A 175 R	Shaft, Power Shaft Shifter	AO-1000-	23
A 551 R	Shifter, Power Shaft Gear	AO-1000-	23
A 552 R	Arm, Power Shaft Shifter	AO-1000-	23
A 554 R	Gear, Power Shaft Bevel (17 Teeth)	AO-1000-	23
A 558 R	Bushing, Power Shaft Bevel Gear, Bronze	AO-1000-	23
A 559 R	Washer, Power Shaft Bevel Gear, Thrust	AO-1000-	23
A 561 R	Washer, Power Shaft Bevel Gear, Retaining	AO-1000-	23
A 562 R	Snap Ring, Power Shaft Bevel Gear	AO-1000-	23
A 564 R	Bushing, Power Shaft Drive Shaft	AO-1000-	23
A 565 R	Cover, Power Shaft R. H. Bearing	AO-1000-	23
A 567 R	Shim, Power Shaft R. H. Bearing Cover, Thin	AO-1000-	23
A 568 R	Shim, Power Shaft R. H. Bearing Cover, Thick	AO-1000-	23
A 571 R	Shaft, Power	AO-1000-	23
A 572 R	Snap Ring, Power Shaft Rear End	AO-1000-	23
A 574 R	Gasket, Power Shaft Stuffing Box	AO-1000-1828	23
A 574 R	Gasket, Power Shaft Oil Seal Housing	AO-1829-	23
A 574 R	Gasket, Power Shaft Opening Cover	AO-1829-	23
A 574 R	Gasket, Power Shaft Guard	AO-1000-1828	23
A 575 R	Packing, Power Shaft Rear End (3 used)	AO-1000-1828	23
A 774 R	Stuffing Box, Power Shaft Rear End	AO-1000-1828	23
A 775 R	Gland, Power Shaft Rear End Packing	AO-1000-1828	23
A 919 R	Lever, Power Shaft Shifter Hand	AO-1000-	23
A 1031 R	Gear, Power Shaft Sliding (21 Teeth)	AO-1000-	23
A 1032 R	Pinion, Power Shaft Bevel Drive (17 Teeth)	AO-1000-	23
A 1033 R	Shaft, Power Shaft Drive	AO-1000-	23
A 1242 R	Guard, Power Shaft End	AO-1000-1828	23

## JOHN DEERE MODEL "AO" TRACTOR


23


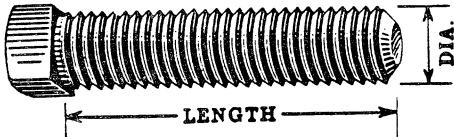
 

Part Number	NAME AND DESCRIPTION	Serial Number	Plate No.
<b>POWER SHAFT PARTS—Continued</b>			
*A 2062 R	Pinion, Power Shaft Drive Shaft and Bevel (16 Teeth) .....	AO-1000-	23
*A 2196 R	Gear, Power Shaft Bevel (16 Teeth) .....	AO-1000-	23
*A 2196 R	Washer, Power Shaft Bevel Gear Thrust .....	AO-1000-	23
AA 3004 R	Housing, A2543 R, with Power Shaft Oil Seal .....	AO-1829-	23
AB 2578 R	Oil Seal, Power Shaft .....	AO-1829-	23
AD 1770 R	Lead Washer, Cap Screw, Power Shaft Drive Shaft, R. H. Bearing Cover (Box of 50) .....	AO-1000-	23
B 1680 R	Cover, Power Shaft Opening .....	AO-1829-	23
D 377 R	Spring, Power Shaft Shifter Hand Lever .....	AO-1000-	23
D 469 R	Welsh Plug, in Power Shaft Shifter Lever Opening in Case .....	AO-1829-	23
D 993 R	Spring, Power Shaft Shifter Yoke .....	AO-1000-	23
D 1164 R	Woodruff Key, Power Shaft Drive Shaft Pinion .....	AO-1000-	23
*JD 7551 R	Bearing, Countershaft Idler Gear, R. H. ....	AO-1000-	23
JD 7664 R	Bearing, Power Shaft, Rear .....	AO-1000-	23
JD 7664 R	Bearing, Power Shaft Drive Shaft, R. H. ....	AO-1000-	23
*JD 7673 R	Bearing, Power Shaft Drive Shaft, R. H. ....	AO-1000-	23
*JD 7914 R	Bearing, Countershaft Idler Gear (Roller Assembly), R. H. ....	AO-1000-	23




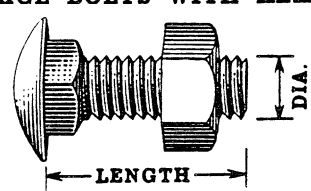
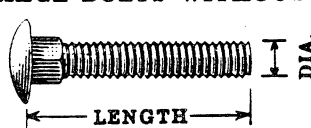
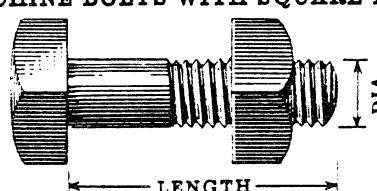
\*Repairs for Heavy-Duty Power Shaft.

## JOHN DEERE MODEL "AO" TRACTOR

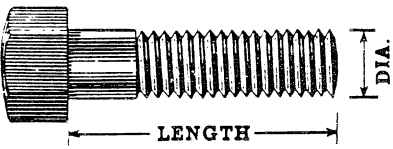

Part Number	NAME AND DESCRIPTION	Starting and Lighting	Lighting only	Starting only	Serial Number	Plate No.
<b>LIGHTING AND STARTING EQUIPMENT</b>						
A 1225 R	Clip, Cable, Choke Tube to Tank Support.....	X		X	AO-1000-	24
A 1225 R	Clip, Cable, Wiring Harness to Tractor.....	X	X	X	AO-1000-	24
A 1225 R	Clip, Cable, Rear Lamp Wire to Tractor.....	X	X		AO-1000-	24
A 2071 R	Bracket, Generator.....	X	X	X	AO-1000-	24
A 2072 R	Belt, Generator.....	X	X	X	AO-1000-	24
A 2232 R	Cover, Crank Case.....	X		X	AO-1000-	24
A 2238 R	Gear, Flywheel Starter.....	X		X	AO-1000-	24
A 2277 R	Bracket, Fuel Control.....	X		X	AO-1000-	24
A 2283 R	Dash.....	X		X	AO-1000-	24
A 2286 R	Plate, Battery Clamp Cross.....	X	X	X	AO-1000-	24
A 2287 R	Support, Battery Box.....	X	X	X	AO-1000-	24
A 2288 R	Body, Breather.....	X		X	AO-1000-	24
A 2292 R	Extension, L. H. Dust Shield.....	X		X	AO-1000-	24
A 2294 R	Ratchet, Flywheel Crank.....	X		X	AO-1000-	24
AA 1907 R	Harness, Wiring.....	X	X		AO-1000-	24
AA 1908 R	Wire, Rear Lamp.....	X	X		AO-1000-	24
AA 1911 R	Box, Tool.....	X	X	X	AO-1000-	24
AA 1930 R	Pulley, Generator Drive.....	X	X	X	AO-1000-	24
AA 2004 R	Motor with Magnetic Switch, Starting.....	X		X	AO-1000-	24
AA 2074 R	Box with Bottom, Battery.....	X	X	X	AO-1000-	24
AA 2075 R	Clamp with Bolts, Battery.....	X	X	X	AO-1000-	24
AA 2076 R	Wire, Starter Switch to Magnetic Switch.....	X			AO-1000-	24
AA 2077 R	Cover with Stack Assembly, Breather.....	X		X	AO-1000-	24
AA 2086 R	Guard with Supports, Flywheel.....	X		X	AO-1000-	24
AA 2373 R	Flywheel, A2293 R, with Bolts and Starter Gear.....	X		X	AO-1000-	24
AB 1188 R	Switch, Light.....	X	X	X	AO-1000-	24
AB 1189 R	Rod, Light Switch Control.....	X	X	X	AO-1000-	24
AB 1197 R	Cable, Battery Ground.....	X	X	X	AO-1000-	24
AB 1199 R	Lamp, Tractor, R. H.....	X	X		AO-1000-	24
AB 1201 R	Lamp, Tractor, L. H.....	X	X		AO-1000-	24
AB 1204 R	Generator.....	X	X	X	AO-1000-	24
AB 1830 R	Wire, Battery to Ammeter.....	X	X	X	AO-1000-	24
AB 1837 R	Switch, Starter Pull.....	X		X	AO-1000-	24
AB 1838 R	Rod, Starter Switch Control.....	X		X	AO-1000-	24
AB 1839 R	Choke Rod and Tube Assembly.....	X		X	AO-1000-	24
AB 1840 R	Wire, Ammeter to Starting Switch.....	X		X	AO-1000-	24
AB 1842 R	Cable, Battery to Starting Motor.....	X		X	AO-1000-	24
AB 1860 R	Clamp, Negative Battery Terminal.....		X		AO-1000-	24
AB 1913 R	Harness, Generator Wiring.....			X	AO-1000-	24
AB 1956 R	Wheel with Shaft and Pin, Cranking.....	X		X	AO-1000-	24
AB 2568 R	Ammeter with Clamp.....	X	X	X	AO-1000-	24
AB 2571 R	Shaft, Cranking (used with Tractor Steering Wheel).....	X		X	AO-1000-	24
AD 1855 R	Lamp, Dash.....	X	X		AO-1000-	24
AD 1861 R	Lamp, Tractor, Rear.....	X	X		AO-1000-	24
B 1028 R	Bracket, Head Lamp.....	X	X		AO-1000-	24
B 1030 R	Pulley, Generator.....	X	X	X	AO-1000-	24
B 1033 R	Strap, Generator Adjusting.....	X	X	X	AO-1000-	24
B 1588 R	Clip, Conduit.....	X	X	X	AO-1000-	24
B 1589 R	Pad, Battery.....	X	X	X	AO-1000-	24
B 1592 R	Support, Choke Tube.....	X		X	AO-1000-	24
B 1647 R	Conduit, Wiring Harness.....	X	X	X	AO-1000-	24
B 1662 R	Pin, Cranking Shaft.....	X		X	AO-1000-	24
C 1827 R	Washer on Generator Adjusting Strap to Generator Cap Screw (.036"x3/4" O.D.x21/64" I.D.).....	X	X	X	AO-1000-	24
D 342 R	Woodruff Key in AB2571 R Cranking Shaft.....	X		X	AO-1000-	24
D 2914 R	Bracket, Lamp, Rear.....	X	X		AO-1000-	24

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
<b>CAP SCREWS</b>					
					
1684 R	A 11 R	Differential Bearing Quill to Case.....	1/2"x1-1/2"	3	....
1670 R	A 41 R	In L. H. Governor Bearing Housing to Case....	3/8"x1"	5	....
D 942 R	A 51 R	Radiator to Front End.....	5/8"x2-1/4"	2	....
A 310 R	A 69 R	Sliding Gear Shaft R. H. Bearing Cover to Case (Drilled).....	7/16"x1-1/4"	2	....
D 474 R	A 178 R	In Cam Follower Guide Support.....	1/2"x1-3/4"	3	....
A 487 R	A 253 R	Camshaft Lock Plate to Gear.....	.375-.372x1"	2	....
1669 R	A 550 R	Sliding Gear Shaft and Countershaft Bearing Cover to Case.....	3/8"x3/4"	6	....
D 459 R	A 565 R	Power Shaft R. H. Bearing Cover to Case (Drilled).....	3/8"x1"	2	....
1670 R	A 774 R	Power Shaft Stuffing Box to Cover.....	3/8"x1"	3	....
1670 R	A 902 R	Crank Case Cover to Case.....	3/8"x1"	7	....
1671 R	A 918 R	Gear Shift Lock Screw.....	3/8"x1-1/4"	1	....
1683 R	A 927 R	Fan Shaft Support to Front End.....	1/2"x1-1/4"	2	....
1683 R	A 931 R	Water Pipe to Radiator.....	1/2"x1-1/4"	2	....
A 871 R	A 944 R	In Speed Control Shaft Bracket.....	5/16"x1-1/4"	2	....
C 806 R	A 1152 R	Oil Filter Body to Head.....	5/16"x9/16"	3	....
1670 R	A 1180 R	Fan Shaft Rear Bearing to Governor Case.....	3/8"x1"	3	....
D 916 R	A 1597 R	Oil Pump Drive Gear Bearing to Cam Follower Guide (Drilled).....	3/8"x3/4"	2	....
1669 R	A 1655 R	Clutch Fork Shaft Bearing to First Reduction Gear Cover.....	3/8"x3/4"	2	....
D 475 R	A 1661 R	Clutch Driving Disk Washer to Crankshaft.....	5/8"x1-1/2"	1	....
1667 R	A 1672 R	L. H. Main Bearing Cover to L. H. Main Bearing Housing.....	5/16"x1"	2	....
A 309 R	A 1672 R	L. H. Main Bearing Cover to L. H. Main Bearing Housing.....	5/16"x1-3/4"	3	....
A 313 R	A 1678 R	Front End to Cylinder.....	5/8"x1-3/4"	2	....
A 951 R	A 1678 R	Front End to Cylinder.....	5/8"x2"	2	....
A 951 R	A 1678 R	Front End to Case.....	5/8"x2"	4	....
B 568 R	A 1678 R	Front End to Cylinder (Special Head).....	5/8"x3-3/4"	2	....
A 313 R	A 1680 R	Clutch Lever Bracket to Rear Axle Housing.....	5/8"x1-3/4"	3	....
1676 R	A 1686 R	Rear Axle Housing Cover to Housing.....	7/16"x1-1/4"	16	....
1682 R	A 1692 R	R. H. Dust Shield and Fender Reinforcement to First Reduction Gear Cover.....	1/2"x1"	2	....
1682 R	A 1693 R	L. H. Dust Shield to Transmission Case.....	1/2"x1"	2	....
1671 R	A 1726 R	On Cowl Fastening.....	3/8"x1-1/4"	1	....
1683 R	A 1733 R	In Steering Worm Housing.....	1/2"x1-1/4"	4	....
A 1758 R	A 1879 R	L. H. Citrus Fender Brace to Crank Case.....	5/8"x3-1/4"	1	....
1671 R	A 2288 R	Breather Body to Crank Case Cover.....	3/8"x1-1/4"	2	....
1670 R	AA 227 R	Camshaft Bearing Housing to Case.....	3/8"x1"	2	....
1670 R	AA 580 R	Carburetor to Manifold.....	3/8"x1"	2	....
1683 R	AA 565 R	Upper Water Pipe to Cylinder.....	1/2"x1-1/4"	4	....
1670 R	AA 741 R	Transmission Case Cover to Case Underdrive.....	3/8"x1"	6	....
1683 R	AA 813 R	Governor Case to Case.....	1/2"x1-1/4"	5	....
1684 R	AA 813 R	Governor Case to Case.....	1/2"x1-1/2"	2	....
1669 R	AA 818 R	Front Fan Bearing Housing to Support.....	3/8"x3/4"	2	....
1670 R	AA 823 R	Transmission Case Cover to Case.....	3/8"x1"	6	....
1671 R	AA 861 R	Clamp for Oil Filter Adjusting Screw.....	3/8"x1-1/4"	1	....
A 871 R	AA 861 R	Oil Filter Cover to Head (Full Length Thread).....	5/16"x1-1/4"	2	....
1668 R	AA 861 R	Oil Filter Cover to Head.....	5/16"x1-1/2"	1	....
A 1271 R	AA 929 R	Air Cleaner to Bracket.....	5/16"x3"	4	....
A 313 R	AA 1266 R	Rear Axle Housing to Case.....	5/8"x1-3/4"	12	....
1676 R	AA 1274 R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7	....
B 155 R	AA 1274 R	First Reduction Gear Cover to Case.....	7/16"x4-1/4"	1	....
C 1871 R	AA 1277 R	R. H. Brake Housing to Case.....	1/2"x1-7/8"	2	....
1684 R	AA 1278 R	L. H. Brake Housing to Case.....	1/2"x1-1/2"	2	....
1670 R	AA 1287 R	Carburetor Intake Elbow to Carburetor.....	3/8"x1"	1	....
1683 R	AA 1289 R	Air Cleaner Bracket to Radiator Top Tank.....	1/2"x1-1/4"	3	....
A 312 R	AA 1309 R	R. H. Main Bearing to Case (Drilled).....	5/8"x1-1/2"	2	....
A 1673 R	AA 1309 R	R. H. Main Bearing to Case (Drilled).....	5/8"x2"	2	....
D 475 R	AA 1310 R	L. H. Main Bearing to Case.....	5/8"x1-1/2"	3	....

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
<b>CAP SCREWS—Continued</b>					
D 475 R	AA 1330 R	Platform to Rear Axle Housing.....	5/8"x1-1/2"	4	...
D 2461 R	AA 1355 R	Drawbar Support to Rear Axle Housing.....	3/4"x2"	3	...
1671 R	AA 1366 R	On Citrus Fender Flywheel Guard Lock Plate.....	3/8"x1-1/4"	1	...
A 871 R	AA 1407 R	Hub Cap to Hub (Disk Type Wheel).....	5/16"x1-1/4"	6	...
B 155 R	AA 1683 R	First Reduction Gear Cover to Case.....	7/16"x4-1/4"	1	...
1676 R	AA 1683 R	First Reduction Gear Cover to Case.....	7/16"x1-1/4"	7	...
1670 R	AA 2004 R	Starting Motor to Crank Case Cover.....	3/8"x1"	3	...
D 475 R	AA 3001 R	Platform to Rear Axle Housing.....	5/8"x1-1/4"	3	...
1670 R	AA 3004 R	Power Shaft Oil Seal Housing to Rear Axle Housing Cover.....	3/8"x1"	3	...
1670 R	AA 3004 R	In Power Shaft Oil Seal Housing.....	3/8"x1"	3	...
1672 R	AB 653 R	Magneto to Governor Case.....	3/8"x1-1/2"	2	...
1672 R	AB 706 R	Magneto to Governor Case.....	3/8"x1-1/2"	2	...
1672 R	AB 757 R	Magneto to Governor Case.....	3/8"x1-1/2"	2	...
1671 R	AC 119 R	Hub Cap to Hub (Spoke Type Wheel).....	3/8"x1-1/4"	3	...
1671 R	AD 452 R	In Front Wheel Knuckle Nut.....	3/8"x1-1/4"	1	...
1672 R	AD 1400 R	Magneto to Governor Case.....	3/8"x1-1/2"	2	...
1683 R	B 241 R	Oil Pump Body to Case.....	1/2"x1-1/4"	3	...
1670 R	B 247 R	Oil Pump Cover to Body.....	3/8"x1"	4	...
1670 R	B 273 R	Spring to Governor Arm.....	3/8"x1"	1	...
1685 R	B 639 R	Brake Latch to Brake Housing—R. H.....	1/2"x2"	1	...
1685 R	B 639 R	Brake Latch to Brake Housing—L. H.....	1/2"x2"	1	...
A 871 R	B 1028 R	Head Lamp Brackets to Radiator Top Tank.....	5/16"x1-1/4"	4	...
1666 R	B 1033 R	Generator Adjusting Strap to Generator.....	5/16"x3/4"	1	...
D 137 R	B 1680 R	In Power Shaft Spring Cover.....	3/8"x5/8"	3	...
<b>CAP SCREWS—FILLISTER HEAD</b>					
					
A 2211 R	AA 1930 R	In Generator Drive Pulley Assembly.....	5/16"x1-1/4"	2	...
<b>SET SCREWS—SQUARE HEAD —CUP POINT</b>					
					
A 318 R	A 918 R	For Gear Shift Shaft.....	1/2"x3-1/4"	1	...
A 318 R	A 1416 R	For Gear Shift Shaft (Underdrive).....	1/2"x3-1/4"	1	...
<b>SET SCREWS—SQUARE HEAD —DOG POINT</b>					
					
A 320 R	A 80 R	In Shutter Control Lever.....	5/16"x3/4"	1	...
D 1086 R	AA 1318 R	Pulley Adjusting Screw.....	1/2"x2-1/4"	1	...
A 320 R	A 1735 R	In Speed Control Bracket.....	5/16"x3/4"	1	...
A 320 R	A 1735 R	In Speed Control Lever.....	5/16"x3/4"	1	...
A 320 R	A 1796 R	In Shutter Control Bracket.....	5/16"x3/4"	1	...
<b>SET SCREWS—SQUARE HEAD— CONICAL POINT</b>					
					
A 1253 R	A 1241 R	In Governor Arm.....	3/8"x1"	1	...



Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
<b>MACHINE SCREWS—ROUND HEAD</b>					
					
E 2162 R	A 1655 R	Clutch Fork Shaft Bearing Cover to First Re- duction Gear Cover.	1/4"x20-5/8"	4	...
E 2064 R	AA 824 R	Oil Filter Leaf By-Pass to Oil Filter Head.	1/4"x20-1/2"	2	...
E 2064 R	AA 1528 R	Top Tie Bar to Frame.	1/4"x20-1/2"	4	...
E 2064 R	AA 2058 R	Top Tie Bar to Frame.	1/4"x20-1/2"	4	...
E 2064 R	B 271 R	Inside Governor Lever to Shaft.	1/4"x20-1/2"	2	...
E 2064 R	B 1592 R	In Choke Tube Support.	1/4"x20-1/2"	1	...
<b>DRIVE SCREWS—ROUND HEAD</b>					
					
D 454 R	AA 325 R	In Radiator Curtain.	No. 7x3/8"	4	...
A 1648 R	AA 1315 R	In Pulley Rim to Hold Clutch Dust Cover.	No. 4x3/16"	3	...
<b>CARRIAGE BOLTS WITH SQUARE NUTS</b>					
					
A 2297 R	AD 1606 R	Seat to Seat Channel.	1/2"x1-7/8"	1	...
<b>CARRIAGE BOLTS WITH HEX. NUTS</b>					
					
C 1647 R	C 1573 R	In Hood Clip to Hood Clip Bracket.	3/8"x1-1/4"	2	...
C 980 R	C 1573 R	In Hood Clip to Fuel Tank Rear Support.	3/8"x1-1/2"	2	...
D 585 R	D 583 R	In Front Wheel Rim Clamp to Rim.	1/2"x3"	8	...
D 1550 R	D 1551 R	In Weight Clamp to Front Wheel Weight.	5/8"x3"	12	...
<b>CARRIAGE BOLTS WITHOUT NUTS</b>					
					
D 411 R	A 1062 R	Road Band Support to Rear Wheel.	3/4"x1-7/8"	6	...
D 411 R	AC 918 R	Road Band Support to Road Band.	3/4"x1-7/8"	6	...
A 317 R	AD 1606 R	Seat to Seat Support.	5/8"x2-1/2"	1	...
C 1517 R	C 2199 R	Sand Lug to Wheel.	3/4"x2-1/4"	48	...
D 411 R	D 233 R	Spade Lug, 4".	3/4"x1-7/8"	1	...
D 411 R	D 1078 R	Spade Lug, 5".	3/4"x1-7/8"	1	...
D 411 R	D 1283 R	Spade Lug, "A Shaped", 5".	3/4"x1-7/8"	1	...
D 411 R	D 2121 R	Spade Lug "Heavy Duty", 5".	3/4"x1-7/8"	1	...
D 411 R	D 2447 R	Spade Lug "Heavy Duty", 4".	3/4"x1-7/8"	1	...
<b>MACHINE BOLTS WITH SQUARE NUTS</b>					
					
D 1615 R	A 115 R	In Overdrive Shifter Lever.	3/8"x1-3/4"	1	...
D 595 R	A 192 R	In Radiator Straps.	5/16"x7/8"	8	...
D 1611 R	A 1628 R	In Radiator Side, R. H.	5/16"x1-1/8"	7	...


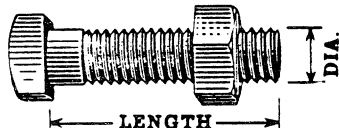






Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
<b>MACHINE BOLTS WITH SQUARE NUTS—Continued</b>					
C 1611 R	A 1629 R	In Radiator Side, L. H.	5/16"x1-1/8"	7	....
C 1105 R	A 1692 R	R. H. Dust Shield to Fender Bracket	5/16"x1-3/4"	4	....
C 1105 R	A 1693 R	L. H. Dust Shield to Fender Bracket	5/16"x1-3/4"	4	....
1638 R	A 1741 R	Drawbar End to Drawbar	5/8"x2-1/2"	2	....
1622 R	A 1879 R	R. H. Citrus Fender Brace to R. H. Citrus Fender Bottom Brace	1/2"x1-1/2"	1	....
1624 R	A 1879 R	R. H. Citrus Fender Brace to Front End	1/2"x2"	1	....
1622 R	A 1887 R	L. H. Citrus Fender Brace to L. H. Citrus Fender Bottom Brace	1/2"x1-1/2"	1	....
1613 R	A 2071 R	Generator Bracket to Fan Shaft Support	3/8"x1-1/4"	3	....
1613 R	AA 270 R	In Fuel Tank Strap	3/8"x1-1/4"	2	....
1622 R	AA 1286 R	In Muffler to Manifold	1/2"x1-1/2"	2	....
D 571 R	AA 1286 R	In Muffler to Manifold	1/2"x3-3/4"	2	....
M21 R	AA 1299 R	Fan Shroud to Radiator Sides	3/8"x3/4"	6	....
1622 R	AA 1325 R	On Fuel Tank Rear Support to Governor Case	1/2"x1-1/2"	2	....
1614 R	AA 1331 R	R. H. Center Brace to Platform Support	3/8"x1"	1	....
1621 R	AA 1331 R	R. H. Crown End Sheet to Fender Cross Angle	1/2"x1-1/4"	3	....
1622 R	AA 1331 R	On R. H. Fender Crown Sheet to Platform Cross Angle	1/2"x1-1/2"	1	....
1621 R	AA 1332 R	L. H. Crown Sheet to Fender Cross Angle	1/2"x1-1/4"	3	....
1614 R	AA 1332 R	L. H. Center Brace to Platform Support	3/8"x1"	1	....
1622 R	AA 1332 R	On L. H. Fender Crown Sheet to Platform Cross Angle	1/2"x1-1/2"	1	....
1614 R	AA 1337 R	R. H. Front Brace to Platform Support	3/8"x1"	1	....
1614 R	AA 1338 R	L. H. Front Brace to Platform Support	3/8"x1"	1	....
M21 R	AA 1564 R	R. H. Citrus Fender Hinge Brace to R. H. Dust Shield	3/8"x3/4"	1	....
1614 R	AA 1564 R	R. H. Citrus Fender Hinge Brace to R. H. Citrus Fender Reinforcement	3/8"x1"	1	....
M21 R	AA 1565 R	L. H. Citrus Fender Hinge Brace to L. H. Dust Shield	3/8"x3/4"	1	....
1614 R	AA 1565 R	L. H. Citrus Fender Hinge Brace to L. H. Citrus Fender Reinforcement	3/8"x1"	1	....
C 1105 R	AB 1204 R	Generator Front Mounting Hole to Generator Bracket	5/16"x1-3/4"	1	....
B 846 R	B 845 R	Seat Channel Stop Strap to Rear Axle Housing	5/8"x4-3/4"	1	....
B 848 R	B 847 R	Seat Spring Bolt Strap to Rear Axle Housing	5/8"x3-3/4"	1	....
1611 R	B 1028 R	Lamp Bracket to R. H. Rear Fender Cross Angles	5/16"x1-1/8"	2	....
D 595 R	B 1033 R	Generator Adjusting Strap to Generator Bracket	5/16"x7/8"	1	....
1622 R	C 1646 R	In Button Lug	1/2"x1-1/2"	1	....
D 544 R	D 1524 R	Front Wheel Guide Band to Wheel	1/2"x1"	8	....
<b>MACHINE BOLTS WITH HEX. NUTS</b>					
					
D 597 R	A 917 R	In Gear Shifter Arm	3/8"x1-3/4"	1	....
D 1767 R	A 1730 R	Steering Worm Adjusting Nut Clamp Bolt	1/2"x3"	1	....
1935 R	A 1736 R	Steering Shaft Rear Support to Clutch Lever Bracket	1/2"x3-1/2"	1	....
A 1829 R	A 1827 R	Front Wheel Weight to Wheel	1/2"x4-3/4"	6	....
1938 R	AB 214 R	Steering Shaft Bearing to Steering Shaft Bracket	1/2"x4-1/2"	1	....
1971 R	AD 984 R	Wheel Weight to Wheel	3/4"x6"	4	....
1893 R	AB 1204 R	Generator Rear Mounting Hole to Generator Bracket	5/16"x1-1/2"	1	....
<b>MACHINE BOLTS WITHOUT NUTS</b>					
					
A 734 R	A 192 R	Sides and Rear Strap to Radiator Top Tank	5/16"x7/8"	22	....
A 619 R	A 618 R	Seat Spring Bolt	5/8"x9"	1	....
C 981 R	AA 1305 R	In Flywheel	3/4"x5"	2	....
D 616 R	AA 1353 R	Drawbar Support Brace to Drawbar Support Assembly	3/4"x2-3/4"	1	....

    
 
# HARDWARE LIST FOR JOHN DEERE MODEL "AO" TRACTOR


29

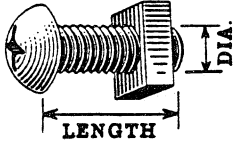Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
<b>MACHINE BOLTS WITHOUT NUTS—Continued</b>					
A 1742 R	AA 1353 R	Drawbar to Front Support.	3/4"x3-1/4"	1	...
A 734 R	AA 1564 R	Citrus Fender Pulley Guard to Front Support	5/16"x7/8"	1	...
C 981 R	AA 2084 R	In Flywheel.	3/4"x5"	2	...
A 327 R	AD 1470 R	Wheel Weight to Wheel.	3/4"x4-3/4"	4	...
<b>STOVE BOLTS—ROUND HEAD— SQUARE NUTS</b>					
					
2568 R	A 470 R	Spark Plug Cable Clamp to Conduit	5/16"x1-1/2"	1	...
A 1053 R	A 1692 R	R. H. Dust Shield to R. H. Dust Shield Extension.	5/16"x3/4"	1	...
A 1053 R	A 1693 R	L. H. Dust Shield to Tool Box.	5/16"x3/4"	1	...
2392 R	A 1875 R	Hinge Reinforcement to Citrus Fender Pulley Guard.	1/4"x5/8"	2	...
2392 R	A 2277 R	Fuel Control Bracket to Dash.	1/4"x5/8"	2	...
2392 R	A 2287 R	Battery Box Support to Battery Box.	1/4"x5/8"	1	...
A 1053 R	AA 1331 R	R. H. Fender Side Sheet to Platform Support	5/16"x3/4"	5	...
A 1053 R	AA 1331 R	R. H. Fender Side Sheet to Brace and R. H. Dust Shield.	5/16"x3/4"	4	...
A 1053 R	AA 1332 R	L. H. Fender Side Sheet to Brace and L. H. Dust Shield.	5/16"x3/4"	4	...
A 1053 R	AA 1332 R	L. H. Fender Side Sheet to Platform Support	5/16"x3/4"	5	...
A 1053 R	AA 1340 R	Dash to Fender Side Sheets.	5/16"x3/4"	4	...
A 1053 R	AA 1343 R	Pulley Guard to Support.	5/16"x3/4"	1	...
2334 R	AA 1564 R	Citrus Fender to Fender.	5/16"x1"	4	...
2392 R	AA 1571 R	Hinge Reinforcement to Citrus Fender Flywheel Guard.	1/4"x5/8"	2	...
2568 R	AA 2074 R	Battery Box and Spacers to Dash.	5/16"x1-1/2"	4	...
2394 R	B 465 R	Spark Plug Cable Clamp to Conduit Shield	1/4"x1-1/4"	1	...
B 497 R	B 465 R	Spark Plug Cable Conduit Clamp to Fan Shaft Tube.	5/16"x3/4"	1	...
<b>STOVE BOLTS—ROUND HEAD— WITHOUT NUTS</b>					
D 2319 R	AA 1293 R	Radiator Guard to Radiator Side.	5/16"x3/4"	4	...
D 2319 R	AA 1343 R	Pulley Guard Front Support to Radiator Side	5/16"x3/4"	2	...
D 2319 R	AA 1344 R	Flywheel Guard Front Support to Radiator Side	5/16"x3/4"	2	...
D 2319 R	AA 1429 R	Radiator Guard to Radiator Side.	5/16"x3/4"	4	...
D 2319 R	AA 1735 R	Radiator Guard to Radiator Side.	5/16"x3/4"	4	...
<b>SPECIAL SLOTTED TRUSS HEAD BOLTS WITH SQUARE NUTS</b>					
					
A 2057 R	A 1874 R	Rear Citrus Fender Bracket to Fender Crown Sheets.	5/16"x1/2"	4	...
A 2051 R	A 2280 R	Fuel Control Rod Support to L. H. Dust Shield Extension.	5/16"x1/2"	1	...
A 2051 R	A 2291 R	Fuel Control Rod Support to L. H. Dust Shield Extension.	5/16"x1/2"	1	...
A 1858 R	AA 1337 R	R. H. Center Brace to R. H. Fender Center Sheet	5/16"x1"	2	...
A 1858 R	AA 1337 R	R. H. Center Brace to R. H. Fender Crown Sheet.	5/16"x1"	2	...
A 1858 R	AA 1338 R	L. H. Center Brace to L. H. Fender Center Sheet	5/16"x1"	2	...
A 1858 R	AA 1338 R	L. H. Fender Center Brace to L. H. Crown Sheet	5/16"x1"	2	...
A 2051 R	AA 1341 R	In Tool Box to Dash.	5/16"x1/2"	4	...
A 2051 R	AA 1343 R	Pulley Guard to Hood.	5/16"x1/2"	5	...
A 2051 R	AA 1343 R	Pulley Guard to R. H. Fender Crown Sheet	5/16"x1/2"	2	...
A 1858 R	AA 1343 R	Pulley Guard to R. H. Fender Front Brace	5/16"x1"	3	...

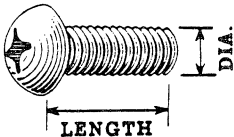Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
<b>SPECIAL SLOTTED TRUSS HEAD BOLTS WITH SQUARE NUTS—Continued</b>					
A 1858 R	AA 1343 R	Pulley Guard to Shutter Control Rod Clip to Hood	5/16"x1"	2	
A 2051 R	AA 1344 R	Flywheel Guard to Hood	5/16"x1 1/2"	7	
A 1858 R	AA 1344 R	Flywheel Guard to L. H. Front Brace	5/16"x1"	3	
A 2051 R	AA 1344 R	Flywheel Guard to L. H. Fender Crown Sheet	5/16"x1 1/2"	2	
A 2051 R	AA 1911 R	Tool Box to Left Fender	5/16"x1 1/2"	4	
<b>SPECIAL SLOTTED TRUSS HEAD BOLTS WITHOUT NUTS</b>					
					
A 2050 R	AA 1564 R	R. H. Citrus Fender to Citrus Fender Bracket	5/16"x1 1/2"	9	
A 2050 R	AA 1565 R	L. H. Citrus Fender to Citrus Fender Bracket	5/16"x1 1/2"	9	
<b>HEXAGON NUTS</b>					
					
1504 R	A 69 R	On Overdrive R. H. Bearing Stud	3/8"	2	
1512 R	A 152 R	On Brake Lever Shaft	5/8"	2	
1513 R	A 327 R	On Rear Wheel Weight Bolts	3/4"	4	
1512 R	A 734 R	On Front End to Case to Support Screws	5/8"	1	
1514 R	A 908 R	On Clutch Operating Rod	9/16"	1	
1505 R	A 1003 R	On Manifold Studs	7/16"	4	
1513 R	A 1062 R	On Wheel Support to Wheel Bolts	3/4"	12	
1503 R	A 1188 R	On Throttle Lever Stop Screw	5/16"	2	
1504 R	A 1241 R	On Governor Arm Set Screw	3/8"	1	
A 337 R	A 1291 R	On Tappet Lever Adjusting Screw	3/8"	4	
1513 R	A 1298 R	In Spud Lugs	3/4"	48	
1503 R	A 1628 R	On R. H. and L. H. Radiator Guard Bracket	5/16"	4	
1506 R	A 1730 R	On Steering Gear Housing Stud	1/2"	1	
1503 R	A 1737 R	On Speed Control Rod End	5/16"	1	
1513 R	A 1746 R	On Drawbar Support Brace to Drawbar Bolt	3/4"	1	
1512 R	A 1828 R	On Hook Bolt	5/8"	6	
1512 R	AA 437 R	On Cylinder Flange Studs	5/8"	6	
1507 R	AA 464 R	On Cylinder Head Studs	5/8"	9	
D 1771 R	AA 567 R	Steering Wheel to Steering Shaft	3/4"	1	
1505 R	AA 806 R	On Countershaft R. H. Bearing Housing to Case Stud	7/16"	4	
1504 R	AA 1047 R	On Camshaft Gear Stud	3/8"	2	
1505 R	AA 1274 R	On First Reduction Gear Cover Stud	7/16"	1	
1515 R	AA 1285 R	On Radius Rod Pivot Stud	7/8"	1	
1516 R	AA 1285 R	On Radius Rod	1"	2	
1512 R	AA 1310 R	On L. H. Main Bearing to Case Stud	5/8"	1	
1506 R	AA 1318 R	On Pulley Brake Adjusting Set Screw	1/2"	1	
1504 R	AA 1569 R	On Citrus Fender Bottom Brace Bolt	3/8"	1	
1505 R	AA 1683 R	On First Reduction Gear Cover Stud	7/16"	2	
1515 R	AA 2455 R	On Radius Rod Pivot Stud	7/8"	1	
1516 R	AA 2455 R	On Radius Rod Pivot Stud	1"	2	
A 337 R	AB 1189 R	Switch Control Rod to Dash	3/8"	1	
A 337 R	AB 1838 R	Switch Control Rod to Dash	3/8"	1	
A 337 R	AB 1839 R	Choke Rod and Tube Assembly to Dash	3/8"	1	
1513 R	AC 649 R	On Cast Cone Lugs	3/4"	48	
1504 R	B 273 R	On Spring to Governor Arm Screw	3/8"	1	
1512 R	B 738 R	On Clutch Lever Pivot Bolt	5/8"	1	
1502 R	B 1592 R	Nut on Choke Tube Support Screw	1/4"	1	
1513 R	C 981 R	On Flywheel Bolts	3/4"	2	
1513 R	C 1517 R	On Sand Lug Bolts	3/4"	48	
1503 R	D 156 R	On Spindle Taper Bolt	5/16"	2	
1513 R	D 411 R	On Spade Lug Bolts	3/4"	48	
1513 R	D 411 R	On Support to Support Bolts	3/4"	12	
1513 R	D 411 R	On Wheel Support to Wheel Bolts	3/4"	1	
1518 R	D 1898 R	On Steering Arm Stud	5/8"	4	
1513 R	D 2185 R	On Rear Wheel Weight Bolts	3/4"	3	
D 2883 R	D 2882 R	Nut, on Rim Clamp Stud	3/4"	1	
1512 R	JD 1217 R	On Rear Wheel Bolts	5/8"	6	

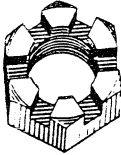Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quan- tity Used	Plate No.
<b>HEXAGON NUTS—CASTELLATED</b>					
					
B 112 R	A 1637 R	On Filler Cap Stud.....	3/4"	1	....
A 335 R	A 1645 R	On Clutch Operating Bolts.....	1/2"	3	....
D 336 R	AA 382 R	On Connecting Rod Bolts.....	9/16"	2	....
C 535 R	AA 797 R	On Overdrive Gear Shaft.....	1"	1	....
C 535 R	AA 798 R	On Overdrive Gear and Shaft.....	1"	1	....
C 535 R	AA 807 R	On Brake Shaft.....	1"	1	....
C 535 R	AA 1153 R	On Overdrive Gear and Shaft.....	1"	1	....
2214 R	AA 1234 R	On Countershaft (Underdrive).....	1-1/4"	1	....
C 535 R	AA 1281 R	On Brake Shaft.....	1"	1	....
A 336 R	AA 1309 R	On Main Bearing Bolts.....	5/8"	2	....
A 336 R	AA 1310 R	On Main Bearing Bolts.....	5/8"	2	....
C 535 R	AA 1553 R	On Underdrive Gear and Shaft.....	1"	1	....
C 1104 R	AA 1605 R	On Steering Gear Shaft.....	7/8"	2	....
A 2036 R	AA 1763 R	On Citrus Fender Front Fastener.....	5/16"	1	....
<b>HEX. JAM NUTS</b>					
					
D 2781 R	A 176 R	On Tappet Lever Stud.....	1/2"	2	....
D 2781 R	A 319 R	On Piston Pin Set Screw.....	1/2"	1	....
D 2781 R	A 1416 R	On Gear Shift Shaft Set Screw.....	1/2"	1	....
C 985 R	A 1676 R	On Tie Rod.....	7/8"	2	....
D 2780 R	A 1726 R	On Cowl Fastening.....	3/8"	1	....
D 528 R	A 1797 R	On Shutter Control Rod End.....	1/4"	1	....
D 2781 R	B 639 R	On Brake Latch to Brake Housing Screw, R. H..	1/2"	1	....
D 2781 R	B 639 R	On Brake Latch to Brake Housing Screw, L. H..	1/2"	1	....
D 2782 R	C 977 R	On Steering Gear Shaft Adjusting Screw.....	5/8"	1	....
D 528 R	D 157 R	On Throttle Rod End.....	1/4"	1	....
D 528 R	D 2887 R	On Throttle Rod End.....	1/4"	1	....
<b>SQUARE NUTS</b>					
					
A 334 R	AA 1353 R	On Drawbar to Front Support Bolt (Special).....	3/4"	1	....
<b>RIVETS—ROCK ISLAND HEAD</b>					
					
A 343 R	A 150 R	In Differential Bevel Pinion Shaft.....	5/16"x2-1/2"	3	....
D 437 R	A 596 R	Yoke to Shifter.....	3/8"x1-1/2"	2	....
B 817 R	A 955 R	In Front Axle Pivot Pin (Drilled).....	3/8"x3-1/8"	1	....
D 437 R	A 1418 R	Yoke to Shifter (Underdrive).....	3/8"x1-1/2"	2	....
D 432 R	A 1631 R	Hood Clip Bracket to Fan Shroud.....	1/4"x1-1/2"	2	....
D 432 R	A 1632 R	Hood Clip Bracket to Fan Shroud.....	1/4"x1-1/2"	2	....
B 372 R	A 1691 R	Fender Cross Angle to Platform.....	5/16"x1"	6	....

Order Part Number	For Attaching	NAME AND DESCRIPTION	Size	Quantity Used	Plate No.
<b>RIVETS—ROCK ISLAND HEAD—Continued</b>					
D 443 R	A 1739 R	Clevis to Drawbar.....	1/2"x1-7/8"	2	....
B 372 R	A 2532 R	Platform to Support Angles.....	5/16"x1"	10	....
D 432 R	A 2542 R	Safety Shield Pivot Plate to Platform.....	1/4"x1/2"	4	....
A 1025 R	A 2545 R	Seat Spring Bracket to Seat Support.....	1/2"x1-1/2"	2	....
D 436 R	AA 741 R	Gear Shifter Interlock to Transmission Case Cover.....	3/8"x1-1/8"	2	....
D 436 R	AA 823 R	Gear Shifter, Interlock to Transmission Case Cover.....	3/8"x1-1/8"	2	....
B 373 R	AA 1272 R	In Gear Retaining Washer on First Reduction Gear Spider.....	5/16"x1-1/4"	3	....
B 372 R	AA 1330 R	Platform Support to Platform.....	5/16"x1"	8	....
D 430 R	AA 1331 R	R. H. Fender Center Brace to R. H. Side and Crown Sheet.....	3/16"x5/8"	6	....
D 430 R	AA 1332 R	L. H. Fender Center Brace to L. H. Side and Crown Sheet.....	3/16"x5/8"	6	....
D 478 R	AA 1343 R	Citrus Fender Stop to Pulley Guard.....	3/16"x3/8"	2	....
D 478 R	AA 1344 R	Citrus Fender Stop to Flywheel Guard.....	3/16"x3/8"	2	....
D 478 R	AA 1345 R	Cowl to Cowl Channel.....	3/16"x3/8"	8	....
D 478 R	AA 1345 R	Cowl to Cowl Angle.....	3/16"x3/8"	7	....
D 478 R	AA 1347 R	Cowl Hinge Front Half to Hood.....	3/16"x3/8"	5	....
B 372 R	AA 1564 R	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcements and Bottom Brace Ends.....	5/16"x1"	2	....
D 430 R	AA 1564 R	Through Citrus Fender Sheets, Hinge Halves to Hinge Reinforcements.....	3/16"x5/8"	13	....
D 430 R	AA 1564 R	In R. H. Fender Bracket.....	3/16"x5/8"	6	....
D 430 R	AA 1564 R	R. H. Citrus Fender to Citrus Fender Rear Bracket.....	3/16"x5/8"	6	....
B 372 R	AA 1565 R	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcement and Bottom Brace Ends.....	5/16"x1"	2	....
D 430 R	AA 1565 R	L. H. Citrus Fender to Citrus Fender Rear Bracket.....	3/16"x5/8"	3	....
D 430 R	AA 1565 R	L. H. Citrus Fender to Citrus Fender Bracket.....	3/16"x5/8"	6	....
D 430 R	AA 1565 R	Through Citrus Fender Sheets, Hinge Halves and Hinge Reinforcements.....	3/16"x5/8"	13	....
B 372 R	AA 1566 R	Through Citrus Fender Hinge Halves, Sheet and Hinge Reinforcement.....	5/16"x1"	1	....
B 372 R	AA 1567 R	Through Citrus Fender Hinge Halves, Sheet and Hinge Reinforcement.....	5/16"x1"	1	....
D 430 R	AA 1569 R	Citrus Fender Pulley Guard to Bottom Brace.....	3/16"x5/8"	8	....
D 430 R	AA 1569 R	Through R. H. Citrus Fender to Bottom Brace.....	3/16"x5/8"	10	....
D 430 R	AA 1569 R	Citrus Fender Flywheel Guard to Bottom Brace.....	3/16"x5/8"	8	....
D 430 R	AA 1569 R	L. H. Citrus Fender to Bottom Brace.....	3/16"x5/8"	10	....
D 432 R	AA 3001 R	Pivot Plate Support to Platform.....	1/4"x1/2"	4	....
B 372 R	AA 3001 R	Platform Support to Platform.....	5/16"x1"	8	....
D 479 R	AB 326 R	Oil Relief Spring to Oil Filter Head Cover.....	1/4"x3/4"	1	....
A 343 R	AB 1956 R	Cranking Wheel to Cranking Shaft.....	5/16"x2-1/2"	1	....
D 478 R	C 1573 R	Hood Clips to Hood.....	3/16"x3/8"	2	....
<b>RIVETS—BRASS</b>					
					
AD 1771 R	A 1013 R	Cushion to Fuel Tank Front Support (Box of 100).....	9/64"x5/16"	4	....
AD 1772 R	A 1014 R	Cushion to Fuel Tank Rear Support (Box of 100).....	9/64"x7/16"	4	....
AD 1773 R	AA 314 R	Facing to Brake Shoe (Box of 100).....	3/16"x5/16"	8	....
AD 1772 R	AA 1318 R	Pulley Brake Lining to Brake (Box of 100).....	9/64"x7/16"	6	....
<b>RIVETS—COUNTERSUNK HEAD</b>					
					
A 2053 R	AC 918 R	In Road Band to Supports.....	1/2"x1-1/2"	12	....

 

## LOCK WASHERS

Size	No.
1/4"	1729 R
5/16"	1721 R
3/8"	1722 R
7/16"	1723 R
1/2"	1724 R
5/8"	1726 R
3/4"	1728 R
1"	1882 R



## COTTER KEYS

Length	Diameter			
	3/32"	1/8"	3/16"	1/4"
1/2"	1730 R			
5/8"		1732 R		
3/4"		1733 R		
1"	1731 R	1735 R	1741 R	
1-1/4"			1742 R	
1-1/2"		1737 R	1743 R	1745 R
2"		1738 R		1748 R
3-1/2"				


CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES  
FOR JOHN DEERE MODEL "AO" TRACTOR

Casting Number	NAME AND DESCRIPTION		Order Part Number	Page No.	Plate No.
A 10 R	Differential, Complete.....		AA 345 R	11	
A 10 R	Differential Gear with Shaft.....		AA 331 R	11	9
A 30 R	Camshaft Gear with Stud and Nut.....		AA1047 R	4	2
A 31 R	Camshaft Housing with Bearing Cup, L. H.....		AA 227 R	4	2
A 61 R	Piston with Rings (Standard).....		AA 840 R	3	1
A 107 R	Connecting Rod, Complete.....		AA 463 R	3	1
A 454 R	Intake Valve.....		AA1810 R	4	2
A 541 R	Overdrive Gear and Shaft with Nut and Bearing Cover.....		AA 797 R	10	8
A 587 R	Cylinder Head with Valve Guides.....		AA 464 R	4	2
A 588 R	Exhaust Valve.....		AA1811 R	4	2
A 732 R	Cylinder with Studs.....		AA 437 R	4	2
A 838 R	Overdrive Gear and Shaft with Nut and Bearing Cover.....		AA 798 R	10	9
A 845 R	Upper Water Pipe Complete.....		AA 565 R	8	5
A 900 R	Breather Cover with Stack.....		AA 551 R	6	3
A 900 R	Breather Cover with Stack Assembly.....		AA2077 R	24	24
A 910 R	Low and Reverse Gear Shifter.....		AA 553 R	10	7
A 911 R	Overdrive Shifter with Yoke.....		AA 793 R	10	8
A 911 R	Underdrive Gear Shifter with Yoke.....		AA1124 R	11	9
A 912 R	Transmission Case Cover with Gear Shift Interlock.....		AA 823 R	3	1
A 959 R	Carburetor Air Inlet Elbow with Pipe.....		AA1287 R	22	18
A 1015 R	Second Speed Gear Shifter.....		AA 588 R	10	7
A 1109 R	Piston with Rings, .030" Oversize.....		AA 737 R	3	1
A 1123 R	Transmission Case Cover with Gear Shift Interlock.....		AA 741 R	11	1
A 1141 R	Transmission Main Case.....		AA 843 R	3	
A 1155 R	Countershaft Bearing Housing with Cup, R. H.....		AA 806 R	11	8
A 1170 R	Governor Case with Lever Shaft Bushing.....		AA 813 R	5	3
A 1272 R	Cast Rear Wheel with Studs for Demountable Rim.....		AA 933 R	12	11
A 1272 R	Cast Rear Wheel with Studs and Nuts.....		AA1087 R	12	11
A 1272 R	Cast Rear Wheel with Studs for Demountable Rim.....		AA 917 R	12	11
A 1277 R	Oil Filter Head Cover with Bushing.....		AA 861 R	6	4
A 1404 R	Overdrive Gear and Shaft with Nut.....		AA1553 R	11	9
A 1413 R	Countershaft Bearing Housing with Cup, R. H. (Underdrive).....		AA1122 R	11	9
A 1417 R	Second Speed Gear Shifter with Yoke.....		AA1123 R	11	9
A 1555 R	Front Wheel Hub Cap with Oil Fitting.....		AA1407 R	13	13
A 1557 R	Front Wheel Hub (Disk Type).....		AA1395 R	13	13
A 1600 R	Rear Axle Housing with Bearing Cups and Oil Seal.....		AA1266 R	12	10
A 1603 R	First Reduction Gear with Spider, Riveted.....		AA1272 R	10	8
A 1605 R	First Reduction Gear Cover with Dust Shroud.....		AA1274 R	10	8
A 1608 R	Brake Housing with Bushing and Oiler, R. H.....		AA1277 R	13	12
A 1609 R	Brake Housing with Bushing and Oiler, L. H.....		AA1278 R	13	12
A 1618 R	Muffler, Complete.....		AA1286 R	5	3


# CASTINGS AND FORGINGS SOLD ONLY AS ASSEMBLIES FOR JOHN DEERE MODEL "AO" TRACTOR

Casting Number	NAME AND DESCRIPTION	Order Part Number	Page No.	Plate No.
A 1618 R	Muffler, Complete.	AA1920 R	5	3
A 1633 R	Radiator Cap, Complete.	AA1301 R	8	5
A 1640 R	Belt Pulley with Sleeve, Gear and Bushing.	AA1315 R	9	7
A 1658 R	Pulley Brake with Lining.	AA1318 R	9	7
A 1660 R	Crankshaft.	AA2034 R	3	1
A 1662 R	Flywheel with Bolts.	AA1305 R	3	1
A 1663 R	Main Bearing Housing with Cap, R. H.	AA1309 R	3	1
A 1664 R	Main Bearing Housing with Cap, L. H.	AA1310 R	3	1
A 1686 R	Rear Axle Housing Cover with Plug.	AA2049 R	12	10
A 1781 R	Air Cleaner Bracket, Complete.	AA1289 R	22	18
A 1893 R	Piston with Rings, .045" Oversize.	AA1572 R	3	1
A 2202 R	Muffler, Complete.	AA1920 R	5	3
A 2293 R	Flywheel with Bolts.	AA2373 R	24	24
A 2543 R	Housing with Power Shaft Oil Seal.	AA3004 R	23	23
B 36 R	Upper Steering Shaft Bearing with Bushing.	AB 214 R	5	3
B 290 R	Front Fan Shaft Bearing Housing with Tube.	AA 818 R	9	6
B 694 R	Cast Rear Wheel with Studs.	AB 823 R	12	11
B 694 R	Cast Rear Wheel with Demountable Rim.	AB 834 R	12	11
B 694 R	Cast Rear Wheel with Studs for Demountable Rim.	AA 917 R	12	11
C 167 R	Front Wheel Hub Cap with Oil Fitting.	AC 119 R	13	13

## TRANSMISSION CASE

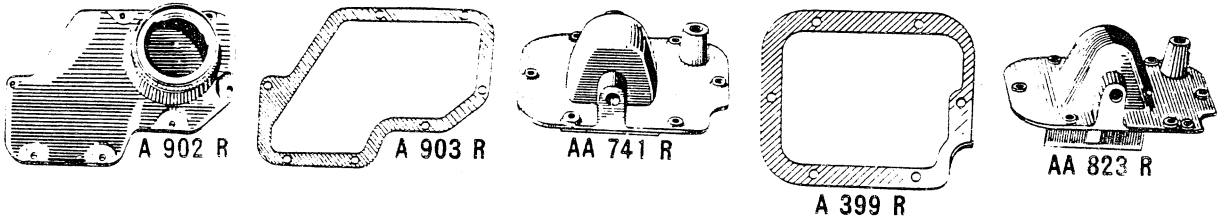


## ENGINE, PISTON, CONNECTING RODS, CRANKSHAFT

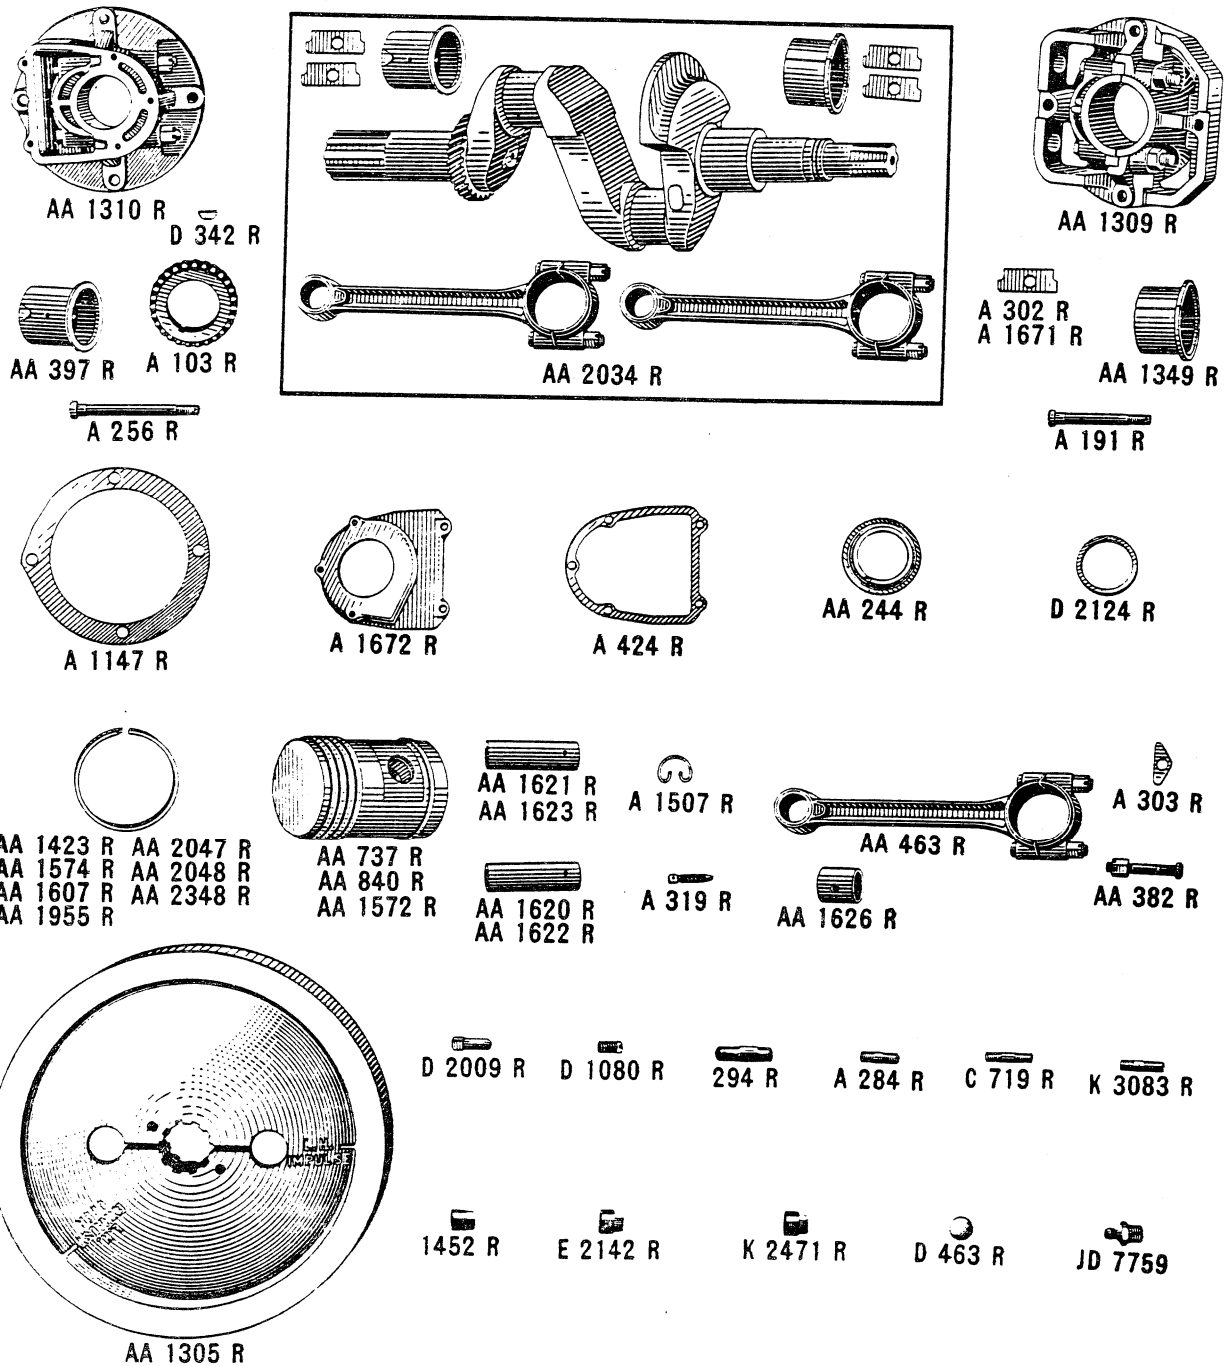





## CYLINDERHEAD, VALVES AND MANIFOLD

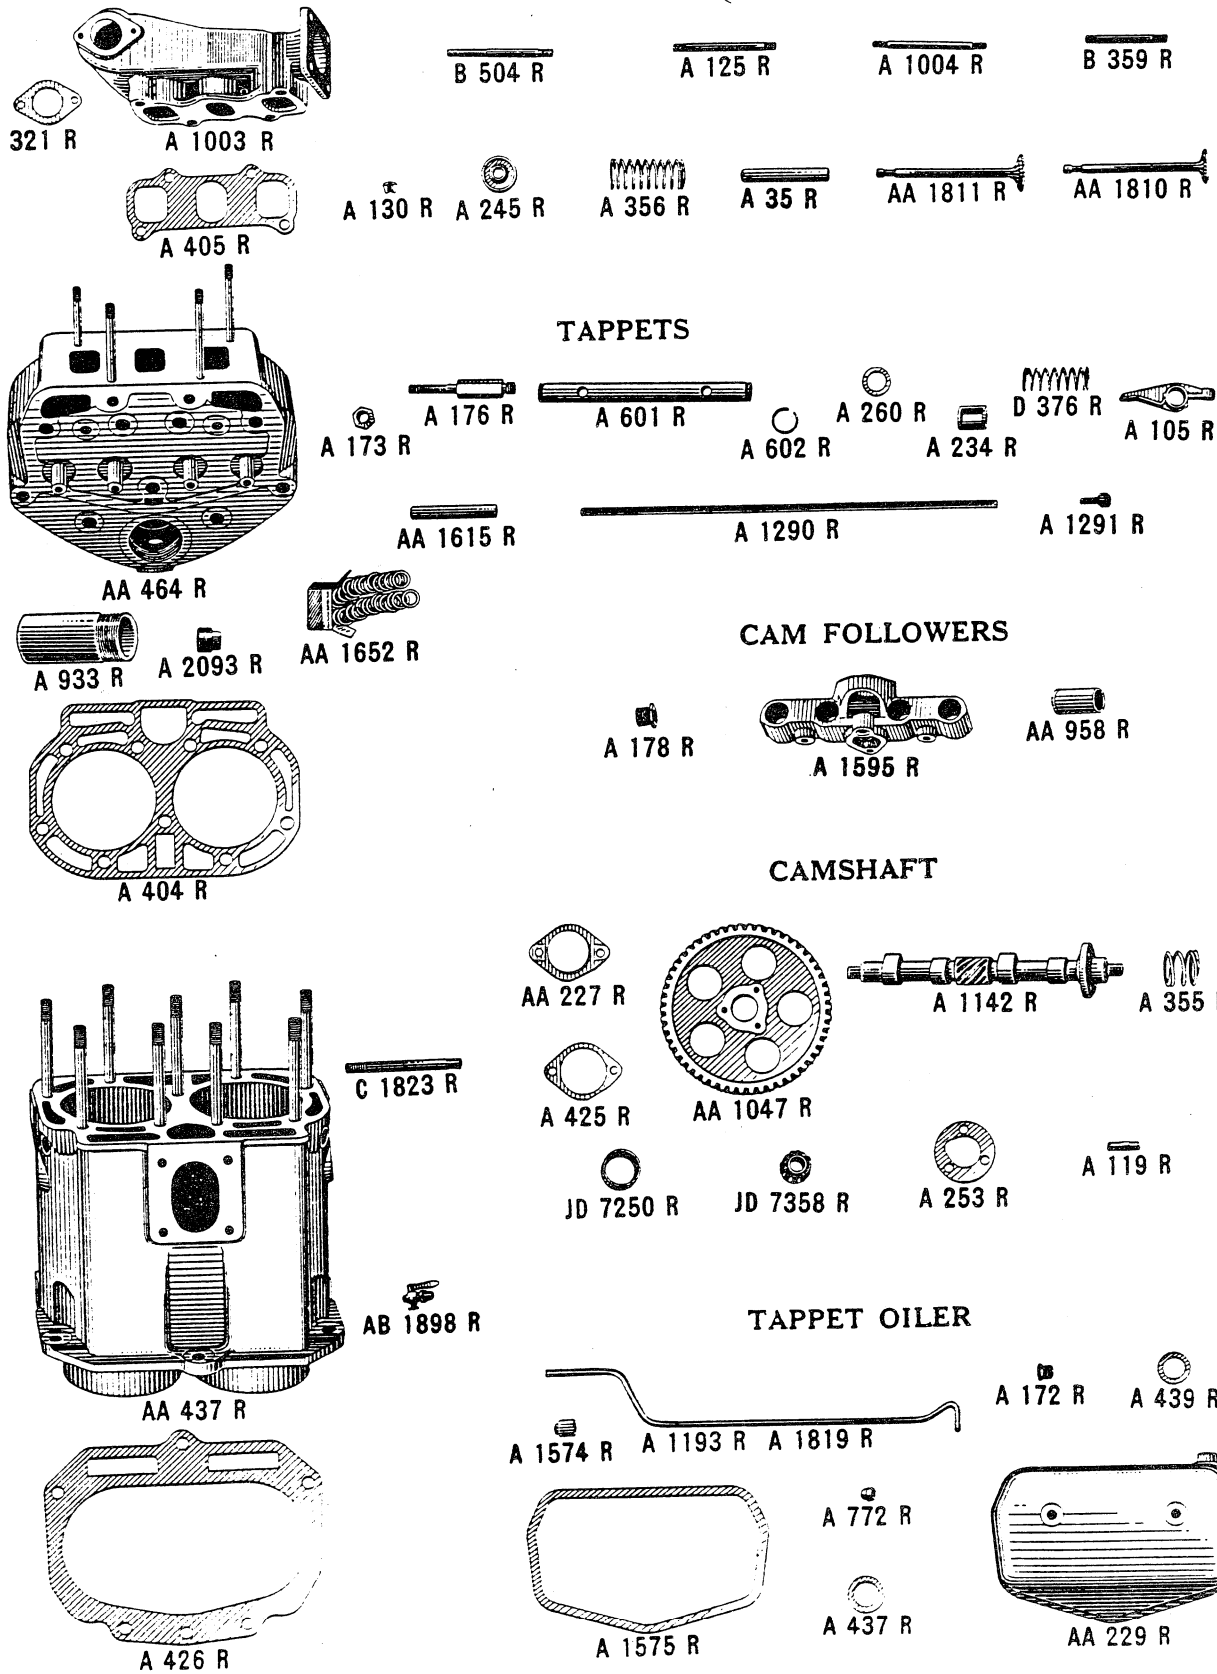




## GOVERNOR

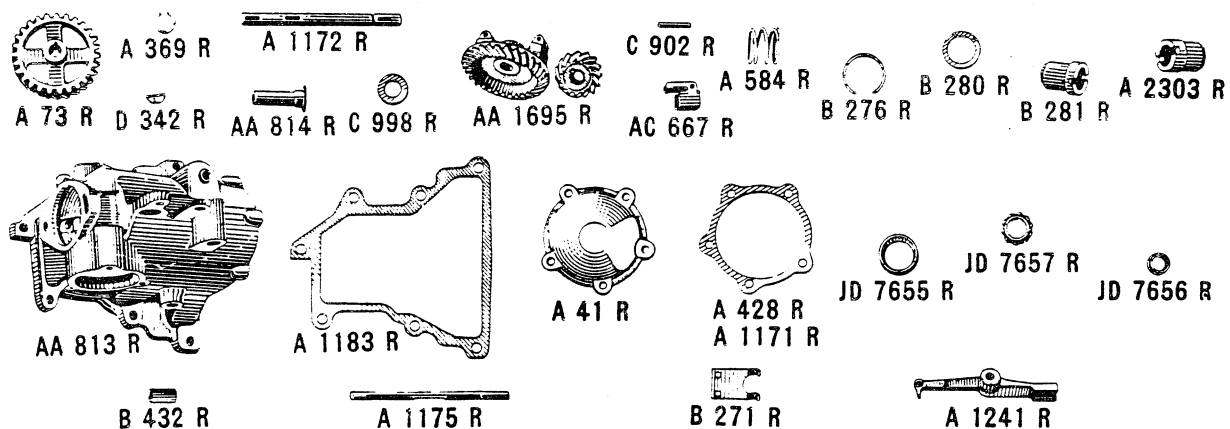


## CONTROLS

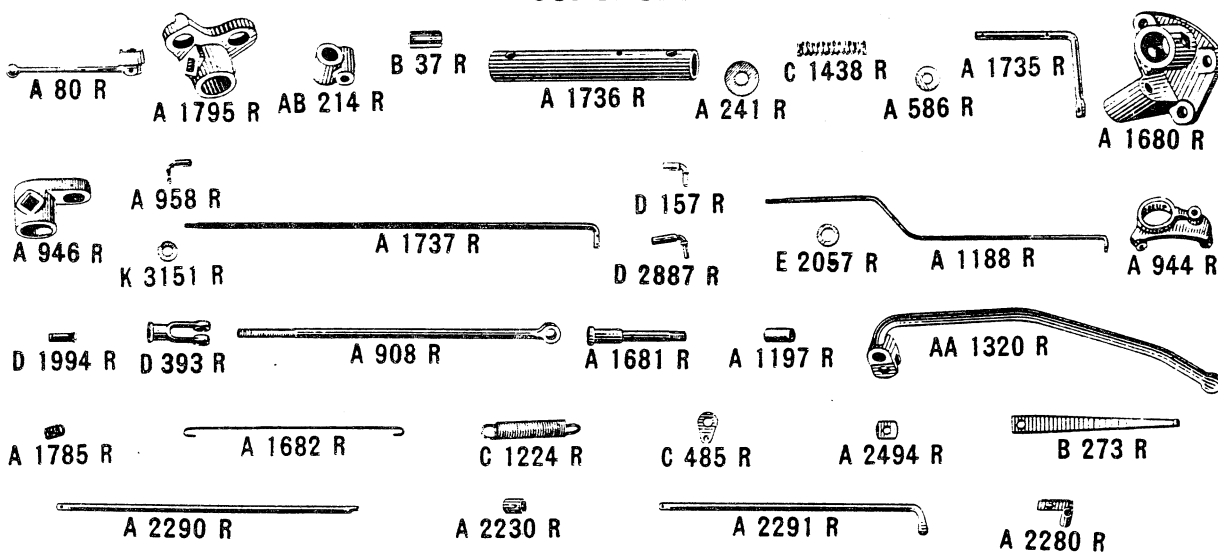


## MUFFLER

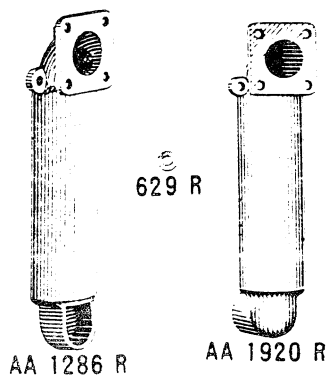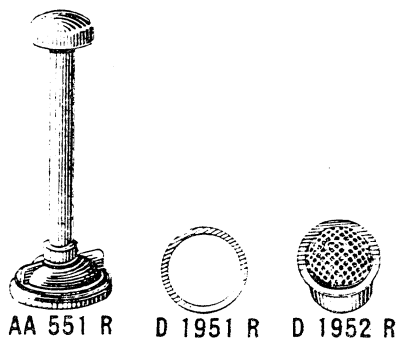 CRANKCASE  
BREATHERCRANKCASE  
VENTILATOR


## LUBRICATING SYSTEM AND OIL PUMP

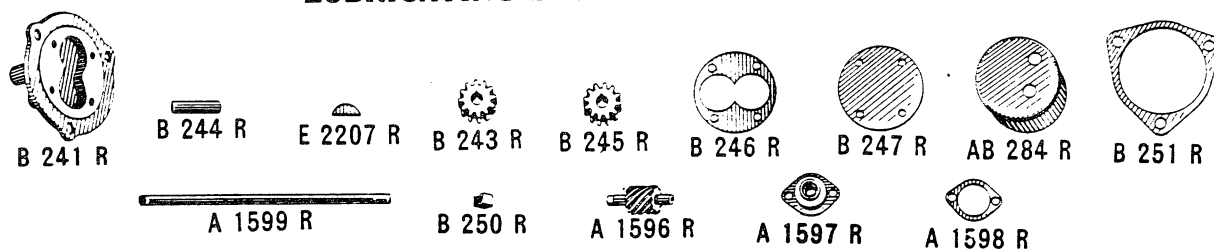


## OIL FILTER AND INDICATOR

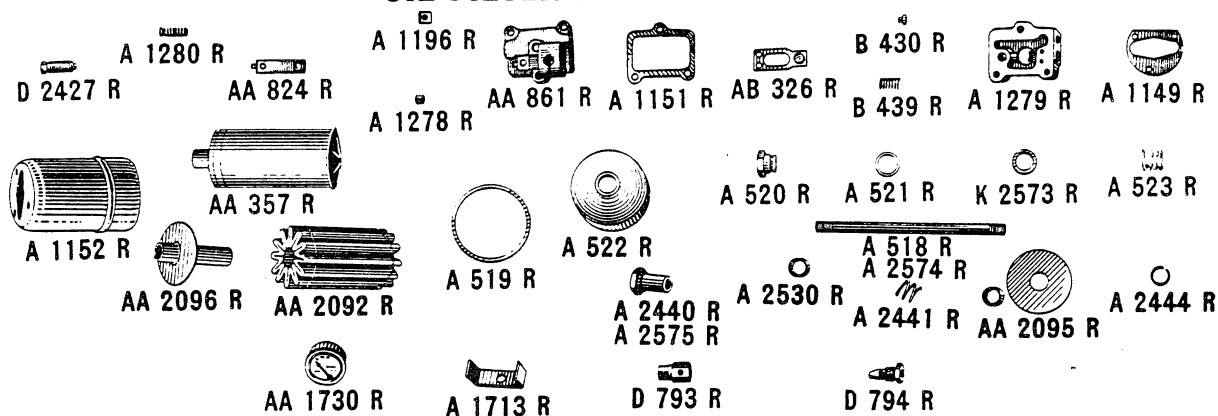




## OIL PIPES AND FITTING

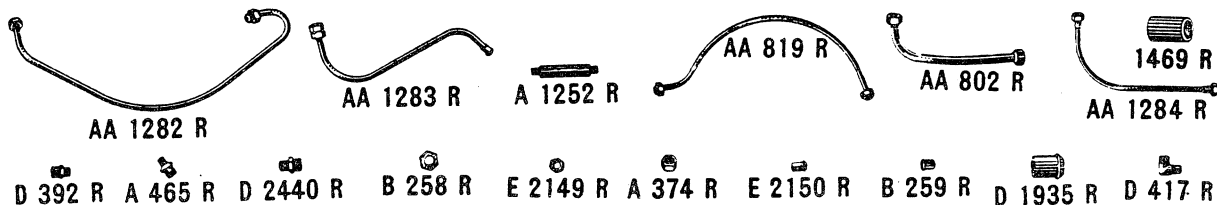









## FUEL SYSTEM

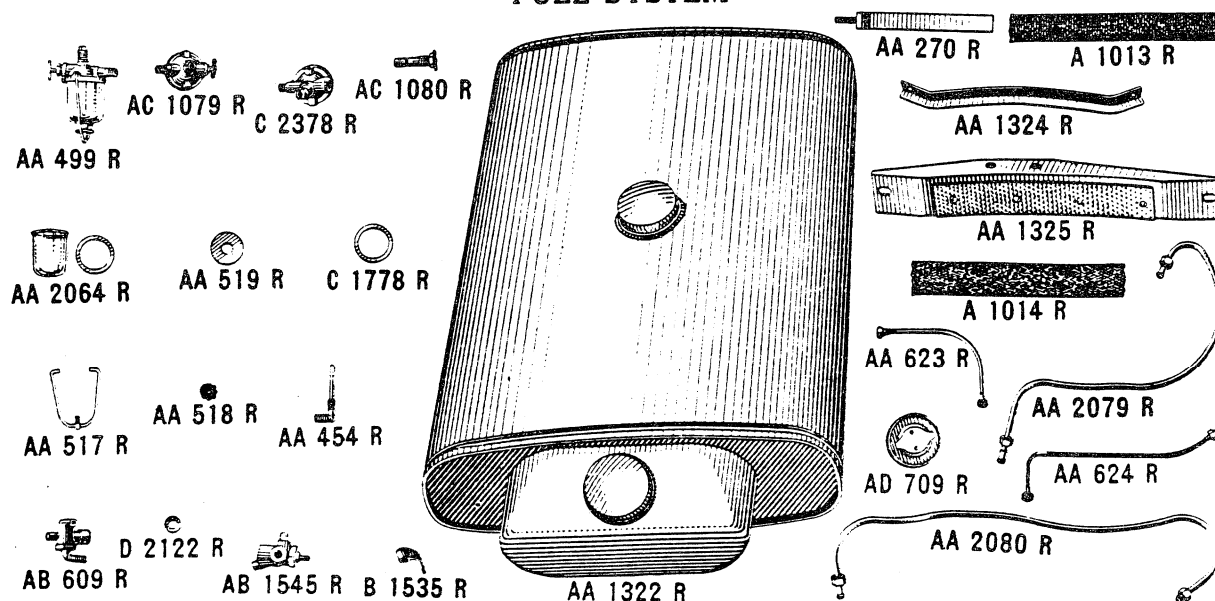


## COOLING SYSTEM

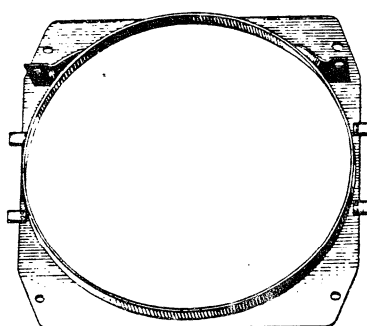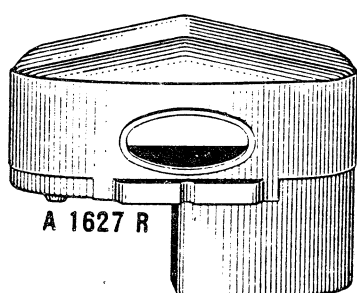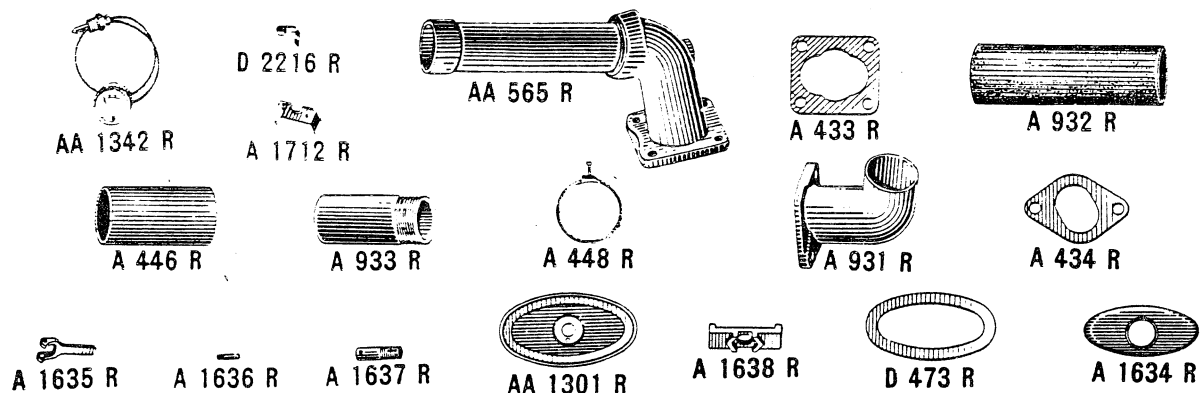


## HOOD

 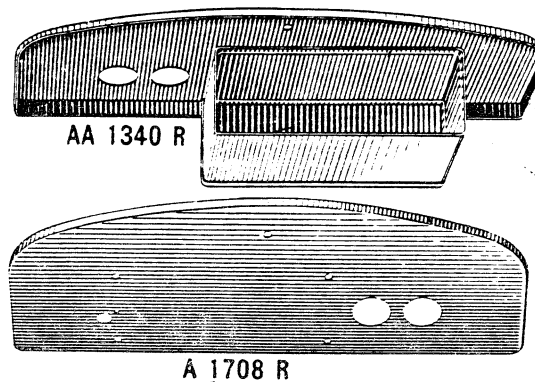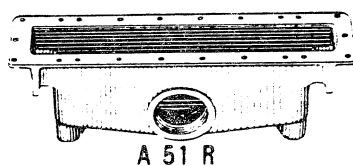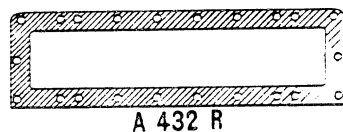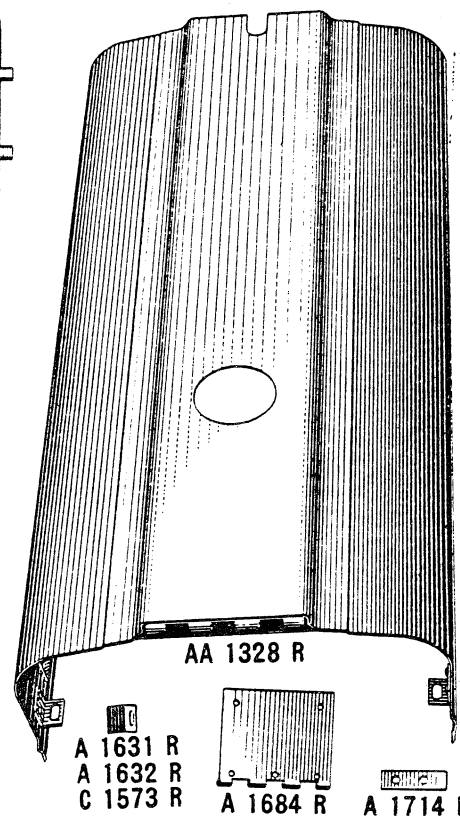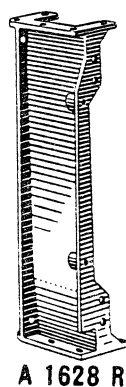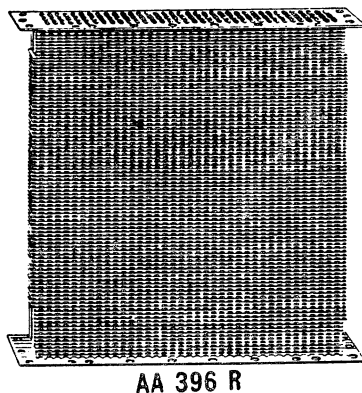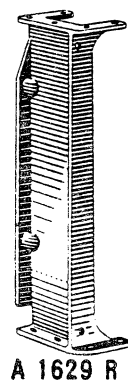


## RADIATOR GUARD, CURTAIN, SHUTTER AND SHUTTER CONTROL

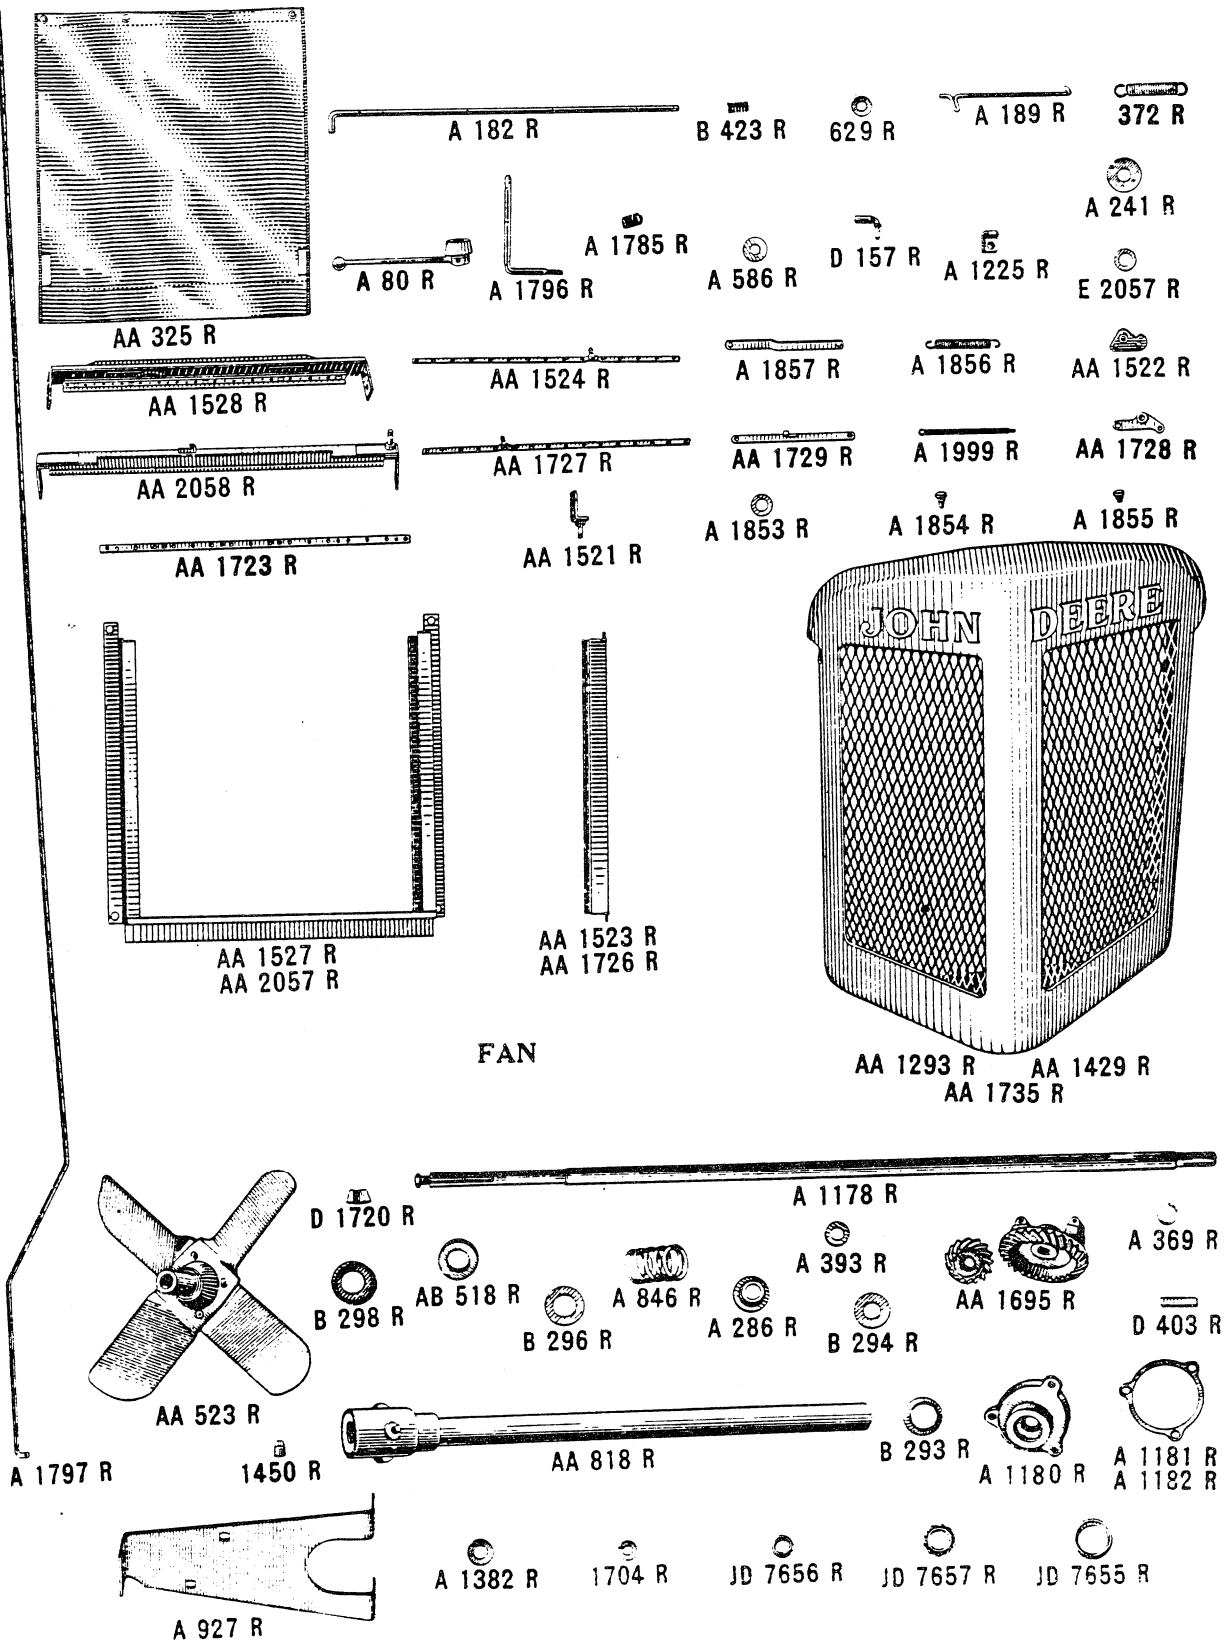


## PULLEY

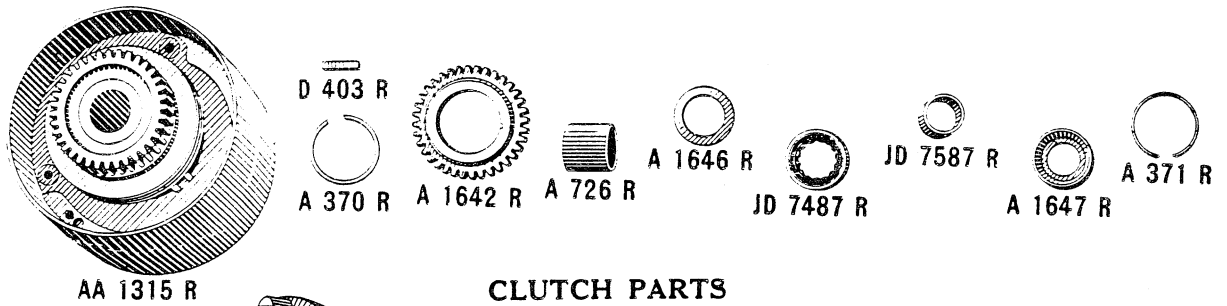


## CLUTCH PARTS

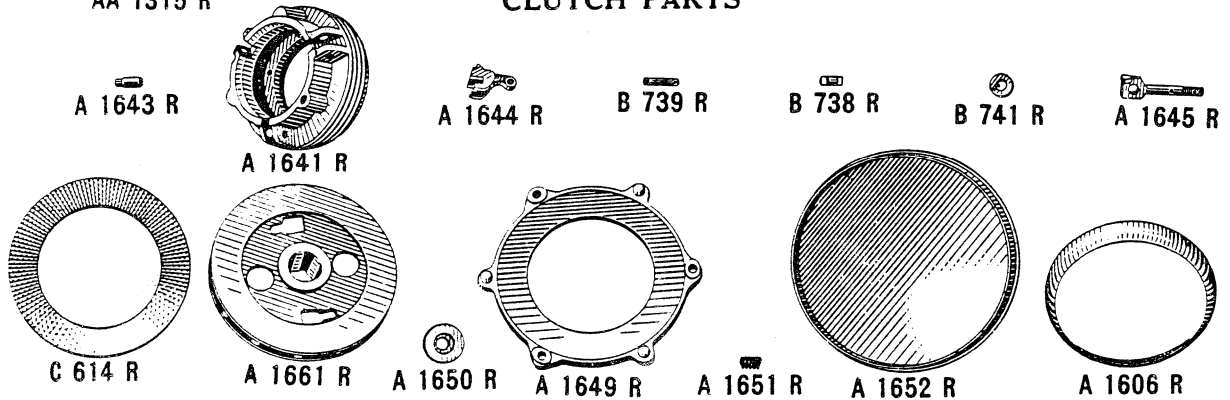


## CLUTCH FORK BEARING AND PULLEY BRAKE

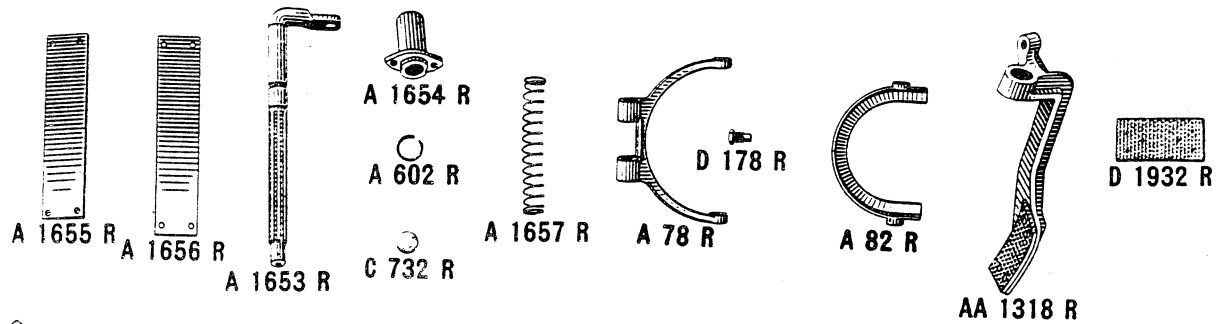


## GEAR SHIFT

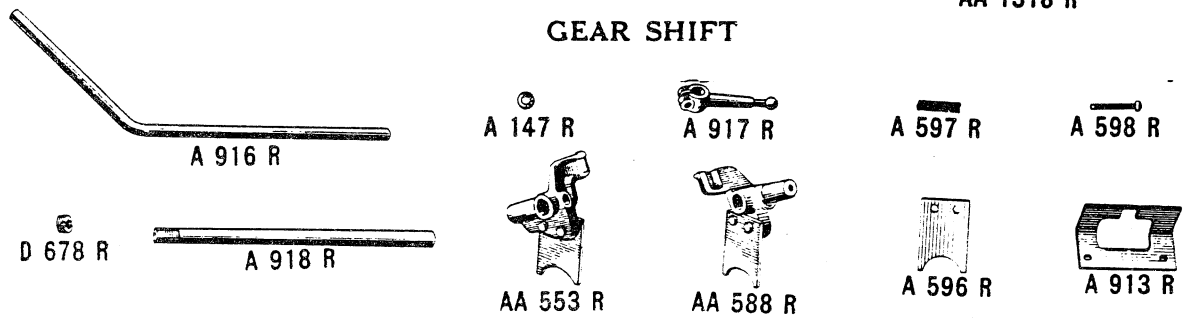


## SLIDING GEAR SHAFT

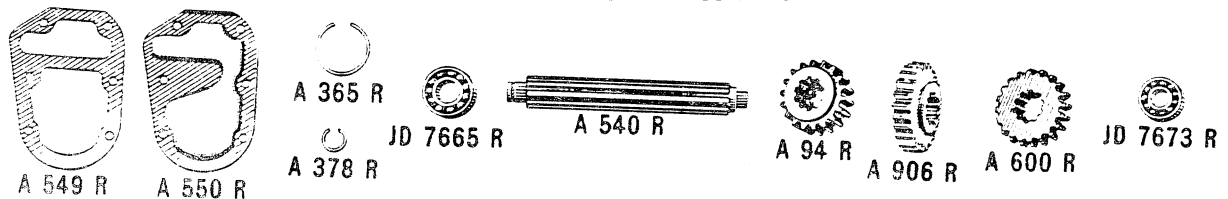


## OVERDRIVE GEAR SHIFT

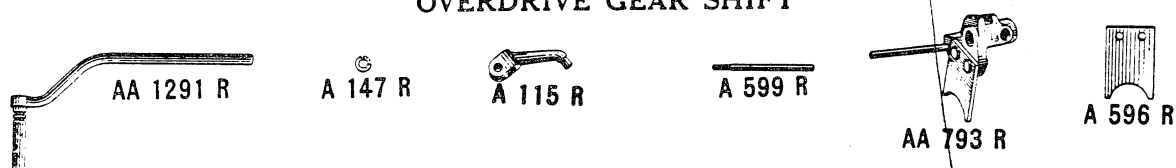

## OVERDRIVE GEAR AND SHAFT AND FIRST REDUCTION GEAR

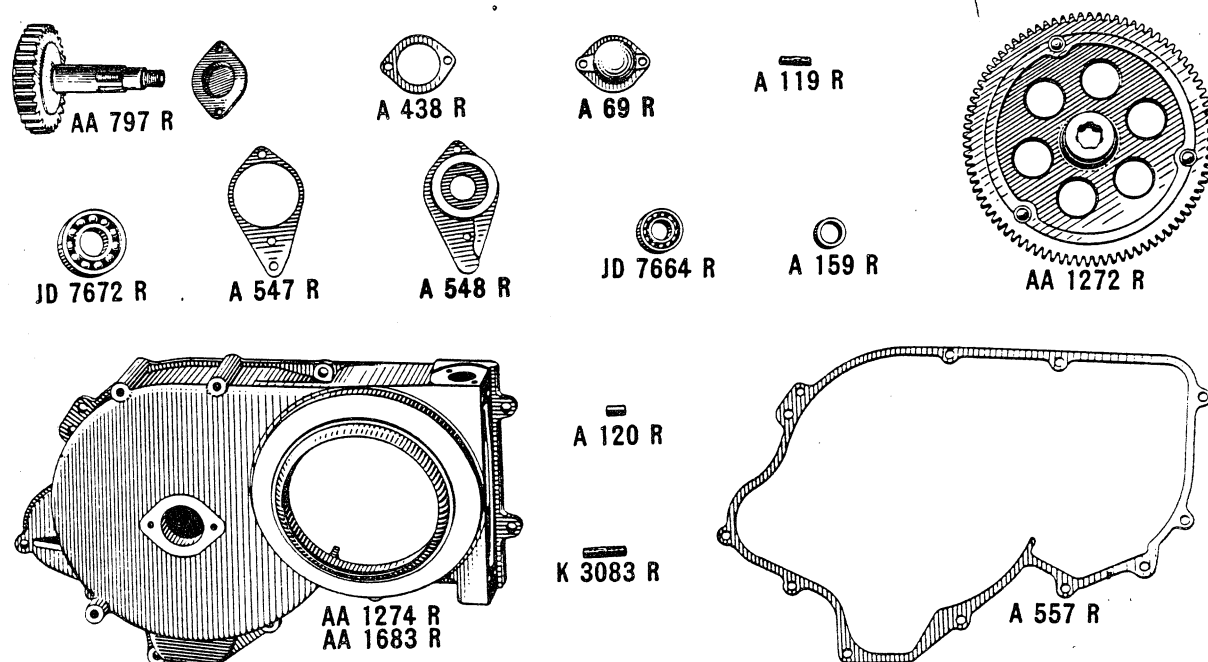


## COUNTERSHAFT IDLER GEAR AND COUNTERSHAFT

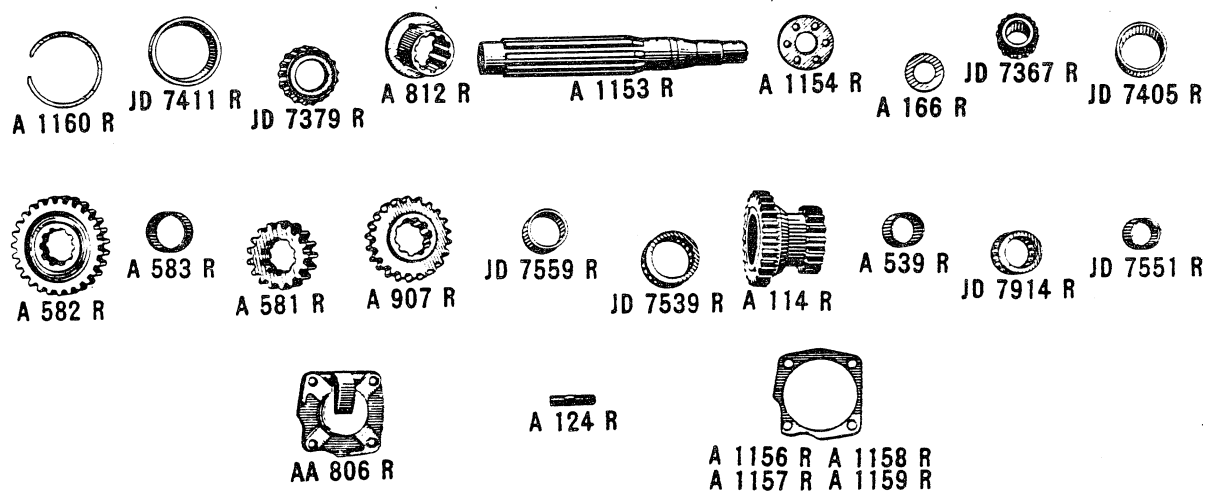


## AA521R HIGH SPEED GEAR ASSEMBLY




## AA1120R SLOW SPEED GEAR ASSEMBLY

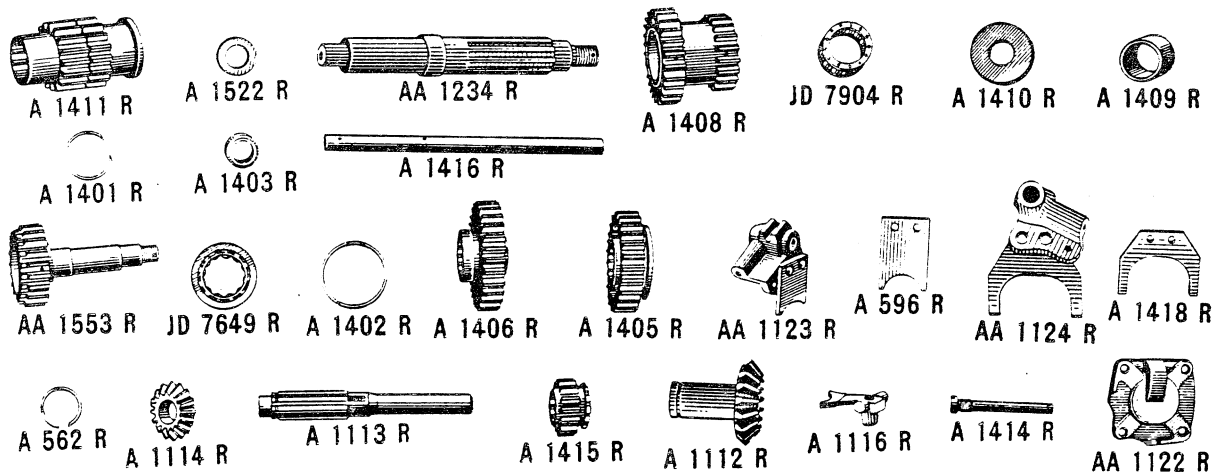

## DIFFERENTIAL





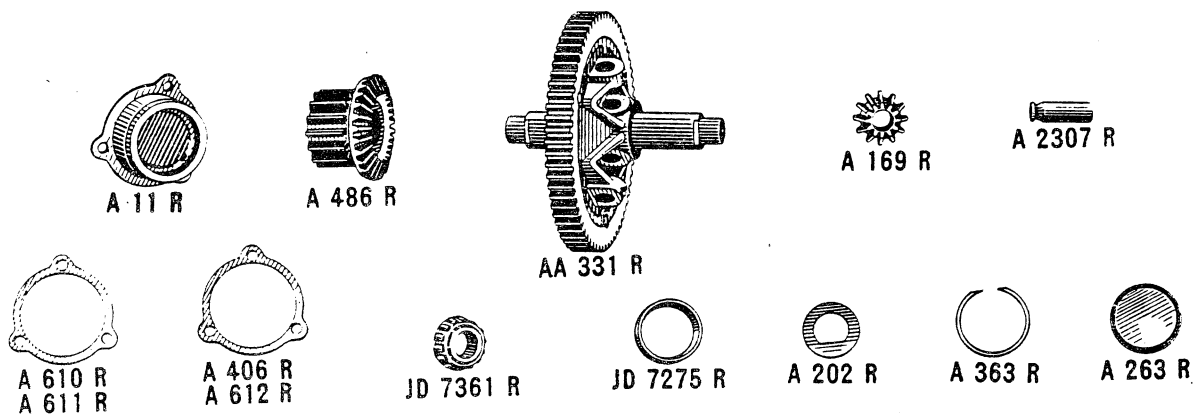


## FINAL DRIVE






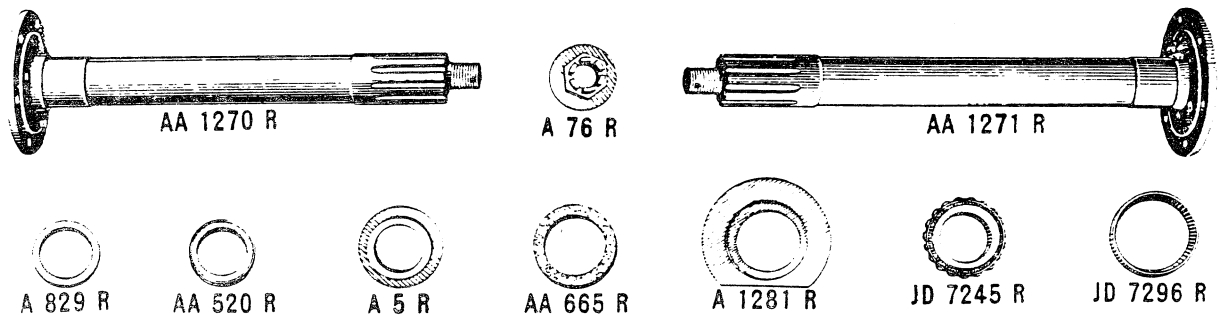





## FINAL DRIVE—Continued

 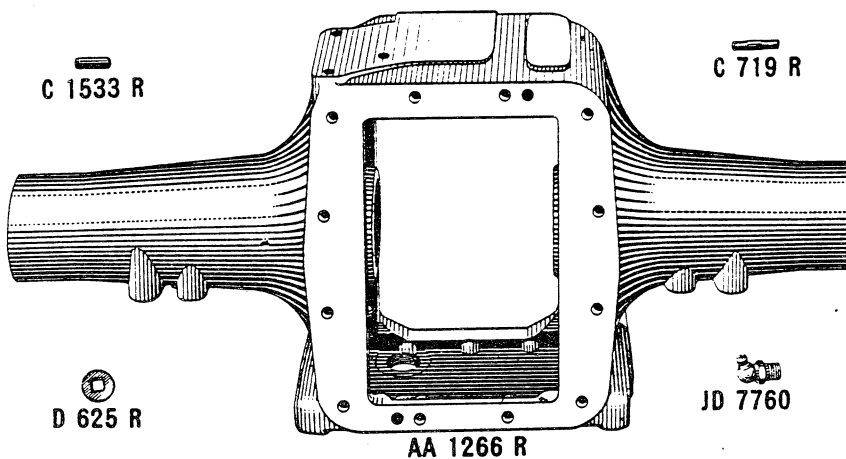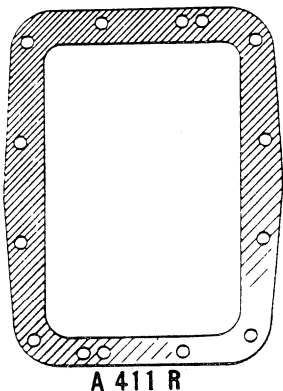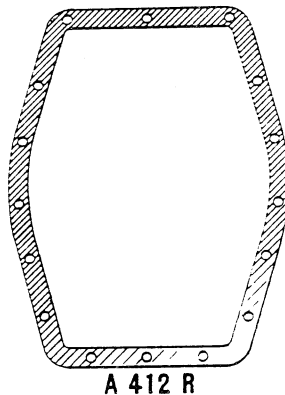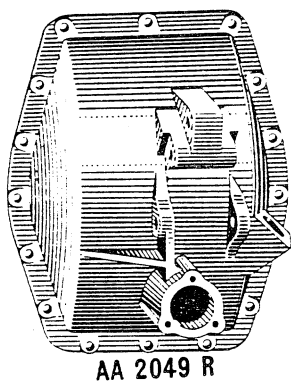

## REAR WHEELS AND REAR WHEEL EQUIPMENT

  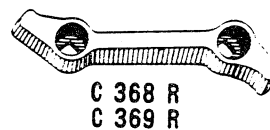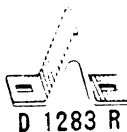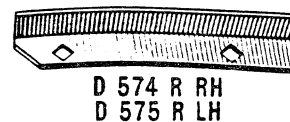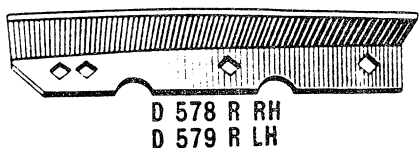


## REAR WHEELS AND REAR WHEEL EQUIPMENT—Continued

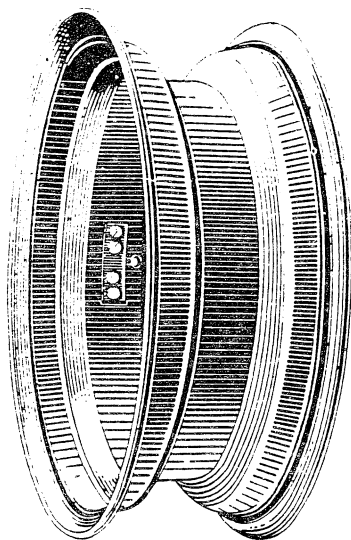


AA 917 R




C 1716 R

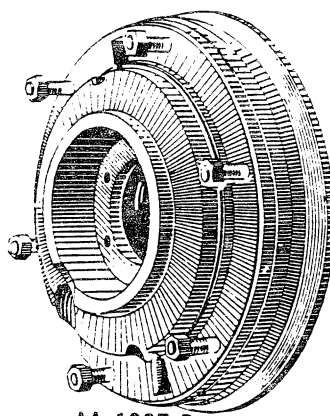AA 1087 R  
AB 823 R

D 2882 R

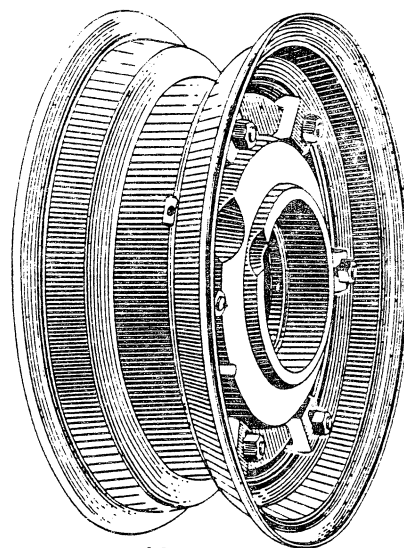AA 933 R  
AB 834 R

D 2526 R

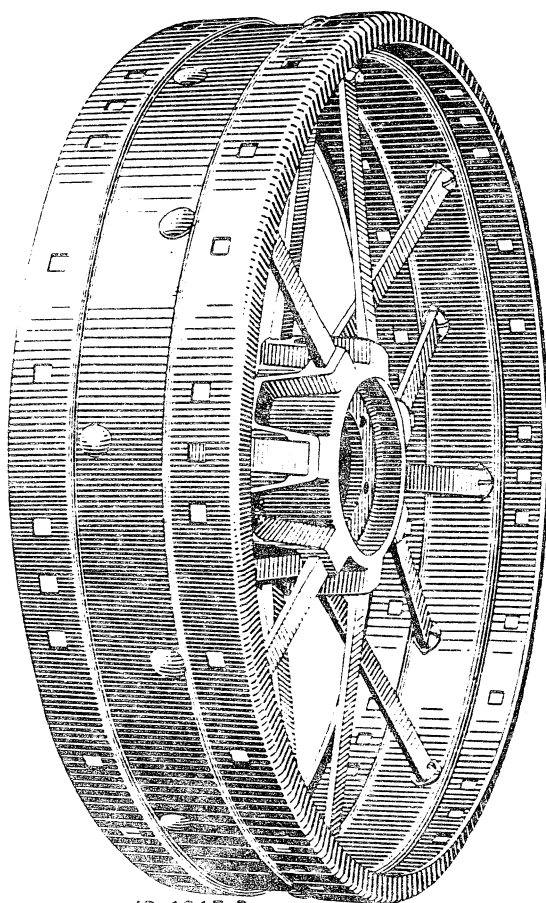

JD 1217 R



A 1062 R




C 2147 R



C 744 R




C 1030 R


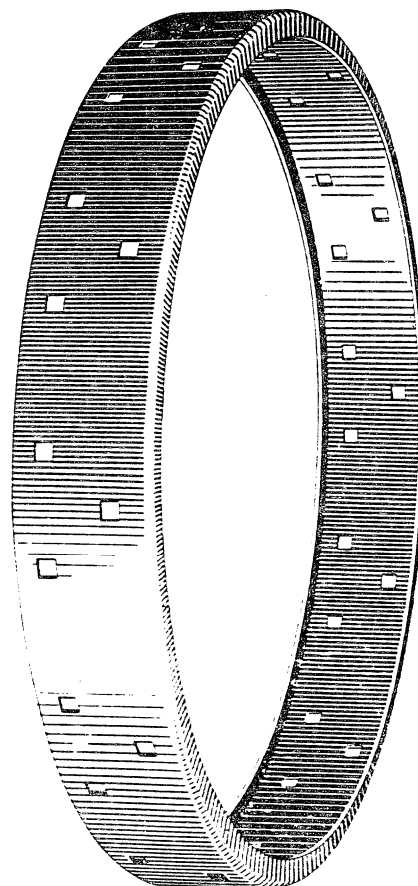


C 1027 R


## DIFFERENTIAL BRAKES

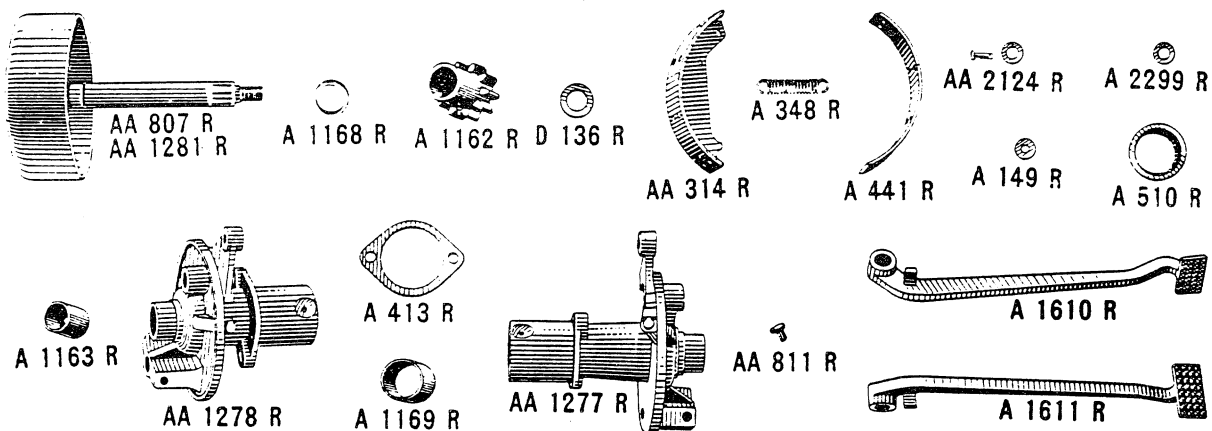

## FRONT AXLE AND FRONT END SUPPORT

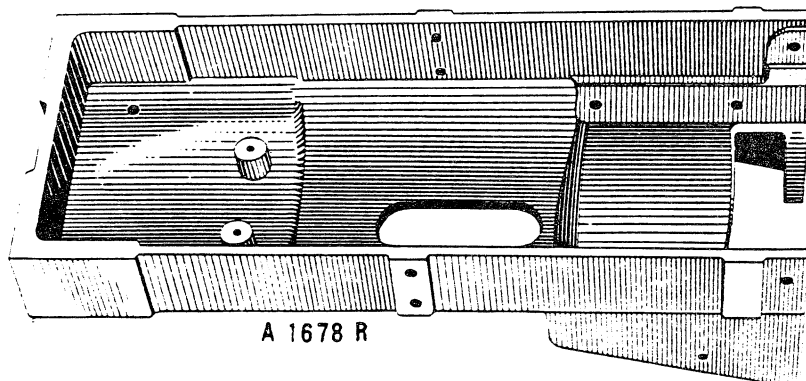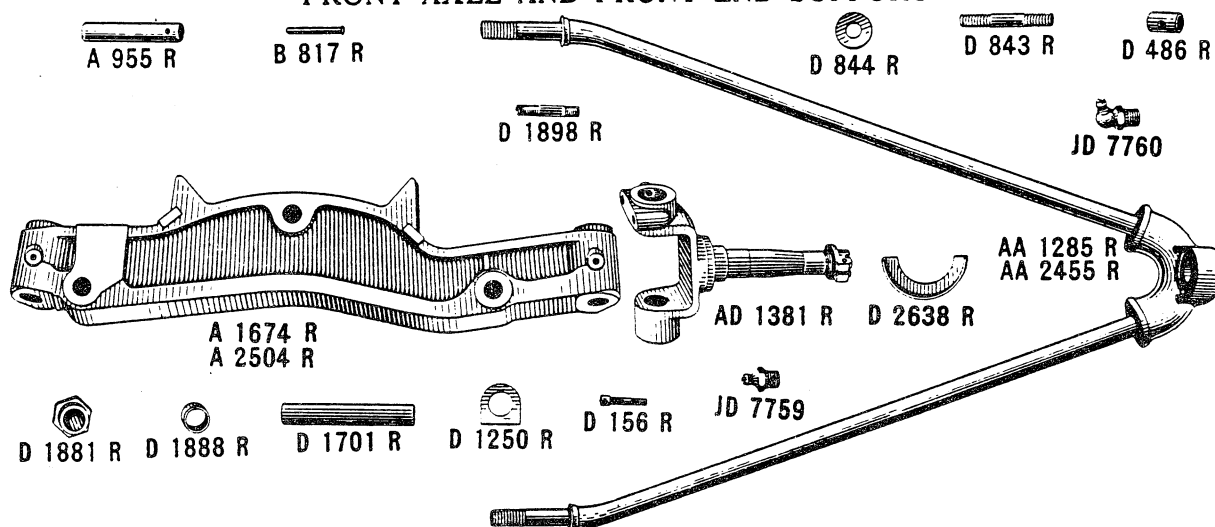


## FRONT WHEELS AND FRONT WHEEL EQUIPMENT

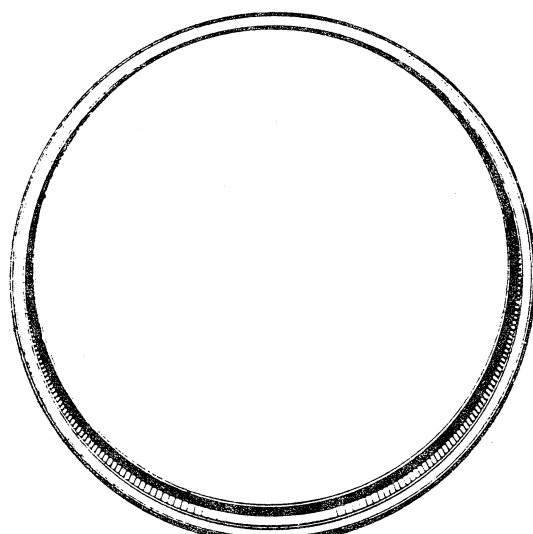


D 582 R




A 1828 R

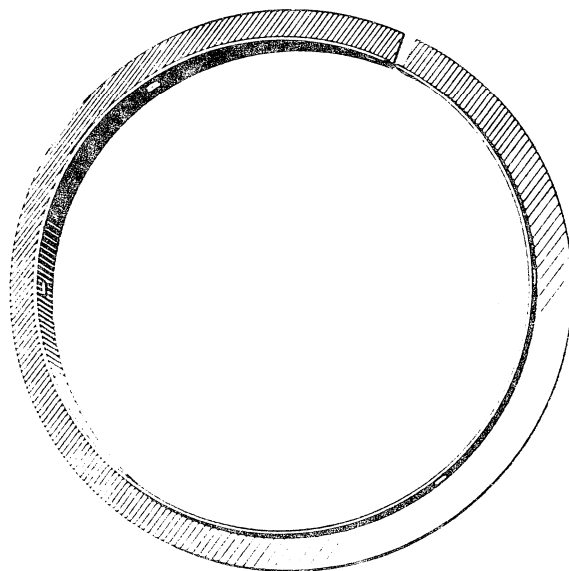


D 1524 R

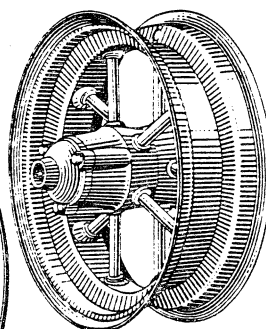


AC 1062 R

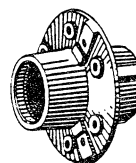

AA 1395 R

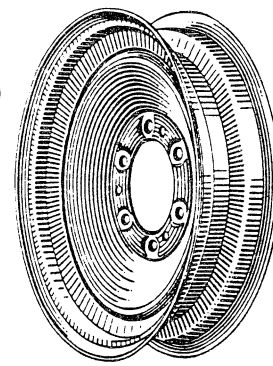
JD 15 R  
JD 17 R

JD 1232 R

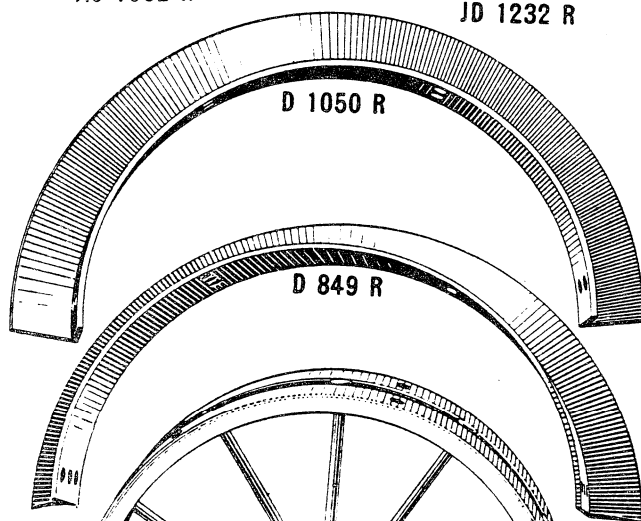


D 1050 R

D 849 R

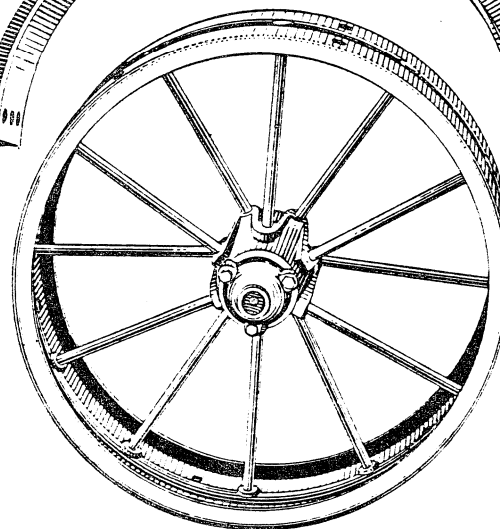


AD 900 R


## STEERING PARTS

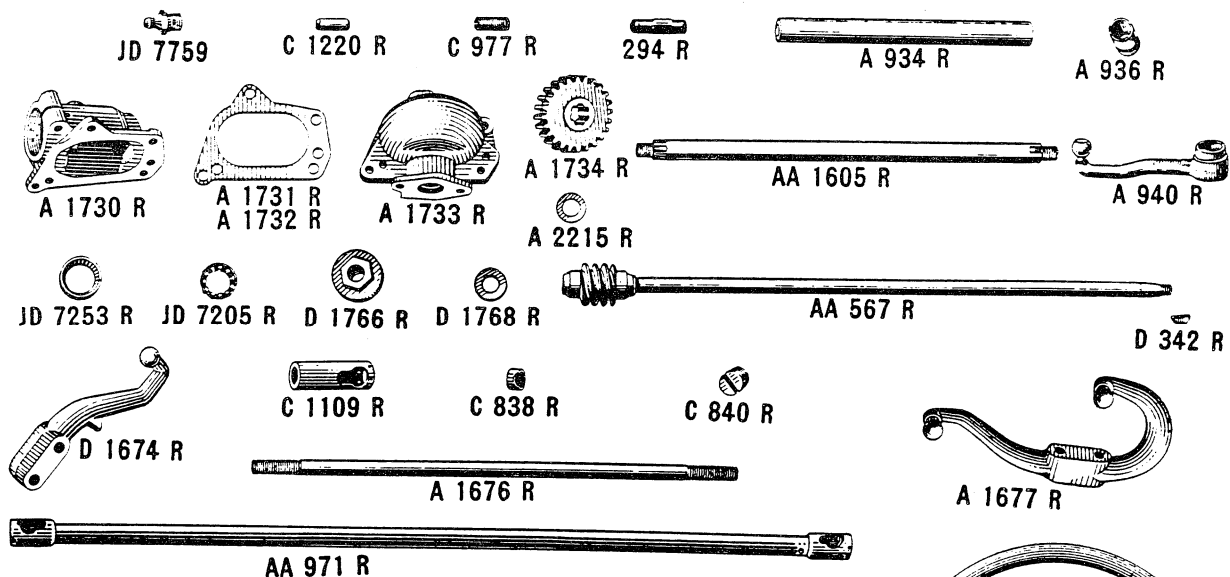


## SEAT AND DRAWBAR

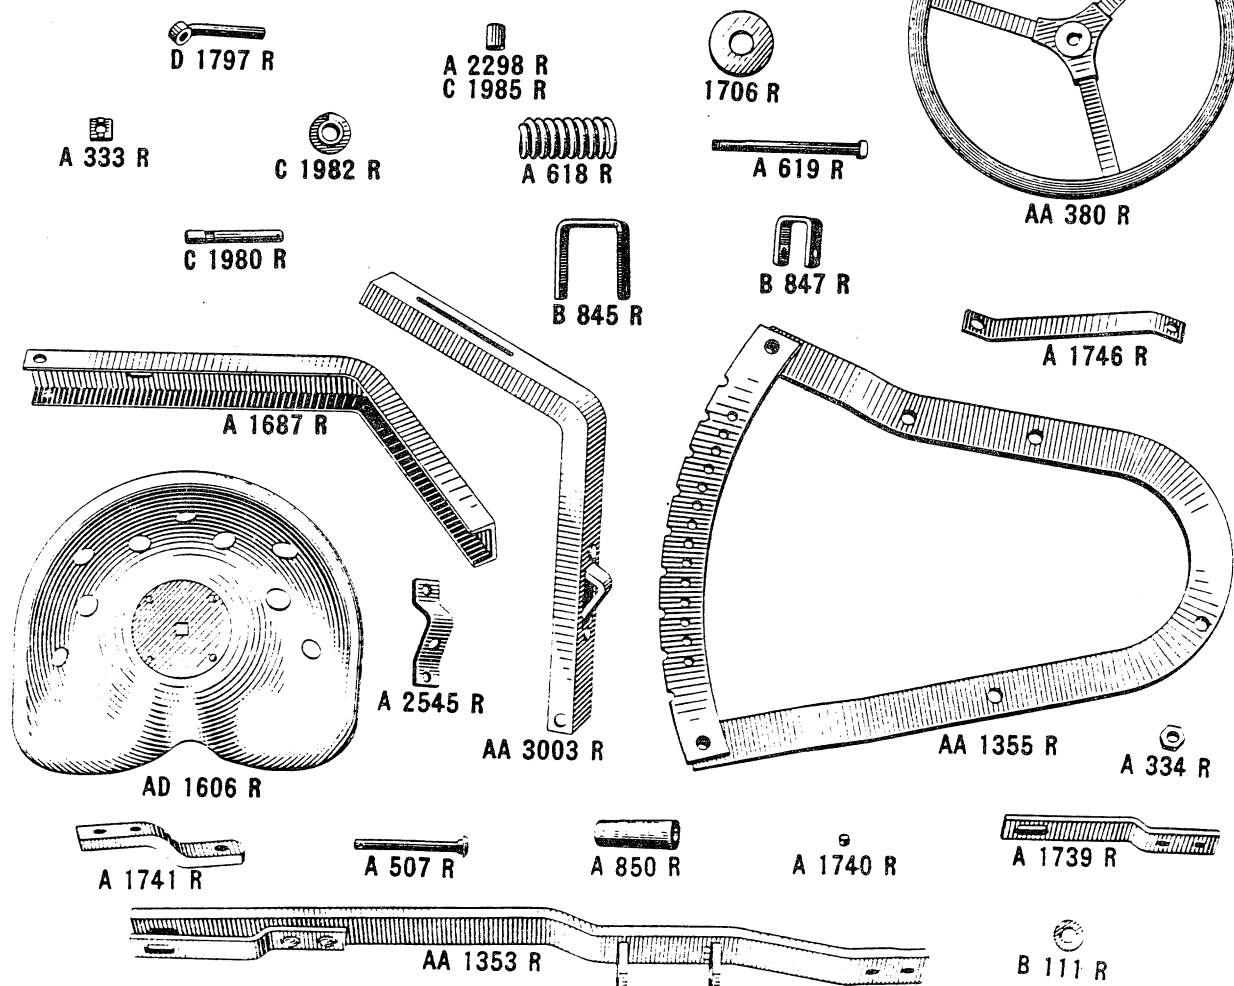





## COWL

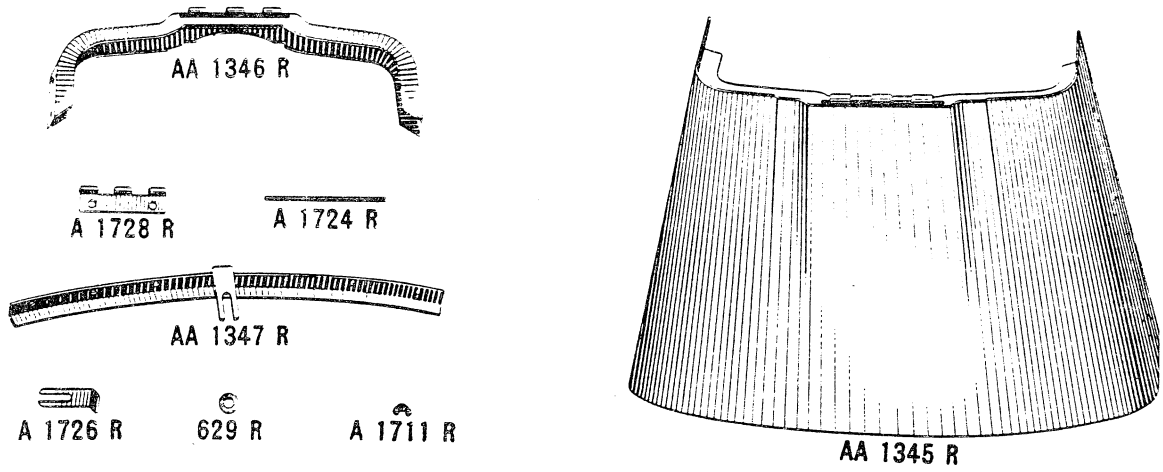

## PLATFORM

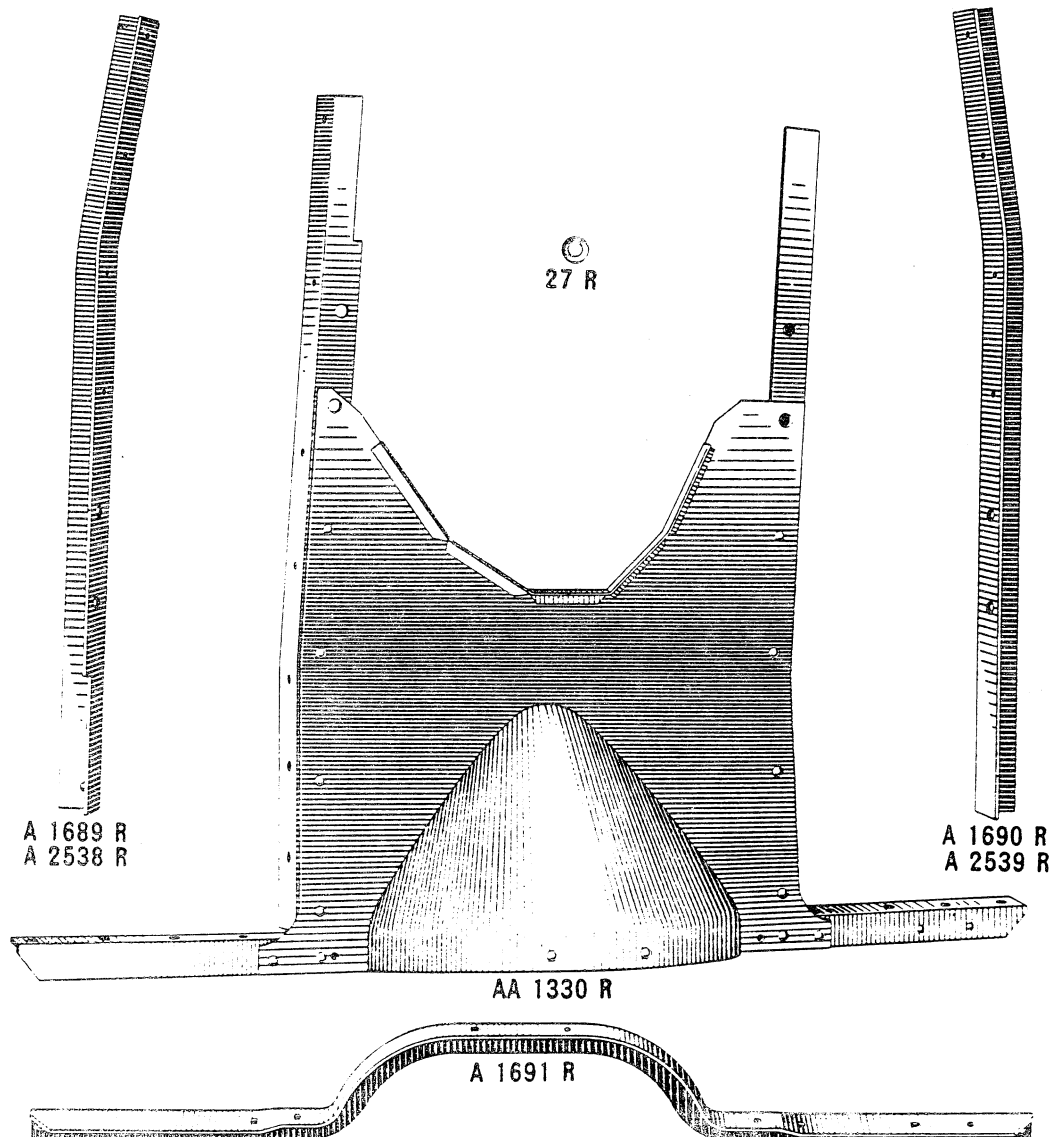

## PLATFORM—Continued

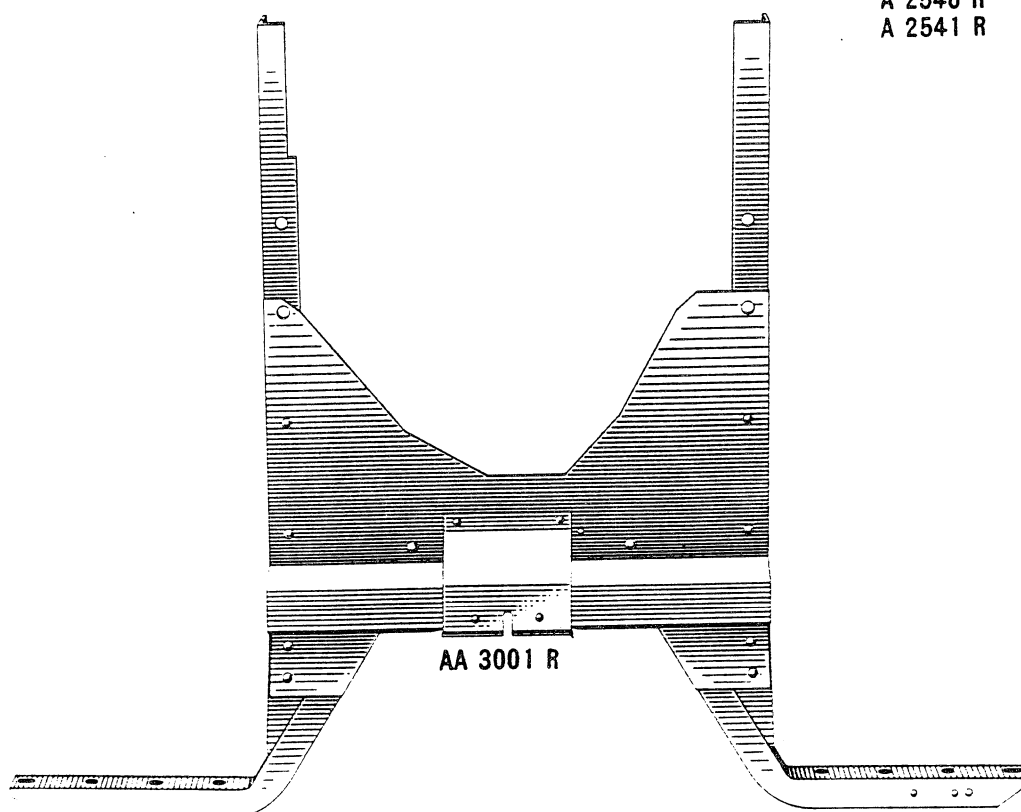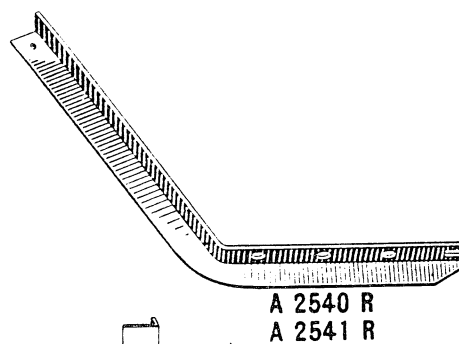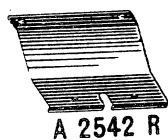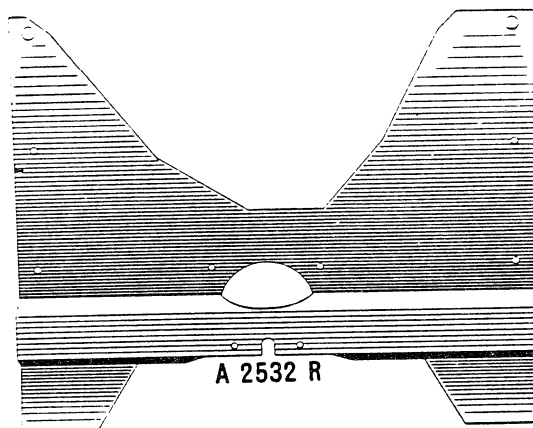

## FENDERS


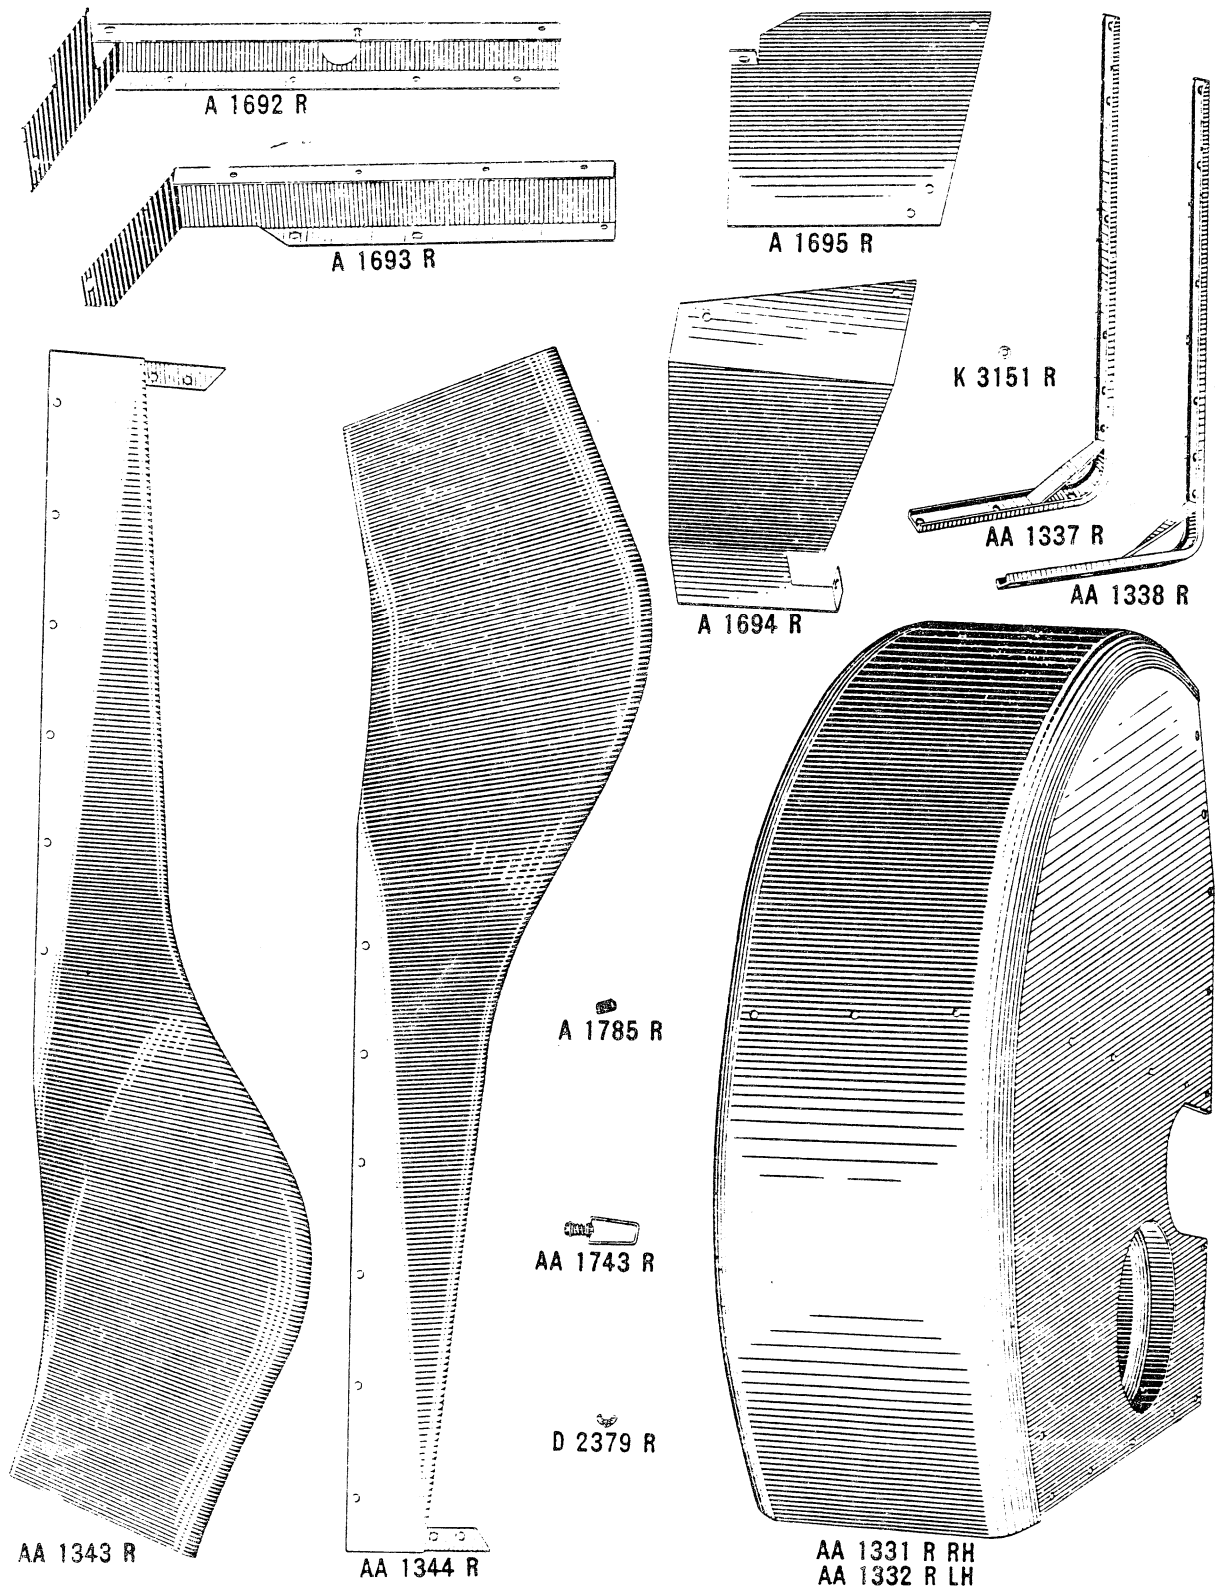



Plate No. 17




## AIR CLEANER

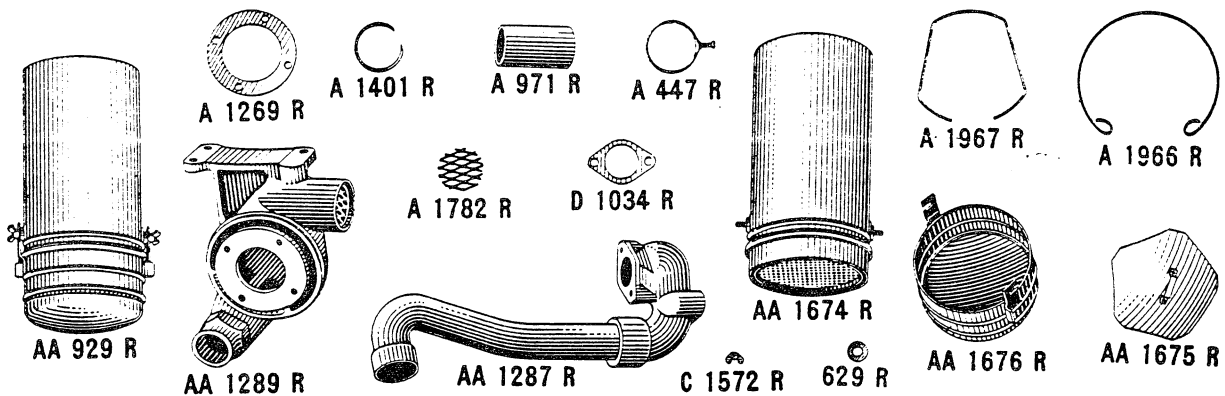

## MAGNETO, SPARK PLUGS, CABLES

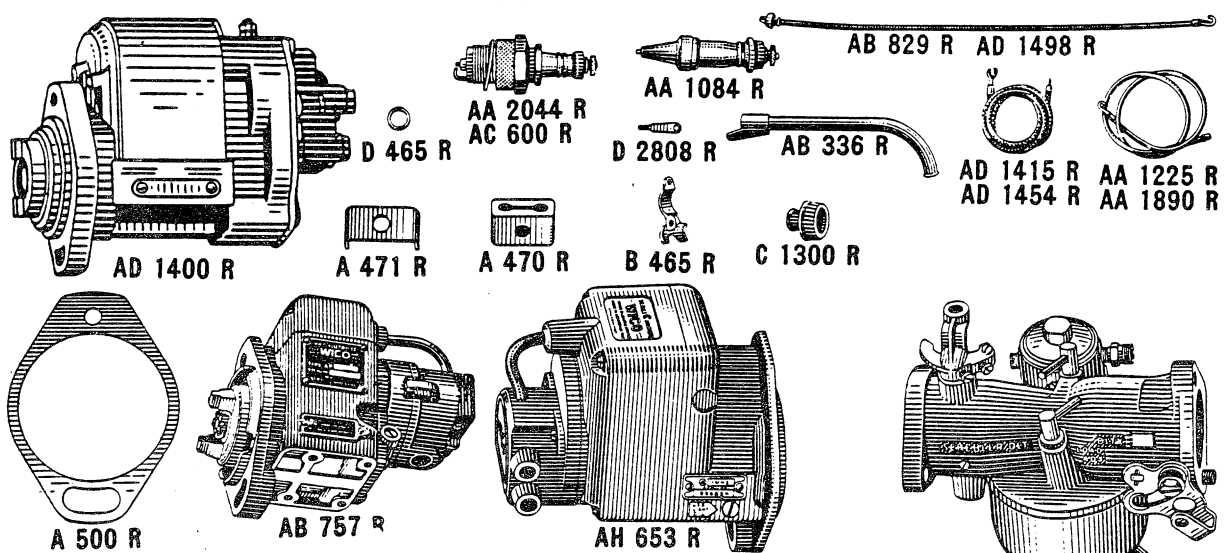


## AA580R CARBURETOR PARTS

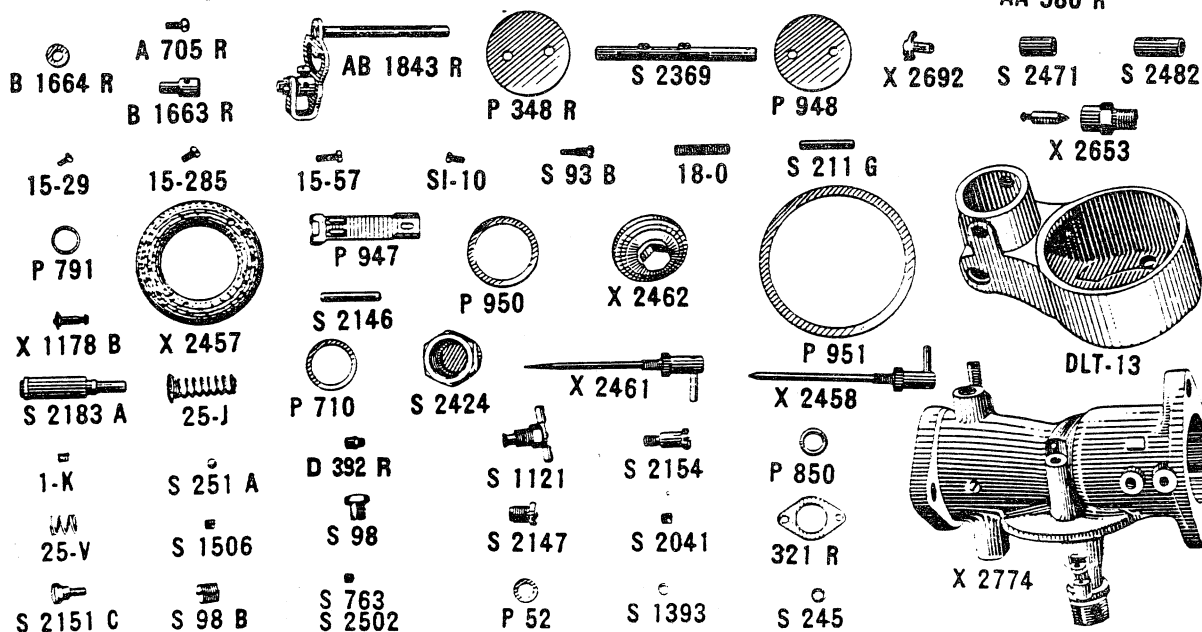


B 980 R  
 A 719 R  
 C 1333 R  
 A 710 R  
 A 712 R  
 A 709 R  
 AB 386 R  
 B 522 R  
 B 521 R  
 B 517 R  
 AB 707 R  
 AB 1085 R  
 C 1335 R  
 B 594 R  
 C 1334 R  
 B 595 R  
 B 516 R  
 AB 384 R  
 AA 424 R  
 AB 1084 R  
 A 769 R  
 A 770 R  
 B 519 R  
 B 520 R  
 B 518 R  
 C 1330 R  
 B 977 R  
 B 978 R  
 A 1103 R  
 A 1102 R  
 A 1104 R  
 B 979 R  
 A 715 R  
 AA 2059 R  
 A 708 R  
 AA 1624 R  
 AB 380 R  
 AA 422 R  
 A 705 R  
 A 703 R  
 A 702 R  
 A 707 R  
 AA 419 R  
 A 706 R  
 A 704 R  
 A 700 R  
 AA 417 R  
 AA 416 R  
 A 701 R  
 A 768 R  
 AA 425 R  
 A 718 R  
 A 698 R  
 A 766 R  
 B 514 R  
 A 717 R  
 B 523 R  
 B 524 R  
 B 525 R  
 B 515 R  
 A 721 R  
 AB 383 R  
 A 716 R  
 A 894 R  
 A 723 R  
 A 722 R  
 B 508 R  
 B 509 R  
 B 507 R  
 A 767 R  
 AA 415 R  
 AB 379 R  
 AA 414 R  
 A 695 R  
 B 510 R


### AD1400R MAGNETO PARTS (Edison-Splitdorf Type CD Flange Mounted)

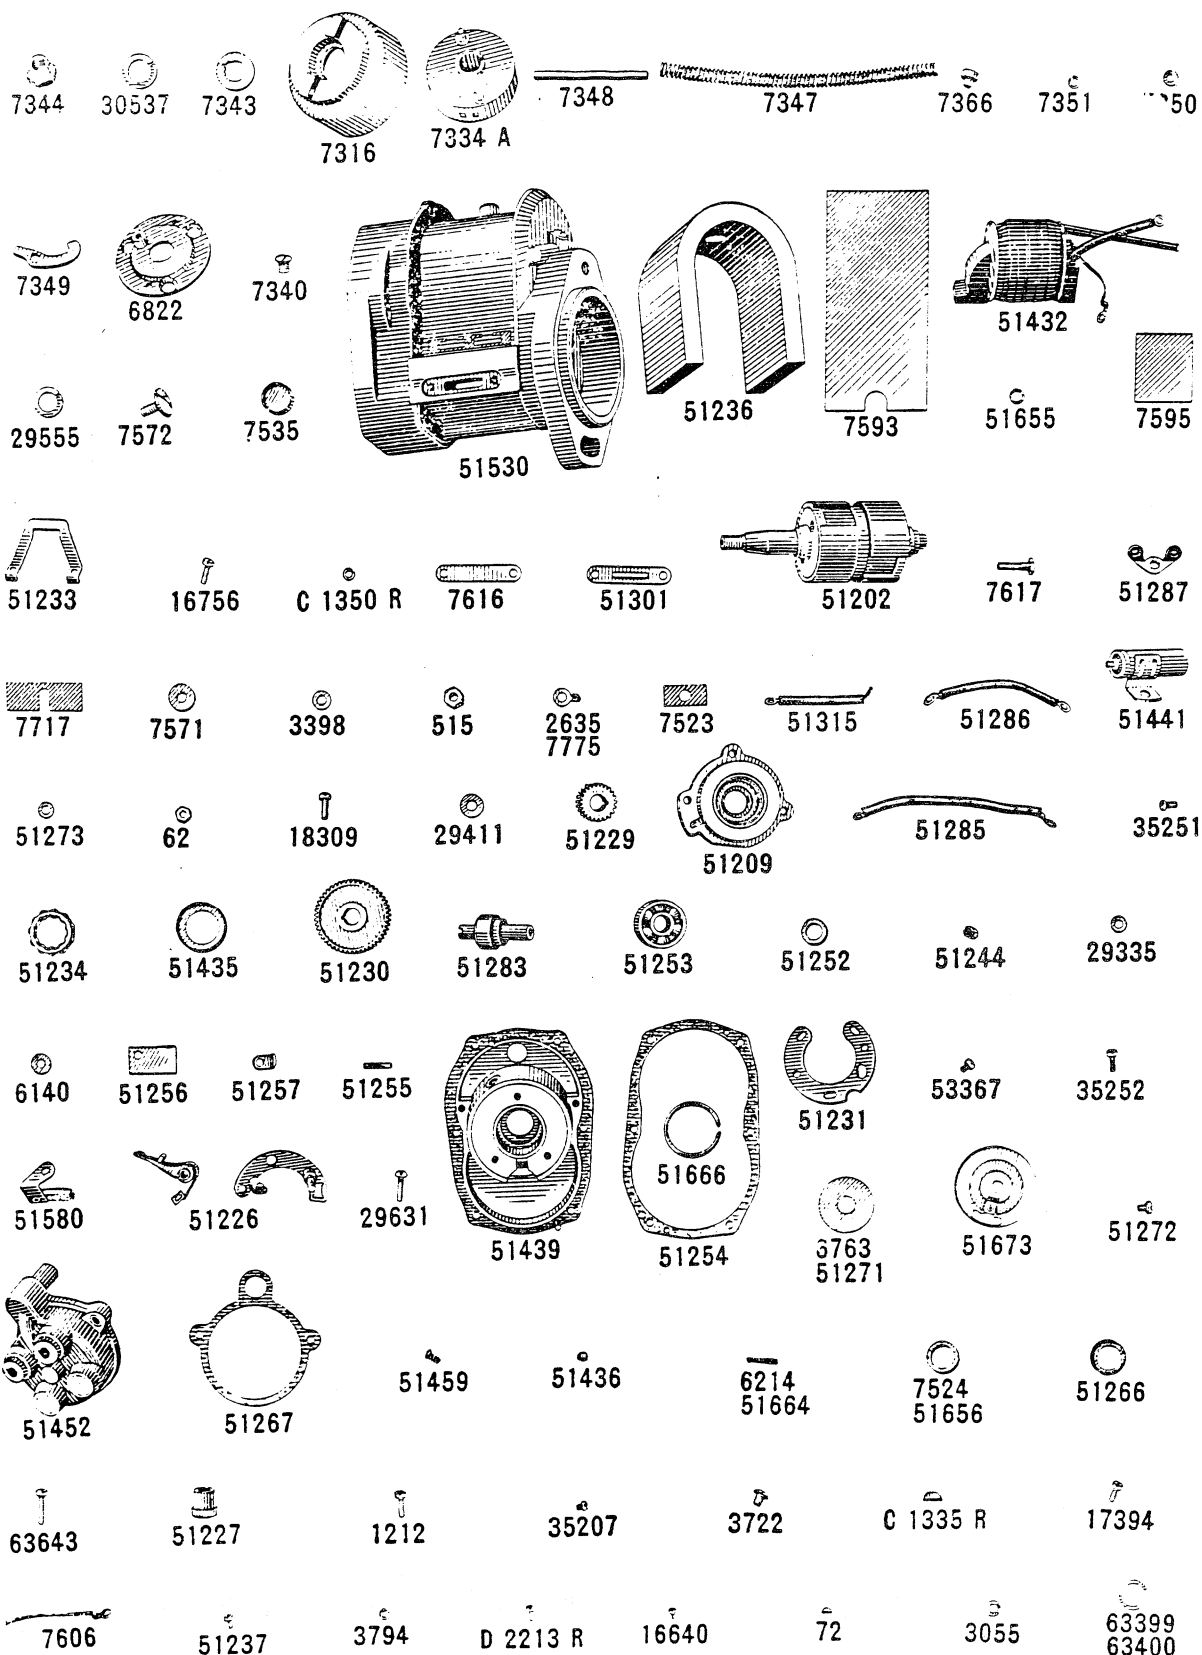




# AB757 MAGNETO PARTS (Wico Type AP477B)

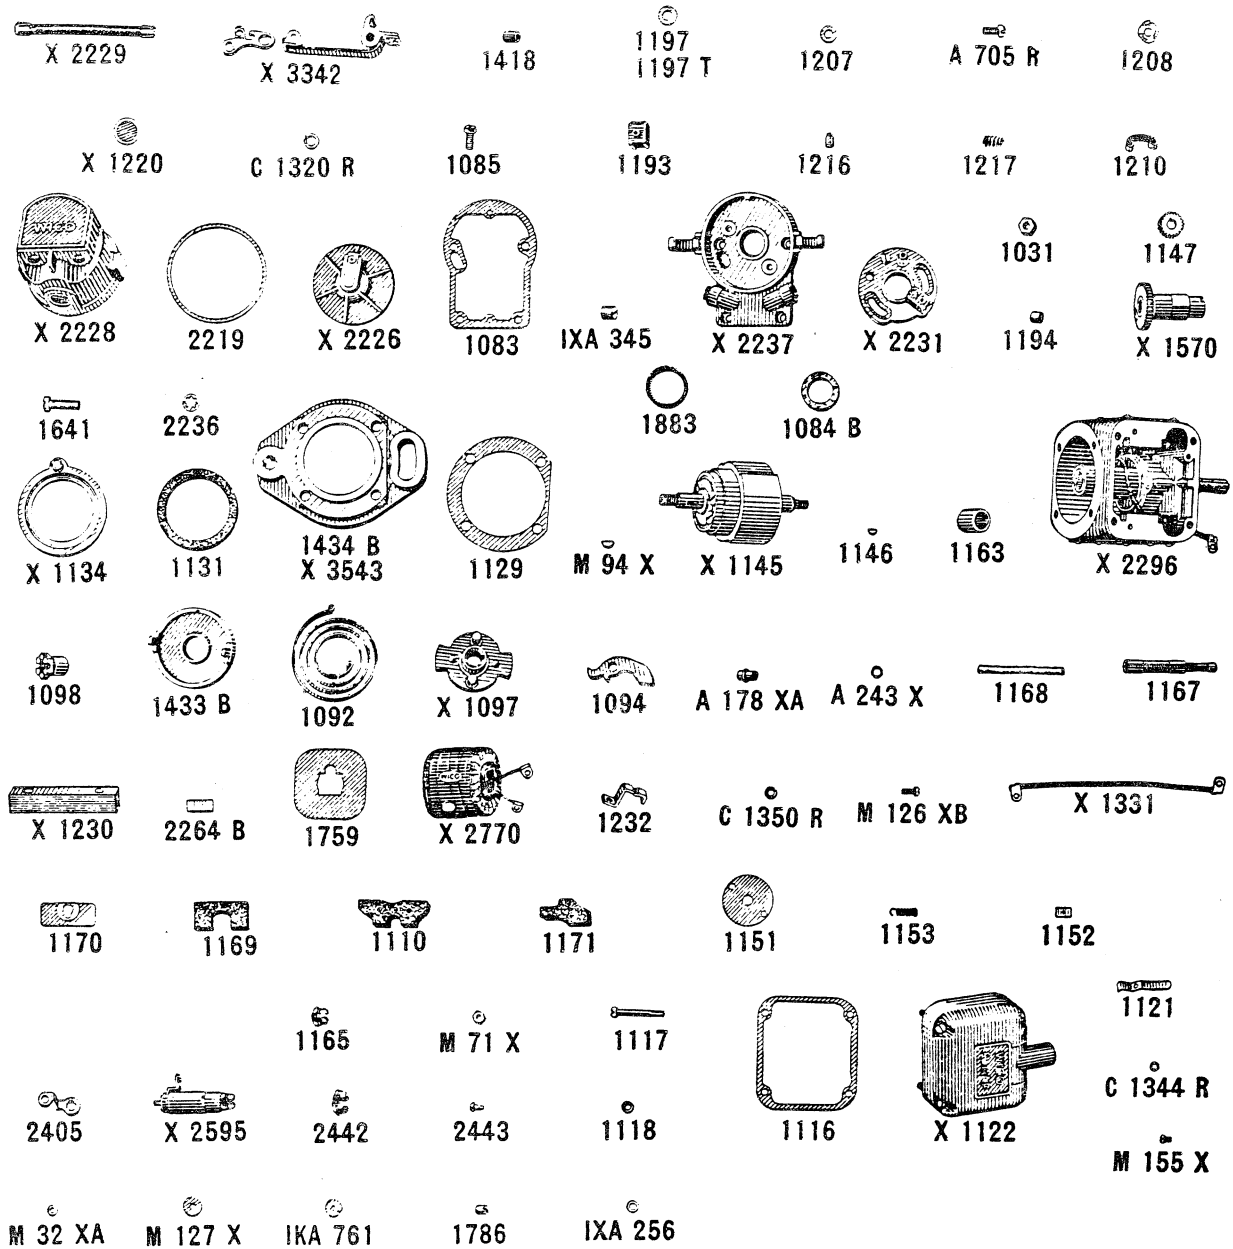







# AH653R MAGNETO PARTS (Wico Type C)

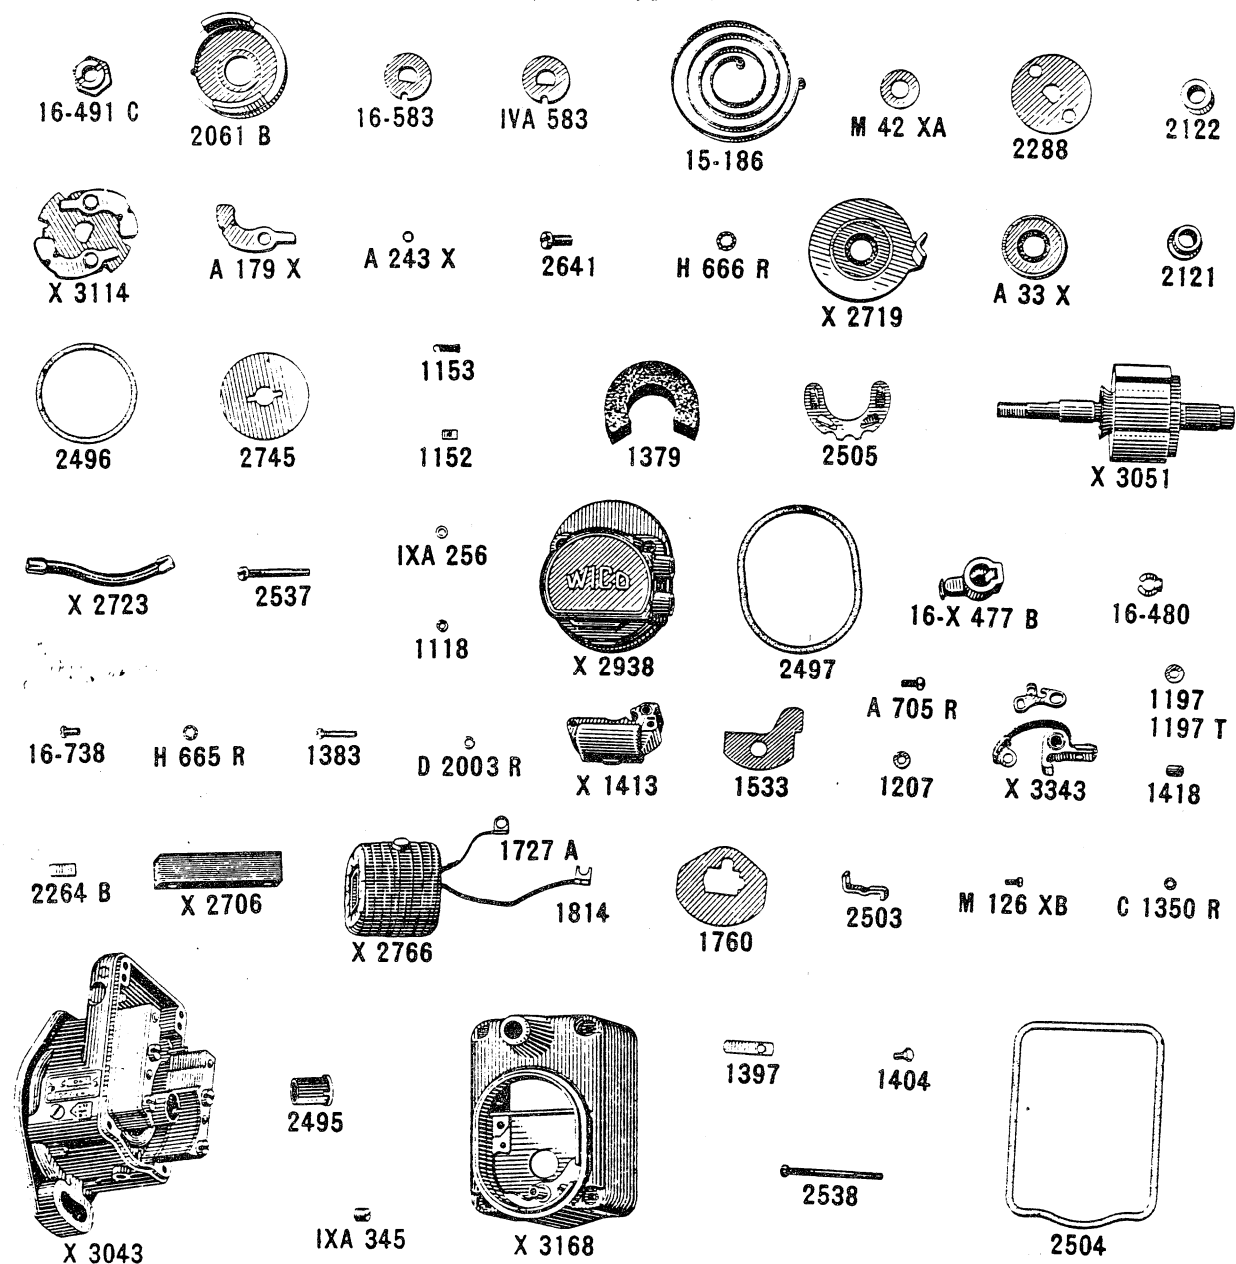

## TOOL BOX AND TOOLS

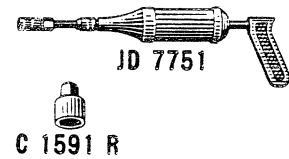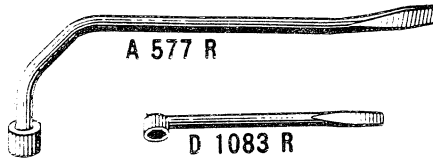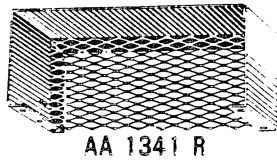

## POWER SHAFT PARTS

 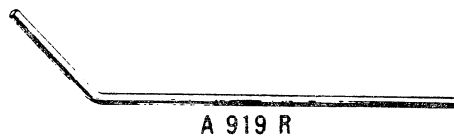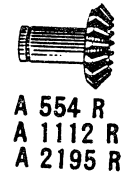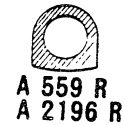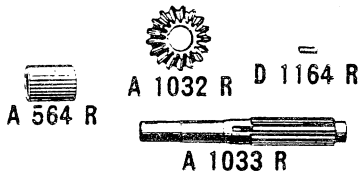 



# NUMERICAL INDEX FOR JOHN DEERE MODEL "AO" TRACTOR

59

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Part No.	Part No.	Page No.
27 R	13	A		A370 R	9	A610 R	11	A958 R	5
294 R	3			A371 R	9	A611 R	11	A959 R	33
321 R	4			A374 R	7	A612 R	11	A971 R	22
372 R	8			A378 R	10	A618 R	14	A1003 R	4
405 K	22			A393 R	9	A619 R	14	A1004 R	4
629 R	5			A399 R	3	A692 R	17	A1013 R	7
	8			A404 R	4	A695 R	17	A1014 R	7
1450 R	9			A405 R	4	A698 R	17	A1015 R	33
1452 R	3			A406 R	11	A700 R	17	A1025 R	32
1469 R	7			A411 R	12	A701 R	17	A1031 R	22
1502 R	30			A412 R	12	A702 R	17	A1032 R	22
1503 R	30	A5 R	12	A413 R	13	A703 R	17	A1033 R	22
1504 R	30	A10 R	33	A424 R	3	A704 R	17	A1053 R	29
1505 R	30	A31 R	33	A425 R	4	A705 R	17	A1062 R	12
1506 R	30	A51 R	8	A426 R	4			A1102 R	17
1507 R	30	A61 R	33	A428 R	5			A1103 R	17
1512 R	30	A69 R	10	A432 R	8			A1104 R	17
1513 R	30	A73 R	5	A433 R	8	A706 R	17	A1109 R	33
1514 R	30	A76 R	12	A434 R	8	A707 R	17	A1112 R	11
1515 R	30	A78 R	9	A437 R	4	A708 R	17	A1113 R	11
1516 R	30	A80 R	5	A438 R	10	A709 R	17	A1114 R	11
1518 R	30	A82 R	9	A439 R	4			A1116 R	11
1611 R	27	A94 R	10	A441 R	13	A710 R	17	A1123 R	33
1613 R	28	A103 R	3	A446 R	8	A712 R	17	A1141 R	33
1614 R	28	A105 R	4	A447 R	22	A715 R	17	A1142 R	4
1615 R	27	A107 R	33	A448 R	8	A716 R	17	A1147 R	3
1621 R	28	A114 R	10	A454 R	33	A717 R	17	A1149 R	6
1622 R	28	A115 R	10	A465 R	7	A718 R	17	A1151 R	6
1624 R	28	A119 R	4	A470 R	15	A719 R	17	A1152 R	6
1638 R	28	A120 R	10	A471 R	15	A721 R	17	A1153 R	11
1666 R	26	A124 R	11	A486 R	11	A722 R	17	A1154 R	10
1667 R	25	A125 R	4	A487 R	25	A723 R	16	A1155 R	33
1668 R	25	A130 R	4	A500 R	15	A726 R	9	A1156 R	11
1669 R	25	A134 R	13	A507 R	14	A732 R	33	A1157 R	11
1670 R	25	A147 R	10	A510 R	13	A734 R	28	A1158 R	11
1671 R	26	A149 R	13	A518 R	6	A766 R	17	A1159 R	11
1672 R	26	A151 R	13	A519 R	6	A767 R	17	A1160 R	11
1676 R	25	A152 R	13	A520 R	6	A768 R	17	A1162 R	13
1682 R	25	A159 R	10	A521 R	6	A769 R	17	A1163 R	13
1683 R	25	A166 R	10	A522 R	6	A770 R	17	A1168 R	13
1684 R	25	A169 R	11	A523 R	6	A772 R	4	A1169 R	13
1685 R	26	A172 R	4	A535 R	6	A774 R	22	A1170 R	33
1704 R	12	A173 R	4	A539 R	10	A775 R	22	A1171 R	5
1709 R	14	A176 R	4	A540 R	10	A812 R	10	A1172 R	5
1721 R	33	A178 R	4	A541 R	33	A829 R	12	A1175 R	5
1722 R	33	A182 R	8	A547 R	10	A832 R (S2151-C)	21	A1178 R	9
1723 R	33	A189 R	8	A548 R	10	A836 R	10	A1180 R	9
1724 R	33	A191 R	3	A549 R	10	A837 R	10	A1181 R	9
1726 R	33	A192 R	8	A550 R	10	A838 R	33	A1182 R	9
1728 R	33	A202 R	11	A551 R	22	A845 R	33	A1183 R	5
1729 R	19	A234 R	4	A552 R	22	A846 R	9	A1188 R	5
1730 R	19	A241 R	5	A554 R	22	A850 R	14	A1190 R	6
1731 R	33	A245 R	4	A557 R	10	A871 R	25	A1193 R	4
1732 R	33	A253 R	4	A558 R	22	A877 R	26	A1196 R	6
1733 R	33	A256 R	3	A559 R	22	A894 R	17	A1197 R	5
1735 R	33	A260 R	4	A561 R	22	A900 R	33	A1225 R	8
1737 R	33	A263 R	11	A562 R	11	A902 R	3	A1241 R	24
1738 R	33	A284 R	3	A564 R	22	A903 R	3	A1242 R	5
1741 R	33	A286 R	9	A565 R	22	A906 R	10	A1252 R	7
1742 R	33	A302 R	3	A567 R	22	A907 R	11	A1253 R	26
1743 R	33	A303 R	3	A568 R	22	A908 R	5	A1259 R	22
1745 R	33	A309 R	25	A571 R	22	A910 R	33	A1269 R	24
1746 R	33	A310 R	25	A572 R	22	A911 R	33	A1271 R	24
1748 R	33	A312 R	25	A574 R	22	A912 R	33	A1272 R	24
1749 R	33	A313 R	25	A575 R	22	A913 R	10		33
1753 R	33	A317 R	27	A577 R	22	A916 R	10	A1277 R	33
1755 R	33	A318 R	26	A581 R	11	A917 R	10	A1278 R	6
1757 R	33	A319 R	3	A582 R	11	A918 R	10	A1279 R	6
1758 R	33	A320 R	26	A583 R	11	A919 R	22	A1280 R	6
1759 R	33	A321 R	13	A584 R	5	A927 R	9	A1281 R	12
1761 R	33	A322 R	29	A586 R	5	A931 R	8	A1290 R	4
1762 R	33	A327 R	29	A587 R	8	A932 R	8	A1291 R	4
1763 R	33	A333 R	14	A588 R	33	A933 R	4	A1298 R	12
1764 R	33	A334 R	14	A596 R	10	A934 R	14	A1332 R	9
1765 R	33	A335 R	31	A597 R	10	A936 R	14	A1389 R	12
1766 R	33	A336 R	31	A598 R	10	A940 R	14	A1401 R	11
1767 R	33	A337 R	30	A599 R	10	A944 R	5	A1402 R	11
1768 R	33	A343 R	32	A600 R	10	A946 R	14	A1404 R	33
1769 R	33	A348 R	13	A601 R	4	A951 R	25	A1405 R	11
1770 R	33	A349 R	4	A602 R	4	A955 R	13	A1406 R	11
1771 R	33	A355 R	4						
1772 R	33	A356 R	11						
1773 R	33	A363 R	11						
1774 R	33	A365 R	10						
1775 R	33	A369 R	5						
1776 R	33		9						
1777 R	33								
1778 R	33								
1779 R	33								
1780 R	33								
1781 R	33								
1782 R	33								
1783 R	33								
1784 R	33								
1785 R	33								
1786 R	33								
1787 R	33								
1788 R	33								
1789 R	33								
1790 R	33								
1791 R	33								
1792 R	33								
1793 R	33								
1794 R	33								
1795 R	33								
1796 R	33								
1797 R	33								
1798 R	33								
1799 R	33								
1800 R	33								
1801 R	33								
1802 R	33								
1803 R	33								
1804 R	33								
1805 R	33								
1806 R	33								
1807 R	33								
1808 R	33								
1809 R	33								
1810 R	33								
1811 R	33								
1812 R	33								
1813 R	33								
1814 R	33								
1815 R	33								
1816 R	33								
1817 R	33								
1818 R	33								
1819 R	33								
1820 R	33								
1821 R	33								
1822 R	33								
1823 R	33								
1824 R	33								
1825 R	33								
1826 R	33								
1827 R	33								
1828 R	33								
1829 R	33								
1830 R	33								
1831 R	33								
1832 R	33								
1833 R	33								
1834 R	33								
1835 R	33								
1836 R	33								
1837 R	33								
1838 R	33								
1839 R	33								
1840 R	33								
1841 R	33								
1842 R	33								
1843 R	33								
1844 R	33								
1845 R	33								
1846 R	33								
1847 R	33								
1848 R	33								
1849 R	33								
1850 R	33								
1851 R	33								
1852 R	33								
1853 R	33								
1854 R	33								
1855 R	33								
1856 R	33								
1857 R	33								
1858 R	33								
1859 R	33								
1860 R	33								
1861 R	33								
1862 R	33								
1863 R	33								
1864 R	33								
1865 R	33								
1866 R	33								
1867 R	33								



# NUMERICAL INDEX FOR JOHN DEERE MODEL "AO" TRACTOR

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
A1408 R.	11	A1689 R.	15	A2288 R.	24	AA737 R.	3	AA1423 R.	3
A1409 R.	11	A1690 R.	15	A2290 R.	5	AA741 R.	11	AA1429 R.	8
A1410 R.	11	A1691 R.	15	A2291 R.	5	AA744 R. (X2774)	22	AA1444 R.	8
A1411 R.	11	A1692 R.	15	A2292 R.	24	AA793 R.	10	AA1521 R.	8
A1413 R.	33	A1693 R.	15	A2293 R.	34	AA797 R.	10	AA1522 R.	8
A1414 R.	11	A1694 R.	15	A2294 R.	5	AA798 R.	10	AA1523 R.	8
A1415 R.	11	A1695 R.	15	A2295 R.	24	AA802 R.	7	AA1524 R.	8
A1416 R.	11	A1708 R.	7	A2297 R.	27	AA806 R.	11	AA1527 R.	8
A1417 R.	33	A1711 R.	15	A2298 R.	14	AA807 R.	13	AA1528 R.	8
A1418 R.	11	A1712 R.	8	A2299 R.	13	AA811 R.	13	AA1553 R.	11
A1507 R.	3	A1713 R.	6	A2303 R.	5	AA813 R.	5	AA1584 R.	15
A1522 R.	11	A1714 R.	7	A2307 R.	11	AA814 R.	5	AA1585 R.	15
A1555 R.	33	A1724 R.	15	A2440 R.	6	AA818 R.	9	AA1589 R.	15
A1556 R.	13	A1726 R.	15	A2441 R.	6	AA819 R.	7	AA1570 R.	15
A1557 R.	33	A1728 R.	15	A2444 R.	6	AA823 R.	3	AA1572 R.	3
A1574 R.	4	A1730 R.	14	A2494 R.	5	AA824 R.	6	AA1574 R.	3
A1575 R.	4	A1731 R.	14	A2504 R.	13	AA840 R.	3	AA1605 R.	14
A1595 R.	4	A1732 R.	14	A2530 R.	6	AA843 R.	3	AA1607 R.	3
A1596 R.	6	A1733 R.	14	A2532 R.	15	AA861 R.	6	AA1615 R.	4
A1597 R.	6	A1734 R.	14	A2538 R.	15	AA917 R.	12	AA1620 R.	3
A1598 R.	6	A1735 R.	5	A2539 R.	15	AA929 R.	22	AA1621 R.	3
A1599 R.	6	A1736 R.	5	A2540 R.	15	AA933 R.	12	AA1622 R.	3
A1600 R.	33	A1737 R.	5	A2541 R.	15	AA958 R.	4	AA1623 R.	3
A1603 R.	33	A1739 R.	14	A2542 R.	15	AA971 R.	14	AA1624 R.	16
A1605 R.	33	A1740 R.	14	A2543 R.	34	AA1047 R.	4	AA1626 R.	3
A1606 R.	9	A1741 R.	14	A2545 R.	14	AA1084 R.	15	AA1652 R.	4
A1608 R.	33	A1742 R.	29	A2574 R.	6	AA1087 R.	12	AA1674 R.	22
A1609 R.	33	A1746 R.	14	A2575 R.	6	AA1127 R.	11	AA1675 R.	22
A1610 R.	13	A1758 R.	25			AA1123 R.	11	AA1676 R.	22
A1611 R.	13	A1781 R.	34			AA1124 R.	11	AA1683 R.	10
A1618 R.	34	A1782 R.	22			AA1225 R.	15	AA1695 R.	5
A1627 R.	8	A1785 R.	5	AA		AA1234 R.	11	AA1723 R.	9
A1628 R.	8		8			AA1266 R.	12	AA1726 R.	8
A1629 R.	8		15			AA1270 R.	12	AA1727 R.	8
A1631 R.	7	A1795 R.	5			AA1271 R.	12	AA1728 R.	8
A1632 R.	7		14	AA227 R.	4	AA1272 R.	10	AA1729 R.	8
A1633 R.	34	A1796 R.	8	AA229 R.	4	AA1274 R.	10	AA1730 R.	6
A1634 R.	8	A1797 R.	8	AA244 R.	3	AA1277 R.	13	AA1733 R.	8
A1635 R.	8			AA270 R.	7	AA1278 R.	13	AA1735 R.	8
A1636 R.	8	A1819 R.	4	AA314 R.	13	AA1281 R.	13	AA1743 R.	15
A1637 R.	8	A1828 R.	13	AA325 R.	8	AA1282 R.	7	AA1810 R.	4
A1638 R.	8	A1829 R.	28	AA331 R.	11	AA1283 R.	7	AA1811 R.	4
A1640 R.	34	A1830 R. (S763)	21	AA345 R.	11	AA1284 R.	7	AA1890 R.	15
A1641 R.	9	A1853 R.	8	AA357 R.	6	AA1285 R.	13	AA1907 R.	24
A1642 R.	9	A1854 R.	8	AA380 R.	14	AA1286 R.	5	AA1908 R.	24
A1643 R.	9	A1855 R.	8	AA382 R.	3	AA1287 R.	22	AA1911 R.	24
A1644 R.	9	A1856 R.	8	AA396 R.	8	AA1289 R.	22	AA1920 R.	5
A1645 R.	9	A1857 R.	8	AA397 R.	3	AA1291 R.	10	AA1930 R.	24
A1646 R.	9	A1858 R.	29	AA414 R.	16	AA1293 R.	8	AA1955 R.	24
A1647 R.	9		30	AA415 R.	16	AA1299 R.	9	AA2004 R.	3
A1648 R.	27	A1874 R.	15	AA416 R.	16	AA1301 R.	8	AA2025 R.	3
A1649 R.	9	A1879 R.	15	AA417 R.	16	AA1305 R.	3	AA2034 R.	4
A1650 R.	9	A1887 R.	15	AA419 R.	16	AA1309 R.	3	AA2044 R.	15
A1651 R.	9	A1893 R.	34	AA422 R.	16	AA1310 R.	3	AA2047 R.	3
A1652 R.	9	A1953 R.	15	AA424 R.	16	AA1315 R.	9	AA2048 R.	3
A1653 R.	9	A1966 R.	22	AA425 R.	16	AA1318 R.	9	AA2049 R.	12
A1654 R.	9	A1967 R.	22	AA428 R.	16	AA1320 R.	5	AA2057 R.	8
A1655 R.	9	A1999 R.	8	AA437 R.	4	AA1322 R.	7	AA2058 R.	16
A1656 R.	9	A2036 R.	31	AA454 R.	7	AA1324 R.	7	AA2059 R.	7
A1657 R.	9	A2050 R.	30	AA463 R.	3	AA1325 R.	7	AA2064 R.	7
A1658 R.	34	A2051 R.	29	AA464 R.	4	AA1328 R.	7	AA2074 R.	24
A1660 R.	34	A2053 R.	32	AA465 R.	4	AA1330 R.	15	AA2075 R.	24
A1661 R.	9	A2057 R.	29	AA499 R.	7	AA1331 R.	15	AA2076 R.	24
A1662 R.	34	A2062 R.	23	AA517 R.	7	AA1332 R.	15	AA2077 R.	24
A1663 R.	34	A2071 R.	24	AA518 R.	7	AA1337 R.	15	AA2079 R.	7
A1664 R.	34	A2072 R.	24	AA519 R.	7	AA1338 R.	15	AA2080 R.	7
A1671 R.	3	A2093 R.	4	AA520 R.	12	AA1340 R.	7	AA2086 R.	24
A1672 R.	3	A2195 R.	23	AA523 R.	9			AA2092 R.	6
A1673 R.	25	A2196 R.	23	AA535 R.	4	AA1341 R.	22	AA2095 R.	6
A1674 R.	13	A2202 R.	34	AA551 R.	6	AA1342 R.	8	AA2096 R.	6
A1676 R.	14	A2211 R.	26	AA553 R.	10	AA1343 R.	15	AA2124 R.	13
A1677 R.	14	A2215 R.	14	AA565 R.	8	AA1344 R.	15	AA2348 R.	3
A1678 R.	13	A2230 R.	5	AA567 R.	14	AA1345 R.	15	AA2373 R.	24
A1680 R.	5	A2232 R.	24	AA578 R. (X2692)	22	AA1346 R.	15	AA2454 R.	6
	9	A2238 R.	24	AA580 R.	21	AA1347 R.	3	AA2455 R.	13
A1681 R.	5			AA588 R.	10	AA1349 R.			
A1682 R.	5	A2277 R.	24	AA623 R.	7	AA1353 R.	14	AA3001 R.	15
	9	A2280 R.	5	AA624 R.	7	AA1355 R.	14	AA3003 R.	14
A1684 R.	7	A2283 R.	24	AA663 R.	13	AA1366 R.	15	AA3004 R.	23
A1686 R.	34	A2286 R.	24	AA665 R.	12	AA1395 R.	13		
A1687 R.	14	A2287 R.	24			AA1407 R.	13		
A1688 R.	15								

# NUMERICAL INDEX FOR JOHN DEERE MODEL "AO" TRACTOR

61

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
<b>AB</b>		<b>AD</b>		B245 R	6	B1047 R (IXA256)	19	C806 R	25
AB214 R	5	AD452 R	13	B246 R	6	B1048 R (IKA761)	21	C838 R	14
AB284 R	14	AD709 R	7	B247 R	6	B1049 R (M127X)	19	C840 R	14
AB326 R	6	AD900 R	13	B250 R	6	B1050 R (2405)	20	C902 R	5
AB336 R	15	AD1381 R	13	B251 R	6	B1051 R (1165)	19	C977 R	14
AB378 R	16	AD1400 R	15	B258 R	7	B1052 R (M71X)	20	C980 R	27
AB380 R	16	AD1415 R	15	B258 R	7	B1053 R	20	C981 R	28
AB383 R	16	AD1454 R	15	B271 R	5	(M32XA)	20	C985 R	29
AB384 R	16	AD1498 R	15	B273 R	5	B1054 R	19	C988 R	5
AB386 R	16	AD1510 R (51436)	18	B276 R	5	(A178XA)	19	C1027 R	12
AB518 R	9	AD1523 R (51452)	18	B280 R	5	B1057 R (1167)	19	C1030 R	12
AB609 R	7	AD1524 R (6214)	17	B281 R	5	B1058 R (1168)	19	C1104 R	31
AB707 R	15	AD1525 R (51439)	18	B290 R	34	B1059 R (1169)	19	C1105 R	28
AB757 R	16	AD1526 R (51285)	18	B293 R	9	B1060 R (1170)	19	C1109 R	14
AB707 R	15	AD1527 R (51432)	18	B294 R	9	B1061 R (1171)	19	C1220 R	14
AB823 R	12	AD1528 R (7606)	17	B296 R	9	B1063 R (1418)	19	C1224 R	5
AB829 R	15	AD1529 R (51315)	18	B298 R	9	B1064 R (1083)	19	C1224 R	13
AB834 R	12	AD1530 R (51286)	18	B359 R	4	B1065 R (1110)	19	C1294 R	12
AB1084 R	16	AD1531 R	17	B372 R	31	B1066 R (1147)	19	C1295 R	12
AB1085 R	17	(7334A)	17	B373 R	32	B1067 R (1151)	19	C1300 R	16
AB1188 R	24	AD1532 R (51530)	18	B423 R	8	B1068 R (1786)	19	C1320 R	19
AB1189 R	24	AD1533 R (51580)	18	B430 R	6	B1069 R (1232)	19	C1324 R (3794)	17
AB1197 R	24	AD1534 R (51673)	18	B432 R	5	B1070 R (2264B)	19	C1330 R	17
AB1199 R	24	AD1535 R (51226)	18	B439 R	6	B1071 R (1759)	19	C1333 R	17
AB1201 R	24	AD1536 R (51226)	18	B449 R (DLT-13)	21	B1072 R (1098)	19	C1334 R	17
AB1204 R	24	AD1537 R (51253)	18	B450 R (S2424)	22	B1074 R (1092)	19	C1335 R	17
AB1208 R (X1220)	20	AD1538 R (51441)	18	B457 R (P710)	21	B1075 R (1094)	19	C1344 R	19
AB1210 R (X2226)	20	AD1539 R (51234)	18	B465 R	16	B1076 R (A243X)	19	C1350 R	19
AB1211 R (X3342)	20	AD1540 R (51202)	18	B497 R	29	B1077 R (1129)	20	C1438 R	5
AB1213 R (1193)	19	AD1541 R (7316)	17	B504 R	4	B1078 R (1131)	19	C1517 R	12
AB1214 R (X3342)	20	AD1542 R (7347)	17	B507 R	17	B1080 R (1152)	19	C1533 R	12
AB1216 R (X1570)	20	AD1543 R (6822)	17	B508 R	17	B1081 R (1153)	20	C1572 R	22
AB1217 R (X1122)	20	AD1606 R	14	B509 R	17	B1082 R (1031)	19	C1573 R	7
AB1218 R (X2770)	20	AD1770 R	23	B510 R	17	B1083 R (1146)	19	C1591 R	22
AB1219 R (X1230)	20	AD1771 R	32	B514 R	17	B1084 R (M94X)	20	C1646 R	12
AB1220 R (X2595)	20	AD1772 R	32	B515 R	17	B1086 R (1207)	19	C1647 R	27
AB1221 R (X1097)	20	AD1773 R	32	B516 R	17	B1087 R (1197)	20	C1705 R	6
AB1222 R (X1134)	20	AD1855 R	24	B517 R	17	B1090 R (1208)	19	C1716 R	12
AB1223 R (X1145)	20	AD1861 R	24	B518 R	17	B1091 R (2236)	19	C1778 R	7
AB1224 R (X2296)	20	AD1882 R (51664)	18	B519 R	17	B1092 R	20	C1823 R	4
AB1225 R (X1331)	20	<b>AE</b>		B520 R	17	(M126XB)	21	C1827 R	24
AB1226 R (1163)	19	AE270 R (X1413)	21	B521 R	17	B1093 R (1085)	19	C2147 R	12
AB1229 R (X2229)	20			B522 R	17	B1094 R (1641)	19	C2199 R	12
AB1230 R (X2228)	20			B523 R	17	B1106 R (2219)	19	C2378 R	7
AB1231 R (X2237)	20			B524 R	17	B1107 R (IXA345)	19	C2501 R (X2653)	22
AB1232 R (X2231)	20			B525 R	17	B1108 R (1433B)	21	C2502 R (S2369)	22
AB1545 R	7			B568 R	25	B1109 R (1434B)	19	C2504 R (S2471)	22
AB1830 R	24	<b>AH</b>		B594 R	17	B1271 R (2442)	19		
AB1837 R	24	AH653 R	15	B595 R	17	B1272 R (2443)	19	<b>D</b>	
AB1838 R	24	AH761 R (X3114)	21	B639 R	13	B1535 R	7	D136 R	13
AB1839 R	24	AH762 R (X2719)	21	B694 R	34	B1588 R	24	D137 R	26
AB1840 R	24	AH763 R (A33X)	20	B738 R	9	B1589 R	24	D156 R	14
AB1860 R	24	AH764 R (X2723)	21	B739 R	9	B1592 R	24	D157 R	5
AB1896 R	4	AH765 R (X2938)	21	B741 R	9	B1647 R	24	D178 R	9
AB1913 R	24	AH766 R	20	B817 R	13	B1662 R	24	D233 R	12
AB1956 R	24	(16-X477B)	20	B845 R	31	B1663 R	21	D336 R	31
AB2568 R	24	AH767 R (X3168)	21	B846 R	28	B1664 R	21	D342 R	3
AB2571 R	24	AH768 R (X2766)	21	B847 R	14	B1680 R	23		
AB2578 R	23	AH769 R (X2706)	21	B977 R	17				
		AH770 R (X3051)	21	B978 R	17				
		AH771 R (X3043)	21	B979 R	17				
<b>AC</b>				B980 R	17				
AC119 R	13			B1028 R	24	<b>C</b>			
AC600 R	15	<b>B</b>		B1030 R	24	C167 R	34	D376 R	4
AC649 R	12	B36 R	34	B1033 R	24	C368 R	12	D377 R	23
AC667 R	5	B37 R	5	B1034 R (1216)	19	C369 R	12	D392 R	7
AC918 R	12	B111 R	14			C485 R	5	D393 R	21
AC1062 R	13	B112 R	31	B1035 R (1217)	19	C535 R	31	D403 R	5
AC1079 R	7	B155 R	25	B1038 R (1194)	19	C614 R	9	D411 R	9
AC1080 R	7		26	B1039 R (1210)	19	C677 R	13	D417 R	7
		B241 R	6	B1040 R (1883)	19	C719 R	3	D430 R	32
		B243 R	6	B1041 R (1084B)	19			D432 R	31
		B244 R	6	B1042 R (1116)	19				32
				B1043 R (1121)	19				
				B1044 R (1117)	19				
				B1045 R (1118)	19				
				B1046 R (M155X)	20				



# NUMERICAL INDEX FOR JOHN DEERE MODEL "AO" TRACTOR

63

Wico Magneto Parts		Part No.	Page No.	Part No.	Page No.	Schebler Carburetor Parts		Part No.	Page No.
Part No.	Page No.					Part No.	Page No.		
		1216	19	C1320 R	19			B1663 R	21
		1217	19	C1344 R	19			B1664 R	21
		1232	19	C1350 R	19			D392 R	21
		1379	20		20			DLT-13	21
		1383	20	D2003 R	21			P52	21
15-186	20			H665 R	21	1-K	21		
16-480	20	1397	20			4W (X1178B)	22	P348	21
16-491C	20	1404	20	H666 R	21	10W (SI-10)	22	P710	21
16-583	20	1418	19	IKA761	19	15-29	21	P791	21
16-738	20		20	IYA583	21	15-57	21	P850	21
		1433B	19	IXA256	19			P947	21
16-X477B	20	1434B	19		21	15-285	21		
1031	19			IXA345	21	17W (S93B)	21	P948	21
1083	19	1533	20			18-O	21	P950	21
1084B	19	1641	19	M32XA	20	25-J	21	P951	21
1085	19	1727A	20	M42XA	21	25-V	21	S93B	21
		1729 R	19	M71X	20			S98	21
1092	19	1730 R	19	M94X	20	41W (S251A)	21		
1094	19			M126XB	20	45W (S2502)	21	S98B	21
1098	19	1759	19		21	57W (1-K)	21	S211G	21
1110	19	1760	20	M127X	20	63W (S1393)	21	S245	21
1116	19	1786	19	M155X	20	65W (25-J)	21	S251A	21
		1814	20	X1097	20			S763	21
1117	19	1883	19	X1122	20	67W (S211G)	21		
1118	19			X1134	20	68W (25-V)	21	S1121	21
	20	2061B	20			69W (X2457)	22	S1393	21
1121	19	2121	20	X1145	20	70W (15-285)	21	S1506	21
1129	19	2122	20	X1220	20	71W (15-57)	21	S2041	21
1131	19	2219	19	X1230	20			S2146	21
		2236	19	X1331	20	72W (P52)	21		
1146	19			X1408 (X3343)	21	73W (P791)	21	S2147	21
1147	19	2264B	19			74W (P850)	21	S2151-C	21
1151	19		20	X1413	21	75W (P947)	21	S2154	21
1152	19	2288	20	X1570	20	76W (P948)	21	S2183A	22
	20	2405	19	X2226	20			S2369	22
1153	19	2442	19	X2228	20	77W (P950)	21		
	20	2443	19	X2229	20	78W (P951)	21	S2424	22
						79W (S98)	21	S2471	22
1163	19	2495	20	X2231	20	80W (S98B)	21	S2482	22
1165	19	2496	20	X2237	20	81W (S245)	21	S2502	22
1167	19	2497	20	X2296	20			SI-10	22
1168	19	2503	20	X2595	20	83W (S1506)	21		
1169	19	2504	20	X2706	21	85W (S2041)	21	SI-18 (15-29)	21
						90W (S2146)	21	X1178B	22
1170	19	2505	20	X2719	21	91W (S2147)	21	X2457	22
1171	19	2537	20	X2723	21	94W (S2154)	21	X2458	22
1193	19	2538	20	X2766	21			X2461	22
1194	19	2641	20	X2770	20	95W (S2183A)	22		
1196 (X3343)	21	2745	20	X2938	21	321 R	21	X2462	22
						A705 R	21	X2653	22
1197	19	A33X	20	X3043	21	AA580 R	21	X2692	22
	20	A179X	20	X3051	21	AB1843 R	21	X2774	22
1197 T	19	A179XA	19	X3114	21				
	20	A243X	19	X3168	21				
1207	19		20	X3342	20				
	20	A705 R	19						
1208	19		20	X3343	21				
1210	19								

Dec. 9050